



VIDEO CASSETTE RECORDER  
**VT-FX6407AS**  
 Owner's manual

**Auto Set Up System** – simply plug in all cables and press the POWER button (see page 17).

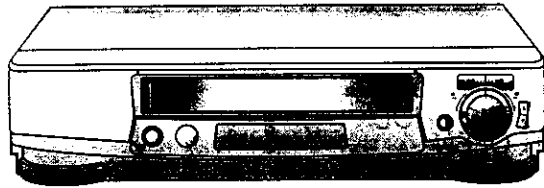

**Using these quality features:**

- The VCR Plus+\* programming system allows you to program the VCR for timer recording by simply entering a PlusCode\* number.
  - \* VCR Plus+ and PlusCode are trademarks of Gemstar Development Corporation.
  - The VCR Plus+ system is manufactured under license from Gemstar Development Corporation.
- Auto Set Up system automatically tune in broadcast channels.
- S-VHS Quasi Playback allows you to playback the tape that is recorded by S-VHS type.
- Super index allows you to quickly search for a program you want to view or the point from which you want to start recording on tape.
- Super rewind and fast forward.
- Multi-channel TV sound (MTS).
- 8-program/1 month preset recording.
- Auto tracking system automatically adjusts the tracking so the picture is optimized.
- Frequency synthesized tuner provides easy, preset tuning of up to 68 broadcast TV channels and 125 cable channels.
- VHS Hi-Fidelity sound in playback.
- On-screen programming guide.
- With display, VCR Plus+ can be programmed to record without turning power on.
- Easy Cursor Operation.
- Illuminated remote control for use with your VCR.

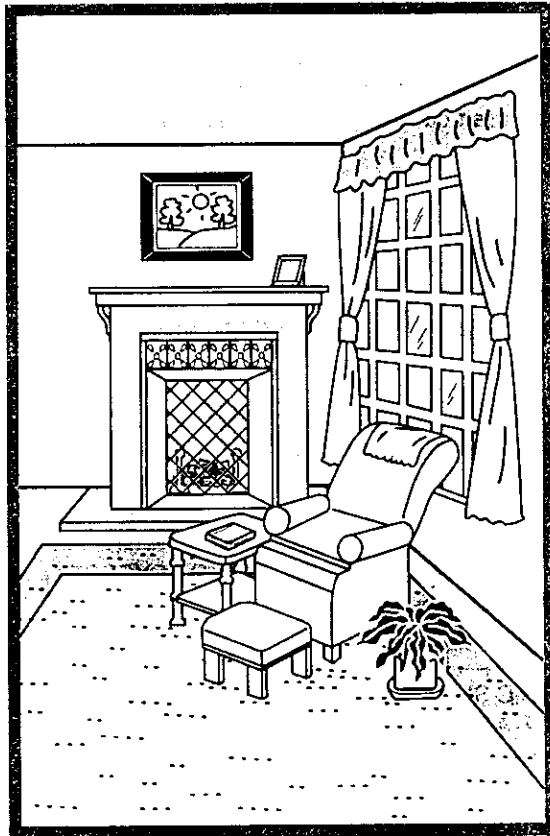

READ ME FIRST

HOOKUPS

FIRST TIME SETUP

PLAYBACK OPERATIONS

RECORDING OPERATIONS

ADVANCED OPERATIONS



As an ENERGY STAR® Partner, HITACHI Home Electronics (America), Inc. has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

**HITACHI HOME ELECTRONICS (AMERICA), INC.**

1855 Dornoch Court,  
 San Diego, CA 92173,  
 Tel. 619-661-3441

**HITACHI (HSC) CANADA INC.**

6740 Campobello Road, Mississauga,  
 Ontario L5N 2L8 CANADA  
 Tel. 905-821-4545







# FOR YOUR SAFETY

POWER SUPPLY: AC 120V, 60Hz ONLY.

The POWER button turns the VCR on and off, leaving the clock/timer unaffected. If the unit is to be left unattended for a long period, it is recommended that the unit be completely switched off and unplugged.

Illustrated below is the label on the back of your unit.

<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN			
	<p>This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.</p>		
	<p>This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.</p>		

**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).  
NO USER-SERVICEABLE PARTS INSIDE.  
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

**WARNING:** Many television programs and films are copyrighted. In certain circumstances, copyright law may apply to private in-home videotaping of copyrighted materials.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF POWER PLUG TO WIDE SLOT OF AC OUTLET AND FULLY INSERT.

**Caution to the user:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**"Note to CATV system installer:** This reminder is provided to call the CATV system installer's attention to Article 820 – 40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical".

# IMPORTANT SAFEGUARDS


In addition to the careful attention devoted to quality standards in the manufacture of your video product, safety is a major factor in the design of every instrument. But, safety is your responsibility too.

This page lists important information that will help to assure your enjoyment and proper use of a Video Cassette Recorder and accessory equipment. Please read it carefully before operating your video product and keep it in a handy place for future reference.

READ ME FIRST

## INSTALLATION


**1 Read and Follow Instructions** – All the safety and operating instructions should be read before the video product is operated. Follow all operating and use instructions.

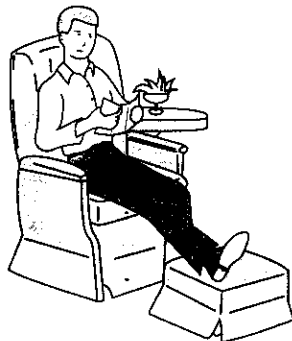

**2 Retain Instructions** – The safety and operating instructions should be retained for future reference.


**3 Heed Warnings** – Comply with all warnings on the video product and in the operating instructions.

**4 Polarized Plug** – This video product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. To prevent electric shock do not use this polarized plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted without blade exposure. If you need an extension, use a polarized cord.

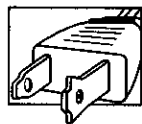


**5 Power Sources** – This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your video dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

**6 Overloading** – Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. Overloaded AC outlets and extension cords are dangerous, and so are frayed power cords, damaged or cracked wire insulation and broken plugs. They may result in a shock or fire hazard. Periodically examine the cord and have it replaced by your service technician if appearance indicates damage or deteriorated insulation.

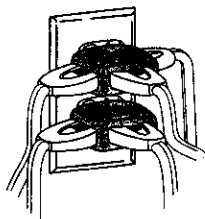

**7 Power-Cord Protection** – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

**8 Ventilation** – Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the video product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface. This video product should never be placed near or over a radiator or heat register. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the video product manufacturer's instructions have been followed.

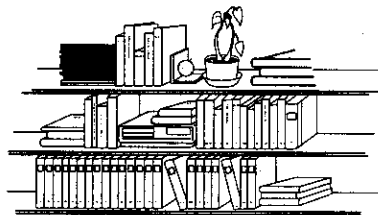

**9 Attachments** – Do not use attachments unless recommended by the video product manufacturer as they may cause hazards.

**Caution:** Maintain electrical safety. Powerline operated equipment or accessories connected to this unit should bear the UL listing mark or CSA certification mark on the accessory itself and should not have been modified so as to defeat the safety features. This will help avoid any potential hazard from electric shock or fire. If in doubt, contact qualified service personnel.

**10 Water and Moisture** – Do not use this video product near water. For example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

**11 Accessories** – Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.


**11A** An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



S3125A

**12 Outdoor Antenna Grounding** – If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See example below.

**EXAMPLE OF ANTENNA GROUNDING**

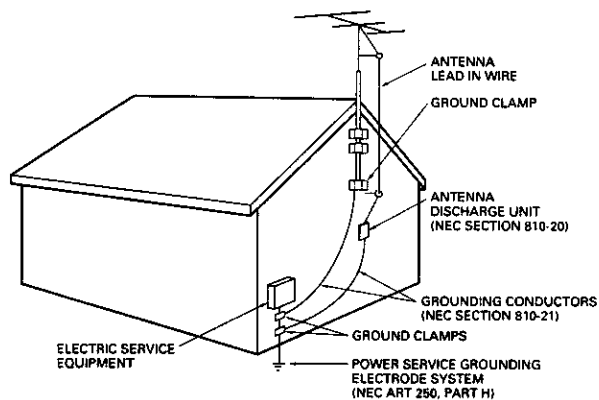


NEC – NATIONAL ELECTRICAL CODE

**13 Power Lines** – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching or approaching such power lines or circuits as contact with them might be fatal. Installing an outdoor antenna can be hazardous and should be left to a professional antenna installer.

**USE**

**14 Cleaning** – Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

**15 Object and Liquid Entry** – Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.

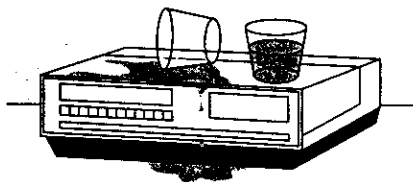

**16 Lightning** – For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable-system. This will prevent damage to the video product due to lightning and power-line surges.



**SERVICE**

**17 Servicing** – Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**18 Conditions Requiring Service** – Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions.

- a. When the power-supply cord or plug is damaged.
- b. If liquid has been spilled, or objects have fallen into the video product.
- c. If the video product has been exposed to rain or water.
- d. If the video product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.
- e. If the video product has been dropped or the cabinet has been damaged.
- f. When the video product exhibits a distinct change in performance — this indicates a need for service.

**19 Replacement Parts** – When replacement parts are required, have the service technician verify that the replacements he uses have the same safety characteristics as the original parts. Use of replacements specified by the video product manufacturer can prevent fire, electric shock or other hazards.

**20 Safety Check** – Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks recommended by the manufacturer to determine that the video product is in safe operating condition.



# CONTENTS

## READ ME FIRST

For Your Safety.....	2
Important Safeguards.....	3
Customer Controls.....	6
Remote Operation.....	8
Cassette Tapes.....	9

## HOOKUPS

Basic Antenna Hookup <b>A</b> .....	10
Advanced Antenna Hookup — AV Hookup <b>B</b> .....	11
Basic Cable Hookup <b>C</b> .....	12
Advanced Cable Hookup — AV Hookup <b>D</b> .....	13
Basic Cable Hookup — With Cable Box <b>E</b> .....	14
Advanced Cable Hookup — With Cable Box <b>F</b> .....	15
Advanced Cable Hookup — With Cable Box and Splitter <b>G</b> .....	16

## FIRST TIME SETUP

Auto Set Up.....	17
Setting the Clock.....	18
Pre-tuning the VCR Tuner.....	20

## PLAYBACK OPERATIONS

Playback.....	23
Special Playback Effects.....	25
Shuttle Control.....	27
Using the "SUPER INDEX" feature.....	28
Viewing the On-Screen Display.....	31
INDEX with the Time Counter.....	32

## RECORDING OPERATIONS

Recording a Program.....	33
Recording a Program — Recording Tips.....	35
Instant Recording Timer.....	37
Delayed Recording.....	38
Using the VCR Plus+ System for Recording.....	41
Easy Delayed Recording with the VCR Plus+ System.....	42
Program Review.....	47

## ADVANCED OPERATIONS



Using the VCR Remote to Control Your TV.....	48
Integrating Your Stereo System with Your VCR.....	49
Copying Tapes from a Camcorder.....	50
Copying from One VCR to Another VCR (Dubbing).....	51
Problem Guide/ Maintenance.....	52
Guide Indications in VCR Display and OSD screen.....	53
Technical Specifications.....	54
Spanish Quick User's Guide.....	55

READ ME FIRST



# CUSTOMER CONTROLS

## VCR Customer Controls

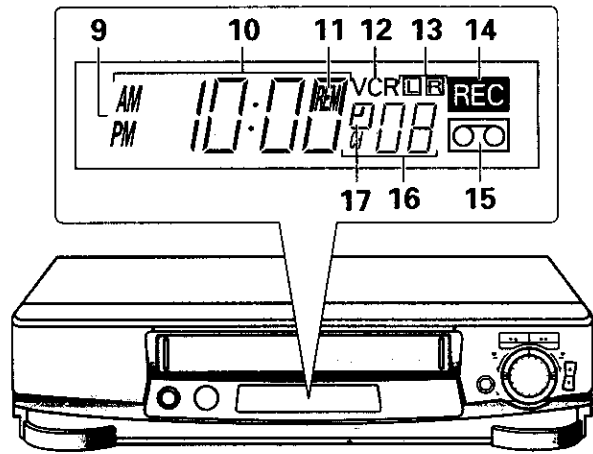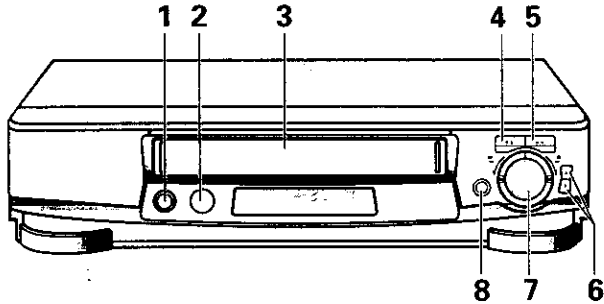

Item No.	Function	Page
1	POWER button	2
2	Infrared receiver	8
3	Cassette compartment	9
4	STOP/EJECT button	9
5	PLAY/STILL button	23
6	CHANNEL (channel up/down)/ TRACKING buttons	33 24
7	Shuttle ring	27
8	REC/IRT button	34
<b>VCR Display</b>		
9	AM/PM indicators	18
10	Time, Time counter, Tape remaining or VCR mode indicator	19 31 31 23
	PLAY — playback	23
	SRCH — double-speed play, visual search and skip playback	26
		["-" appears during reverse direction viewing]
	SLOW — slow play	25
	REW — rewind	23
	S:REW — high speed rewind	24
	FF — fast forward	—
	S:FF — high speed fast forward	24
	STILL — play pause and frame advance	25
11	REM (tape remaining time) indicator	31
12	VCR, operate mode	35
13	Audio indicators	26
14	<b>REC</b> — record (flashes during record pause)	34
15	Tape-in indicator	9
16	TV channel or Auxiliary (L)	33 49
17	Delayed recording indicator	40

### Accessories supplied


Check and identify the accessories supplied.  
If any are missing or appear damaged, consult your dealer.

①




Remote control

②

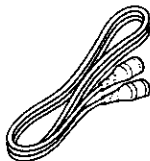

Cable for connecting  
this VCR to a TV

 ③




2 pcs.

Batteries for remote  
control handset (R6)

# CUSTOMER CONTROLS


READ ME FIRST

## VCR Customer Controls

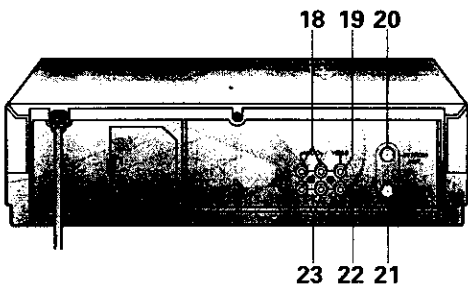


Item No.	Function	Page
18	AUDIO IN L, R jacks	49
19	VIDEO IN jack	51
20	IN FROM ANT. — signal input	10
21	OUT TO TV — signal out to TV	10
22	VIDEO OUT jack	11
23	AUDIO OUT L, R jacks	11

## Remote Control Customer Controls

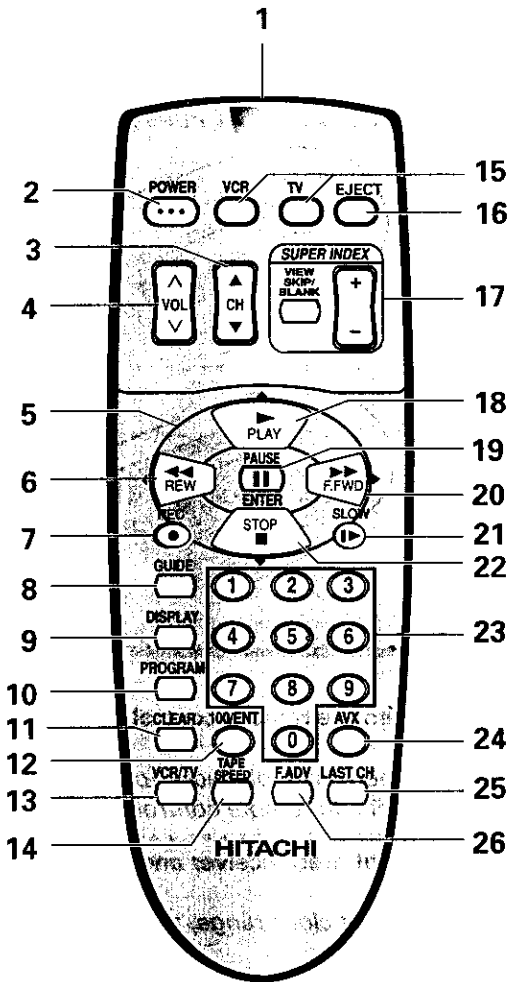

Item No.	Function	Page
1	Transmission window	8
2	POWER button	20
3	CH (channel up/down) button	33
4	VOL button — increase or decrease the audio volume	48
5	Cursor buttons	—
6	REW button — fast rewind or search	23/26
7	REC — record button	34
8	GUIDE — to recall OSD menu	20
9	DISPLAY — to recall on-screen display	31
10	PROGRAM (programming) button	37
11	CLEAR — clears time counter	32
12	100/ENT button	33
13	VCR/TV mode select button	10
14	TAPE SPEED button — select the recording speed SP or EP.	33
15	VCR, TV — device buttons let you set the remote to control one of the two devices	48
16	EJECT button	9
17	SUPER INDEX buttons — to use the SUPER INDEX function	28
18	PLAY button — playback	23
19	PAUSE/ENTER buttons	25
20	F.FWD button — fast forward or search	24/26
21	SLOW button — for slow motion picture	25
22	STOP button — stops play/record function	23
23	Number buttons	21
24	AVX button — select LINE	49
25	LAST CH button - Switches to the TV channel you watched previously during the current viewing session.	48
26	F.ADV button	25


### Illumination buttons

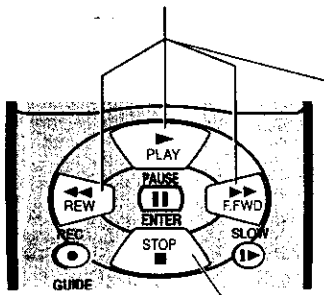

When you press any of illumination buttons, the illumination will turn on. The illumination goes off 5 seconds later automatically, if you do not press the buttons.



# REMOTE OPERATION

## ■ Install batteries in the remote control

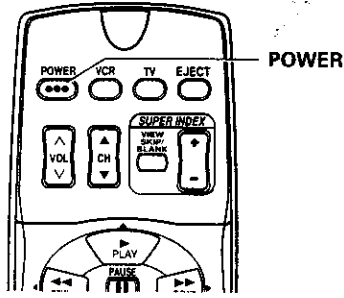


The remote control requires two "AA" batteries.


- 1 Insert your fingertip into the notch and push the battery compartment lid to remove it.  
*Note: When replacing the batteries, remove the old batteries and keep the POWER button depressed for 10 seconds before inserting fresh batteries.*

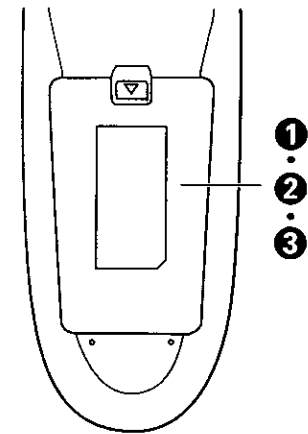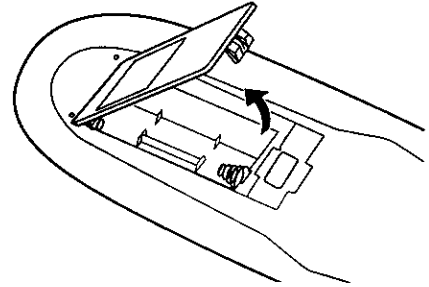

- 2 Install batteries.
  - Align the positive (+) and negative (-) polarity marks on the batteries with those indicated on the remote control.

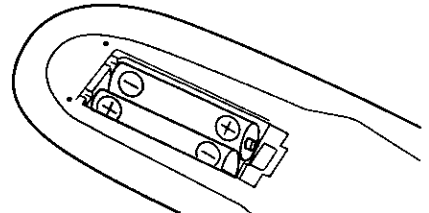


- 3 Replace the lid.

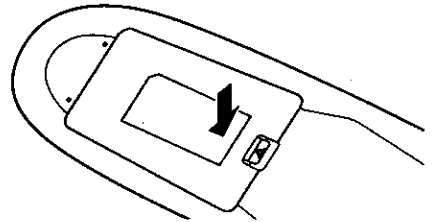


## ■ Operating in the remote control

Operating the VCR:

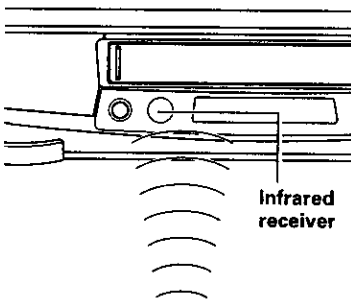

- 1 Make sure there is no obstacle between the remote control and VCR's infrared receiver.  
*Note: You cannot operate the VCR if there is an obstacle (for example, coffee table, sofa, etc) between the VCR and remote control.*
- 2 Point the remote control at the VCR's infrared receiver and press the required button on the remote control.  
*Note: If the remote does not work even at close range, try replacing the batteries with two fresh "AA" batteries.*

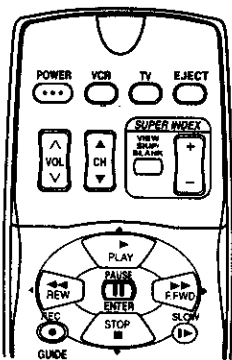






# CASSETTE TAPES

READ ME FIRST

## Types

 Only use video cassettes with the **VHS** mark in this VCR.



The table shows the recording time of different cassettes.


- To get the best quality picture, record at standard recording speed (SP).
- This VCR does not record at the LP speed, but it can play cassettes that were recorded at the LP speed.

Types	Recording time	
	SP	EP
T-120	120 min.	360 min.
T-160	160 min.	480 min.
T-180	180 min.	540 min.
T-210	210 min.	630 min.

## Safety tabs prevent erasure


To avoid erasing a recording

Break off the safety tab using a screwdriver or similar tool.

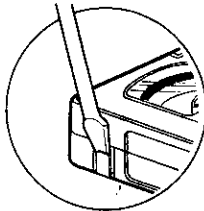

To re-record on a cassette which has its safety tab removed


Cover the hole with plastic tape.

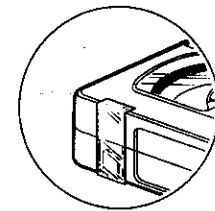


The VCR automatically enters the playback mode when a cassette without its safety tab is inserted. **The VCR won't record on a tape without a safety tab and the cassette will be ejected if the REC or REC/IRT button is pressed.** Be sure to check the safety tab before inserting a cassette.

## Insertion

Push the video cassette gently into the slot on the front of the VCR.


- The VCR automatically turns on and the "Tape-In" indicator  turns on when the cassette is in place.

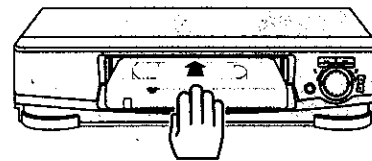


## Removal

Press the **STOP/EJECT** button on the VCR or **EJECT** button on the remote control.

The cassette will come partially out of the compartment so you can pull it out.

- The "Tape-In" indicator  turns off.
- The cassette can be ejected with the power on or off.

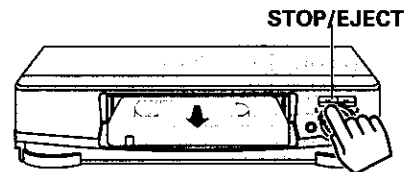



# BASIC ANTENNA HOOKUP **A**


## WITH THIS HOOKUP

### YOU CAN.....

- WATCH AVAILABLE TV CHANNELS
- RECORD AND WATCH THE SAME CHANNEL
- RECORD ONE CHANNEL AND WATCH ANOTHER

## Caution

Do not connect to the power supply outlet before connecting all cables (see page 17).

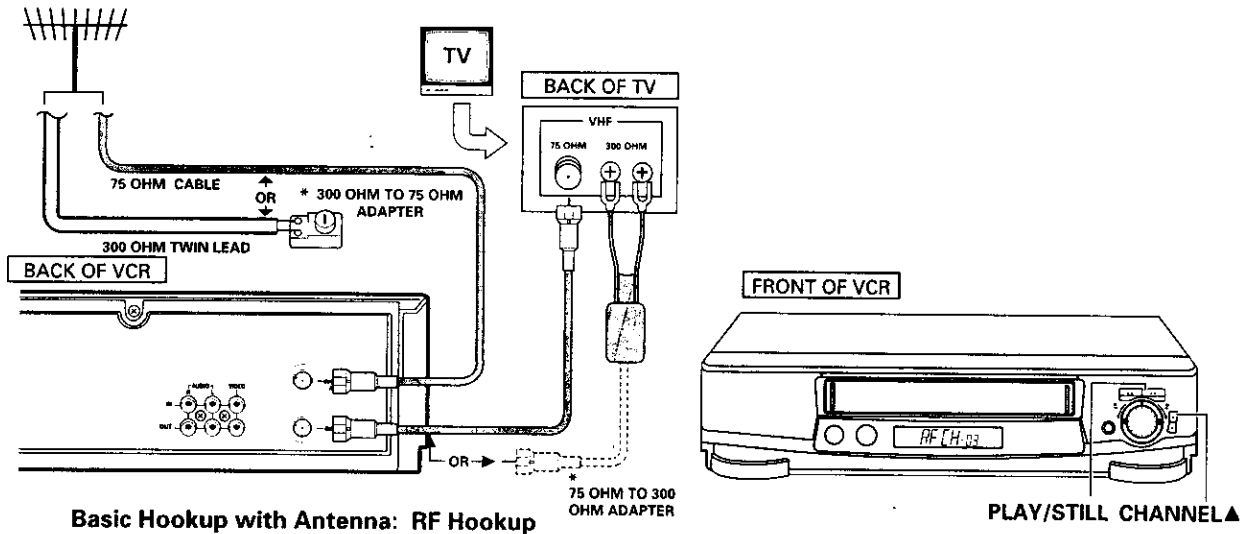

\* PURCHASED SEPARATELY

**TABLE A**

FUNCTION	CHANNEL SELECTION		VCR indicator (Press the VCR/TV mode select button to turn the VCR indicator on or off.)
	TV	VCR	
Select and Watch Channels using TV	Select Channel to Watch		OFF (TV mode)
Select and Watch Channels using VCR	3 or 4	Select Channel to Watch	ON (VCR mode)
Record and Watch the Same Channel	3 or 4	Select Channel to Record	ON (VCR mode)
Record One Channel Watch Another	Select Channel to Watch	Select Channel to Record	OFF (TV mode)
Watch Playback of a Tape	3 or 4		ON (VCR mode)

### Switch the RF Channel

When the VCR is on, its video signal can come into your TV on either channel 3 or channel 4. You need to select the appropriate channel.

- When the power is turned on, press the POWER button to turn it off. Press the PLAY/STILL button on front of the VCR. Pressing the CHANNEL ▲ button alternates between RFCH-03 (channel 3) and RFCH-04 (channel 4) in the VCR's display.

Display the channel which is not used by a commercial channel in your area.

# ADVANCED ANTENNA HOOKUP - AV HOOKUP B


## WITH THIS HOOKUP

### YOU CAN.....

- WATCH AVAILABLE TV CHANNELS
- RECORD AND WATCH THE SAME CHANNEL
- RECORD ONE CHANNEL AND WATCH ANOTHER

## Caution

Do not connect to the power supply outlet before connecting all cables (see page 17).

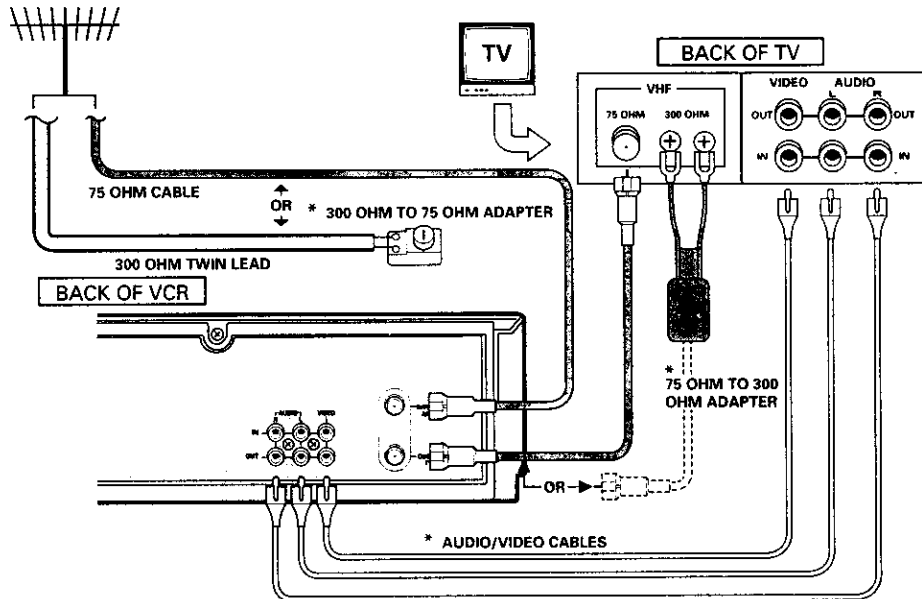

Advanced Hookup with Antenna: AV Hookup

\* PURCHASED SEPARATELY

HOOKUPS

TABLE B

FUNCTION	CHANNEL SELECTION		VCR indicator (Press the VCR/TV mode select button to turn the VCR indicator on or off.)
	TV	VCR	
Select and Watch Channels using TV	Select Channel to Watch		OFF (TV mode)
Select and Watch Channels using VCR	AUX or VIDEO	Select Channel to Watch	
Record and Watch the Same Channel	AUX or VIDEO	Select Channel to Record	
Record One Channel Watch Another	Select Channel to Watch	Select Channel to Record	OFF (TV mode)
Watch Playback of a Tape	AUX or VIDEO		

## WITH THIS HOOKUP

### YOU CAN.....

- WATCH AVAILABLE CABLE CHANNELS
- RECORD AND WATCH THE SAME CHANNEL
- RECORD ONE CHANNEL AND WATCH ANOTHER

### Caution

Do not connect to the power supply outlet before connecting all cables (see page 17).

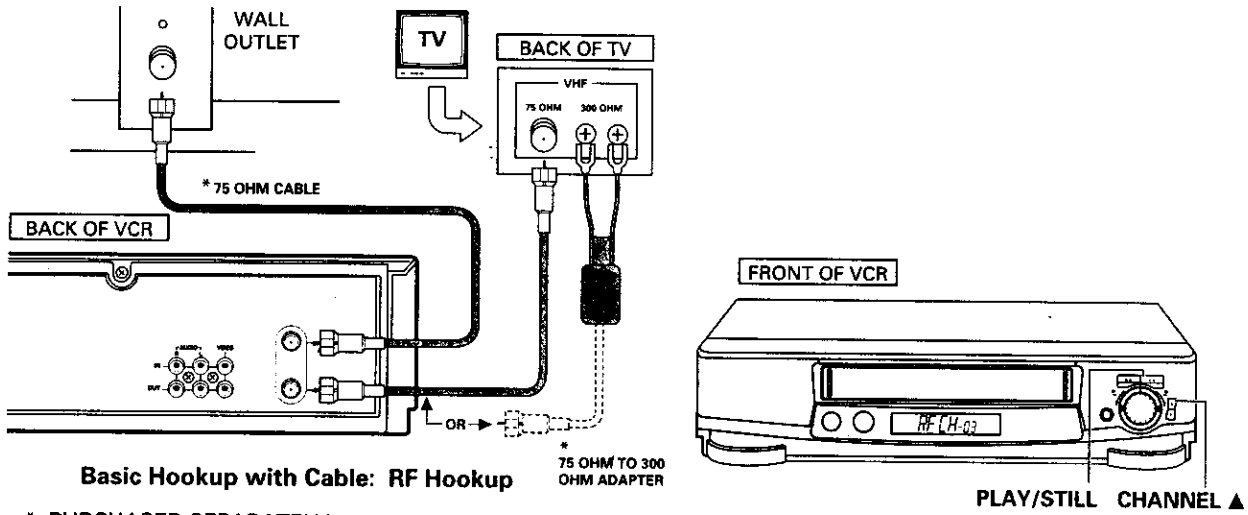


TABLE C

FUNCTION	CHANNEL SELECTION		VCR indicator (Press the VCR/TV mode select button to turn the VCR indicator on or off.)
	TV	VCR	
Select and Watch Cable Channels using TV	Select Channel to Watch		OFF (TV mode)
Select and Watch Cable Channels using VCR	3 or 4	Select Channel to Watch	ON (VCR mode)
Record and Watch the Same Channel	3 or 4	Select Channel to Record	ON (VCR mode)
Record One Channel Watch Another	Select Channel to Watch	Select Channel to Record	OFF (TV mode)
Watch Playback of a Tape	3 or 4		ON (VCR mode)

### Switch the RF Channel

When the VCR is on, its video signal can come into your TV on either channel 3 or channel 4. You need to select the appropriate channel.

- When the power is turned on, press the POWER button to turn it off. Press the PLAY/STILL button on front of the VCR. Pressing the CHANNEL ▲ button alternates between RFCH-03 (channel 3) and RFCH-04 (channel 4) in the VCR's display.

Display the channel which is not used by a commercial channel in your area.


## WITH THIS HOOKUP

### YOU CAN.....

- WATCH AVAILABLE CABLE CHANNELS
- RECORD AND WATCH THE SAME CHANNEL
- RECORD ONE CHANNEL AND WATCH ANOTHER

### Caution

Do not connect to the power supply outlet before connecting all cables (see page 17).

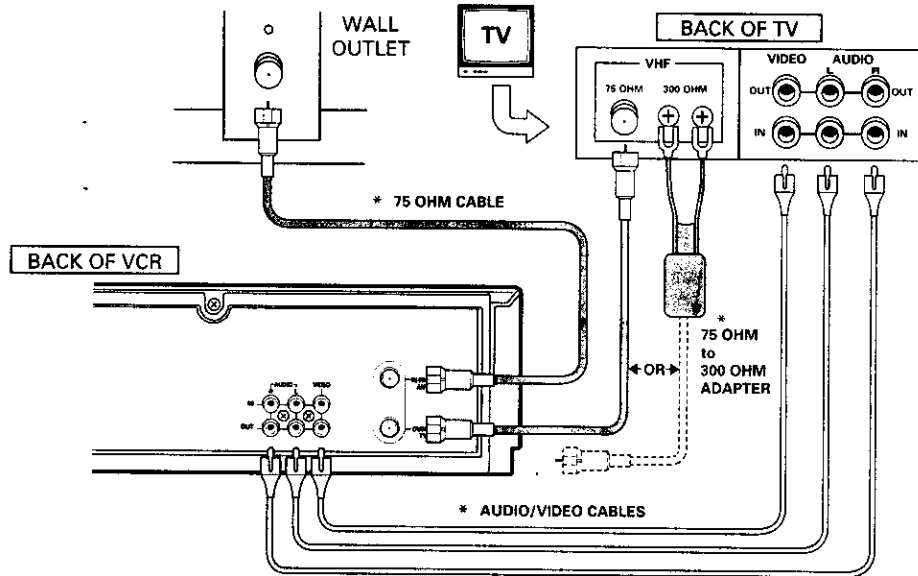

Advanced Hookup with Cable: AV Hookup

\* PURCHASED SEPARATELY

HOOKUPS

TABLE D

FUNCTION	CHANNEL SELECTION		VCR indicator (Press the VCR/TV mode select button to turn the VCR indicator on or off.)
	TV	VCR	
Select and Watch Cable Channels using TV	Select Channel to Watch		OFF (TV mode)
Select and Watch Cable Channels using VCR	AUX or VIDEO	Select Channel to Watch	
Record and Watch the Same Channel	AUX or VIDEO	Select Channel to Record	
Record One Channel Watch Another	Select Channel to Watch	Select Channel to Record	OFF (TV mode)
Watch Playback of a Tape	AUX or VIDEO		



# BASIC CABLE HOOKUP—WITH CABLE BOX



## WITH THIS HOOKUP

### YOU CAN.....

- WATCH AVAILABLE CABLE CHANNELS
- RECORD AND WATCH THE SAME CHANNEL

### YOU CAN'T.....

- RECORD ONE CHANNEL WHILE YOU WATCH ANOTHER

## Caution

Do not connect to the power supply outlet before connecting all cables (see page 17).

ALL CHANNEL SELECTIONS MUST BE MADE AT THE CABLE BOX.  
BE SURE TO CONSULT YOUR CABLE BOX MANUAL FOR THE CABLE BOX OUTPUT CHANNEL.

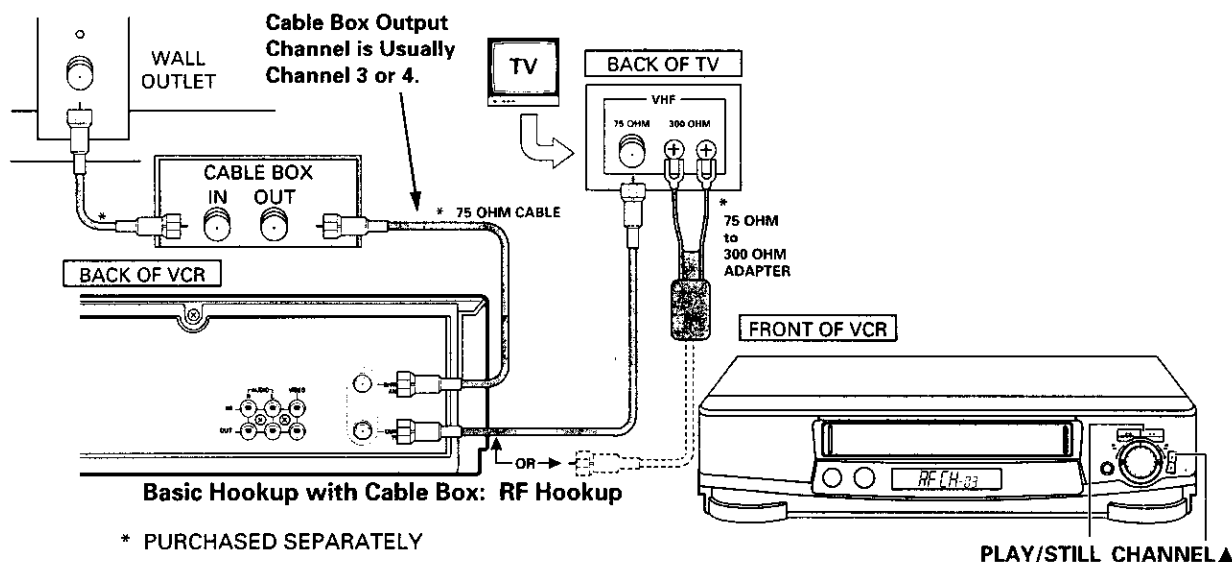


TABLE E

FUNCTION	CHANNEL SELECTION			VCR indicator (Press the VCR/TV mode select button to turn the VCR indicator on or off.)
	TV	VCR	CABLE BOX	
Watch Cable Channels on TV	Select Cable Box Output Channel		Select Channel to Watch	OFF (TV mode)
Select and Watch Cable Channels using VCR	3 or 4	Select Cable Box Output Channel	Select Channel to Watch	ON (VCR mode)
Record and Watch the Same Channel	3 or 4	Select Cable Box Output Channel	Select Channel to Watch	ON (VCR mode)
Record One Channel Watch Another				
Watch Playback of a Tape	3 or 4			ON (VCR mode)

### Switch the RF Channel

When the VCR is on, its video signal can come into your TV on either channel 3 or channel 4. You need to select the appropriate channel.

- When the power is turned on, press the POWER button to turn it off. Press the PLAY/STILL button on front of the VCR. Pressing the CHANNEL ▲ button alternates between RFCH-03 (channel 3) and RFCH-04 (channel 4) in the VCR's display.

Display the channel which is not used by a commercial channel in your area.



# ADVANCED CABLE HOOKUP WITH CABLE BOX **E**

## WITH THIS HOOKUP

### YOU CAN.....

- WATCH AVAILABLE CABLE CHANNELS
- RECORD AND WATCH THE SAME CHANNEL

### YOU CAN'T.....


- RECORD ONE CHANNEL AND WATCH ANOTHER

## Caution

Do not connect to the power supply outlet before connecting all cables (see page 17).

ALL CHANNEL SELECTIONS MUST BE MADE AT THE CABLE BOX.  
BE SURE TO CONSULT YOUR CABLE BOX MANUAL FOR THE CABLE BOX OUTPUT CHANNEL.

HOOKUPS

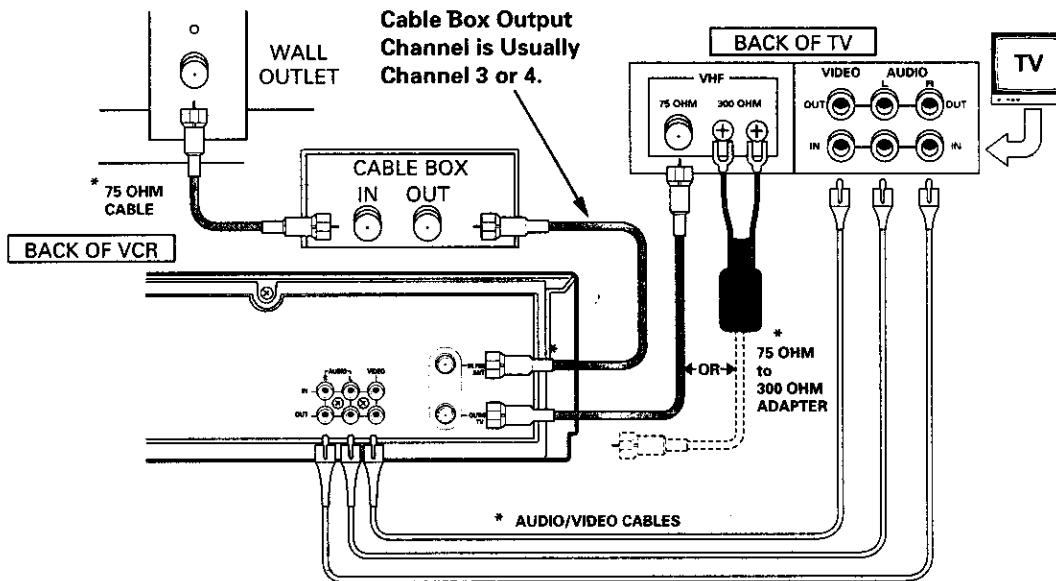

Advance Hookup with Cable Box: AV Hookup

\* PURCHASED SEPARATELY

TABLE F


FUNCTION	CHANNEL SELECTION			VCR indicator (Press the VCR/TV mode select button to turn the VCR indicator on or off.)
	TV	VCR	CABLE BOX	
Watch Cable Channels on TV	Select Cable Box Output Channel		Select Channel to Watch	OFF (TV mode)
Select and Watch Cable Channels using VCR	AUX or VIDEO	Select Cable Box Output Channel	Select Channel to Watch	
Record and Watch the Same Channel	AUX or VIDEO	Select Cable Box Output Channel	Select Channel to Watch	
Record One Channel Watch Another				
Watch Playback of a Tape	AUX or VIDEO			

**WITH THIS HOOKUP**

- YOU CAN.....**
- WATCH AVAILABLE CABLE CHANNELS
  - RECORD AND WATCH THE SAME CHANNEL
  - RECORD ONE CHANNEL AND WATCH ANOTHER

**Caution**  
Do not connect to the power supply outlet before connecting all cables (see page 17).

TO RECORD, ALL CHANNEL SELECTIONS MUST BE MADE AT THE CABLE BOX.  
BE SURE TO CONSULT YOUR CABLE BOX MANUAL FOR THE CABLE BOX OUTPUT CHANNEL.

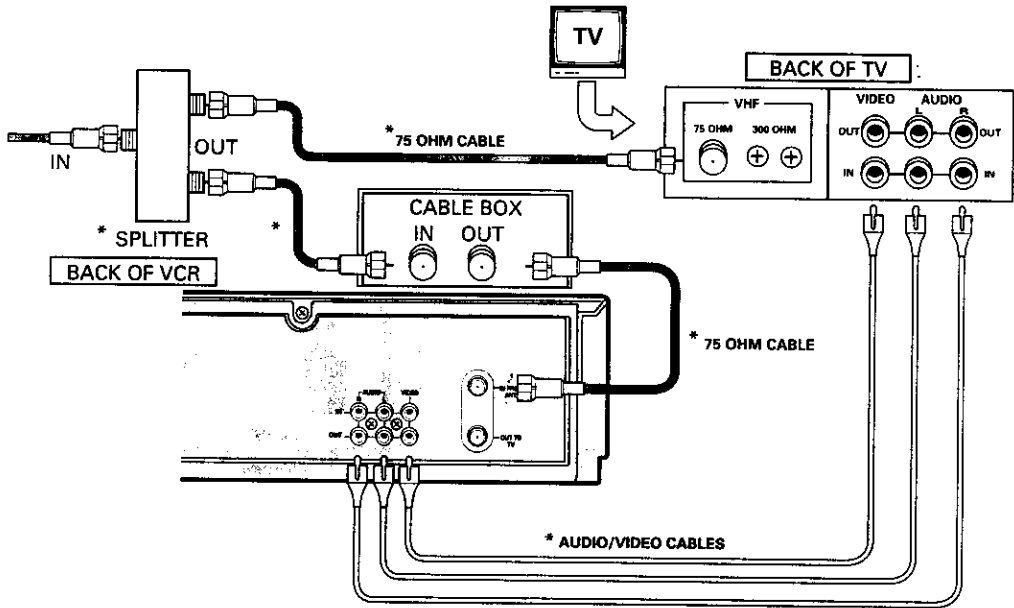

**Advanced Hookup with Cable Box and Splitter: AV and RF Hookup**


\* PURCHASED SEPARATELY

**TABLE G**

FUNCTION	CHANNEL SELECTION			VCR indicator (Press the VCR/TV mode select button to turn the VCR indicator on or off.)
	TV	VCR	CABLE BOX	
Watch Cable Channels on TV	Select Channel to Watch			
Select and Watch Cable Channels using VCR	AUX or VIDEO	Select Cable Box Output Channel	Select Channel to Watch	
Record and Watch the Same Channel	AUX or VIDEO	Select Cable Box Output Channel	Select Channel to Watch	
Record One Channel Watch Another	Select Channel to Watch	Select Cable Box Output Channel	Select Channel to Record	
Watch Playback of a Tape	AUX or VIDEO			



## ■ Setting the channel automatically





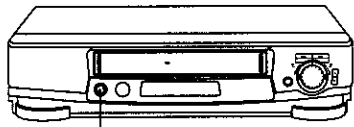


POWER

**1** Plug in at the power supply outlet after completely connecting all cables. Please refer to page 10 to 16 on "HOOKUP" sections. The VCR will be in the standby mode at this stage.

**2** Press the POWER button on the VCR to start the auto set up. This screen appears to show that the channel is being set. The dash " - " puts out lights one by one as shown on the VCR's display.

     - The VCR will automatically store channels received in your area.
- It takes about 2 - 3 minutes.



When the auto set up is complete, the channel with the lowest number appears in the VCR's display.


### Notes

 - If you press the POWER button inadvertently before connecting all cables, follow the steps on page 20 for further tuning function.
- If you press the POWER button during auto set up mode, the VCR automatically switches to the STOP mode.


**Note:** An antenna or cable must be connected to the VCR before you begin this operation.

## ■ Tips

- 1 You'll need to set the clock when first hooking up your VCR, and any time the power goes out more than 30 seconds. When you first plug in the VCR or after a power outage, the clock display will read "--:--".




## ■ To set the clock

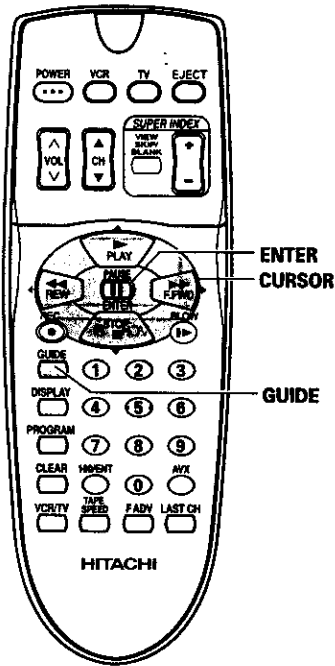

**Note:** Turn on the TV and select the video channel (3 or 4). Or, if you are hooked up with an audio/video cable, set the TV to AUX or VIDEO.

- 1 Press the **GUIDE** button. The main on-screen menu will appear on the TV screen.


You may view all the on-screen instructions in English, French, or Spanish. When you first set up your VCR, it will be set to English. Press the **▼** cursor button to select LANGUAGE option, and then press the **▶** cursor button for French or for Spanish.

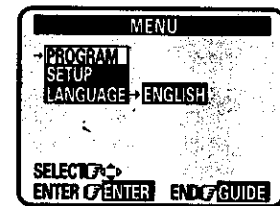


- 2 Press the **▼** cursor button to select the **SETUP** option, and then press the **ENTER** button.




- 3 Press the **▼** cursor button to select the **CLOCK**, and then press the **ENTER** button.

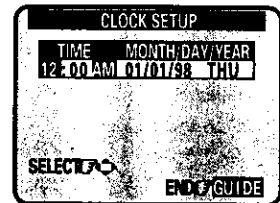


- 4 Press the **▲** or **▼** cursor button to change the hour.
  - The "AM" or "PM" can be select when you change the hour.

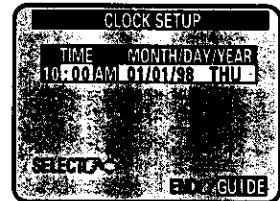


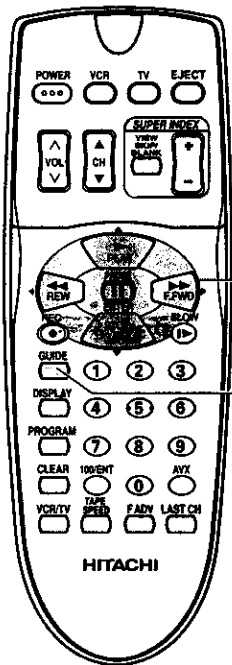


- 5** Press the ► cursor button to select the minutes, and then press ▲ or ▼ cursor button to change the minutes.

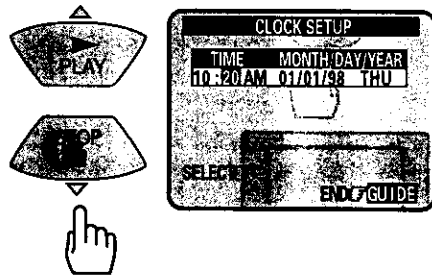


- 6** Press the ► cursor button to select MONTH, and then press the ▲ or ▼ cursor button to change the month.

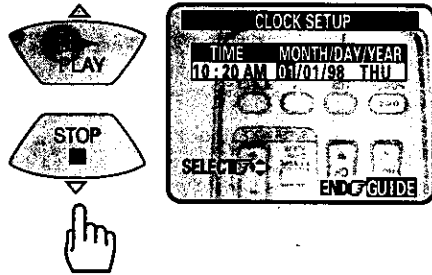

- 7** Press the ► cursor button to select DAY, and then press the ▲ or ▼ cursor button to change the day.
- The correct day of the week will appear by itself.

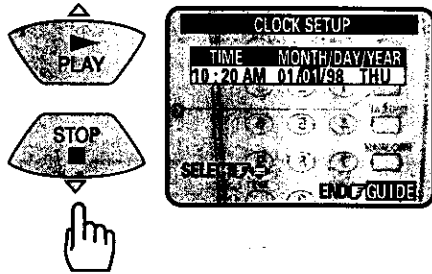

- 8** Press the ► cursor button to select YEAR, and then press the ▲ or ▼ cursor button to change the year.

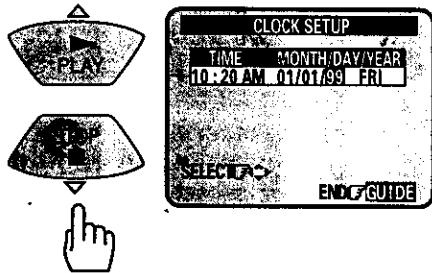

- 9** Press the GUIDE button. The VCR clock is now set, and should show the correct time of day on the VCR's display.



**Notes:**

- The clock uses the 12-hour system. You set it for AM or PM.
- You can correct any item entered as you go by pressing ◀ cursor button to select and press ▲ or ▼ cursor to change.
- If you press ▲ or ▼ cursor button continuously, the time or date is kept changing.


FIRST TIME SETUP



# PRE-TUNING THE VCR TUNER

**Note:** An antenna or cable must be connected to the VCR before you begin this operation.

## ■ Presetting the received channels without using a cable box (Hookups **A**, **B**, **C** or **D**)

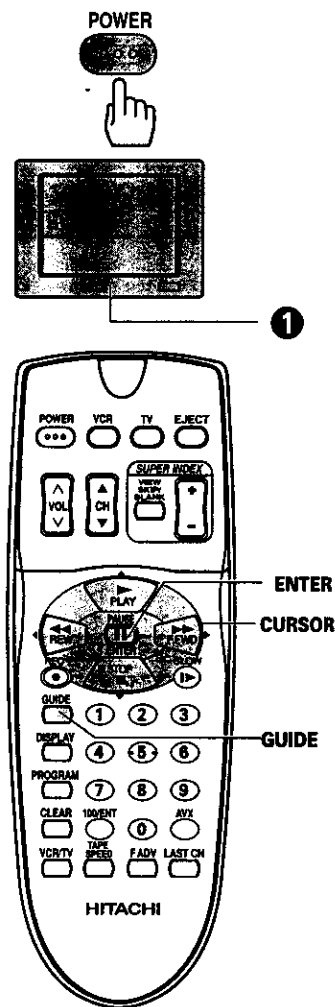


Press the **POWER** button to turn on the VCR.


- 1 Turn on the TV and select the video channel (3 or 4).  
Or, if you are hooked up with an audio/video cable, set the TV to AUX or VIDEO.




- 2 Press the **GUIDE** button.  
The main on-screen menu will appear on the TV screen.

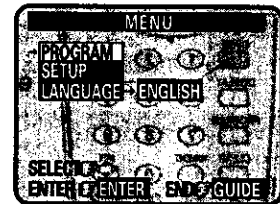

- 3 Press the **▼** cursor button to select the **SETUP** option, and press the **ENTER** button.

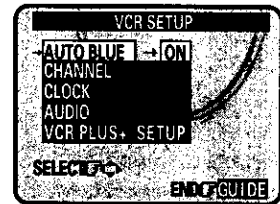

- 4 Press the **▼** cursor button to select the **CHANNEL**, and then press the **ENTER** button.

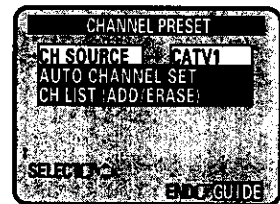

- 5 Press the **▼** cursor button, and then press the **ENTER** button.  
The VCR will automatically select CATV1 or ANT and store channels received in your area. It takes about 2 – 3 minutes.  
If CATV1 doesn't give you the channels you expect, press the **▶** cursor button to select CATV2 at step 4.  
After the channels are stored in memory, the channel with the lowest number appears in the VCR's display.



- 6 Press **GUIDE** to return to regular viewing.



**Note:** Your VCR is capable of receiving 68 broadcast TV channels (VHF 2 – 13, UHF 14 – 69) and cable channels (CATV 1 – 125). In some areas channels cannot be received when CATV1 is selected. In this case, select CATV2 in the receiving setup.

## ■ When automatic presetting of channels are finished

Press the CH (channel) button (or numbered buttons) to check the channels you can receive.

*Note: If no channels have been set or a clear picture does not appear, check the antenna or cable connection.*



Select Channel "7"




## ■ To add or erase channels


The auto channel set procedure may memorize channels that are blank, have snowy pictures, or interference. You may skip these channels by erasing them. Very weak stations might not be memorized at all. You may receive these stations by adding them.

- 1 Press the GUIDE button.  
The main on-screen menu will appear on the TV screen.


GUIDE

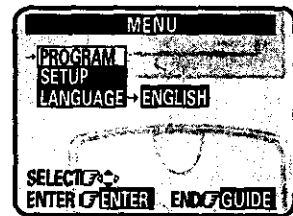



- 2 Press the ▼ cursor button to select the SETUP option, and then press the ENTER button.

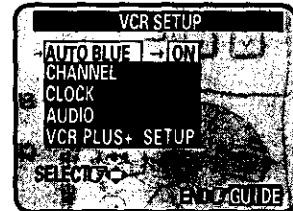

- 3 Press the ▼ cursor button to select the CHANNEL, and then press the ENTER button.

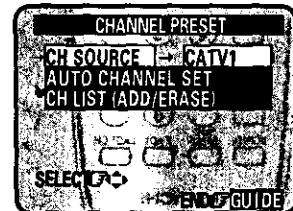

- 4 Press the ▼ cursor button to select CH LIST <ADD/ERASE>, and then press the ENTER button.

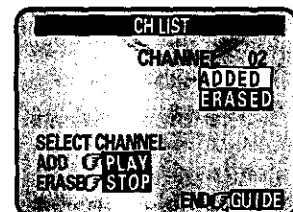
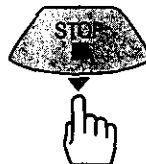


- 5 Use the number buttons to select the number of the channel you want to add or erase.

Example





Selects channel "7"

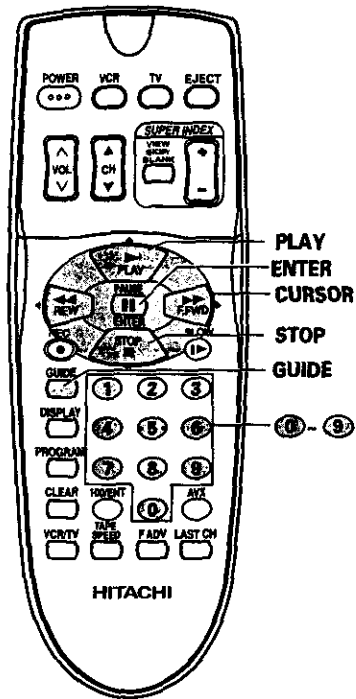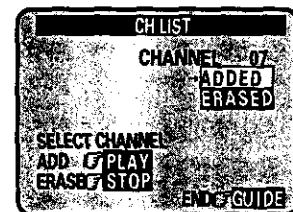

FIRST TIME SETUP

- 6** Press the STOP button to delete the channel, or press the PLAY button to add it.

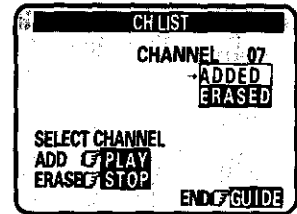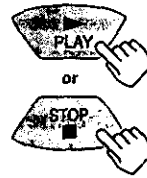

- 7** Press the GUIDE button to return to regular viewing.





## Auto blue setting




**1**


- 1** Turn on the TV and select the video channel (3 or 4).  
Or, if you are hooked up with an audio/video cable, set the TV to AUX or VIDEO.

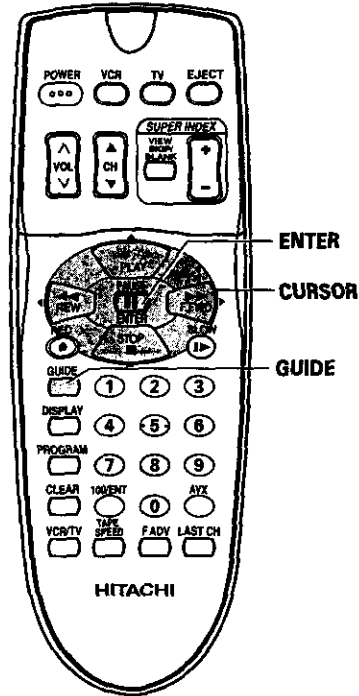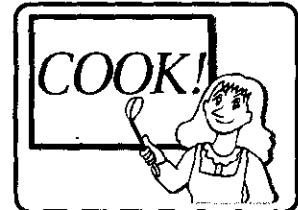



- 2** Press the GUIDE button.  
The main on-screen menu will appear on the TV screen.

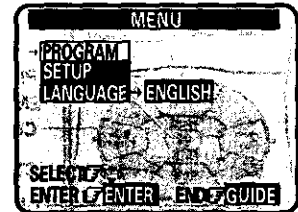

- 3** Press the ▼ cursor button to select "SETUP", and then press the ENTER button.

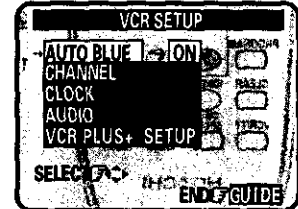

- 4** Press the ► cursor button to select AUTO BLUE "ON" or "OFF".

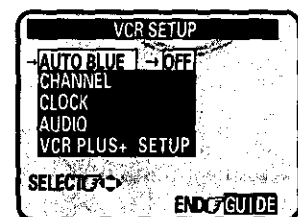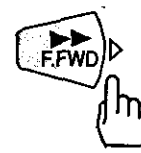

**ON:** The screen becomes blue and mutes sound when a channel without a broadcast signal on the VCR or a channel on which broadcasting has finished.

- If the signal is too strong, this function may not operate even if you specify ON. During playback this function does not operate.

**OFF:** The AUTO BLUE feature is switched off.

- 5** Press the GUIDE button to end the setting.



## ■ To playback a recorded tape



1

- 1 Turn on the TV and select the video channel (3 or 4).  
Or, if you are hooked up with an audio/video cable, set the TV to AUX or VIDEO.





 
2

- 2 Insert a recorded tape.  
The power comes on automatically and the tape indicator lights on the display.
  - When a cassette without its safety tab is inserted, playback starts automatically.



- 3 Press the PLAY button to start playing the tape.

- If you press the PLAY button and the cassette has not been inserted, the warning screen will appear on the TV screen for several seconds. Insert a cassette.

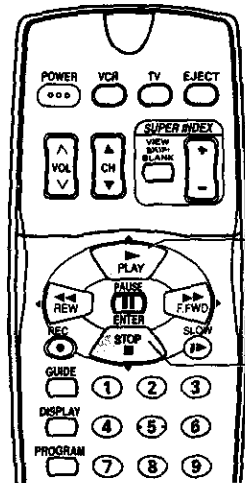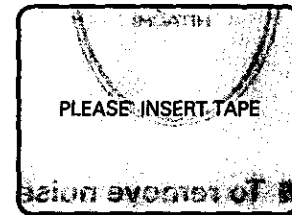

PLAY

STOP


- 4 Press the STOP button to end playback.



**Note:** This VCR can quasi playback the tape that is recorded by S-VHS type. SQPB stands for S-VHS Quasi Playback. When VCR playback by SQPB, the inversion noise will appear on screen in STILL, SLOW and F.ADV mode.

PLAYBACK OPERATIONS

## ■ Rewinding the tape

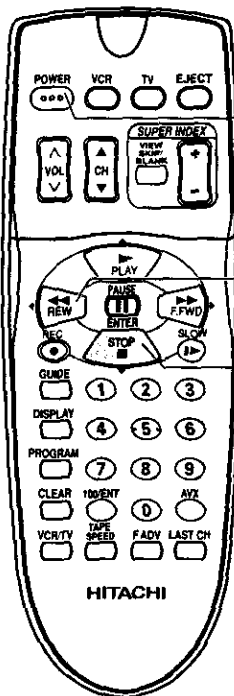

POWER

REW

STOP

When the video cassette reaches the end of the tape, the VCR will stop and automatically rewind the tape.

- If you press the POWER button while the tape is rewinding, the power will not shut off until the tape has been completely rewind. You may also rewind the tape manually at any time.

### Manual Rewind

- 1 Press the STOP button to end playback.



- 2 Press the REW button.  
The VCR rewinds the tape all the way to the beginning, then stops.
  - Press the STOP/EJECT button on the VCR to eject the tape.




### Movie Return

If your video cassette has the safety tab removed, the VCR will stop and automatically rewind the videocassette, eject it, and turn off the power when it reaches the end of the tape or a blank section of tape which lasts for more than 30 seconds.

**Note:** This function works only in PLAYBACK mode, not in RECORDING mode.

## ■ Rewinding or fast forwarding a tape at high speed

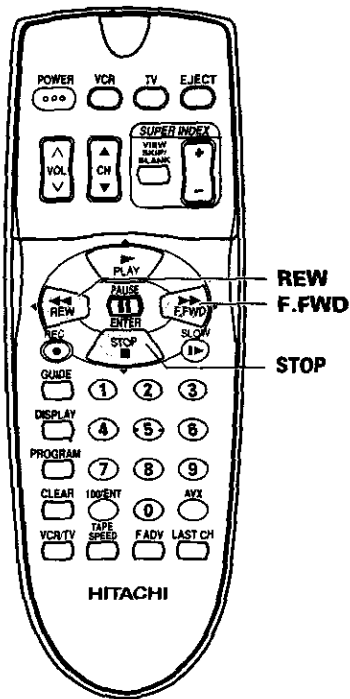


This function rewinds or fast-forwards T-120 tape for about 83 seconds. This time period will vary for different types of tape.


Press the REW or F.FWD button, then press it again.

To stop the tape, press the STOP button.

**Note:** During super rewind/fast-forward, there will be an interval of 5 seconds between the time the STOP button is pressed and the tape actually stops. This is designed to protect the tape. To stop the tape earlier, press the REW or F.FWD button to restore the normal rewind/fast-forward speed, then press the STOP button.

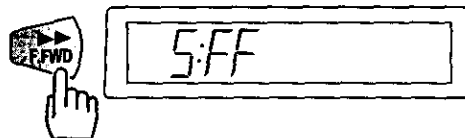

## ■ To remove noise from the picture

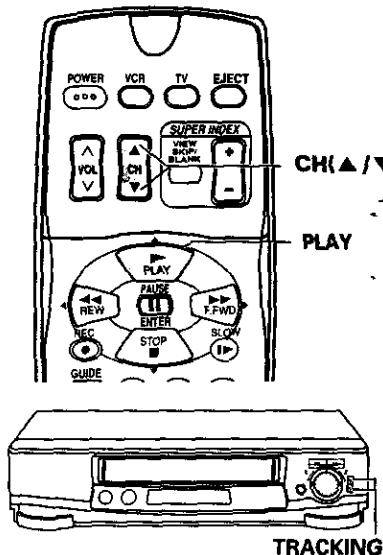

### Auto Tracking

Pressing the PLAY button starts the auto tracking feature, which automatically adjusts playback to eliminate static lines or picture noise that may appear on the screen.

### Manual Tracking

Scratched tapes or poorly recorded tapes may require additional picture adjustment. You can do this with the remote control.

Press the CH (▲ or ▼) button on the remote control or TRACKING button on the VCR when viewing a cassette.

Press either the ▲ or ▼ button until picture is clear.




or



**Note:** To reactivate auto tracking, simply eject the tape and reinsert it into the VCR.



## Variable speed playback

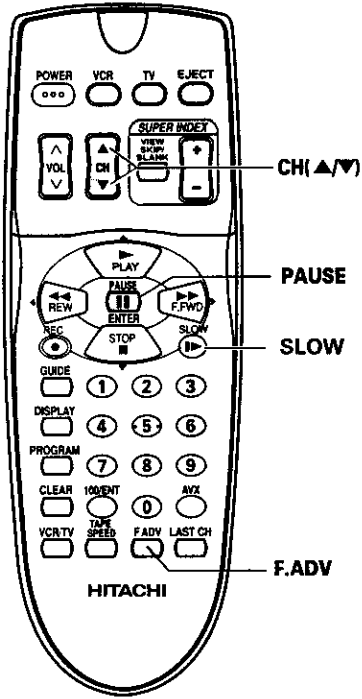

### Still Playback (Pause)

Press the **PAUSE** button on the remote control to still the tape during play.

The picture will "freeze". You may see some minor noise or interference on the screen. This is normal.

 
- To resume play, press the **PLAY** button or **PAUSE** button again.

**Note:** The sound is muted and cannot be heard during "Special Playback Effects".

#### Notes:

- After 1 minute in the **PAUSE** mode, the VCR automatically switches to the **STOP** mode to protect the tape.
- If noise bars appear on the TV screen during the **PAUSE** mode, first set the VCR to the **SLOW** mode by pressing the **SLOW** button during playback and then press the **CH (▲/▼)** button on the remote control to minimize the noise bars (see page 25).
- If the screen jitters during **PAUSE**, press the **CH (▲/▼)** button to minimize the jitters.


**PAUSE**



### Frame Advance

- 1 Press the **PAUSE** button to stop the tape during playback.

 **PAUSE**



- 2 Press the **F.ADV** button to view the picture one frame at a time.


- Press the **PAUSE** button to resume play.

**F.ADV**



 
### Slow Motion

- 1 Press the **PLAY** button.



 - 2 Press the **SLOW** button to slow the playback speed.



- 3 Press the **PLAY** button to return to play back at a normal speed.




Press the **STOP** button to stop the tape.




#### Notes:

- Use the **CH (▲ or ▼)** button to minimize any visual noise bands on the screen.
- After 1 minute in slow motion playback, the VCR will stop the tape automatically to prevent damage to the tape and VCR.

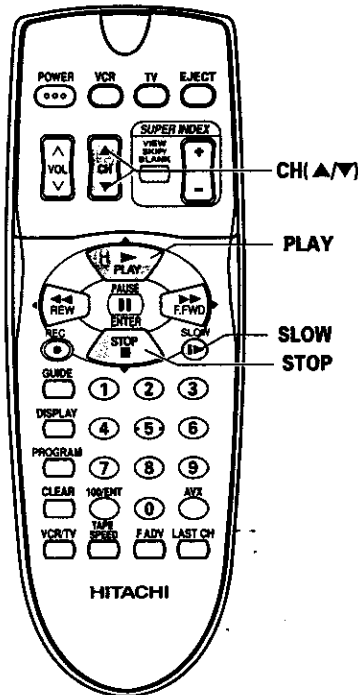

SPECIAL OPERATIONS

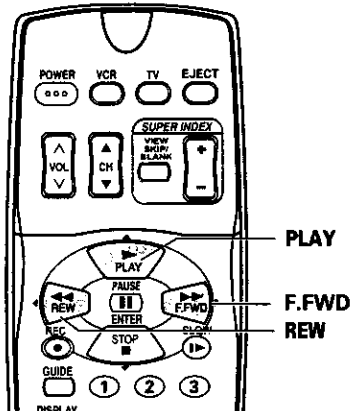

### Visual Search

This function let you search backward and forward through the videotape while viewing it.

**During play:**

 
 
Press the REW button to search in reverse.

Press the F.FWD button to search ahead.

- Press the PLAY button to return to normal playback.

Press REW or F.FWD and hold it; you can search backward or forward through the tape at a higher speed while viewing it.

- Press PLAY and REW, then hold REW for backward search at a higher speed.
- Press PLAY and F.FWD, then hold F.FWD for forward search at a higher speed.
- Release REW or F.FWD to return to normal playback.




## Choosing a mode for audio playback

The VCR records the same audio on both the Hi-Fi and linear tracks on the tape. The Hi-Fi sound is recorded on separate left and right stereo channels. Monaural sound is recorded on the linear track.


To enjoy Hi-Fi sound, connect your VCR to a stereo television or amplifier/receiver using the audio/video jacks (see page 49).

**How to select playback audio**

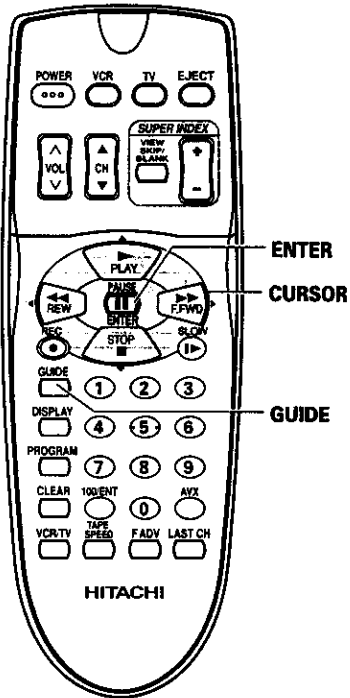


- 1 Press the GUIDE button.

GUIDE

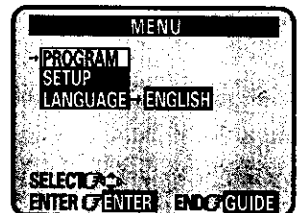

- 2 Press the ▼ cursor button to select the SETUP option, and then press the ENTER button.

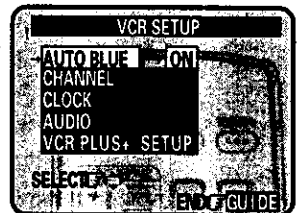

- 3 Press the ▼ cursor button to select AUDIO, and then press the ENTER button.



- 4 Press the ► cursor button to select "HIFI" or "LINEAR".

- Select HIFI to play back the sound recorded on the Hi-Fi track and for normal use.

The **L** and **R** indicators will light in the VCR's display panel.

Select **LINEAR** to play back the sound recorded monaural track. Also, if the audio sounds distorted or unusual or there is no audio, select LINEAR.




- 5 Press the GUIDE button to end the setting.

GUIDE




## ■ Using the shuttle ring

The shuttle feature lets you control all the playback functions — PLAY, PAUSE, SLOW MOTION, and SEARCH — using one convenient ring.

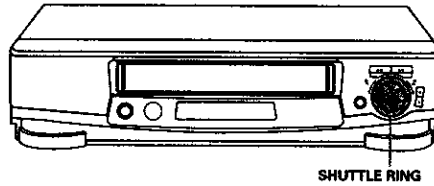


### How to use the shuttle ring

- 1 Turn the shuttle ring during playback or still playback (pause).
  - As you turn the ring, you get different playback speeds and forward or reverse motion.
  - Try using the shuttle to explore backward and forward through your next video.

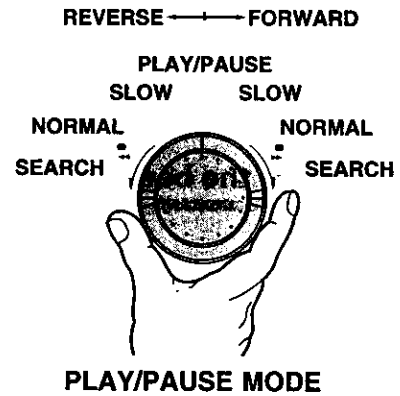

- 
- 2 Turn the ring while in the stop mode to fast forward or rewind the tape.
    - The tape continues to be wound even after you release the dial.

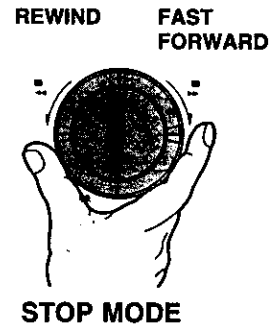

---

#### Notes:

- If noise bars appear on the TV screen during the **SLOW/STILL** modes, turn and hold the shuttle ring in the **SLOW** position, then press the TRACKING (▲ or ▼) button on the VCR to minimize the noise bars. The noise bars are then eliminated automatically in the **STILL** mode.
- Since thin videotape is used in T-180 and longer cassettes, do not repeatedly perform the following operations with these tapes.
  - Fast forward, rewind, slow play
  - Insertion and ejection of tapes


## ■ What is SUPER INDEX?

SUPER INDEX allows you to quickly search for a program or a scene you want to view or the point from which you want to start recording on tape, with the following four functions:

- **INDEX SEARCH:** You can locate the beginning of a recorded program, using the INDEX feature\*.  
\* Each time you press the REC or REC/IRT button to start recording, the VCR will record an INDEX mark at the start of recording. The INDEX feature uses this signal recorded on tape (VISS signal) to locate the beginning of a program you want to view.
- **BLANK SEARCH:** You can locate the beginning of a blank (non-recorded) section on tape.
- **EASY VIEW:** This switches fast forward or rewind to visual search so that you can search for a scene you want to view while scanning the pictures.
- **SKIP PLAY:** You can skip unnecessary scenes during play.


## ■ Locating the beginning of a recorded program (INDEX SEARCH)

*Note: This function only works with recordings that have been set up with indexing.*

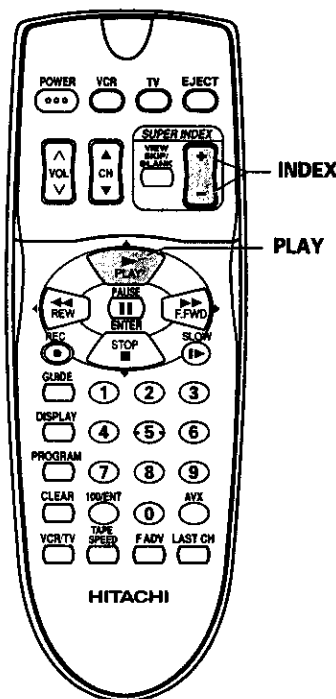

- 1 Press the - (Rewind) button for rewind or the + (Forward) button for forward to begin the index search in the STOP mode.

- The INDEX search screen is displayed, and the tape rewinds or fast forwards until an index mark is detected.
- A black square in the tape bar shows the current tape position.
- When the VCR finds an index mark, it plays 15 seconds of the program that begins at that spot.

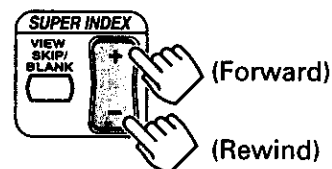

Tape bar

*Note: Tape bar will not appear correctly if tapes which have scratches or are slack are being used.*

- 2 If this is the program you were looking for, press the PLAY button for normal playback.  
• To stop the index search before an index mark is reached, press the STOP button.




*Note: If there are no index marks on the tape, the VCR will just rewind to the beginning or fast forward to the end.*


## ■ Locating the beginning of a blank section (BLANK SEARCH)

This function searches for a non-recorded section of remaining tape, or unused tape, and stops the tape when it locates such a section.



### Notes:

- *BLANK SEARCH cannot be operated with a cassette without a safety tab.*
- *BLANK SEARCH may not operate when a blank section lasts no more than five minutes.*
- *BLANK SEARCH will not be engaged in the following sections since they are not recognized as blanks:*
  - Sections with noise
  - Sections where only sound has been recorded
  - Sections where previous recordings have been erased

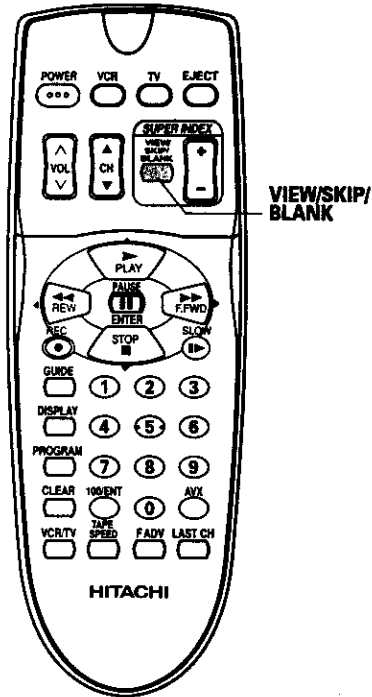


- 1** Press the  (VIEW/SKIP/BLANK) button in the STOP mode. The BLANK SEARCH screen will appear and the tape will fast forward automatically.

- The blank which is the nearest the current tape position is searched for.
- The blank square in the tape bar shows the current tape position.
- The tape remaining time appears on the screen and VCR display during BLANK SEARCH.
- When a blank is detected, the tape will automatically rewind to the beginning of the blank.

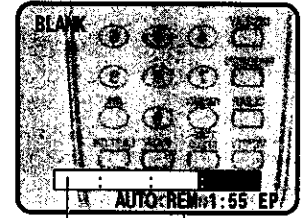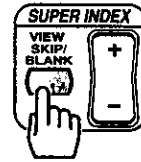

Tape bar Tape Remaining

 


### Notes:

- *When a cassette without a safety tab is inserted, "TAB" will flash in the VCR display for several seconds and the cassette will be ejected automatically.*
- *Tape bar will not appear correctly if tapes which have scratches or are slack are being used.*


When the beginning of blank is located, the STOP screen will appear for five seconds and the tape will stop.

 
- The tape remaining time appears in the VCR display.




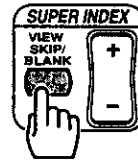
**Note:** Make sure that the tape is at the beginning of blank before you start recording or editing.


## ■ Switching rewind or fast forward to visual search (EASY VIEW)

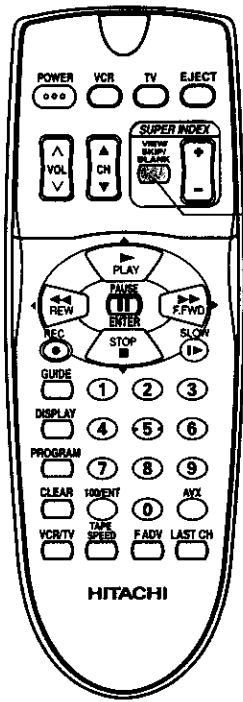

Hold down the  (VIEW/SKIP/BLANK) button during rewind (or fast forward), and the mode will switch to visual search, so that you can search for a scene you want to view while scanning pictures.

 
Hold down the  (VIEW/SKIP/BLANK) button during rewind:  
The tape will be visually scanned in the reverse direction while the button is held.




Hold down the  (VIEW/SKIP/BLANK) button during fast forward:  
The tape will be visually scanned in the forward direction while the button is held.




 
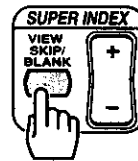
- When the button is released, the tape will rewind or fast forward again.



## ■ Skipping unnecessary scenes (SKIP PLAYBACK)

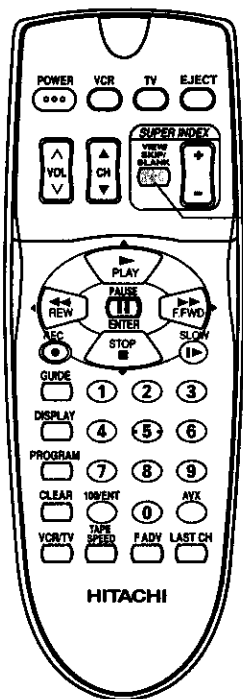


While playing back your tape you can skip forward by pressing the  (VIEW/SKIP/BLANK) button.  
The tape will search ahead for about a minute and then resume playing.



## ■ Switching between the clock, time counter and time of remaining tape

Press DISPLAY while the on-screen display is displayed. The on-screen display switches in the order below together with the VCR's display.

Press the DISPLAY button to see the clock.

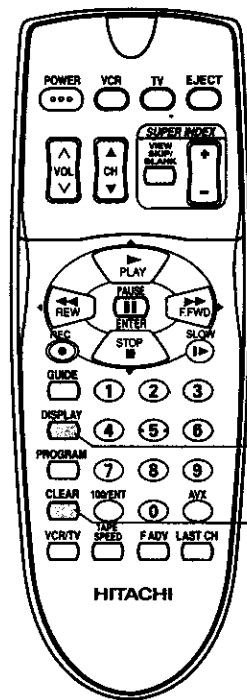

DISPLAY

Press the DISPLAY button a second time to see just the time counter.

CLEAR

**Notes:**

- The linear time counter operates only if there is something recorded on the tape.
- The counter changes to 0:00:00 when the tape is ejected.

Press the DISPLAY button a third time to see the tape remaining time.

 



**Note:** Immediately after the tape is inserted, "--:--" will appear. 2 minutes after playback or recording is started, the tape remaining time is displayed.

Press the CLEAR button repeatedly to switch the type of the tape used. The correct remaining time will appear.

AUTO: T-120 or shorter tape  
 T-160: T-140 or T-160 tape  
 T-180: T-180 tape  
 T-210: T-210 tape

**Notes:**

- The tape remaining time is not displayed correctly for a tape without any recordings or tapes other than T-30/60/90/120/140/160/180/210.
- The remaining time may not be displayed correctly during fast forwarding or rewinding.

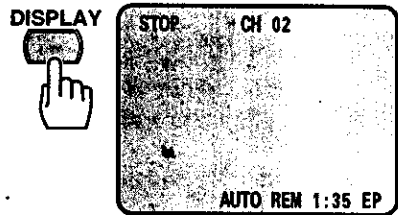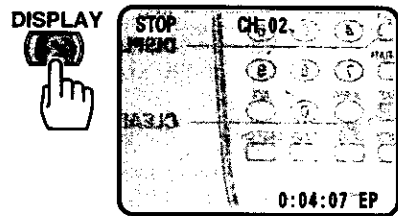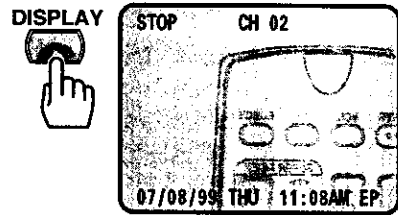


PLAYBACK OPERATIONS

## ■ To find specific sections on a tape

### Indexing with the Time Counter

You can set the time counter to memorize a certain point in the video programming, and you can return to that point automatically.

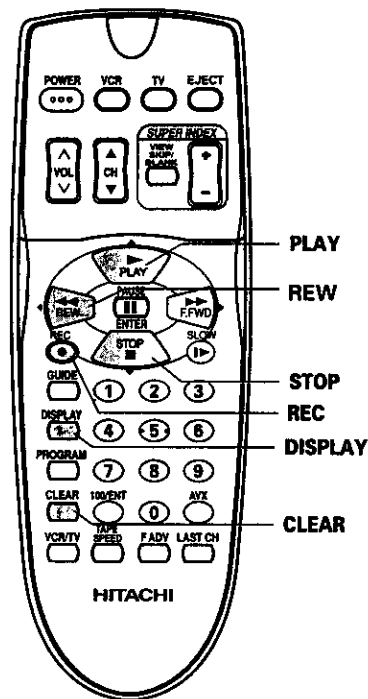


- 1 Press the **DISPLAY** button two or three times.

The counter will appear in the VCR's display.



- 2 Begin recording or playing back a tape.

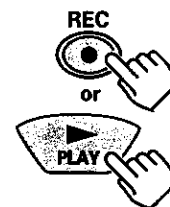

- 3 At the point that you want to go back to, press the **CLEAR** button.

This resets the counter to 0:00:00.



- 4 Press the **STOP** button when you are done recording or playing back the tape.



- 5 Press the **REW** button to rewind the tape.

It will automatically stop at the spot where you cleared the counter in step 3.

- Press the **PLAY** button to watch the tape from the selected spot.



#### Notes:

- Press the **DISPLAY** button to turn the counter display off. The selected spot will stay in memory until you set a new one or until the tape is ejected.
- During super rewind/fast-forward, the tape does not stop automatically even if the counter reads "0:00:00".



## Before you record

**Note:** The cassette safety tab must be in place in order to record.


The VCR must be hooked up properly for recording. See the Simple Hookups at the beginning of this manual.

### Copyright infringement warning

Most television programs and films are copyrighted. This means that someone has legal rights governing the reproduction and distribution of this material. In certain circumstances, copyright law may apply to private in-home taping of copyrighted materials. In most cases, it is okay to record for personal use, as long as you do not sell the material. You must act responsibly in this area – check into the matter if you are unsure.

To re-record on a cassette which has its safety tab removed.


Cover the hole with cellophane tape.

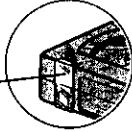

## Basic recording steps

**Note:** You may use a blank tape or you may record over a previously recorded (erasable) tape.


- 1 Turn on TV and select the video channel (3 or 4).**  
 Or, if you are hooked up with an audio/video cable, set the TV to AUX or VIDEO.

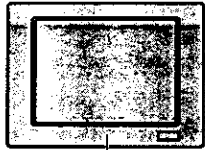


1



- 2 Insert a blank or erasable tape.**  
 The power comes on automatically and the tape indicator lights on the display.
  - If a cassette without its safety tab is inserted, playback starts automatically, and you cannot complete the record operation.

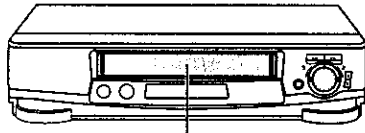


2

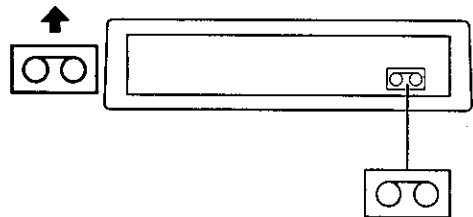

- 3 Press the TAPE SPEED button to select SP (standard play, for the best picture quality) or EP (extended play, for longest recording time on a single tape).**


TAPE SPEED

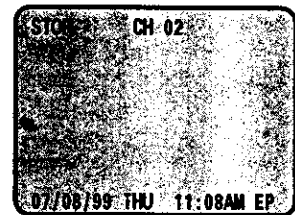

- 4 Press the CH (▲/▼) button or the number buttons to select the channel you want to record.**





 or





Example: Select channel 8.

 - 100/ENT and 2 and 4 for channel 124.

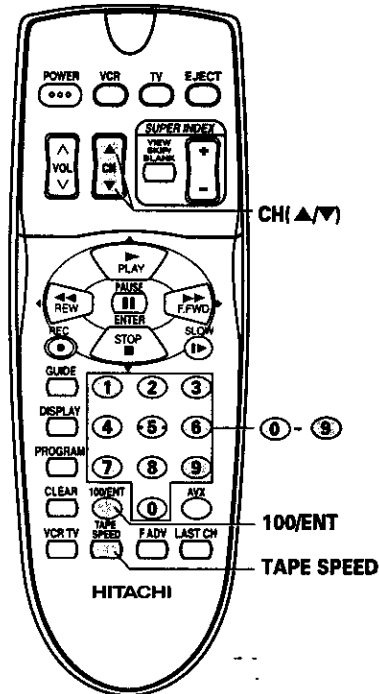

RECORDING OPERATIONS

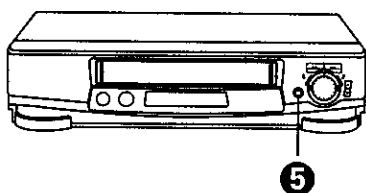
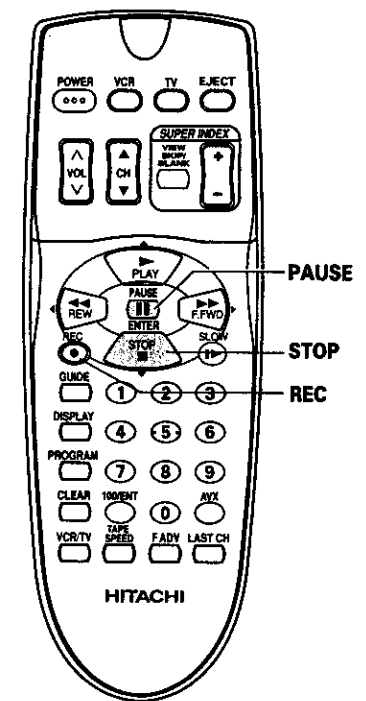


**5** Press the REC button on the remote control or the REC/IRT button on the VCR.

Recording will start and the **REC** indicator on the VCR will appear.

**Notes:**


- Recording will not start unless the cassette has the safety tab in place. When a cassette without a safety tab is inserted, "Tab" will flash in the VCR display or the warning screen will appear on the TV screen for several seconds and the cassette will be ejected automatically.
- Press the PAUSE button to set the VCR to the recording pause mode. Press the button again to re-start recording.
- If you stay in PAUSE mode for more than 5 minutes, the VCR automatically switches to STOP mode to protect the tape.
- If you press the REC button and the cassette has not been inserted, the warning screen will appear on the TV screen for several seconds. Insert a cassette.

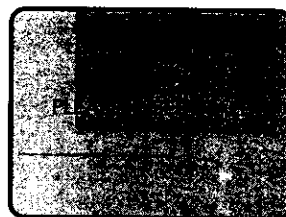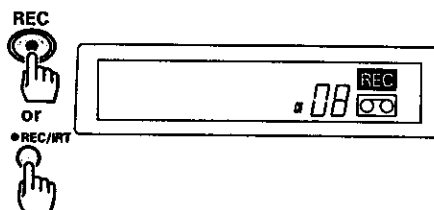


**6** Press the STOP button to finish recording.



## ■ To watch one program while recording another

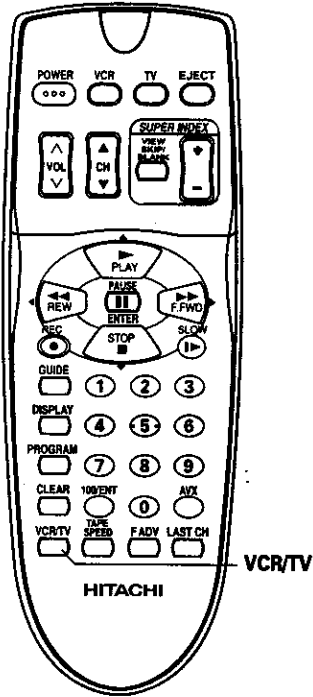

- 1 Once you have set the VCR for recording, press the VCR/TV button. The VCR indicator disappears, Now, you will be viewing through your TV only.

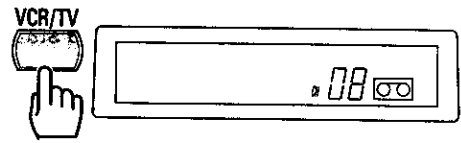


- 2 Switch channels using your TV controls or the VCR remote, if it's programmed to control your TV (see page 48).




### Notes:

- You can check on the recording by pressing VCR/TV again. This will switch you back to viewing through the VCR, and you'll see the program you are recording.
- If you're hooked up with an audio/video cable: Switch the TV from AUX or VIDEO mode back to the TV mode, then select the channels you want to watch, as described in Step 2. Switch TV back to AUX or VIDEO to monitor your recording.


## ■ To change the channel being recorded

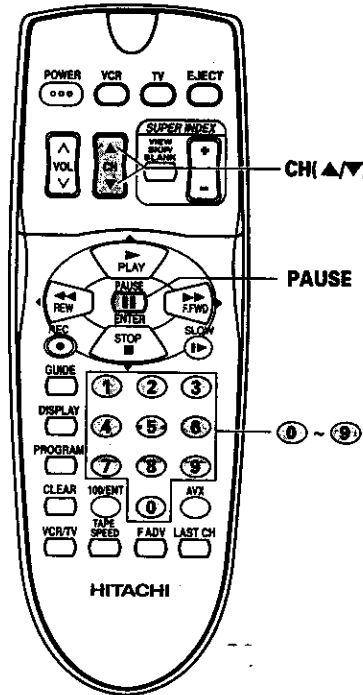


- 1 Press the PAUSE button to stop the recording temporarily.

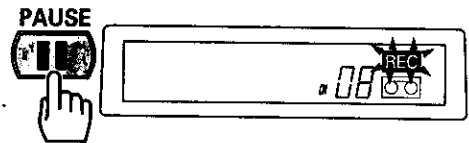

- 2 Press the CH (▲/▼) button or number buttons to change the channel to the one you prefer.

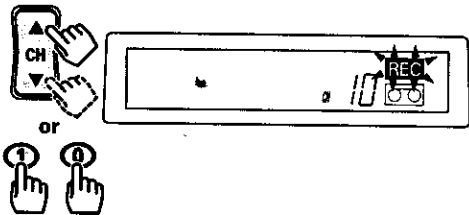

- 3 Press the PAUSE button to continue recording.

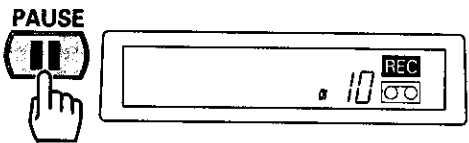

### Automatic Indexing


Your VCR will automatically create an invisible "INDEX" mark every time you press the REC button while recording. During playback, the Index Search feature will let you move through a tape that has several recordings on it by searching for the "INDEX" mark. See page 28, "Locating the beginning of a recorded program (INDEX SEARCH)".

RECORDING  
OPERATIONS


## ■ To record a Second Audio Program (SAP)

Some stations transmit a Second Audio Program – such as in a second language. If a station broadcasts in SAP, the SA indicator will display on your TV screen. You can set the VCR to record a second audio program by activating the SAP option.


How to set the SAP option.

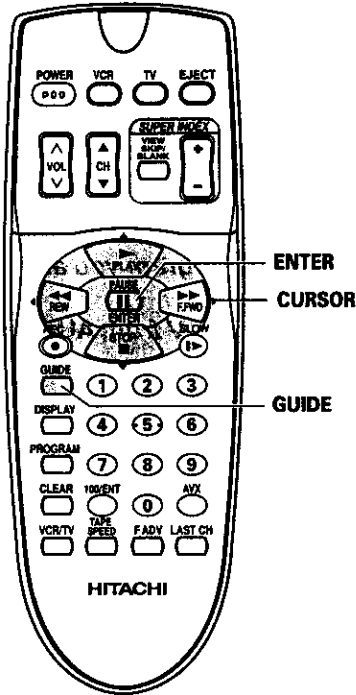



- 1** Press the **GUIDE** button.

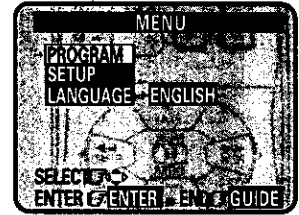


- 2** Press the **▼** cursor button to select the **SETUP** option, and then press the **ENTER** button.

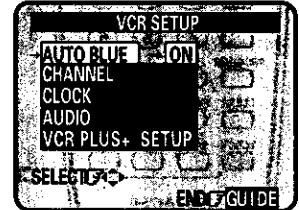


- 3** Press the **▼** cursor button to select **AUDIO**, and then press the **ENTER** button.

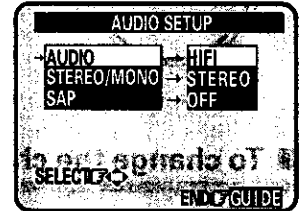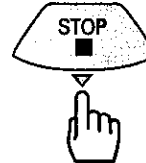

- 4** Press the **▼** and **▶** cursor button to set the **STEREO/MONO** option to "STEREO".

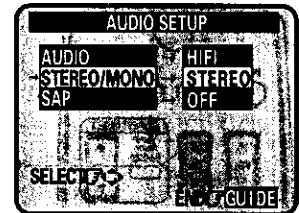

- 5** Press the **▼** and **▶** cursor button to set the **SAP** option to "ON".

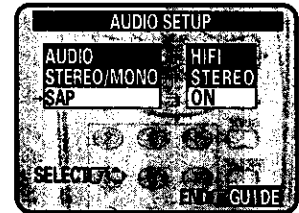

- 6** Press the **GUIDE** button to end the setting.



- 7** Follow the Step **1** through **6** on "Basic recording steps" on pages 33 and 34.

## ■ Stereo vs. mono sound


When you select the STEREO option in the initial setup operation, your VCR records in stereo any station that broadcasts stereo sounds. When a TV channel broadcasts in stereo, you'll see a stereo indicator on the TV screen.

Set to MONO if the stereo signal is weak and the sound is too "noisy".

**Note:** When you select MONO, sound is recorded as mono even when a channel broadcasts in stereo.

## ■ Using the Instant Recording Timer (IRT)


The Instant Recording Timer (REC/IRT button on the VCR) will let you make a simplified timer recording without having to use the programming timer. In order to set the IRT properly the clock must be set before starting.

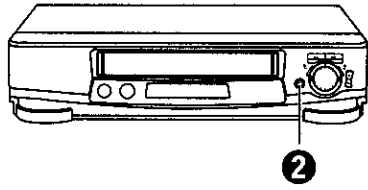

- 1 Follow the steps 1 through 5 on "Basic recording steps" on pages 33 and 34.

- 2 Press the REC/IRT button twice to indicate the recording time on the display.

- You may increase the recording time by 30 minutes each time you press the REC/IRT button.
- While you are recording, the remaining recording time is shown on the VCR display.
- At the end of your recording, the display will read "0:00", recording will stop automatically, and the VCR will turn itself off.

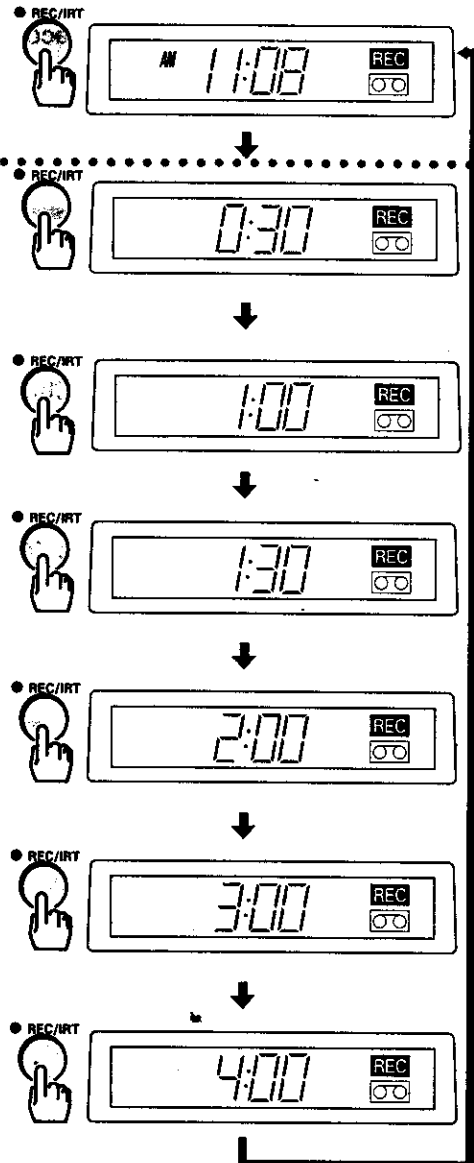

To stop recording while in the IRT mode:

- 1 Press the STOP button.
  - This can be done either on the VCR or with the remote control.




RECORDING  
OPERATIONS

## ■ Setting the VCR to record later

**Note:** The cassette safety tab must be in place in order to record.

To re-record on a cassette which has its safety tab removed.

Cover the hole with cellophane tape.

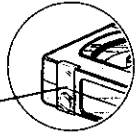


With the delayed recording feature, you can set this VCR so that it automatically turns on and records programs whenever you like – without your being around! You can record a program one time only, or you can automatically record a show every weekday or every week at the same time. You can preset as many as 8 timed recordings at once.

Recording is even easier when you have set up your channels for the VCR Plus+ system. Learn the basics of delayed recording in this section. Then read about the VCR Plus+ system beginning on page 41.


## ■ Before you begin



1

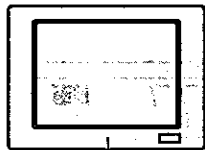

2

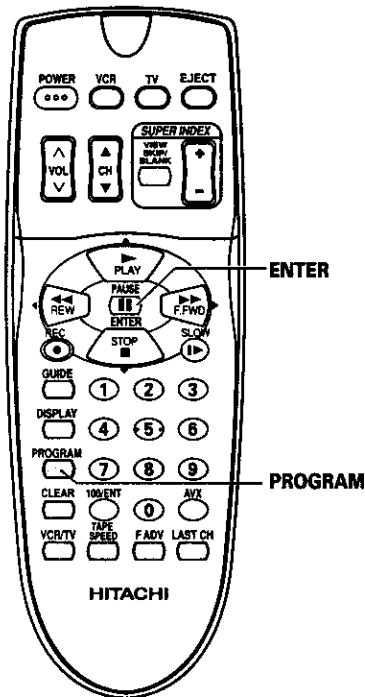

Assemble the information you need for timed recording:

- Be sure that the clock is set to the correct time
- Date and day of the program
- Starting time
- Ending time
- Channel to be recorded
- Blank or erasable videocassette (safety tab intact)


### Delayed Recording Steps

You set up the delayed recording using the on-screen Easy Guide System.

#### 1 Insert blank or erasable tape.


The power comes on automatically and the tape indicator lights on the display.

- If a cassette without its safety tab is inserted, playback starts automatically and timed record won't operate.

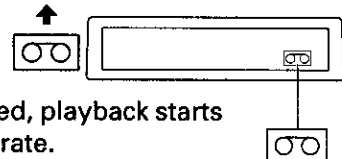

#### 2 Turn on the TV and select the video channel (3 or 4).


Or, if you are hooked up with an audio/video cable, set the TV to AUX or VIDEO.

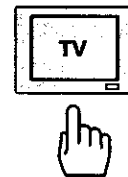

#### 3 Press the PROGRAM button twice for delayed recording.

Press the PROGRAM button once, the screen for VCR PLUS+ programming of the timer will appear. Press the PROGRAM button twice, this screen will appear.

- If eight programs have already been stored in memory, "FULL" will flash in the VCR's display for about five seconds.
- The screen on the right will not appear at this time.

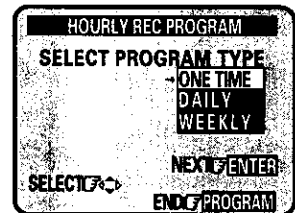


### Types of Delayed Recordings

**ONE TIME** Records one show at a particular date and time.


**DAILY** Records a show at the same time every day of the week, Monday through Friday.

**WEEKLY** Records a show at the same day and time every week.



#### 4 Press the ENTER button to bring up the screen for One Time Recording.

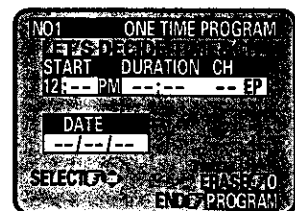



**EXAMPLE:** Set the VCR to record "one time", a program on Channel 8 that starts at 6:00 PM and records for 30 minutes on 7/10/99, at the EP recording speed.

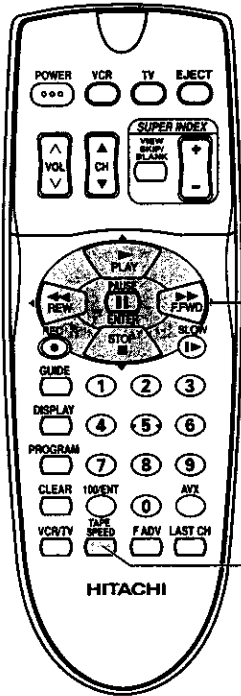



- 5** Press the ▲ or ▼ cursor button to change the hour of the start time.
- The "AM" or "PM" can be selected when you change the hour.

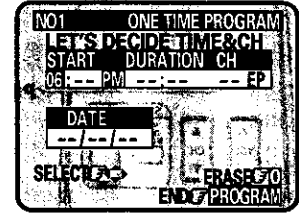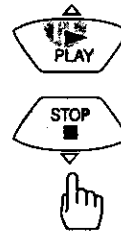



- 6** Press the ► cursor button to select the minutes, and then press the ▲ or ▼ cursor button to change the minutes of the start time.

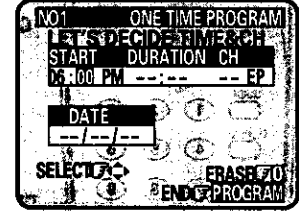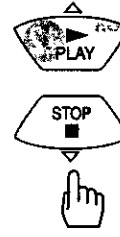




- 7** Press the ► cursor button to select the recording time, and then press the ▲ or ▼ cursor button to change the hour.

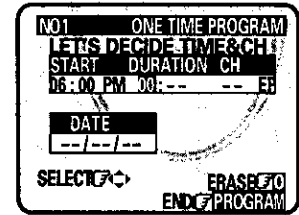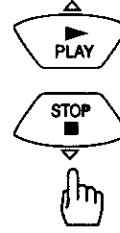


- 8** Press the ► cursor button to select the minutes, and then press the ▲ or ▼ cursor button to change the minutes.
- If you have installed a cable box, the cable box output channel will appear in the CH column.

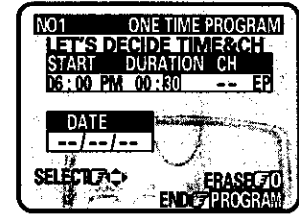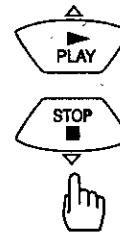


- 9** Press the ► cursor button to select the channel, and then press the ▲ or ▼ cursor button to change the channel.
- If you want to record from an external equipment, press the ▲ or ▼ cursor button to select L1 instead of the channel number.

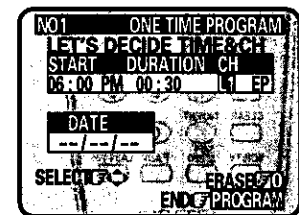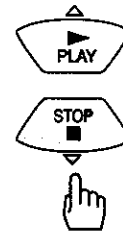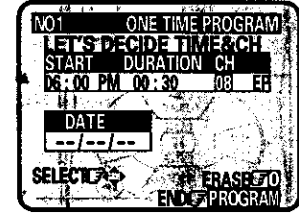


- 10** Press the ► cursor button to select the tape speed, and then press the ▲ or ▼ cursor or TAPE SPEED button to change the recording speed to EP.

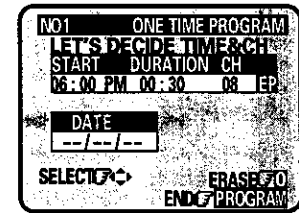

RECORDING OPERATIONS

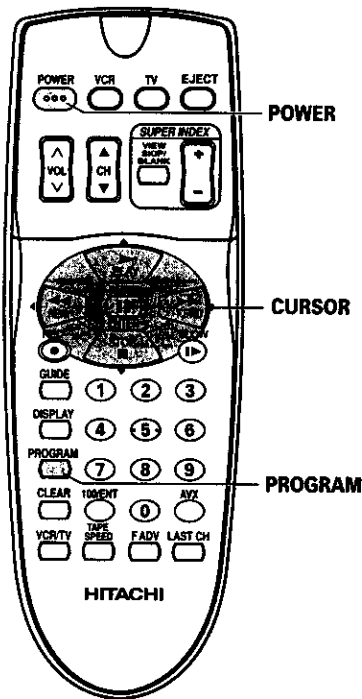


- 11** Press the ► cursor to select the recording date, and then press the ▲ or ▼ cursor button to change the date.

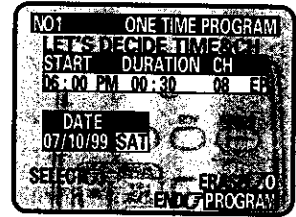

- 12** Press the PROGRAM button to set the program in memory.




*Note: If program is overlap, the VCR gives you an error message that disappears from the screen in about 5 seconds.*

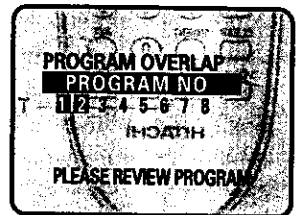

- 13** Press the POWER button to turn off the VCR.


 
The delayed recording indicator will display on the VCR. This tells you that the VCR will automatically record at the times and dates you have programmed.



(Delayed recording indicator)

*Note: If a cassette has not been inserted or a cassette without safety tab has been inserted, the delayed recording indicator will flash to warn you. The cassette without safety tab will be ejected automatically. Be sure to insert a cassette with safety tab intact.*

The VCR will automatically give a warning display on the screen 5 minutes before timer recording is to start.

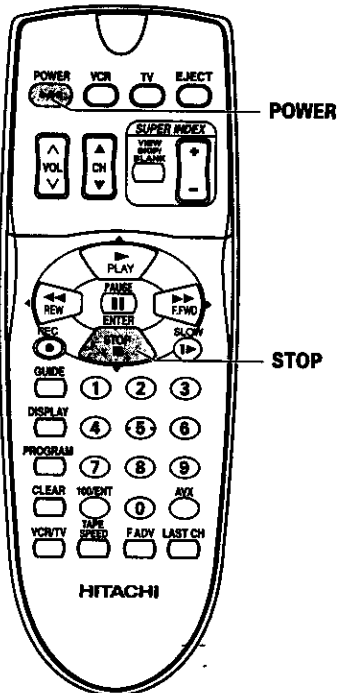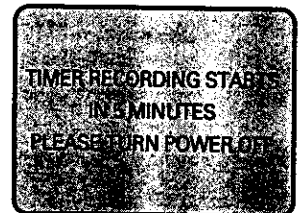

**When you have set up all the timed recordings you want:**

- Don't forget to load a videocassette (with the safety tab still attached) to record on.
- If you have installed a cable box, turn on the cable box and select the channel you want to record on the cable box (08 in this case) before recording starts.

**To stop recording while in the timed recording mode:**

- 1** Press the POWER button.
- 2** Press the STOP button within 10 seconds.

• This can be done either on the VCR or with the remote control.




**Important:** Your timed recording settings take effect when you turn off the power on the VCR.



## About the VCR Plus+ system

This handy feature makes timed recording a snap. You don't need to enter the specific channel, date, time, or duration of a program. All you enter is its PlusCode programming number – a number of up to eight digits. This special code is easy to find in your favorite TV program guide or daily newspaper. Here's a sample page from TV Guide showing PlusCode numbers next to each program.

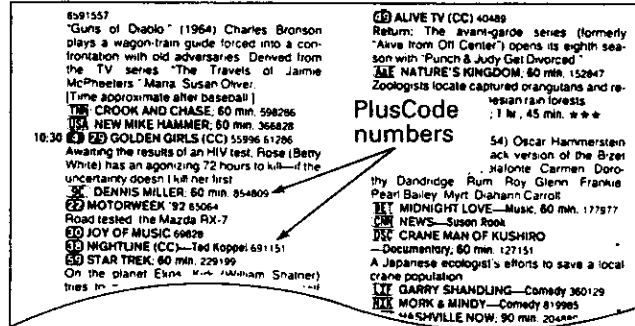

Your local channels may be different from the VCR Plus+ channel codes. To get ready to record with the VCR Plus+ system you need to assign your local broadcast and cable channel numbers to the VCR Plus+ channel codes already stored in your VCR's memory. This is called *channel setup* and you do it using the on-screen Easy Guide System and the following step-by-step instructions. Then you will be ready to begin VCR Plus+ recording, also using the on-screen Easy Guide System.

VCR Plus+® and PlusCode® are trademarks of Gemstar Development Corporation.

## Channel setup

### Before you begin

- 1 Look for a listing like this one in your local TV program guide or Sunday newspaper TV section. Notice the small numbers to the right of the station name. These are the VCR Plus+ channel numbers that you will use in the channel setup procedure.

- 04** WTTV (Ind.) 04
- 06** WRTV (ABC) 06
- 20** WFYI (PBS) 20
- 08** WXIN (Fox) 50
- 04** Arts & Entertainment Network 39
- 06** Cable News Network 42
- 08** The Discovery Channel 37

- 2 Make a list of the VCR Plus+ channel numbers and the channel numbers you are receiving them on. If there are any differences, **YOUR** channel numbers must be assigned to the corresponding VCR Plus+ numbers. (See Example)

Note in the example that the channel numbers are the same except for **20** (received on channel 8) and **42** (received on channel 38). These two channels must be assigned.

### EXAMPLE

VCR Plus+ Channel Number	Channel Number You Receive
04 (ind.)	04
06 (ABC)	06
20 (PBS)	08
42 (Cable News Network)	38

This setup should be performed if you are using an Antenna or Cable without a cable box. (Hookups **A**, **B**, **C** or **D**.) If you receive all your channels through a cable box (Hookups **E**, **F** or **G**), the following operation is not necessary.

### ■ VCR Plus+ setup — Channel setup

The following shows the procedure you should perform when you are receiving the Cable News Network (channel 42 with the VCR Plus+ system) on channel 38.

#### Example


VCR Plus+ Channel Number	Channel Number You Receive
42	38

#### Matching Broadcast CH Numbers to VCR Plus+ Channels


- Turn on the TV and select the Video channel (3 or 4).  
Or, if you are hooked up with an audio/video cable, set the TV to AUX or VIDEO.



- Press the **GUIDE** button. The main on-screen menu will appear on the TV screen.

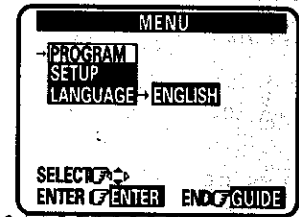


- Press the **▼** cursor button to select **SETUP** option, and then press **ENTER** button.

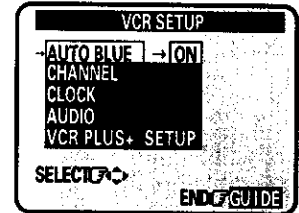

- Press the **▼** button to select **VCR PLUS+ SETUP**, and then press the **ENTER** button.


*Note: If you have set up the cable box, the following operation is not necessary.*

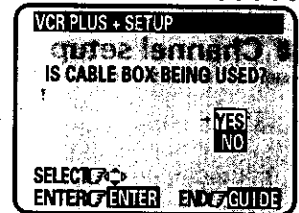


- Press the **▼** cursor button to select **"NO"**, and then press the **ENTER** button.

A small arrow points to a blank "--" in the CHANNEL column.



*Note: If your broadcast channel number is the same as the VCR Plus+ Channel in your TV listing do not enter any number.*

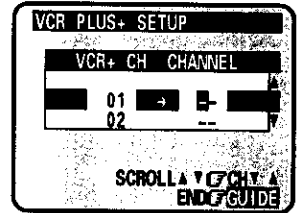


- Press the **CH (▲/▼)** button to move up and down through the channel list until you reach **VCR Plus+ CH42**.

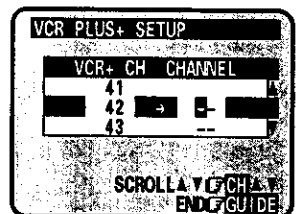

- Press the number buttons to assign your broadcast channel number to the corresponding VCR Plus+ channel.

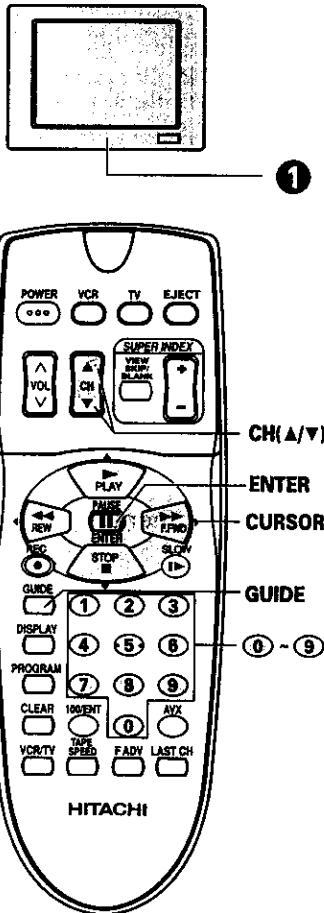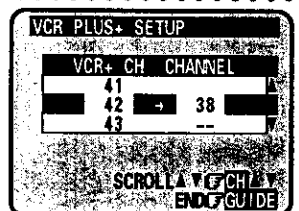

In this example broadcast channel 38 is assigned to VCR Plus+ channel 42.  
**Note:** If you enter a wrong digit, Press the CLEAR button to erase the wrong number and enter the correct one.

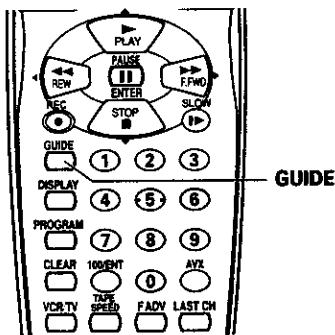

**8** Repeat steps 6 – 7 for all channels that need to be assigned.

**9** Press the GUIDE button to end the setup procedure.

You are ready to begin delayed recording with the VCR plus+ system.





## ■ Using the VCR Plus+ system to record a program (by using TV screen)

**1** Insert a blank or erasable tape.



The power comes on automatically and the tape indicator lights on the display.

- When a cassette without its safety tab is inserted, playback starts automatically and VCR Plus+ recording won't operate.

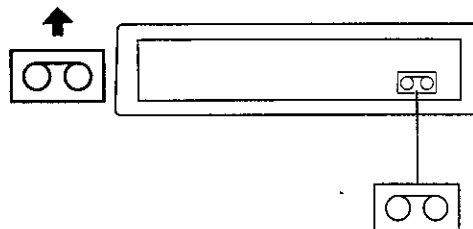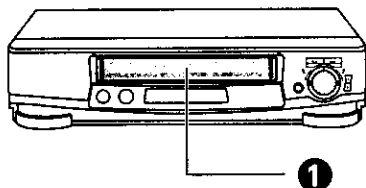

**2** Press the PROGRAM button to select VCR PLUS+ RECORDING.


- If eight programs have already been stored in memory, "FULL" will flash in the VCR's display for about five seconds.
- The screen on the right will not appear at this time.

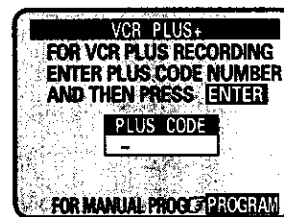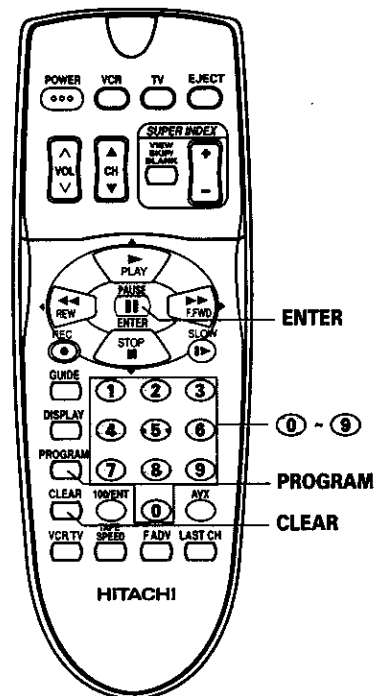


**3** Press the number buttons to enter the PlusCode number of the program you want to record.

**Note:** This number can be up to eight digits. If you enter a wrong digit, press the CLEAR button and enter the correct one.

Example

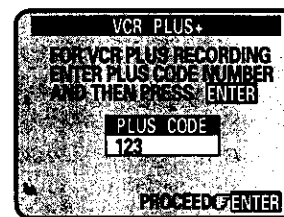

**4** Press the ENTER button to store the PlusCode number in the VCR's memory.

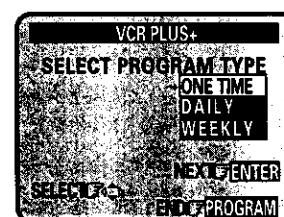



RECORDING OPERATIONS

### Types of Delayed Recordings


ONE TIME	Records one show at a particular date and time.
DAILY	Records a show at the same time every day of the week, Monday through Friday.
WEEKLY	Records a show at the same day and time every week.

**Note:** If you accidentally enter a nonexistent PlusCode number, the VCR gives you an error message that disappears from the screen in about 10 seconds.

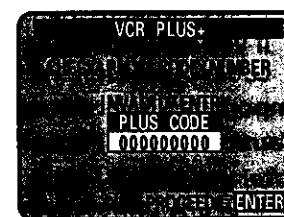


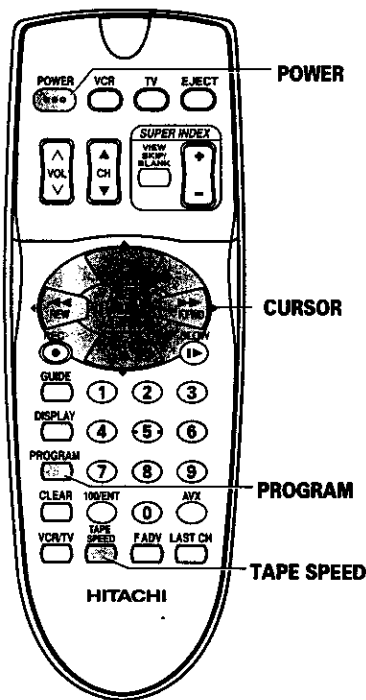

- 5** Press the ▲ or ▼ cursor button to select ONE TIME, DAILY or WEEKLY PROGRAM, and then press ENTER button.  
*Note: Programming does not take effect unless you select one of these options.*

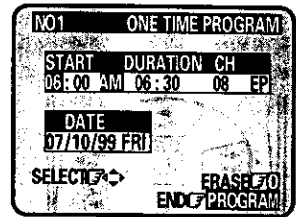


- 6** Press the ► cursor button to select tape speed, and then press the ▲ or ▼ cursor button or TAPE SPEED to choose recording speed SP (standard play) or EP (extended play).  
 The screen will display all the details of the program you chose. Check the CH number to make sure it is the right one.

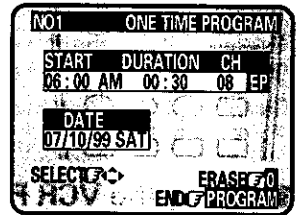


If not, you need to check your VCR Plus+ channel setup again.

- If you have installed a cable box, the cable box output channel will appear in the CH column.


- 7** Review the screen to be sure everything is set as you want, then press the PROGRAM button to complete your programming or continue with additional programs.

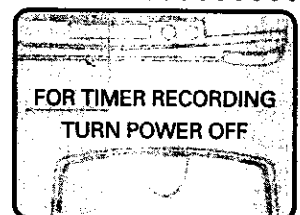

*Note: If program is overlap, the VCR gives you an error message that disappears from the screen in about 5 seconds.*

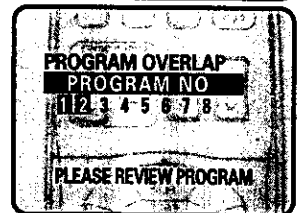

 - 8** Press the POWER button to turn off the VCR.




The delayed recording indicator will display on the VCR. This tells you that the VCR will automatically record at the times and dates you have programmed.

(Delayed recording indicator)

*Note: If a cassette has not been inserted or a cassette without safety tab has been inserted, the delayed recording indicator will flash to warn you. The cassette without safety tab will be ejected automatically. Be sure to insert a cassette with safety tab intact.*

The VCR will automatically give a warning display on the screen 5 minutes before timer recording is to start.

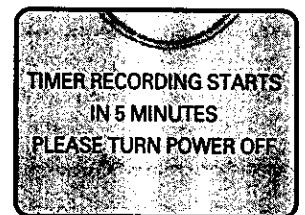

**When you have set up all the timed recordings you want:**

- Don't forget to load a videocassette (With the safety tab still attached) to record on.
- If you have installed a cable box, turn on the cable box and select the channel you want to record on the cable box before recording starts.

**Important:** Your timed recording settings take effect when you turn off the power on the VCR.

**Caution of VCR Plus+ Recording**

After entering a PlusCode number, check the information displayed with the "PROGRAM REVIEW". If there is (are) any unnecessary program(s), please cancel or correct it (them). Please refer to page 47, "Reviewing what you have programmed".


## ■ Using the VCR Plus+ system to record a program (by using VCR's display)

You can use the VCR Plus+ system to program the timer, observing the VCR's display, without turning on the power to the VCR and TV.

### Notes:


- If you use the VCR Plus+ system to program the timer while observing the VCR's display, you can only program a one-time recording.
- To stop programming, press the POWER button to turn the VCR power on.

### 1 Insert a blank or erasable tape.

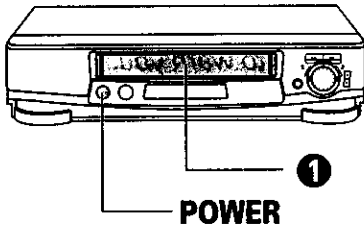


The power comes on automatically and the tape indicator lights on the display.

- When a cassette without its safety tab is inserted, playback starts automatically and VCR Plus+ recording won't operate.

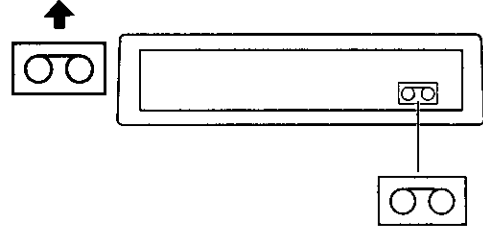


### 2 Press the POWER button to turn off the VCR.

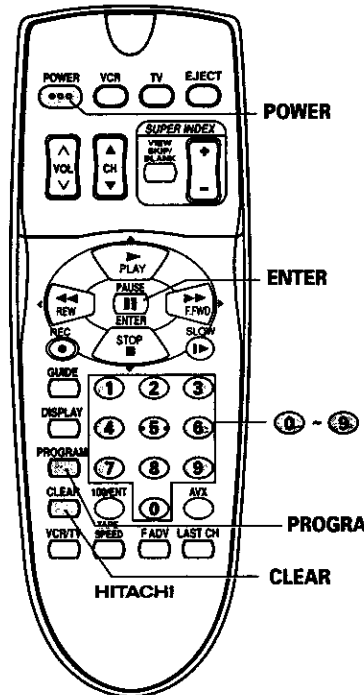

### 3 Press the PROGRAM button.


The clock display switches to the indication shown on the right.

- If eight programs have already been stored in memory, "FULL" will flash in the VCR's display for about five seconds.

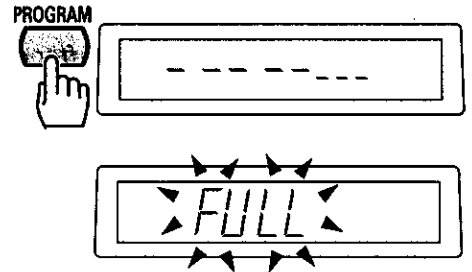

### 4 Press the number buttons to enter the PlusCode number of the program you want to record.


*Note:* This number can be up to eight digits. If you enter a wrong digit, press the CLEAR button and enter the correct one.

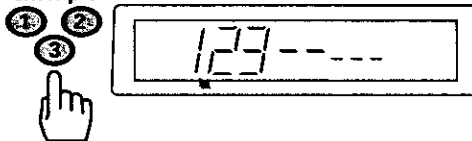


### 5 Press the ENTER button to enter the PlusCode number in the VCR's memory.

The start time and channel will appear. Check the details of the program.

- If you have installed a cable box, the cable box output channel will appear in the channel display.
- If "Err" flashes for about five seconds, check the PlusCode number of the program and enter it again.

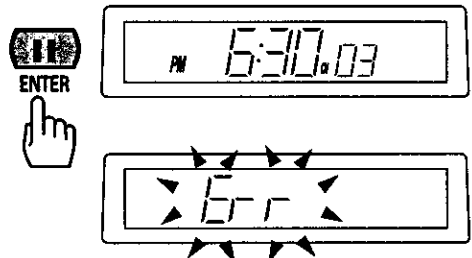


RECORDING OPERATIONS

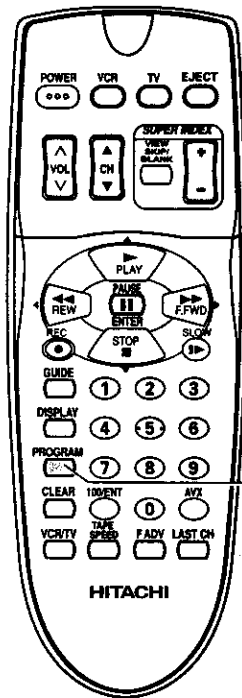

**6 Press the PROGRAM button to complete your programming or continue with additional programs.**

The delayed recording indicator will display on the VCR. This tells you that the VCR will automatically record at the times and dates you have programmed.

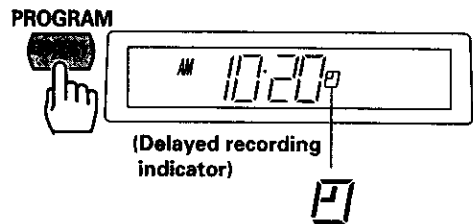

**Note:** If a cassette has not been inserted or a cassette without safety tab has been inserted, the delayed recording indicator will flash to warn you. The cassette without safety tab will be ejected automatically. Be sure to insert a cassette with safety tab intact.

**When you have set up all the timed recordings you want:**

- Don't forget to load a videocassette (with the safety tab still attached) to record on.
- If you have installed a cable box, turn on the cable box and select the channel you want to record on the cable box before recording starts.

**Important:** Your timed recording settings take effect when you turn off the power on the VCR.

**Caution of VCR Plus+ Recording**


After entering a PlusCode number, check the information displayed with the "PROGRAM REVIEW". If there is (are) any unnecessary program(s), please cancel or correct it (them). Please refer to page 47, "Reviewing what you have programmed".

**To go into the recording mode:**


1. Press the POWER button to turn the VCR on.
2. Turn on TV and select the video channel (3 or 4).
3. Press the TAPE SPEED button to switch the recording mode.

## ■ Reviewing what you have programmed


You can look back over any of the recordings you have preset and if you need to, clear out any of the programs. Normal programs will clear automatically once recording is complete, but daily and weekly setting must be cleared out manually.

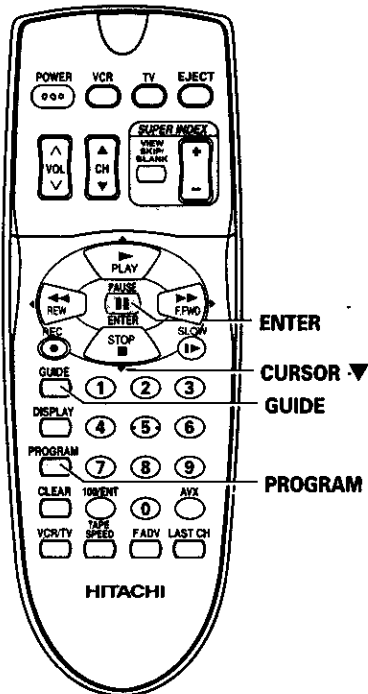



- 1 Press the **GUIDE** button.  
The main on-screen menu will appear on the TV screen.

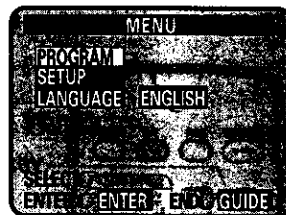


- 2 Press the **ENTER** button to select the **PROGRAM MENU**.

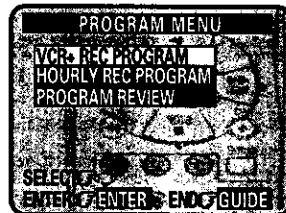

 - 3 Press the **▼** cursor button for the **PROGRAM REVIEW** option, and then press the **ENTER**.  
This brings up the screen setting for the first program.  
If you want to clear this program, press the **0** button to remove this program.

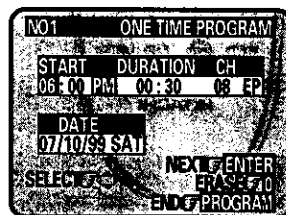


- 4 Each time pressing the **II** button to cycle through all the programs you have preset.  
• The screen will display the next program, if there are more, or it will switch back to the main menu.

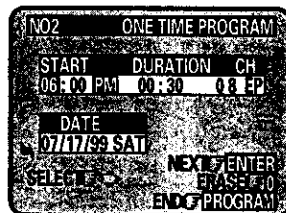

- 5 Press the **PROGRAM** button to end.



## ■ Using the VCR remote to control your Hitachi TV

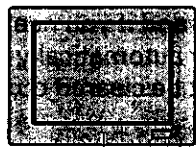

1


1 Turn on the TV.




TV




2 Press the "TV" button on remote control.

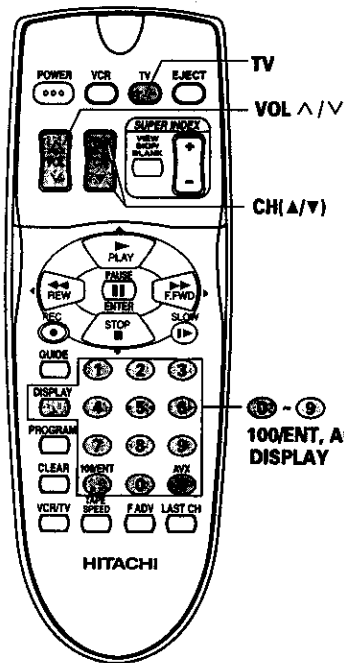

3 Point VCR remote control toward TV.

 


4 Press buttons corresponding to the functions available on your TV remote control.

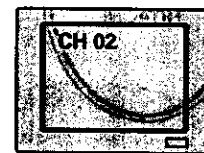

**Note:** This function is available on Hitachi TV. Some of Hitachi TV does not work with this remote.



## ■ Hookup

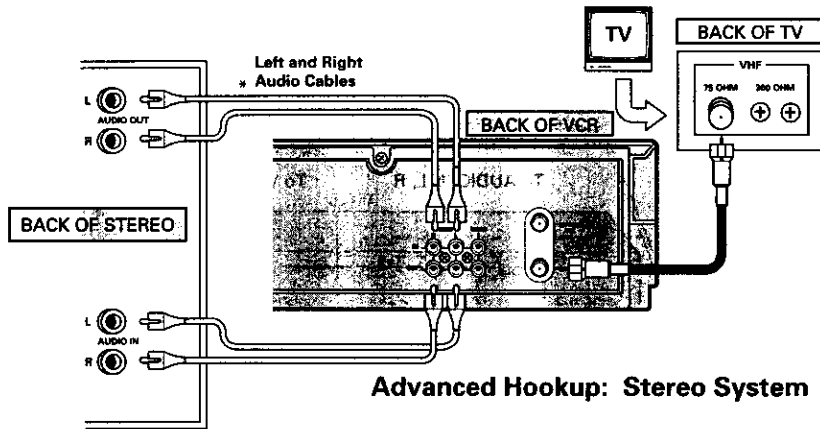

\* PURCHASED SEPARATELY

When your VCR is connected to a stereo system, you can:

- Make high quality "audio only" recordings for up to 6 hours (on a T-120 video cassette tape).
- Receive quality stereo sound from your VCR through your stereo system.
- Use the VCR as an extra audio tape deck for dubbing.



## ■ To record from stereo
 
### BEFORE YOU BEGIN...


- Make sure the VCR is connected to your stereo system, as shown above.
- Make sure that "STEREO" audio is selected from the VCR Set-Up Menu, as shown on page 36, of "RECORDING OPERATIONS" section, "Stereo vs. mono sound".
- Select VCR recording speed (SP or EP) as shown on page 33, of "RECORDING OPERATIONS" section, "Basic recording steps".

- 1 Press the AVX button on remote control, so that L (line) appears on the display.


AVX

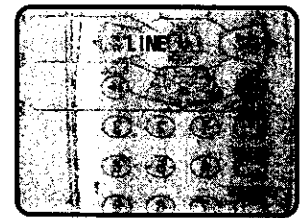



- 2 Turn on stereo, and start the selection you wish to record.

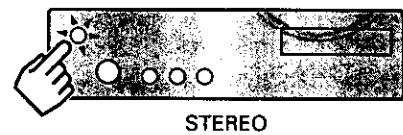

 - 3 Press the REC/IRT button on VCR or REC button on the remote control to start recording.



 - 4 Press the STOP button to stop recording.

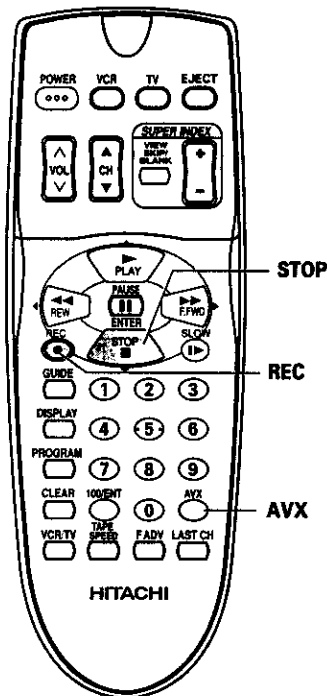


## ■ Hookup

You may use your VCR to copy tapes from any camcorder onto standard VHS cassette tapes.

**NOTE:** If your camcorder is not stereo (has only one audio plug), connect it to the AUDIO IN-L input on the back of the VCR.


\* It is not necessary to connect the S-VIDEO jack.

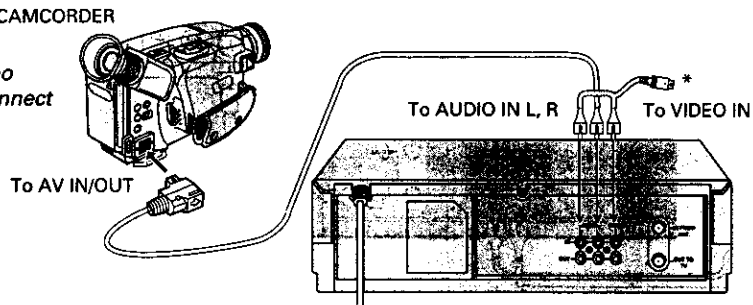

## ■ To copy from a camcorder



### BEFORE YOU BEGIN...

Connect the camcorder's AV output cable to the audio/video jacks on the back of your VCR.



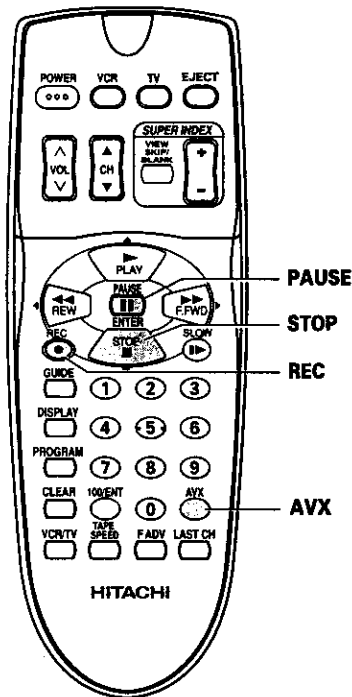


- 1 Press the AVX button twice on remote control, to display L (line) on the TV display.

 AVX

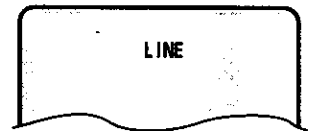

  - 2 Press the REC, then PAUSE buttons on the VCR remote control. The VCR will go into Record/Pause.

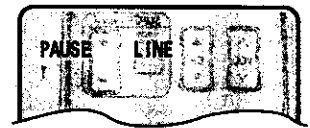


- 3 Press the PLAY button on the camcorder. You will see the camcorder tape being played on the TV.



- 4 When you see the part of the Camcorder tape you wish to copy, press the PAUSE button again to release pause and start copying the camcorder tape.


PAUSE

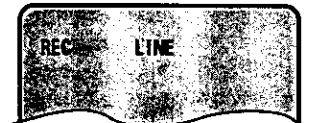

- Press the STOP button to finish recording.

## ■ Hookup


If you have two VCRs, you may use one VCR to record a tape that is being played back in the other VCR.

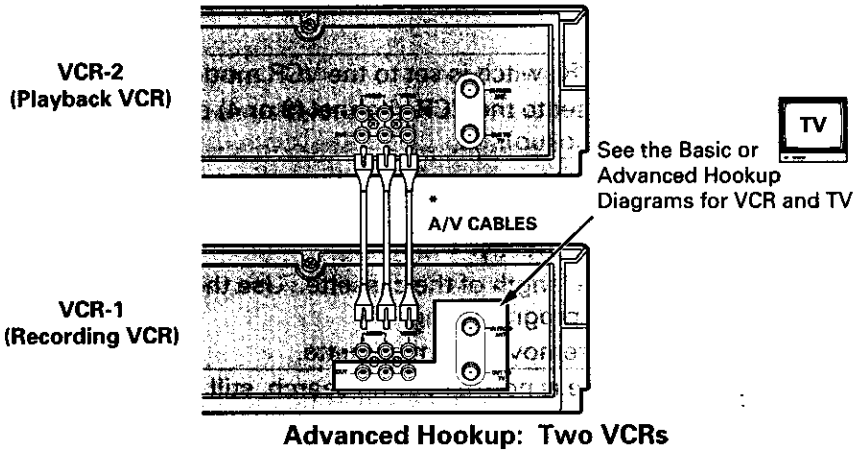

\* PURCHASED SEPARATELY




Insert a prerecorded tape


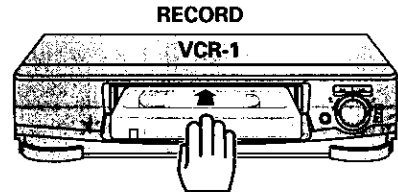


Insert a blank tape


## ■ To copy from one VCR to another VCR

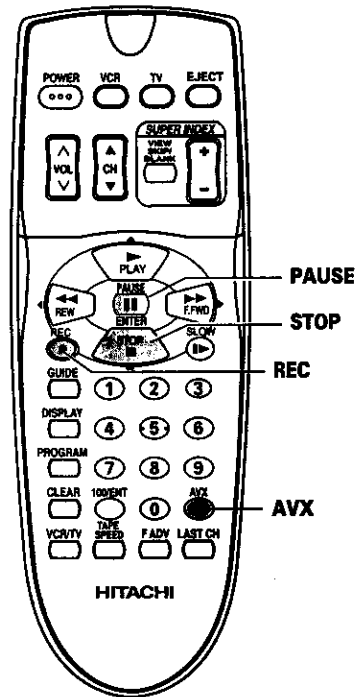

 

- 1 Press the AVX button on the remote control of VCR-1 so that L (line) appears in the display.

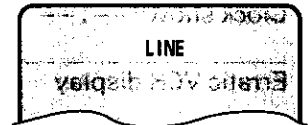

 - 2 Press the REC, then PAUSE buttons on VCR-1. The VCR will go into Record/Pause.



 - 3 Press the PLAY button on VCR-2. You will see the taped program being played on the TV.

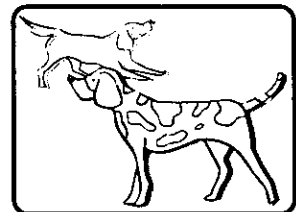


- 4 When you see the part of the program you wish to record, press the PAUSE button on VCR-1 again to release pause and start recording.
  - Press the STOP button to finish recording.



## ■ Problem guide

No power	<ul style="list-style-type: none"> <li>• Make sure the VCR is plugged into an AC outlet.</li> </ul>
Remote control doesn't work	<ul style="list-style-type: none"> <li>• Make sure the batteries are fresh, and properly installed.</li> </ul>
Won't record	<ul style="list-style-type: none"> <li>• Safety tab has been removed from cassette (VCR will automatically eject the tape).</li> </ul>
Won't play back	<ul style="list-style-type: none"> <li>• Make sure the TV/VCR switch is set to the VCR mode.</li> <li>• Make sure the TV is set to the VCR channel (3 or 4) or AUX (if using direct audio/video hookup).</li> </ul>
Won't make timer recordings	<ul style="list-style-type: none"> <li>• The VCR power must be turned off to activate timer recording.</li> <li>• Clock is not set correctly.</li> <li>• Programs entered incorrectly.</li> <li>• Programs exceed the length of the cassette. Use the EP recording speed for maximum programming.</li> <li>• Safety tab has been removed from cassette.</li> </ul>
Snowy picture in playback	<ul style="list-style-type: none"> <li>• Snow or picture noise is normal during search, still, and slow Playback.</li> <li>• Head cleaning may be required.</li> <li>• Tape is worn or of inferior quality - adjust tracking controls.</li> </ul>
Snowy picture in normal TV viewing	<ul style="list-style-type: none"> <li>• Check antenna or cable connections.</li> </ul>
Clock shows -- : --	<ul style="list-style-type: none"> <li>• Power has been interrupted - reset the clock.</li> <li>• Reset the clock.</li> </ul>
Erratic VCR display	<ul style="list-style-type: none"> <li>• Push the reset switch with a sharp pointed instrument (pen, toothpick, etc.).</li> </ul>

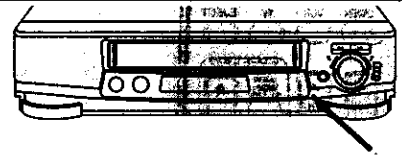

## ■ Maintenance


 









Regular periodic maintenance is required to maintain optimum VCR performance. Such maintenance and adjustments should not be attempted by the user. Please consult your service dealer for further information.

**Note:** Dirt accumulation on the video heads will cause the playback picture to become noisy. The VCR may require the video heads to be professionally cleaned by a qualified service dealer.

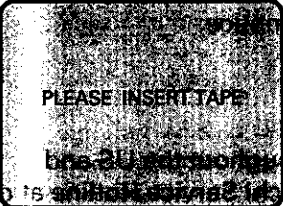

## ■ Guide indications in VCR display and OSD screen

The following indications appear in the VCR display and OSD screen to tell you the current status of your VCR.

OSD	Indication	When it appears	Meaning and troubleshooting
	 (flashes for about 5 seconds)	When programming the timer	<ul style="list-style-type: none"> <li>The VCR clock has been set to "--:--". Set the time and program the timer.</li> </ul>
	 (flashes for about 5 seconds)	When programming the timer (by using VCR display)	<ul style="list-style-type: none"> <li>A non-existing PlusCode number has been entered. Check the PlusCode number of the program and enter it again.</li> </ul>
	 (flashes for about 5 seconds)	When programming the timer	<ul style="list-style-type: none"> <li>Eight programs have already been stored. Cancel unnecessary program and transfer the new programming.</li> </ul>
	 (flashes uninterruptedly)	When you turn power off after programming the timer, or transfer the programming with power off	<ul style="list-style-type: none"> <li>A cassette has not been inserted or a cassette without safety tab has been inserted. A cassette without safety tab will be ejected automatically. Insert a cassette with safety tab intact.</li> </ul>
 Display for about 5 sec.	 (flashes for about 3 seconds)	When you press the play, record, fast forward, rewind or super index button	<ul style="list-style-type: none"> <li>A cassette has not been inserted. Insert a cassette.</li> </ul>
 Display for about 5 sec.	 (flashes for about 3 seconds)	When you press the record button for recording or dubbing, or press the  (VIEW/SKIP/BLANK) button for BLANK SEARCH	<ul style="list-style-type: none"> <li>A cassette without safety tab has been inserted. It will be ejected automatically. Insert a cassette with safety tab intact.</li> </ul>
	 (flashes for about 3 seconds)	When you turn power on	<ul style="list-style-type: none"> <li>The video heads are dirty. Cleaning them is recommended. To switch off the CL display, clean the heads, turn the power off and press the channel  button. The CL display automatically switches off when recording and playback are performed for about 5 hours after it appears.</li> </ul>

## ■ Technical specifications

Format:	VHS
Video Signal System:	NTSC color EIA standard
Record/Playback System:	Video: 4 Head Audio: VHS Hi-Fi stereo record/playback system
Tape Speed:	33.35 mm/sec (SP), 16.67 mm/sec (LP) (playback only), 11.12 mm/sec (EP)
RF Input:	UHF/VHF 75 ohm
Tuner:	USA: 181 channel tuning ability* (125 cable channels) Canada: 178 channel tuning ability* (122 cable channels)
Type:	Auto programming frequency synthesis
Power Input:	AC 120V 60 Hz
Power Consumption:	16W nominal 2.0W (Standby mode)
Cabinet Size:	14-15/16" (W) x 3-11/16" (H) x 10-14/16" (D) 38.0 cm (W) x 9.3 cm (H) x 27.6 cm (D)
Weight:	7.7 lbs. (3.5 kg)
Storage Temperature:	-4°F to 131°F
Operating Temperature:	41°F to 104°F
Accessories:	1 coaxial cable (Part No. EW10251) 1 remote control unit (Part No. HL11134), 2 AA batteries

\* Check your cable company's compatibility requirements.

For information about how to obtain these and other HITACHI accessories, please call HiTRON, Inc. TOLL FREE at 1-800-995-4500 (in the continental United States). For ALASKA and HAWAII, please contact the nearest Hitachi Regional Office.

Design and specifications subject to change without notice.

### Hitachi Service Hotline

Authorized Hitachi service facilities are available throughout the US and Canada. For the location nearest to you, call the Hitachi Service Hotline at one of these numbers:

#### In the continental U.S.A

**DIAL TOLL FREE**

7 days a week, 24 hours a day

**1-800-HITACHI**

(1-800 448-2244)

You must state your zip code when calling

#### In Canada

MONTREAL

514-956-9882