

16cm Coaxial 2-way Speaker

Instructions

XS-F1621

Sony Corporation © 2000

Precautions

- Do not continuously drive the speaker system over the power handling capacity.
- Keep recorded tapes, watches, and personal credit cards using magnetic coding away from the speaker system to protect them from damage caused by the magnets in the speakers.

If you cannot find an appropriate mounting location, consult your car dealer or your nearest Sony dealer before mounting.


Mounting

Before Mounting


- A depth of at least 48 mm (1¹⁵/16 in.) is required for mounting the woofer. Keep the following in mind when choosing a mounting location.
- A hole may already be provided in the metal frame of the front door.
- Nothing should interfere with the speaker inside the door.
- The speaker inside the door must not come into contact with the window when it is open.
- Be careful that speakers are out of the way of the window cranks, door handles, and arm rests.


If you cannot find an appropriate mounting location, check with your car dealer or consult the nearest Sony dealer.


Parts List

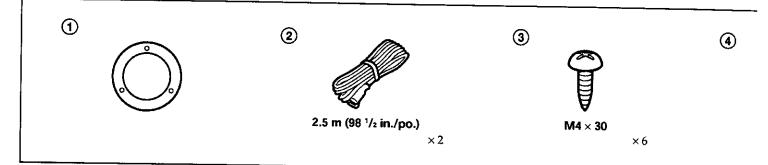


Mounting example

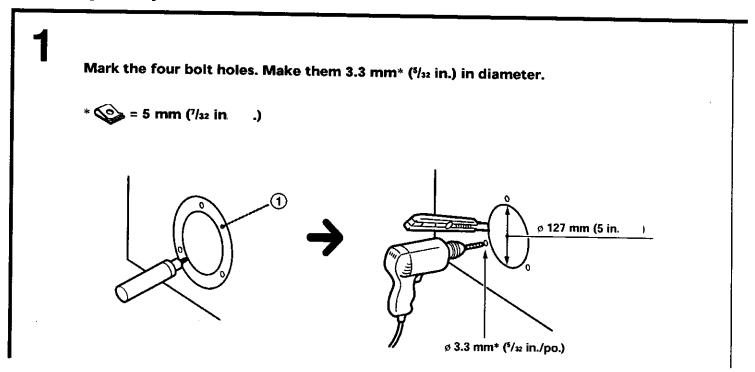

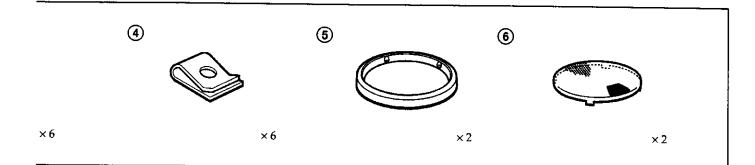

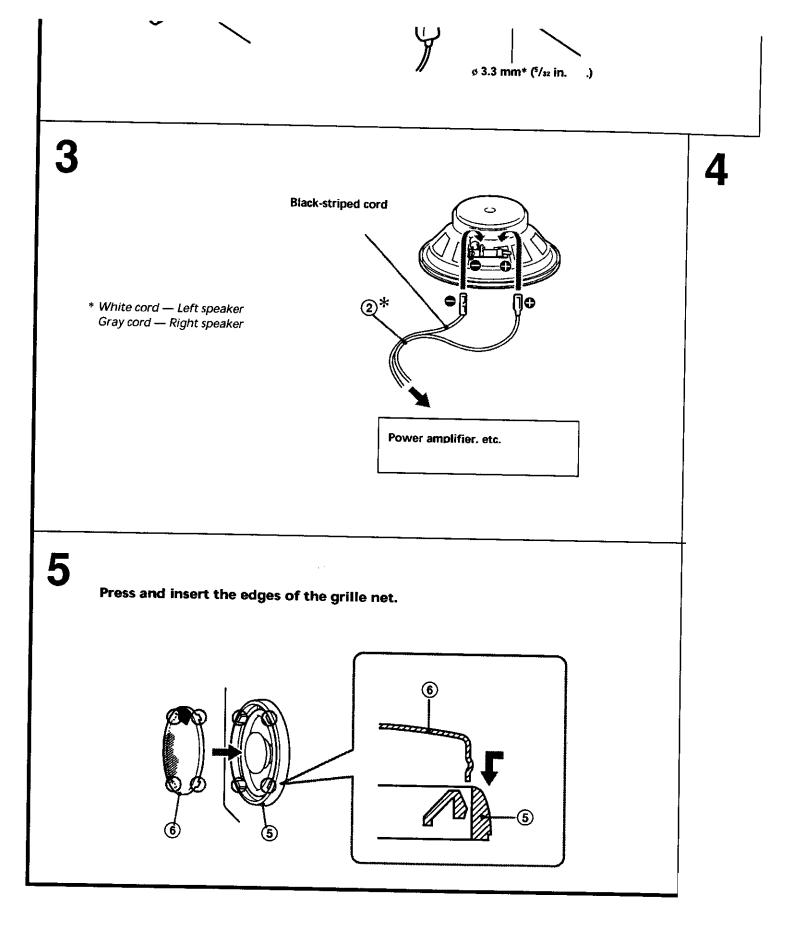

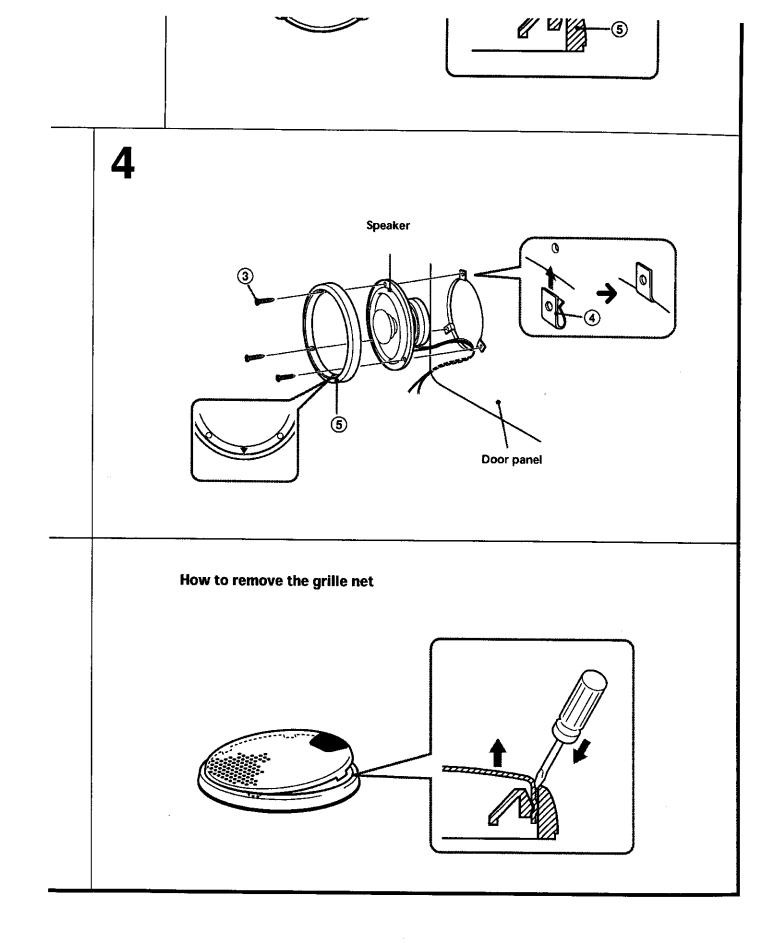

Specifications

Speaker Maximum input power Rated input power Impedance Sensitivity Frequency response Mass	Coaxial 2-way: Woofer 16 cm (6 ³ / ₈ in.), polypropylene cone type Tweeter 3 cm (1 ³ / ₁₆ in.), PEI, balance dome type 140 W 35 W 4 ohms 90 dB/W/m 35 – 30,000 Hz Approx. 675 g (1 lb. 8 oz.)
	per speaker

Design and specifications are subject to change without notice.

