### SONY


## FM/AM CompactDisc Player

Installation/Connections

CDX-C7000X CDX-C5000X CDX-C5005

Sony Corporation © 2000


#### **Parts list**

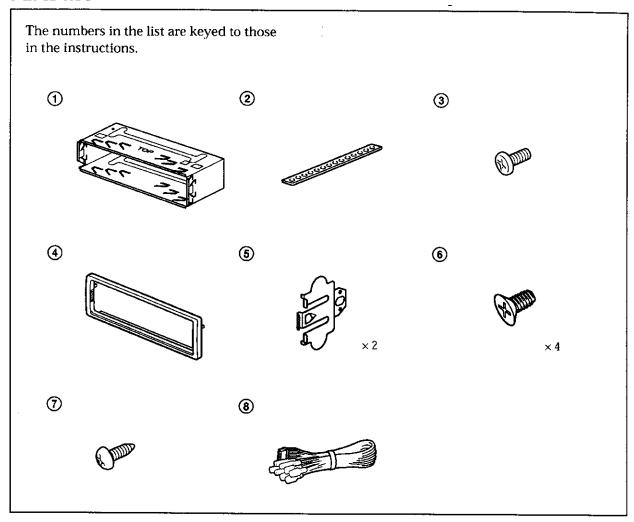

#### Caution

Cautionary notice for handling the bracket

 Handle the bracket carefully to avoid injuring your fingers.



## **Connections**

#### **Cautions**

- This unit is designed for negative earth 12 V DC operation only.
- Be careful not to pinch any wires between the screw and the body of the car, or this unit, or between any moving parts such as the seat railing, etc.
- Connect the **yellow** and **red** power input leads only after all other leads have been connected.
- Be sure to connect the red power input lead to the positive 12 V power terminal which is energized when the ignition key is in the accessory position.
- Run all ground wires to a common earth surface.
- Connect the yellow cord to a free car circuit rated higher than the unit's fuse rating. If you connect this unit in series with other stereo components, the car circuit they are connected to must be rated higher than the sum of the individual component's fuse rating. If there are no car circuits rated as high as the unit's fuse rating, connect the unit directly to the battery. If no car circuits are available for connecting this unit, connect the unit to a car circuit rated higher than the unit's fuse rating in such a way that if the unit blows its fuse, no other circuits will be cut off.
- The use of optical instruments with this product will increase eye hazard.

 
# Warning when installing in a car without ACC (accessory) position on the ignition key switch

Be sure to press OFF on the unit for two seconds to turn off the clock display after turning off the engine.

When you press **OFF** only momentarily, the clock display does not turn off and this causes battery wear.

#### **Reset button**


When the installation and connections are completed, be sure to press the reset button with a ball-point pen, etc.



## Frequency select switch (CDX-C5005 only)

The AM (FM) tuning interval is factory-set to the  $10\ K\ (200\ K)$  position.

 
Make sure that the swich on the bottom of the unit is set to the  $9\ K\ (50\ K)$  position before making connections.





#### Note

When you change the position of the switch to the 9 K (50 K) position, be sure to press the reset buttons after the connections are completed.

### **Connection diagram**

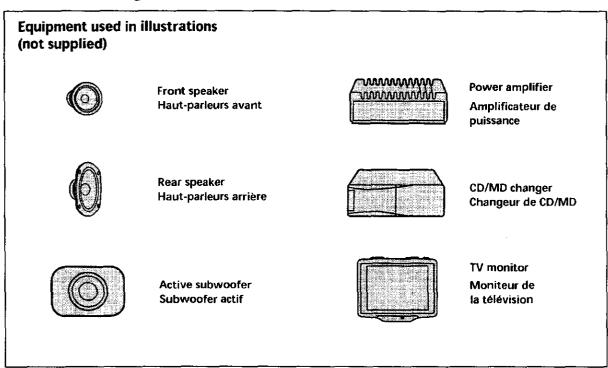

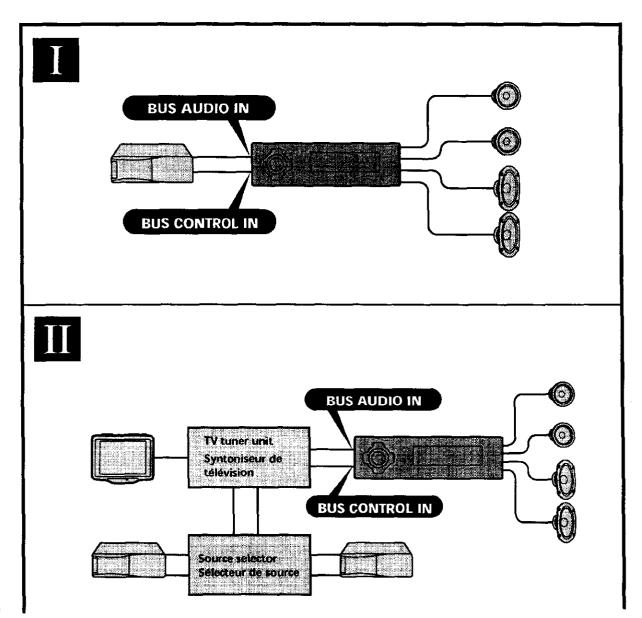


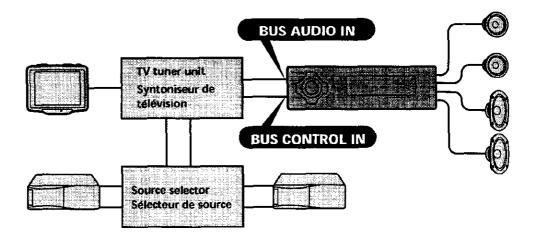

#### Note

For connecting two or more CD/MD changers, the source selector XA-C30 (optional) is necessary.




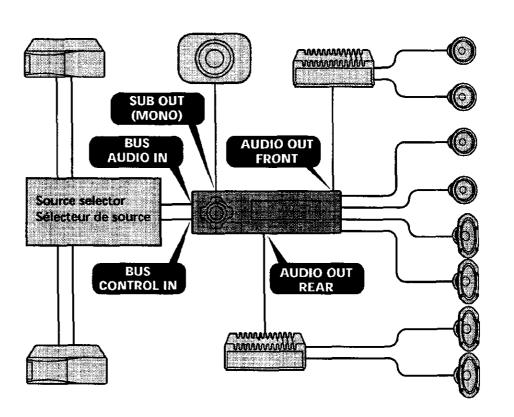



#### Notes

- For connecting two or more CD/MD changers, the source selector XA-C30 (optional) is necessary.
- Be sure to connect the earth cord before connecting the amplifier.
- If you connect an optional power amplifier and do not use the built-in amplifier, the beep sound will be deactivated.

#### **Connection example**

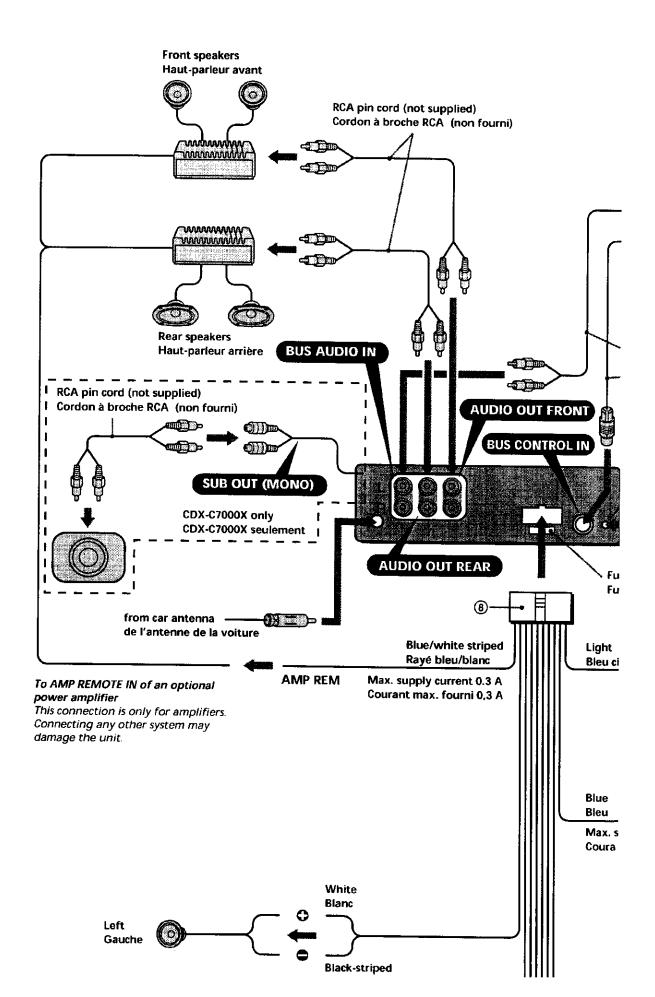

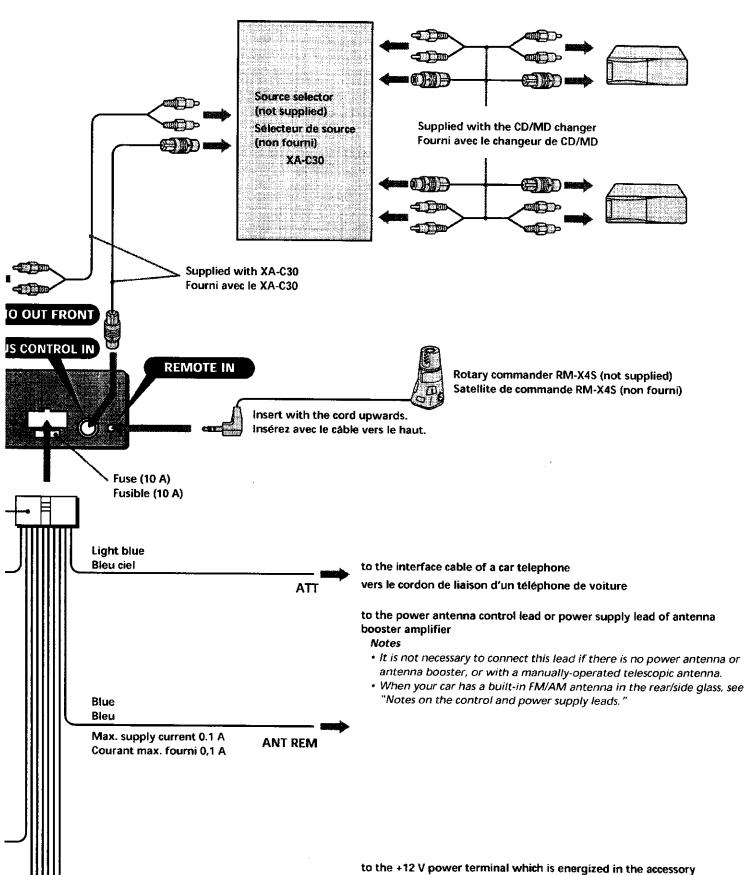

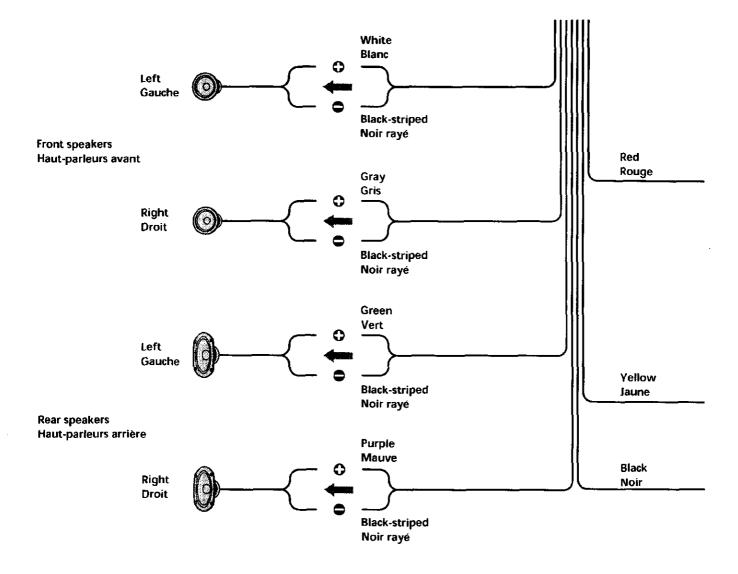

#### Notes on the control and power supply leads


- The power antenna control lead (blue) supplies +12 V DC when you turn on the tuner.
- When your car has built-in FM/AM antenna in the rear/side glass, it is necessary to connect the power antenna control lead (blue) or the accessory power input lead (red) to the power terminal of the existing antenna booster.
   For details, consult your dealer.
- · A power antenna without relay box cannot be used with this unit.

#### Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition key is turned off.

#### Notes on speaker connection

- · Before connecting the speakers, turn the unit off.
- Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities. Otherwise, the speakers may be damaged.
- Do not connect the terminals of the speaker system to the car chassis, and do not connect the terminals of the right speaker with those of the left speaker.
- Do not attempt to connect the speakers in parallel.
- Do not connect any active speakers (with built-in amplifiers) to the speaker terminals of the unit. Doing so may
  damage the active speakers. Therefore, be sure to connect passive speakers to these terminals.

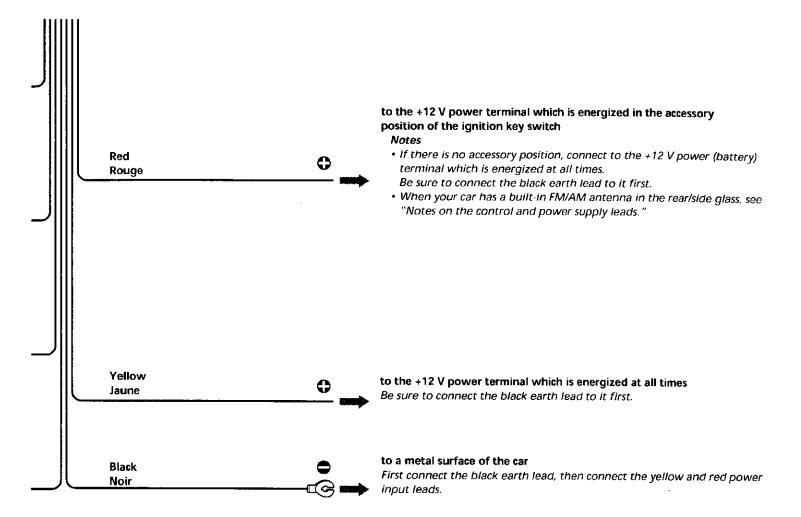

## Installation

#### **Precautions**

- Choose the installation location carefully so that the unit will not interfere with normal driving operations.
- Avoid installing the unit in areas subject to dust, dirt, excessive vibration, or high temperature, such as in direct sunlight or near heater ducts.
- Use only the supplied mounting hardware for a safe and secure installation.

#### Mounting angle adjustment

Adjust the mounting angle to less than 60 °.

#### How to detach and attach the front panel


Before installing the unit, detach the front panel.

#### A To detach

Before detaching the front panel, be sure to press OFEN first. Then press OPEN to open the front panel, then slide the front panel to the right side, and pull out the left side of the front panel.


#### **B** To attach

Place the hole ⓐ in the front panel onto the spindle ⓑ on the unit as illustrated, then push the left side in.

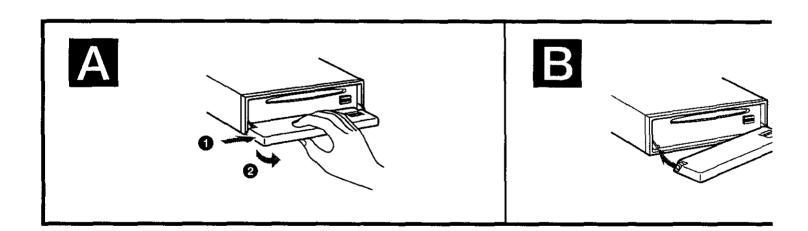

### **Mounting example**


#### Installation in the dashboard

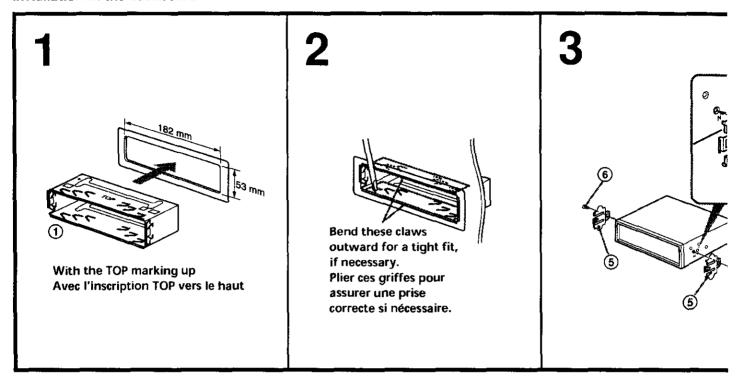

#### Note


When installing this unit: Depending on car type, the mounting angle may not allow the front panel to open easily. In such a case, remove the silver screw (A) shown below.

When screwing it on again, first lock the lever **(B)**. Attaching the screw without doing so may cause the unit to break.

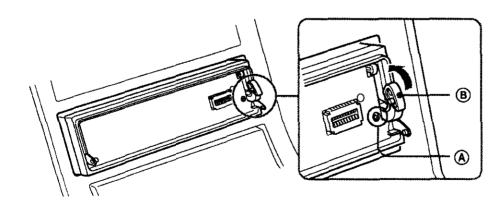

## Mounting the unit in a Japanese car

You may not be able to install this unit in some makes of Japanese cars. In such a case, consult your Sony dealer.

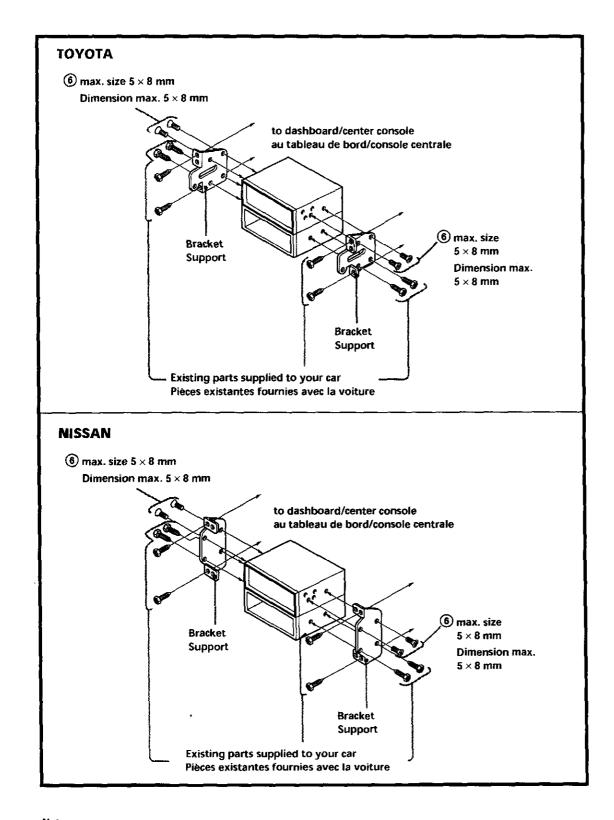

#### Note

To prevent malfunction, install only with the supplied screws 6.