

Micro Satellite System

Operating Instructions _____ **GB**

Manual de instrucciones _____ **ES**

Owner's Record

The model and serial numbers are located on the rear of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. SA-VE315/VE312

Serial No. _____

SA-VE315
SA-VE312

 
WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

NOTICE FOR THE CUSTOMERS IN THE USA

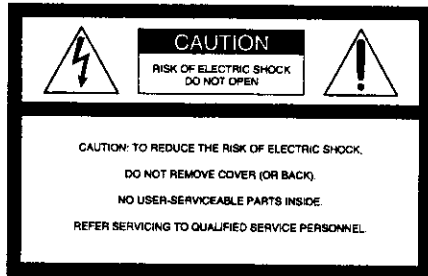

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

You are cautioned that any changes or modification not expressly approved in this manual could void your authority to operate this equipment.

Note to CATV system installer:

This reminder is provided to call CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

CAUTION

Use of this appliance with some systems may present a shock or fire hazard. Do not use with any units which have the following marking located near output.

WARNING: HAZARDOUS ENERGY!

Table of Contents

Hooking up the system	4
Positioning the speakers	7
Listening to the sound	8
Adjusting the sound	8
Precautions	10
Troubleshooting	11
Specifications	11

About this manual

GB

The instructions in this manual are for SA-VE315 and SA-VE312, Sony Micro Satellite Systems.


Differences between the systems

- **SA-VE315**

The SA-VE315 is a 5.1 channel speaker system consisting of two front speakers, two rear speakers, one center speaker, and one subwoofer. It supports Sony DigitCinema Sound, Dolby* Pro Logic, and Dolby Digital (AC-3), and is thus geared towards the enjoyment of movies.

- **SA-VE312**

Consisting of two front speakers and one subwoofer, the SA-VE312 is suited for the enjoyment of music.

* Manufactured under license from Dolby Laboratories. DOLBY, the double-D symbol , "PRO LOGIC" and "Dolby Digital (AC-3)" are trademarks of Dolby Laboratories.

Any difference in operation is clearly indicated in the text, for example, "SA-VE315 only."

 
Hooking up the system

Connect the speaker system to the speaker output terminals of an amplifier.

Make sure power to all components (included the subwoofer) is turned off before starting the hook-up.

Hookup A (for SA-VE315)


This configuration is used when the amplifier is connected to a DVD player, LD player, VCR or other video devices.

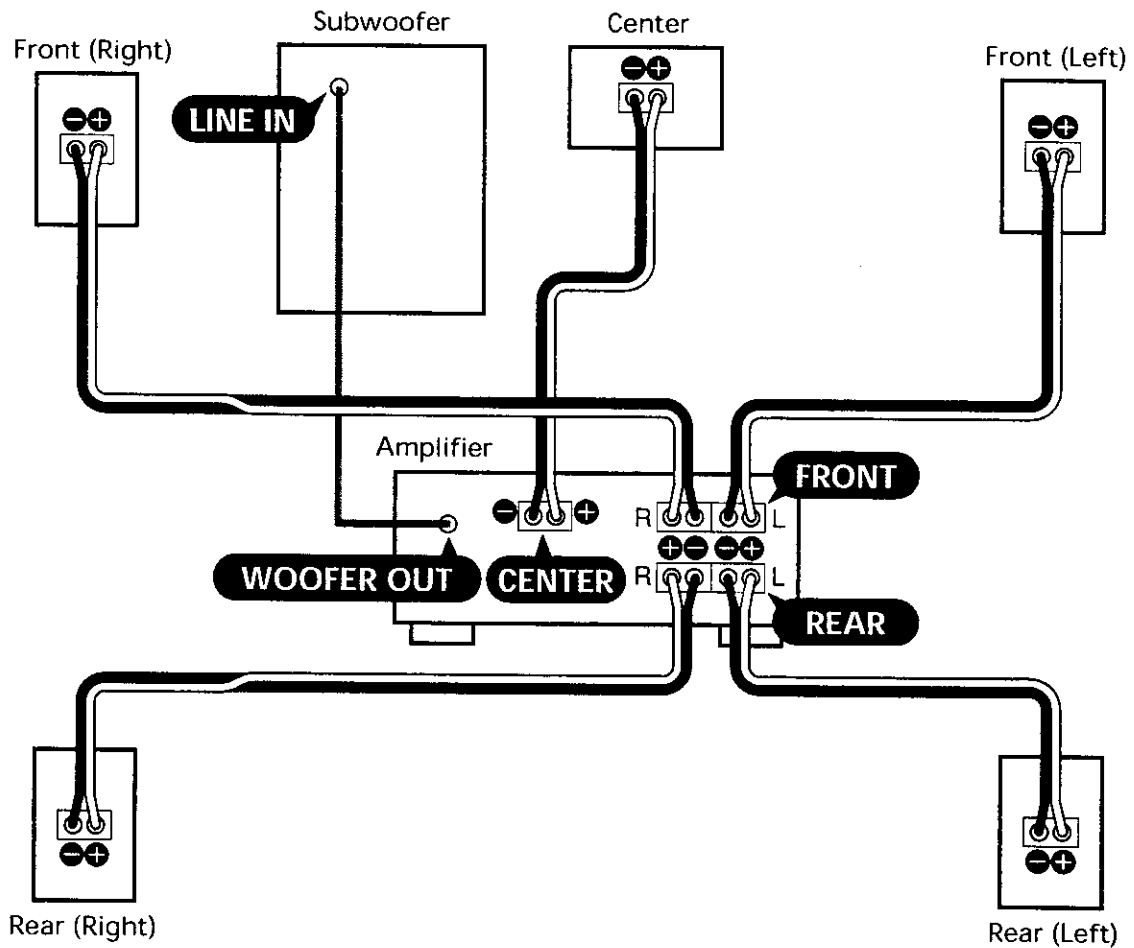


Hookup B (for SA-VE315)

Try this configuration instead of "Hookup A" in the following situations:

 - When there are no jacks on the amplifier for a subwoofer.
- When you want a stronger bass sound from the subwoofer.

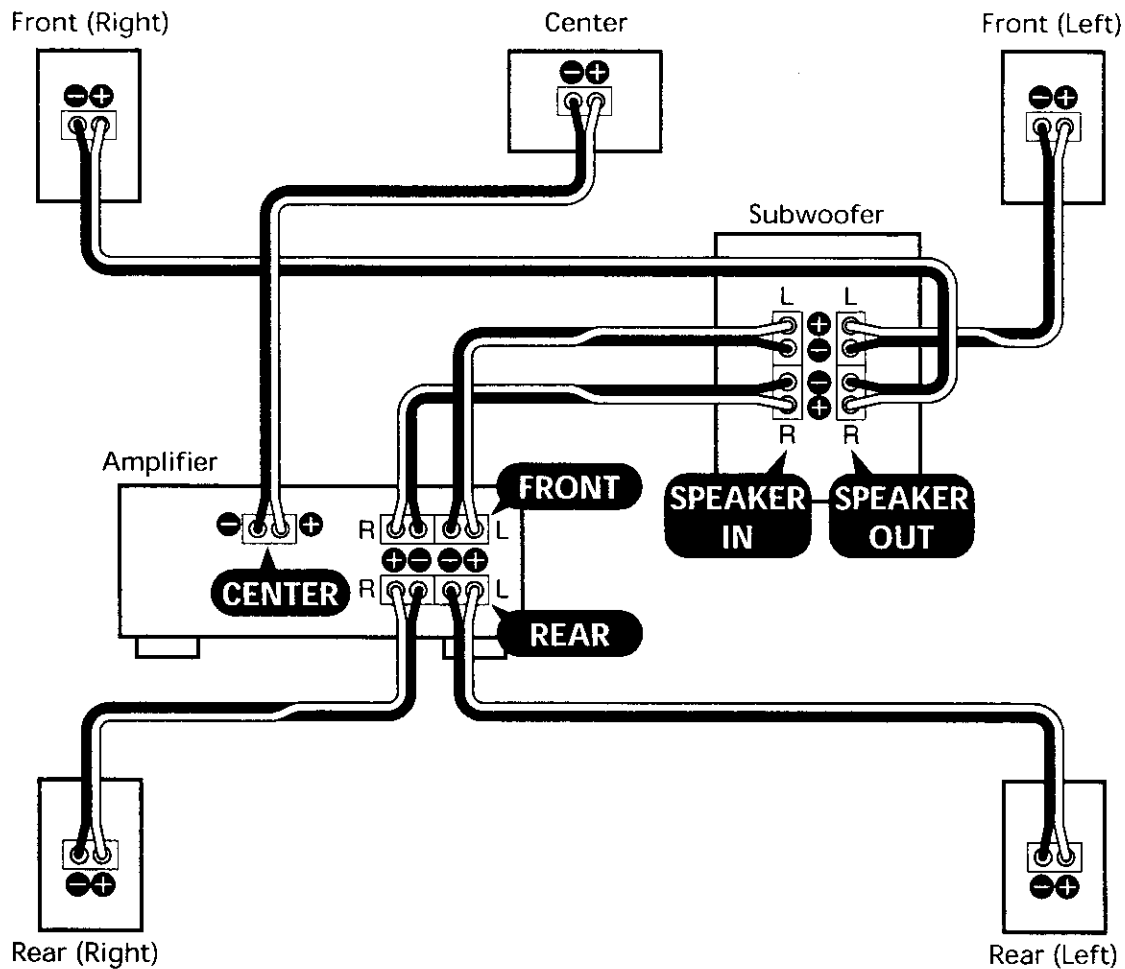


Terminal (jack) connections

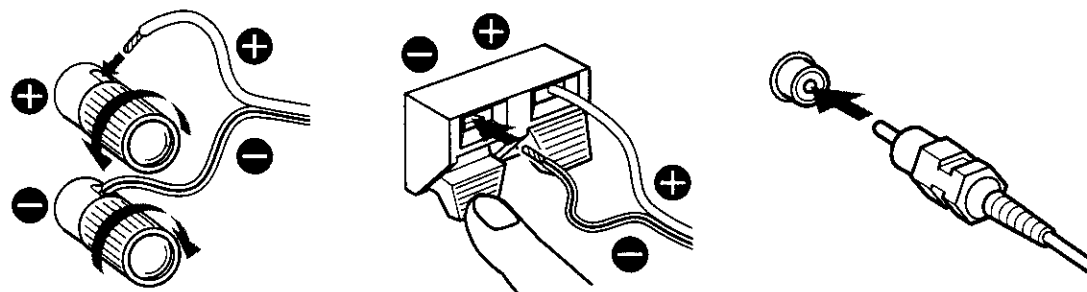 


Hooking up the system (continued)

Hookup C (for SA-VE312)

 This configuration is used when the amplifier is connected to a CD player, MD deck, cassette deck, or other audio devices.

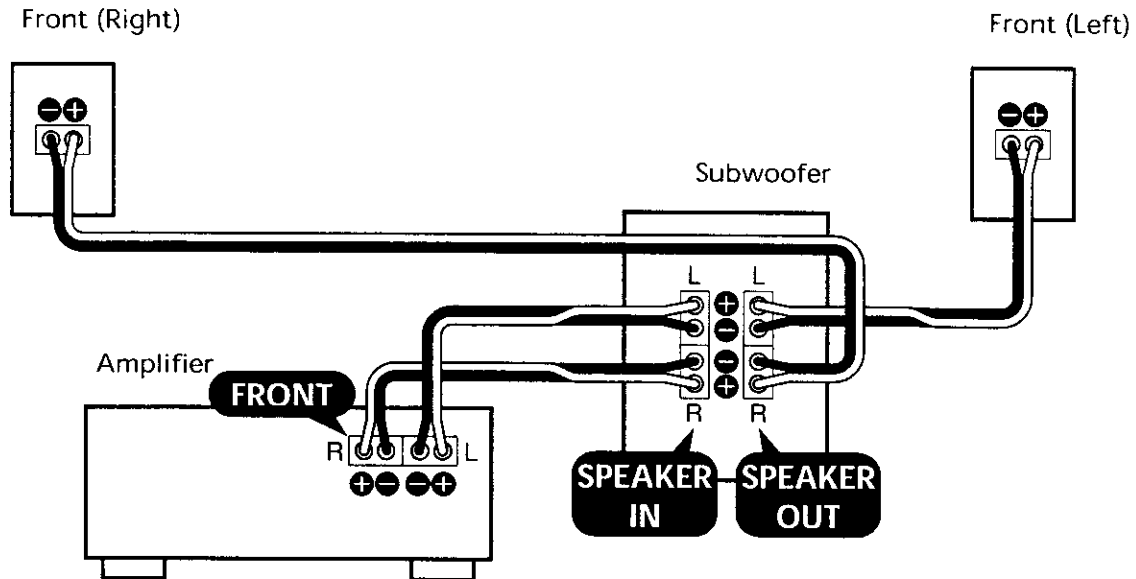

Terminal connections

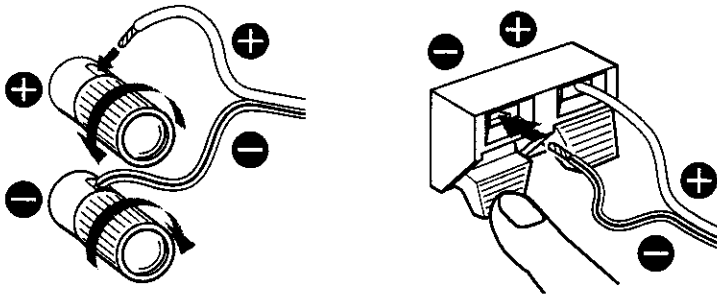 

Notes

 
- Make sure the plus (+) and the minus (-) terminals on the speakers are matched to the corresponding plus (+) and minus (-) terminals on the amplifier.
- Be sure to tighten the screws of the speaker terminals securely as loose screws may become a source of noise.
- Make sure all connections are firm. Contact between bare speaker wires at the speaker terminals may cause a short-circuit.
- Do not connect the subwoofer to the amplifier's CENTER output terminal (which is for Dolby Pro Logic or Dolby Digital (AC-3)). No bass sound will output from the subwoofer if you do.
- For details regarding the connections on the amplifier side, refer to the manual that was provided with your amplifier.

Tip

All striped wires are minus (-) polarity, and should be connected to the minus (-) speaker terminals.

Positioning the speakers

Location of each speaker

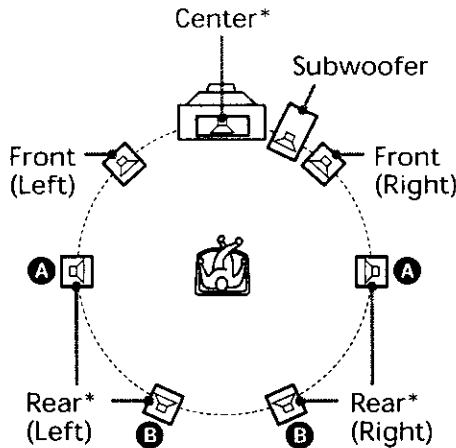

*SA-VE315 only

Each speaker should face the listening position. Better surround effect will result if all speakers are set at the same distance from the listening position.

Place the front speakers at a suitable distance to the left and right of the television.

Place the subwoofer on either side of the television.

Place the center speaker on the top-center of the TV set.

The placement of rear speakers greatly depends on the configuration of the room. The rear speakers may be placed on both sides of the listening position **A** or behind the listening position **B**.

 
Tips

- Movies are best enjoyed in a room that produces no echoes (as in one with surrounding curtains).
- Music (especially classical music) is best enjoyed in a room that produces some echo.

Setting the speakers

To prevent speaker vibration or movement while listening, attach the supplied foot pads to the bottom four corners of the center speaker*, front speakers, and rear speakers*.


*SA-VE315 only

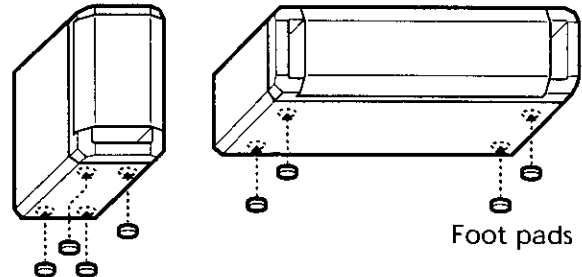

Setting the center speaker


(SA-VE315 only)

 Set the center speaker firmly on top of the TV set, making sure it is completely level.

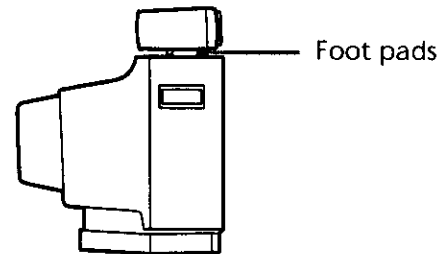


Setting other speakers

 For greater flexibility in the positioning of the speakers, use the optional WS-FV10, WS-TV10, or WS-WV10 speaker stand (available only in certain countries).

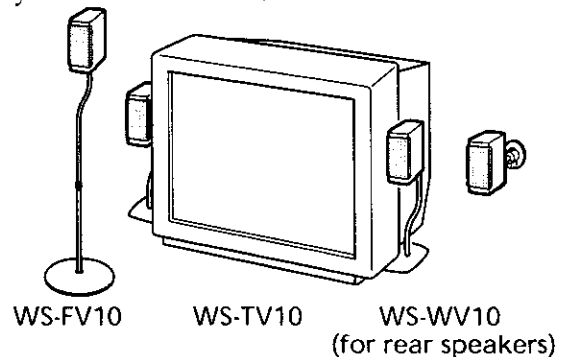


Tip

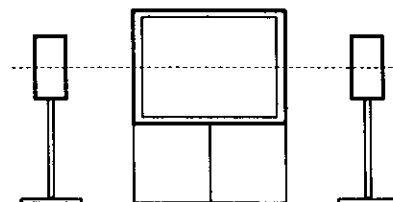 

The height of the front speakers should be adjusted to about the center of the TV screen.

 Listening to the sound

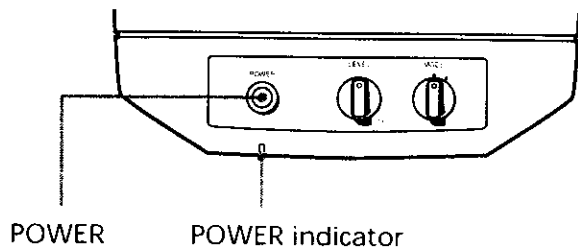


First, turn down the volume on the amplifier. The volume should be set to minimum before you begin playing the program source.

- 1 Turn on the amplifier and select the program source.
- 2 Press **POWER** on the subwoofer. The **POWER** indicator on the subwoofer lights up green.
- 3 Play the program source.

Adjusting the sound

Slight adjustments to the system can enhance your sound enjoyment.

 Adjusting the subwoofer

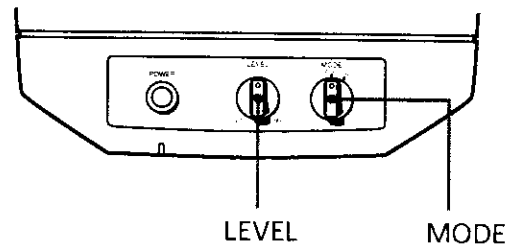

- 1 Set **MODE** according to the program source as follows:

Source	MODE
DVD, LD, video cassette or other video source	MOVIE
MD, CD, cassette tape or other audio source	MUSIC

- 2 Rotate **LEVEL** to adjust the volume. Set the volume level to best suit your preference according to the program source.

Notes

- Some amplifier functions for enhancing the sound may cause distortion in the subwoofer. If such distortion occurs, turn off those functions.
- To enjoy high-quality sound, do not turn the subwoofer volume too high.
- To increase the bass sound from the subwoofer, connect the system using "Hookup B" (see page 5).
- The bass sound is enhanced in **MOVIE** mode rather than in **MUSIC** mode. Therefore, if you change the mode to **MOVIE** while listening to some sources that do not include the bass sound, you may not be able to get the effect.

Setting your amplifier to enjoy movies (SA-VE315 only)

For the Dolby Digital (AC-3)

If your amplifier is connected internally or externally with a Dolby Digital (AC-3) processor, you should use the setup menus for the amplifier to specify the parameters of your speaker system.

See the table below for the proper settings. For details on the setting procedure, refer to the manual that was provided with your amplifier.

When "Hookup A" is used (Speaker setup)

For	Set to
Front speakers	SMALL
Center speaker	SMALL
Rear speakers	SMALL
Subwoofer	ON (or YES)

(Other setup)

Menu	Set to
LFE MIX*	-10 dB
BASS BOOST**	ON

* Low Frequency Effect

**A function that reinforces the bass sound

When "Hookup B" is used (Speaker setup)

For	Set to
Front speakers	LARGE
Center speaker	SMALL
Rear speakers	SMALL
Subwoofer	OFF (or NO)

(Other setup)

Menu	Set to
LFE MIX	-10 dB
BASS BOOST	ON

For the Dolby Pro Logic

If your amplifier is connected internally or externally with a Dolby Pro Logic processor, you should set the surround effect mode to "NORMAL" on the amplifier for your particular speaker system.

For details on the setting procedure, refer to the manual that was provided with your amplifier.

Precautions

On safety

- Before operating the system, be sure that the operating voltage of the system is identical with that of your local power supply.
- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- Unplug the system from the wall outlet if it is not to be used for an extended period of time. To disconnect the cord, pull the cord by grasping the plug. Never pull the cord itself.
- Should any liquid or solid object fall into the system, unplug the system's power cord and have the system checked by qualified personnel before operating it any further.
- AC power cord must be changed only at the qualified service shop.

On operation

- Do not drive the speaker system with a continuous wattage exceeding the maximum input power of the system.
- If the polarity of the speaker connections are not correct, the bass tones will be weak and the position of the various instruments obscure.
- Contact between bare speaker wires at the speaker terminals may result in a short-circuit.
- Before connecting, turn off the amplifier to avoid damaging the speaker system.
- The speaker grille cannot be removed. Do not attempt to remove the grille on the speaker system. If you try to remove it, you may damage the speaker.

If you encounter color irregularity on a nearby TV screen

This speaker system is magnetically shielded to allow it to be installed near a TV set. However, color irregularities may still be observed on certain types of TV sets.

If color irregularity is observed...

- Turn off the TV set once, then turn it on again after 15 to 30 minutes.

If color irregularity is observed again...

- Place the speakers further away from the TV set.

If howling occurs

Reposition the speakers or turn down the volume on the amplifier.

On placement

- Do not set the speakers in an inclined position.
- Do not place the speakers in locations that are:
 - Extremely hot or cold
 - Dusty or dirty
 - Very humid
 - Subject to vibrations
 - Subject to direct sunlight

On cleaning

Clean the speaker cabinets with a soft cloth lightly moistened with a mild detergent solution or water. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

If you have any questions or problems concerning your speaker system, please consult your nearest Sony dealer.

Troubleshooting

Should you encounter a problem with your speaker system, check the following list and take the indicated measures. If the problem persists, consult your nearest Sony dealer.

There is no sound from the speaker system.

- Make sure all the connections have been correctly made.
- Make sure the volume on the amplifier has been turned up properly.
- Make sure the program source selector on the amplifier is set to the proper source.
- Check if headphones are connected. If they are, disconnect them.

There is distortion in the subwoofer sound output.

- Check if any sound-enhancing functions have been activated on the amplifier. If they have, turn them off.

There is hum or noise in the speaker output.

- Make sure all the connections have been correctly made.
- Make sure none of the audio components are positioned too close to the TV set.

The sound has suddenly stopped.

- Make sure all the connections have been correctly made. Contact between bare speaker wires at the speaker terminals may cause a short-circuit.
-

Specifications

SA-VE315/VE312

For the U.S. model

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

with 6 ohm loads both channels driven, from 20 - 150 Hz; rated 75 watts per channel minimum RMS power, with no more than 0.8% total harmonic distortion from 250 milliwatts to rated output.

SS-V315 (front and rear speakers)

Speaker system	Full range, magnetically shielded
Speaker units	5 × 10 cm (2 × 4 in.), cone type
Enclosure type	Bass reflex
Rated impedance	8 ohms
Power handling capacity	
Maximum input power:	100 watts
Sensitivity level	87 dB (1 W, 1 m)
Frequency range	90 Hz - 20,000 Hz
Dimensions (w/h/d)	Approx. 68 × 150 × 125 mm (2 3/4 × 6 × 5 in.), including front grille
Mass	
European model:	Approx. 640 g (1 lb 7 oz) each
Other models:	Approx. 740 g (1 lb 10 oz) each

SS-CN315 (center speaker)

Speaker system	Full range × 2, magnetically shielded
Speaker units	5 × 10 cm (2 × 4 in.), cone type
Enclosure type	Bass reflex
Rated impedance	8 ohms
Power handling capacity	
Maximum input power:	120 watts
Sensitivity level	89 dB (1 W, 1 m)
Frequency range	90 Hz - 20,000 Hz
Dimensions (w/h/d)	Approx. 301 × 68 × 125 mm (11 7/8 × 2 3/4 × 5 in.), including front grille
Mass	
European model:	Approx. 1.4 kg (3 lb 1 oz)
Other models:	Approx. 1.5 kg (3 lb 5 oz)

continued

SA-WMS315 (subwoofer)

System

Speaker system	Active subwoofer, magnetically shielded
Speaker unit	Woofer: 16 cm (6 ³ / ₈ in.), cone type
Enclosure type	Advanced SAW type
Continuous RMS power output	(8 ohms, 20 - 150 Hz, 0.8% THD)
European model:	50 W
Other models:	75 W
Reproduction frequency range	28 Hz - 200 Hz
High frequency cut-off frequency	200 Hz

Inputs

LINE IN (input pin jack)
SPEAKER IN (input terminals)

Outputs

LINE OUT (output pin jack)
SPEAKER OUT (output terminals)

General

Power requirements	
European model:	220 - 230 V AC, 50/60 Hz
Other models:	120 V AC, 60Hz
Power consumptions	
European model:	50 W
Other models:	70 W
Dimensions (w/h/d)	Approx. 205 × 385 × 385 mm (8 ¹ / ₈ × 15 ¹ / ₄ × 15 ¹ / ₄ in.), including front grille
Mass	Approx. 10.5 kg (23 lb 2 oz)

Supplied accessories

SA-VE315

Foot pads (20)
Audio connecting cord (1)
Speaker connecting cords, 10 m
(32 ft 9³/₄ in.) (2)
Speaker connecting cords, 2.5 m
(8 ft 2¹/₂ in.) (5)

SA-VE312

Foot pads (8)
Audio connecting cord (1)
Speaker connecting cords, 2.5 m
(8 ft 2¹/₂ in.) (4)

Design and specifications are subject to change
without notice.

