

HITACHI

Video Deck

VHS



VT-UX605A

Owner's Manual

Your Complete Guide
to Videocassette Viewing
and Recording

Using these quality features:

- VHS hi-fidelity sound in playback
- Automatic tape head cleaning
- Up to 8 delayed recording programs
- Auto tracking for improved picture in playback
- Frequency synthesizer quartz tuner
- Illuminated remote control for use with your VCR and TV
- On-screen programming guide
- Multi-channel TV sound (MTS)
- Auto clock set feature
- VCR Plus+* for easy timed recording

* VCR Plus+ and PlusCode are trademarks of Gemstar Development Corp.

VCR Plus+ system is manufactured under license from Gemstar Development Corporation.

- Tape Navigation
- Displaying Captions

Hitachi Home Electronics (America), Inc.
3890 Steve Reynolds Blvd., Norcross, GA 30093
Tel. 770-279-5600

HITACHI (HSC) CANADA INC
3300 Trans Canada Highway, Pointe Claire,
Quebec, H9R 1B1, CANADA
Tel. 514-697-9150

HITACHI SALES CORPORATION OF HAWAII, INC
3219 Koapaka Street, Honolulu, Hawaii 96819
Tel. 808-836-3621

TABLE OF CONTENTS

FOR YOUR SAFETY	5
Read This First	7
IMPORTANT SAFEGUARDS	8
Getting Started.....	12
Simple Hookups	12
1 Decide Where to Put Your VCR.....	12
2 Decide Which Hookup Method to Use	12
3 Hook Up the Audio/Video Signal.....	13
4 Hook Up the RF Signal	13
5. Attach the TV and VCR to the Power Supply.....	16
6. Install Batteries in the Remote Control.....	16
7. Switch the RF or Video Channel	16
Getting Started (Controls)	18
Quick Tour of the Controls	18
REMOTE CONTROL BUTTONS	18
When the Remote Doesn't Work Right	20
VCR Controls	21
Display Indicators.....	21
Meet Your On-Screen Guide.....	22
Getting Started (Initial Setup)	24
Setup for First-Time Operation	24
Setting the Clock.....	24
More about Channel Selections	27
Setting up Your VCR for Each Function Using the Menu Screen	28
Choosing a Mode for Audio Playback	28
Stereo vs. Mono Sound	29
Hi-Fi Sound.....	29
Channel Caption (Station Identifier)	29
Getting Started (Video Tapes).....	30
About Videocassette Tapes	30
Types	30
Safety Tabs Prevent Erasure.....	30
Loading and Ejecting	30
Tape Storage	31
Basic Operations (Playback)	32
Viewing a Videocassette	32
To Play Back a Recorded Tape	32
To Fine Tune the Picture	32
Rewinding the Tape	33
Special Playback Effects.....	33
Viewing the On-Screen Display	35
To Find Specific Sections on a Tape	36
Basic Operations (Recording)	38
Recording a Program	38
Before You Record	38
Basic Recording Steps.....	38
Recording Tips.....	38
Using the Instant Recording Timer (IRT)	39

Setting the VCR to Record Later.....	40
Reviewing What You Have Programmed.....	42
Programming Priorities	42
Basic Operations (VCR Plus + Recording).....	43
Easy Delayed Recording with VCR Plus +	43
About VCR Plus+	43
Channel Setup	43
Using VCR Plus+ to Record a Program.....	47
Basic Operations (Tape Navigation).....	49
Tape Navigation	49
Basic Operations (Displaying Captions).....	58
Displaying Captions.....	58
Advanced Operations	59
Controlling Your TV with the VCR's Remote	59
Programming the Remote Control	59
Controlling the TV	60
Advanced Operations (Cable Box Hookups).....	61
Hooking Up to a Cable Box.....	61
Cable Box Position.....	61
A. Basic Hookup	61
B. Advanced Hookup (Cable Box to Unscramble All Channels)	62
C. Advanced Hookup (Cable Box to Unscramble Only Pay Channels).....	62
Advanced Operations (Stereo System)	63
Integrating Your Stereo System	63
Hookup	63
Advanced Operations (Second VCR)	65
Integrating a Second VCR.....	65
Hookup.....	65
Copying from One VCR to Another (Dubbing)	65
Audio Dubbing	65
Advanced Operations (Audio Dubbing)	67
Advanced Operations (Video Dubbing).....	68
Video Dubbing	68
Advanced Operations (Synchro Edit)	69
Synchro Editing.....	69
Advanced Operations (Camcorder).....	70
Copying Tapes From A Camcorder	70
VCR Care and Servicing.....	71
Routine Cleaning.....	71
Head Cleaning	71
Periodic Maintenance	71
Care and Servicing (Problems)	72
If the VCR Doesn't Work Right.....	72
Don't Attempt Repairs Yourself.....	72
Technical Specifications	72
Often Encountered Problems.....	73
HITACHI WARRANTY CARD (USA Back)	76
HITACHI WARRANTY CARD (Front) CANADA ONLY.....	78
HITACHI CANADA WARRANTY CARD (Back)	81

FOR YOUR SAFETY

- 4 -

 
--

FOR YOUR SAFETY

POWER SUPPLY: AC 120V, 60 Hz ONLY.

The POWER switch turns the VCR on and off, leaving the clock/timer unaffected. If the unit is to be left unattended for a long period, it is recommended that the unit be completely switched off and unplugged.

Illustrated below is the label on the back of your unit.



 This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.

 This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

WARNING: Many television programs and films are copyrighted. In certain circumstances, copyright law may apply to private in-home videotaping of copyrighted materials.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Caution to user: Changes or modifications not expressly approved by the party

responsible
for compliance could void the user's authority to operate the equipment.

"Note to CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical".

Read This First

Thank you for buying a Hitachi product. You've chosen the best VCR for you, and we want to help you make the most of your purchase. Please take time to become familiar with this manual and how it is set up. Keep it handy for future reference, too.

To guide you, we've included:

"Must read" sections containing important cautions for your family's safety as well as the basic facts you need to use the VCR. These sections are highlighted like this in the table of contents:

Information on the advanced features of your Hitachi VCR. We hope you'll take time to learn about these functions since we've designed them for you. But you can use the VCR without reading these sections.

We want this manual to be a tool for you, so we provide two ways to find the information you need:

A quick index to the basic functions of the VCR which you will use often (this page).

A detailed table of contents directing you to specific information quickly (page 4).

Get to know your VCR by using this manual, and get to know Hitachi. We appreciate your business.


IMPORTANT SAFEGUARDS

In addition to the careful attention devoted to quality standards in the manufacture of your video product, safety is a major factor in the design of every instrument. But, safety is your responsibility too.

This page lists important information that will help to assure your enjoyment and proper use of a Video Cassette Recorder and accessory equipment. Please read it carefully before operating your video product and keep it in a handy place for future reference.

INSTALLATION

1 Read and Follow Instructions -- All the safety and operating instructions should be read before the video product is operated. Follow-all operating and use instructions.

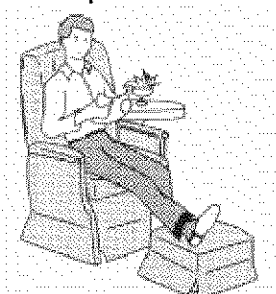

2 Retain Instruction -- The safety and operating instructions should be retained for future reference.

3 Heed Warnings -- Comply with all warnings on the video product and in the operating instructions.


4 Polarized Plug -- This video product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. To prevent electric shock do not use this polarized plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted without blade exposure. If you need an extension, use a polarized cord.



5 Power Sources -- This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your video dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

6 Overloading -- Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. Overloaded AC outlets and extension cords are dangerous, and so are frayed power cords, damaged or cracked wire insulation and broken plugs. They may result in a shock or fire hazard. Periodically examine the cord and have it replaced by your service technician if appearance indicates damage or

deteriorated insulation.

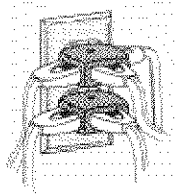

7 Power-Cord Protection -- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

8 Ventilation -- Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the video product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug or other similar surface. This video product should never be placed near or over a radiator or heat register. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the video product manufacturer's instructions have been followed.

LR	Hi-Fi Tape Playing	SRCH	Search
CLD	Cassette Loaded	SRCH	Reverse Search
REC	Recording	EP	Extended Play
REW	Rewind	SP	Standard Play
FFWD	Fast-Forward	⌚	Programmed to Record Later
PLAY	Playback		
STILL	Stop-Motion Play Frame Advance	L1 or L2	Signal Being Received Through Audio/Video Input Jacks on Front or Back of Unit
SLOW	Slow-Motion Play		
VCR	VCR Mode		

9 Attachments -- Do not use attachments unless recommended by the video product manufacturer as they may cause hazards.

Caution: Maintain electrical safety. Powerline operated equipment or accessories connected to this unit should bear the UL listing mark or CSA certification mark on the accessory itself and should not have been modified so as to defeat the safety features. This will help avoid any potential hazard from electric shock or fire. If in doubt, contact qualified service personnel.

10 Water and Moisture -- Do not use this video product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

11 Accessories -- Do not place this video product on an unstable card, stand, tripod, bracket or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer, or sold with the video product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

11A An appliance and cart combination should be moved with care. Quick stops,

excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



12 Outdoor Antenna Grounding -- If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See example below:


EXAMPLE OF ANTENNA GROUNDING

13 Power Lines -- An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching or approaching such power lines or circuits as contact with them might be fatal. Installing an outdoor antenna can be hazardous and should be left to a professional antenna installer.


USE

14 Cleaning -- Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

15 Object and Liquid Entry -- Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.

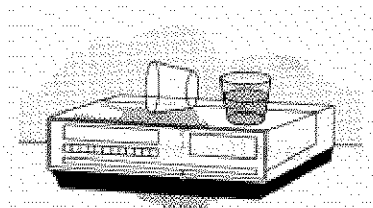

16 Lightning -- For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable-system. This will prevent damage to the video product due to lightning and power-line surges.

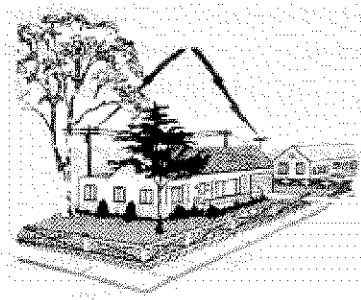

SERVICE

17 Servicing -- Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

18 Conditions Requiring Service -- Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions.

- a. When the power-supply cord or plug is damaged.
- b. If liquid has been spilled, or objects have fallen into the video product.
- c. If the video product has been exposed to rain or water.
- d. If the video product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.
- e. If the video product has been dropped or the cabinet has been damaged.
- f. When the video product exhibits a distinct change in performance - this indicates a need for service.

19 Replacement Parts -- When replacement parts are required, have the service technician verify that the replacements he uses have the same safety characteristics as the original parts. Use of replacements specified by the video product manufacturer can prevent fire, electric shock or other hazards.

20 Safety Check -- Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks recommended by the manufacturer to determine that the video product is in safe operating condition.

Getting Started

Relax. Using a VCR is very straightforward.

This section explains how to hookup the VCR, quick tour of the controls, set up for first-time operation using on-screen menus, and videocassette tapes.

Enjoy getting to know all about your Hitachi VCR. Let's get started.

Simple Hookups**1 Decide Where to Put Your VCR**

Be sure your chosen location allows for proper ventilation, stability, and protection from heat and moisture (see Important Safeguards).

Place the VCR near your TV but not on top of it. For convenience in using the remote control, locate them no more than three feet apart.

If you have an external cable or antenna, place the TV and VCR where you have ample cable to hook them up. If necessary, you can purchase a cable extension and connector.

If you plan to route your VCR audio through your stereo speakers for better sound reproduction, place the VCR near the stereo receiver, or have enough long audio cables to make the connections. (But keep in mind that the electronic signal weakens the further it has to travel.)

2 Decide Which Hookup Method to Use

To make your VCR function, you'll deal with two basic hookups:

1. *The audio and video signal:* If all you want to do is view a prerecorded videotape on the VCR, this three-line hookup is the only one you need.

2. *The radio frequency (RF) signal* from a cable or antenna: Make this hookup if you also want to record programs, or if you have no audio/ video connectors on your TV.

We will show you the simplest hookups first and then present several variations to suit specific needs. Be aware that you may need to purchase additional connectors to make the desired hookup. These are available at video stores and electronic hardware stores. Choose which hookup method to use based on:

Your TV's capabilities

The type of antenna or cable system you have (for cable box hookup, see Advanced Operations)

 
Any other devices you want to include in the system (stereo, second VCR, etc.)

We will guide you through this process. But first, turn the TV and the VCR around so you are looking at their backs. Note the various input and output receptacles, their shapes, and how they are labeled. Then read through the rest of this hookup section before proceeding to an actual hookup.

DO NOT TURN ON THE POWER YET. FOR YOUR SAFETY, LEAVE YOUR TV AND VCR UNPLUGGED WHILE HOOKING THEM UP.

3 Hook Up the Audio/Video Signal


If your TV is a fairly recent model, you probably have both audio and video jacks. Look on the back of your TV for three jacks - possibly color-coded yellow, white, and red. They will be labeled something like IN (L and R), AUDIO IN, or VIDEO IN. (If you are not sure, look at the back of your VCR - you will see two sets of these jacks.)



If you have no jacks like these on your TV, skip this step and proceed to Step 4.

TV with Audio and Video Jacks

If you do find *all three jacks* on your TV, you need to purchase a three-line audio/video cable with bell (RCA) connectors, like this:

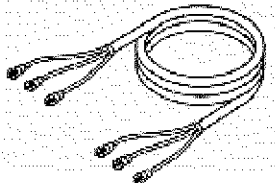

If you find a video jack and *only one audio jack*, your TV is probably monaural. You can purchase a two-line audio/video cable, but the three-line is handy in case you get a stereo TV later.


Connect the yellow VIDEO OUT jack on the VCR to the VIDEO IN jack on the TV. This direct video input will give you the best picture. It will also let you play videos in a "picture in picture" feature, if your TV has it.

Then connect the AUDIO OUT jacks (red and white) on the VCR to the AUDIO IN jacks on the TV (left to left, right to right).

This audio hookup will give you better sound than the RF signal hookup, because the electronic signal won't have to go through a conversion process. Plus your VCR has a stereo decoder, which your TV might not. For big speaker sound, you can also use these jacks to connect the VCR to your stereo system (page 74).

Capabilities: The audio and video signal connections are all you need to play back a prerecorded tape. If you do not intend to record on your VCR from your antenna/cable, then you're all hooked up now. Otherwise, continue with Step 4, which will let you record off TV channels.


4 Hook Up the RF Signal

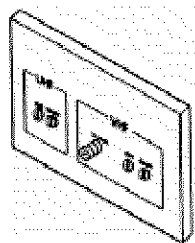

Look at the back of your TV for a connector that looks like one of these, and follow the corresponding hookup option. If you have any sort of cable box, see the hookup options in Advanced Operations (page 71).


Simple Antenna/Cable 75 Ohm Hookup

This is an easy hookup that you can use if your cable or antenna has a 75 ohm round wire connector. You will need the 75 ohm cable supplied with your VCR. It looks like this:

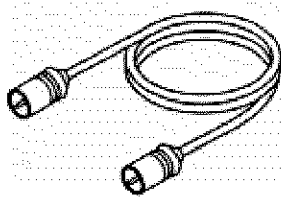

If you have been watching the TV in your home before getting the VCR, you will already have a round wire attached to your TV. Otherwise, look for a cable connection coming in through the wall from outside. (If you find this connection, remember to call your local cable company to start the service.)


1. If still hooked up to your TV, unscrew the round wire from the 75 ohm connector on your television. Otherwise, take the wire that comes in from the wall.
2. Screw this round wire into the IN FROM ANT jack on the back of your VCR.
3. Using the 75 ohm cable supplied with your VCR, slide on either end to the OUT TO TV jack on the back of the VCR.
4. Connect the other end of the same cable onto the 75 ohm antenna input on your TV (where you first disconnected the TV in step 1).

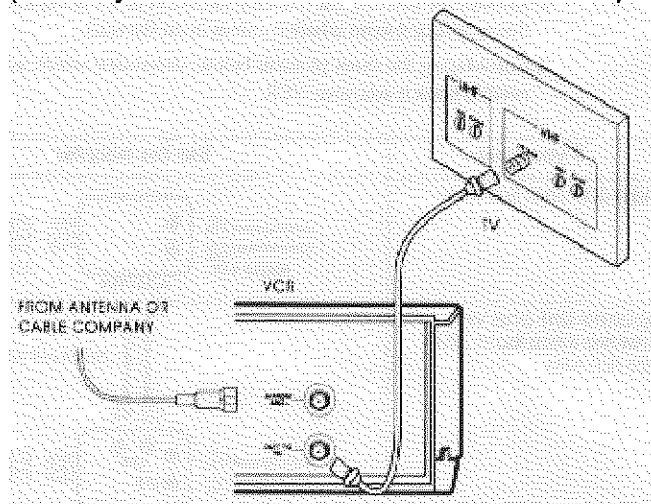

Capabilities: With this hookup, you should now be able to perform all the basic functions provided by this equipment.

External or Internal 300 Ohm Antenna

If you have either an external or internal (rabbit ears) antenna rather than cable, you may have 300 ohm connectors like these:

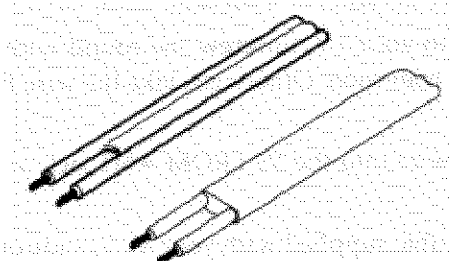


In this case, you will need special adapters to make the 75 ohm round wire connection shown below. (You may already have one on your TV.)

1. Remove the antenna line from the back of your TV if it is already connected there, or take it from where it comes in on the wall.
2. Considering the three pictures below, determine which adapter you will need to hook it into your VCR.


If you have

Use this adapter


Single 300 ohm flat wire

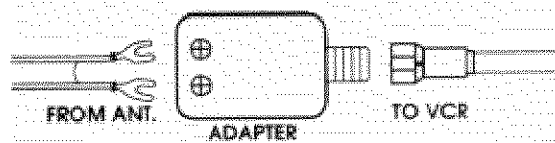


Separate UHF and VHF antenna wires, both 300 ohm flat wire

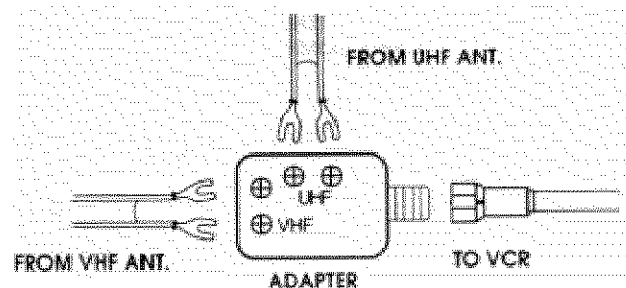

300 ohm flat UHF and 75 ohm round VHF

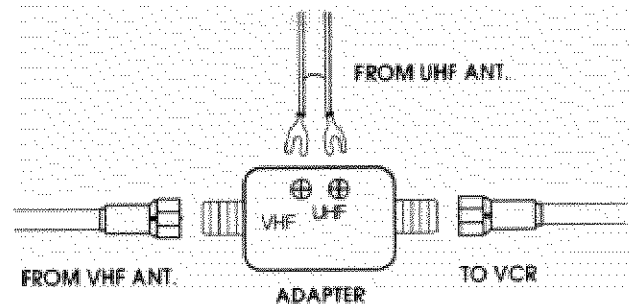

If you have "rabbit ears" (an antenna on top of your TV), you will need an additional adapter and 75 ohm extension to make your leads reach from the antenna to the VCR. This connection will work only if you have a strong, clear picture on the TV, indicating a strong signal. Connect the antenna to the adapter, and use the cable extension to go from the adapter to the VCR. Use the supplied 75 ohm cable to connect the VCR to the TV.

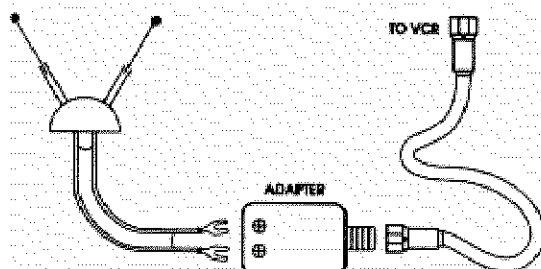

Now continue with the hookup:

1. Using whichever adapter you have fit your antenna with, attach that connector to the

IN FROM ANT jack on the back of the VCR.

2. Using the 75 ohm cable supplied with your VCR, connect either end to the OUT TO TV jack on the back of the VCR.

3. Use a second adapter to attach the other end of the 75 ohm connector back into the TV (where you first disconnected the antenna).




Capabilities: With this hookup, you should now be able to perform all basic functions provided by this equipment.

5. Attach the TV and VCR to the Power Supply

Plug in the TV and VCR power cords to the wall outlet or an appropriate extension cord or surge protector. See Important Safeguards for further precautions (page 6).


6. Install Batteries in the Remote Control

The remote control requires two fresh "AA" batteries. On the back of the remote, a plastic cover slides off in the direction shown by the arrow. Remove this cover and install the batteries, matching the plus end of each battery with the plus mark on the remote.

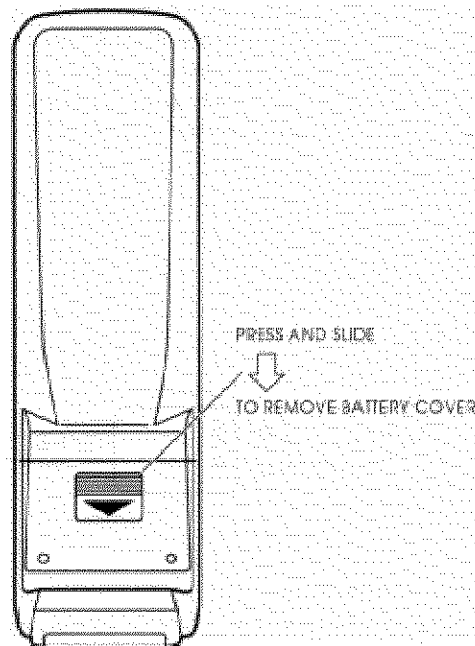

7. Switch the RF or Video Channel

When the VCR is on, its video signal can come into your TV on either channel 3 or channel 4. You need to select the appropriate channel.

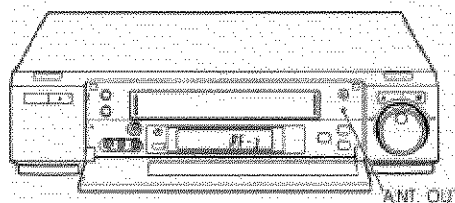

Turn on the power of both the TV and the VCR. Push the ANT. OUT button on the

VCR using the tip of a ballpoint pen, etc. Pressing the button alternates between RF-3 (channel 3) and RF-4 (channel 4) in the VCR's display. Display the channel which is not used by a commercial channel in your area.

Your basic hookup is now complete. When you're ready to try hooking up a second VCR or a video camera for a complete home entertainment system, see Advanced Operations.

Now turn the TV and VCR back around facing you and begin your quick tour of the controls (page 15).

Getting Started (Controls)**Quick Tour of the Controls**

Study these pictures carefully to learn about the buttons and controls that you'll need for everyday operation. Various controls are explained throughout this manual as they are needed, but now is a good time to get familiar with their locations.


Most of the time, you'll be directing the VCR from the remote control, but there are some controls on the VCR that will come in handy too.

When you're familiar with these basic controls, proceed to Setup for First-Time Operation (page 21). We'll show you how to program your local channels and set the clock to make your VCR fully functional.

How the Remote Control Works

Pressing a button on the remote control transmits an invisible beam of light (infrared) to a receiver at the left front of the VCR.

When using the remote, aim the front end toward the VCR and make sure nothing - such as a coffee table or your dog - is blocking the path of the infrared beam.

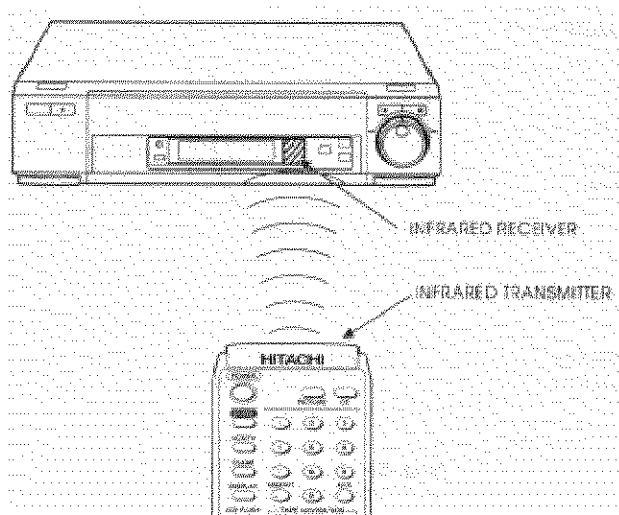**About the Illuminated Buttons**

Try pressing the remote control's white buttons one at a time. As you press, one of the three device buttons lights up - VCR, CAM, or TV. This helps you keep track of which device you are controlling at the moment.

REMOTE CONTROL BUTTONS

Remote Control Illustration

POWER

Turns the VCR on and off.

GUIDE

Brings up an on-screen setup and programming guide, the Easy Guide System.

VCR/TV

Switches between viewing through the VCR and not viewing through the VCR.

CLEAR

Used in on-screen programming and indexing.

DISPLAY

Used in on-screen programming and indexing.

VCR PLUS+

Used to program the timer for unattended recording.

VOLUME

Increase or decrease the audio volume.

MUTE

Turns off the audio until you press MUTE again.

REC

Starts recording on the station the VCR is set to.

REW

Rewinds the videotape.

PLAY

Starts playing a loaded videocassette.

PAUSE

Temporarily stops the cassette from recording or playing. Press PAUSE again (or PLAY) to resume.

LIGHT

Illuminates key function buttons for a few seconds.

SHUTTLE DIAL

Controls the videocassette's forward and reverse motion with one convenient dial.

JOG DIAL

Moves the tape forward one frame at a time.

V.DUB

Used for video dubbing. See VIDEO DUBBING section on page 79.

A.DUB

Used for audio dubbing. See AUDIO DUBBING section on page 78.

PICTURE

Used for clear playback picture.

CC

Used to display captions on the screen.

0 to 9

Number buttons used in on-screen programming. Can also be used to change channels. (Simply press 2 or 3 digits for the channel you want - such as 0 and 6 for channel 6, or 100/ENT and 2 and 4 for channel 124.)

AVX

Used for recording from an auxiliary input such as a stereo system.

MENU

Used to display the Tape Navigation directory.

Select (▼)/(⏏)

Used to select the program using Tape Navigation.

VCR, CAM (camcorder)*, TV

Device buttons let you set the remote to control one of the three devices.

CHANNEL

Top button switches to the next higher channel, bottom button switches to the next lower channel. For these to operate, you must have preset your channels.

LAST CHANNEL

Switches to the TV channel you watched previously during the current viewing session.

F.FWD

Fast forwards the videotape.

STOP

Stops a videocassette from playing, recording, pausing, rewinding - or anything it is doing.

SKIP

Skips forward while playing back the video tape.

* Refer to the camcorder's instruction manual for its operation.

When the Remote Doesn't Work Right

Check out these possibilities:

Low Battery

If the remote is not working even at close range, try putting in two fresh AA batteries.

When replacing the batteries, remove the old batteries and press the POWER button on the remote and hold it for about 10 seconds, then insert two fresh batteries.

Objects in the Way

There may be objects between the remote and the VCR - for instance, a stack of books on the coffee table, your 2-year old child, the dog. Hold the remote so that it points at the VCR with nothing in the way.

If You Just Want to Watch TV

For normal TV viewing, you do not need to disconnect the VCR. When the TV and VCR are already on, press POWER on the remote control. The VCR will shut off, but the TV will stay on.

If you are recording on the VCR but want to watch a different channel on the TV, press the VCR/TV button to switch back and forth between the TV channel and the recording channel.

VCR Controls

Front Panel Illustration

POWER

Turns VCR power on and off.

STOP

Cancels any videotape action.

EJECT

Ejects tape.

PLAY/STILL

Plays and pauses the loaded videotape.

DISPLAY

Shows time, channel, and status indicators.

CHANNEL/TRACKING

Up and down arrows for selecting channels. Used to adjust tracking during playback.

REC/IRT

To begin recording.

SHUTTLE DIAL

Controls the videocassette's forward and reverse motion with one convenient dial.

JOG DIAL

Moves the tape forward one frame at a time.

SELECT ▼/⏮

Used to select program using Tape Navigation.

MENU

Used to display the Tape Navigation directory.

ANT. OUT

Switches the RF or video channel.


Display Indicators

Watch for these signs and symbols that let you know that the VCR is responding to your instructions.

	Hi-Fi Tape Playing	SRCH	Forward Search
	Cassette Loaded	-SRCH	Reverse Search
	Recording	EP	Extended Play
VCR	VCR Mode	SP	Standard Play
REW	Rewind	REM	Remaining Tape Display
FF	Fast-Forward		Programmed to Record Later
PLAY	Playback	L1 or L2	Signal Being Received Through Audio/Video Input Jacks on Front or Back of Unit
STILL	Stop-Motion Play Frame Advance		
SLOW	Slow-Motion Play		

Meet Your On-Screen Guide

Your Hitachi VCR has a special feature called the Easy Guide System. This feature guides you through simple setup and programming tasks right on the TV screen. With the TV and VCR turned on, press GUIDE on the remote control. You will see MENU screen:

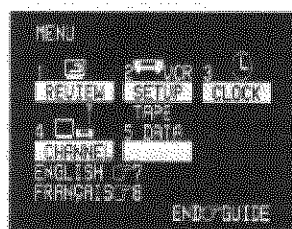

You may view all the on-screen instructions in English or French. When you first set up your VCR, it will be set to English. Press number 8 for French.

Now, you will do most of your programming and setup by pressing numbers on the remote control which correspond to options presented in this and other on-screen menus. Instructions are easy to follow, and a white dash " - " will show you where your input is required.

When you want to leave the Easy Guide System, simply press GUIDE several times. This will back you out to the normal TV viewing screen.

If you don't press any button for a while, the VCR will switch you back to an earlier screen or to regular TV viewing.

Here is what the options mean.

1 REVIEW

Press 1 of the remote control to review the programs you have preset in the timer or erase them as required. (See page 43)

2 VCR SETUP

Press 2 to display the VCR SETUP screen and select the required sound from the VCR and its functions. (See page 26)

3 CLOCK

Press 3 to display the CLOCK SET screen and correct the VCR's clock. (See page 21)

4 CHANNEL

Press 4 to display the CHANNEL PRESET screen and preset channels or set the cable

box. (See page 25)

5 TAPE DATA

Press 4 to display the TAPE DATA MENU screen and use the tape navigation function.
(See page 53)

7 ENGLISH

Press 7 to display all option setting screens in English.

8 FRANCAIS

Press 8 to display all option setting screens in French.

Getting Started (Initial Setup)**Setup for First-Time Operation**

Before you use your VCR to watch or record from your TV, you need to "tell" the VCR whether your TV uses cable or antenna input and let it program itself to receive your TV's channels. It's also a good idea to set the clock so you can do timed recording later. With your TV and VCR hooked up, turn them both on and follow these steps using the remote control.

Setting the Clock

This is easy to do and important for your later timed recordings.

You'll need to set the clock when first hooking up your VCR, and any time the power goes out for more than 1 hour.

When you first plug in the VCR or after a power outage, the clock display will read "--:--".

Auto Clock Set Function

This function sets the VCR's clock automatically when the VCR is tuned to a station which transmits a time signal together with TV programs.

It also automatically sets the time differences between various time zones and sets the time during Daylight Saving Time (D.S.T). The auto clock set function operates each time the VCR is turned off.

The VCR's display is lit when the auto clock set function is operating.

Some broadcast stations may not transmit a time signal. The auto clock set function does not operate when the VCR is tuned to a station which does not transmit a time signal. In this case, set the clock manually (see page 24).

When the clock is set automatically, the displayed time may drift from the current time by up to one minute.

Setting the Clock with the Auto Clock Set Function

When the VCR is hooked up via an antenna or cable (no cable box):

1. Press POWER to turn the VCR power off.

When the VCR is turned off, press POWER to turn the power on, then press it again to turn the power off.

The set time appears in the VCR display to show that the current time has been set.

It may take about five minutes for auto clock setting.

If the clock is not set after about five minutes have elapsed, press GUIDE then set the clock manually (See page 24).

When the VCR power is recovered after a power failure of more the one hour, the clock can be set automatically from the "--:--" indication.


If the displayed time drifts from the current time by more than one hour, select your correct time zone and set the D.S.T (See page 23).

When the VCR is hooked up to a cable box.

Before you begin:

Set up your cable box (See page 48).

1. Press GUIDE, then press 3 to bring up the CLOCK SET screen.

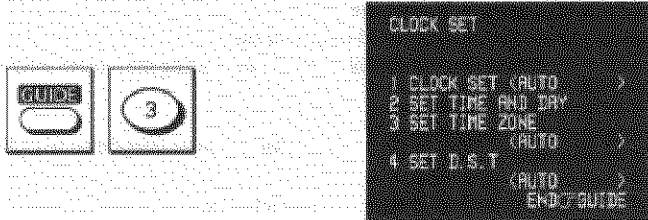

2. Check that item 1 is specified "CLOCK SET <AUTO>". If "CLOCK SET <MANUAL>" is displayed, press 1 to switch it to "CLOCK SET <AUTO>".
3. Press 2. The following screen appears to show that the clock is being set.



Since the VCR is searching for a broadcast station that transmits a time signal, the channel indication on the cable box changes automatically.

4. The screen shown in step 3 above changes to a TV picture and the time appears in the VCR's display.


It may take about five minutes for auto clock setting.

If the clock is not set after five minutes have elapsed, press GUIDE, then set the clock manually (See page 24).

If the displayed time drifts from the current time by more than one hour, select your correct time zone and set D.S.T (see page 23).

What to do if the displayed time drifts from the current time by more than one hour.

1. Press GUIDE, then press 3 to bring up the the CLOCK SET screen. Check that item 1 is specified "CLOCK SET <AUTO>".

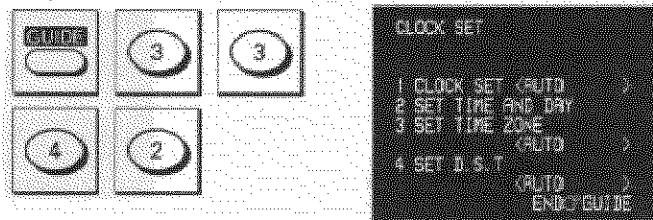

2. Press 3 to select your local time zone.

Each time 3 is pressed, the option for "3 SET TIME ZONE" switches from <AUTO> to <ATLANTIC>, <EASTERN>, <CENTRAL>, <MOUNTAIN>, <PACIFIC>, <ALASKA>, <HAWAII> and back to <AUTO>.

This screen give an example where <ATLANTIC> is specified.



3. Press 4 to select D.S.T. option.

Each time 4 is pressed, the option for "4 SET D.S.T" switches from <AUTO> to <ON>, <OFF> and back to <AUTO>.

<AUTO>: The daylight savings time (D.S.T) is set automatically.

<ON>: The time advanced from the Standard Time by one hour is displayed from the first Sunday of April through the last Sunday of October.

<OFF>: The Standard Time is displayed throughout the year.



This screen gives an example where <ON> is specified.


4. Press 2 and set the time again.

If the displayed time drifts from the current time by more than one hour even after steps 1 - 4 have been performed, change the D.S.T option again in step 3, then set the time again.

To set the clock manually


1. Press GUIDE, then press 3 to bring up the CLOCK SET screen.

Press 1 to switch "CLOCK SET <AUTO>" of item 1 to "CLOCK SET <MANUAL>".

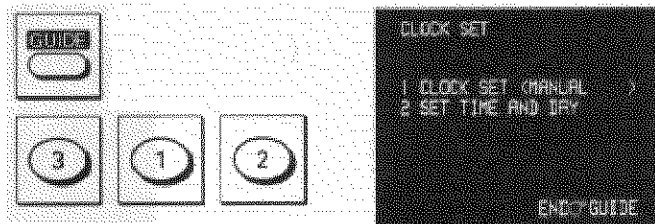

If "CLOCK SET <MANUAL>" is specified in item 1, "SET TIME ZONE" of item 3 and "SET D.S.T" of item 4 are not displayed.

2. Press 2 to bring up the following screen.

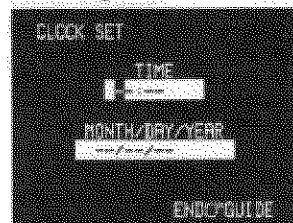

Press the number buttons on the remote control to set the current time - two digits for the hour and two for the minutes. Then press 1 or 2 for AM or PM, respectively. For example, if it is now 2:15 PM, press 0, 2, 1, and 5 for hours and minutes, and press 2 for PM.

Continue pressing buttons to set the date. For example, if today is July 8, 1996, press 0,

7, 0, 8, 9, and 6 to get 07/08/96.

When you're done, press GUIDE to return to regular viewing.

Tips:

The white dash " - " appears for the item to be changed on the screen as you proceed.

The clock uses the 12-hour system. You set it for AM or PM.

An illogical time (like 13 for the hour or 20 for the month) will not be accepted.

If you press the wrong digit, exit the screen by pressing GUIDE and recall the screen to enter the correct setup.

The day of the week is set automatically.

More about Channel Selections

Your VCR is capable of receiving 68 broadcast TV channels (VHF 2-13, UHF 14-69) and 125 cable channels (CATV 1-125).

1. Press GUIDE, then press 4 to bring up the CHANNEL PRESET screen.

2. Press 1 to select the type of receiving setup you have.

Each time 1 is pressed, the option for "1 CHANNEL" switches from <CATV1> to <ANT>, <CATV2> and back to <CATV1>.

<CATV1>: Ordinary cable

<ANT>: Internal or external antenna.

<CATV2>: Alternate cable (if <CATV1> doesn't give you the channels you expect).

3. Press 2 to select "2 AUTO CHANNEL SET". The tuner automatically cycles through all available channels in your area and place them in memory. This takes 2-3 minutes. After the channels are stored in memory, the channel with the lowest number appears in the VCR's display. Press GUIDE to return to regular viewing.

For convenience, the TV channel numbers should match those programmed into the VCR. If your TV has automatic channel programming, set it on the same mode -

CATV1, ANT, or CATV2 - and let it reprogram to match the VCR.

Once channels are preset, you can use the up and down CHANNEL buttons to move through the active channels. Or you can press the number buttons to move quickly between channels that are far apart.

Removing Channels

You may not want to keep all the stations the auto-programmer selects, since you may prefer to have only a few favorite channels in the tuner's memory. Or, you may want to delete from memory a weak or unused channel that the tuner picked up.

Erased channels cannot be selected by the up and down CHANNEL buttons but can still be selected by using the numbered buttons 0 to 9 and 100/ENT.

Adding Channels

Occasionally the auto-programming may skip an active channel because the antenna was pointed in the wrong direction or the channel had a weak signal or was "off the air" at the time of programming. Or you may change your mind about a channel you removed from memory.


To Add or Erase Channels

Press GUIDE, then press 4 to bring up CHANNEL PRESET screen. Item 3 lets you

add or delete channels. Use the number buttons to enter the channel you want to change, then press STOP to delete it or press PLAY to add it.

Setting up Your VCR for Each Function Using the Menu Screen

Press GUIDE, then press 2 to bring up the VCR SETUP screen.

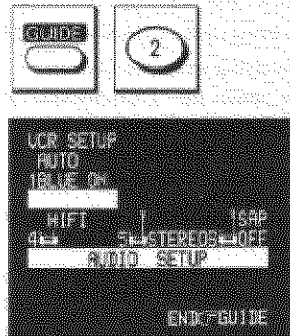

The screen shows the default settings on your VCR. The default settings are the ones that are preset at the factory.

Look at each item to see if it matches your own setup:

To change a setting, press the button that has the same number as that item. This will cycle you through several options.

When everything is set up as you want, press GUIDE again to back out of the VCR SETUP screen.

Here is what the options mean:

1 AUTO BLUE

Press 1 to control the auto blue function which makes the screen blue and mutes sound when you select a channel without a broadcast signal on the VCR or a channel on which the broadcasting has finished. Options are <ON> and <OFF>.

If the signal is too strong, this function may not operate even if you specify <ON>. During playback this function does not operate.

4 HIFI/MIX/LINEAR

Press 4 to control how the audio signal is processed by the VCR. Options are <HIFI>, <MIX> and <LINEAR>.

5 STEREO/MONO

Press 5 to control how the audio signal is recorded and sent to the TV. Options are <STEREO> and <MONO>.

6 SAP

Press 6 when you are ready to record a second audio program. Options are <OFF> and <ON>.

Choosing a Mode for Audio Playback

Choose between hi-fi and linear modes, depending on your needs.

HIFI is the preferred setting because it works for all tapes whether they were recorded in hi-fi or linear modes. If the audio sounds distorted or unusual or there is no audio, try the LINEAR option.

When you set the option to HIFI, hi-fi tapes will play in high fidelity, and non-hi-fi tapes will play in linear mode.

Stereo vs. Mono Sound

When you select the STEREO option, your VCR records in stereo any station that broadcasts stereo sound. When a TV channel broadcasts in stereo, you'll see a stereo indicator on the TV screen.

STEREO is the normal factory setting because it works for both stereo and mono broadcasts. It is also necessary for recording a second audio program (SAP).

When you select MONO, sound is recorded as mono even when a channel broadcasts in stereo.

Use the MONO setting when the stereo signal is not strong enough for quality reception (for example, when there is signal drift or noise).

Hi-Fi Sound

Hi-Fi sound is the same quality as that of a compact disc player. Its dynamic range of over 90dB will record either stereo or monaural broadcasts with the highest quality possible. Linear sound, on the other hand, will record monaural sound using the same format as a non hi-fi VCR. Stereo programs are recorded in hi-fi on both the left and right channels and also recorded on the linear track as monaural.

Channel Caption (Station Identifier)

When your VCR is receiving a channel caption signal that is being transmitted by a local broadcasting station together with a TV program, a station identifier is displayed on the TV screen.

Getting Started (Video Tapes)**About Videocassette Tapes****Types**

The best thing you can do for your VCR is use the best quality tapes available. This VCR uses VHS tapes only, which are the most common type. Look for the VHS mark on new or prerecorded tapes you buy.

Tapes are marked either T-120 or T-160, which signifies how many minutes of programming they can hold at standard recording speed (SP). To get the best quality picture, record at standard speed. But if you want to get more on a tape and are less concerned about the quality, set the VCR for extended play (EP).

Tape Capacities at Different Speeds


TYPES	RECORDING TIME	
	SP	EP
T-120	120 min.	360 min.
T-160	160 min.	480 min.

You may have noticed that there is also an LP speed. Your Hitachi VCR does not record at this speed, but it can play cassettes that were recorded in LP mode. No special setting is required for playback.


Safety Tabs Prevent Erasure

A safety tab is located on the front left edge of every videotape next to the label. Break this tab off if you want to keep a special tape from being erased accidentally. (Notice this tab is already removed on prerecorded tapes you buy or rent.) Poke a screwdriver or similar tip into the space behind the tab to break it off.

Don't worry, you can change your mind and record on this tape even after the tab is broken off - simply cover the hole with cellophane tape.

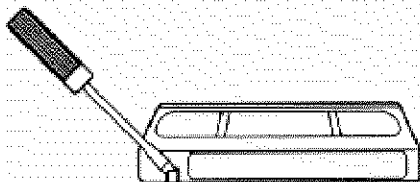**Loading and Ejecting**

When you load a videocassette into the VCR, there is only one right way! Most tapes show you the way with a little arrow on the top side which should go in first.

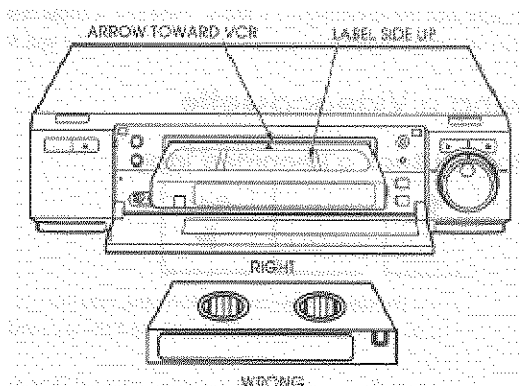

Push the videocassette gently into the slot on the front of the VCR. You will feel the VCR take it in.

When the cassette is all the way in, the VCR powers up automatically and a TAPE-IN indicator shows on the display. It may also start playing immediately if the safety tab has been removed.

To remove the cassette, simply press the EJECT button on the VCR. (If the tape is playing, press STOP then press the EJECT button.)

Now you can take the cassette out and put it away.

Tape Storage

Store your videocassettes in their jackets and in an upright position (like books in a bookshelf) away from any magnetic sources. Resist the temptation to leave them lying flat on top of the VCR. Tapes will last longer - and so will your VCR - if you store them properly. Remember, dust, dirt and liquids are enemies of your tapes and VCR.

To avoid aggravation later, apply the labels that come with new tapes. On them, write notes to yourself about what you recorded.

Basic Operations (Playback)

Practice starting and stopping a video you've rented - play it through, see how it automatically rewinds.

Get a blank tape and try recording a TV show. Then you'll know how to use the VCR when you need to--or where in the manual to find the instructions you forgot. Let's go!

Viewing a Videocassette**To Play Back a Recorded Tape**

1. Insert the cassette, arrow-side forward, into the slot at the front of the VCR. The power comes on automatically and the tape indicator lights on the display.
2. Turn on the TV and select the video channel (3 or 4). Or, if you are hooked up with a direct audio/video cable, set the TV to AUX or VIDEO.
3. Press PLAY to start the tape.
4. Press STOP to end play.

Direct Video Input to the TV

Normally you would select channel 3 or 4 on the TV to receive a signal from the VCR. You can get an even better picture if your TV has an auxiliary video input feature and if the TV and VCR have a direct video-to-video hookup. If this is the case, do not select channel 3 or 4. Instead:

Press the AUX or VIDEO button on the TV's remote control to select the proper input channel for playback.

To Fine Tune the Picture**Auto Tracking**

Pressing PLAY starts the auto tracking feature, which adjusts the tuning to eliminate static lines that may appear on the screen.

Manual Tracking

Scratched tapes or poorly recorded tapes may require additional picture adjustment. Press the CHANNEL up or down button until picture becomes clear.

After operating the tracking manually, eject the tape and reinsert it to reactivate auto tracking.

Selecting the Clear Playback Picture Using the On-Screen Display.



Press PICTURE. "ULTRA VIEW" will be displayed at the left corner of the screen. Pressing PICTURE alternates between "ULTRA VIEW ON" and "ULTRA VIEW OFF".
ON: Normally, specify ON.
OFF: Specify OFF so that noise is less when viewing tapes played repeatedly, e.g. rental tapes, etc., or when using this VCR for playback to copy a tape.

Rewinding the Tape

When you are done watching a video, you can rewind the tape automatically or manually. If the video cassette reaches the end of the tape, the VCR will stop and automatically rewind the video cassette. If you press POWER while the tape is rewinding, the power will shut off automatically after the tape has completely rewound.

Manual Rewind



Press STOP and REW. The VCR rewinds the tape all the way to the beginning, then stops. Press EJECT on the VCR to release the tape.

Movie Return

If your videocassette has the safety tab removed, the VCR will stop and automatically rewind the videocassette, eject it, and turn off the power when it reaches the end of the tape or a blank section of tape which lasts for more than 30 seconds. This function works only in PLAYBACK mode, not in RECORDING mode.

Special Playback Effects

Visual Search

This function lets you search backward and forward through the videotape while viewing it.

Using the buttons on the remote control:

- Press PLAY and then REW to search in reverse.

- Press PLAY and then F.FWD to search ahead.

- Press PLAY again to return to normal playback.

Press REW or F.FWD and hold it; you can search backward or forward through the tape at a higher speed while viewing it.

- Press PLAY and REW, then hold REW for backward search at a higher speed.

- Press PLAY and F.FWD, then hold F.FWD for forward search at a higher speed.

- Release REW or F.FWD to return to normal playback

Still Playback (Pause)

Press PAUSE on the remote control or PLAY/STILL on the VCR to still the tape during play. The picture will "freeze". You may see some minor noise or interference on the

screen. This is normal.

After 1 minute in PAUSE mode, the VCR automatically switches to STOP mode to protect the tape.

If noise bars appear on the TV screen during PAUSE mode, first set the VCR to SLOW mode by using the SHUTTLE dial and then press the CHANNEL up or down button to minimize the noise bars.

If the screen jitters during PAUSE, press the CHANNEL up or down button to minimize it.

To resume play, press PLAY or PAUSE again.

Skip Playback

While playing back your tape you can skip forward by pressing SKIP. The tape will search ahead for about a minute and then resume playing.

Using the Shuttle and Jog Controls on the Remote Control


The shuttle feature lets you control all the playback functions - play, pause, slow motion, and search - using one convenient dial.

The jog feature lets you control the frame by frame picture - using one conventional dial.

If the jog or shuttle dial is operated when the key function buttons are illuminated, the illumination goes off.

How to Use the Jog Dial

You can use the jog dial for only one minute after the shuttle dial is operated or the PAUSE button is pressed to set the VCR to the still play mode.

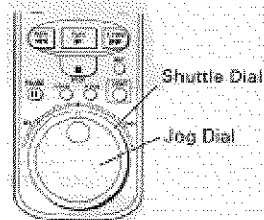


Every time the jog dial is brought to where a slight click is felt, the picture moves one frame.

Release your hand for still play (pause).

How to Use the Shuttle Dial

Turn the shuttle dial during playback or still playback (pause).

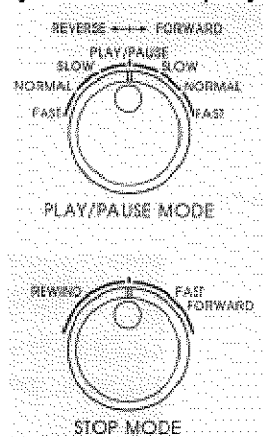

As you turn the dial, you get different playback speeds and forward or reverse motion. Try using the shuttle to explore backwards and forwards through your next video. If noise bars appear on the TV screen during SLOW/STILL mode, first set the VCR to SLOW mode and then press the CHANNEL up or down button to minimize the noise bars. The noise bars are then eliminated automatically in the STILL mode. If you turn the dial in the STOP mode, you can fast forward or rewind the tape. The tape continues to be wound even after you release the dial.

Viewing the On-Screen Display

Switching between the Clock, Time Counter and Time of Remaining Tape

Press DISPLAY while the on-screen display is displayed. The on-screen display switches in the order below together with the VCR's display.

On-Screen Display Examples


Displaying the Time Counter

The time counter keeps track of how many hours, minutes and seconds the tape has run.

Press DISPLAY. The time counter will appear on the TV screen and in the VCR's display.

The linear time counter operates only if there is something recorded on the tape.

The counter changes to 0:00:00 when the tape is ejected.

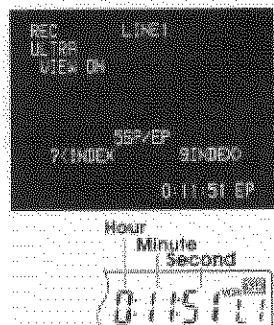

Displaying the Tape Remaining Time

This function displays the tape remaining time in hours and minutes.

1. Press DISPLAY to display the tape remaining time.



Immediately after the tape is inserted, "- : -" will appear. 2 minutes after playback or recording is started, the tape remaining time is displayed.

2. Press CLEAR repeatedly to switch the type of the tape used. The correct remaining time will appear.



AUTO: T-120 or shorter tape

T-160: T-140 or T-160 tape

T-180: T-180 tape

T-210: T-210 tape

The tape remaining time is not displayed correctly for a tape without any recordings or tapes other than T-30 / 60 / 90 / 120 / 140 / 160 / 180 / 210.

The remaining time may not be displayed correctly during fast forwarding or rewinding.

To Find Specific Sections on a Tape

Searching with the Time Counter

If there is one part of the video that you know you are going to want to return to, you can set the time counter to memorize that spot. Begin in either STOP or PLAY mode.

Press DISPLAY several times to display the counter on the VCR.

Begin recording or playing back a tape.

At the point that you want to go back to, press CLEAR. This resets the counter to 0:00:00.

Press STOP when you are done recording or playing back the tape.

Now when you rewind the tape, it will automatically stop at the spot where you cleared the counter. (Notice it moves just past the marker and then back to it.) Press PLAY to watch the tape from that preselected spot.

Press DISPLAY to take the counter display off. The spot is still in memory until you set a new one or until the tape is ejected.

Jump to an Index Mark with INDEX

A quick way to access specific program segments is with the index search feature. This lets you move through a tape that has several recordings on it by searching for the INDEX "mark." This function only works with recordings that have been set up with indexing. You create an INDEX mark every time you press the REC button while recording. For more on how this gets recorded, see the section on Recording a Program (page 37).

This VCR's indexing system is based on the VHS Index Search System (VISS). The new system may not recognize index marks on tapes recorded on older VCRs.

If the VCR is in PLAY mode, press STOP.

Press DISPLAY. This brings up the Index Screen.



Press 7 for rewind or 9 for forward to begin the index search.

The tape rewinds or fast-forwards until an index mark is detected. During this search,

the word INDEX is displayed at the top left corner of your screen.

When the VCR finds an index mark, it plays 15 seconds of the program that begins at that spot.

If this is the program you were looking for, press PLAY to resume normal playback.

If this is not the program you want, don't press anything. After 15 seconds, the VCR will move to the next mark and play a part of that program. The VCR will continue searching until you press STOP or reach the end of the tape.

When you find the program you want and press PLAY, the VCR returns to PLAY mode. To stop the index search before an index mark is reached, press STOP.

If there are no index marks on the tape, the VCR will just rewind to the beginning or fast forward to the end.

Basic Operations (Recording)**Recording a Program****Before You Record**

The VCR must be hooked up properly for recording. See the Simple Hookups at the beginning of this manual.

Copyright Infringement Warning

Most television programs and films are copyrighted. This means that someone has legal rights governing the reproduction and distribution of this material. In certain circumstances, copyright law may apply to private in-home taping of copyrighted materials. In most cases, it is okay to record for personal use, as long as you do not sell the material. You must act responsibly in this area--check into the matter if you are unsure.

Basic Recording Steps

1. Load the videocassette into the VCR. The power comes on automatically when the tape is fully inserted.

When the tape is inserted, the MENU button indicator flashes. When MENU is flashing, recording cannot be started even if REC is pressed.

2. Turn on the TV and select the video channel (3 or 4). Or, if you are hooked up with a direct audio/video cable, set the TV to AUX or VIDEO.

3. Press DISPLAY, then press 5 when the SP/EP message appears on the TV screen, to select SP (standard play, for the best picture quality) or EP (extended play, for longest recording time on a single tape). An indicator on the VCR's display shows which speed is active.

4. Set the VCR to the channel you want to record from. Use the up and down CHANNEL buttons to flip through the channels, or use the number buttons to go directly to the channel you want.

5. To begin recording, press REC on the remote control or REC/IRT on the VCR. Recording will start unless the cassette is protected with the safety tab. If this tab has been removed, the VCR will eject the tape to prevent recording over what is there.

Recording Tips**To Watch the Same Program While Recording**

To view what you are recording, press VCR/TV so that the VCR is selected - the VCR indicator will light up on the VCR's display. You'll want to do this the first few times anyway to be sure you're recording what you think you are.

To Watch One Program While Recording Another

Once you have set the VCR for recording, press VCR/TV. Now, you will be viewing through your TV only. Switch channels using your TV controls or the VCR remote, if it's programmed to control your television (see Advanced Operations).

The recording will continue as set on the VCR. If a preset timed recording starts up while you are watching the TV, you'll hear the cassette as it clicks on and see the recording indicator light up on the VCR display.

You can check on the recording by pressing VCR/TV again. This will switch you back to viewing through the VCR, you'll see the program you are recording.

To Skip Commercials

When a commercial comes on that you don't want to record, simply press PAUSE on the remote control. The VCR will stop recording. Press PAUSE again to continue recording when you see the commercial is over. If you stay in PAUSE mode for more than 5 minutes, the VCR automatically switches to STOP mode to protect the tape.

To Change the Channel Being Recorded

Suppose you are recording one program, and you remember that something else is on that you would rather record. You can change the channel while in the recording mode.

Press PAUSE to stop the recording temporarily. This is necessary because the CHANNEL buttons won't work while you are in recording mode--to keep you from accidentally switching the station while recording.

Change the channel to the one you prefer.

Press PAUSE to continue recording.

To Leave Index Marks on the Tape

This feature is useful when you are recording several programs on the same tape. It helps you quickly find the beginnings of the shows during playback (page 36).

You create the index "mark" every time you begin recording by pressing REC. To leave an index mark between shows, simply press STOP at the end of each show, then press REC to record the next show. (Pressing PAUSE during recording does not leave an index mark.)

During timed recordings, the VCR automatically inserts an index mark at the beginning of the recording.

To Record a Second Audio Program (SAP)

Some stations transmit a Second Audio Program - such as in a second language. If a station broadcasts in SAP, the SA indicator will display on your TV screen.

You can set the VCR to record a second audio program by activating the SAP option through the Easy Guide System.

Press GUIDE, then press 2 to bring up the VCR SETUP screen.

Press 6 to set the SAP option to ON.

Make sure that STEREO/MONO selection is set to STEREO.

When this is set, the VCR records the second audio program.

Using the Instant Recording Timer (IRT)

The Instant Recording Timer (REC/IRT button on the VCR) will let you make a simplified timer recording without having to use the programming timer. In order to set the IRT properly the clock must be set before starting.

Follow the steps 1 through 5 on "Basic Recording Steps" on page 37.

After the recording has started, press the REC/IRT button again to indicate the recording time on the display.

You can set the recording time length, which increases by intervals of 30 minutes, one hour, one and half hours, two hours, three hours, and four hours, (i.e. 0:30, 1:00, 1:30, 2:00, 3:00, 4:00) by continually pressing the REC/IRT button. While you are recording, the time remaining is shown in the display.

At the end of your recording the display will read "0:00"; recording will then automatically stop and the VCR will turn itself off.

To stop recording while in the IRT mode, press the POWER button and then press the STOP button (this can be done either on the VCR or with the remote control) within 10 seconds.

Setting the VCR to Record Later

With the delayed recording feature, you can set this VCR so that it automatically comes on and records programs whenever you like--without your being around! You can record a program one time only, or you can automatically record a show every weekday or every week at the same time. You can preset as many as 8 timed recordings at once.

Recording is even easier when you have set up your channels for VCR Plus+. Learn the basics of delayed recording in this section. Then read about VCR Plus+ beginning on page 44.

We suggest you try all the different ways of programming the VCR when you have some leisure time, so you can learn how it works. That way, when an important show is going to be on that you really want to record, you'll be confident that your timed recording setup will work.

Types of Delayed Recordings

ONE TIME Records one show at a particular date and time.

DAILY Records a show at the same time every day of the week, Monday through Friday.

WEEKLY Records a show at the same day and time every week.

Your VCR can record up to 8 programs at different days and times, or up to 8 programs on the same day.

Before You Begin

Assemble the information you need for timed recording:

Be sure that the clock is set to the correct time.

Date and day of the program

Starting time

Ending time

Channel to be recorded

Blank or erasable videocassette (safety tab intact)

Delayed Recording Steps

You set up the delayed recording using the on-screen Easy Guide System.

Press the VCR PLUS+ button. The screen for VCR PLUS programming of the timer will appear. Press the VCR PLUS+ button again when this screen appears. The screen for manual programming of the timer will appear. Press number buttons 1, 2 or 3 for ONE TIME, DAILY, or WEEKLY RECORDING. Follow the white dashes "-" on screen to complete the programming.

Remember to press 0 before single-digit channel numbers, times, and dates - for example, 0 and 6 for channel 6.

After you enter the channel and time, the VCR automatically shows the current date or the next date, whichever is most logical. Leave the date as it comes up, or enter new digits for the month and day.

If you make a mistake when entering digits, press CLEAR repeatedly to return the white dash "-" to the digit to be corrected. Then, punch in the correct number. Illogical times and dates won't be accepted.

If you want to record from external equipment, press AVX button to select LINE1 or LINE2 instead of the channel number.

When everything is set as you want (even though white dashes "-" may still appear on some items), press VCR PLUS+ to program your settings into memory.

To preset additional recordings, repeat these steps.

Don't forget to load a videocassette to record on.

Your delayed recording settings take effect when you turn off the power on the VCR.

To Stop a Delayed Recording in Progress

Press POWER and then immediately - within 10 seconds - press the STOP button (use buttons on the remote or VCR as you wish).

An Example

Let's say you were interviewed today by a local TV reporter. You're eager to see yourself on the evening news tonight. The news comes on channel 8 at 6 o'clock--but you've got a meeting scheduled during that time. Luckily you just purchased this Hitachi VCR.

Press the VCR PLUS+ button. The screen for VCR PLUS programming of the timer will appear. Press the VCR PLUS+ button again when this screen appears. The screen for manual programming of the timer will appear. Then press 1 to bring up the screen for One Time recording:



Now fill in the blanks:

Select channel 8 by pressing 0 and 8 on the remote control.

Enter the start time by pressing 0, 6, 0, and 0 for 6 o'clock. Then press 2 for PM

Enter the end time, half past six, as 06:30. The VCR automatically selects PM for you.

The screen shows today's date, so no changes are needed on that line.

Press 5 to switch to SP because you want the best quality picture for this recording.

Everything is as you want it, so press VCR PLUS+ to set the program in memory.

Insert a videocassette, and power off the VCR. Check for the delayed recording indicator on the VCR's display. Prepare to admire yourself on the evening news.

If using a cable box the VCR can control, turn on the cable box before the time the recording is to begin.

If using a cable box the VCR cannot control, turn on the cable box and tune it to the channel you want to record before the time the recording is to begin.

Reviewing What You Have Programmed

You can look back over any of the recordings you have preset, and if you need to, clear out any of the programs. Normal programs will clear automatically once recording is complete, but daily and weekly settings must be cleared out manually.

Press GUIDE, then press 1 for the PROGRAM REVIEW option. This brings up the screen settings for the first program. Keep pressing 1 to cycle through all the programs you have preset.

To remove a program, press CLEAR. The screen will display the next program, if there are more, or it will switch back to regular TV viewing.

Programming Priorities

When you have set up several timed recordings, it may occur that some of their times overlap. For example, this can happen if you are set up to record shows on a daily or weekly basis, and a special show comes on that you try to record during the same time slot.

Shows with Same Starting Time

If the overlapping programs start at the same time, the VCR records in order that they were programmed. If the shows are all scheduled to start at 7 AM, the VCR starts with the first program at 7 AM, and switches to what remains of the second program when the first program is done recording, and so on.

Shows with Different Starting Times

If the programs start at different times, the VCR records the show scheduled to start earliest, records the entire show, then moves on to the show with the next earliest starting time.


To avoid recording only bits and pieces of different overlapping shows, review your programming and delete those shows that are not essential.

Basic Operations (VCR Plus + Recording)

Easy Delayed Recording with VCR Plus +

About VCR Plus+

This handy feature makes timed recordings a snap. You don't need to enter the specific channel, date, time, or duration of a program. All you enter is its PlusCode - a number of up to eight digits. This special code is easy to find in your favorite TV program guide or daily newspaper. Here's a sample page from TV Guide showing PlusCodes next to each program.

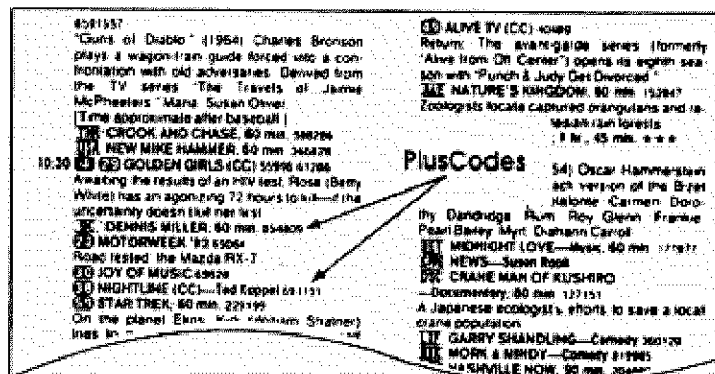

To get ready to record with VCR Plus+ you need to assign your local broadcast and cable channels to the VCR Plus+ channel codes already stored in your VCR's memory. This is called *channel setup*, and you do it using the on-screen Easy Guide System. The procedure depends on what kind of hookup you have. We'll give you step-by-step instructions. Then you will be ready to begin VCR Plus+ recording, also using the on-screen Easy Guide System.


VCR Plus+™ and PlusCode™ are trademarks of Gemstar Development Corp.

Channel Setup

Before You Begin

Channel setup is easy if you take care of these things first:

1. Make sure you have programmed the local TV channels into your VCR (page 25).
2. Look for a listing like the one below in your local TV program guide or Sunday newspaper TV section. Notice the small numbers to the right of the station name. These are the VCR Plus+ channel numbers that you will use in the channel setup procedure.

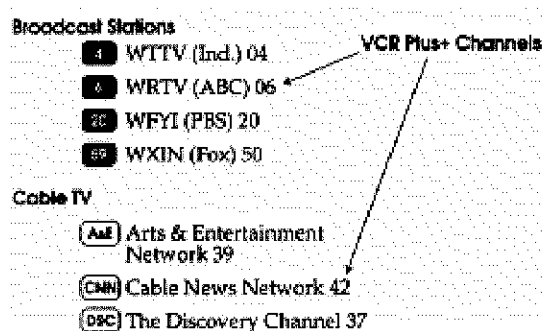


- If you don't get cable TV, make a list of all the broadcast channel numbers you receive on your TV - for example, channel 4 WTTV (Ind.), channel 20 WFYI (PBS).
- If you subscribe to cable TV, have your cable company's channel directory handy. This should list all the channels as you receive them in your home, for example:

Channel 34 Arts & Entertainment Network
 Channel 35 Turner Network Television
 Channel 36 ESPN


- Now you're ready to assign your local channels to VCR Plus+ channels in the VCR's memory. The way you do this depends on how your VCR is hooked up to the incoming RF signal. Decide which hookup you have from the diagrams below, and follow the setup instructions for your type of hookup.

Hint: Try several practice recordings after doing your channel setup. You should get the same channels as you usually watch at home.


Home antenna or Cable (no cable box)

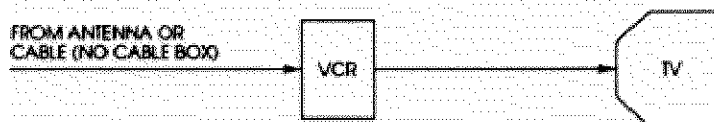


Cable with a cable box

 

Cable with a cable box and splitter (Cable box to unscramble all channels)

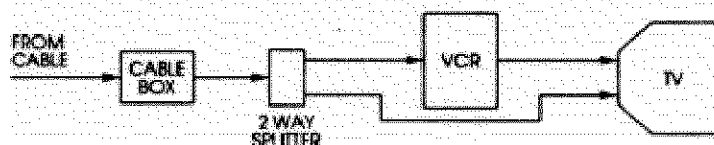

Cable with a cable box and splitter (Cable box to unscramble only pay channels)

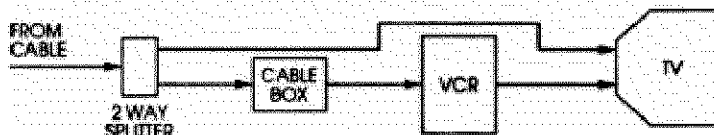

Home Antenna

If your VCR is connected directly to your home antenna, chances are you don't have to do any special channel setup. To find out, compare the VCR Plus+ channels in your TV program guide to your list of channels that you receive at home.

If any channel numbers don't match, follow the steps (page 47) to assign your local

channel numbers to VCR Plus+ numbers.

Cable (No Cable Box)

This is the channel setup to use if your VCR is hooked up directly to cable without a cable box.

Compare your local TV channel listing to your cable company's channel directory to find channels that need to be assigned to the VCR Plus+ codes. For example:


<i>Local TV Program Guide</i>	<i>Cable Company Channel Directory</i>	
A&E Arts & Entertainment Network 39	Channel 34 A&E	Compare
CNN Cable News Network 42	Channel 38 CNN	
DSC Discovery Channel 37	Channel 33 Discovery	

In the example above none of the cable channels match, all of them need to be assigned to VCR Plus+ channel codes.

Matching Broadcast CH Numbers to VCR Plus+ Channels for Home Antenna or Cable (No Cable Box) Setup

1. Press GUIDE, then press 4 to bring up the CHANNEL PRESET screen.
2. Press 4 to select VCR PLUS SETUP.


You will then see this display, as shown below.

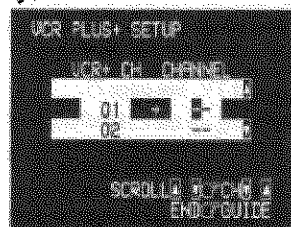

3. A small arrow points to a blank "--" in the CHANNEL column. If your broadcast channel number is the same as the VCR Plus+ channel in your TV listing, do not enter any number. Press CHANNEL up or down to position a nonmatching station next to the arrow.
4. If your broadcast channel number is not the same as the VCR Plus+ channel in your TV listing, use the number buttons to assign the broadcast channel to the corresponding VCR Plus+ channel.

If you enter a wrong digit, press CLEAR and enter the correct one.

In the example below broadcast channel #38 is assigned to VCR Plus+ channel #42.

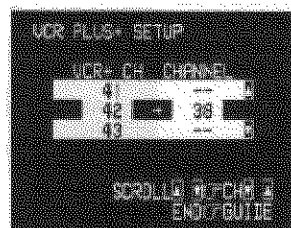


5. Repeat step 4 for all channels that need to be assigned.
6. Press GUIDE to end the setup procedure. You are ready to begin delayed recording with VCR Plus+.

Cable with a Cable Box or Cable with a Cable Box and Splitter Setup


Use this setup procedure if you receive all channels through a cable box. CABLE BOX

SET tells the VCR how to record or to view programs from the cable box. If your cable box can be controlled by a remote, the VCR may be able to tune it to the channel you want to record or to view. Before you begin, you need to know the output channel number for your cable box. Usually this is either 03 or 04, but it could be 02 through 13. Consult your cable company if you're not sure.


1. Connect the Cable Box, VCR and TV. See page 71.
2. Press GUIDE, then press 4 to bring up the CHANNEL PRESET screen.
3. Press 1 to select CATV2 with the CATV1/ANT/CATV2 setting, then press 5 to select "CABLE BOX SET" menu.
4. Press 1 to answer "YES" to the question "Is a cable box being used?" You will then see this screen:

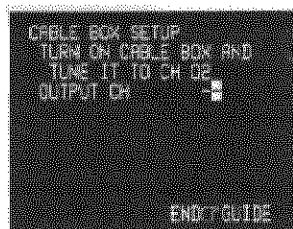

5. Turn on your cable box and tune it to channel 02.
6. Enter the output channel of your cable box by pressing a number on the remote. For example, press 0 3 for channel 3.

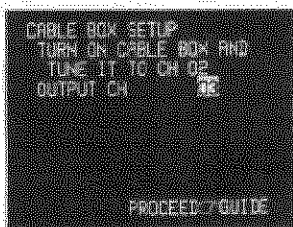

7. Press GUIDE to display the CABLE BOX TYPE message on the TV screen.

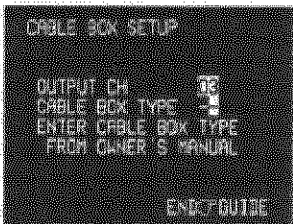

- Your VCR will now receive all channels from the cable box via output channel 03.
8. Enter your cable box type from the chart on page 50 by pressing two numbers.
 9. Press GUIDE to enter your cable box type. The VCR will change the cable box from channel 02 to channel 09 when you enter the correct code for your cable box.

10. Cable box tuned to channel 9: Press number 2 on the remote. Your cable box and VCR are now set for VCR Plus+ program recording. In most cases, you can use the remote's channel up/down control to change the channels on your cable box. (The VCR channel will not change, but the cable box will change channels.) Depending on the manufacturer of your cable box, certain models will allow you to enter the channel directly by using the numbers on the remote.

Cable box did not tune to channel 9: Press number 1 on the remote and enter a different code from the chart.

If these codes do not work:

Try repositioning the cable box on top of the VCR and reentering the codes.

Try entering all code numbers (00 - 61). Press CLEAR on remote to change incorrect entries.

If none of the codes work, press GUIDE to quit. The VCR will not control your cable box. However, the output channel of the cable box has been set. Turn on the cable box and leave it tuned to the channel you want to record some time before the recording is to begin.


Brand	Code Number(s)	Brand	Code Number(s)	Brand	Code Number(s)
Anvision	07, 08	NSC	09, 59	Scientific Atlanta	03, 22, 35
Cablestar	07, 08	Oak	01, 16, 28, 38	SL Marx	15, 18, 31, 36, 44, 53
Eagle	07, 08, 19, 26, 28, 32, 40, 41, 60	Oak Sigma	16	Stargate	15, 18, 31, 36, 44, 53
Eastern International	02	Panasonic	03, 27, 39, 44	Sylvania	11
GE	56	Philips	07, 08, 19, 26, 28, 29, 32, 33, 40, 41	Teknika	06
General Instrument	04, 05, 15, 23, 24, 25, 30, 36, 55, 61	Pioneer	18, 20, 44	Teleview	15, 18, 36, 44, 53, 59
Hamlin	12, 13, 34, 48, 58	Pulser	31, 53	Texscan	10, 11
Hitachi	37, 43	Randtek	07, 08	Tocom	17, 21, 49, 50, 54, 57, 61
Jerrold	04, 05, 15, 23, 24, 25, 30, 36, 45, 46, 47, 55, 61	RCA	00, 27, 39, 44	Unika	31, 32, 41, 53
Macom	37, 43	Regal	12, 13, 19, 40, 58	Universal	51, 52
Magnavox	07, 08, 19, 26, 28, 29, 32, 33, 40, 41	Regency	02, 33	Viewstar	07, 08, 19, 26, 28, 29, 32, 33, 40, 41, 59, 60
Movietime	09, 59	Rembrandt	53	Warner Amex	44
OC Electronics	31, 53	Samsung	15, 18, 27, 36, 39, 44, 53	Zenith	14, 42

Using VCR Plus+ to Record a Program

Now that your channels are set up, you can take advantage of this quick and easy method of delayed recording. You will use the on-screen Easy Guide System, following the basic procedure for delayed recording outlined on page 41. See the section on Recording a Program for recording tips and programming priorities.


You set up the delayed recording using the on-screen Easy Guide System.

1. Press the VCR PLUS+ to bring up this screen:

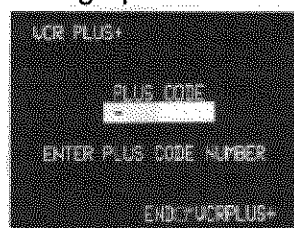

2. Use the number buttons to enter the PlusCode of the program you want to record. This code can be up to eight digits. If you enter a wrong digit, press CLEAR and enter the correct one.

3. If you accidentally enter a nonexistent PlusCode, the VCR gives you an error message that disappears from the screen in about 10 seconds.

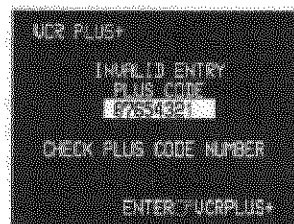


4. If you have entered the correct PlusCode, press VCR PLUS+ to store the PlusCode in the VCR's memory. This brings up another screen:



5. Press number buttons 1, 2, or 3 to select ONE TIME, DAILY, or WEEKLY RECORDING.

Important: Programming does not take effect unless you select one of these options.

6. When the next screen comes up, choose between standard or extended tape speed by pressing the 5 button. This is also a good time to check the channel number - it should be the one on which you usually watch the program at home. (If not, you need to check your VCR Plus+ channel setup.)

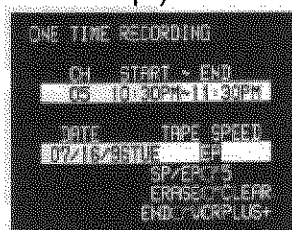

7. Review the screen to be sure everything is set as you want, then press VCR PLUS+ to complete your programming or continue with additional programs.

When you have set up all the timed recordings you want:

Don't forget to load a videocassette (with the safety tab still attached) to record on.

If using a cable box the VCR can control, turn on the cable box before the time the recording is to begin.

If using a cable box the VCR cannot control, turn on the cable box and tune it to the channel you want to record before the time the recording is to begin.

Important: Your timed recording settings take effect when you turn off the power on the VCR.

Caution on VCR Plus+ Recording

After entering a VCR Plus+ number, check the information displayed with the "PROGRAM REVIEW", if there is (are) any unnecessary program(s), please cancel. (page 43)

Basic Operations (Tape Navigation)**Tape Navigation**

Tape Navigation automatically stores the recording data (program title, recording date, recording start time, channel, recording time, etc.) in memory and displays it on the TV screen. You can see the contents of a tape at a glance so it is easy to locate the start of a program you want to view and also locate the beginning of the non-recorded section (for later recording).

Tape Navigation only functions when using a tape recorded by this VCR.

Tape Navigation stores tape data in memory. If the data is erased due to a memory defect, etc., the registered data will not be able to be recovered.

The tape data is not erased even if a power failure occurs or the power cord is unplugged from the AC outlet.

Quick Index of Tape Navigation Operation

1. To see the contents of a tape (tape data):

See "Displaying a Directory" on page 54. Prepare a tape recorded by this VCR.

2. To review the details of tape data in memory:

See the "DISPLAY TAPE NO. DATA" option on page 63.

3. To locate the beginning of the program you want to view or of the non-recorded section:

See "Locating the beginning of a program you want to view or a non-recorded section" on page 56. Prepare a tape recorded by this VCR.

4. To find how to store tape data in memory:

See "Storing tape data in memory" on page 58.

5. To clear tape data:

See the "DELETE TAPE NO. DATA" option on page 61.

You cannot erase the data of the tape loaded in the VCR. Eject the tape before performing the procedure to erase its data.

6. When you do not want to store a program title in memory:

See the "AUTO TITLE <ON/OFF>" option on page 60.

7. When you do not want to use Tape Navigation:


See the "TAPE DATA <ON/OFF>" option on page 59.

Displaying a Directory

1. Load a cassette recorded by this VCR. The VCR turns on automatically and the MENU button indicator on the VCR flashes. (It flashes to show that the tape data is being scanned.)

You cannot display the data of a cassette recorded by another VCR model or by a VCR other than this VCR. Be sure to use a cassette recorded by this VCR.

2. Turn the TV on and select the video channel (3 or 4).
3. Make sure that the green MENU button indicator on the VCR lights. (It lights to show that Tape Navigation is operational.)
4. Press the MENU button on the remote control or VCR. The directory will appear. The directory interpretation is listed on the next page.

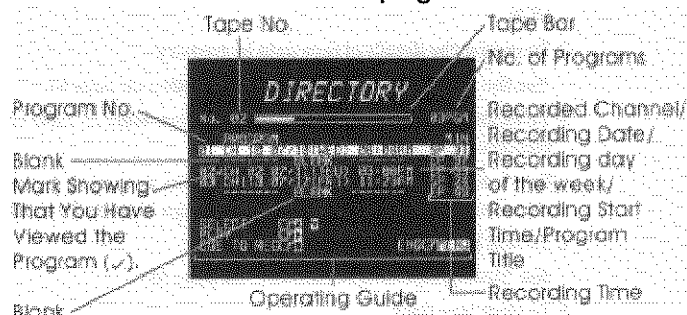

This VCR can store about 80 programs including blanks in memory.

There may be a difference of within about three minutes between the displayed recording time and the actual time.

The recording data may not appear even with a tape recorded by this VCR. In this case, perform the following:

A, Rewind the tape to the beginning and press the MENU button.

B, Rewind or fast forward the tape to the section which was recorded by this VCR, then press MENU.

Interpreting the Directory

Tape No.: Shows the tape control number

No. of Programs: Shows the number of recorded programs on the tape

Tape Bar: Shows the length of a recorded program and its location on tape.

Recording Time: Shows the actual recording time. If the tape speed (EP/SP) is changed during recording, the recording mode indicator is switched to "- -" and the recording time in the EP mode will be displayed.

Recording Channel/Recording Date/Recording Day of the Week/Recording Start Time/Program Title:

If the broadcast program does not have a program title signal, these will be displayed.

If the clock has not been set, "- - / - -" "- - : - -" will be displayed.

If you use a cable box to receive programs, the VCR's output channel is always displayed whichever channel is recorded.

When a broadcast program with a program title signal is recorded, program title appears. If the title is too long, all the title characters may not be displayed

Operating Guide: Shows the button names and the operations that can be done when the directory is being displayed.

Blank: Shows the non-recorded section (time for which a new recording can be made). **Displays the time for which recording is possible in the EP speed mode.**


Program No.: Shows the registered number of a recorded program. The selected number is displayed, inverted (in black against a white background).

Mark Showing That You Have Viewed the Program (✓):

Shows that you have already viewed more than half of the

recorded program.

Locating the Beginning of a Program You Want to View or a Non-recorded Section

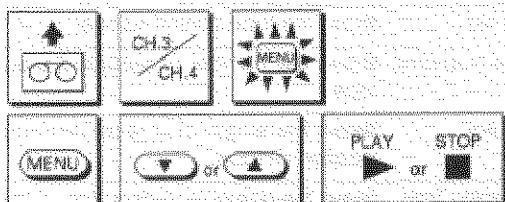


1. Insert a cassette recorded by this VCR.
- The VCR turns on automatically and the MENU button indicator on the VCR flashes.
2. Turn the TV on and select the video channel (3 or 4).
3. Make sure that the green MENU button indicator on the VCR lights.
4. Press the MENU button on the remote control or the VCR. The directory will appear.



5. Press the select ▼ or  button to select the program you want to view or a blank section.


For example, select 2.

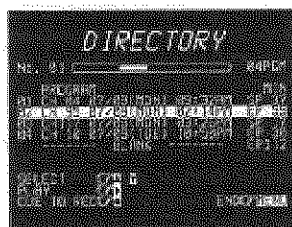

The selected number is displayed in black against a white background.


6. A: Press PLAY.

The following screen appears during searching for a program, then the program is played back automatically.

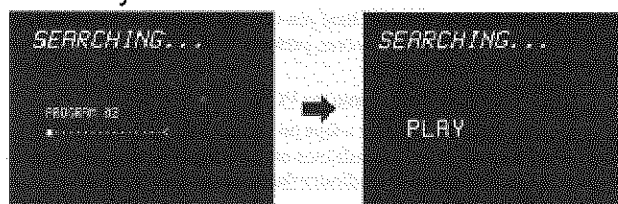

- B: Press STOP.

The following screen appears during searching for a program, then the tape stops automatically.

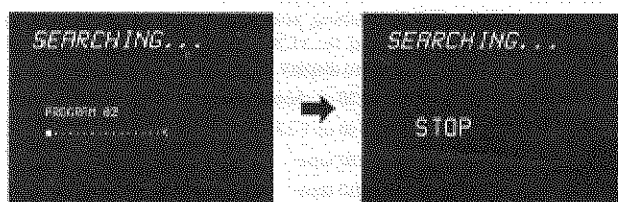

This is convenient when you are going to view a program later or locate the beginning of a blank section for recording.

Pressing STOP does not set the VCR to the recording mode automatically.

If you have selected a blank section in Step 5, press STOP. "BLANK" will appear on the TV screen for several seconds, then the tape will stop automatically at the beginning of the non-recorded section.

 
When you press the power button after selecting a program you want to view or a blank section of a tape in step 5, the start of the program or blank section is located, the VCR stops automatically and then turns off.

Storing Tape Data in Memory

Whenever this VCR records a program, tape data is stored in memory automatically. When you use a T-120 tape for recording, no special procedure is required. The first time you use a T-140, T-160, T-180 or T-210 tape to record with this VCR, however, perform the following operation to store the data in memory correctly.

1. Insert a cassette into the VCR.

When you insert a tape on which you will record first with this VCR, the MENU button indicator on the VCR flashes several times and goes out. Then the REM indicator flashes in the VCR's display.



2. When REM is flashing, press CLEAR to select the type of tape. Each time CLEAR is pressed, the VCR's display switches from no display to 160, 180, 210 and back to no display.



No display: T-120 or shorter tape

160: T-140 or T-160 tape

180: T-180 tape

210: T-210 tape



When using a tape other than the above, switch to no display.

REM flashes for about 10 seconds. Press CLEAR when it is flashing.

3. Make a recording or timer recording.

Record programs in sequence from the beginning of the tape.

If the recording time is less than five minutes in the SP mode (less than 15 minutes in the EP mode), the tape data is not stored in memory. If the type of tape specified is incorrect, the data is not stored correctly even when recording is performed for more than five minutes.

Once you have specified the type of tape, it is not necessary to specify it when you are going to record a program on the same tape again.

TAPE DATA <ON>/<OFF>

When you do not want to use the Tape Navigation feature, specify TAPE DATA <OFF> in the menu as follows. If a cassette is in the VCR, eject it before performing the following:

 
1. Press GUIDE, then press 5.

The "TAPE DATA MENU" will appear.



"TAPE DATA <ON>" is specified at the factory.

2. Press 1 to switch "1 TAPE DATA <ON>" to "<OFF>".



Specifying <OFF> disables the Tape Navigation feature. When "1 TAPE DATA <OFF>" is specified, the options "2 AUTO TITLE <ON/OFF>", "3 DELETE TAPE NO. DATA", and "4 DISPLAY TAPE NO. DATA" are not displayed.

Each time you press 1, <ON> and <OFF> alternate.


3. Press GUIDE after you are done with the set-up.

AUTO TITLE <ON>/<OFF>

When you do not want to store program titles in memory, specify "AUTO TITLE <OFF>" as follows.


1. Press GUIDE, then press 5.

The "TAPE DATA MENU" will appear.

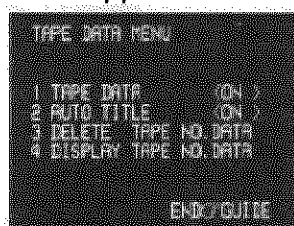

"AUTO TITLE <ON>" is specified at the factory.

2. Press 2 to switch "2 AUTO TITLE <ON>" to "<OFF>".

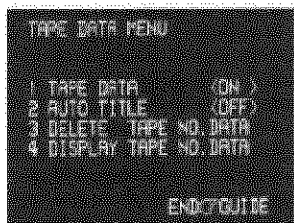

After <OFF> is specified, no program titles are stored in memory. Instead of a title, the recording date, recording start time and channel will be stored.

Each time you press 2, <ON> and <OFF> alternate.

3. Press GUIDE after you are done with the set-up.

DELETE TAPE NO. DATA

When you want to delete unnecessary tape data or the tape data memory becomes so

full that deletion of some tape data is crucial, use this option as follows.

You cannot erase the data of the tape loaded in the VCR. Eject the tape before performing the following:

1. Press GUIDE, then press 5.

The "TAPE DATA MENU" will appear.



When "1 TAPE DATA <OFF>" is specified, the options "2 AUTO TITLE <ON/OFF>", "3 DELETE TAPE NO. DATA" and "4 DISPLAY TAPE NO. DATA" are not displayed.

2. Press 3. The screen displays tape numbers, months, dates and days of the week of the last recordings made on the tape.




3. Press SELECT or button to specify the TAPE NO. you want to delete. Press SELECT for lower numbers and SELECT for higher numbers. For example, specify TAPE NO. 4.



4. Press 5. The detailed data of TAPE NO. 4 will appear.



5. Press 9 to clear the TAPE NO. 4 data.

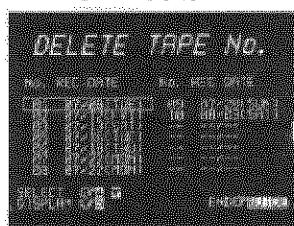


- If you want to delete other tape data continuously, perform Steps 3 - 5.
6. Press GUIDE after you have finished deleting.

DISPLAY TAPE NO. DATA

When you want to review the stored tape data, use this option as follows.

1. Press GUIDE, then press 5.

 The "TAPE DATA MENU" will appear.



When "1 TAPE DATA <OFF>" is specified, the options "2 AUTO TITLE <ON/OFF>", "3 DELETE TAPE NO. DATA" and "4 DISPLAY TAPE NO. DATA" are not displayed.

2. Press 4. The screen displays tape numbers, months, dates, and days of the week of the last recordings made on the tape.



3. Press SELECT ▼ or 0.0 button specify the TAPE NO. you want to review. Press SELECT 0.0 button for lower numbers and SELECT ▼ for higher numbers. For example, specify TAPE NO. 2.



4. Press 5. The detailed data of TAPE NO. 2 will appear.



If you want to review other tape data, press 5 again to restore the screen in Step 2. Perform Steps 3 and 4.

5. Press GUIDE after you finish reviewing tape data.

Cautions and Reference for Tape Navigation

VCR's displays:

When you insert one of tapes - below, REM flashes in the VCR's display.




Non-recorded tape


Tape recorded by another VCR
 Tape recorded with TAPE NAVIGATION <OFF>
 Tape whose tape data has been deleted

Screen displays:

When the MENU button is pressed with tapes - loaded, the following screens will appear.

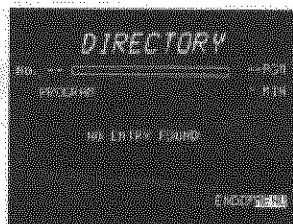

When the tape data memory becomes full, the following screens will appear when a recording is made or when the timer is programmed. Delete unnecessary tape data (See page 61).

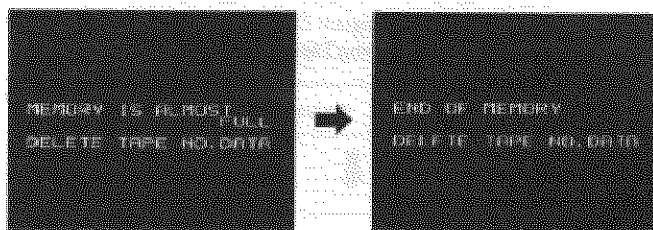

Dubbing:

Tape Navigation does not operate with tapes on which only audio is recorded or dubbed from a CDV (compact disc video).


Contents of data stored in memory when pause is engaged during recording:

The program number does not change even if pause is engaged during recording. If the channel is changed after pause is instructed, the program number will change.

Tape data when a new recording is made on a recorded tape:

Example 1


If you record program D on the tape where programs A and B were recorded using Tape Navigation for the same duration of time as program A:

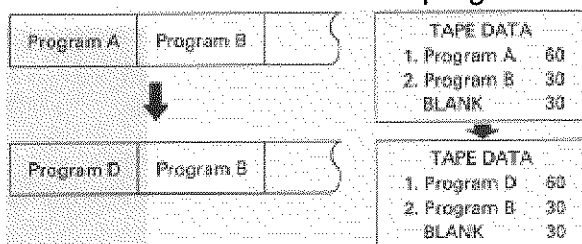

In other words, Program D will over write Program A (Program A is entirely erased).

Example 2

If you record program D on a tape on which programs A, B and C have been recorded using Tape Navigation:

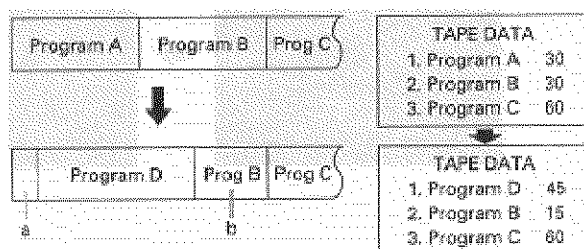


If the duration of time **a** is less than five minutes (15 minutes in the EP mode), nothing is displayed. If the duration is five minutes or more, it is displayed as Program A and the recording time is changed to time **a**.

If the duration of time **b** is five minutes (15 minutes in EP mode) or more, it is displayed as Program B. If the duration is less than five minutes, nothing is displayed

Example 3

If you record program D using Tape Navigation on a tape on which programs A, B and C were recorded by another VCR:

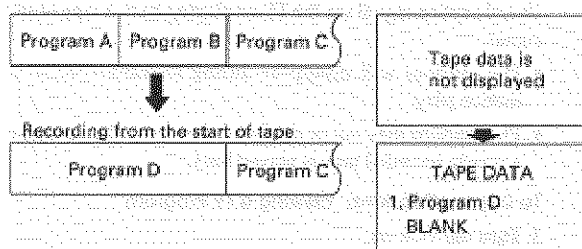

* Program C remains unerased, but BLANK is displayed.

Basic Operations (Displaying Captions)**Displaying Captions**

 
You can display captions on the TV screen when receiving a program with a closed caption signal via the TV or playing back a tape with a closed caption signal.

The captions will disappear during forward/reverse search and slow motion play.

The captions may not be displayed correctly when a tape with scratches or a poorly recorded tape is played back.

To Display Captions: Viewing a TV Program

1. Turn the VCR on.
2. Turn on the TV and select the video channel (3 or 4). Or, if you are hooked up to a direct audio/video cable, set the TV to AUX or VIDEO.
3. Press the CHANNEL buttons to select the program you want to view.
4. Press the CC button on the remote control. The following screen will appear and the captions will be displayed after several seconds.



Each time the CC button is pressed, the screen will alternate between CC ON and CC OFF.

To Display Captions: Viewing Tape Playback

1. Turn the VCR on.
2. Insert a tape with a closed caption signal into the VCR.
3. Turn on the TV and select the video channel (3 or 4). Or, if you are hooked up to a direct audio/video cable, set the TV to AUX or VIDEO.
4. Press PLAY to playback the tape.
5. Press CC button on the remote control.

You can also use an external input to display captions. Use this function when playing a video source including a laser disc with a closed caption signal. The captions may not be displayed when you use a laser disc player with a digital memory function.

The captions can be displayed even with a tape dubbed from another tape with a closed caption signal.

Advanced Operations

This section explains how to use the VCR's remote control to operate your TV. It also shows you how to hook up a cable box and how to connect a stereo or a second VCR for a complete home entertainment system.

Controlling Your TV with the VCR's Remote

Compatibility

The remote control is designed to be compatible with many televisions, but will not work with every one made. If your TV does not respond the way it should when you program it as explained below, this remote may be incapable of operating it.

Once you have programmed the remote, you won't have to do it again until you change the batteries.

This Hitachi remote control can be used with your TV as well as the VCR, as long as your TV comes with a remote control. This feature comes in handy - you don't have to juggle two remotes.

The remote control is compatible with the fifteen makers of TV's listed below - but don't be alarmed if yours is not on our list. You may still be able to program the remote for your TV.

Every TV that comes with a remote control is set up to detect certain infrared signals. You need to program the VCR's remote control to send signals that your TV will recognize and respond to. Here's what to do:

Programming the Remote Control

Turn the television on (any channel is okay).

Aim the VCR's remote control at your TV set. Hold down the TV button (not the VCR/TV button) while you press the number corresponding to your brand of television as shown in the chart (page 70).

For example, if you have an RCA television, press TV and 0 at the same time. If this button combination sends a signal that matches with your TV, the channel will change on the TV, and you'll know the remote is set to control the television.

If that button combination does not change the TV channel, go through the whole list of button combinations one by one until you find the one that does change your TV channel.

Also, if your brand of TV is not listed in the chart, try all the number buttons. One of them may work for you.

If the TV channel still doesn't change after going through all the button combinations listed, it is likely that you will not be able to program this remote control for your TV.

TV Brands	Press TV and This Number
-----------	--------------------------

Hitachi	1
Zenith	2
Sony	3
Magnavox	4
Sanyo	5
Gold Star 1	6
Toshiba	7
Gold Star 2	8
Panasonic 2	9
RCA	0
Panasonic 1	CHANNEL (up arrow)
Mitsubishi	CHANNEL (down arrow)
JVC	100/ENT
Sharp 1	LAST CH
Sharp 2	DISPLAY

Controlling the TV

Once programmed, the VCR's remote control is ready to control the TV.

First press TV to change to the TV function mode, then press the button of the TV function that you want.

For example, press TV and the CHANNEL up arrow, and the TV station will change to the next higher station.

Press VCR to operate your VCR with the remote again.

Be aware that not all of your TV's functions may work even though the remote control is correctly programmed.


Advanced Operations (Cable Box Hookups)**Hooking Up to a Cable Box**

The cable box brings all the advantages of pay cable, but finding a satisfactory hookup can be challenging. To sort out what to do, we suggest a step-by-step approach to installation.

Before you begin, take a close look at the back of your TV to see where cables are currently connected. You may need to reconnect them that way later. As an aid to memory, use masking tape to label each cable and connection.


Cable Box Position

Position a remote-controllable cable box on top of the VCR as shown (slanted position). Be sure not to block any of the VCR's ventilation holes.

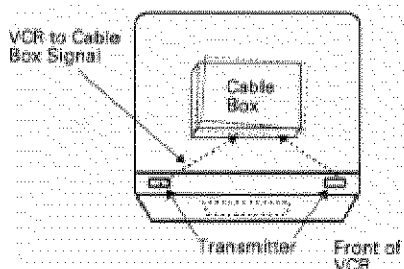**A. Basic Hookup**

Use this hookup for a simple connection which requires fewer accessories.


1. **Push the ANT. OUT button to display RF-3 or RF-4** (See page 14).
You will tune the TV to this channel and use the VCR/TV button to watch the VCR.

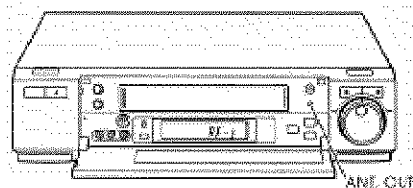

2. **Connect as shown.**

This connection may require additional accessories which are not provided.

3. **Plug in power cords of VCR, TV, and cable box.**

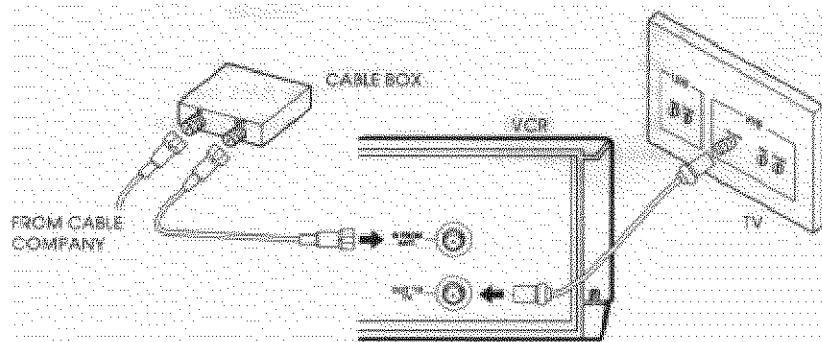

Check all the TV and VCR functions.

B. Advanced Hookup (Cable Box to Unscramble All Channels)

Use this hookup for slightly improved picture quality and more convenient operation - use of VCR/TV button is not required.

1. Connect as shown.

This connection requires additional accessories which are not provided.

2. Plug in power cords of VCR, TV, and cable box.

You will tune the TV to its video input to watch the VCR.

Illustration of Hookup

If your cable box has audio/video output jacks, you can also connect the audio/video output of the cable box and the audio/video input of the VCR. With this connection, press the AVX button to select L1 as the input channel for the VCR to receive audio/video signal from the cable box (see page 48).

C. Advanced Hookup (Cable Box to Unscramble Only Pay Channels)

Use this hookup for slightly improved picture quality and more convenient operation - use of VCR/TV button is not required.

1. Connect as shown.

This connection requires additional accessories which are not provided.

2. Plug in power cords of VCR, TV, and cable box.

You will tune the TV to its video input to watch the VCR. All pay channels are viewed through the VCR.

Illustration of Hookup

Advanced Operations (Stereo System)**Integrating Your Stereo System**

There are several reasons to consider hooking up your stereo system with your TV and VCR.

If your TV does not have stereo, you can get stereo quality from your VCR by hooking it to your stereo receiver.

Even if your TV does have stereo, you can get better sound by taking advantage of your stereo's better speakers.

You can record stereo audio on your VCR for longer play times, or use the VCR as an extra tape deck for dubbing.

Hookup**Stereo System Hookup**

To make this hookup, you need to be familiar with the options on your stereo system. Look at the back of your receiver. Probably you have AUDIO IN and OUT jacks for a second tape deck - labeled Tape 1 and 2, or AUX 1 and 2. Consult your stereo owner's manual for further information.

You will need two audio cables - the kind with two color-coded plugs on each end (for left and right audio channels). With the power off:

Connect the right (red) and left (white) AUDIO OUT on the VCR to the right and left AUDIO IN on the stereo system.

Connect the left and right AUDIO OUT on the stereo to the right and left AUDIO IN on the VCR.

The AUDIO IN (left) on the front of the VCR handles the left-channel or monaural sound. If you connect an audio source only to AUDIO IN (left), both left and right hi-fi tracks will record an audio signal as monaural.

¹Recording from Your Stereo System

With the hookup just shown, you can use your VCR to record a custom program of selections from your stereo library. The videotape recording will give you excellent stereo quality and a long-running tape. In this case no video will be recorded, so you can do the whole thing without turning on the TV.

Assemble the selections you want to record on the stereo, and insert a blank VHS cassette into the VCR. Be sure that HIFI is selected in the VCR SETUP screen (See page 26).

Press DISPLAY, then press 5 on the remote control to select SP or EP. The EP setting gives you reasonable audio quality and a longer tape program.

Press AVX on the remote control to turn the LINE (L1) indicator on.

Press REC/IRT on the VCR and start the stereo system audio source (Tape, CD, etc.).

To stop recording, press STOP. To play back the recording, rewind the tape and press

PLAY.

Advanced Operations (Second VCR)**Integrating a Second VCR**

With another VCR hooked up, you can copy videotapes as needed, and you can get fancy with multimedia programming. For this discussion, we refer to the model VT-UX605A Hitachi as VCR2 and the other unit as VCR1.

Hookup

To hook up a second VCR, you need:

- A video cord with a single jack on each end, and
- An audio cord with two jacks on each end, or
- A three-way cord that has both audio and video jacks

Study the back of VCR2 (VT-UX605A) to find the three color-coded jacks that are labeled IN. The yellow jack is for video, red and white are for audio. Locate similar jacks on VCR1. Then, with the power off:

Connect VIDEO OUT on VCR2 to the yellow VIDEO IN on VCR1.

Connect the AUDIO OUT jacks (left and right) on VCR2 to the AUDIO IN jacks (left and right) on VCR1. Be sure to match left to left (white) and right to right (red).

Second VCR Hookup

Copying from One VCR to Another (Dubbing)

Consider VCR1 the recording VCR, and VCR2 (VT-UX605A) the playback VCR. You will play a tape on VCR2 and record it on VCR1. To begin copying:

Insert the videotape you wish to record in VCR2.

Insert a blank or erasable tape (with the safety tab intact) into VCR1.

Press AVX on VCR1--the LINE indicator will display.


Press REC on VCR1, and press PLAY on VCR2.

To monitor the picture as you record, VCR1 must be connected to your TV (follow instructions in the other VCR's manual). Press the VCR/TV button on the remote. The VCR indicator will light on VCR1's display and you can view the picture being recorded.

Audio Dubbing

Audio dubbing is a procedure whereby you can replace sections of the linear audio track on your tape with new audio information. During audio dubbing the video section and the Hi-Fi audio section will not be disturbed, only the linear audio track. (see page 27 "Choosing a Mode for Audio Playback" for more information)

The new audio information can come from either a receiver,²a microphone, or any other device that can generate an audio signal.

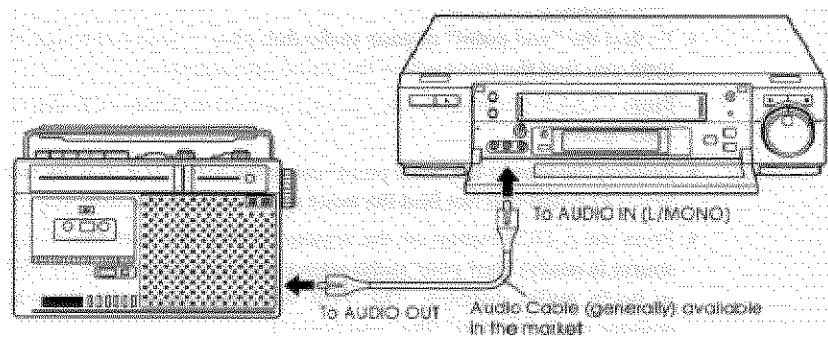

Advanced Operations (Audio Dubbing)**To begin dubbing**

First connect the audio source to the audio input jacks on the front of your VT-UX605A. (See page 77)

Be sure that the record safety tab is not missing.

Recording Monaural Sound

If you are recording monaural sound you will only use one jack. Connect your plug to the left jack marked AUDIO IN (L/MONO). This jack inputs monaural sound to both the left and right channels.

Press the AVX button (located on the remote control) to select L2 (Line 2) which appears in the VCR's channel display.

Press GUIDE , then press 2 to bring up the VCR SETUP screen.

Set item 4 HIFI / MIX / LINEAR, to the "LINEAR" setting. (See "Setting Up Your VCR for Each Function Using the Menu Screen" on page 26 for more information)

Find the place on the tape which will become the beginning for your audio dub. This can be done using the PLAY button and the SHUTTLE dial. Pause the tape when you reach your start point.

Press the DISPLAY button (located on the remote control) to display the counter reading in the VCR's display. The number shown will be your "start point".

To find the "end point" of your audio dub play or search through the tape until you find the place where the audio dub will stop.

Press CLEAR (located on the remote control) and the VCR display will read "0:00:00".

Rewind the tape to the "start point" using the SHUTTLE dial. By using the SHUTTLE dial you can find the exact spot you wish the dubbing to start.

Press the A.DUB button on the remote control. (Be sure that your audio source is ready) Start your audio source and then press the PAUSE button to begin audio dubbing. The VCR will stop automatically when the counter reads "0:00:00" (the "end point").

After Dubbing, Select the Type of Audio for Listening


To hear the sound that was dubbed, select "HIFI / MIX / LINEAR <LINEAR>" following "Setting Up Your VCR for Each Function Using the Menu Screen" on page 26.

To hear the dubbed sound and the sound before dubbing simultaneously select "HIFI / MIX / LINEAR <MIX>" following "Setting Up Your VCR for Each Function Using the Menu Screen" on page 26.

Advanced Operations (Video Dubbing)**Video Dubbing**

Video dubbing is a procedure whereby you can replace sections of video on your tape with new video information. The dubbing erases the old video while laying new video in its place. During video dubbing the Hi-Fi audio section will be erased but dubbing will not affect the audio recorded onto the linear track. (See page 27 "Choosing a Mode for Audio Playback" for more information)

The new video information can come from either a camcorder, another VCR, or any other device that can generate a video signal.

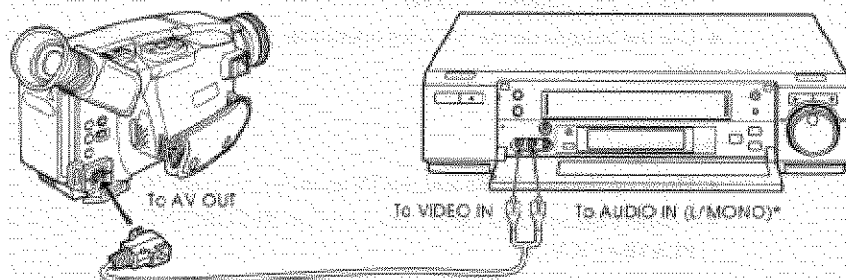

* When an audio cable is connected to the AUDIO IN jacks, new audio signals can be recorded on the Hi-Fi tracks.

To begin dubbing

First connect the video source (camcorder, VCR, etc.) to the input jacks on the front of your VT-UX605A. (See example above)

Press the AVX button (located on the remote control) to select L2 (Line 2) which appears in the VCR's channel display.

Find the place on the tape which will become the start point for your video dub. This can be done using the PLAY button and the SHUTTLE dial. Pause the tape when you reach your start point.

Press the DISPLAY button (located on the remote control) to display the counter reading in the VCR's display. The number shown will be your "start point".

To find the "end point" of your video dub play or search through the tape until you find the place where the video dub will stop.

Press CLEAR (located on the remote control) and the VCR display will read "0:00:00".

Rewind the tape to the "start point" using the SHUTTLE dial. By using the Shuttle dial you can find the exact spot you wish the dubbing to start.

Press V.DUB button on the remote control. Then press the PAUSE button to begin video dubbing. The VCR will stop automatically when the counter reads "0:00:00" (the "end point").

Advanced Operations (Synchro Edit)**Synchro Editing**

Tape copying is much easier if you can connect RECORDING VCR and PLAYBACK VCR with a synchro edit cable. This lets you use a single set of control to govern both VCRs.

We assume that RECORDING VCR is your model VT-UX605A.

The other VCR must be a Hitachi and must have a jack labeled EDIT. This is the PLAYBACK VCR.

You will need to purchase a synchro edit cable. Ask for part number VTCH40S.

Use the buttons on the VCR for operation. Do not operate the remote control.

Hookup

Hook up the two VCRs and the TV as shown on page 76.

Connect the synchro edit cable from EDIT on RECORDING VCR to EDIT on PLAYBACK VCR.

Hookup Illustration

Synchro Edit Procedure

Turn the power on both VCRs and the TV.

Insert the cassette you want to copy into PLAYBACK VCR.

Put PLAYBACK VCR into PLAY mode. Locate the place on the tape where you want to begin copying, put the VCR into PLAY-PAUSE mode.

Insert a cassette (with its safety tab intact) into RECORDING VCR. Put this VCR in RECORD-PAUSE mode, and press AVX to put it in LINE mode.

Put PLAYBACK VCR into PLAY mode to start the recording. Both tapes will start together.

Put PLAYBACK VCR into PLAY-PAUSE mode when you want to stop. Both VCRs will pause.

Now fast-forward, rewind, or play the tape in PLAYBACK VCR to find the next segment you want to copy.

Put PLAYBACK VCR into PLAY-PAUSE mode and put the VCR into PLAY mode again -- recording will continue.

Press the stop buttons on both VCRs when you are finished.

This procedure won't leave index marks unless you press stop button then REC between sections recorded (more about index marks on page 36 and 39).

Putting the Record VCR in Pause

Some models of VCR will switch to the "STOP" mode if they are left in the RECORD/PAUSE mode for more than five minutes. It is a good idea not to leave your recording deck in RECORD/PAUSE for more than five minutes so that this will not happen.

Advanced Operations (Camcorder)**Copying Tapes From A Camcorder**

If you would like to copy a video tape shot in your camcorder onto your VCR, here's how to do it.

Connect the camcorder's AV output cable to your VCR. (see diagram below)

Camcorder to VCR Hookup Illustration

* It is not necessary to connect the S-VIDEO jack.

Press the AVX button on the VCR's remote control so that the L2 (Line) indicator appears in the VCR display.

Press REC/IRT on the VCR to start recording.

Press PLAY on your camcorder to start copying your tape.

Information on Audio Hookup

If your camcorder is only capable of monaural output (one audio jack) connect it to the AUDIO IN L/MONO input on the front of the VCR.

VCR Care and Servicing

The VCR is fairly self-servicing, but you'll want to keep an eye on a few things as you go. In addition, you may sometimes have troubles with your VCR. We offer some suggestions for care to prevent problems, ways to troubleshoot, and places to contact when you cannot solve the problems yourself.

Routine Cleaning**Head Cleaning**

The heads are tiny mechanisms in the VCR that pick up the video signal as a videotape passes over them. In time, a residue of electromagnetic dust builds up on the heads because of contact with the tape. This dust interferes with the signal being picked up. Your Hitachi VCR automatically cleans the video heads whenever a cassette is loaded or ejected and when a cassette is already inside the VCR when you turn the power off. It also self-cleans during fast-forward and reverse play. You will hear a mechanical sound during auto head cleaning.

Even with the auto head cleaning system, dirt can build up on the heads. If the picture is blurry during playback, or is occasionally interrupted or blanks out, try playing different cassettes to see whether you get the same picture problems. If the picture problems persist, the heads may need to be cleaned professionally. Consult your VCR dealer for the name of trained service technician near you.

Periodic Maintenance

Your Hitachi VCR is a precision electro mechanical device which requires professional maintenance after a period of normal use.

Usually no maintenance other than head cleaning is required during the warranty period, unless the VCR is used either heavily or infrequently. Defective parts are covered during the warranty period, but normal maintenance is your responsibility. Consult your VCR service center to find out what they recommend as normal maintenance based on your location, how you use the VCR, and the age of the machine.

Care and Servicing (Problems)**If the VCR Doesn't Work Right**

Many operational problems are easily remedied by reviewing the instructions in this manual and trying out some different controls and settings. The chart on page 85 covers the more common problems that new VCR owners encounter.

Don't Attempt Repairs Yourself

Do not remove the cover or the back of the VCR - this will void the warranty and endanger your safety. The exposed uninsulated voltage in this unit may be high enough to cause electrical shock. It is dangerous to make contact with any inside part, and none of these parts are intended to be serviced by an untrained user. To be safe, refer service problems to qualified service personnel.

Technical Specifications

Format:	VHS
Video Signal System:	NTSC color EIA standard
Record/Playback System:	Video: 4 Heads Audio: VHS Hi-Fi stereo record/playback system
Tape Speed:	33.35 mm/sec (SP), 16.67 mm/sec (LP)(playback only), 11.12 mm/sec (EP)
RF Input:	UHF/VHF 75 ohm
Tuner:	USA: 181 channel tuning ability* (125 cable channels) Canada: 178 channel tuning ability* (122 cable channels)
Type:	Auto programming frequency synthesis
Power Input:	AC120V 60Hz
Power Consumption:	23W nominal
Cabinet Size:	17-1/8" (W) x 3-7/8" (H) x 12-5/8" (D) 43.5 cm (W) x 9.9 cm (H) x 32.1 cm (D)
Weight:	10.4 lbs. (4.7 kg)
Storage Temperature:	-4° F to 131° F
Operating Temperature:	41° F to 104° F
Accessories:	1 coaxial cable (Part No. EW10522), 1 remote control unit (Part No. HL10334), 2 AA batteries 1 audio/video connection cord (Part No. EW10141)

* Check your cable company's compatibility requirements.

For more information about how to obtain these accessories, please call TOLL FREE 1-800-448-2244 for your nearest Hitachi Authorized Parts Distributor in the continental United States. For ALASKA and HAWAII, please contact the nearest Hitachi Regional office.

Design and specifications subject to change without notice.

Often Encountered Problems

<u>Problem</u>	<u>Things to Check</u>	<u>Solution</u>
No Power.	Power cord plugged in?	Connect the power cord to AC outlet.
Delayed recording does not work.	Program set to the correct channel?	Reset the delayed recording.
	Program time and date set correctly?	Reset the delayed recording.
	VCR power turned off?	Turn power off to activate the timer.
	Safety tab removed from the videocassette?	Put cellophane tape over the tab area, or use a videocassette with the safety tab intact.
Delayed recording does not work even when the clock is set correctly.	Clock set to "--:--"?	Set the time, then program delayed recording.
	Has power failure of more than one hour occurred?	When the auto clock set function is operating, the time may be reset even after a power failure of more than one hour. However, programmed delayed recordings will have been cleared and must be reset.
Does not record when you press REC.	Safety tab removed from the videocassette?	Put cellophane tape over the tab area, or use a videocassette with the safety tab intact.
TV program cannot be viewed or recorded.	Loose or inappropriate connections between VCR and TV?	Review hookup directions and make correct, firm connections.
VCR's display lights for several seconds after the power is turned off.	Was "1 CLOCK SET <AUTO>" specified from the CLOCK SET screen?	The auto clock set function is operating. This does not indicate a fault.

<u>Problem</u>	<u>Things to Check</u>	<u>Solution</u>
-----------------------	-------------------------------	------------------------

Poor picture quality ("noise") during playback.	TV channel selector on the proper channel?	Set TV to channel 3 or 4 as correct for your area. (Set TV to AUX or VIDEO if you have a direct video hookup.) Fine tune the TV. Press 1 or 4 button to adjust tracking.
	Is TV correctly tuned? Static lines through the picture? "Noisy" picture despite all previous adjustments, even when playing different cassettes?	Have video heads cleaned by a qualified service technician.
No picture during viewing	TV set to the correct video channel?	Set TV to channel 3 or 4
TV cannot be operated by the VCR's remote control	Is VCR remote control programmed for your TV?	Follow instructions in Advanced Operations to program the remote to send signals that your TV can recognize. (Not all TV brands are compatible.) Press the TV device button, then press the button corresponding to the TV function you want.
	Is remote control set to control the TV?	
Cannot store tape data in memory	Was 1 TAPE NAVIGATION <OFF> specified in the TAPE NAVIGATION MENU?	Switch it to <ON>
	Is the recording time too short?	Data is not stored in memory when the recording time is less than 5 minutes (less than 15 minutes in EP mode).
	Is tape data memory full?	Delete unnecessary tape data

LIMITED WARRANTY

Hitachi Home Electronics (America), Inc. and Hitachi Sales Corporation of Hawaii ("Hitachi",) warrants this component in duration as stated below:

- * **VIDEO CASSETTE RECORDER**
- * **CAMCORDER**
- * **AC ADAPTER CHARGER**

- * **90 DAYS LABOR (Carry-in)**
- * **1 YEAR PARTS (Except Battery)**

Conditions of Hitachi Limited Warranty

Hitachi Video Products are warranted to be free of defects in parts and workmanship at the time of purchase by the original owner. If this product is found to be defective, Hitachi will repair or replace defective parts at no charge to the original owner. Parts used for replacement are warranted for the remainder of the original Limited Warranty period. For 90 days from the date of original purchase, Hitachi will provide labor for the repair or replacement of defective parts without charge, subject to the following conditions:

1. Owner must provide verification of the date of purchase when requesting Limited Warranty Service. (Dated Sales Receipt Required)

2. All repairs must be performed by a Hitachi Authorized Service Facility.

For information concerning repairs, operation, technical assistance or for referral to the location of your nearest Authorized Service Facility or Parts Distributor, call 1-800-HITACHI (1-800-448-2244)

HITACHI HOME ELECTRONICS (AMERICA), INC.

3890 Steve Reynolds Blvd.

Norcross, GA 30093

Tel: 404-279-5600

HITACHI SALES CORPORATION OF HAWAII

3219 Koapaka St.

Honolulu, HI 96819

Tel: 808-836-3621

HITACHI WARRANTY CARD (USA Back)**Warranty Limitations**

The Limited Warranty provided by Hitachi does not cover:

- A. Cabinet (exterior finish items), Battery Packs, Accessories, Head Cleanings, Video Tape Damage, or TV Set Modifications.
- B. Any defect, malfunction, or failure caused by or resulting from improper service, maintenance, repair, use of Video Cleaning Cassettes, or from abuse, neglect, accident, or any other cause beyond the control of Hitachi.
- C. Unpacking, set-up or installation, adjustment of customer operated controls, user instruction.
- D. Any product with Serial Numbers altered or removed.
- E. New products purchased or service performed outside of the continental United States or its possessions.
- F. Product used for a commercial or industrial purpose.

NO PERSON, AGENT, DISTRIBUTOR, DEALER, SERVICE FACILITY, OR COMPANY IS AUTHORIZED TO CHANGE, MODIFY, OR AMEND THE TERMS OF THIS LIMITED WARRANTY IN ANY MANNER OR FASHION WHATSOEVER, EXCEPT AND TO THE EXTENT PROVIDED IN THIS LIMITED WARRANTY, HITACHI MAKES NO EXPRESS WARRANTY REGARDING THIS HITACHI PRODUCT. FURTHER, ALL IMPLIED WARRANTIES RELATING TO ANY PORTION OF THIS PRODUCT, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO 90 DAYS FOR LABOR AND TWO YEARS FOR PARTS, THE DURATION OF THE APPLICABLE EXPRESS WARRANTY CONTAINED ABOVE HITACHI SHALL NOT BE LIABLE TO THE PURCHASER OR TO ANY OTHER PERSON FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSS OF PROFIT OR PRODUCT RESULTING FROM ANY DEFECT IN OR MALFUNCTION OR FAILURE OF THIS HITACHI PRODUCT. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Important Notice:

Retain your sales receipt for warranty purposes. Please complete the section below for your records as it may be needed in the event of loss.
Attach sales receipt to this card.

VIDEO PRODUCTS LIMITED WARRANTY REGISTRATION

(for your record)

Model No.

Serial No.

Date of Purchase

Dealer Name

Dealer Address

City State Zip

HITACHI

HITACHI WARRANTY CARD (Front) CANADA ONLY

NOT VALID IN U. S. A.

HITACHI

VIDEO PRODUCTS GOLD CARD WARRANTY

*** See inside for the GOLD CARD advantages and how to get it.**

HITACHI

EXCEPTIONAL PERFORMANCE

HITACHI (HSC) CANADA INC.

3300 Trans Canada Highway, Pointe Claire, Quebec H9R 1B1

IMPORTANT NOTICE: This warranty will not apply to products purchased outside of Canada OR sold by any organization other than HITACHI (HSC) CANADA INC.

PROTECTION PLAN CONDITIONS

A - This contract is exclusively for products manufactured and sold by Hitachi (HSC) Canada Inc., hereinafter called "Hitachi", purchased in Canada from a dealer duly accredited by Hitachi. The program is available only for products covered by an original validated Hitachi warranty given at the time of the purchase.

B - Hitachi will make repairs to the product mentioned in this plan, parts and labour charges included, until the expiry date of this plan.

C - THIS PROTECTION PLAN WILL BE IN FORCE ONLY AFTER EXPIRATION OF THE NORMAL PURCHASER'S WARRANTY. During the normal warranty the only valid proof required for servicing the product is the Hitachi GOLD CARD or the bill of purchase. The Protection Plan Card cannot be used as proof of warranty.

Only after the expiration of the normal warranty, the owner can have the product repaired, without charge at any authorized Hitachi Service Center upon presentation of the Protection Plan Card.

D - This Protection Plan is applicable to the product mentioned excluding the accessories such as cables, batteries, etc.

E - THIS PROTECTION PLAN DOES NOT COVER:

- (1) Damage caused by incorrect use or negligence, unauthorized alteration, improper storage or repairs done by an unauthorized service depot;
- (2) Damage caused by fire, flood, lightning, acts of God or other events beyond the control of Hitachi;
- (3) External parts such as the cabinet, knobs, remote control case, antenna, cords, etc....;
- (4) Any repairs if the product is used for rental or other commercial use.
- (5) Any repairs done outside Canada;
- (6) Repairs due to damage in transit, improper handling by carrier or improper packing by the owner (specifically applicable in the case of the product having to be shipped by the owner);
- (7) In Home service. All video products must be brought to the Service Center for repairs;
- (8) Original installation and any subsequent reinstallation or any transformation of the product;
- (9) The replacement of the video camera pick-up element, if the pick-up element has been over exposed to an intense source of light;
- (10) Cleaning the video heads.

F - All repair costs must be claimed from Hitachi, at all times, through an authorized Hitachi Service Center. The Plan Owner should never directly pay the authorized Service center unless given special authorization from Hitachi. No repair costs will be reimbursed directly to the Plan Owner.

G - The Plan Owner will receive a PLATINUM CARD which is the only valid document to be presented at the time of repair to an authorized Hitachi Service Center. THIS PROTECTION PLAN IS NOT TRANSFERABLE NOR REFUNDABLE.

H - This Protection Plan can be renewed as long as the request is made before the expiry date of the Plan. Hitachi, however, reserves the right to refuse any renewal.

I - Hitachi reserves the right to cancel the Protection Plan in case of abuse by the owner, in such case, Hitachi will reimburse the owner the portion of the plan cost, based on the period used.

J - This plan does not constitute an insurance policy. It is the owner's responsibility to insure for loss of the product and for any damages which might occur and for loss or damages to any other object and for personal or property liability caused directly or indirectly by the product.

HITACHI CANADA WARRANTY CARD (Back)

Hitachi VIDEO PRODUCTS are guaranteed to be free from defects in workmanship and material. If any failure resulting from either workmanship or material defect should occur under normal and proper usage within the period stated hereunder from the original provable date of purchase, such failure should be repaired at no cost to the buyer, provided the defective product is brought to a HITACHI AUTHORIZED SERVICE CENTER in Canada.

NOTE: The GOLD CARD becomes the proof of your warranty. It assures you of a personalized quality service and it is accepted by our authorized service centres everywhere in Canada.

However, to receive your exclusive Hitachi GOLD CARD, you must include a copy of your bill of sale with the return portion of this warranty registration card.

"GOLD" WARRANTY PERIOD

Video Tape Recorder, Tuner, Timer, 1 year parts and labour.

Camera, camcorder, AC Adaptor, Charger, 1 year parts and labour.

All goods returned to either Hitachi or a Hitachi Authorized Service Center must be shipped on a "PREPAID BASIS". To avoid any damage to the returned goods, please ensure that proper packaging procedures are followed. A short written description of the problem along with proof of warranty should accompany the product returned for repair. Only products under warranty will be returned on a no-charge basis to the customer. The customer is responsible for all transport costs if the product is no longer under warranty.

WARRANTY DOES NOT COVER

1. Products received for repair without sales or delivery receipt showing date of purchase by the original customer.
2. Damages caused by incorrect use, carelessness, unauthorized alterations, improper storage or unauthorized service or repairs.
3. Damage caused by fire, flood, lightning, acts of God, or other events beyond the control of Hitachi.

4. Batteries, tape cassettes, earphones, antennas, accessories and external parts such as cabinet and knobs.

5. PRODUCTS PURCHASED OUTSIDE CANADA.

6. Products used outside Canada.

7. In transit damage claims, improper handling by carrier or post offices.

8. Products or parts thereof which have had serial numbers removed, altered or defaced.

9. Products used for commercial purposes.

10. ***PRODUCTS USED FOR RENTAL***

11. In home service at the customer's location.

12. Original installation (set-up) and all normal maintenance needed such as CLEANING OF VIDEO HEADS.

13. The replacement of the video camera pickup element if the pickup element has been OVER EXPOSED to an intense source of light.

14. Products sold in Canada by any organization other than HITACHI (HSC) CANADA INC.

IMPORTANT: *This warranty is in lieu of all other warranties, guarantees, or agreements whether express or implied, and no person, dealer or company is authorized to change, modify, or extend its terms in any manner whatsoever.*

HITACHI WARRANTY REGISTRATION (for your records)

Model No.

Serial No.

Date of Purchase

Dealer's Name

Dealer's Address

City

Province

See graphics for warranty card

