


# OWNER'S MANUAL

**SEARS**

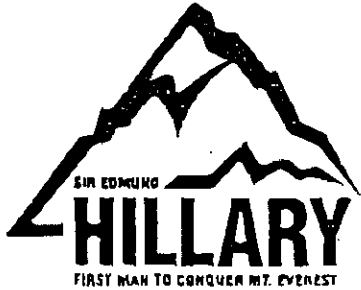


MODEL NO.  
**308.770140**

- safety rules • assembly
- care • replacement parts

## TWO-ROOM FAMILY CABIN TENT OR DINING/SHADE CANOPY COMBO

CAUTION: READ ALL INSTRUCTIONS  
CAREFULLY BEFORE USE AND RETAIN  
THEM FOR FUTURE REFERENCE.

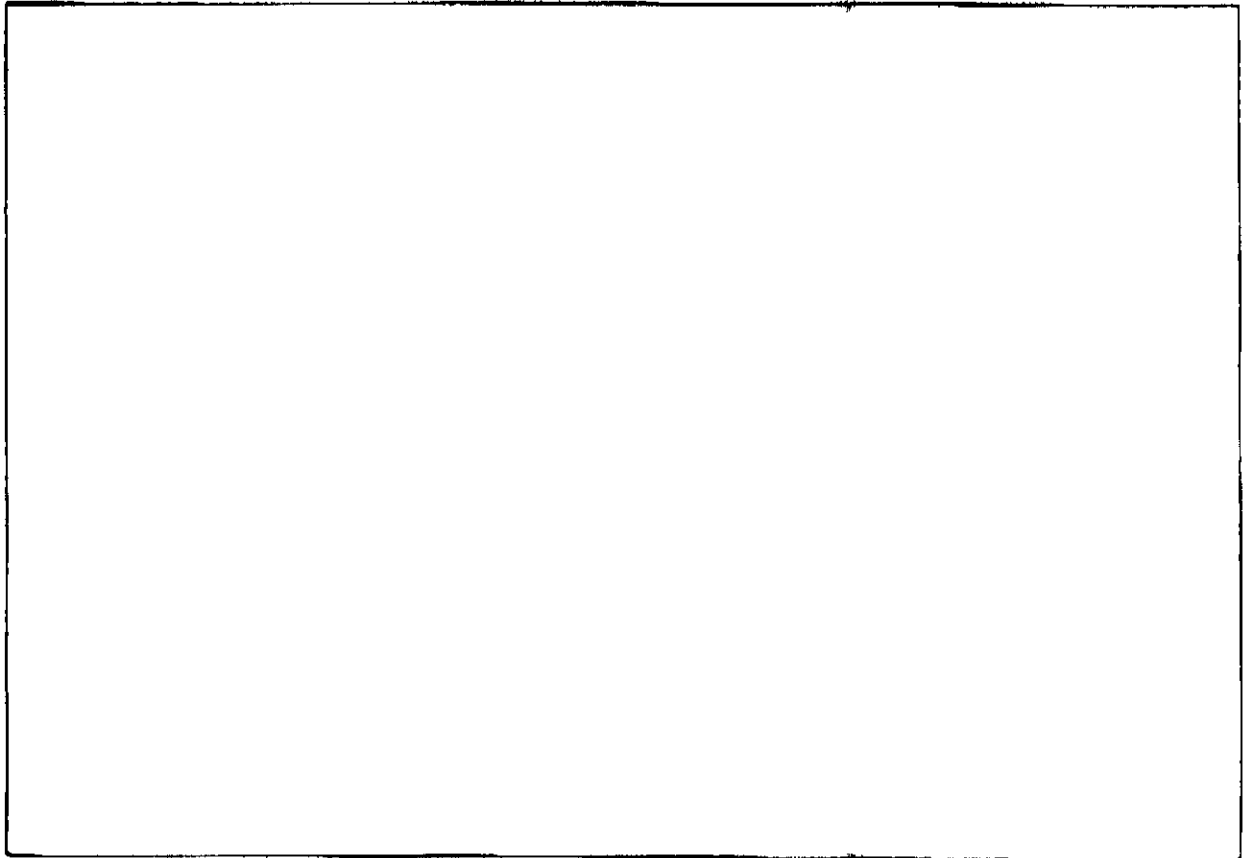

# SAFETY

## CAUTION!

This product is made with flame resistant fabric which is designed to self-extinguish when removed from flame. However, it is not fire-proof and the fabric will burn as long as it is in contact with a flame or fueled by any other source.

### DO NOT . . .

1. Do not pitch tents near open fire.
2. Do not leave campfires unattended.
3. Do not allow CHILDREN or ADULTS to use lighted candles, matches or other flame sources in or near tents.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, or other flame sources) inside your tent at any time.
8. **EXTREME CAUTION:** Never use any fuel burning oxygen consuming device or any devices that produce any fumes, including without limitation stoves, lanterns, candles, hibachis, or heaters in or around your tent. This could result in carbon monoxide poisoning, injury and/or death.

### DO . . .

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Take your tent down and store properly after camping. Tent fabrics, like most fabrics, will be weakened by prolonged exposure to sunlight.

# CARE

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL, ESPECIALLY NYLON. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, NYLON FABRIC WILL FADE AND WEAKEN.

Your tent is water repellent. However, it is not waterproof. During heavy rain some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

## FULL ONE YEAR WARRANTY


If, within one year from the date of purchase, this tent fails due to defect in material or workmanship, warranty service is available by RETURNING IT TO THE NEAREST SEARS STORE/SERVICE CENTER in the United States and Sears will repair it, free of charge.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**SEARS, ROEBUCK AND CO.**  
Department 817 WA  
Hoffman Estates, IL 60179  
USA

# REPLACEMENT PARTS

*Congratulations on your purchase of a Sir Edmund Hillary tent,  
an exclusive brand of Sears.*

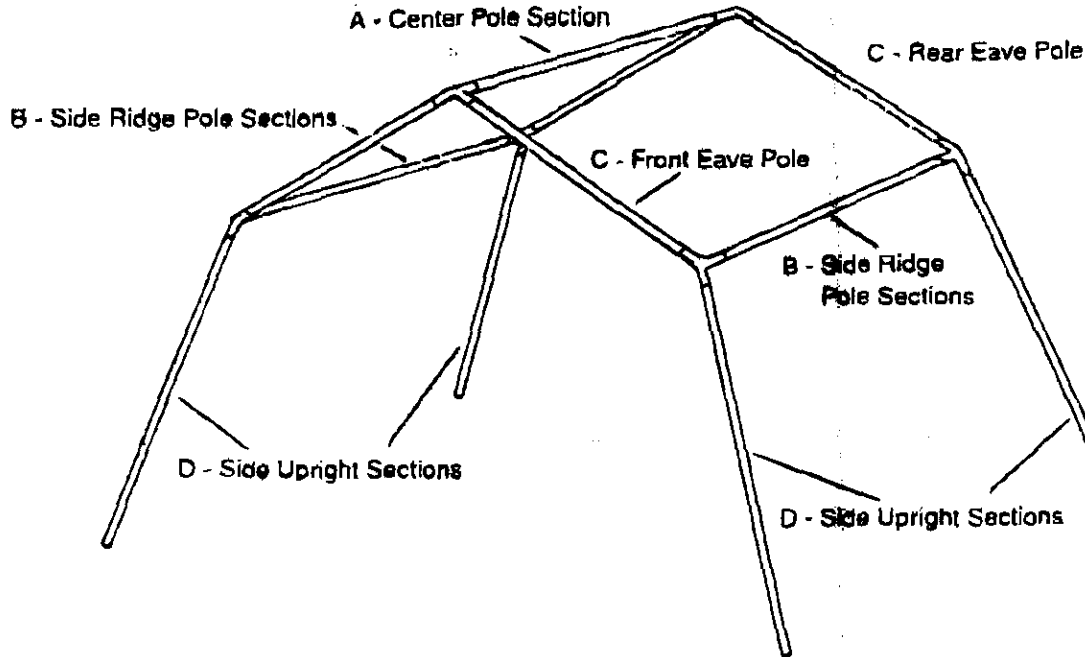

## HOW TO ORDER REPLACEMENT PARTS FOR YOUR NEW DOME TENT

The Model Number for your tent will be found on the convenience pocket sewn on the inside of the tent. Always mention the Model Number in all correspondence regarding your Sears Tent and when ordering replacement parts.

All parts listed herein may be ordered from any Sears, Roebuck and Co. retail store or by calling toll free 1-800-368-7278. For questions concerning your tent, call 1-800-325-8388.

### **WHEN ORDERING REPAIR PARTS, ALWAYS GIVE THE FOLLOWING INFORMATION:**

1. Part Number
2. Parts Description
3. Model Number
4. Name of Item

If the parts you need are not stocked locally, your order will be electronically transmitted to a Sears Repair Parts Distribution Center for expedited handling.

KEY NO.	DESCRIPTION	MODEL NO. 77014	MODEL NO.	QUANTITY REQUIRED
		PART NO.	PART NO.	
A	CENTER POLE SECTION	95-0027B		1
B	SIDE RIDGE POLE SECTIONS	95-0028B		2
C	FRONT AND REAR EAVE POLE	95-0029B		4
D	SIDE UPRIGHT SECTIONS	95-0030B		4
	COMPLETE FRAME	57701400BS		1
	TENT CARRY BAG	CABIN BAG		1

# ASSEMBLY INSTRUCTIONS

**IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT. FOR THIS MODEL IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN SETTING UP THE TENT.**

**NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.**


- To prolong the life of the tent floor, select a level, clean area for the campsite.
- To prevent damage to the zipper, unzip the doors to allow air to enter the tent.

**STEP 1:** Separate frame poles. Extend the frame pole sections which are chaincorded together.

**STEP 2:** Locate the three frame pole sections with the plastic joints on each end.


Place pole sections on the ground for joining together. The section with the orange plastic joints is the center ridge pole and should be placed in the middle.

**NOTE:** Make sure the sides of the plastic joints which are marked with "E" are facing the center ridge pole.

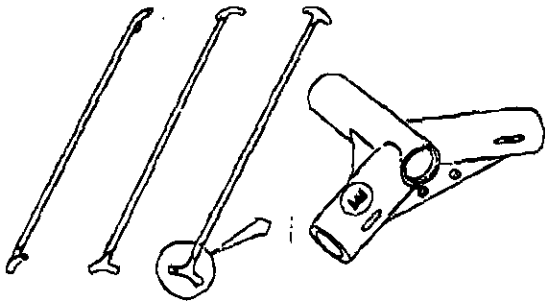


**STEP 4:** Locate the four upright sections. Starting at one corner, place the end of the pole section with the clip lock into the end of the plastic joint and snap into place. Repeat this procedure for the remaining three corners.


Your tent frame is now completely assembled and should be erect.

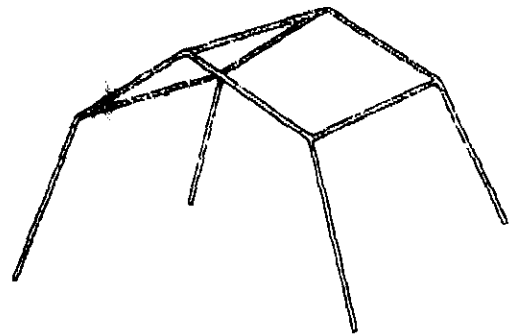

**STEP 5:** Lay tent mat flat under the tent frame with the roof side up. Unzip doors.

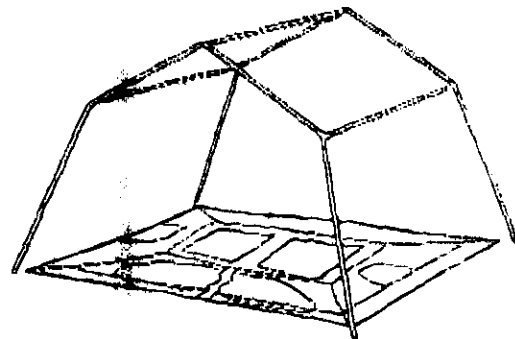


**STEP 3:** Locate the four single poles. These are the eave poles. They have a clip lock on each end. Starting with one corner, insert one end into the plastic joint marked with "E" and the other end into the orange plastic joint. Make sure clip locks on the poles snap into place on the plastic joints. Repeat this procedure for the remaining three corners. This will form the front and rear eave of the tent.

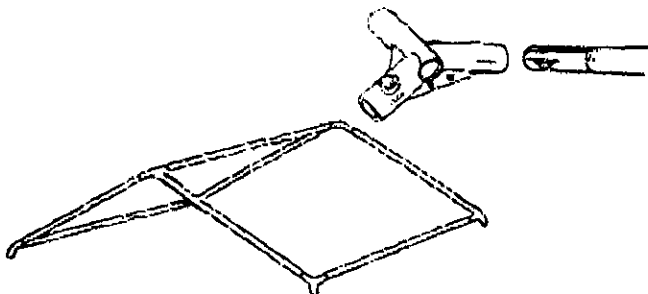


**STEP 6:** Starting with the center ridge of the tent, locate the plastic frame clips attached to the center of the tent roof and snap onto the center ridge frame pole. The front and rear clips are metal "s" hooks and should be inserted through the hole located on the plastic joints.

# ASSEMBLY INSTRUCTIONS


Continue to snap tent to frame along side ridges. Follow the same procedure you used for the center ridge.

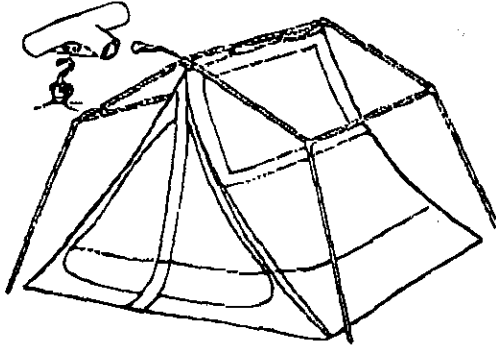

Tent should appear as shown.

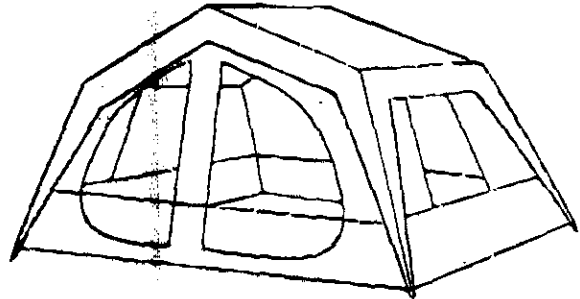


**STEP 7:** Insert the pin attached at each corner of the tent into the open end of each frame pole

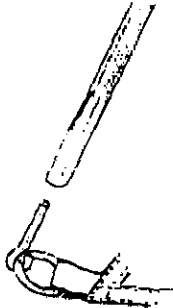

Locate the frame ties at each side corner of the tent and tie to frame.

**STEP 8:** Stake down tent by inserting the longer stakes through stake loops located at each corner, hammering into ground by using a hammer or mallet. Make sure to pull tent out even and tight. Continue staking down remaining stake loops.

Your tent should appear as shown.

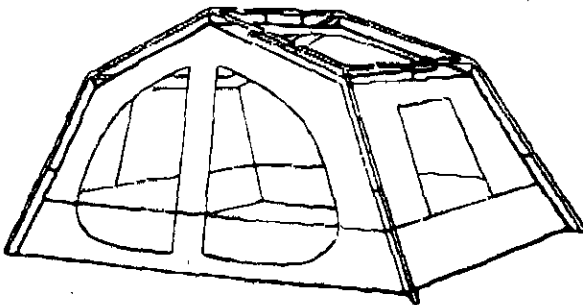

**STEP 9:** With the help of another person, place fly over tent, keeping peak of fly in line with the center peak of the tent. Seams should be on underside of fly. Stretch fly out tightly and attach the metal hook on each corner of the fly into the open end of each frame pole, doing opposite sides at the same time.

**NOTE:** If you choose to use your tent fly as a canopy only, you may do so by omitting steps 5, 6 & 7 and proceeding with step 8.

**NOTE:** A curtain has been included for dividing your tent into two rooms. Locate the tie attached to curtain and tie to tent.

For your convenience, there are hanger loops located inside your tent. These can be used to hang small camping items.

Also, convenience pockets are provided for storing small camping gear.

**NOTE:** To take down tent, follow the above steps in the reverse order. Be sure to leave door unzipped. Place stakes into stake bag which is provided.

To roll tent up, fold into thirds lengthwise toward the door. At opposite end of the door, start a small, tight roll with poles placed on top and roll toward the door. Once rolled, tie a string or rope around tent to hold into place. Slide tent, along with poles and stake bag, into carry bag.

# CAMPER'S CHECKLIST AND HELPFUL HINTS

## SAFETY AND HEALTH AIDS

- Insect repellents
- Suntan lotions
- First aid kit
- Life preservers

## CAMP NEEDS

- Axe or hatchet
- Pocket knife
- Sewing kit
- Heavy-duty tape
- Rope and clothes pins
- Small shovel (to extinguish fires)
- Fishing rod and other sporting gear
- Broom
- Whisk broom
- Compact tool kit
- Hammer or mallet

## CAMPING EQUIPMENT

- Tent
- Sleeping bags
- Ground sheet
- Air mattress and repair kit
- Portable stove
- Cooler
- Water jug
- Pail
- Toilet tissue
- Washbasin
- Mirror
- Folding table
- Lounge chairs
- Funnel for fueling appliances
- Camp lantern with extra mantles
- Flashlight
- Small fire extinguisher
- Rain coats
- Waterproof tarpaulins
- Waterproof matches

## KITCHEN EQUIPMENT

- Camp stove
- Grill top and charcoal
- Fire starter
- Fry pan
- Sauce pans
- Coffee pot
- Heavy-duty aluminum foil
- Pot holders
- Mixing and serving spoons
- Cooking fork, tongs, spatula
- Kitchen knives
- Can/bottle opener
- Storage containers
- Cooler
- Ice pack
- Insulated jug
- Water container
- Tablecloth, napkins, plates
- Mugs, glasses
- Table knives, forks, spoons
- Dish pan
- Detergent
- Pot scrubbers
- Plastic garbage bags
- Paper towels

## TRAVEL AIDS

- Road maps
- Sunglasses
- Litter bags
- Games
- Binoculars
- Camera and film

# SEARS



THANK YOU FOR PURCHASING A QUALITY HILLARY TENT. THIS TROUBLESHOOTING GUIDE IS DESIGNED TO GIVE YOU YEARS OF FUN AND ENJOYMENT FROM YOUR CAMPING EQUIPMENT. YOUR TENT MAY TAKE ON ALMOST HUMAN CHARACTERISTICS. IT IS DIFFERENT ON A SUNNY, WARM DAY THAN ON A COOL, CLOUDY DAY; DIFFERENT WHEN IT IS RAINING THAN WHEN IT IS DRY.

## TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
1. CONDENSATION	THIS IS CAUSED BY LOWER TEMPERATURES ON THE OUTSIDE OF THE TENT COMBINED WITH BODY HEAT ON THE INSIDE OF THE TENT. WHEN THIS OCCURS, AVOID TOUCHING WALLS TO REDUCE CONTACT LEAKAGE. LEAVING THE DOORS AND WINDOWS OPEN WILL REDUCE MOISTURE CONDENSATION.
2. SEAM LEAKAGE	APPLY A GENEROUS AMOUNT OF SEARS SEAM SEALER ON SEAMS. SEARS SEAM SEALER MAY BE PURCHASED AT ANY SEARS, ROEBUCK AND CO. RETAIL STORE.
3. MILDEW	TO AVOID MILDEW NEVER PUT YOUR TENT AWAY WET OR DAMP. HOWEVER, IF MILDEW OCCURS USE A SOFT BRISTLE BRUSH OR SPONGE WITH MILD DISHWASHING SOAP OR FELS NAPTHA SOAP TO CLEAN. LET THE TENT DRY IN THE SUNLIGHT AND APPLY WATER REPELLENT COMPOUND.
4. REPAIRING A TEAR	FOR SMALL TEARS USE A SELF-ADHESIVE PATCH KIT. WE RECOMMEND A CANVAS OR AWNING REPAIR SHOP FOR LARGER TEARS.
5. FAULTY ZIPPER	ALL OUR TENTS COME WITH SELF-REPAIRING ZIPPERS. IF THE ZIPPER SEPARATES, YOU CAN MOVE THE SLIDER TO THE BEGINNING OF THE ZIPPER TAPE AND REWORK THE ZIPPER. IF THIS DOESN'T WORK, A REPLACEMENT CAN BE ORDERED FROM OUR PARTS DEPARTMENT AND THEN BE INSTALLED BY A LOCAL CANVAS OR AWNING REPAIR SHOP IN YOUR AREA.
6. FADING FABRIC	DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN.
7. FLOOR CONDENSATION	A GROUND CLOTH UNDER THE TENT PREVENTS THE FLOOR FROM FEELING DAMP AND HELPS PROLONG ITS LIFE. THE CLOTH SHOULD BE SMALLER THAN THE TENT FLOOR TO PREVENT RAIN FROM RUNNING UNDER THE TENT.
8. REMOVING STAKES	STAKES SHOULD BE PULLED WITH ANOTHER STAKE, HAMMER OR A STAKE PULLER, BUT NEVER BY PULLING ON THE TENT. AVOID STAKING TENT SO TIGHT THAT IT STRETCHES THE FABRIC. OVERSTRETCHING MAY CAUSE STAKE LOOPS TO TEAR.

PERHAPS WE'VE MISSED SOMETHING IN OUR TROUBLESHOOTING GUIDE, SEND US YOUR IDEAS ON 'TRICKS OF CAMPING', REPAIR PROCEDURES, FEATURES YOU'D LIKE TO SEE, OR JUST YOUR THOUGHTS. IF YOU HAVE ANY QUESTIONS OR PROBLEMS, PLEASE CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-325-8368, OR WRITE US AT: THE WENZEL COMPANY, 113 INDUSTRIAL DRIVE, NEW HAVEN, MO 63068.

THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL, ESPECIALLY NYLON. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, NYLON FABRIC WILL FADE AND WEAKEN.

Order replacement parts through Sears Service Centers or call toll free 1-800-366-7278  
Mention complete model numbers.

# **SEARS**

## **ATTENTION!!!**

If You Have . . .

- **Camping Suggestions**

If You Need . . .

- **Problems Solved**

If You Have . . .

- **Consumer Questions**

**CALL OUR  
CONSUMER HOT LINE  
1-800-325-8368**

