


# Panasonic®

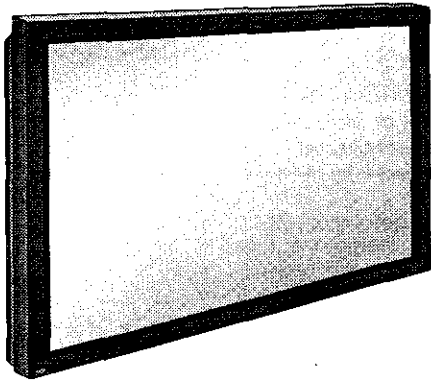

## Wide Plasma Display Operating Instructions

---

Model No. **TH-42PW4**





**For assistance, please call : 1-888-VIEW-PTV(843-9788)**  
or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)  
or visit us at [www.panasonic.com](http://www.panasonic.com) (U.S.A)

**For assistance, please call : 787-750-4300** (Puerto Rico)

**For assistance, please call : 1-800-561-5505**  
or visit us at [www.panasonic.ca](http://www.panasonic.ca) (Canada)

Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual for future reference.

**English**

|   |   |   |
|---|---|---|
|    | <b>WARNING</b><br><b>RISK OF ELECTRIC SHOCK</b><br><b>DO NOT OPEN</b> |  |
| <b>WARNING: To reduce the risk of electric shock do not remove cover or back. No user-serviceable parts inside. Refer servicing to qualified service personnel.</b> |   |   |



The lightning flash with arrow-head within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.



The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

**WARNING: To prevent damage which may result in fire or shock hazard, do not expose this appliance to rain or moisture.  
Do not place containers with water (flower vase, cups, cosmetics, etc.) above the set.  
(including on shelves above, etc.)**

**WARNING:** 1) To prevent electric shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.  
2) Do not remove the grounding pin on the power plug. This apparatus is equipped with a three pin grounding-type power plug. This plug will only fit a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician.  
Do not defeat the purpose of the grounding plug.

# Important Safety Instructions

- 1) Read these instructions.  
All the safety and operating instructions should be read before the appliance is operated.
- 2) Keep these instructions.  
The safety and operating instructions should be retained for future reference.
- 3) Heed all warnings.  
All warnings on the appliance and in the operating instructions should be adhered to.
- 4) Follow all instructions.  
All operating and use instructions should be followed.
- 5) Do not use this apparatus near water.  
For example, near a bathtub, wash bowl, kitchen sink, or laundry tube, in a wet basement, or near a swimming pool, and the like.
- 6) Clean only with dry cloth.  
Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
- 7) Do not block any ventilation openings. Install in accordance with the manufacture's instructions.  
Slots and Openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.  
This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments / accessories specified by the Manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.  
Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.  
This will prevent damage to the product due to lightning and power-line surges.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) To prevent electric shock, ensure the grounding pin on the AC cord power plug is securely connected.



# Dear Panasonic Customer

Welcome to the Panasonic family of customers. We hope that you will have many years of enjoyment from your new Plasma Display.

To obtain maximum benefit from your set, please read these Instructions before making any adjustments, and retain them for future reference.

Retain your purchase receipt also, and note down the model number and serial number of your set in the space provided on the rear cover of these instructions.

|   |
|---|
| <p><b>For assistance, please call : 1-888-VIEW-PTV(843-9788)</b><br/>or send e-mail to : <a href="mailto:consumerproducts@panasonic.com">consumerproducts@panasonic.com</a><br/>or visit us at <a href="http://www.panasonic.com">www.panasonic.com</a> (U.S.A)</p> |
| <p><b>For assistance, please call : 787-750-4300</b> (Puerto Rico)</p>  |
| <p><b>For assistance, please call : 1-800-561-5505</b><br/>or visit us at <a href="http://www.panasonic.ca">www.panasonic.ca</a> (Canada)</p>   |

## Note:

Do not allow a still picture to be displayed for an extended period, as this can cause a permanent after-image to remain on the Plasma Display.  
Examples of still pictures include logos, video games, computer images, teletext and images displayed in 4:3 mode.

## Trademark Credits

- VGA is a trademark of International Business Machines Corporation.
  - S-VGA is a registered trademark of the Video Electronics Standard Association.
- Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

# Table of Contents

|   |    |   |    |
|---|----|---|----|
| <b>Important Safety Instructions</b> .....              | 3  | <b>ASPECT Controls</b> .....                          | 22 |
| <b>FCC STATEMENT</b> .....                              | 6  | <b>ADJUSTING PICTURE POS./SIZE</b> .....              | 24 |
| <b>Safety Precautions</b> .....                         | 7  | <b>SOUND ADJUSTMENT</b> .....                         | 26 |
| <b>Accessories</b> .....                                | 9  | MUTE .....  | 26 |
| Accessories Supplied .....                              | 9  | <b>SURROUND Controls</b> .....                        | 27 |
| Optional Accessories .....                              | 9  | <b>PICTURE Adjustments</b> .....                      | 28 |
| <b>Remote Control Batteries</b> .....                   | 10 | <b>SCREENSAVER(For preventing after-images)</b> ..... | 30 |
| <b>Basic Controls</b> .....                             | 11 | NEGATIVE / SCROLL Selection .....                     | 30 |
| <b>Connections</b> .....                                | 12 | ON / OFF Selection .....                              | 30 |
| speakers connection .....                               | 13 | SIDE BAR ADJUST .....                                 | 31 |
| AV Input Terminals connection .....                     | 13 | <b>SET UP for Input Signals</b> .....                 | 32 |
| AV Input connection .....                               | 14 | COMPONEN/RGB IN SELECT .....                          | 32 |
| COMPONENT/RGB Input connection .....                    | 14 | 3D Y/C FILTER – For NTSC Video images .....           | 32 |
| PC Input conncection .....                              | 16 | COLOR SYSTEM / Panasonic AUTO .....                   | 33 |
| SERIAL Terminals connection .....                       | 17 | [SYNC] .....  | 34 |
| <b>Power ON/OFF and Input Signal Selection</b> .....    | 18 | [PULL IN RANGE] .....                                 | 34 |
| AC cord connection .....                                | 18 | [CLAMP POSITION] .....                                | 34 |
| Power ON/OFF .....                                      | 18 | [H-FREQ. (kHz)/V-FREQ. (Hz)] .....                    | 34 |
| Select the Input Signal .....                           | 19 | <b>Troubleshooting</b> .....                          | 35 |
| Selecting the ON-Screen Menu Language .....             | 19 | <b>Specifications</b> .....                           | 38 |
| <b>On-Screen Menu Display from Remote Control</b> ..... | 20 |   |    |

# FCC STATEMENT

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC CAUTION:

**To assure continued compliance and possible undesirable interference, the provided ferrite cores must be used when connecting this plasma display to video equipment; and maintain at least 40cm spacing to other peripheral devices. Refer to instructions on pages 16, and 17. Any changes or modifications not expressly approved by Matsushita Electric Corporation of America could cause harmful interference and would void the user's authority to operate this device.**

### FCC Declaration of Conformity

Responsible Party: Matsushita Electric Corporation of America  
One Panasonic Way, Secaucus, NJ 07094  
Contact Source: Panasonic Consumer Electronics Company  
1-888-843-9788  
email: consumerproducts@panasonic.com

### CANADIAN NOTICE:

This Class B digital apparatus complies with Canadian ICES-003.

# Safety Precautions

## **WARNING**

### **Set up**

**Do not place the Plasma Display on sloped or unstable surfaces.**

- The Plasma Display may fall off or tip over.

**Do not place any objects on top of the Plasma Display.**

- If water spills onto the Plasma Display or foreign objects get inside it, a short-circuit may occur which could result in fire or electric shock. If any foreign objects get inside the Plasma Display, please consult an Authorized Service Center.

**Do not cover the ventilation holes.**

- Doing so may cause the Plasma Display to overheat, which can cause fire or damage to the Plasma Display.

**If using the pedestal (optional accessory), leave a space of 3 15/16" (10 cm) or more at the top, left and right, 2 3/8" (6 cm) or more at the bottom, and 2 3/4" (7 cm) or more at the rear. If using some other setting-up method, leave a space of 3 15/16" (10 cm) or more at the top, bottom, left and right, and 3/4" (1.9 cm) or more at the rear.**

### **AC Power Supply Cord**

**The Plasma Display is designed to operate on 120 V AC, 50/60 Hz.**

**Securely insert the power cord plug as far as it will go.**

- If the plug is not fully inserted, heat may be generated which could cause fire. If the plug is damaged or the wall socket plate is loose, they should not be used.

**Do not handle the power cord plug with wet hands.**

- Doing so may cause electric shocks.

**Do not do anything that might damage the power cable. When disconnecting the power cable, hold the plug, not the cable.**

- Do not make any modifications, place heavy objects on, place near hot objects, heat, bend, twist or forcefully pull the power cable. Doing so may cause damages to the power cable which can cause fire or electric shock. If damage to the cable is suspected, have it repaired at an Authorized Service Center.

**If the Plasma Display is not in use for a long period of time, unplug the power cord from the wall outlet.**

### **If problems occur during use**

**If a problem occurs (such as no picture or no sound), or if smoke or an abnormal odor is detected from the Plasma Display, unplug the power cord immediately.**

- Continuous use of the Display under these conditions might cause fire or permanent damage to the unit. Have the Display evaluated at an Authorized Service Center. Services to the Display by any unauthorized personnel are strongly discouraged due to its high voltage dangerous nature.

**If water or foreign objects get inside the Plasma Display, if the Plasma Display is dropped, or if the cabinet becomes damaged, disconnect the power cord plug immediately.**

- A short may occur, which could cause fire. Contact an Authorized Service Center for any repairs that need to be made.

# Safety Precautions

---

## CAUTION

**This Plasma Display is for use only with the following optional accessories. Use with any other type of optional accessories may cause instability which could result in the possibility of injury.**

(All of the following accessories are manufactured by Matsushita Electric Industrial Co., Ltd.)

- Speakers ..... TY-SP42PWD3W
- Pedestal ..... TY-ST42PT3-K
- Wall stand ..... TY-ST42PW1
- Wall-hanging bracket (angled) ..... TY-WK42PR1
- Tuner terminal board ..... TY-42TM4H
- Connecting cable ..... TY-SCP15C03

Always be sure to ask a qualified technician to carry out set-up.

### When using the Plasma Display

**Do not bring your hands, face or objects close to the ventilation holes of the Plasma Display.**

- Top of the Plasma Display is usually very hot due to the high temperature of exhaust air being released through the ventilation holes. Burns or personal injuries can happen if any body parts are brought too close. Placing any object near the top of the display could also result in heat damages to the object as well as to the Display if its ventilation holes are blocked.

**Be sure to disconnect all cables before moving the Plasma Display.**

- Moving the Display with its cables attached might damage the cables which, in turn, can cause fire or electric shock.

**Disconnect the power plug from the wall outlet as a safety precaution before carrying out any cleaning.**

- Electric shocks can result if this is not done.

**Clean the power cable regularly to prevent it from becoming dusty.**

- Built-up dust on the power cord plug can increase humidity which might damage the insulation and cause fire. Unplug the cord from the wall outlet and clean it with a dry cloth.

## Cleaning and maintenance

**The front of the display panel has been specially treated. Wipe the panel surface gently using only a cleaning cloth or a soft, lint-free cloth.**

- If the surface is particularly dirty, soak a soft, lint-free cloth in a weak detergent solution and then wring the cloth to remove excess liquid. Use this cloth to wipe the surface of the display panel, then wipe it evenly with a dry cloth, of the same type, until the surface is dry.
- Do not scratch or hit the surface of the panel with fingernails or other hard objects. Furthermore, avoid contact with volatile substances such as insect sprays, solvents and thinner, otherwise the quality of the surface may be adversely affected.

**If the cabinet becomes dirty, wipe it with a soft, dry cloth.**

- If the cabinet is particularly dirty, soak the cloth in a weak detergent solution and then wring the cloth dry. Use this cloth to wipe the cabinet, and then wipe it dry with a dry cloth.
- Do not allow any detergent to come into direct contact with the surface of the Plasma Display. If water droplets get inside the unit, operating problems may result.
- Avoid contact with volatile substances such as insect sprays, solvents and thinner, otherwise the quality of the cabinet surface may be adversely affected or the coating may peel off. Furthermore, do not leave it for long periods in contact with articles made from rubber or PVC.

### Note:

Do not allow a still picture to be displayed for an extended period, as this can cause a permanent after-image to remain on the Plasma Display.

Examples of still pictures include logos, video games, computer images, teletext and images displayed in 4:3 mode.




# Accessories

## Accessories Supplied


Check that you have the Accessories and items shown




Operating Instruction book

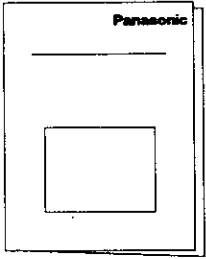


Remote Control Transmitter  
EUR646525

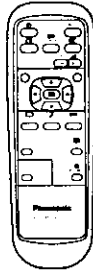


Batteries for the Remote Control Transmitter  
(AA(R6) Battery × 2)

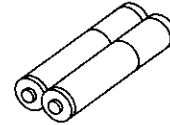


Warranty

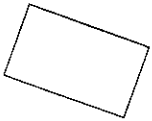


Ferrite core  
J0KF00000018 × 2

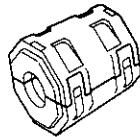

Fixing bands  
TMME187 × 2

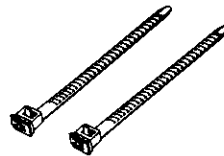


AC cord

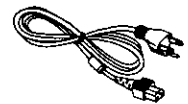

## Optional Accessories


● Speakers  
TY-SP42PWD3W

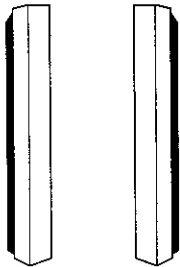


● Pedestal  
TY-ST42PT3-K




● Wall stand  
TY-ST42PW1

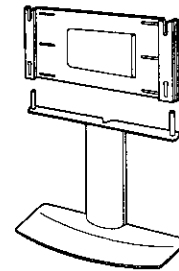

● Wall-hanging bracket  
(angled)  
TY-WK42PR1

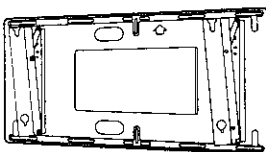

● Tuner terminal board  
TY-42TM4H

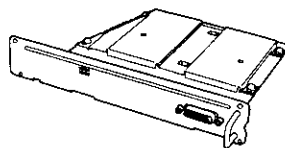

● Connecting Cable  
TY-SCP15C03  
49.2 ft (15 m)




For assembling  
Full instructions are supplied with each optional accessories for use with this Plasma Display.


# Remote Control Batteries

## Requires two AA batteries.


1. Turn the transmitter face down. Press and slide off the battery cover.

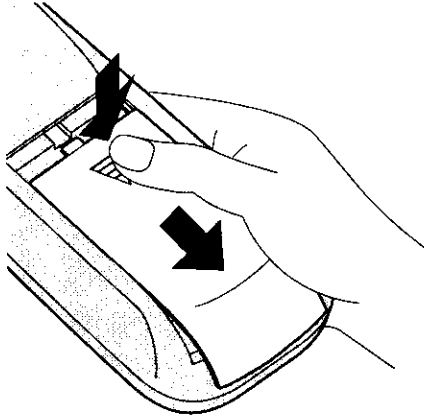

2. Install the batteries as shown in the battery compartment. (Polarity + or - must match the markings in the compartment).

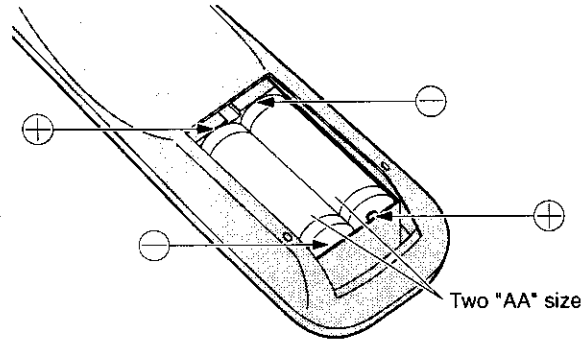

3. Replace the cover and slide in reverse until the lock snaps.

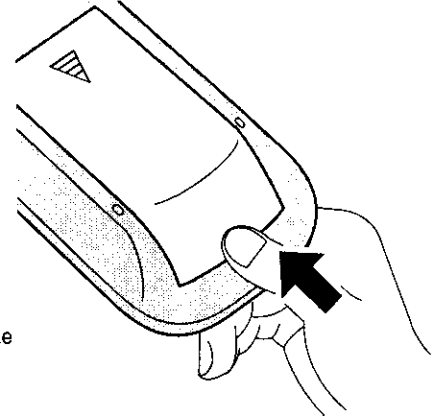

### Helpful Hint:

For frequent remote control users, replace old batteries with Alkaline batteries for longer life.


### Precaution on battery use

Incorrect installation can cause battery leakage and corrosion that will damage the remote control transmitter.

#### Observe the following precautions:

1. Batteries should always be replaced as a pair. Always use new batteries when replacing the old set.
2. Do not combine a used battery with a new one.
3. Do not mix battery types (example: "Zinc Carbon" with "Alkaline").
4. Do not attempt to charge, short-circuit, disassemble, heat or burn used batteries.
5. Battery replacement is necessary when the remote control acts sporadically or stops operating the Plasma Display.

# Basic Controls

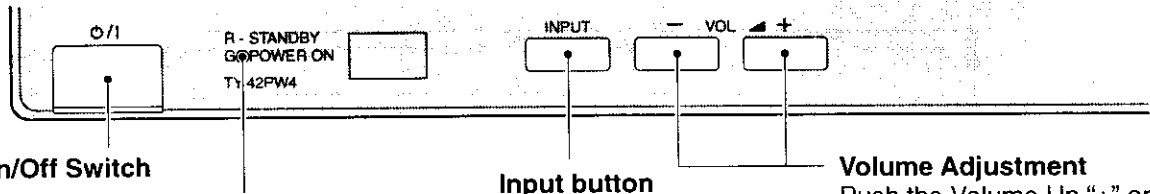

**Main Power On/Off Switch**

**Power Indicator**

The Power Indicator will light.

- Power-OFF ..... Indicator not illuminated (The unit will still consume some power as long as the power cord is still inserted into the wall outlet.)
- Stand-by  $\phi$  .... Red
- Power-ON ..... Green

**Input button**

**(VIDEO (S VIDEO)/COMPONENT, RGB/PC Mode Selection)**

Push the "INPUT" button to select VIDEO(S VIDEO)/COMPONENT or RGB/PC input signal modes sequentially.

**Volume Adjustment**


Push the Volume Up "+" or Down "-" button to increase or decrease the sound volume level.

## Stand-by (ON/OFF) button

The Plasma Display must first be plugged into the wall outlet and turned on at the power switch (see page 18). Push this button to turn the Plasma Display ON, from STANDBY mode. Push it again to turn the High Definition Plasma Display OFF to STANDBY mode.

**Status button**

Push the "Status" button to display the current system status.

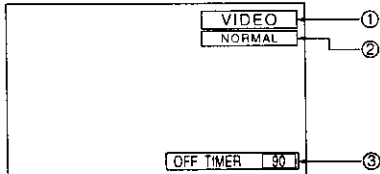

- ① VIDEO(S VIDEO)/COMPONENT, RGB/PC mode
- ② Aspect mode (see page 22)
- ③ Off timer

The off timer indicator is displayed only when the off timer has been set.

**N button**

(see page 25, 26, 28, 29)

**PICTURE button**

(see page 28)

**PICTURE POS./SIZE button**

(see page 24)

**PC button**

Push the "PC" mode selection button to select the PC mode. This button is used to switch directly to PC mode.

**SURROUND button**

(see page 27)

**Input button**

**(VIDEO(S VIDEO)/COMPONENT, RGB/PC Mode Selection)**

Press to select VIDEO(S VIDEO)/COMPONENT or RGB/PC input signal modes sequentially. (see page 19)

**Sound mute On/Off** (see page 26)

**Volume Adjustment**

Press the Volume Up "+" or Down "-" button to increase or decrease the sound volume level.

**R button** (see page 21)

**ACTION button**

Press to make selections

**POSITION buttons**

**SET UP button** (see page 20)

**SOUND button** (see page 26)

**ASPECT button**


Press to adjust the aspect. (see page 22)

**OFF TIMER button**


The Plasma Display may be preset to switch to stand-by after a fixed period. The setting changes to 30 minutes, 60 minutes, 90 minutes and 0 minutes (off timer cancelled) each time the button is pressed.

When three minutes remain, "Off timer 3" will flash.

The off timer is cancelled if a power interruption occurs.

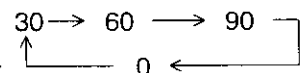


# Connections

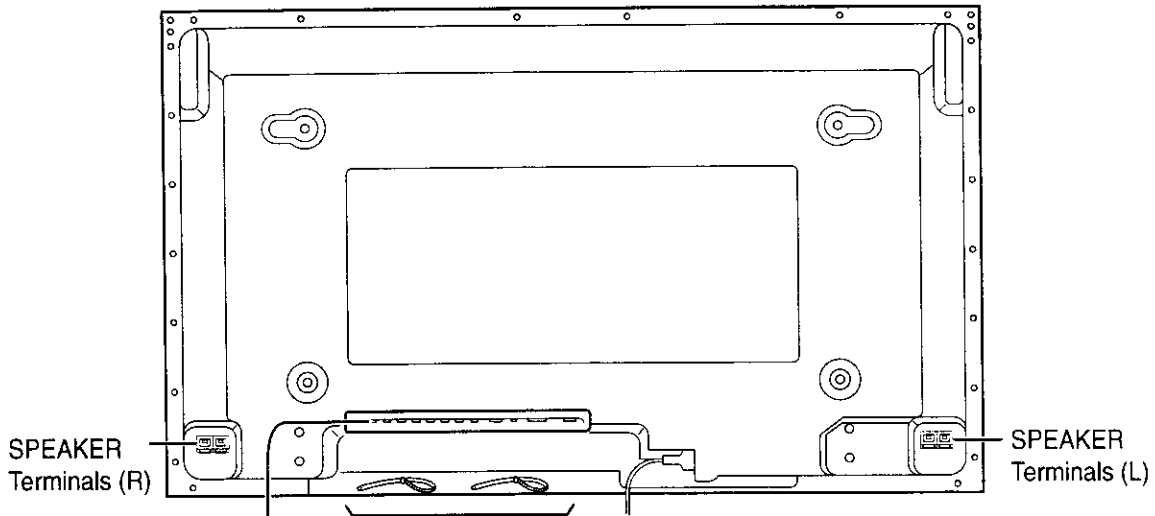


## - Cable fixing bands

Secure any excess cables with bands, as required.


1 Pass the attached cable fixing band through the clip as shown in the figure.

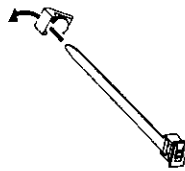



2 To secure cables connected to Terminals, wrap the cable fixing band around them then pass the pointed end through the locking block, as shown in the figure.

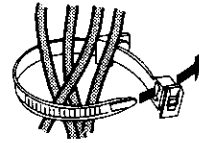

To tighten:

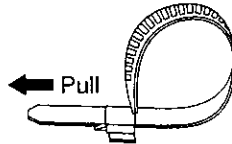

To loosen:

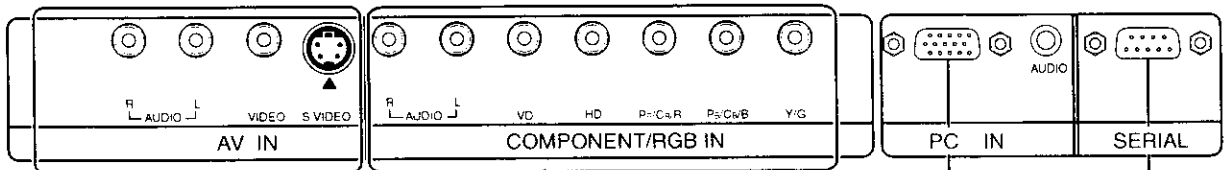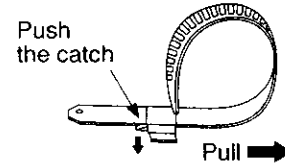

AV IN Terminals  
(see page 13, 14)


COMPONENT/RGB IN and Audio  
IN Terminals (see page 14,15)

From EXIT monitor Terminal  
on Computer (see page 16)

From SERIAL Terminal on  
Computer (see page 17)

## Speakers connection


When connecting the speakers, be sure to use only the optional accessory speakers.  
Refer to the speaker's Installation Manual for details on speaker installation.

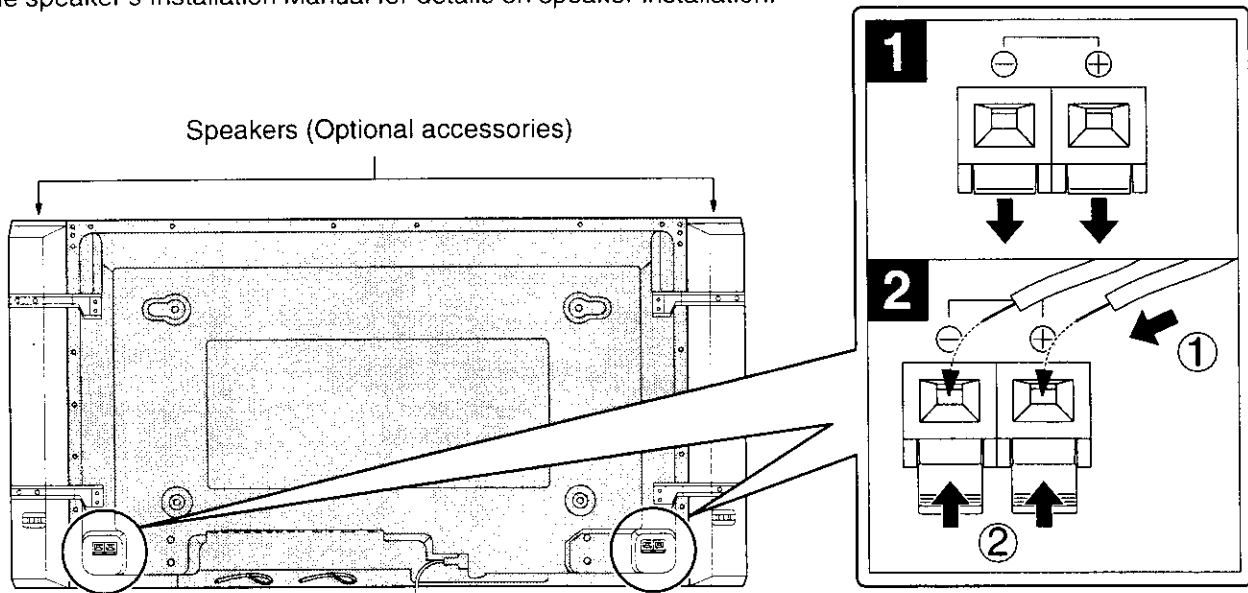

## AV Input Terminals connection

Connect the signal source equipment (see page 14 to 17).

(Example) When connecting an S VIDEO VCR

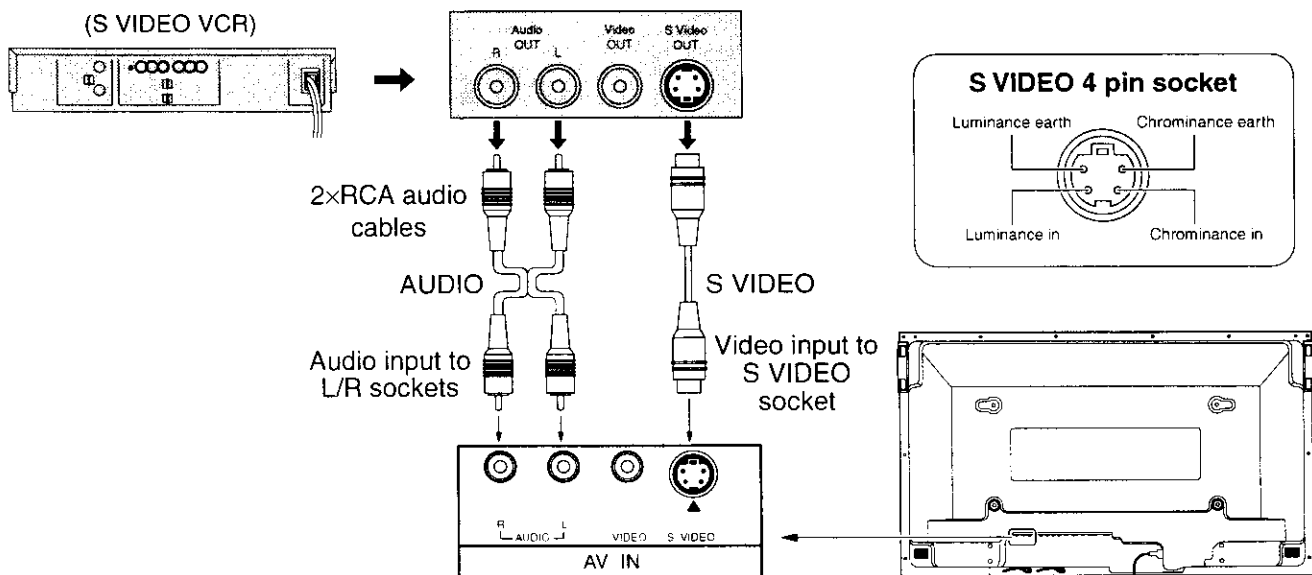


**Notes:**

- (1) Change the "COMPONENT/RGB-IN" setting in the "SET UP" menu to "RGB". (see page 32, 34)
- (2) Additional equipment and cables shown are not supplied with this set.

## AV Input connection

### VIDEO signal connection

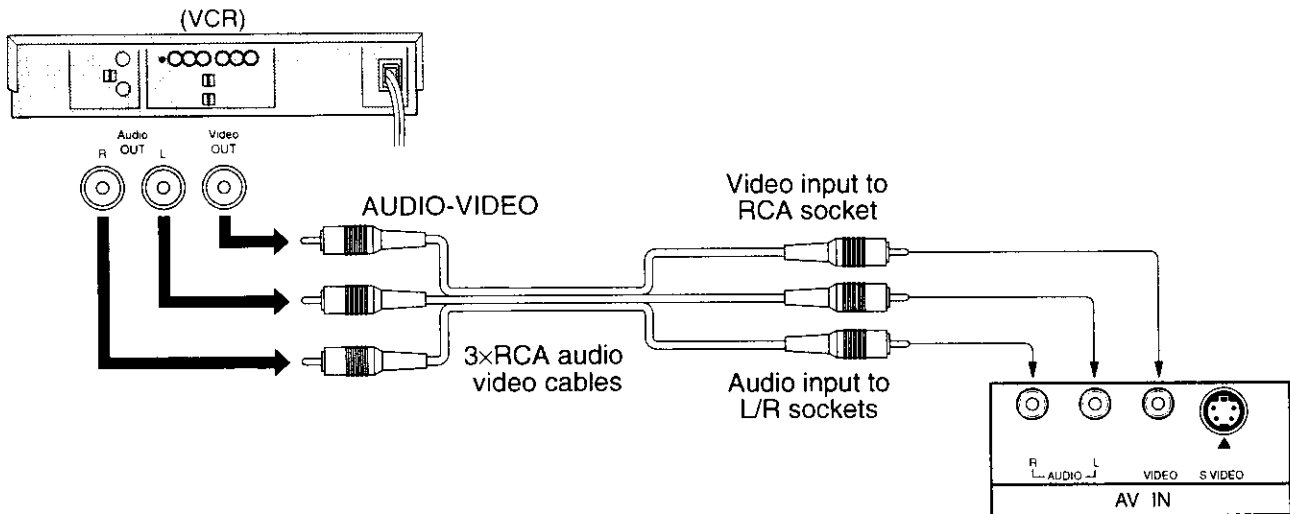


#### Notes:

- (1) Change the "COMPONENT/RGB-IN" setting in the "SET UP" menu to "RGB". (see page 32, 34)
- (2) Additional equipment and cables shown are not supplied with this set.

## COMPONENT/RGB Input connection


### Component signals (Y, P<sub>B</sub>, P<sub>R</sub>) connection

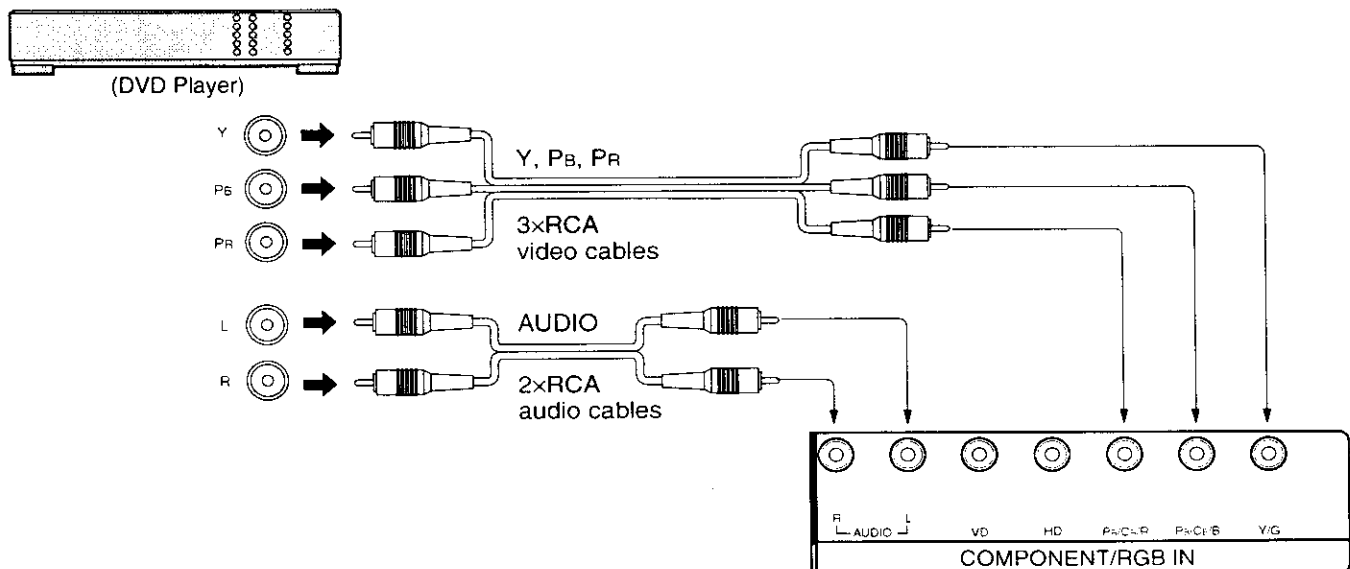

#### Notes:

- (1) Change the "COMPONENT/RGB-IN" setting in the "SET UP" menu to "RGB". (see page 32, 34)
- (2) Additional equipment and cables shown are not supplied with this set.



## RGB signal (R, G, B, HD, VD) connection

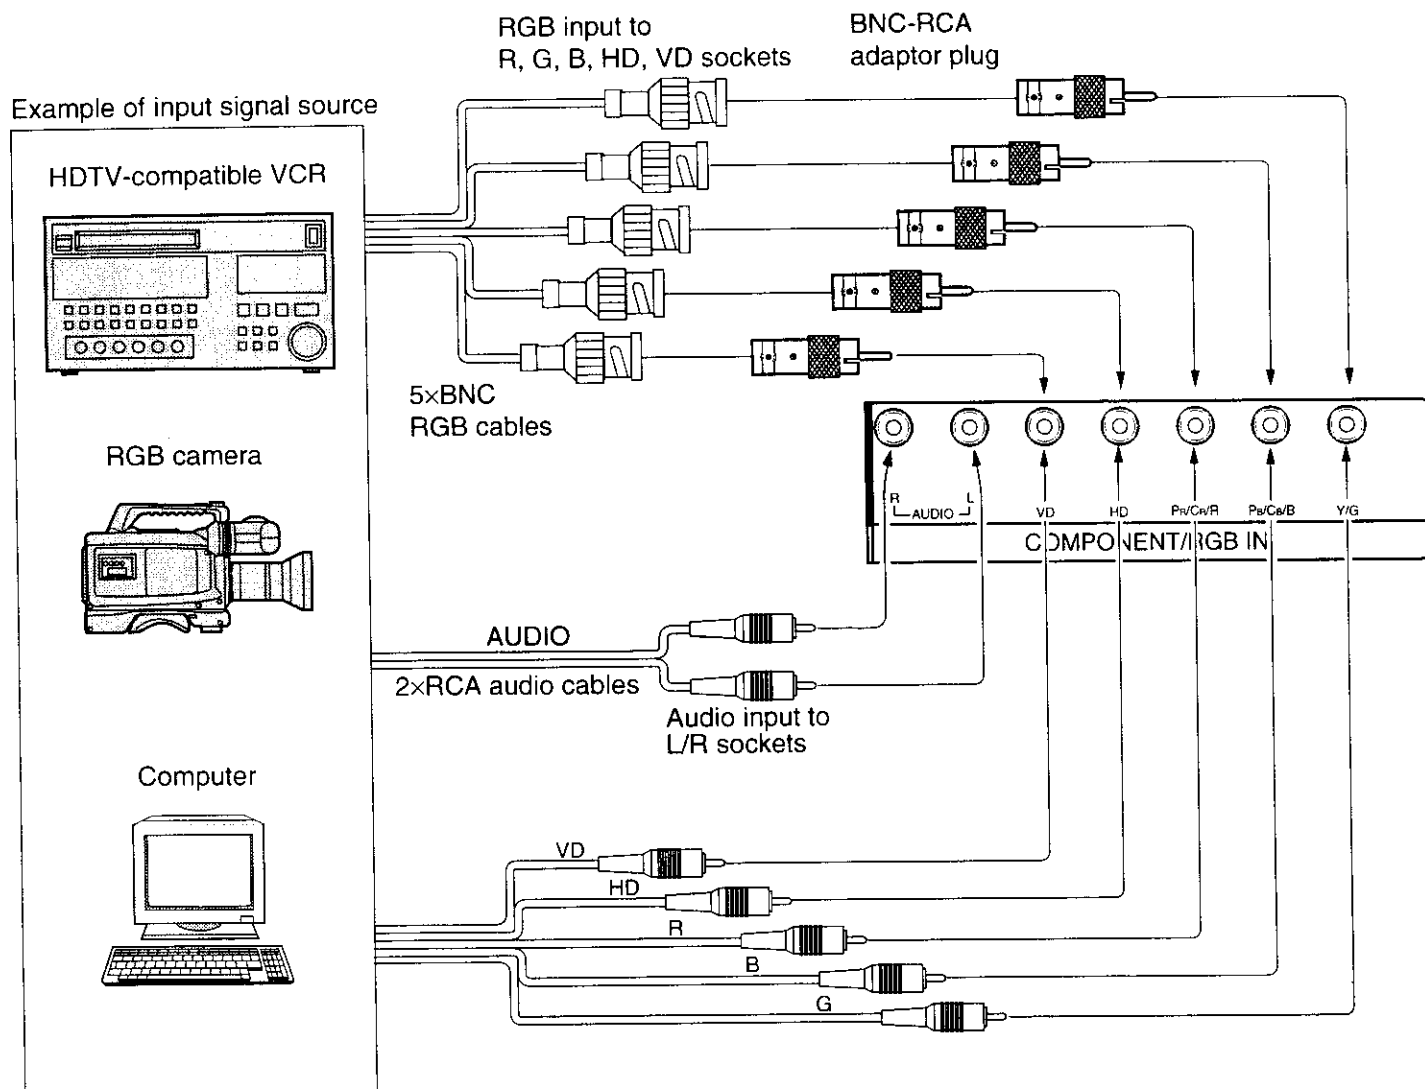

### Notes:

- (1) Change the "COMPONENT/RGB-IN" setting in the "SET UP" menu to "RGB". (see page 32, 34)
- (2) Additional equipment, cables and adaptor plugs shown are not supplied with this set.


## PC Input connection

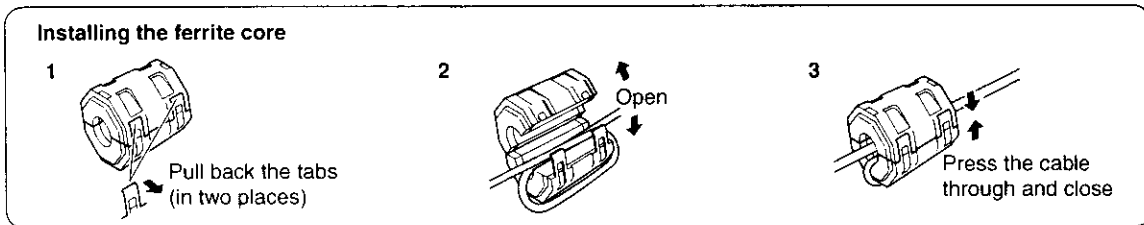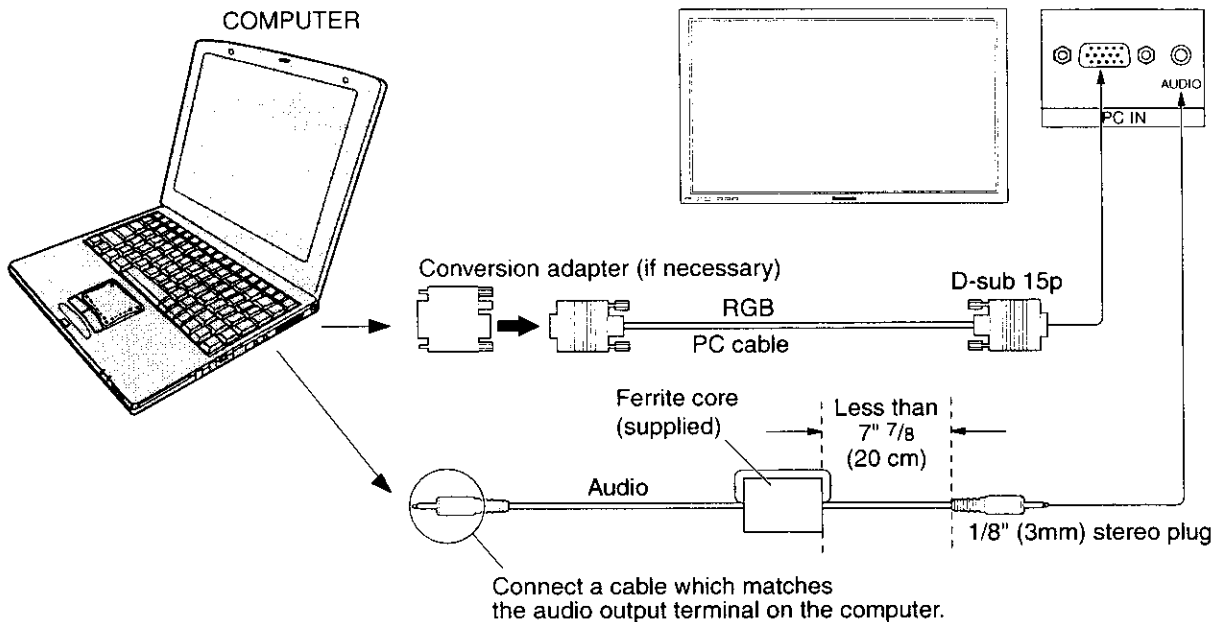

### Notes:

- (1) Computer signals which can be input are those with a horizontal scanning frequency of 15.5 to 110 kHz and vertical scanning frequency of 48 to 120 Hz. (However, signals cannot be displayed if signals exceeding 1200 lines will not be displayed properly.)
- (2) The display resolution is a maximum of 640 × 480 dots when the aspect mode is set to "NORMAL", and 852 × 480 dots when the aspect mode is set to "FULL". If the display resolution exceeds these maximums, it may not be possible to show fine detail with sufficient clarity.
- (3) The PC input terminals are DDC1/2B-compatible. If the computer being connected is not DDC1/2B-compatible, you will need to make setting changes to the computer at the time of connection.
- (4) Some PC models cannot be connected to the set.
- (5) There is no need to use an adapter for computers with DOS/V compatible D-sub 15P terminal.
- (6) The computer shown in the illustration is for example purposes only.
- (7) Additional equipment and cables shown are not supplied with this set.
- (8) Do not set the horizontal and vertical scanning frequencies for PC signals which are above or below the specified frequency range.

### Signal Names for D-sub 15P Connector

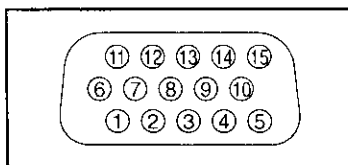


Pin layout for PC input terminal

| Pin No. | Signal Name  | Pin No. | Signal Name        | Pin No. | Signal Name  |
|---------|--------------|---------|--------------------|---------|--------------|
| ①       | R            | ⑥       | GND (Ground)       | ⑪       | GND (Ground) |
| ②       | G            | ⑦       | GND (Ground)       | ⑫       | SDA          |
| ③       | B            | ⑧       | GND (Ground)       | ⑬       | HD/SYNC      |
| ④       | GND (Ground) | ⑨       | NC (not connected) | ⑭       | VD           |
| ⑤       | GND (Ground) | ⑩       | GND (Ground)       | ⑮       | SCL          |



# SERIAL Terminals connection

The SERIAL terminal is used when the Plasma Display is controlled by a computer.

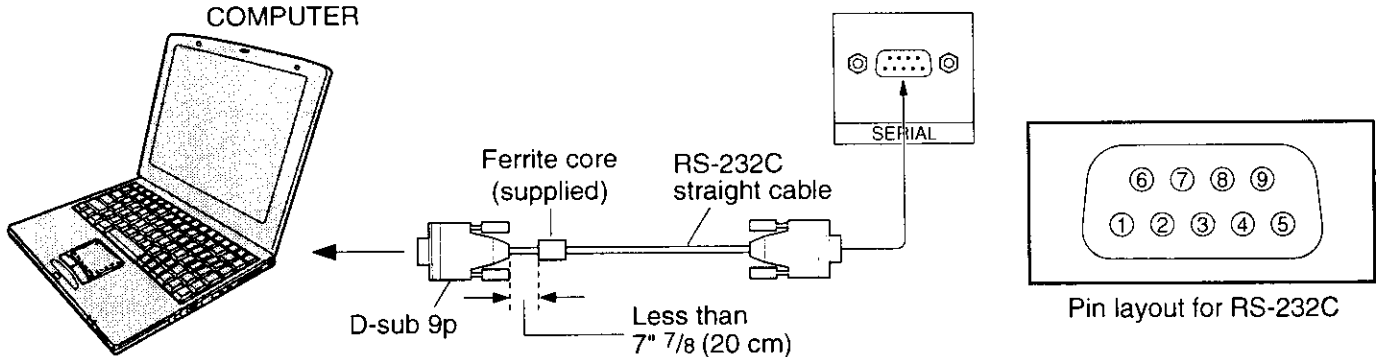

**Notes:**

- (1) Use the RS-232C cable to connect the computer to the Plasma Display.
- (2) The computers shown is for example purposes only.
- (3) Additional equipment and cables shown are not supplied with this set.

The SERIAL terminal conforms to the RS-232C interface specification, so that the Plasma Display can be controlled by a computer which is connected to this terminal.

The computer will require software which allows the sending and receiving of control data which satisfies the conditions given below. Use a computer application such as a programming language to software. Refer to the documentation for the computer application for details.


**Communication parameters**

|                        |                   |
|------------------------|-------------------|
| Signal level           | RS-232C compliant |
| Synchronization method | Asynchronous      |
| Baud rate              | 9600 bps          |
| Parity                 | None              |
| Character length       | 8 bits            |
| Stop bit               | 1 bit             |
| Flow control           | -                 |

| RS-232C Conversion cable |         |
|--------------------------|---------|
| D-sub 9-pin female       | Details |
| ②                        | R X D   |
| ③                        | T X D   |
| ⑤                        | GND     |
| ④ • ⑥                    | Non use |
| ⑦                        | Shorted |
| ⑧                        |         |
| ① • ⑨                    | NC      |

**Basic format for control data**

The transmission of control data from the computer starts with a STX signal, followed by the command, the parameters, and lastly an ETX signal in that order. If there are no parameters, then the parameter signal does not need to be sent.

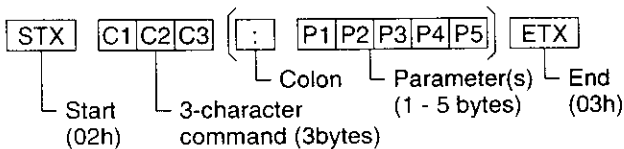

**Note:**

- (1) If multiple commands are transmitted, be sure to wait for the response for the first command to come from this unit before sending the next command.
- (2) If an incorrect command is sent by mistake, this unit will send an "ER401" command back to the computer.

**Command**


| Command | Parameter | Control details  |
|---------|-----------|--|
| PON     | None      | Power ON   |
| POF     | None      | Power OFF  |
| AVL     | **        | Volume 00 - 63   |
| AMT     | 0         | Audio MUTE OFF   |
|         | 1         | Audio MUTE ON  |
| IIS     | None      | Input select (toggle)  |
|         | VID       | AV Mode  |
|         | YP1       | Component / RGB mode (processed as a Y/Pb/Pr or RGB signals as set by this unit) |
| DAM     | RG1       | PC mode  |
|         | None      | Screen mode select (toggle)  |
|         | NORM      | NORMAL (4:3)   |
|         | ZOOM      | ZOOM   |
|         | FULL      | FULL   |
|         | JUST      | JUST   |
|         | SELF      | Panasonic AUTO   |

With the power off, this display responds to PON command only.


# Power ON/OFF and Input Signal Selection

## AC cord connection

Connecting the AC cord plug to the Plasma Display.

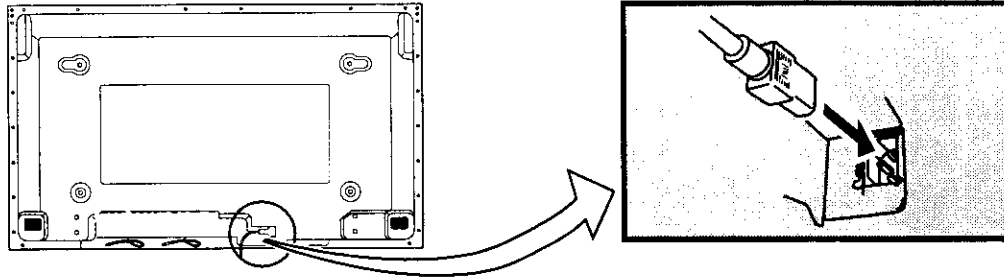

## Power ON/OFF

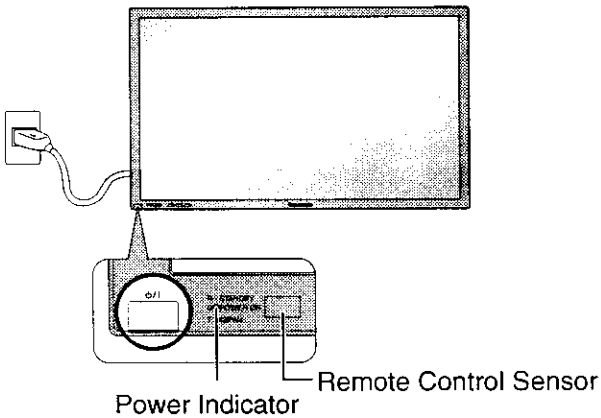

### Connecting the plug to the Wall Outlet

Push the POWER switch on the Plasma Display to turn the set on POWER-ON


Power Indicator: Green

Example: The screen below is displayed for a while after the Plasma Display is turned on. (setting condition is an example.)



When the POWER is turned on for the first time, the LANGUAGE selection screen is displayed.


From the second time on, language selection can be done from the setup menu. (see page 19)

Select the desired language using the ▲ and ▼ keys and press the ACTION button.

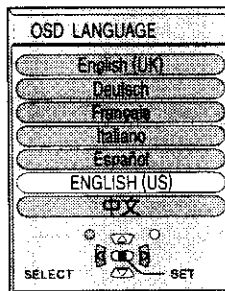


From the second time on, the screen shown below is displayed for a while (setting condition is an example).

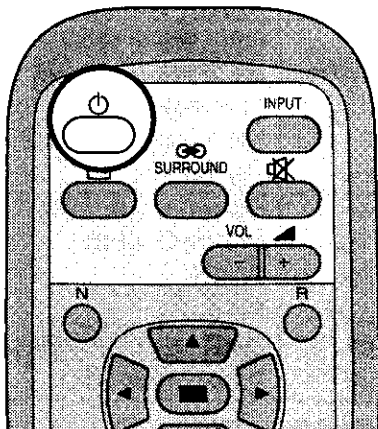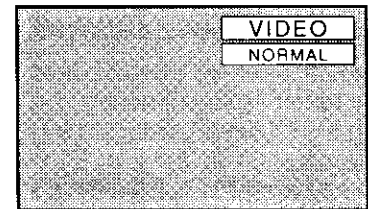


Press the  button on the remote control to turn the Plasma Display off




Power Indicator: Red (standby)

Press the  button on the remote control to turn the Plasma Display on

Power Indicator: Green

To turn the power for the Plasma Display off, press the  switch on the Plasma Display, when the Plasma Display is on or in standby mode.

## Select the Input Signal

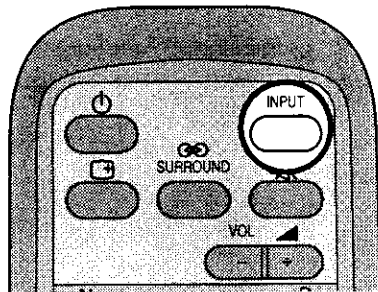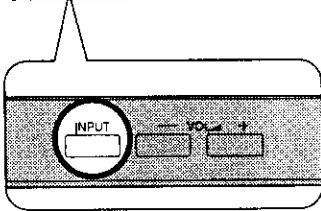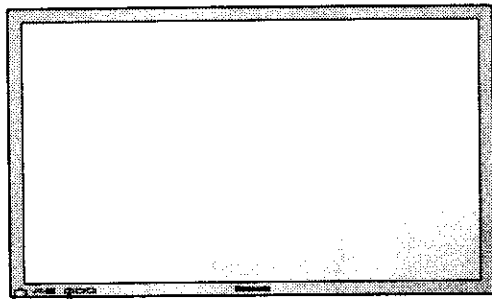


Press the INPUT button to select the input video signal desired from equipment such as a VCR which has been connected to the Plasma Display.

Input signals will change as follows:

For COMPONENT INPUT (see page 32)





For RGB INPUT (see page 32)

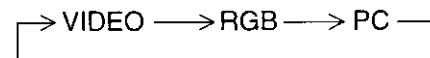

## Selecting the On-Screen Menu Language



press to display the SET UP menu.

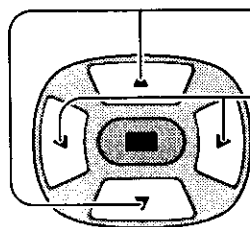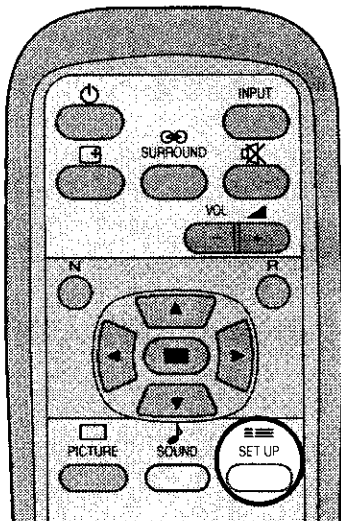


press to select the OSD LANGUAGE.

press to select your preferred language.

selectable languages


- English(UK)
- Deutsch
- Français
- Italiano
- Español
- ENGLISH(US)
- 中文

.....(Chinese)

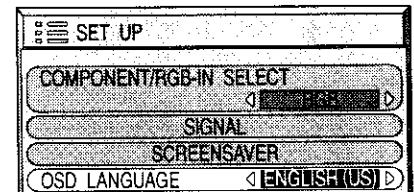


# On-Screen Menu Display from Remote Control


To PICTURE adjust menu  
(see page 28)

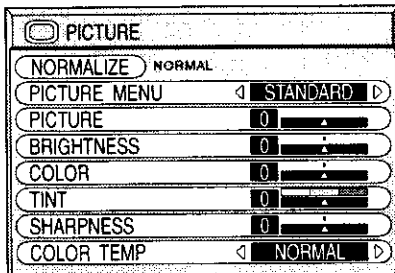



To SOUND adjust menu  
(see page 26)

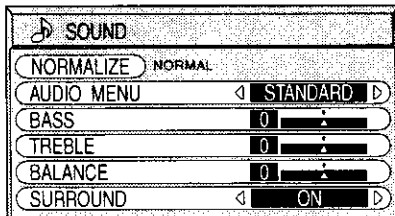


To PICTURE POS./SIZE adjust menu (see page 24)  
During "VIDEO" and "COMPONENT" input signal modes.

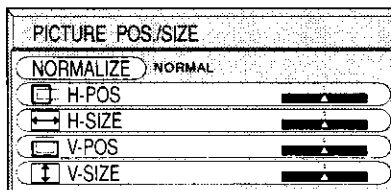



During "RGB" and "PC" input signal modes.

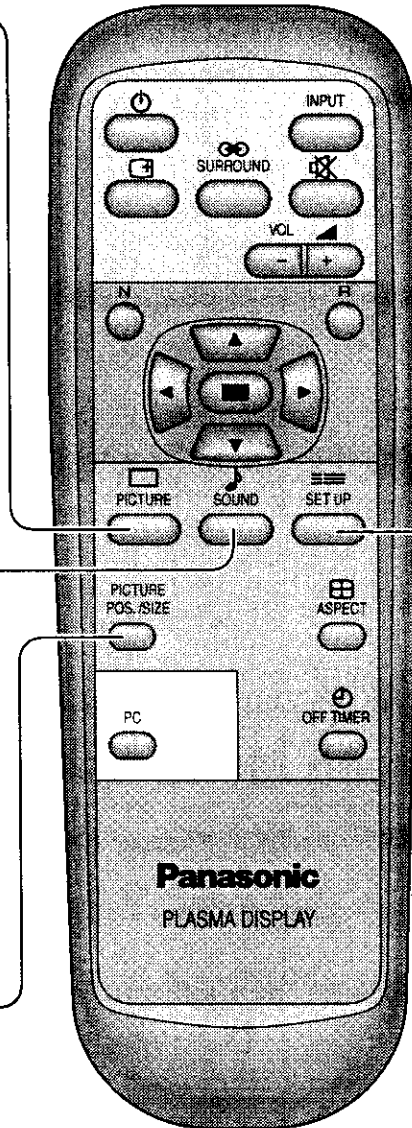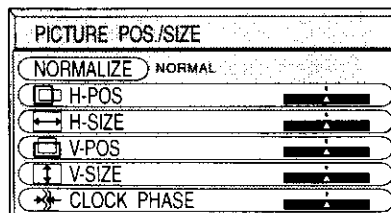

Press to select each menu.

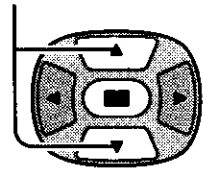


To SET UP menu (see page 32)

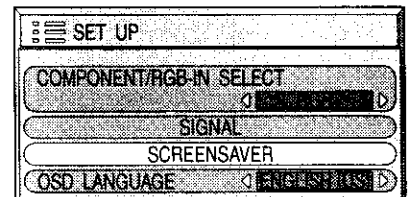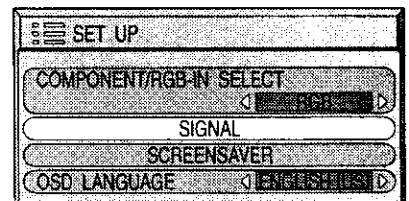

# On-Screen Menu Display from Remote Control

Press to access "SIGNAL" setup menu.

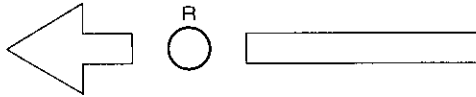


Press the R button to return to "SET UP" menu.


**Note:**

"SIGNAL" setup menu displays different setting condition for each input signals. (see page 19)


To SIGNAL screen for VIDEO (see page 32)

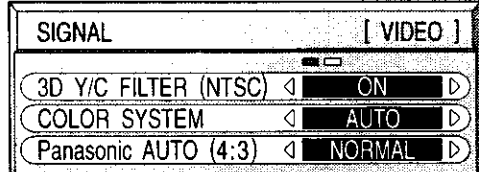


To SIGNAL screen for RGB (see page 34)

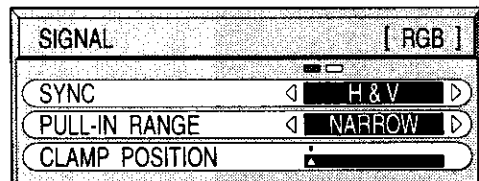



To SIGNAL screen for COMPONENT (see page 34)

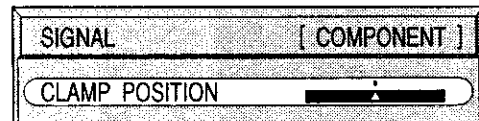

To SIGNAL screen for PC (see page 34)

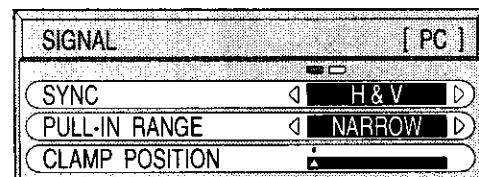


Press to access "SCREENSAVER" menu.(see page 30)

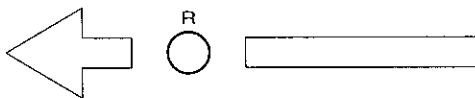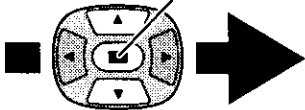

Press the R button to return to "SET UP" menu.

To setup SCREENSAVER.

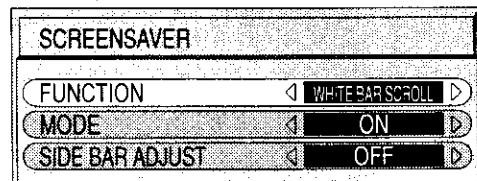


# ASPECT Controls

The Plasma Display will allow you to enjoy viewing the picture at its maximum size, including wide screen cinema format picture.




## ASPECT button






The aspect mode changes each time the ASPECT button is pressed.

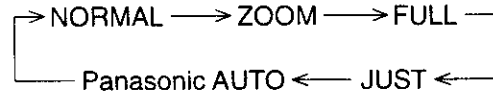

## Notes:

- (1) During RGB and PC input signal modes, the mode switches between "NORMAL", "ZOOM" and "FULL" only.
- (2) For a 525p (480p) signal input during "COMPONENT" input signal mode, the mode switches between "ZOOM" and "FULL" only.
- (3) For a 1125i (1080i), 750p (720p) signal input during "COMPONENT" input signal mode, the mode is set to "FULL" mode, and switching is not possible.  
For a 525i (480i), 625i (575i) signal input during "Component" input signal mode, "Panasonic Auto" can not be selected.
- (4) The aspect mode is memorized separately for each input terminal (VIDEO, COMPONENT, RGB and PC).

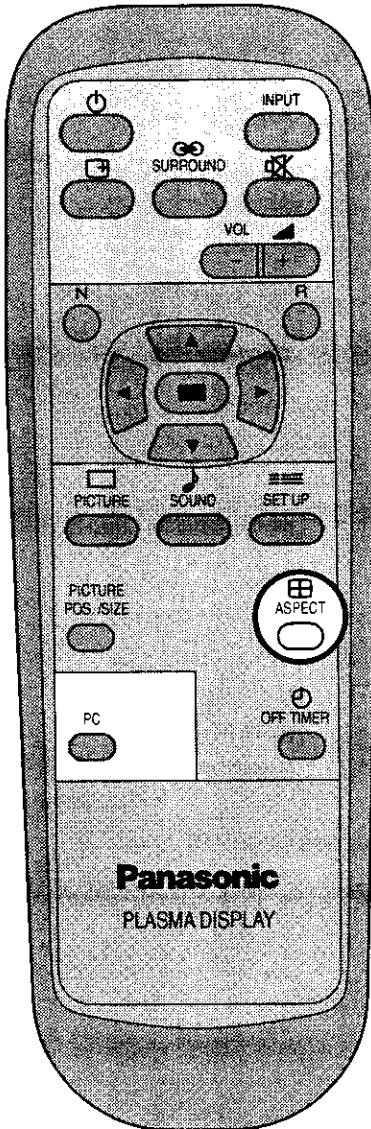

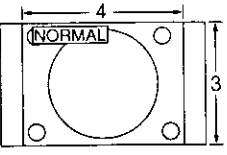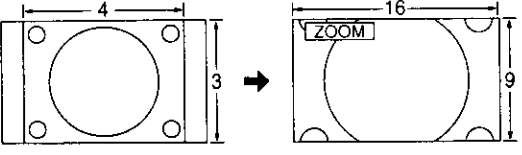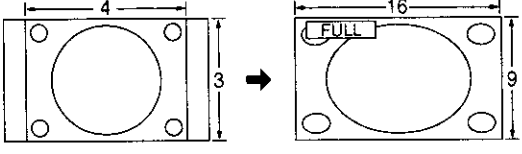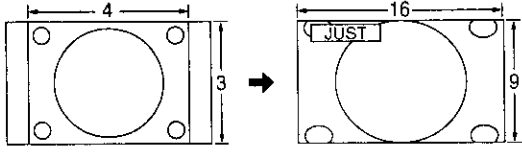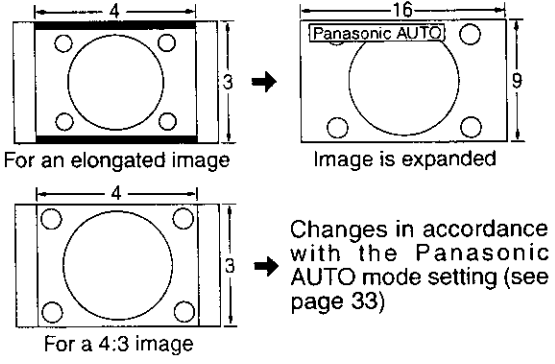

| Mode           | Picture   | Explanation  |
|----------------|---|--|
| NORMAL         |    | <p>NORMAL will display a 4:3 picture at its standard 4:3 size.</p>   |
| ZOOM           |    | <p>ZOOM mode magnifies the central section of the picture.</p>   |
| FULL           |    | <p>FULL will display the picture at its maximum size but with slight elongation.</p>   |
| JUST           |   | <p>JUST mode will display a 4:3 picture at its maximum size but with aspect correction applied to the center of the screen so that elongation is only apparent at the left and right edges of the screen. The size of the picture will depend on the original signal.</p>  |
| Panasonic AUTO |  | <p>The display will automatically become enlarged (depending on the picture source), allowing you to view the picture at its maximum size.</p> <p><b>Note:</b><br/>Panasonic AUTO mode is designed to automatically adjust the aspect ratio to handle a mix of 16:9 and 4:3 program material. Certain 4:3 program material, such as stock market data screens, may occasionally cause the image size to change unexpectedly. When viewing such programs, it is recommended that the ASPECT be set to NORMAL.</p> |



**Notes:**

 
- (1) Do not allow 4:3 mode to be displayed for an extended period, as this can cause a permanent after-image to remain on the Plasma Display Panel.
- (2) The S VIDEO terminal on this set can detect specially encoded signals that are compatible with a wide screen monitor. When a full image from the S VIDEO terminal of specially encoded video is detected by the set, the screen size is automatically set to FULL mode.

# Adjusting PICTURE POS./SIZE


## Adjusting screen

**1**  ASPECT  
 Press to select the screen mode to adjust.


**2**  PICTURE POS./SIZE  
 Press to display the PICTURE POS./SIZE menu.

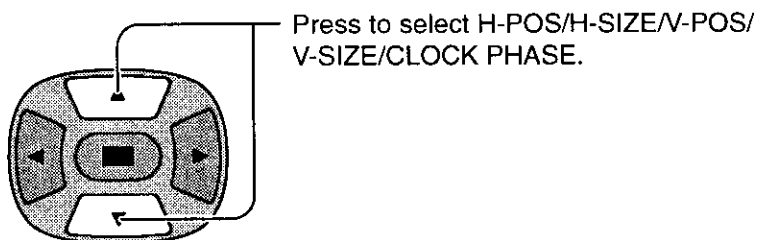


During "VIDEO" and "COMPONENT" input signal modes.

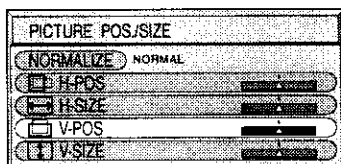


During "RGB" and "PC" input signal modes.

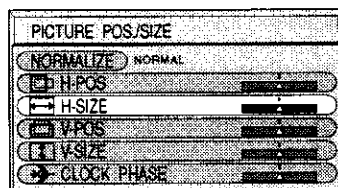

**3**  Press to adjust screen/position.

  R Press to exit from adjust mode.








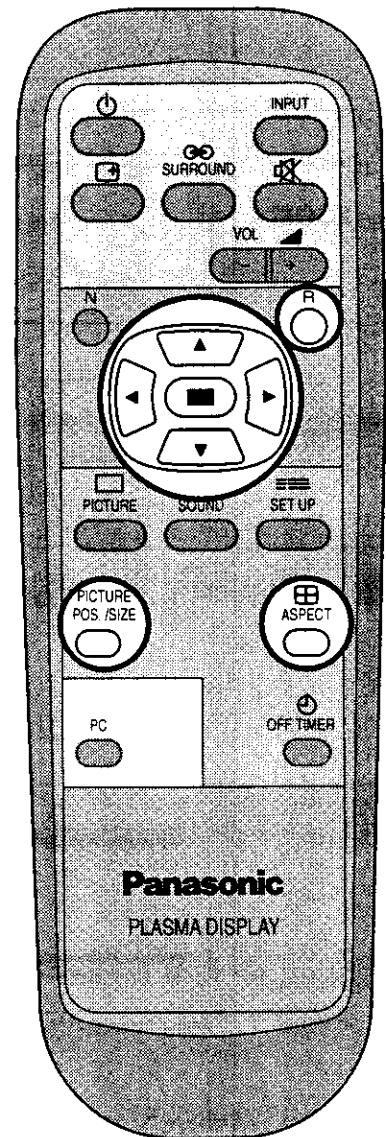


### Notes:


- (1) Adjustment details are memorized separately for different input signal formats (Adjustments for component signals are memorized for 525i (480i), 625i (575i), 525p (480p), 1125i (1080i) and 625p (575p), 750p (720p) each, and RGB/PC signals are memorized for each frequency.)
- (2) If a "Cue" or "Rew" signal from a VCR or DVD player is received, the picture position will shift up or down. This picture position movement cannot be controlled by the PICTURE POS./SIZE function.




# Adjusting PICTURE POS./SIZE
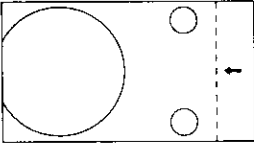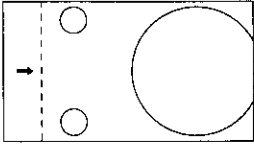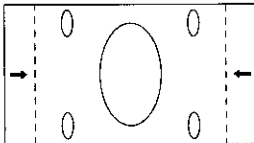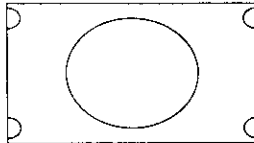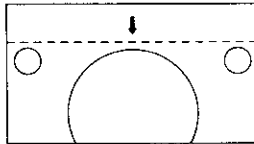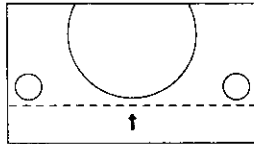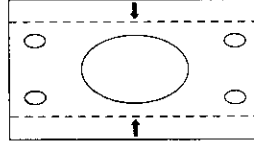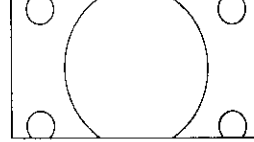
|  |   |  |
|--|---|--|
| <p><b>H-POS</b></p>                        | <p>When the Position Left “◀” button is pressed</p>    | <p>When the Position Right “▶” button is pressed</p>    |
| <p><b>H-SIZE</b></p>                       | <p>When the Position Left “◀” button is pressed</p>    | <p>When the Position Right “▶” button is pressed</p>    |
| <p><b>V-POS</b></p>                        | <p>When the Position Left “◀” button is pressed</p>    | <p>When the Position Right “▶” button is pressed</p>    |
| <p><b>V-SIZE</b></p>                       | <p>When the Position Left “◀” button is pressed</p>  | <p>When the Position Right “▶” button is pressed</p>  |
| <p><b>CLOCK PHASE (RGB/PC in Mode)</b></p> | <p>Flickering and distortion can be eliminated by using the Position Left “◀” or Right “▶” button to carry out adjustment.</p>          |  |



## Helpful Hint ( / Normalization )

 While the PICTURE POS./SIZE display is active, if either the N button on the remote control is pressed at any time or the  (ACTION button) is pressed during “NORMALIZE”, then all adjustment values are returned to the factory settings.



# SOUND Adjustment

1  Press to display the Sound menu.


2 Select to adjust each item.

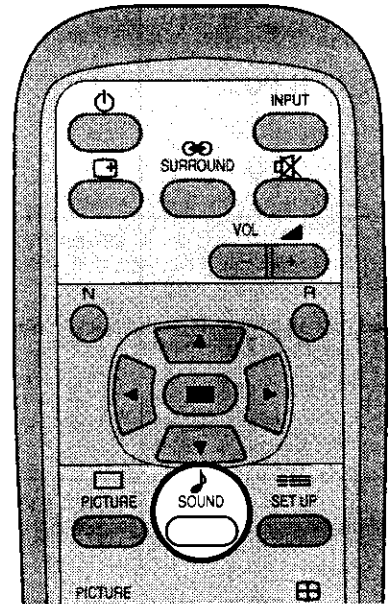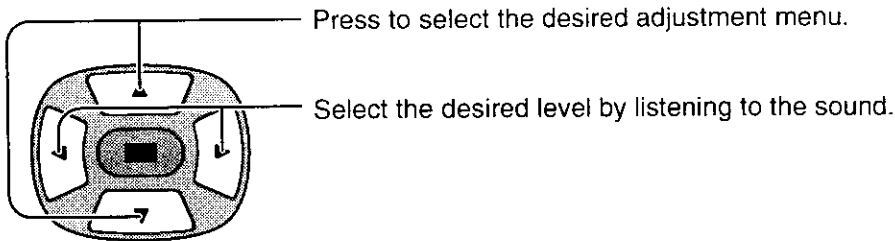

- BASS**  
Adjusts low sounds
- TREBLE**  
Adjusts high sounds
- BALANCE**  
Adjusts left and right volumes
- SURROUND** (see next page)  
Select ON or OFF

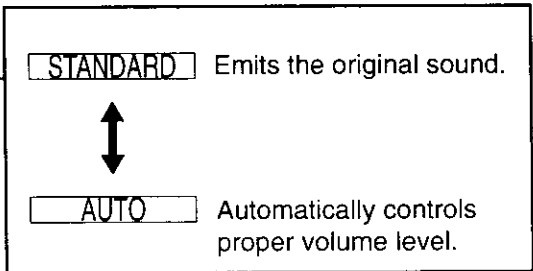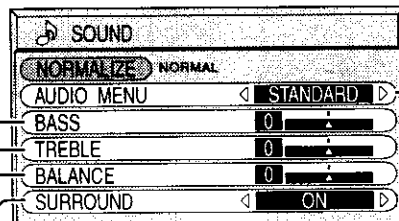


• To end adjustments

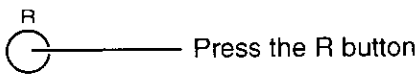


**Note:**  
Press the SURROUND button to directly turn the surround effect ON and OFF. (see next page)

## Helpful Hint ( / Normalization )

While the "SOUND" menu is displayed, if either the N button on the remote control is pressed at any time or the  (ACTION button) is pressed during "NORMALIZE", then all adjustment values are returned to the factory settings.

## Mute

Useful when answering the phone or receiving unexpected visitors.

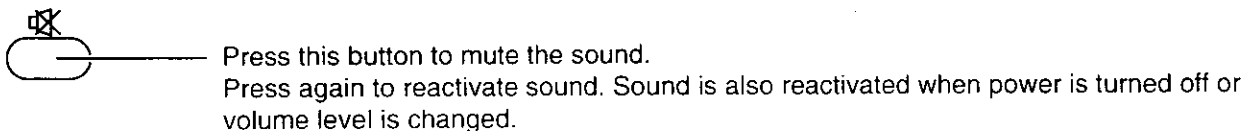

# SURROUND Controls




## SURROUND Button

The benefits of surround sound are enormous. You can be completely enveloped in sound; just as if you were at a concert hall or cinema.


The surround setting switches on and off each time the SURROUND button is pressed.

ON  $\longleftrightarrow$  OFF

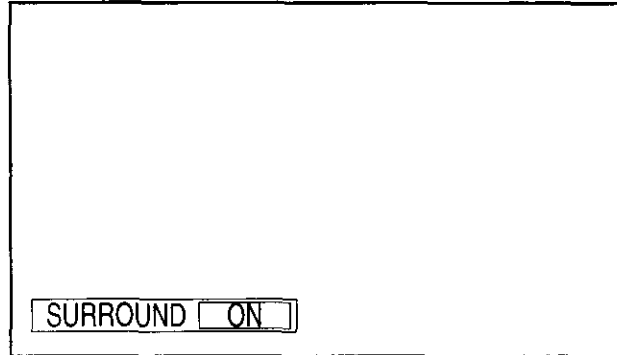


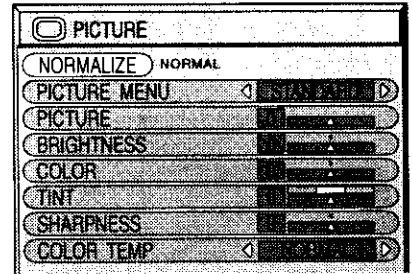
### Note:

The surround settings are memorized separately for each SOUND mode (AUTO, STANDARD).


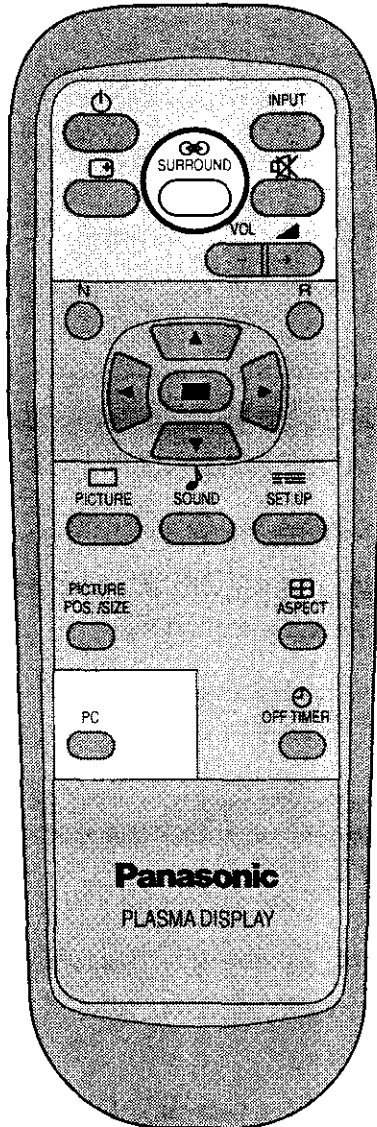


# PICTURE Adjustments


- 1  Press the PICTURE button on the Remote Control to display the PICTURE menu.



- 2 Select to adjust each item.

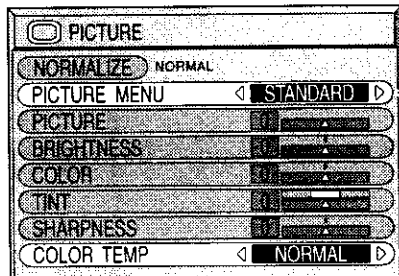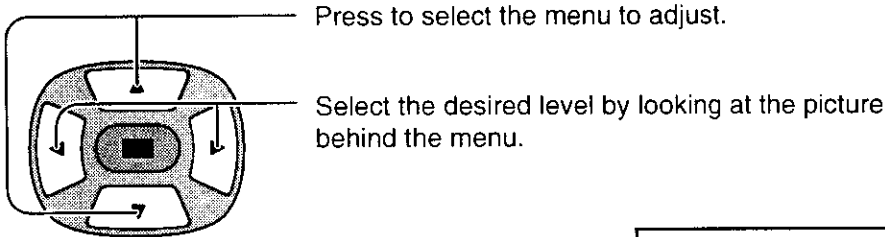

Press the left ◀ or right ▶ button to switch between modes.

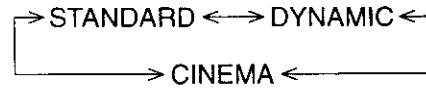

## STANDARD

For viewing in standard (evening lighting) environments.

This menu selects the normal levels of BRIGHTNESS and PICTURE.

## DYNAMIC

For viewing in brighter environments.

This menu selects higher than normal levels of BRIGHTNESS and PICTURE.

## CINEMA


Ideal for movies.

- Can be selected for VIDEO/COMPONENT.


### Note:

If you would like to change the picture and color of the selected PICTURE menu to something else, adjust using the items in the PICTURE menu. (see next page)



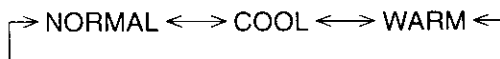







Press the left ◀ or right ▶ button to switch between modes.



## Helpful Hint ( / Normalization)

While the "PICTURE" menu is displayed, if either the N button on the remote control is pressed at any time or the  (ACTION button) is pressed during "NORMALIZE", then all adjustment values are returned to the factory settings.

## PICTURE Adjustments

| Item                | Effect   | Adjustments  |
|---------------------|--|--|
| PICTURE             |  <br>Less      More        | Selects the proper brightness and density for the room.                          |
| BRIGHTNESS          |  <br>Darker      Brighter  | Adjusts for easier viewing of dark pictures such as night scenes and black hair. |
| COLOR               |  <br>Less      More        | Adjusts slightly to a lighter color.   |
| TINT<br>(NTSC only) |  <br>Reddish      Greenish | Adjust for nice skin color.  |
| SHARPNESS           |  <br>Less      More        | Displays a sharp image.  |


### Notes:

- (1) "COLOR", "TINT" and "SHARPNESS" settings cannot be adjusted for "RGB" and "PC" input signal modes.
- (2) You can change the level of each function (PICTURE, BRIGHTNESS, COLOR, TINT, SHARPNESS) for each PICTURE menu.
- (3) The setting details for normal, dynamic and cinema respectively are memorized separately for each input mode (VIDEO, COMPONENT, RGB).
- (4) The "TINT" setting can be adjusted for NTSC signal only.

### Note:


There is little change when PICTURE is increased with a bright picture or reduced with a dark picture.


## Helpful Hint ( / Normalization )


While the "PICTURE" menu is displayed, if either the N button on the remote control is pressed at any time or the  (ACTION button) is pressed during "NORMALIZE", then all adjustment values are returned to the factory settings.

# SCREENSAVER (For preventing after-images)


Do not display a still picture, especially in 4:3 mode, for any length of time. If the display must remain on, a SCREENSAVER should be used.

1  Press to display the SETUP menu screen.

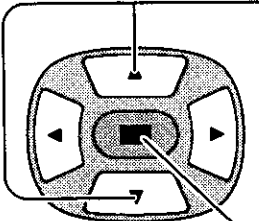
2  Press to select the SCREENSAVER.  
Press to select the SCREENSAVER screen.

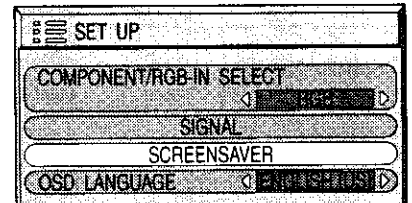

## NEGATIVE / SCROLL selection

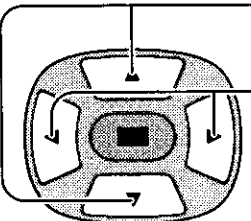3  Press to select the Function.  
Press to select the desired function.


→ NEGATIVE ←  
→ WHITE BAR SCROLL ←

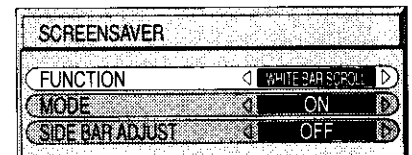


NEGATIVE : Negative image will be displayed on the screen.

WHITE BARSCROLL : The white bar will scroll from left to right.

## ON / OFF selection

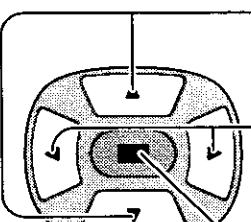4  Press to select the MODE.  
Press to select ON or OFF.


If the MODE is at ON, the menu screen will disappear and the SCREENSAVER will be activated.

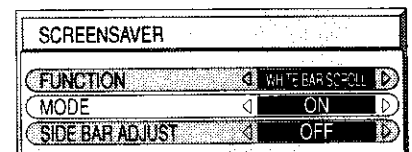

**To stop the SCREENSAVER under ON, press the  button.**

# SIDE BAR ADJUST

Do not display a picture in 4:3 mode for an extended period, as this can cause an after-image to remain on the side bars either side of the display field.  
To prevent the appearance of such an after-image, illuminate the side bars.

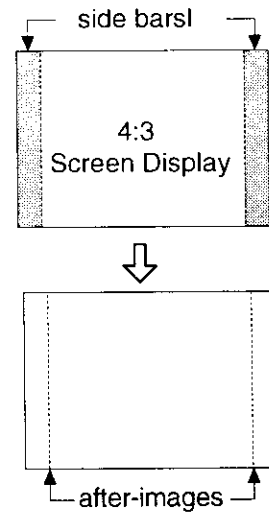


**1** To display the SCREENSAVER screen.  
(Refer to the previous page, operation guide steps 1 and 2)

**2**

Press to select the  
SIDE BAR ADJUST.

Press to select  
DARK, MID, BRIGHT.

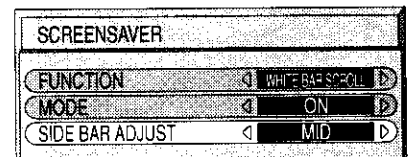

OFF ↔ DARK ↔ MID ↔ BRIGHT

**3** Press to exit from SCREENSAVER.

**Notes:**

- Setting the side bar to BRIGHT mode for an extended period may result in occurrence of after-images.
- The side bars may flash (alternate black/white) depending on the picture being shown on the screen. In such an occurrence, use the Cinema mode.

# SET UP for Input Signals

## COMPONENT/RGB IN SELECT

Select to match the signals from the source connected to the COMPONENT/RGB input terminals.


Y, P<sub>B</sub>, P<sub>R</sub> signals ⇔ "COMPONENT"

R, G, B, HD, VD signals ⇔ "RGB"


1



Press to display the SET UP menu screen.

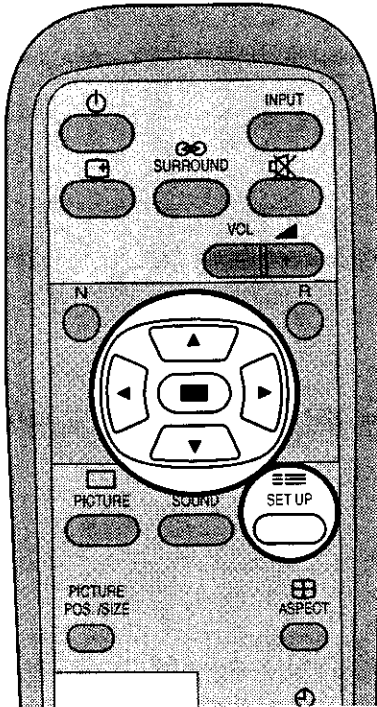


2

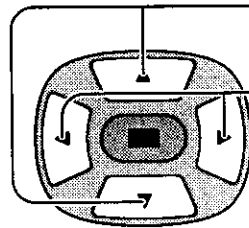

Press to select the "COMPONENT/RGB IN SELECT".

Press to select the desired mode.

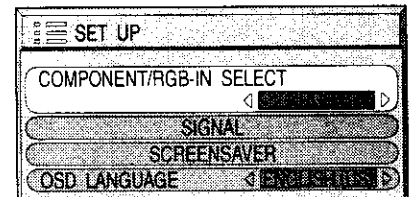


COMPONENT ↔ RGB



Press to exit from adjust mode.

## 3D Y/C FILTER – For NTSC Video images

Select "SIGNAL" from the "SET UP" menu during VIDEO input signal mode.  
("SIGNAL [VIDEO]" menu is displayed.)

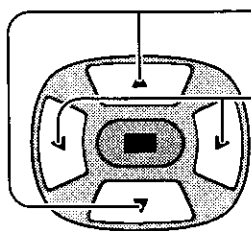


Press to select the "3D Y/C FILTER (NTSC)"


Press to set ON/OFF.



Press to exit from adjust mode.

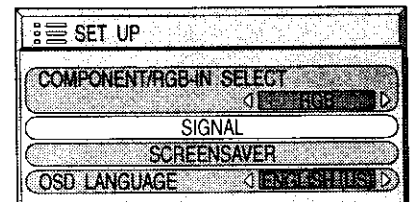

Press (ACTION) button

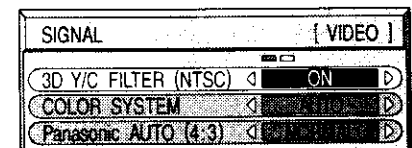



### Note:

When on, this setting only affects NTSC input signals.



## COLOR SYSTEM / Panasonic AUTO


Select SIGNAL from the "SET UP" menu during VIDEO (S VIDEO) input signal mode. ("SIGNAL [VIDEO]" menu is displayed.)

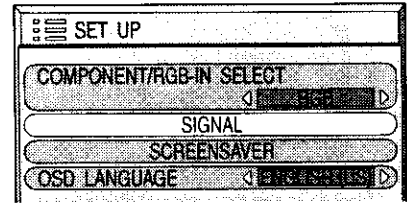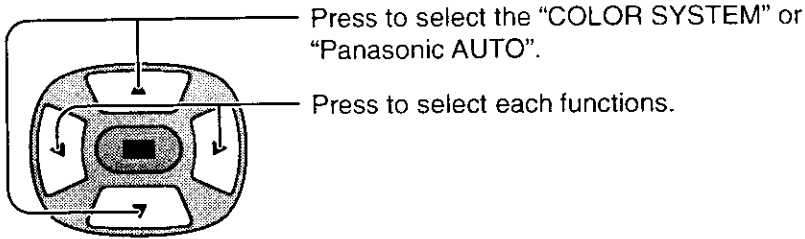

↓ Press (ACTION) button

### If the picture image becomes unstable:


With the system set on Auto, under conditions of low level or noisy input signals the image may in rare cases become unstable. Should this occur, set the system to match the format of the input signal.

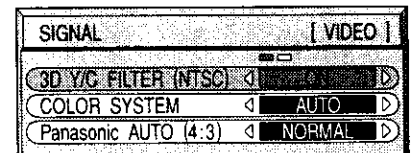




| Mode                 | Function   |
|----------------------|--|
| Color system         | Set the color system to match the input signal. If set to "AUTO", the color system is determined automatically.<br><div style="text-align: center; border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;">                     → AUTO ↔ PAL ↔ SECAM ↔ M.NTSC ↔ NTSC ←                 </div> |
| Panasonic AUTO (4:3) | Set to "NORMAL" to view 4:3 images in an unchanged format when Panasonic AUTO is selected. If you would like to view 4:3 images in "Just" format, set to "JUST".   |

# SET UP for Input Signals

Select SIGNAL from the "SET UP" menu during RGB or PC input signal mode.

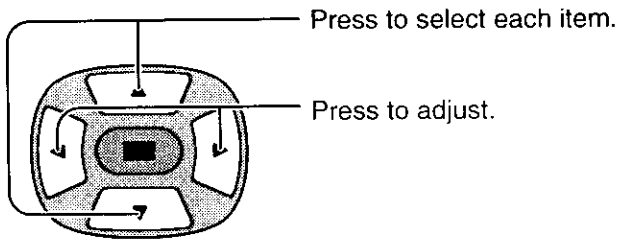

The following operation methods are the same for both the SIGNAL [RGB] and SIGNAL [PC].

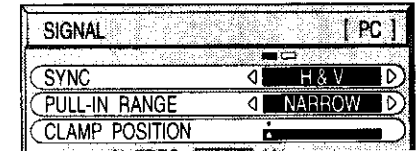
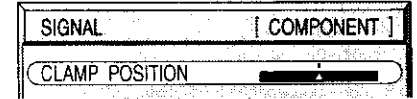
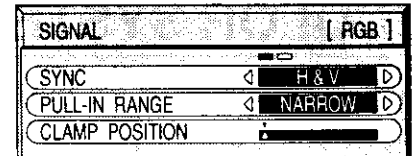


## SYNC

### Setting RGB sync signal

Confirm that the input is set to RGB INPUT (this setting is valid only for RGB INPUT).

- H&V: The H and V sync signals are input from the HD/VD connector.
- ON G: Uses a synchronized signal on the Video G signal, which is input from the G connector.
- ON VIDEO: Compatible with the scart plug (Europe)  
The composite video signal input from the VIDEO input terminal is used by dividing the sync signals.

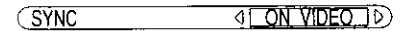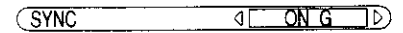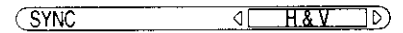

### Setting PC sync signal



Confirm that the input is set to PC INPUT (this setting is valid only for PC INPUT).

- H&V: The H and V sync signals are input from the HD/VD connector.
- ON G: Uses a synchronized signal on the Video G signal, which is input from the G connector.

## PULL IN RANGE

Sets the width for different frequencies.


(This setting is the same for both SIGNAL [RGB] and SIGNAL [PC].)

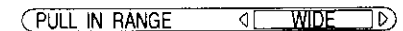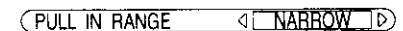

## CLAMP POSITION

Adjusts the clamp position.

The following operation methods are the same for "SIGNAL" menu during COMPONENT, RGB and PC input signal mode. Normally, these adjustments are set to appropriate levels, and therefore, do not need to be altered.

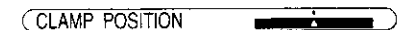


## H-FREQ (kHz)/V-FREQ (Hz)

Displays the H (Horizontal)/V (Vertical) frequencies.

This display is valid only for RGB input and PC input.






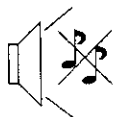

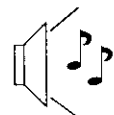
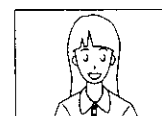
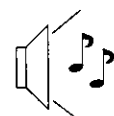
Display range:

- Horizontal 15.5 - 110 kHz
- Vertical 48 - 120 Hz

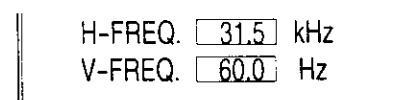


# Troubleshooting

Before you call for service, determine the symptoms and make a few simple checks as shown below.
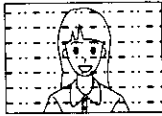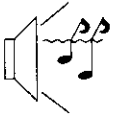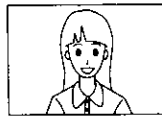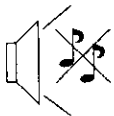
| Symptoms  |   | Checks  |
|---|---|---|
| Picture   | Sound   |   |
|  <p>Interface</p>      |  <p>Noisy Sound</p>    | Electrical Appliances<br>Cars/Motorcycles<br>Fluorescent light  |
|  <p>Normal Picture</p> |  <p>No Sound</p>       | Volume<br>(Check whether the mute function has been activated on the remote control.)   |
|  <p>No Picture</p>     |  <p>No Sound</p>       | Not plugged into AC outlet<br>Not switched on<br>PICTURE and BRIGHTNESS/Volume setting<br>(Check by pushing the power switch or stand-by button on the remote control.) |
|  <p>No Picture</p>    |  <p>Normal Sound</p>  | If a signal with a non-applicable color system format, or frequency is input, only the input terminal indication is displayed.  |
|  <p>No Color</p>     |  <p>Normal Sound</p> | Color controls set at minimum level.<br>Color system (see page 28, 29)  |

## Plasma Display panel

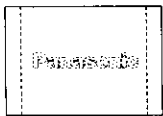
| Symptoms   | Check  |
|--|--|
| Some parts of the screen do not light up   | The plasma display panel is manufactured using an extremely high level of precision technology, however, sometimes some parts of the screen may be missing picture elements or have luminous spots. This is not a malfunction.   |
|  <p>After-images appear</p> | Do not allow a still picture to be displayed for an extended period, as this can cause a permanent after-image to remain on the Plasma Display.<br>Examples of still pictures include logos, video games, computer images, teletext and images displayed in 4:3 mode.<br><br><b>Note:</b><br>The permanent after-image on the Plasma Display resulting from fixed image use is not an operating defect and as such is not covered by the Warranty.<br>This product is not designed to display fixed images for extended periods of time. |
| Whirring sounds can be heard from the display unit.  | The display unit is fitted with a cooling fan to dissipate heat generated during normal use. The whirring sound is caused by rotation of the fan and is not a malfunction.   |





# Specifications

|                             |  | <b>TH-42PW4</b>   |
|-----------------------------|--|---|
| <b>Power Source</b>         | 120 V AC, 50/60 Hz   |   |
| <b>Power Consumption</b>    |  |   |
| Maximum                     | 395W   |   |
| Stand-by condition          | 1.2 W  |   |
| Power off condition         | 0.9 W  |   |
| <b>Plasma Display panel</b> | Drive method AC type<br>42-inch, 16:9 aspect ratio   |   |
| Contrast Ratio              | 3000:1   |   |
| Brightness Capability       | (Panel only) 780 cd / m <sup>2</sup><br>(As a set) 400 cd / m <sup>2</sup>   |   |
| <b>Screen size</b>          | 920 mm (W) × 518 mm (H) × 1056 mm (diagonal)<br>No. of pixels<br>408,960 (852 (W) × 480 (H)) [2,556 × 480 dots]                                      |   |
| <b>Operating condition</b>  |  |   |
| Temperature                 | 34 °F - 104 °F (0 °C - 40 °C)  |   |
| Humidity                    | 20 % - 80 %  |   |
| <b>Applicable signals</b>   |  |   |
| Color System                | NTSC, PAL, PAL60, SECAM, Modified NTSC   |   |
| Scanning format             | 525i (480i), 625i (575i), 525p (480p), 625p (575p), 750p (720p), 1125/60i, 50i, 24p, 24SF (1080/60i, 50i, 24p, 24SF) ..... SMPTE 274M                |   |
| PC signals                  | VGA display<br>VGA<br>SVGA, SXGA, UXGA ..... (compressed)<br>Horizontal scanning frequency 15.5 - 110 kHz<br>Vertical scanning frequency 48 - 120 Hz |   |
| <b>Connection terminals</b> |  |   |
| AV                          | Video IN (RCA)<br>S VIDEO IN (MINI DIN 4PIN)<br>AUDIO IN (RCA PIN JACK × 2)  | 1.0 Vp-p (75-ohm)<br>Y: 1 Vp-p (75-ohm), C: 0.286 Vp-p (75-ohm)<br>0.5 Vrms (high impedance)  |
| COMPONENT/RGB               | Y/G (RCA)<br><br>P <sub>B</sub> /B (RCA)<br>P <sub>R</sub> /R (RCA)<br>HD (RCA)<br>VD (RCA)<br>AUDIO IN (RCA PIN JACK × 2)                           | 1.0 Vp-p/composite (75-ohm)<br>0.7 Vp-p/non-composite (75-ohm)<br>0.7 Vp-p (75-ohm)<br>0.7 Vp-p (75-ohm)<br>1.0 - 5.0 Vp-p (high impedance)<br>1.0 - 5.0 Vp-p (high impedance)<br>0.5 Vrms (high impedance) |
| PC                          | (HIGH-DENSITY D-SUB 15PIN)<br><br>AUDIO IN (M3.5 JACK)   | R,G,B/0.7 Vp-p (75-ohm)<br>HD, VD/1.0 - 5.0 Vp-p (high impedance)<br>0.5 Vrms (high impedance)  |
| SERIAL                      | EXTERNAL CONTROL TERMINAL (D-SUB9PIN)  | RS-232C COMPATIBLE  |
| SPEAKERS (6 Ω)              | 16W [8 W + 8 W] (10 % THD)<br>For TY-SP42PWD3W only  |   |
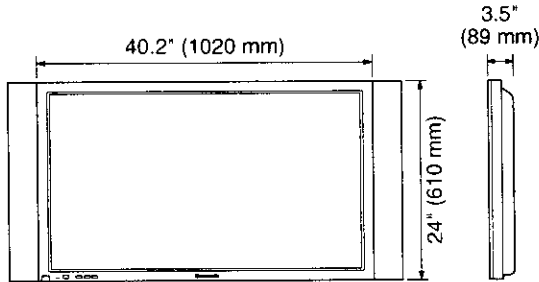
| <b>TH-42PW4</b>                   |   |
|-----------------------------------|---|
| <b>Accessories Supplied</b>       |   |
| Remote Control Transmitter        | EUR646525   |
| Batteries                         | 2 × AA Size   |
| Ferrite core                      | 2 × J0KF00000018  |
| Fixing bands                      | 2 × TMME187   |
| <b>Optional Supplied</b>          |   |
| Speakers                          | TY-SP42PWD3W  |
| Pedestal                          | TY-ST42PT3-K  |
| Wall stand                        | TY-ST42PW1  |
| Wall-hanging bracket(angled)      | TY-WK42PR1  |
| Tuner Terminal Board              | TY-42TM4H   |
| Connecting cable                  | TY-SCP15C03   |
| <b>Dimensions<br/>(W × D × H)</b> | <p>40.2" (1020 mm) × 24" (610 mm) × 3.5" (89 mm)</p>  <p>The drawing shows a rectangular unit. The front view is a rectangle with a width dimension of 40.2" (1020 mm) and a height dimension of 24" (610 mm). A side view shows the unit's depth as 3.5" (89 mm).</p> |
| <b>Weight (Mass)</b>              | <p>approx. 65.0 lbs (main unit only)<br/>approx. 74.3 lbs (with speakers)</p>   |

**Note:**  
Design and specifications are subject to change without notice. Weight and dimensions shown are approximate.

**Customer' Record**

The model number and serial number of this product can be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number      TH-42PW4

Serial Number \_\_\_\_\_

**Panasonic Consumer Electronics  
Company, Division of Matsushita  
Electric Corporation of America**  
One Panasonic Way Secaucus  
New Jersey 07094

**Panasonic Sales Company,  
Division of Matsushita Electric  
of Puerto Rico Inc. ("PSC")**  
Ave. 65 de Infanteria, Km 9.5  
San Gabriel Industrial Park,  
Carolina, Puerto Rico 00985

**Panasonic Canada Inc.**  
5770 Ambler Drive  
Mississauga, Ontario  
L4W 2T3