


RCA

video cassette recorder user's guide

VR622HF

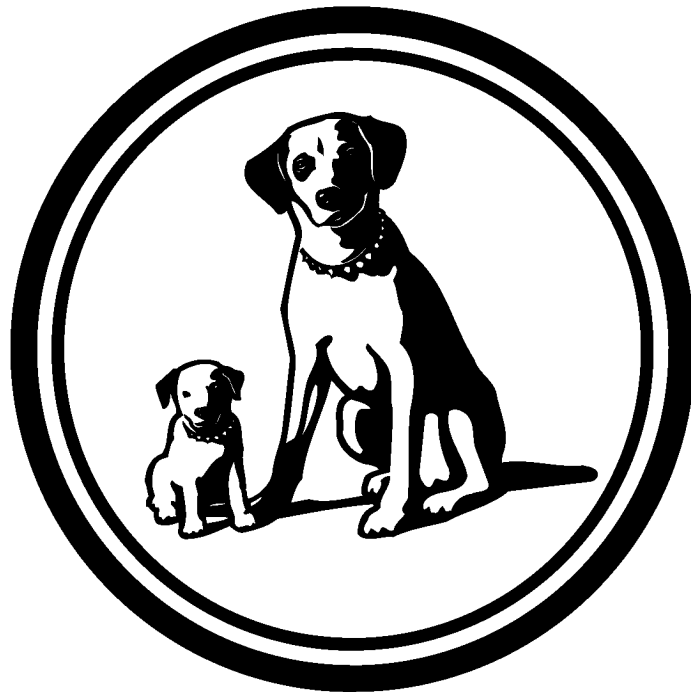

IMPORTANT INFORMATION

WARNING

RISK OF ELECTRIC SHOCK DO NOT OPEN

To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.




This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

WARNING

To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

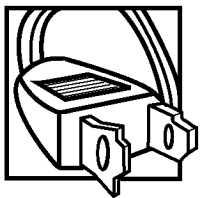

Caution: To reduce the risk of electric shock, match wide blade of plug to wide slot, fully insert.

Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Refer to the identification/rating label located on the back panel of your product for its proper operating voltage.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Cable TV Installer: This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Product Registration

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. The numbers are located on the back of the product.

Model No. **VR622HF** _____

Serial No. _____

Purchase Date: _____

Dealer/Address/Phone: _____

TABLE OF CONTENTS

First things First	3
Setting up the VCR	7
Using the Menu to Set Up Features	8
Language	8
Cable Box Setup	8
VCR Channels List.....	10
To Auto Channel Search.....	10
To Change the Signal Type.....	11
To Add or Remove Channels	11
Time and Date.....	12
Set Daylight-Saving Time.....	12
Set the Time and Date	12
VCR PLUS+ CHANNELS	13
VCR Plus+ Worksheet.....	15
Additional Set-Up Features in the Preferences Menu	16
Remote VCR1/VCR2 Option	16
Auto Play.....	17
Auto TV/VCR.....	17
EnergySaver	18
Tape Speed	18
VCR Basics	19
Remote Buttons	20
Playing a Tape	21
Automatic Rewind	22
Tape Eject	22
Recording	22
Check the Safety Tab.....	22
Recording	23
Recording Features	24
Express Recording (XPR)	24
Timer Recording.....	25
Timer Recording with VCR Plus+	26
Setting Up the Channel List.....	26
Using VCR Plus+	26
Stopping a Timer Recording	28
Reviewing and Clearing Programs	28
Recording Broadcast Stereo TV or SAP	28
Recording Audio Only	29
Playing Back Audio Only	29
Using Two VCRs for Copying and Editing Tapes	30

TABLE OF CONTENTS

Other Features	31
Picture Search Options	32
Forward and Reverse Search	32
Slow Motion	32
Commercial Scan (Search Button)	32
Frame Advance	33
Index Search	33
Zero Search	34
Pro-Tect Plus™ Locking Feature	34
Time Counter	35
On-Screen Displays	35
Tracking	36
Audio Set-up Features	36
Reception	37
Tape Playback	37
Connections	39
Connecting Your VCR	40
Jacks and Cables	40
RF Jacks and Coaxial Cables (F-type)	40
Audio/Video Jacks and Cables (RCA-type)	40
Choosing a VCR Connection	41
Advantages of Audio/Video Cable Connections	41
Don't Forget About the Auto TV/VCR Feature	41
TV With RF Jack Only	42
TV With Audio/Video Jacks	43
TV With Audio/Video Jacks and Cable Box to Unscramble Pay Channels Only	44
Reference	45
Front Panel	46
Back Panel	47
Indicator Panel	47
Troubleshooting Tips	48
Specifications	51
Cleaning the VCR	51
Limited Warranty	52
Index	53

FIRST THINGS FIRST

HI, MY NAME IS ROGER...

and I wrote this User's Guide. It's my job to see that you have a rewarding user manual experience. You'll find that I've arranged this manual to clearly explain all your VCR's features.

READ THE FIRST THREE SECTIONS

The first three sections of the manual introduce you to your VCR, and show you how to set the VCR up and use the on-screen menus. Reading these sections gives you the basic information you need to use your VCR.

WHAT'S LEFT?

The rest of the book highlights playback and recording information, contains a detailed connections section, and a reference section that includes troubleshooting tips, limited warranty, and index.

1 FIRST THINGS FIRST



2 SETTING UP THE VCR



3 VCR BASICS



4 RECORDING



5 OTHER FEATURES



6 CONNECTIONS

READ ME!

These note boxes give you tips for your new video cassette recorder.

FIRST THINGS FIRST

STEP 1: UNPACK WHAT'S IN THE BOX

The following items come packed in the box:

- VCR
- Remote control
- RF antenna cable

STEP 2: INSTALL BATTERIES IN THE REMOTE CONTROL

Follow these steps whenever you need to install or change the batteries in your VCR remote.

1. Remove the cover of the battery compartment.
2. Place batteries in remote, matching the + and – ends of each battery to the diagram inside the compartment.
3. Replace the cover.


STEP 3: CONNECT YOUR VCR

If you connect your VCR to your home antenna or cable system and then to your TV, use the VCR's IN FROM ANTENNA and OUT TO TV jacks for a good signal as shown.

If you have a TV with AUDIO/VIDEO jacks, use these jacks for a better connection. In order to hear stereo and hi-fi sound from the VCR, the audio/video jacks must be used. Refer to the *Connections* section, toward the back of the manual.

STEP 4: PLUG IN THE VCR

Match the wide blade of the plug with the wide slot in the outlet. Be sure to insert the plug completely.

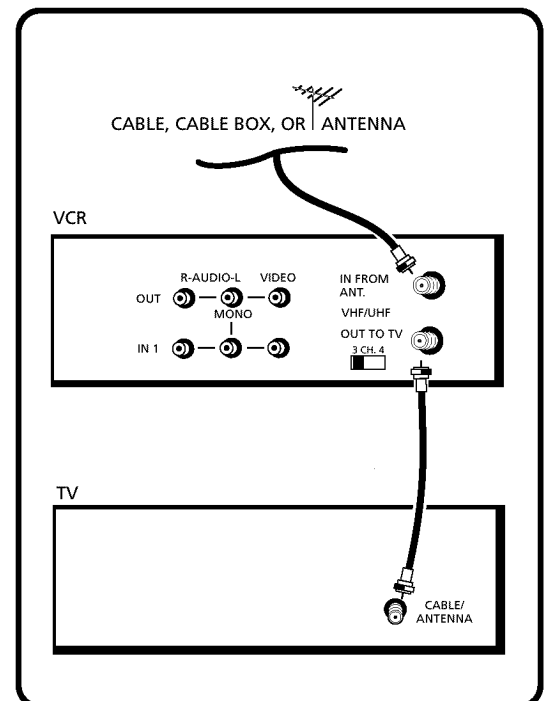

FIRST THINGS FIRST

STEP 5: TUNE THE TV

Tune the TV to the VCR viewing channel. The VCR viewing channel is channel 3 or 4 or the TV's video input.

- If you connect your VCR using the ANTENNA connectors with RF antenna cable, set the 3CH.4 switch to channel 3 or channel 4—the channel you want to use on your TV.
- If you connect your VCR using the AUDIO/VIDEO jacks with audio/video cables, select the TV's video input to see the signal. See the *TV Owner's Manual*.


STEP 6: TURN ON THE VCR

Press POWER to turn on the VCR.

STEP 7: INTERACTIVE SETUP

The first time the VCR is turned on, Interactive Setup—a brief series of on-screen menus—appears. These menus assist in setting up several of the VCR's features. Use the remote's number buttons to select options.

1. Press 1 for English, 2 for Español (Spanish), or 3 for Français (French).

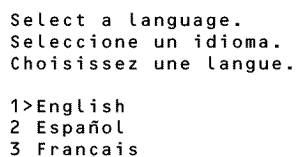

Select a language.
Seleccione un idioma.
Choisissez une langue.

1>English
2 Español
3 Français

The remaining Interactive Setup menus will appear in the language you choose. Follow the on-screen instructions to complete the process.

VCR Viewing Channel

When using the ANTENNA jacks to connect your VCR, tune your TV to channel 3 or 4.

When using the audio/video jacks to connect your VCR, tune your TV to the TV's video input.

FIRST THINGS FIRST

STEP 8: ACCESS THE MENUS

When you've completed Interactive Setup, try out the VCR's regular on-screen menus. The MENU and number buttons let you access, select, and change menu items. For example, to change the Auto Play setting, you would do the following:

1. Press MENU to bring up the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 5 to display the PREFERENCES menu.

```
PREFERENCES
1 Remote Control: VCR1
2 Auto Play: ON
3 Auto TV/VCR ON
4 EnergySaver: 2:00
5 Tape Speed: SLP
0 Exit
```

3. Press 2 to switch AUTO PLAY to ON or OFF.

```
PREFERENCES
1 Remote Control: VCR1
2 Auto Play: OFF
3 Auto TV/VCR ON
4 EnergySaver: 2:00
5 Tape Speed: SLP
0 Exit
```

See *Setting Up the VCR* for detailed information about the Auto Play feature. Once you understand how to use the menus, move on to the next section.

SETTING UP THE VCR

SET-UP FEATURES

Below is a list of features that you can customize using the on-screen menus.

- Select a language
- Set up VCR channel list (AUTO CHANNEL SEARCH)
- Set up for a cable box
- Set automatic daylight-saving time
- Set the time and date
- Set up VCR Plus+ channels
- Set the REMOTE VCRI/VCR2 feature
- Set the AUTO PLAY feature
- Set the AUTO TV/VCR feature
- Set the EnergySaver™ feature
- Set the preferred Tape Speed

1 FIRST THINGS FIRST



2 SETTING UP THE VCR



3 VCR BASICS



4 RECORDING



5 OTHER FEATURES



6 CONNECTIONS

SETTING UP THE VCR

USING THE MENU TO SET UP FEATURES

You can change the setup of the VCR's features using the menu system. Each feature is explained in this section.

LANGUAGE

Select your preferred language, and the on-screen displays will appear in that language.

1. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 7 to select and display the LANGUAGE menu.

```
LANGUAGE
Select a language.
1>English
2 Español
3 Français
Press MENU to continue
```

3. Select English, Español (Spanish), or Français (French).

CABLE BOX SETUP

This setup applies only when all channels are received through the cable box. The VCR will automatically enter the output channel of the cable box when programming your VCR for timer recordings.

On-screen Menus

Not all the VCR screens are shown in this manual when explaining the features.

SETTING UP THE VCR

1. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 4 to display the CHANNELS menu.

```
CHANNELS
1 Auto Channel Search
2 Add/Remove Channels
3 Signal Type: CABLE
4 VCR Plus+ Channel List
5 Cable Box Setup
0 Exit
```

3. Press 5 to display CABLE BOX SETUP. Then select one of the three choices.

```
CABLE BOX SETUP
Do you use your cable
box to receive ALL
channels or only SOME
channels.
1 ALL channels
2 Only SOME channels
3 Cancel setup
```

4. If you select ALL CHANNELS, enter the output channel of your cable box, usually 03, 04, or video line input and press MENU.

```
CABLE BOX SETUP
On what channel does
the VCR receive signals
from the cable box?
(usually 3, 4, or Video)
04
Enter 01-13 or INPUT
Press MENU to cancel
```

```
CABLE BOX SETUP
The VCR will now
receive all signals
from the cable box
on channel 04.
Press MENU to continue
```

Once you complete the setup, the VCR confirms that Cable Box Setup is complete.

Cable Box Setup

ALL CHANNELS: enter two numbers for output channel of your cable box or press INPUT.

ONLY SOME CHANNELS: If you only use the cable box to tune premium channels.

CANCEL SETUP: select to cancel.

All Channels

If you do not use a cable box for *ALL* channels, then you will want to use a channel list (Auto Channel Search).

SETTING UP THE VCR

VCR CHANNELS LIST

Your VCR may come with a channel list preset at the factory. Even though your VCR may come with a list, it's possible that you may want to add or eliminate some channels depending on whether they are active.

To AUTO CHANNEL SEARCH

1. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 4 to display the CHANNELS menu.

```
CHANNELS
1 Auto Channel Search
2 Add/Remove Channels
3 Signal Type: CABLE
4 VCR Plus+ Channel List
5 Cable Box Setup
0 Exit
```

3. Press 1 to display the AUTO CHANNEL SEARCH menu.

```
AUTO CHANNEL SEARCH
What type of signal
are you using?
1 Cable TV
2 Antenna
3>Detect Automatically
0 Cancel
```

4. Select one of the three AUTO CHANNEL SEARCH options.

Choices one and two are self-explanatory. If you choose DETECT AUTOMATICALLY, the VCR automatically detects which signal system you have attached to your VCR.

Detect Automatically


A strong cable or antenna signal in your area may cause Auto Detect to mis-detect. If this should happen, select 1 or 2 for the system you have.

Auto Channel Search

Use the AUTO CHANNEL SEARCH feature to place all available channels in memory.

If you ever change cable or antenna signals, you may need to AUTO CHANNEL SEARCH again.

SETTING UP THE VCR

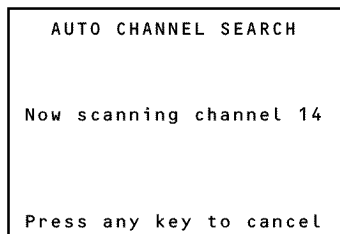

The VCR begins scanning for the available channels—this takes about one to two minutes. The lowest channel is tuned once the search is complete. Now, pressing CHANNEL up or down should only select the active channels.



To Change the Signal Type

1. Press MENU to display the VCR MAIN MENU.
2. Press 4 to display the CHANNELS menu.
3. Press 3 to change the SIGNAL TYPE between CABLE and ANTENNA.

To ADD or REMOVE Channels

You may want to add or remove channels after you AUTO CHANNEL SEARCH, especially if some of the channels have weak signals or you don't want to watch them.

1. Press MENU to display the VCR MAIN MENU.
2. Press 4 to display the CHANNELS menu.
3. Press 2 to display the ADD/REMOVE CHANNELS screen. Use CHANNEL up or down or number buttons to go to the channels you want to remove or add.

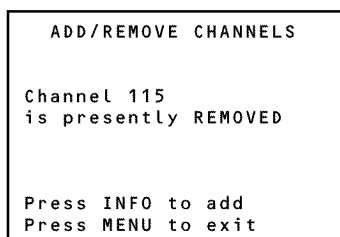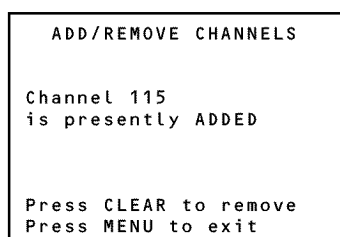

Selecting Channels

The CHANNEL up and down buttons access those channels active in your VCR channel list.

You can still access channels not in the channel list by using the number buttons on the remote.

SETTING UP THE VCR

TIME AND DATE

Before you set the time and date, set the AUTO DST (Daylight-Saving Time) feature to ON or OFF for your area.

Set Daylight-Saving Time

1. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 3 to display the TIME menu.

```
TIME
1 Set Time and Date
2 Auto DST: ON
0 Exit
```

3. Press 2 to turn AUTO DST: ON or OFF.
 - Select ON if you want the VCR's clock to automatically adjust for daylight-saving time.
 - Select OFF if you do not want the VCR's clock to adjust for daylight-saving time.

Set the Time and Date

1. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

Spring forward; Fall backward

In the Spring, daylight-saving time begins on the first Sunday in April. Because the clock automatically changes from 2:00 AM to 3:00 AM (forward one hour), remember to include the extra hour for timer recording falling within this time frame.

In the Autumn, daylight-saving time ends on the last Sunday in October. The VCR clock automatically changes from 2:00 AM to 1:00 AM (back one hour). Therefore, it can affect your recording length.

SETTING UP THE VCR

2. Press 3 to display the TIME menu.

```
          TIME
1 Set Time and Date
2 Auto DST:          ON
0 Exit
```

3. Press 1 to display the SET TIME AND DATE screen.

```
    SET TIME AND DATE
Time --:--
    (hh:mm)
Date --/--/--
Press MENU to cancel
```

4. Enter the data using the number buttons. Press 0 before single-digit numbers and follow the on-screen directions.

```
    SET TIME AND DATE
Time 12:34 PM
Date 10/24/97 Friday
Press CLEAR to correct
Press MENU to set
```

VCR PLUS+ CHANNELS

Using VCR Plus+ can make programming timer recordings for cable or off-air antenna easier, but you have to put in a little time right now to set up a channel list. A worksheet and abbreviated codes for typical cable services in the U.S. and Canada are provided on the following pages.

1. Press MENU to display the VCR MAIN MENU.

```
    VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

Time/Date Display

Pressing INFO on the remote displays the time and date on the screen.

VCR Plus+ Channel List

Refer to your local television list for a complete VCR Plus+ channel list for your viewing area or contact your cable company. Using the list may save you some time.

SETTING UP THE VCR

2. Press 4 to display the CHANNELS menu.

```

CHANNELS
1 Auto Channel Search
2 Add/Remove Channels
3 Signal Type:    CABLE
4 VCR Plus+ Channel List
5 Cable Box Setup

0 Exit
    
```

3. Press 4 to display the VCR PLUS+ CHANNEL LIST screen.

```

VCR+ Channel  My Channel
   5             --
   4             --
   3 -> -> ->  --
   2             --
   1             --

Use CH+/- to select
Press 0-9 to change
Press MENU to save
    
```

4. Enter the data following the on-screen directions using your worksheet.

```

VCR+ Channel  My Channel
   5             46
   4             --
   3 -> -> ->  23
   2             --
   1             --

Use CH+/- to select
Press 0-9 to change
Press MENU to save
    
```

Screen is for an example only.

Two-Digit VCR Plus+ Channel Numbers for Cable TV (USA List)

- 35 American Movie Classics
- 39 Arts & Entertainment
- 57 Black Entertainment
- 54 Bravo
- 42 Cable News Network
- 45 Cinemax
- 98 Cinemax 2
- 37 The Discovery Channel
- 53 The Disney Channel
- 63 Entertainment Television
- 34 ESPN Sports Network
- 47 The Family Channel
- 33 Home Box Office
- 95 Home Box Office 2
- 96 Home Box Office 3
- 51 The Learning Channel
- 46 Lifetime
- 58 The Movie Channel
- 48 Music Television
- 49 The Nashville Network
- 38 Nickelodeon
- 64 Nostalgia Television
- 99 Quality Value Cable
- 41 Showtime
- 97 Showtime 2
- 59 Sports Channel
- 52 Turner Network Television
- 44 USA-Network
- 62 Video Hits I
- 93 Viewer's Choice I
- 94 Viewer's Choice 2
- 55 WGN Chicago
- 43 WTBS Atlanta
- 60 WWOR-New York

See next page for Canadian List

SETTING UP THE VCR

WHAT'S NEXT—ADDITIONAL SET-UP FEATURES IN THE PREFERENCES MENU

The features in this section are all accessed through the PREFERENCES menu.

1. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 5 to display the PREFERENCES menu.

```
PREFERENCES
1 Remote Control: VCR1
2 Auto Play: ON
3 Auto TV/VCR OFF
4 EnergySaver: 2:00
5 Tape Speed: SLP
0 Exit
```

Now you are ready to select an item from the menu to set up.

REMOTE VCR1/VCR2 OPTION

If you own a compatible RCA, GE, or ProScan remote that has a VCR2, VCR2•LD, or DVD•VCR2 button, this feature allows you to set this VCR to respond to that button.

Press 1 to select the REMOTE CONTROL item. Then press the VCR2, VCR2•LD, or DVD•VCR2 button to change.

<pre>PREFERENCES 1 Remote Control: VCR1 2 Auto Play: ON 3 Auto TV/VCR OFF 4 EnergySaver: 2:00 5 Tape Speed: SLP 0 Exit</pre>	<pre>PREFERENCES 1 Remote Control: VCR2 2 Auto Play: ON 3 Auto TV/VCR OFF 4 EnergySaver: 2:00 5 Tape Speed: SLP 0 Exit</pre>
--	--

SETTING UP THE VCR

The VCR will only respond to the compatible remote's VCR2, VCR2•LD, or DVD•VCR2 button. If you change the remote setting to VCR2, the remote that came with your VCR will no longer control it.

To change the remote setting back to VCR1, display the PREFERENCES menu, press 1, and then press VCR1 on your compatible remote.

AUTO PLAY

This feature allows the VCR to automatically start playing when you insert a tape with the safety tab removed. Press 2 to switch between ON or OFF.

- Select ON if you want a tape with its safety tab removed to start playing automatically when the tape is inserted.
- Select OFF if you *do not* want a tape with its safety tab removed to start playing automatically.

AUTO TV/VCR

This feature controls whether the TV/VCR switch changes automatically to the VCR mode when the VCR is turned on. Press 3 to switch between ON and OFF.

- Select ON if you want the VCR to switch to the VCR mode when the VCR is turned on or a cassette is inserted. *This only applies if you connect the IN FROM ANT. and OUT TO TV jacks of your VCR and TV and watch your VCR on channel 3 or 4 of your TV.*
- Select OFF if you want the VCR to remain in the TV mode. This is useful if you watch your VCR on the TV's video input and you don't want your antenna/cable signal interrupted by the VCR.

Auto TV/VCR

Pressing TV•VCR on the remote will still switch between the VCR and TV mode.

VCR mode: VCR indicator in the display panel lights.

TV mode: VCR indicator turns off.

SETTING UP THE VCR

ENERGYSAVER™

By default, this VCR automatically turns off after two hours of inactivity. Press 4 to change the time delay, or to disable the feature.

- OFF: The VCR will remain turned on until you shut it off.
- 1:00, 2:00, or 3:00: The VCR turns off after one, two, or three hours of inactivity.

Thirty seconds before shutting off, the VCR will warn you with a screen reading, "The VCR will turn off in 30 seconds. Press any key to cancel."

If you use the VCR's tuner instead of your TV to tune channels, you may want to turn this feature off.

TAPE SPEED

You can select a preferred tape speed for recording. The speed you select appears in the timer and VCR Plus+ recording menus. The default factory setting is SLP. Press 5 to switch between SP and SLP.

When making a recording, you can override the preferred tape speed.

- Press the SPEED button on the remote.
- Set the tape speed in the timer or VCR Plus+ recording menu.

When you turn off the VCR, the tape speed reverts to the one you have selected.

Tape Speeds

SP (Standard Play)

Gives the best quality recording, but fewer programs can be recorded on the tape. Special effects such as pause, slow motion, picture search, and frame advance work well when you play back tapes recorded in this speed.

LP (Long Play)

Your VCR is capable of playing back tapes recorded in LP. You cannot record in the LP speed.

SLP (Super Long Play)

Gives three times the recording time of tapes recorded in SP. Special effects such as pause, slow motion, picture search, and frame advance work well when you play back tapes recorded in this speed.

	Recording Time	
Cassette	SP	SLP
T-120	2Hr	6Hr
T-160	2Hr 40Min	8Hr

VCR BASICS

LEARN THE BASICS TO GET YOU STARTED

These VCR basics should be enough for you to begin enjoying your VCR. Learning the remote control functions, playing a recorded tape, and recording a program should do just that.

However, there are other features that enhance the enjoyment of your VCR, but they aren't necessary to get you started. If you want to learn more about your VCR, just keep reading.

1 FIRST THINGS FIRST



2 SETTING UP THE VCR



3 VCR BASICS



4 RECORDING



5 OTHER FEATURES



6 CONNECTIONS

VCR Basics tells you what you need to know in order to watch a movie or tape your favorite show.

VCR BASICS

REMOTE BUTTONS

CHAN Up or Down Selects next higher or lower channel in the VCR's channel memory.

CLEAR Resets time counter to 0:00:00. Allows you to change entries when setting the clock or a timer recording.

F.ADV Lets you view one frame with each press of the button when tape is in pause.

FWD Fast forwards the tape when the VCR is stopped. Searches forward through a tape during playback. Increases speed of slow-motion playback.

GO BACK Switches between two channels. Select one channel and then select another using the number buttons. Press GO BACK to switch between the two channels.

INFO Shows the status displays on the TV screen.

INPUT Selects between the line input and VCR's tuner. Line input refers to the signal coming from the component connected to the audio/video input jacks on the back of the VCR.

MENU Brings up VCR MAIN MENU on the TV screen. Used to select a menu item or exit a menu.

Numbers (0 through 9) Select a channel up to 99 by pressing two numbers. Select a cable channel over 99 by pressing and holding 1 until 1 -- appears on the screen. Then press the other two numbers.

PAUSE Pauses playback or recording. Press PAUSE again to return to playback or recording.

PLAY Plays a tape. Starts playback again from pause mode.

POWER Turns the VCR on and off.


RECORD Starts VCR recording. Also used for express recording.

REV Rewinds the tape when the VCR is stopped. Searches backward through a tape during playback. Decreases slow-motion playback.

SEARCH Displays INDEX and ZERO SEARCH menus on TV screen when VCR is stopped. Advances the tape 30 seconds of recorded material during playback.

SLOW Starts slow-motion playback.

SPEED Selects a recording speed (SP or SLP).

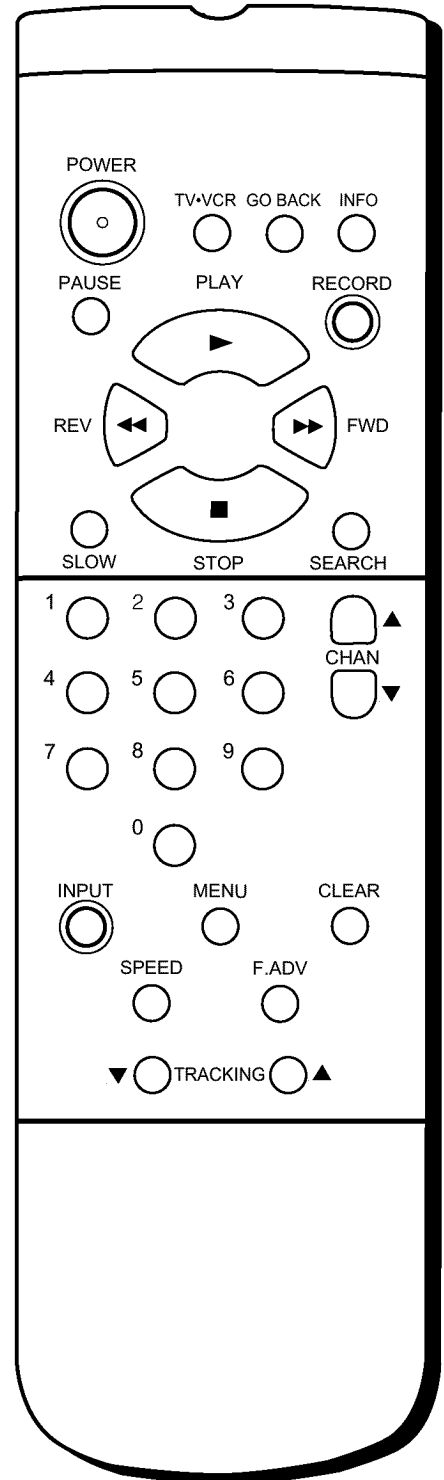

VCR BASICS


STOP Stops the current VCR function such as record, playback, rewind, or fast forward.

TRACKING Up or Down Lets you manually reduce the streaks that may appear on the picture during play, slow, or pause. Reduces picture "jitter" during play-pause.

TV•VCR Switches the picture signal so that it either comes from the VCR or cable/antenna system.

PLAYING A TAPE

1. Tune the TV to your VCR viewing channel (3, 4, or TV's video input).
2. Insert a tape in the VCR.

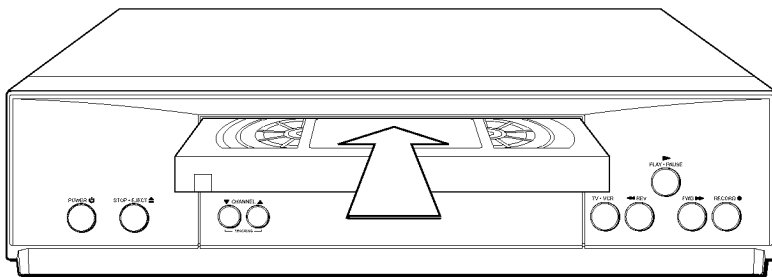

If the AUTO PLAY feature is set to ON, the tape automatically begins playback (if the safety tab on the cassette is removed).

- Press FWD or REV to position the tape.
- Press PLAY (if necessary) on the remote (PLAY•PAUSE on VCR) to begin tape play.
- Press PAUSE (PLAY•PAUSE on VCR) for stop action.
- If necessary, press TRACKING up or down to remove any streaks from the picture.
- Press STOP on the remote (STOP•EJECT on VCR) to stop playback.

Pause

If you pause, the VCR automatically switches from pause to stop after a few minutes to reduce tape wear.

Automatic Tracking

The VCR has automatic tracking which adjusts the picture when playing back a tape recorded on another VCR. Automatic tracking is turned on whenever a tape is inserted or the VCR's power is turned on.

VCR BASICS

AUTOMATIC REWIND

The VCR automatically rewinds the tape if it reaches the end of the tape during playback. While rewinding, you can press **POWER** and the VCR will turn off after rewinding.

TAPE EJECT

Press **STOP•EJECT** on the VCR when it is stopped to eject the tape.

RECORDING


If you want to record something that you're watching, you can use basic recording.

1. Press the **SPEED** button on the remote if you want to override the preferred Tape Speed setting.
2. Press the **RECORD** button to begin recording.
3. Press **STOP** on the remote (**STOP•EJECT** on the VCR) to stop recording.

If you just want to pause the recording for a short time (like during a commercial), press the **PAUSE** button on the remote (**PLAY•PAUSE** on VCR) instead of **STOP**.

CHECK THE SAFETY TAB

No matter which recording option you use, you need to make sure there is a tape in the VCR, and that the tape's safety tab is in place. You cannot record on a tape with the safety tab removed.

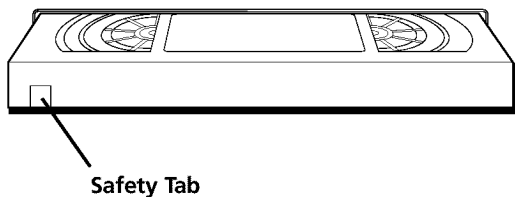

If the safety tab is removed and you want to record over it, simply cover the hole with vinyl tape.

RECORDING

SEVERAL RECORDING OPTIONS

Now that you've gone through the necessary steps to operate your VCR, I'll explain the different recording features that are available to suit your needs.

Recording Features:

- **Recording** (explained in *VCR Basics* section)
- **Express Recording**
- **Timer Recording**
- **Timer Recording with VCR Plus+**
- **Recording Broadcast Stereo or Second Audio Program (SAP)**
- **Recording Audio Only**
- **Copying and Editing Tapes**

1 FIRST THINGS FIRST



2 SETTING UP THE VCR



3 VCR BASICS



4 RECORDING



5 OTHER FEATURES



6 CONNECTIONS

RECORDING

RECORDING FEATURES



There are four ways to record programs:

- **Recording** lets you press one button to start recording a program. (See *VCR Basics* section.)
- **Express Recording** lets you start recording a program you are watching, and then set the VCR to automatically stop recording after a designated period of time.
- **Timer Recording** lets you program the VCR to automatically start and stop recording at a predetermined time.
- **Timer Recording with VCR Plus+** lets you program the VCR just by entering a PlusCode number found in some TV program guides.

EXPRESS RECORDING (XPR)

Use express recording when you want to quickly record the remaining portion of the program you are watching.

1. Press the **SPEED** button on the remote if you want to override the preferred Tape Speed setting.
2. Press the **RECORD** button to begin recording.
3. Repeatedly press the **RECORD** button to set up the recording duration.

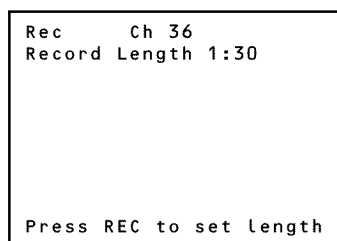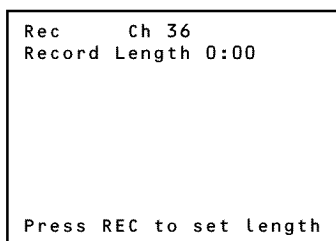

Each time you press the **RECORD** button, you add 30 minutes to the recording time (up to 4 hours).

The VCR continues to record for the amount of time you indicate, and then automatically turns off.

To stop an express recording, press and hold **STOP** on the remote (**STOP•EJECT** on the VCR) for a few seconds, or press **STOP** (**STOP•EJECT**) three times within 5 seconds.

Express Recording

Express recording is a great way to tape the last quarter of the game, or the last part of a movie when you have to leave.

RECORDING

TIMER RECORDING

You can set up as many as eight timer recording programs.

1. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 2 to display the TIMER RECORDINGS menu.

```
TIMER RECORDINGS
1 Create a New Program
2 Review Existing Progs.
3 Use VCR Plus+ Code
0 Exit
```

3. Select 1 to CREATE A NEW PROGRAM.

```
HOW often should this
program record?
1 One time
2 Daily (every day)
3 Weekdays (M-F)
4 Weekly (once per week)
0 Cancel
```

4. Select how often you want the program to record.

```
Program 1 (One time)
Channel --
Start Time ---:--
End Time ---:--
Start Date --/--/--
Tape Speed SLP
Press MENU to cancel
```

5. Enter the data for the program with the number buttons.

The data includes the channel number (press INPUT to select the line input), start time including AM or PM, and end time. The start date is automatically entered based on the VCR clock. Both the date and speed can be changed.

Timer Recording Information

Clock must be set correctly.

Insert a tape with the safety tab in place and enough tape to record the program.

PROGRAMS OVERLAP appears if you have entered two programs where the times overlap.

The output of your cable box appears in the "channel" item of the timer recording if you've set up for a cable box.

For cable box, turn on the cable box and tune it to the channel you want to record before the recording is to begin.

Tape Speed

The speed of your timer recording cannot be changed once the timer recording is saved. You must clear the timer and reprogram it.

Changing your preferred tape speed does not affect those timer recordings already programmed.

The factory setting for the VCR speed is SLP.

VCR playback is not affected by the preferred tape speed.

RECORDING

- Review the information to make sure it is correct, and then press MENU to save.

```
Program 1 (One time)
Channel      03 Cable
Start Time   08:00 PM
End Time     09:30 PM
Start Date   10/24/97 Fri
Tape Speed   SLP
              1=SP 2=SLP
Press CLEAR to correct
Press MENU to save
```

```
Program 1 has been saved
Remember to insert a
recordable tape and
turn the VCR off before
the program start time.
Press MENU to continue
```

TIMER RECORDING WITH VCR PLUS+

You can use VCR Plus+ to simplify timer programming if you have cable TV and don't receive all channels through a cable box or if you get your TV signal off-air.

Setting Up the Channel List

If you did not set up the VCR Plus+ channel list, you can do it now.

- Display the CHANNELS menu from the VCR MAIN MENU.
- Display the VCR PLUS+ CHANNEL LIST menu.
- Go to *Setting Up Your VCR* if you need more information on setting up your VCR Plus+ channel list.

Using VCR Plus+

- Press MENU to bring up the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

- Press 1 to display the VCR PLUS+ menu.

```
VCR PLUS+
Enter PlusCode Number
(From TV Listing)
-
Press MENU to cancel
```

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3
4 CHANNELS
5
6 1 Auto Channel Search
7 2 Add/Remove Channels
8 3 Signal Type: CABLE
9 4 VCR Plus+ Channel List
0 5 Cable Box Setup
0
```

```
VCR+ Channel My Channel
5 46
4 --
3 -> -> -> 23
2 --
1 --
Use CH+/- to select
Press 0-9 to change
Press MENU to save
```

VCR Plus+ and PlusCode are trademarks of Gemstar Development Corporation.

RECORDING

3. Enter the VCR PlusCode number shown in your local television programming guide.

```
VCR PLUS+
Enter PlusCode Number
  (From TV listing)
  12876

Press CLEAR to correct
Press MENU when done
```

4. Press MENU to enter the VCR PlusCode number.

```
HOW often should this
program record?

1 One time
2 Daily (every day)
3 Weekdays (M-F)
4 Weekly (once per week)

0 Cancel
```

5. Indicate how often you want the program to be recorded.

```
Program 1 (One Time)

Channel    03 Cable
Start Time 08:00 PM
End Time   09:30 PM
Start Date 10/24/97 Fri
Tape Speed SLP

Press CLEAR to correct
Press MENU to save
```

6. Change the speed with the SPEED button on the remote or the program end time with the CLEAR button on the remote (if necessary).

Changing the end time comes in handy when you are recording a program such as a sporting event that may exceed the scheduled broadcast time.

7. Press MENU to save the program.

```
Program 1 (One Time)

Channel    03 Cable
Start Time 08:00 PM
End Time   09:30 PM
Start Date 10/24/97 Fri
Tape Speed SLP

Press CLEAR to correct
Press MENU to save
```

VCR Plus+ Recording

Clock must be set correctly.

Insert a tape with the safety tab in place and enough tape to record the program.

PROGRAMS OVERLAP appears if you have entered two programs where the times overlap.

UNRECOGNIZED NUMBER... PLEASE RE-ENTER appears when the VCR does not recognize the PlusCode number.

The output channel of your cable box appears in the "channel" item of the timer recording menu if you've set up for a cable box.

Turn on the cable box and tune it to the channel you want to record before the recording is to begin.

RECORDING

STOPPING A TIMER RECORDING

To stop or cancel a timer recording in progress (even an express recording):

- Press and hold the STOP button on the remote (STOP•EJECT button on the VCR), or press STOP (STOP•EJECT) three times within 5 seconds.

REVIEWING AND CLEARING PROGRAMS

To review programs that you have already set up:

1. Press 2 when the VCR MAIN MENU is displayed to display the TIMER RECORDINGS menu.

```
TIMER RECORDINGS
1 Create a New Program
2 Review Existing Progs.
3 Use VCR Plus+ Code

0 Exit
```

2. Press 2 to display the REVIEW PROGRAMS screen.

```
Program 1 (One time)
Channel    104 Cable
Start Time 12:00 AM
End Time   01:30 AM
Start Date 10/24/97 Fri
Tape Speed SLP

Press CLEAR to erase
Press MENU for next prog
```

3. Press CLEAR to erase or MENU to see the next program.


RECORDING BROADCAST STEREO TV OR SAP (SECOND AUDIO PROGRAM)

Some TV programs are broadcast with stereo audio or SAP (Second Audio Program).

1. Turn on the TV and tune it to the VCR viewing channel (either 3, 4, or TV's video input).
2. Insert a tape with safety tab in place.

RECORDING

3. If your VCR viewing channel is 3 or 4, make sure the VCR indicator appears in the VCR's display panel. If not, press TV•VCR to turn it on.
4. Press the SPEED button on the remote if you want to override the preferred Tape Speed setting. The tape speed indicator appears on the TV screen.
5. Select the channel or line input to be recorded.
6. Set the Reception: STEREO/MONO/SAP feature for the type of audio you want to record. See *Other Features* section.

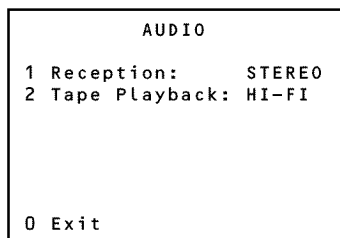

7. Press RECORD to start recording.
8. Press STOP when you are finished.

RECORDING AUDIO ONLY

You can record audio only from another audio source connected to the AUDIO IN (R and L/MONO) jacks on the back of the VCR.

1. Press the INPUT button on the remote to select line input.

The VCR records audio from the audio equipment connected to the AUDIO IN jacks.

2. Press the SPEED button on the remote if you want to override the preferred Tape Speed setting.
3. Start audio source playing and press RECORD to begin recording.
4. Press STOP on the remote (STOP•EJECT on VCR) when you are finished.


Playing Back Audio Only

To get stereo sound, connect the AUDIO OUT jacks of the VCR to the appropriate input on your amplifier or receiver. Do not use the phono input. Refer to your amplifier or receiver user's guide.

Recording Audio

Any video on the tape is erased when you record audio only.

Audio Connection

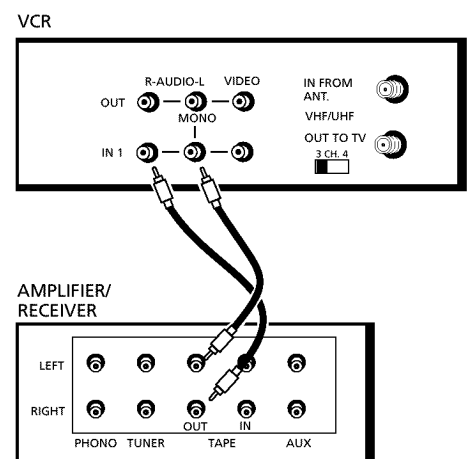

RECORDING

USING TWO VCERS FOR COPYING AND EDITING TAPES

Use one VCR as the *playback VCR* and the other as the *recording VCR*.

1. Turn on the TV and VCRs.
2. Tune the TV to the VCR viewing channel (either 3, 4, or TV's video input).
3. If you connected your VCR using the ANTENNA jacks, tune *recording VCR* to channel 3 or 4—the one selected on the back of the *playback VCR*.


If you connected your VCR using the audio/video jacks, press INPUT on the *recording VCR's* remote to select the line input.

4. Insert the tape you want to copy into the *playback VCR*. Insert a blank tape with safety tab in place into the *recording VCR*.
5. When you reach the point on the tape or program where you want to begin copying, press PLAY•PAUSE and then PLAY•PAUSE again on the *playback VCR*. You may need to adjust the tracking.
6. Press the RECORD button, then press PLAY•PAUSE, on the *recording VCR*.
7. Press the PLAY•PAUSE buttons on *both VCRs* at the same time to begin copying the tape.
8. To edit segments that you do not want to copy:
 - Press PLAY•PAUSE on *recording VCR* to stop copying.
 - Locate the next segment you want to copy on *playback VCR* by using FWD, REV, and PLAY•PAUSE, and then press PLAY•PAUSE.
 - Press PLAY•PAUSE on *both VCRs* at the same time to resume copying.
9. Press STOP•EJECT on *both VCRs* when you are finished.

Caution:

The unauthorized recording of television programs or other materials may infringe on the rights of others.

Two VCR Connection

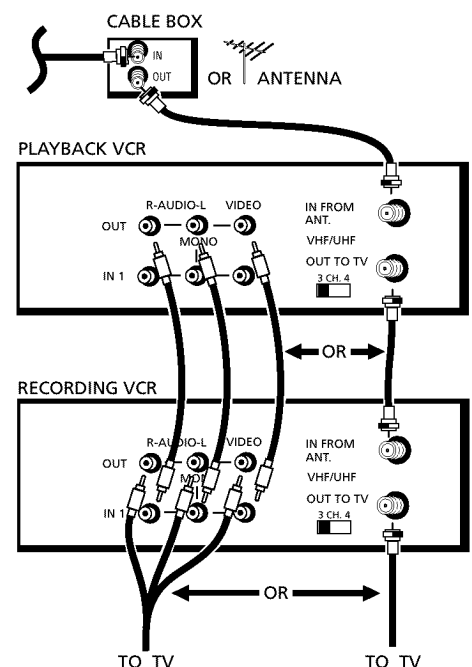

OTHER FEATURES

FEATURES TO ENHANCE VCR OPERATION

- **Picture Search Options**
- **Pro-Tect Plus™ Locking**
- **Time Counter**
- **On-Screen Displays**
- **Tracking**
- **Audio Reception**
- **Audio Tape Playback**

1 FIRST THINGS FIRST



2 SETTING UP THE VCR



3 VCR BASICS



4 RECORDING



5 OTHER FEATURES



6 CONNECTIONS

OTHER FEATURES

PICTURE SEARCH OPTIONS

The most basic way to search during playback is using the forward and reverse functions. This section contains several other options available for searching a tape.

FORWARD AND REVERSE SEARCH

You can view a tape during play or play-pause. Sound is turned off during picture search. Search works best for tapes recorded at the SP or SLP speed.

1. Press FWD to search forward or REV to search in reverse.
2. Press FWD or REV again or press PLAY on the remote (PLAY•PAUSE on the VCR) to return to normal playback.

SLOW MOTION

You can view a tape during play or play-pause using slow motion. Slow motion works best for tapes recorded at the SP or SLP speed.

1. Press SLOW on the remote to begin slow motion playback.
2. Use TRACK up or down to remove any streaks from the picture.
3. From PAUSE mode, use FWD and REV to speed up or slow down slow motion playback.
4. Press PLAY on the remote (PLAY•PAUSE on the VCR) to return to normal playback.

The VCR switches automatically from slow-motion playback to stop after a few minutes.

COMMERCIAL SCAN (SEARCH BUTTON)

This is useful for skipping commercials or short program segments.

- Press SEARCH once during playback to advance the tape approximately 30 seconds of recorded material.
- Each press of the SEARCH button adds an additional 30 seconds up to 5 minutes.

Insert Tape

Don't forget to insert a recorded tape when using the search features.

OTHER FEATURES

FRAME ADVANCE

Frame advance lets you view one-stop action frame after another. Frame advance works best for tapes recorded at the SP or SLP speed.

1. Press PAUSE on the remote (PLAY•PAUSE on the VCR) to freeze the action.
2. Press F.ADV each time you want to view the next frame of the scene.
3. Press PAUSE or PLAY on the remote (PLAY•PAUSE on the VCR) to return to normal playback.

INDEX SEARCH

The VCR has a "VHS Index Search System" that automatically records an index mark on the tape every time you start recording. During playback you can locate the program you want to play by the number of index marks or by scanning. The VCR will search forward or reverse from the location you are on the tape.

To Search:

1. Stop the tape and press SEARCH on the remote to display the INDEX SEARCH menu on the TV screen.
2. If you want to search through a certain number of index marks, press two number buttons to enter the number of marks you want to search. Press CLEAR on the remote to correct an entry.
3. Press FWD to search forward or REV to search in reverse. The VCR will locate your index mark and begin playback. If you did not enter a specific index number, the VCR will locate the next index mark and begin playback.
4. Press STOP to stop index searching.

Some index marks may be missed by the VCR:

- A mark too close to your location on the tape.
- The mark at the beginning of a recorded segment of five minutes or less.
- The first index mark on the tape when you start at the beginning of the tape.

```
INDEX SEARCH
Press REV or FWD
to begin scanning
or
enter a specific
index number
--
Press SEARCH to exit
```

```
INDEX SEARCH
Press REV or FWD
to begin search
Index number
12
Press SEARCH to exit
```

```
INDEX SEARCH
Searching for
index number 12...
Press STOP to cancel
```

OTHER FEATURES

ZERO SEARCH

The zero search feature enables the VCR to quickly return to a counter reading of 0:00:00 anywhere on the tape. This is especially convenient when you want to repeat a segment of the tape several times.

1. Go to the beginning of the program you wish to return to.
2. Press INFO **twice** to display timer counter on the TV screen.
3. Press CLEAR to reset the counter to 0:00:00.
4. Continue playing the tape.
5. Press STOP.
6. Press SEARCH on the remote **twice** to display the ZERO SEARCH menu.
7. Press REV to return to 0:00:00 on the tape.

```
ZERO SEARCH
Current tape counter is
  2:17:25
Press REV to go to
  0:00:00
Press SEARCH to exit
```

```
ZERO SEARCH
Searching for
0:00:00
Press STOP to cancel
```

PRO-TECT PLUS™ LOCKING FEATURE

To disable the usage of the VCR, or to protect your timer recordings, you can lock the VCR so that the buttons on the VCR or remote won't work.

- To Lock: Press and hold either the remote's POWER or OFF button. The front panel POWER indicator flashes when the feature is activated. POWER will also flash if you attempt to turn on the VCR while the feature is on.
- To unlock the feature and turn on the VCR: Press and hold either the remote's POWER or VCR button.


OTHER FEATURES

TIME COUNTER

The time counter shows the actual time it takes to record a program or play back a segment of a recorded tape. It helps locate the beginning or end of programs you taped. The time counter resets to 0:00:00 whenever the tape is ejected from the VCR.

For example, if you record a 30-minute program at the beginning of the tape and you want to go to the end of that program to begin another recording, you would:


1. Press INFO **twice** to display the time counter.
2. Press CLEAR to reset the time counter to 0:00:00.
3. Press FWD to forward the tape until the time counter reads 0:30:00.
4. Press STOP. This is the approximate end of the program. (You may want to press PLAY to verify.) Now, you can begin recording at this spot.
5. Press INFO to remove the time counter from the screen and return to the normal display mode.

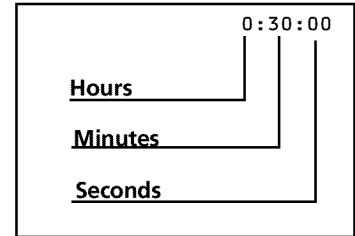


ON-SCREEN DISPLAYS

The INFO button shows the status of the VCR (STOP, PLAY, RECORD, etc.), channel number, time counter, date, time, and tape speed on the TV screen. The date and time must be set before they can be displayed.

1. Press INFO to see the on-screen displays.
 2. Press INFO again to have only the time counter remain on the screen.
 3. Press INFO again to return to the normal display. No displays appear on the screen.
- Turning off the VCR also resets the displays.

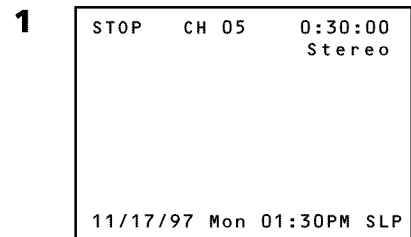

On-screen display (times out)

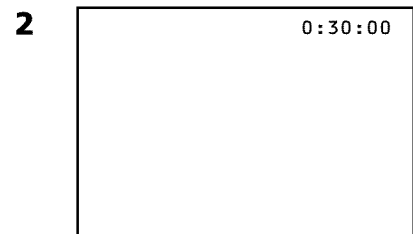

*Timer counter only
(does not time out)*



Normal display

OTHER FEATURES

TRACKING

Your VCR has automatic tracking which removes the streaks or snow from the picture. Automatic tracking is activated when you insert a tape or turn on the VCR. Occasionally you may need to manually adjust tracking, especially if the tape was recorded on a different VCR. Just use the TRACKING buttons to remove the streaks or snow. You can also use tracking when you PAUSE a tape to reduce jittering of the picture.

When you manually adjust the picture, automatic tracking is turned off. To turn automatic tracking back on, press both TRACKING buttons on the front of the VCR at the same time, or eject the tape and reinsert it.

Tracking has no effect during recording—only playback.

AUDIO SET-UP FEATURES

The audio set-up features enhance your tape playback and recordings. The features in this section are accessed through the AUDIO menu and are shown in the displays below.

1. Press MENU to bring up the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 6 to display the AUDIO menu.

```
AUDIO
1 Reception: STEREO
2 Tape Playback: HI-FI
0 Exit
```

Now you are ready to select an item from the menu to set up.

OTHER FEATURES

RECEPTION

Some TV programs are broadcast with stereo audio or a second audio language (SAP). The Reception feature lets you select the type of audio you want to record. Press 1 to switch between Reception: STEREO, MONO, and SAP.

- Select STEREO for normal or stereo broadcast TV recording. STEREO appears on the TV screen when the station you are tuned to is broadcasting stereo.
- Select MONO if the stereo signal is weak and the sound is too noisy.
- Select SAP to record a second audio program instead of the normal audio on both the hi-fi and linear tracks.

TAPE PLAYBACK

The VCR records the same audio on both the Hi-Fi and linear tracks on the tape. Hi-Fi sound is recorded on separate left and right stereo channels. Monaural sound is recorded on the linear track. Press 2 to switch between Tape Playback: HI-FI, LINEAR and MIX.

To enjoy Hi-Fi sound, connect your VCR to a stereo television or amplifier/receiver using the audio/video jacks. The Tape Playback feature lets you select which audio you play back.

- Select HI-FI to play back sound recorded on the Hi-Fi track and for normal use. HI-FI indicator lights.
- Select LINEAR to play back the sound recorded on the linear monaural track, such as a second audio program, SAP. HI-FI indicator turns off.
- Select MIX to play back the sound recorded on both the linear track and the Hi-Fi track, sound-on-sound. HI-FI indicator turns off.

CONNECTIONS

THINGS TO KNOW BEFORE CONNECTING COMPONENTS

PROTECT YOUR COMPONENTS FROM POWER SURGES

- Connect all components before plugging any power cords into the wall outlet.
- Always turn off the TV and other components before you connect or disconnect any cables.

POSITION CABLES CORRECTLY TO AVOID AUDIO HUM OR INTERFERENCE

- Insert all cable plugs firmly into their jacks.
- Place the audio/video cables to the sides of the TV's back panel instead of straight down the middle after you connect your components.
- Try not to coil any twin-lead cables and keep them away from the audio/video cables as much as possible.
- Make sure all antennas and cables are properly grounded. Refer to the Safety Tips sheet packed with your unit.

PROTECT YOUR COMPONENTS FROM OVERHEATING

- Do not block ventilation holes in any of the components. Arrange the components so that air can circulate freely.
- Do not stack components.
- Allow adequate ventilation when placing your components in a stand.
- Place an amplifier or satellite receiver on the top shelf of the stand so heated air rising from it will not flow around other components.

1 FIRST THINGS FIRST



2 SETTING UP THE VCR



3 VCR BASICS



4 RECORDING



5 OTHER FEATURES



6 CONNECTIONS

CONNECTIONS

CONNECTING YOUR VCR

Refer to these pages to help you connect your VCR.

JACKS AND CABLES


RF Jacks and Antenna Cables (F-type)

The RF jacks provide good picture and mono sound, and must be used if audio/video connections are not available for your TV.

These jacks are required for antenna or cable-TV connections. The RF jacks on the VCR are labeled IN FROM ANT. and OUT TO TV. The antenna cable supplied with your VCR is used to connect the VCR's OUT TO TV jack and your TV's antenna input.



RF Jack

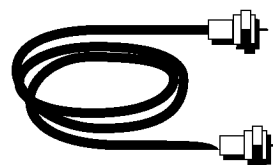


Audio/Video Jacks and Cables (RCA-type)

The audio/video jacks provide very good picture and stereo sound and can be used if your TV has audio/video input jacks.

These jacks must be used for stereo sound. The VCR audio/video jacks are color coded (yellow for video, red for right audio, and white for left audio). If your TV has only one input for audio (mono), connect it to the left (white) audio output jack of the VCR.



Audio/Video Jack

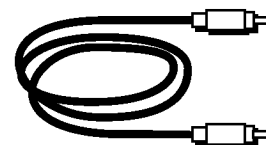

CONNECTIONS

CHOOSING A VCR CONNECTION

There are several different ways to hook up your VCR, depending on whether or not you have cable, and if you have cable, whether you have a cable box, and if some of the channels are scrambled and...well, you get the picture.

Three connections are described in this section and one of them should provide you with a VCR hookup that works.

- TV with RF Jack only
- TV with audio/video jacks
- TV with audio/video jacks and cable box to unscramble pay channels only

If you need to hook up additional components not shown in the diagrams here (and are unsure of how to connect them), refer to the instruction manual that came with that particular component.

ADVANTAGES OF AUDIO/VIDEO CABLE CONNECTIONS

Using a simple antenna cable connection gives you good picture quality. If your television has A/V jacks, I highly recommend using them to get even better picture and stereo sound when recording and playing back videotapes. These connections give you more convenient operation by not having to share the signal from the antenna cable.

DON'T FORGET ABOUT THE AUTO TV/VCR FEATURE

The TV/VCR switch controls whether the picture signal is coming from the VCR or the TV. You can change the setting manually by using the TV•VCR button on the remote, or you can set the Auto TV/VCR feature to automatically switch to VCR mode when the VCR is turned on. Set the Auto TV/VCR feature to ON when using only RF ANTENNA connections and OFF when using the A/V output jacks—so your TV signal is not interrupted when the VCR is turned on.

CONNECTIONS

TV WITH RF JACK ONLY

This connection assumes:

- You are connecting antenna, cable, or cable box system.
- Your television has only an RF input jack.

This connection provides:

- Mono sound playback from VCR.
- Record one channel while watching another (except when using a cable box for all channels).

To use this connection, you must have:

- (1) antenna cable for cable or antenna connection;
- (2) for cable box

To connect:

1. Connect cables as shown.
2. Return to *First Things First*, then follow the steps.

Using This Connection

Tune your TV to channel 3 or 4 whichever one you selected with the switch on the back of the VCR. Use the TV•VCR button to watch the VCR.

Auto TV/VCR Setting:


- Set the Auto TV/VCR feature to ON.

To play a tape:

1. Insert a tape.
2. If necessary, press PLAY.

To record one program and watch another:

1. Begin recording a program using one of the recording options.
2. Press the TV•VCR button and select a different channel on the TV.

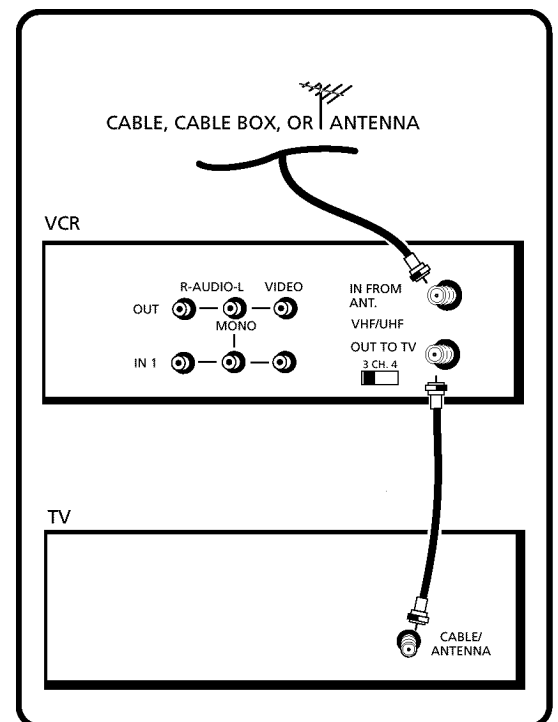

CONNECTIONS

TV WITH AUDIO/VIDEO JACKS

This connection assumes:

- You are connecting an antenna, cable, or cable box system.
- Your television has audio/video jacks.

This connection provides:

- Stereo sound playback from VCR.
- Record one channel while watching another (except when using a cable box for all channels).

To use this connection, you must have:

- (1) antenna cable for cable/antenna connection; (2) for cable box
- (3) audio/video cables

To connect:

1. Connect cables as shown.
2. Return to *First Things First*, then follow the steps.

Using This Connection

Tune your TV to its video input channel. Use of the TV•VCR button is not required.

Auto TV/VCR Setting:


- Set the Auto TV/VCR feature to OFF.

To play a tape:

1. Insert a tape.
2. If necessary, press PLAY.

To record one program and watch another:

1. Begin recording a program using one of the recording options.
2. Select a different channel on the TV.

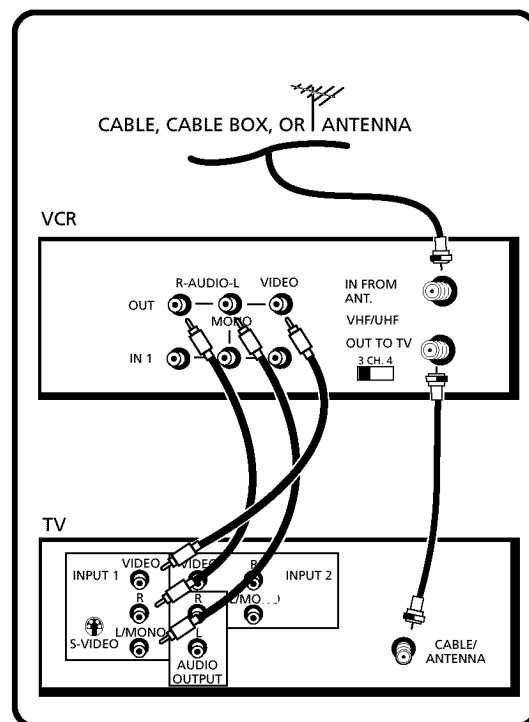

CONNECTIONS

TV WITH AUDIO/VIDEO JACKS AND CABLE BOX TO UNSCRAMBLE PAY CHANNELS ONLY

This connection assumes:

- You are using a cable box only to unscramble premium channels.
- Your TV has audio/video input jacks.

This connection provides:

- Stereo sound playback from VCR.
- Recording a scrambled or unscrambled channel through the cable box while watching an unscrambled channel.

To use this connection, you must have:

- (3) antenna cables
- (3) audio/video cables
- (1) splitter

To connect:

1. Connect cables as shown.
2. Return to *First Things First*, then follow the steps.

Using This Connection

Tune your TV to its video input channel. Use of the TV•VCR button is not required.

Auto TV/VCR Setting:

- Set the Auto TV/VCR feature to OFF.


To play a tape:

1. Insert a tape.
2. If necessary, press PLAY.

To record a scrambled or unscrambled program and watch another unscrambled:

1. Begin recording a scrambled program through the cable box using one of the recording options.
2. Select an unscrambled channel on the TV.

All scrambled channels must be viewed through the VCR.

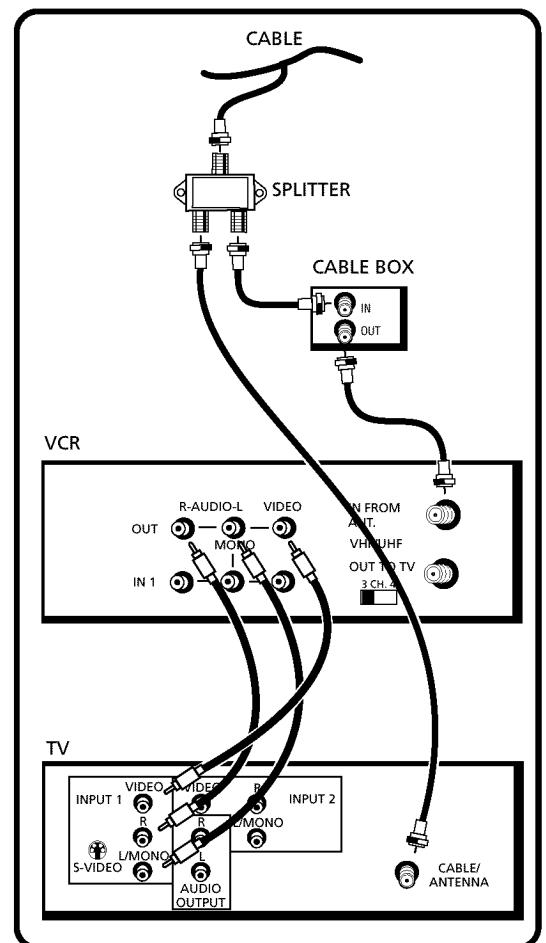

APPENDIX A: REFERENCE


This section gives you some additional information about the VCR, including a description of the unit's controls and display.

You also will find a Troubleshooting Tips section in this Appendix, which might help to resolve some of those simple problems.

Finally, this section contains your warranty information.

APPENDIX A: REFERENCE

FRONT PANEL

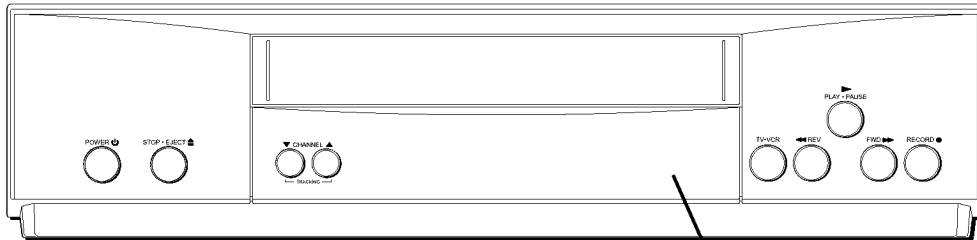

Remote Sensor

CHANNEL•TRACKING Up or Down Selects next higher or lower channel in the VCR's channel memory. Adjusts tracking when a tape is playing.

FWD Forwards the tape when the VCR is stopped. Searches the picture forward during playback.

PLAY•PAUSE Plays a tape. Pauses action for viewing during playback. Pauses recording to prevent recording of unwanted scenes.

POWER Turns the VCR on or off.

RECORD Starts VCR recording. Used for express recording.

Remote Sensor Receives signals from the remote control. Aim the remote at this sensor.


REV Rewinds the tape when the VCR is stopped. Searches the picture in reverse during playback.

STOP•EJECT Stops the normal functions such as record, playback, rewind, fast-forward, or pause. Ejects the tape when the VCR is stopped.

TV•VCR Switches the picture signal so that it either comes from the VCR or the TV

APPENDIX A: REFERENCE

BACK PANEL

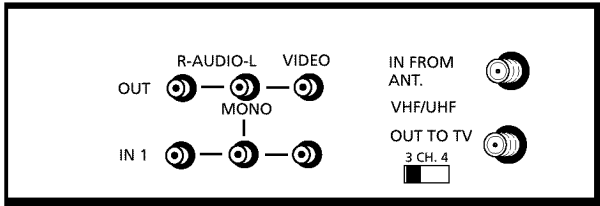

3 CH. 4 Switch Selects the channel to which you will tune the TV to see the VCR picture if you connect the VCR using the IN FROM ANT. and RF jacks.


AUDIO (R and L) and VIDEO IN Jacks Receives signals from another component, like a VCR or camcorder, when it is connected to these jacks. Use INPUT on the remote to select.

AUDIO (R and L) and VIDEO OUT Jacks Sends signals from VCR to another component, like a TV or VCR, when it is connected to these jacks.

IN FROM ANT. Jack Receives a signal from an antenna or cable system when attached.

OUT TO TV Jack Passes signal to TV using the cable supplied.

INDICATOR PANEL

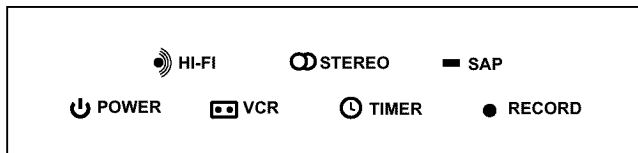

HI-FI Indicator Lights during playback when Tape Playback: HI-FI/LINEAR/MIX feature is set to HI-FI.

POWER Indicator Lights when the VCR is turned on.

RECORD Indicator Lights when the VCR is recording.

STEREO Lights when the VCR is receiving a stereo signal, and you've selected Stereo in the Audio Menu.

SAP Lights when the VCR is receiving a SAP signal, and you've selected SAP in the Audio menu.

TIMER Indicator Lights during an express or timer recording, or when the VCR is set for a timer recording and the VCR is turned off. Flashes when a timer recording is set, and there is no cassette in the VCR.

VCR Indicator (Applies Only if the VCR Viewing Channel is 3 or 4). Press the TV•VCR button to turn on or off.

- VCR indicator on: Picture from VCR.
- VCR indicator off: Picture from TV channel.

APPENDIX A: REFERENCE

TROUBLESHOOTING TIPS

No power

- Check to make sure it is plugged into an operating outlet.
- Check to make sure your connections are correct.

VCR does not respond to remote

- Check to make sure there are no objects between the VCR and remote.
- The batteries may need changing.
- Make sure the Remote VCR1/VCR2 setting is set to VCR1 so the remote that came packed with your VCR can operate it.
- Remove batteries and hold number button 1 for at least 60 seconds to drain the microprocessor inside the remote. Release number 1 and replace the batteries.
- Remove all batteries for approximately 12 hours. Then replace batteries.

Poor or no picture for normal TV viewing

- Check to make sure the VCR indicator is off.
- Check to make sure the TV is switched to an active channel.
- Check to make sure the antenna connections are secure and correct.

Snowy or no picture during playback

- Press TV•VCR to turn VCR indicator on.
- Check TV channel selected (3 or 4) to make sure it matches the channel selected with 3 CH. 4 switch on back of VCR.
- Check to make sure the TV's fine tuning is correct for the channel you have selected.
- Check video cable connections between VCR and TV monitor.
- Check to make sure the TV monitor is set to video input channel.
- Try another tape.
- Some snow/streaks are normal during search, stop action, frame advance, and slow-motion playback.

Streaks in picture during normal playback

- Press one of the TRACK buttons to move streaks up or down for the best picture.
- Check to make sure the tape is of good quality and not worn out.

Time counter not working or time counter not working in search modes

- The time counter does not advance during unrecorded portions of tape. When an unrecorded segment of tape is encountered, the time counter will hold its count until recorded material is detected again.
- A minus (-) will appear in front of the time if you rewind the tape farther back than a counter reading of 0:00:00.
- The time counter disappears during searching; this is normal.

APPENDIX A: REFERENCE

Will not record or play

- Check to make sure there is a tape in the VCR.
- Try ejecting and reinserting the cassette.
- Check to make sure the tape is not broken.
- Check to make sure the VCR is not in pause mode. Press PAUSE or PLAY on the remote (PLAY•PAUSE on the VCR) to return to normal playback.

Will not record

- Check to make sure the safety tab is intact.
- Check to make sure the VCR is not in the line mode. Press INPUT on the remote.

Rewind does not operate

- Check to make sure the tape is not already rewound.

Timer recording not made or wrong program recorded

- Check to make sure the cable box was turned on when recording was to begin.
- Check to make sure the program was entered correctly (wrong channel or times).
- Power interruption. Reset the clock.
- Check to see if time and date are correct—including AM/PM.
- Check to make sure the program did not exceed the tape's length or the tape was not rewound beforehand.
- Check to make sure the VCR was turned off at the time recording was to start.
- Check to make sure there was a tape in the VCR and the cassette's safety tab was intact.
- VCR ejects cassette when the end of the tape is reached during a timer recording.

Internal clock shows incorrect time or date

- Power interruption.
- Check to make sure the clock is set accurately (check AM/PM and date).
- Check Auto DST setting. The clock may have adjusted for daylight-saving time.

Time did not adjust for daylight-saving time

- Check to make sure Auto DST feature is turned on.

VCR makes noise when stopped

- VCR is removing tape from heads. This is normal. The head cylinder inside the VCR will continue to rotate for a few minutes after you put the VCR in the stop mode.

APPENDIX A: REFERENCE

Will not Auto Channel Search active channels correctly

- Check to make sure the antenna connections are secure and correct.
- Check to make sure the Signal Type: CABLE/ANTENNA feature is set correctly.
- If Detect Automatically was selected for the Signal Type in the AUTO CHANNEL SEARCH menu, try using either CABLE TV or ANTENNA instead.
- May not need to auto channel search if using a cable box. Refer to the VCR Channel List or contact your cable company for more information.

Tape plays back in slow motion

- Press PLAY to return to normal playback.

Cannot select channels over 69

- Cable channels over 69 can only be selected if Signal Type: CABLE/ANTENNA feature is set to CABLE.

Cassette with safety tab removed does not start to play automatically

- Check to make sure the Auto Play ON/OFF feature is set to ON.

TIMER indicator flashes

- Check to make sure there is a cassette in the VCR when a timer recording is set.

Time counter disappears during searching

- This is normal.

On-screen menus appear in English, French, or Spanish

- Check Language feature.

No stereo sound during playback

- Check to make sure the Playback: HI-FI/MIX/LINEAR feature is set to HI-FI to hear stereo sound during playback.
- Must use the AUDIO/VIDEO jacks on the back of the VCR to hear stereo sound.

Stereo audio too noisy

- Stereo signal is weak. Set Reception: STEREO/SAP/MONO feature to MONO.
- Press one of the TRACK buttons to minimize the noise.

APPENDIX A: REFERENCE

SPECIFICATIONS

Format:	VHS
Record/Playback System:	Video: 4-Head Audio: 2 Hi-Fi record/playback system
Video Signal System:	EIA standard: NTSC color
Antenna:	75-ohm external VHF/UHF combined antenna terminal
Tuner:	USA: 181 channels capability* (125 cable channels) Canada: 178 channels capability* (122 cable channels)
Type:	AutoProgramming frequency synthesis
Power Requirement:	120V AC, 60 Hz
Power Consumption:	23 watts (standby < 4 watts)
Dimensions:	3.7 inches high (93 mm) 15 inches wide (380 mm) 12 inches deep (300 mm)
Weight:	7.7pounds (3.5 kg)
Storage Temperature Range:	- 22°F to +149°F (-30°C to +65°C)
Operating Temperature Range:	+41°F to +104°F (+5°C to +40°C)

*Check your cable company's compatibility requirements.

CLEANING THE VCR

Use a soft cloth or dusting attachment of your vacuum cleaner to dust your VCR. Remove dust from the ventilation holes on the top, back, sides, and bottom of the cabinet.

Plastic surfaces are easily scratched and can be marred by alcohol and various solvents. Avoid excessive use of oil-based furniture polishes since the materials used in the cabinet will accumulate more dust. We recommend using a nonabrasive, antistatic cleaner and polisher.

Specifications are subject to change.

APPENDIX A: REFERENCE

LIMITED WARRANTY

What your warranty covers:

- Any defect in materials or workmanship.

For how long after your purchase:

- Ninety days for labor charges.
- One year for parts.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Pay any Authorized RCA VCR Service Center the labor charges to repair your VCR.
- Pay any Authorized RCA VCR Service Center for the new or, at our option, refurbished replacement parts required to repair your VCR.

How you get service:

- Take your VCR to any Authorized RCA VCR Service Center. To identify your nearest Authorized RCA VCR Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your evidence or purchase date or first rental.
- Pick up your VCR when repairs are completed.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your VCR. Any additional information should be obtained from your Dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your VCR.
- Damage from misuse or neglect.
- Cleaning of video/audio heads.
- Batteries.
- A VCR that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A VCR purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your VCR. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights and you also may have other rights that vary from state to state.

If you purchased your VCR outside the United States:

- This warranty does not apply. Contact your dealer for warranty information.

INDEX

3 CH. 4 switch 5, 47

A

Accessing menus 6
Add or remove channels 11
Audio features, set up 36
Auto channel search 10
AUTO DST: ON or OFF feature 12
Auto play feature 17, 21
Auto TV/VCR feature 17, 41
Automatic rewind 22
Automatic tracking 21

B

Batteries 4
Broadcast stereo, recording 29

C

Cable box setup 8
Channels, add or remove 11
Channels list, VCR 10
CHANNELS menu 9–11, 14, 26
Cleaning the VCR 51
CLEAR button 20, 27, 28, 33–35
Commercial scan feature 32
Connections 39–44

E

Eject, tape 22
EnergySaver 18
Express recording 24

F

Front panel controls 46

G

GO BACK button 20

I

Index search feature 33
Indicator panel 47
Interactive Setup 5

J

Jacks, types of 40

L

Language feature 8

M

Menus, accessing 6

O

On-screen displays 36

P

Picture search options 32
PREFERENCES menu 16
PROGRAMS OVERLAP message 25, 27

R

Recording 22, 24–30
Remote buttons 20
REMOTE VCR1/VCR2 option 16
Remove or add channels 11
Reviewing programs 28

S

Safety tab 22
SAP, recording 28
Search Options 32–34
Sensor, remote 46
SET TIME and DATE screen 13
Signal type 11
Specifications 51
STEREO indicator 37
Stopping a timer recording 28

T

Tab, safety 22
Tape eject 22
Tape, playing a 21
Tape speeds 18
Time and date 12
Time counter 35
TIME menu 12, 13
Timer recording 25–28
TIMER RECORDINGS menu 25, 28

V

VCR channels list 10
VCR indicator 29
VCR Plus+ 13–15, 26–27
Viewing channel 5

W

Warranty, limited 52

If your VCR needs service, please contact your dealer or the nearest Service Center from the yellow pages. Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

 **THOMSON CONSUMER ELECTRONICS**

10330 North Meridian Street
Indianapolis, IN 46290

©1997 Thomson Consumer Electronics, Inc.

Trademark(s)® Registered

Marca(s) Registrada(s)

Printed in Japan

TOCOM 15313840

VQTS3427 (A)



As an ENERGY STAR® Partner, Thomson Consumer Electronics has determined that this product or product model meets the ENERGY STAR® guidelines for energy efficiency.