

# FCC Information

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception. This equipment has been type tested and found to comply with the specifications in Subpart J of Part 15 of FCC Rules. These rules are designed to provide reasonable protection against radio and television interference in a residential installation. However, there is no guarantee that interference will not occur in particular installations.


If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

## For Your Safety

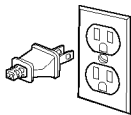

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. **Do not attempt to bypass this safety feature.**

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

## For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

Model No. RP8075RS

Remote Control No.

Date of Purchase

Place of Purchase

Serial No.

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide

**WARNING : TO PREVENT  
FIRE OR ELECTRICAL  
SHOCK HAZARD, DO NOT  
EXPOSE THIS PRODUCT TO  
RAIN OR MOISTURE .**



# Contents

## FCC/ Safety Information

### First Things First ..... 2

- Unpack the System ..... 2
- Check for Moisture ..... 2
- Choose a Location ..... 2

### Connections ..... 3

- Connecting the CD player  
to an amplifier ..... 3

### General Controls ..... 4

- Main Unit ..... 4
- VFD (Vacuum fluorescent display)  
Messages ..... 5
- Remote Control ..... 6

### Using the CD Player ..... 7

- Loading Discs ..... 7
- Playing Discs ..... 7
- Shuffling Play Order ..... 8
- Tracks Introduction ..... 8
- Repeating Play Order ..... 8
- Playing and Loading Discs  
Simultaneously ..... 8
- Programming Play Order ..... 8
- Using ATS (Auto Track Skip) ..... 9
- Creating an ATS Program ..... 9
- CD DISPLAY MESSAGES ..... 10

## Using the Remote

### Control ..... 11

### Troubleshooting Tips ..... 12

### Care and Maintenance ..... 12

### INDEX ..... 13


### US Warranty ..... 14

### Canadian Warranty ..... 15

GB

# First Things First

GB

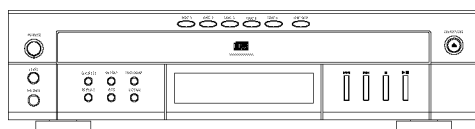

## CONGRATULATIONS ON YOUR PURCHASE...

Congratulations on the purchase of your new 5 DISC CHANGER CD PLAYER !

### Unpack

Remove all items including packing materials and wrappings from the pack. We recommend that you save the shipping carton and packing materials in case you want to store, transport, or ship the unit in future.

- Your new purchase/gift includes these items:
- one 5 DISC CHANGER CD PLAYER;
- one remote control;
- one audio cable;
- one user's guide.

### Choose a Location

Follow the guidelines below when selecting a place to put your player:

- Choose a level and solid surface. Don't place it on a soft surface, such as carpeting or foam rubber.
- Make sure the location is away from direct sunlight, radiators, air ducts, and other sources of heat.

- Avoid locations that are subject to moisture, mechanical vibration, shock, or excessive dust.
- As good ventilation is essential to protect the CD player from internal heat build up, the selected location should have adequate air circulation.

### Check for moisture


Moisture is your CD player's worst enemy. Do take note of some of the following situations in which condensation might form :

- Immediately after a heater has been turned on;
- In a steamy or very humid room;
- When the system is suddenly moved from a cold environment to a warm, moist one; for example, in moving the unit from a cool air conditioned room to an outside porch on a humid, summer day.

If moisture forms inside this player, it may not operate properly. To correct the problem, turn off the power and wait about 30 minutes for moisture to evaporate.

# Connections

GB

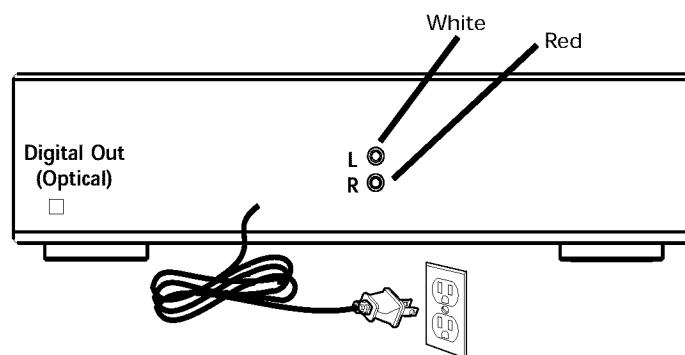

## Connecting the CD Player to an amplifier

Prior to or during connections, the CD player should NOT be plugged to an AC power outlet.

1. Connect the cable's red plug to the CD player's red (R) output jack. Connect the white plug at the same end of the cable to the white (L) output jack of the CD player.
2. Repeat step 1 above for connecting the other end of the cable to an amplifier's (R) and (L) output jack.

Note: If the amplifier does not have input jacks labeled "CD", you can use input jacks labeled "AUX" (Auxiliary).


3. Plug the power cord of the CD player into an AC power outlet that accepts the polarized plug (one blade wider than the other) or use the AC outlet, if provided, at the back of your amplifier.

4. If your amplifier is equipped with optical input, connect it with an optical cable (not supplied, available at general audio shops) to your CD player to enjoy digital playback. By connecting a CD recorder or MD deck to your player with an optical cable (not supplied), you can make a digital recording from your CD player. Analog cable is no longer needed once you have furnished the player with optical cable settings.

**IMPORTANT:** The polarized plug is an important safety feature. It will fit into the power outlet only one way. If the plug won't go into the outlet completely, reverse it and try inserting it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

# General Controls

GB

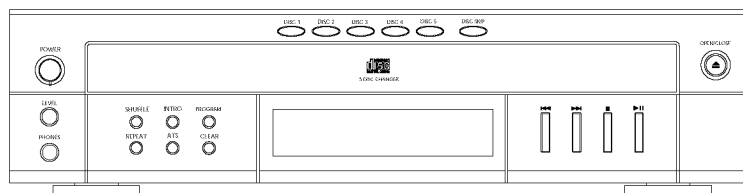

## Main Unit

### Power

Press this button to turn the player on and off.

### Disc 1, disc 2, disc 3, disc 4, disc 5 Direct Disc Access

You can press these buttons to select one of the loaded discs on the CD compartment tray. With Direct Disc Access buttons, the selected disc is accessed and the unit plays the CD from track 1. The corresponding Direct Disc Access button will flash indicating the playing disc number.

### Disc Skip

Press **DISC SKIP** to skip to the next disc on the tray without opening the CD compartment tray, the button flashes to indicate disc skip in progress. If the button is pressed while the tray is out and a CD is playing, the tray rotates clockwise or anti-clockwise for loading and unloading CDs.

### Open/Close

Press this button to slide out or close the CD compartment tray automatically.

### Program

The CD player can store up to 32 tracks in memory and play back the programmed tracks in the same sequence as you stored them.

### Auto Track Skip (ATS)

ATS is the opposite of programmed play. Instead of programming the tracks you want to hear, you specify and store into memory those ones that you don't like hearing. You can block up to 32 tracks from playing.

### Repeat

You can set the CD player to play repeatedly a track, a disc or all discs. Press **REPEAT** to toggle between these modes: **REPEAT 1, REPEAT 1 DISC, REPEAT ALL DISCS, ALL DISCS.**

### Shuffle

Select this mode to randomize the order of track play. Randomization between discs depends on the selected repeat mode (see **REPEAT** above).

### Stop ■

Press this button to end CD play mode. play/pause

Press once to begin CD play, press again to temporarily suspend play mode and a third time to resume play.

### Play/Pause ►||

This button controls the CD play mode. Press once to begin CD play, press again to pause and a third time to resume play.

### Clear

To clear the stored program in memory (either program play or ATS program), press and hold the button until the display shows **CLEAR** which indicates the memory is cleared and empty.

### Intro

Use this feature to listen, in play mode, the first 10 seconds of each track on a disc.

# General Controls

GB

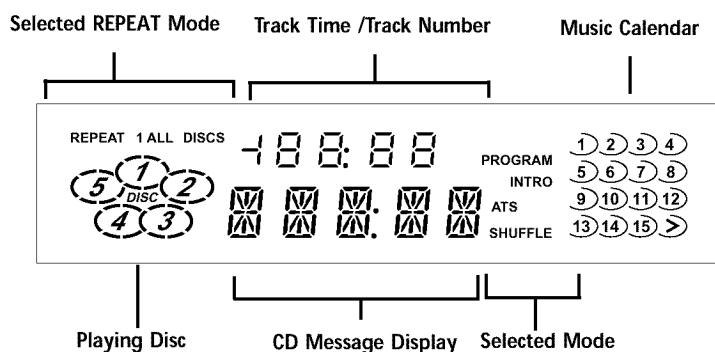 


Fig. 1 Vacuum Fluorescent Display



Press once to skip to the beginning of the next track or repeatedly to skip forward to the beginning of other tracks. Press and hold during play to search forward at high speed within the current track. Play resumes to normal when button is released.



Press once to skip to the beginning of the current track or repeatedly to skip to previous tracks. Press and hold during play to search backward at high speed within the current track. Play resumes when button is released.

### Phones Jack

Insert the plug of a headphone set (not included) into this jack for private listening.

### Phones Level (for headphones)

When listening to music with headphones (not included), adjust this knob to your desired volume level.

### Music Calendar

You can see at a glance how many tracks there are on the playing disc. A ">" appears if there are more than 14 tracks. In play mode, one of the numbers flashes to indicate the playing track; the ">" flashes for the track numbers greater than 14.

### Have a Blast - Just Not in Your Ears!

Make sure you turn the volume down (towards MIN) on the unit before you put on headphones. Increase the volume to the desired level only *after* headphones are in place.



### Vacuum Fluorescent Display (VFD) messages

As you select various modes, the VFD shows the settings and current status of the unit. Fig.1 shows the majority of messages that may appear on display. Also refer to page 13 for more display messages.

# General Controls

GB

## Remote Control

### POWER

Press to turn system on and off.

### MUTE

Press once to silence sound output, press again to resume.

### TRACK SEARCH

In play mode, press once to skip to the beginning of the playing track; press again/repeatedly to skip to the beginning of previous track(s). Press and hold to scan backwards through the playing track.

### TRACK SEARCH

In play mode, press once to skip to the beginning of the next track; press again/repeatedly to skip to the next/ other track(s). Press and hold to scan forward through the playing track.

### PLAY/PAUSE

Press once to play CD. Press again to temporarily suspend play mode. Play mode resumes upon another press of the button.

### STOP

Press to end CD play mode.

### REPEAT

Press to toggle between these modes: **ALL DISCS, REPEAT 1, REPEAT 1 DISC, and REPEAT ALL DISCS.**

### DISC SKIP


Press once or repeatedly to skip to the next disc(s) in the CD compartment tray.

### SHUFFLE

Press this button to play tracks in a randomized order. Randomization within one disc or among discs depend on the selected REPEAT mode.

### VIDEO, TUNER, CD, TAPE, EQ PRESET, VOL < > PRESET, TUNING, SEEK

These buttons are not active for this model.

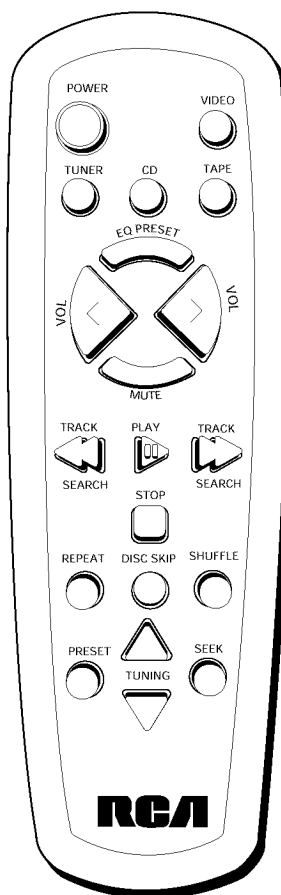

# Using the CD Player

GB

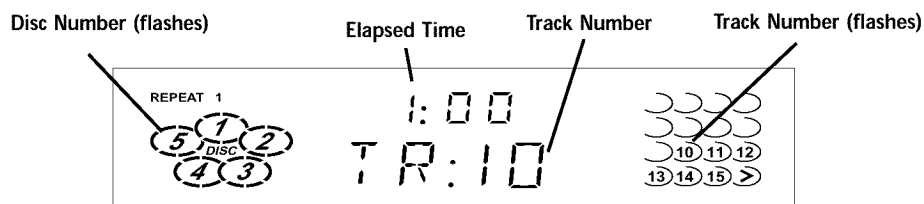
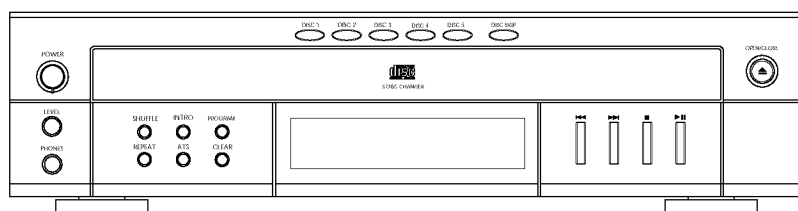


Fig. 2

This section contains a set of step-by-step procedures on how to use your new **5 DISC CD CHANGER PLAYER**. Press **POWER** to turn on the unit, the display will show the "NO DISC" message. Select your favourite CDs and start loading!

## Loading Discs

1. Press **OPEN/CLOSE** to slide out the CD compartment tray automatically.
2. Load one to five discs onto the tray.
3. Press **DISC SKIP** to rotate the tray for loading more CDs onto the other parts of the tray.
4. When you've finished loading, press **OPEN/CLOSE** to close the tray.

## Playing Discs

Now you can select a disc by pressing one of the **DISC DIRECT ACCESS** buttons or press **DISC SKIP**. After you have made your selection, the unit starts playing from track 1. The display shows a flashing disc number, track number, elapsed time of track play, a flashing track number, and a flashing Direct Disc Access button indicating the playing disc. (Also refer to Fig. 2) Press **STOP** to end CD play mode.



# Using the CD Player

GB

## Shuffling Play Order

Select the **SHUFFLE** feature to randomize the order of track play.

1. Press **SHUFFLE** to start random track play. The display shows **SHUFFLE** in red to indicate activation of shuffle mode.
2. Press **SHUFFLE** a second time to de-activate the function.

Note: Shuffling tracks among discs depends on the selected **REPEAT** mode. (see Repeating Play Order)

## Tracks Introduction

This feature is most useful for newly purchased CDs. You can listen to the first ten seconds of each track as brief introduction. In play mode, press **INTRO** once, **INTRO** lights up at the selected mode section on the display. To de-activate, press **INTRO** again and the unit begins playing track 1 of the disc.

## Repeating Play Order

You can repeat one track, one disc or all discs. You can toggle between various modes.

Providing that the display shows **ALL DISCS**:

1. Press **REPEAT** once to play a specific track on a particular disc over and over. The display shows **REPEAT 1**.
2. Press **REPEAT** a second time and the display shows **REPEAT 1 DISC**. With this mode selected, the CD player plays the selected disc repeatedly from start to finish.
3. Press **REPEAT** a third time, the display shows **REPEAT ALL DISCS**. Selecting this mode sets the unit playing all loaded discs repeatedly.

## Repeating a Program

When you program tracks into memory, you can repeat playing the program by pressing **REPEAT** after the program begins playing.

## Playing and Loading Discs Simultaneously

You can open the CD compartment tray without interrupting the playing music. Simply press **OPEN/CLOSE** once to slide out the tray. While the disc is playing, you can change the rest of the four discs by pressing **DISC SKIP** to rotate the tray clockwise and anti-clockwise to load

and unload CDs. Press **OPEN/ CLOSE** again to close the tray. To play or select disc, refer to the section on Playing Discs.

## Programming Play Order

You must be in Stop mode to program/store your desired track sequence.

1. Press **PROGRAM**.
2. Press **DISC SKIP** or one of the Disc Direct Access buttons to choose a disc.
3. Press **◀** or **▶** to choose a track.
4. Press **PROGRAM** to save the selected track number into memory.
5. Repeat the above steps 2 to 4 for programming up to 32 tracks.
6. Press **PLAY/PAUSE** to begin programmed play.

## Recalling and Editing the Program

You must be in Stop mode in order to recall and edit the program.

1. Press **PROGRAM** to enter Program mode.
2. Press **PROGRAM** to the next program number until you get to the programmed track you want to change.
3. Press **DISC SKIP** to choose the disc and then press **◀** or **▶** to choose a replacement track.
4. Press **PROGRAM** to change the current programmed track to the one you just selected.

## Playing the Program

To play your programmed tracks, press **PROGRAM** then **PLAY/PAUSE**.

## Clearing the Program

You cannot select tracks within a program to clear. Upon completion of the following steps, the entire program will be cleared.

1. Press **PROGRAM** to enter Program mode.
2. Press and hold the **STOP** button until **CLEAR** shows in the display. If the program is already empty, **EMPTY** will show in the display.

# Using the CD Player

GB

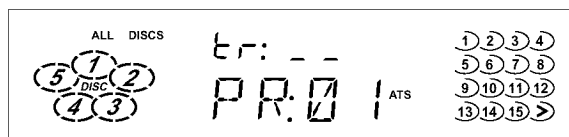


Fig. 3

## Using Auto Track Skip (ATS)

ATS is the opposite of programmed play. Rather than programming into memory the tracks that you want to hear, with ATS you set the unit to skip those tracks that you don't like.

## Clearing the ATS Program

Clearing the ATS program is also a lot like clearing a regular program.

1. Press **ATS**.
2. Press and hold **CLEAR** until **CLEAR** shows on the display.

## Creating an ATS Program

1. Press **ATS** to activate the feature. The VFD display will be similar Fig. 3 with a flashing disc number and " \_ \_".
2. Press **DISC SKIP** to choose a disc.
3. Press **◀** or **▶** to choose the first track to be skipped.
4. Press **PROGRAM** to add the selected track to the ATS program.
5. Repeat the preceding steps to add more tracks to the ATS program.
6. Press **PLAY/PAUSE** to begin playing the ATS program.

## Recalling and Editing the ATS Program

Editing the ATS program is a lot like editing a regular program.

1. Press **ATS** to go to Auto Track Skip mode.
2. Press **PROGRAM** to move to the next program number until you get to the programmed track you want to change.
3. Press **DISC SKIP** to choose the disc, and then press **◀** or **▶** to choose a replacement track.
4. Press **PROGRAM** to change the current skipped track to the one you just selected.

# Using the CD Player

GB

## CD Display Messages

When using the CD function, you may encounter the following messages:

CLOSE

CD compartment tray is in.

OPEN

CD compartment tray is out.

NO DISC

No disc is loaded onto the CD compartment tray.

EMPTY

No tracks are programmed (applies to both Program and ATS mode).

FULL

Program is full (applies to both Program and ATS mode).

READY

Reading disc's table of contents (how many tracks there are and the total time for the disc). This information is displayed when the unit is in Stop mode.

CHANGING

Disc change in process.

STANDBY

Unit is in Standby mode

ERROR

Obstruction to the opening and/ or closing of CD compartment tray. ( Prevent obstruction and press **OPEN/ CLOSE** to close tray.)


MUTE

Sound output of the unit is temporarily suspended. ( Press **MUTE** on the remote control to cancel Mute. )

# Using the Remote Control


GB

Open the battery compartment lid. Insert 2 AAA-size batteries with the correct polarities by following the engraved diagram in the compartment. Replace and close the lid. Refer to the button-by-button description of the remote control on page 6. Now you can operate the unit from a distant!

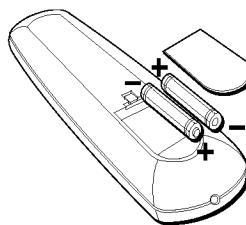

**"...don't point, it's rude!" But... with a remote control, you MUST!**

The remote control works by line-of-sight, which means you should aim and point the remote directly at the front of the unit so that the sensor on the unit senses the transmission from your remote.

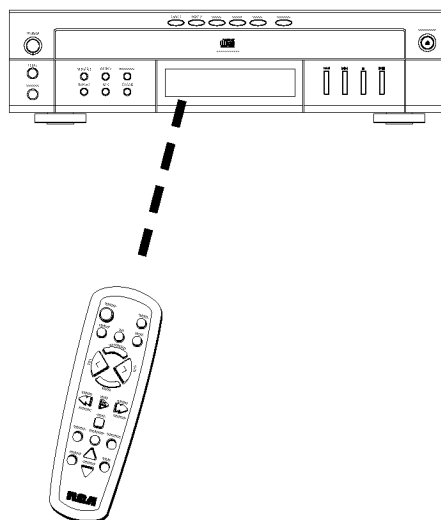

# Troubleshooting Tips

GB

Problem	Solution
CD Player doesn't turn on	<ul style="list-style-type: none"><li>• Make sure power cord is securely plugged into the AC power outlet.</li><li>• Unplug the unit for a moment, then plug it back in.</li><li>• Check the outlet by plugging in another device.</li></ul>
No sound	<ul style="list-style-type: none"><li>• Ensure that a disc is loaded on the CD compartment tray.</li><li>• Adjust volume setting.</li><li>• Check for proper connection of cables between speakers and amplifier and CD player.</li><li>• Make sure volume is not muted. To de-activate, press <b>MUTE</b> on the remote control.</li></ul>
CD Player doesn't play	<ul style="list-style-type: none"><li>• Make sure the tray contains at least one disc.</li><li>• Make sure that discs' labels are facing up.</li><li>• Make sure that Pause mode is not activated.</li></ul>
CD sound skips	<ul style="list-style-type: none"><li>• Clean the disc (refer to <b>Care and Maintenance</b>).</li><li>• Check disc for warping, scratches, or other damage.</li><li>• Ensure that the CD player is placed on a solid and level surface.</li><li>• Check for vibrations or shock that may affect the CD player. Move the CD player to another location if necessary.</li></ul>
Remote control doesn't work	<ul style="list-style-type: none"><li>• Make sure the CD player is plugged into a working AC outlet.</li><li>• Make sure that the batteries are correctly installed in the remote control.</li><li>• Replace weak batteries (DO NOT mix old batteries with fresh ones, it can cause damage to the remote control).</li><li>• Point the remote directly at the front of the unit when pressing the buttons.</li><li>• Move closer to the CD player with the remote control.</li><li>• Make sure that there are no obstacles between the remote and the unit.</li></ul>

# Care & Maintenance

## Cleaning the Exterior

Disconnect the system from AC power before cleaning the exterior of the system with a soft clean cloth.

## Handling Compact Discs

- Do not touch their signal surfaces. Hold by the edges, or by one edge and the hole.
- Do not affix labels or adhesive tape to the label surfaces. Also, do not scratch or damage the label.
- Discs rotate at high speeds inside the player. Do not use damaged (cracked or warped) discs.

## Cleaning Compact Discs

- Dirty discs can cause poor sound quality. Always keep discs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a disc becomes very dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
- Do not use record cleaning sprays or antistatic agents on discs. Also, never clean the discs with benzene, thinner, or other volatile solvents which may cause damage to the disc surface.

# Index

GB

## A

AC power outlet 3  
Amplifier 3  
ATS (Auto Track Skip) 4  
Auxiliary 3

## C

Cables 2,3  
Care and maintenance 12  
CD display messages 10  
Cleaning compact discs 12  
Clearing 4  
Clearing the program 8  
Clearing the ATS program 9  
Connections 3  
Creating an ATS program 9

## D

Digital Optical Output 3  
Direct disc access 4  
Disc Skip 4, 6

## H

Handling compact discs 12

## I

Input jack 3

## L

Limited Warranty 14, 15  
Loading Discs 7  
Locations 2

## M

Main Unit 4  
Moisture 2  
Music Calendar 5  
Mute 6

## O

Open/close 4

## P

PHONES (jack) 5  
Phones level 5  
PLAY/PAUSE 4, 6  
Playing discs 7  
Polarized Plug 3  
POWER 4, 6  
Program 4  
Programming play order 8

## R

Recalling and editing program 8  
Recalling and editing ATS program 9  
Remote control 6, 11  
Repeat 4, 6, 8

## S

Shuffle 4, 6, 8  
Stop 4, 6, 8

## T

Track Search 6  
troubleshooting Tips 12

## U

Unpack 2

## V

Vacuum Fluorescent Display 5

# US Warranty

**GB:**

**What your warranty cover:**

Any defect in material or workmanship.

**For how long after our purchase:**

- One year.  
(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

**What we will do:**

- Provide you with a new or, at our options, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

**How to make a warranty claim:**

- Properly pack your unit. Included any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Included in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to:

**Thomson Consumer Electronic, Inc.  
Product Exchange Center  
11721 B Alameda Av.,  
Socorro, TX 79927**

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment in case of loss or damage. Thomson accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you prepaid freight.

**What your warranty does not cover:**

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside USA.
- Acts of God, such as but not limited to lightning damage.

**Product Registration:**

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

**How state law relates to this warranty:**

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state. If you purchased your product outside the USA:
- This warranty does not apply. Contact your dealer for warranty information.

# Canadian Warranty

GB

Thomson Consumer Electronics Canada, Inc. warrants to the purchaser or gift recipient that if any manufacturing defect becomes apparent in this product within 1 year from the original date of purchase, it will be replaced free of charge, including return transportation.

This warranty does not include damage to the product resulting from accidents misuse or leaking batteries.

Should your product not perform properly during the warranty period, either:

1. Return it to the selling dealer with proof of purchase for replacement,  
OR
2. Remove the batteries (where applicable), and pack product complete with accessories in the original carton (or equivalent).

Mail prepaid (with proof of purchase) and insured to:

**Thomson Consumer Electronics Canada, Inc.**  
**Distribution Centre**  
**7400 A Bramalea Road**  
**Mississauga, Ontario L5S 1X1**

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson Consumer electronics Canada, Inc.  
P.O. Box 0944  
Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHAE DATE \_\_\_\_\_  
NAME OF STORE \_\_\_\_\_

Model RP8075RS  
55064500 ( Rev. 0 EN/ F/ E )  
11-1999