


ADDENDUM

Attach this addendum to the Gas Built-In Oven **Owner's Guide** (P/N 318200917)
Replace the Setting the Clock and Minute Timer section (page 6) by the following:

Setting the Clock and Minute Timer

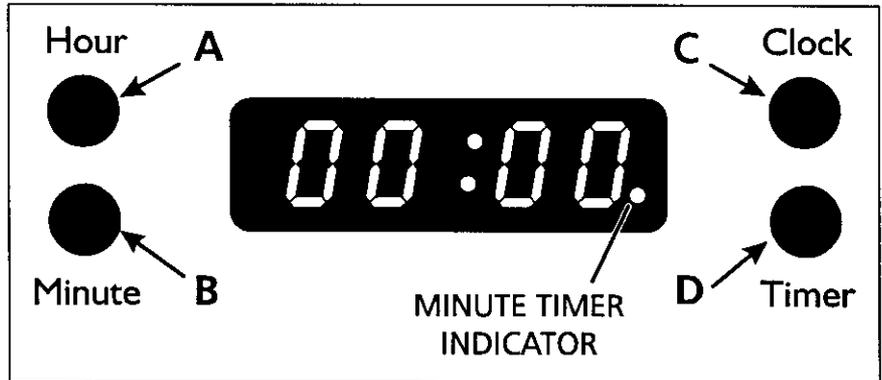

To Set the Clock

When the range is first plugged in, or when the power supply to the range has been interrupted, "12:00" will flash in the display window.

1. Press button C (CLOCK).
2. Push in and hold button A (HOUR) until the correct hour appears in the display. (The numbers will only count forward.)
3. Push in and hold button B (MINUTE) until the correct minutes appear in the display.

To Set the Minute Timer

1. Press button D (TIMER), "0:59." (59 MINUTES) and the minute timer indicator will appear in the display window. The timer can be set for any amount of time from 1 minute to 1 hour and 59 minutes.
2.
 - To set a time more than 59 minutes, push in and release button A (HOUR). The display will show the maximum 1 hour and 59 minutes. Adjust the time by pushing in and holding button B (MINUTE) until the correct time appears in the display.
 - To set a time less than 59 minutes, push in and hold button B (MINUTE) until the correct minutes appear in the display. (The minute timer will automatically start when the button is released.)
3. When the set time has passed, the control will display "0:00." and beep continuously. Press button C (CLOCK) to cancel the timer and return to the clock mode.