


AVR 220 Audio/Video Receiver

OWNER'S MANUAL

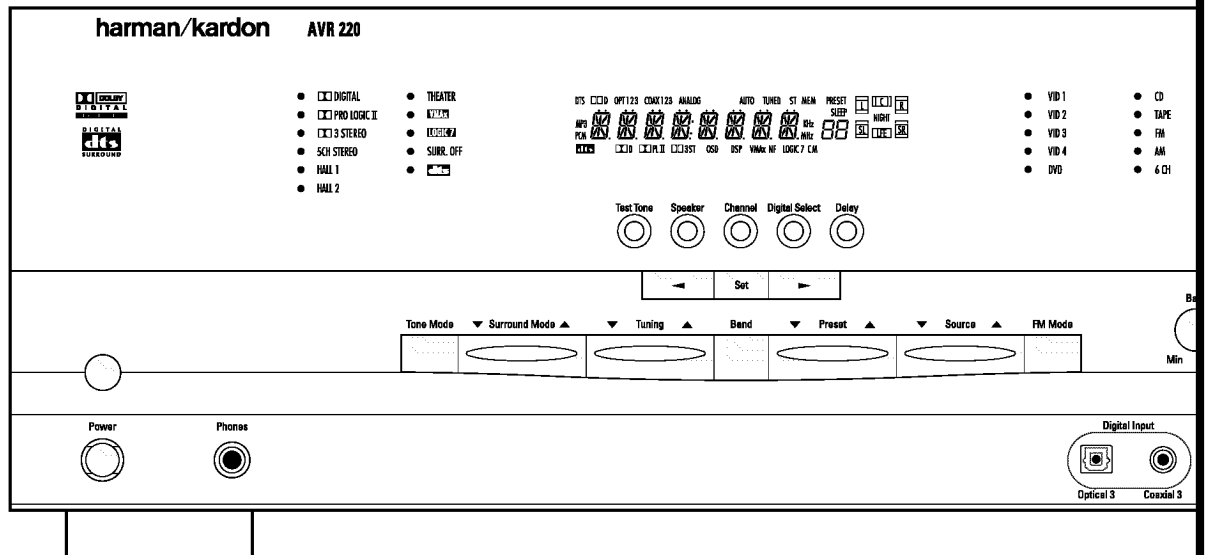

harman/kardon®

Power for the Digital Revolution.™

AVR 220 Audio/Video Receiver

3	Introduction
4	Safety Information
4	Unpacking
5	Front Panel Controls
7	Front Panel Information Display
9	Rear Panel Connections
11	Remote Control Functions
14	Installation and Connections
16	System Configuration
18	Input Setup
18	Surround Setup
18	Delay Settings
19	Speaker Setup
21	Output Level Adjustment
22	Manual Output Level Adjustment
24	Operation
24	Basic Operation
24	Source Selection
25	Surround Mode Chart
26	Surround Mode Selection
26	Digital Audio Playback
26	Selecting a Digital Source
27	Night Mode
28	Tuner Operation
29	Tape Recording
29	Output Level Trim Adjustment
30	6-Channel Direct Input
31	Advanced Features
31	Display Brightness
31	Turn-On Volume Level
31	Semi-OSD Settings
32	Full-OSD Time Out Settings
33	Programming the Remote
33	Direct Code Entry
33	Auto Search Method
33	Code Readout
34	Macro Programming
34	Programmed Device Functions
35	Punch-Through Programming
35	Volume Punch-Through
35	Channel Control Punch-Through
36	Transport Control Punch-Through
36	Reassigning Device Control Selectors
36	Resetting the Remote Memory
37	Function List
39	Setup Code Tables
49	Troubleshooting Guide
49	Processor Reset
50	Technical Specifications
51	Notes

Typographical Conventions

In order to help you use this manual with the remote control, front panel controls and rear panel connections, certain conventions have been used.

EXAMPLE – (bold type) indicates a specific remote control or front panel button, or rear panel connection jack

EXAMPLE – (OCR type) indicates a message that is visible on the front panel information display

1 – (number in a square) indicates a specific front panel control

1 – (number in a circle) indicates a rear panel connection

1 – (number in an oval) indicates a button or indicator on the remote

A – (letter in a square) indicates an indicator in the front panel display

Introduction

Thank you for choosing Harman Kardon!

With the purchase of a Harman Kardon AVR 220 you are about to begin many years of listening enjoyment. The AVR 220 has been custom-designed to provide all the excitement and detail of movie soundtracks and every nuance of musical selections. With onboard Dolby* Digital and DTS® decoding, the AVR 220 delivers six discrete channels of audio that take advantage of the digital soundtracks from the latest DVD and LD releases and Digital Television broadcasts.

While complex digital systems are hard at work within the AVR 220 to make all of this happen, hookup and operation are simple. Color-keyed connections, a programmable remote control, and on-screen menus make the AVR 220 easy to use. To obtain the maximum enjoyment from your new receiver, we urge you to take a few minutes to read through this manual. This will ensure that connections to speakers, source playback units and other external devices are made properly. In addition, a few minutes spent learning the functions of the various controls will enable you to take advantage of all the power the AVR 220 is able to deliver.

If you have any questions about this product, its installation or its operation, please contact your retailer or custom installer. They are your best local sources of information.

Description and Features

The AVR 220 is among the most versatile and multifeatured A/V receivers available, incorporating a wide range of listening options. In addition to Dolby Digital and DTS decoding for digital sources, a broad choice of analog surround modes are available for use with sources such as CD, VCR, TV broadcasts and the AVR 220's own FM/AM tuner. Along with the latest Dolby Pro Logic® II decoding technology, Dolby 3 Stereo and custom Hall and Theater modes, only Harman Kardon receivers offer Logic 7® to create a wider, more enveloping field environment and more defined fly-overs and pans. Another Harman Kardon exclusive is VMAx®, which uses proprietary processing to create an open, spacious sound field even when only two front speakers are available. Finally, the AVR 220 is among the very few A/V receivers that offer decoding of MP3 data, so that you may listen to the latest music selections directly from compatible computers or playback devices with the power and fidelity you expect from Harman Kardon.

In addition to providing a wide range of listening options, the AVR 220 is easy to configure so that it provides the best results with your speakers and specific listening-room environment. On-screen menus make it simple to enter settings for speakers, inputs and delay times, while our exclusive EzSet™ remote measures a system's sound levels and automatically calibrates them for perfectly balanced soundfield presentation.

For the ultimate in flexibility, the AVR 220 features connections for five video devices, all with both composite and S-Video inputs, including the front panel inputs. Two additional audio inputs are available, and a total of six digital inputs make the AVR 220 capable of handling all the latest digital audio sources. Coax and optical digital outputs are also available for direct connection to digital recorders. Two video recording outputs and a six-channel input make the AVR 220 virtually future-proof, with everything needed to accommodate tomorrow's new formats right on board. The AVR 220's powerful amplifier uses traditional Harman Kardon high-current design technologies to meet the wide dynamic range of any program selection.

Harman Kardon invented the high-fidelity receiver more than forty-seven years ago. With state-of-the-art circuitry and time-honored circuit designs, the AVR 220 is one of the finest receivers ever offered by Harman Kardon.

- **Onboard Dolby Digital and DTS Decoding Using Crystal® Chip Technology**
- **Harman Kardon's Exclusive Logic 7 and VMAx Modes**
- **Dolby Laboratories' Latest Pro Logic II Decoding Technology**
- **MP3 Decoding for Use With Computers and Digital Audio Players**
- **EzSet™ Remote Automatically Sets Output Levels for Optimum Performance**
- **Front Panel Digital Inputs for Easy Connection to Portable Digital Devices and the Latest Video Game Consoles**
- **Multiple Digital Inputs and Outputs**
- **On-Screen Menu and Display System**
- **6-Channel Direct Input for Use With DVD-Audio Players, Other Products With Internal Surround Decoders or External Surround Decoders**
- **Color-coded input, output and speaker terminals comply with the latest CEA standards for easy installation**

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

CAUTION: To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Safety Information

Important Safety Information

Verify Line Voltage Before Use

Your AVR 220 has been designed for use with 120-volt AC current. Connection to a line voltage other than that for which it is intended can create a safety and fire hazard and may damage the unit.

If you have any questions about the voltage requirements for your specific model, or about the line voltage in your area, contact your selling dealer before plugging the unit into a wall outlet.

Do Not Use Extension Cords

To avoid safety hazards, use only the power cord attached to your unit. We do not recommend that extension cords be used with this product. As with all electrical devices, do not run power cords under rugs or carpets or place heavy objects on them. Damaged power cords should be replaced immediately by an authorized service depot with a cord meeting factory specifications.

Handle the AC Power Cord Gently

When disconnecting the power cord from an AC outlet, always pull the plug, never pull the cord. If you do not intend to use the unit for any considerable length of time, disconnect the plug from the AC outlet.

Do Not Open the Cabinet

There are no user-serviceable components inside this product. Opening the cabinet may present a shock hazard, and any modification to the product will void your guarantee. If water or any metal object such as a paper clip, wire or a staple accidentally falls inside the unit, disconnect it from the AC power source immediately, and consult an authorized service station.

CATV or Antenna Grounding

If an outside antenna or cable system is connected to this product, be certain that it is grounded so as to provide some protection against voltage surges and static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements of the grounding electrode.

NOTE TO CATV SYSTEM INSTALLER: This reminder is provided to call the CATV (Cable TV) system installer's attention to article 820-40 of the NEC that provides guidelines for

proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible.

Installation Location

- To assure proper operation and to avoid the potential for safety hazards, place the unit on a firm and level surface. When placing the unit on a shelf, be certain that the shelf and any mounting hardware can support the weight of the product.
- Make certain that proper space is provided both above and below the unit for ventilation. If this product will be installed in a cabinet or other enclosed area, make certain that there is sufficient air movement within the cabinet. Under some circumstances a fan may be required.
- Do not place the unit directly on a carpeted surface.
- Avoid installation in extremely hot or cold locations, or an area that is exposed to direct sunlight or heating equipment.
- Avoid moist or humid locations.
- Do not obstruct the ventilation slots on the top of the unit, or place objects directly over them.

Cleaning

When the unit gets dirty, wipe it with a clean, soft, dry cloth. If necessary, wipe it with a soft cloth dampened with mild soapy water, then a fresh cloth with clean water. Wipe dry immediately with a dry cloth. NEVER use benzene, aerosol cleaners, thinner, alcohol or any other volatile cleaning agent. Do not use abrasive cleaners, as they may damage the finish of metal parts. Avoid spraying insecticide near the unit.

Moving the Unit

Before moving the unit, be certain to disconnect any interconnection cords with other components, and make certain that you disconnect the unit from the AC outlet.

Important Information for the User

This equipment has been tested and found to comply with the limits for a Class-B digital device, pursuant to Part 15 of the FCC Rules. The limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that harmful interference will

not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept interference received, including interference that may cause undesired operation.

NOTE: Changes or modifications may cause this unit to fail to comply with Part 15 of the FCC Rules and may void the user's authority to operate the equipment.

Unpacking


The carton and shipping materials used to protect your new receiver during shipment were specially designed to cushion it from shock and vibration. We suggest that you save the carton and packing materials for use in shipping if you move, or should the unit ever need repair.

To minimize the size of the carton in storage, you may wish to flatten it. This is done by carefully slitting the tape seams on the bottom and collapsing the carton. Other cardboard inserts may be stored in the same manner. Packing materials that cannot be collapsed should be saved along with the carton in a plastic bag.

If you do not wish to save the packaging materials, please note that the carton and other sections of the shipping protection are recyclable. Please respect the environment and discard those materials at a local recycling center.

At this time you should remove the protective plastic film from the front-panel lens. Leaving the film in place may affect the performance of your remote control.

Front Panel Controls

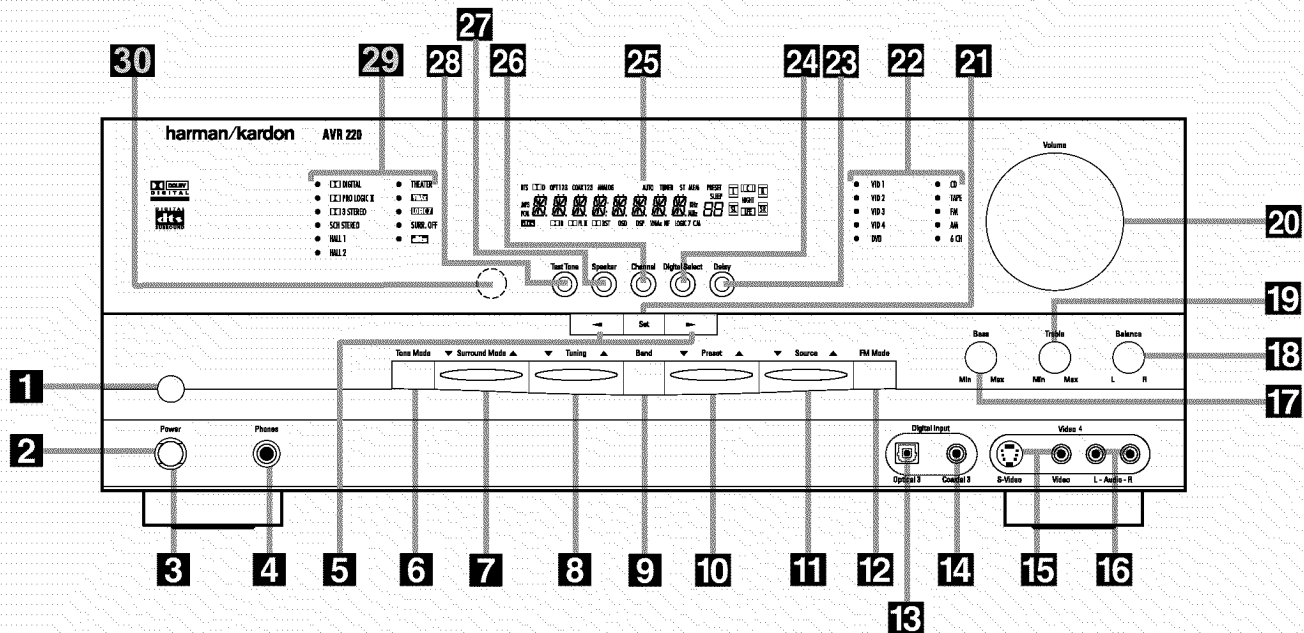

- 1** Main Power Switch
- 2** System Power Control
- 3** Power Indicator
- 4** Headphone Jack
- 5** Selector Buttons
- 6** Tone Mode
- 7** Surround Mode Selector
- 8** Tuning Selector
- 9** Tuner Band Selector
- 10** Preset Stations Selector
- 11** Input Source Selector
- 12** FM Mode Selector
- 13** Digital Optical 3 Input
- 14** Digital Coax 3 Jack
- 15** Video 4 Video Input Jacks
- 16** Video 4 Audio Input Jacks
- 17** Bass Control
- 18** Balance Control
- 19** Treble Control
- 20** Volume Control
- 21** Set Button
- 22** Input Indicators
- 23** Delay
- 24** Digital Input Selector
- 25** Main Information Display
- 26** Channel Select Button
- 27** Speaker Select Button
- 28** Test Tone Selector
- 29** Surround Mode Indicators
- 30** Remote Sensor Window

1 Main Power Switch: Press this button to apply power to the AVR 220. When the switch is pressed in, the unit is placed in a Standby mode, as indicated by the amber LED **3** surrounding the **System Power Control 2**. This button **MUST** be pressed in to operate the unit. To turn the unit off and prevent the use of the remote control, this switch should be pressed until it pops out from the front panel so that the word "OFF" may be read at the top of the switch.

NOTE: This switch is normally left in the "ON" position.

2 System Power Control: When the **Main Power Switch 1** is "ON," press this button to turn on the AVR 220; press it again to turn the unit off. Note that the **Power Indicator**

3 surrounding the switch will turn green when the unit is on.

3 Power Indicator: This LED will be illuminated in amber when the unit is in the Standby mode to signal that the unit is ready to be turned on. When the unit is in operation, the indicator will turn green. Should the indicator turn red, turn the unit off using the **Main Power Switch 1** and check the speaker wire connections to make certain that there are no short circuits.

4 Headphone Jack: This jack may be used to listen to the AVR 220's output through a pair of headphones. Be certain that the headphones have a standard 1/4" stereo phone plug. Note that the main room speakers will automatically be turned off when the headphone jack is in use.

5 Selector Buttons: When you are establishing the AVR 220's configuration settings, use these buttons to select from the choices available, as shown in the **Main Information Display 25**.

6 Tone Mode: Pressing this button enables or disables the Bass and Treble tone controls. When the button is pressed so that the words TONE IN appear in the **Main Information Display 25**, the settings of the **Bass 17** and **Treble 19** controls may be used to adjust the output signals. When the button is pressed so that the words TONE OUT appear in the **Main Information Display 25**, the output signal will be "flat," without any bass or treble alteration, no matter how the actual **Bass** and **Treble Controls 17/19** are adjusted.

Front Panel Controls

7 Surround Mode Selector: Press this button to change the surround mode by scrolling through the list of available modes. Note that depending on the type of input, some modes are not always available. (See page 25 for more information about surround modes.)

8 Tuning Selector: Press the left side of the button to tune lower-frequency stations and the right side of the button to tune higher-frequency stations. When a station with a strong signal is reached, the **TUNED Indicator** **Q** will be illuminated in the **Main Information Display** **25**.

To tune manually, tap the button lightly and note that the tuner will step up one frequency increment per button press. When the button is held for a few seconds you will note that the unit will quickly search the frequency band. Release it once the fast tuning starts; the tuner will automatically scan for the next station with an acceptable signal and then stop.

9 Tuner Band Selector: Pressing this button will automatically switch the AVR 220 to the Tuner mode. Pressing it again will switch between the AM and FM frequency bands. (See page 28 for more information on the tuner.)

10 Preset Stations Selector: Press this button to scroll up or down through the list of stations that have been entered into the preset memory. (See page 29 for more information on tuner presets.)

11 Input Source Selector: Press this button to change the input by scrolling up or down through the list of input sources.

12 FM Mode Selector: Press this button to select Auto or Manual tuning. When the button is pressed so that the **AUTO Indicator** **R** lights, the tuner will search for the next station with an acceptable signal when the **Tuning Selector** **8** **21** is pressed. When the button is pressed so that the **AUTO Indicator** **R** is not lit, each press of the **Tuning Selector** **8** **21** will increase the frequency. This button may also be used to switch between Stereo and Mono modes for FM radio reception. When weak reception is encountered, press the button until the **STEREO Indicator** **P** goes out to switch to Mono reception. Press and hold again to switch back to STEREO mode. (See page 28 for more information on using the tuner.)

13 Digital Optical 3 Input: Connect the optical digital output of an audio or video product to this jack. When the Input is not in use, be certain to keep the plastic cap installed to avoid dust contamination that might degrade future performance.

14 Digital Coax 3 Jack: This jack is used for connection to the output of portable audio devices, video game consoles or other products that have a coax digital jack.

15 Video 4 Video Input Jacks: These jacks may be used for temporary connection to the composite or S-Video output of video games, camcorders or other portable video products.

16 Video 4 Audio Input Jacks: These audio jacks may be used for temporary connection to video games or portable audio/video products such as camcorders and portable audio players.

17 Bass Control: Turn this control to modify the low frequency output of the left/right channels by as much as ± 10 dB. Set this control to a suitable position for your taste or room acoustics.

18 Balance Control: Turn this control to change the relative volume for the front left/right channels.

NOTE: For proper operation of the surround modes this control should be at the midpoint or "12 o'clock" position.

19 Treble Control: Turn this control to modify the high frequency output of the left/right channels by as much as ± 10 dB. Set this control to a suitable position for your taste or room acoustics.

20 Volume Control: Turn this knob clockwise to increase the volume, counterclockwise to decrease the volume. If the AVR 220 is muted, adjusting volume control will automatically release the unit from the silenced condition.

21 Set Button: When making choices during the setup and configuration process, press this button to enter the desired setting as shown in the **Main Information Display** **25** into the AVR 220's memory. The set button may also be used to change the display brightness. (See page 31.)

22 Input Indicators: A green LED will light in front of the input that is currently being used as the source for the AVR 220.

23 Delay: Press this button to begin the sequence of steps required to enter delay time settings. (See page 18 for more information on delay times.)

24 Digital Input Selector: When playing a source that has a digital output, press this button to select between the **Optical** **13** **24** and **Coaxial** **14** **25** **Digital** inputs. (See pages 26–28 for more information on digital audio.)

25 Main Information Display: This display delivers messages and status indications to help you operate the receiver. (See pages 7–8 for a complete explanation of the Information Display.)

26 Channel Select Button: Press this button to begin the process of trimming the channel output levels using an external audio source. (For more information on output level trim adjustment, see page 29.)


27 Speaker Select Button: Press this button to begin the process of configuring the unit to match the type of speakers used in your listening room. (See page 19 for more information on speaker setup and configuration.)

28 Test Tone Selector: Press this button to begin the process of adjusting the channel output levels using the internal test tone as a reference. (For more information on output level adjustment, see page 21.)

29 Surround Mode Indicators: A green LED will light in front of the surround mode that is currently in use.

30 Remote Sensor Window: The sensor behind this window receives infrared signals from the remote control. Aim the remote at this area and do not block or cover it.

Front Panel Information Display

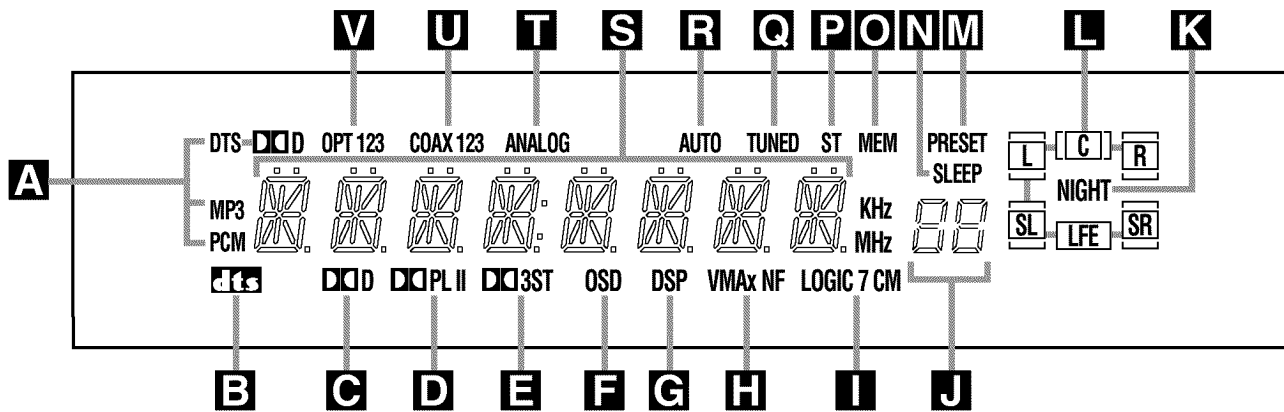

A Bitstream Indicators

B DTS Mode Indicator

C Dolby Digital Indicator

D Dolby Pro Logic II Indicator

E Dolby 3 Stereo Indicator

F OSD Indicator

G DSP Mode Indicator

H VMAx Mode Indicator

I Logic 7 Mode Indicators

J Preset Number/Sleep Timer

K Night Mode Indicator

L Speaker/Channel Input Indicators

M Preset Indicator

N Sleep Indicator

O Memory Indicator

P Stereo Indicator

Q Tuned Indicator

R Auto Indicator

S Main Information Display

T Analog Input Indicator

U Coaxial Digital Input Indicators

V Optical Digital Input Indicators

A Bitstream Indicators: When the input is a digital source, one of these indicators will light to display the specific type of data signal in use.

B DTS Mode Indicator: This indicator lights when a DTS-encoded source is playing.

C Dolby Digital Indicator: This indicator lights when a Dolby Digital source is being played.

D Dolby Pro Logic II Indicator: This indicator lights when the Dolby Pro Logic II mode has been selected.

NOTE: It is possible to see the Dolby Pro Logic II indicator lit simultaneously with the Dolby Digital indicator, even though the Dolby Digital surround mode has been selected. This is due to the specifications for Dolby Digital processing, which require that the Dolby Pro Logic II mode apply any time a 2-channel Dolby signal is detected. If you desire 5.1-channel audio, check the audio settings in the menus for both your DVD player and your DVD disc to make sure that a 5.1-channel Dolby Digital sound track is available and has been selected.

E Dolby 3 Stereo Indicator: This indicator lights when the Dolby 3 Stereo mode has been selected.

F OSD Indicator: When the OSD system is in use, this indicator lights to remind you that the other indicators in this display do not function when the On Screen Display is being used.

G DSP Mode Indicator: This indicator lights when any of the surround modes created by Digital Signal Processing, or DSP are in use. These modes include Hall 1, Hall 2, the Theater Mode and 5 Channel Stereo.

H VMAx Mode Indicator: This indicator lights when the VMAx mode is in use. **VMAx F** appears when the Far Field VMAx mode is selected; **VMAx N** appears when the Near Field VMAx mode is selected. (See page 25 for a description of the VMAx modes.)

I Logic 7 Mode Indicators: These indicators light when the Logic 7 mode is in use. **LOGIC 7C** appears for the Cinema version of Logic 7; **LOGIC 7M** appears for the Music version of Logic 7. (See page 25 for a description of the Logic 7 modes.)

J Preset Number/Sleep Timer: When the tuner is in use, these numbers indicate the specific preset memory location in use. (See page 29 for more information on preset stations.) When the Sleep function is in use, these numbers show how many minutes remain before the unit goes into the Standby mode.

K Night Mode Indicator: This indicator lights when the AVR 220 is in the Night mode, which preserves the dynamic range of digital program material at low volume levels.

L Speaker/Channel Input Indicators: These indicators are multipurpose, indicating either the speaker type selected for each channel or the incoming data-signal configuration. The left, center, right, right surround and left surround speaker indicators are composed of three boxes, while the subwoofer is a single box. The center box lights when a "Small" speaker is selected, and the two outer boxes light when "Large" speakers are selected. When none of the boxes are lit for the center, surround or subwoofer channels, no speaker has been assigned to one of those positions. (See page 19 for more information on configuring speakers.) The letters inside each of the center boxes display active input channels. For standard analog inputs, only the L and R will light, indicating a stereo input. When a digital source is playing, the indicators will light to display the channels being received at the digital input. When the letters flash, the digital input has been interrupted. (See page 27 for more information on the Channel Indicators.)

M Preset Indicator: This indicator lights when the tuner is in use to show that the **Preset Number/Sleep Timer J** is showing the station's preset memory number. (See page 29 for more information on tuner presets.)

N Sleep Indicator: This indicator lights when the Sleep function is in use. The numbers in the Preset Number/Sleep Timer Indicators will show the minutes remaining before the AVR 220 goes into the Standby mode. (See page 24 for more information on the Sleep function.)

Front Panel Information Display

M Memory Indicator: This indicator flashes when entering presets and other information into the tuner's memory.

P Stereo Indicator: This indicator lights when an FM station is being tuned in stereo.

T Tuned Indicator: This indicator lights when a station is being received with sufficient signal strength to provide acceptable listening quality.

R Auto Indicator: This indicator lights when the tuner's Auto mode is in use.


S Main Information Display: This display shows messages relating to the status, input source, surround mode, tuner, volume level or other aspects of the AVR 220's operation.

I Analog Input Indicator: This indicator lights when an analog input source has been selected.

U Coaxial Digital Input Indicators: These indicators light to show when a Coaxial Digital Input has been selected.

V Optical Digital Input Indicators: These indicators light to show when an Optical Digital Input has been selected.

Rear Panel Connections

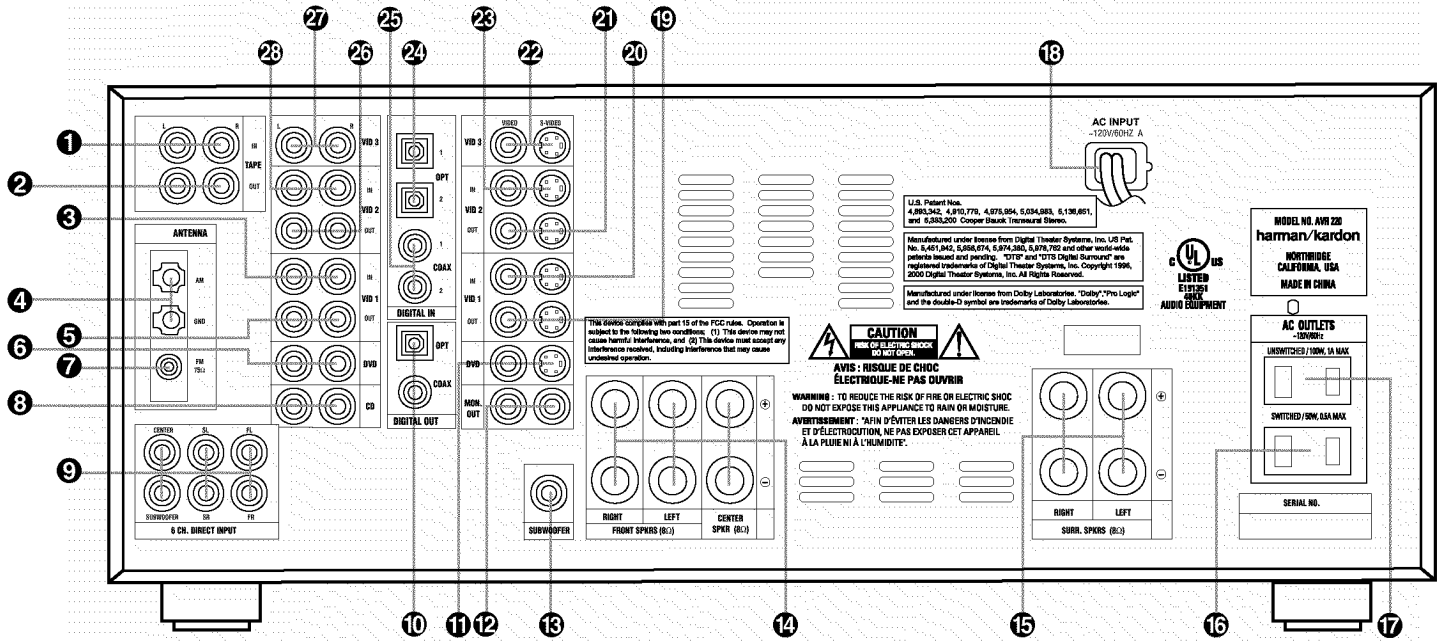

- 1 Tape Inputs
- 2 Tape Outputs
- 3 Video 1 Audio Inputs
- 4 AM Antenna
- 5 Video 1 Audio Outputs
- 6 DVD Audio Inputs
- 7 FM Antenna
- 8 CD Inputs
- 9 6-Channel Direct Inputs
- 10 Digital Audio Outputs

- 11 DVD Video Inputs
- 12 Video Monitor Outputs
- 13 Subwoofer Output
- 14 Front Speaker Outputs
- 15 Surround Speaker Outputs
- 16 Switched AC Accessory Outlet
- 17 Unswitched AC Accessory Outlet
- 18 AC Power Cord
- 19 Video 1 Video Outputs
- 20 Video 1 Video Inputs

- 21 Video 2 Video Outputs
- 22 Video 3 Video Inputs
- 23 Video 2 Video Inputs
- 24 Optical Digital Inputs
- 25 Coaxial Digital Inputs
- 26 Video 2 Audio Outputs
- 27 Video 3 Audio Inputs
- 28 Video 2 Audio Inputs

Rear Panel Connections

1 Tape Inputs: Connect these jacks to the **PLAY/OUT** jacks of an audio recorder.

2 Tape Outputs: Connect these jacks to the **RECORD/INPUT** jacks of an audio recorder.

3 Video 1 Audio Inputs: Connect these jacks to the **PLAY/OUT** audio jacks on a VCR or other video source.

4 AM Antenna: Connect the AM loop antenna supplied with the receiver to these terminals. If an external AM antenna is used, make connections to the **AM** and **GND** terminals in accordance with the instructions supplied with the antenna.

5 Video 1 Audio Outputs: Connect these jacks to the **RECORD/INPUT** audio jacks on a VCR.

6 DVD Audio Inputs: Connect these jacks to the analog audio jacks on a DVD or other video source.

NOTE: The default setting for the audio input associated with DVD is the **Coaxial Digital Input 1** 25. If you connect the audio outputs of a DVD player to these jacks, change the input setting as shown on page 18.

7 FM Antenna: Connect the supplied indoor or an optional external FM antenna to this terminal.

8 CD Inputs: Connect these jacks to the output of a compact disc player or CD changer.

9 6-Channel Direct Inputs: If an external digital audio decoder is used, connect the outputs of that decoder to these jacks.

These jacks have been color-coded as follows to assist you in making correct channel connections:

Front Left	White
Front Right	Red
Center	Green
Surround Left	Blue
Surround Right	Gray
Subwoofer	Purple

10 Digital Audio Outputs: Connect these jacks to the matching digital input connector on a digital recorder such as a CD-R or MiniDisc recorder.

11 DVD Video Inputs: Connect these jacks to the composite or S-Video output jacks on a DVD or other video source.

12 Video Monitor Outputs: Connect this jack to the composite or S-Video input of a TV monitor or video projector to view the on-screen menus and the output of any standard video source selected by the receiver's video switcher.

13 Subwoofer Output: Connect this jack to the line-level input of a powered subwoofer. If an external subwoofer amplifier is used, connect this jack to the subwoofer amplifier input.

14 Front Speaker Outputs: Connect these outputs to the matching + or – terminals on your front speakers. When making speaker connections, always make certain to maintain correct polarity by connecting the red (+) terminals on the AVR 220 to the red (+) terminals on the speaker and the black (–) terminals on the AVR 220 to the black (–) terminals on the speakers. (See page 14 for more information on speaker polarity.)

15 Surround Speaker Outputs: Connect these outputs to the matching + or – terminals on your left and right surround speakers. When making speaker connections always make certain to maintain correct polarity by connecting the red (+) terminals on the AVR 220 to the red (+) terminals on the speakers and the black (–) terminals on the AVR 220 to the black (–) terminals on the speakers. (See page 14 for more information on speaker polarity.)

16 Switched AC Accessory Outlet: This outlet may be used to power any device you wish to have turned on when the AVR 220 is turned on with the **System Power Control Switch** 2.

17 Unswitched AC Accessory Outlet: This outlet may be used to power any AC device. The power will remain on at this outlet regardless of whether the AVR 220 is on or off.

NOTE: The total power consumption of all devices connected to the accessory outlets should not exceed 100 watts.

18 AC Power Cord: Connect the AC plug to an unswitched AC wall output.

19 Video 1 Video Outputs: Connect these jacks to the **RECORD/INPUT** composite or S-Video jack on a VCR.

20 Video 1 Video Inputs: Connect these jacks to the **PLAY/OUT** composite or S-Video jacks on a VCR or other video source.

21 Video 2 Video Outputs: Connect these jacks to the **RECORD/INPUT** composite or S-Video jacks on a VCR, if you are connecting a VCR to the Video 2 inputs.

22 Video 3 Video Inputs: Connect these jacks to the **PLAY/OUT** composite or S-Video jacks on a cable television box, satellite dish receiver, VCR or other video source.

23 Video 2 Video Inputs: Connect these jacks to the **PLAY/OUT** composite or S-Video jacks on a TV, VCR or other video source.

24 Optical Digital Inputs: Connect the optical digital output from a DVD player, HDTV receiver, LD player, satellite receiver, cable box, MiniDisc player or recorder, or CD player to these jacks. The signal may be either a Dolby Digital signal, a DTS signal or a standard PCM digital source.

25 Coaxial Digital Inputs: Connect the coaxial digital output from a DVD player, HDTV receiver, LD player, satellite receiver, cable box, MiniDisc recorder or CD player to these jacks. The signal may be either a Dolby Digital signal, DTS signal or a standard PCM digital source. Do not connect the RF digital output of an LD player to these jacks.


26 Video 2 Audio Outputs: Connect these jacks to the **RECORD/INPUT** audio jacks on a VCR or other video source, if you have connected a VCR to the Video 2 input.

27 Video 3 Audio Inputs: Connect these jacks to the **PLAY/OUT** audio jacks on a cable television box, satellite dish receiver, VCR or other video source.

28 Video 2 Audio Inputs: Connect these jacks to the **PLAY/OUT** audio jacks on a VCR or other video source, if you have connected a VCR to the Video 2 input.

Remote Control Functions

- 1 Power Off Button
- 2 IR Transmitter Window
- 3 Program/SPL Indicator
- 4 Power On Button
- 5 Input Selectors
- 6 AVR Selector
- 7 AM/FM Tuner Select
- 8 Test Button
- 9 Sleep Button
- 10 Surround Mode Selector
- 11 Night Mode
- 12 Channel Select Button
- 13 ▲ Button
- 14 ◀ Button
- 15 Set Button
- 16 Digital Select
- 17 ▼ Button
- 18 Numeric Keys
- 19 Tuner Mode
- 20 Direct Button
- 21 Tuning Up/Down
- 22 OSD Button
- 23 Macro Buttons
- 24 Transport Controls
- 25 Skip Up/Down Buttons
- 26 Disc Skip Button
- 27 Preset Up/Down
- 28 Clear Button
- 29 Memory Button
- 30 Delay/Prev. Ch.
- 31 ▶ Button
- 32 Speaker Select
- 33 Spare Button
- 34 Volume Up/Down
- 35 TV/Video Selector
- 36 SPL Button
- 37 6-Channel Direct Input
- 38 Mute
- 39 EzSet Sensor Microphone

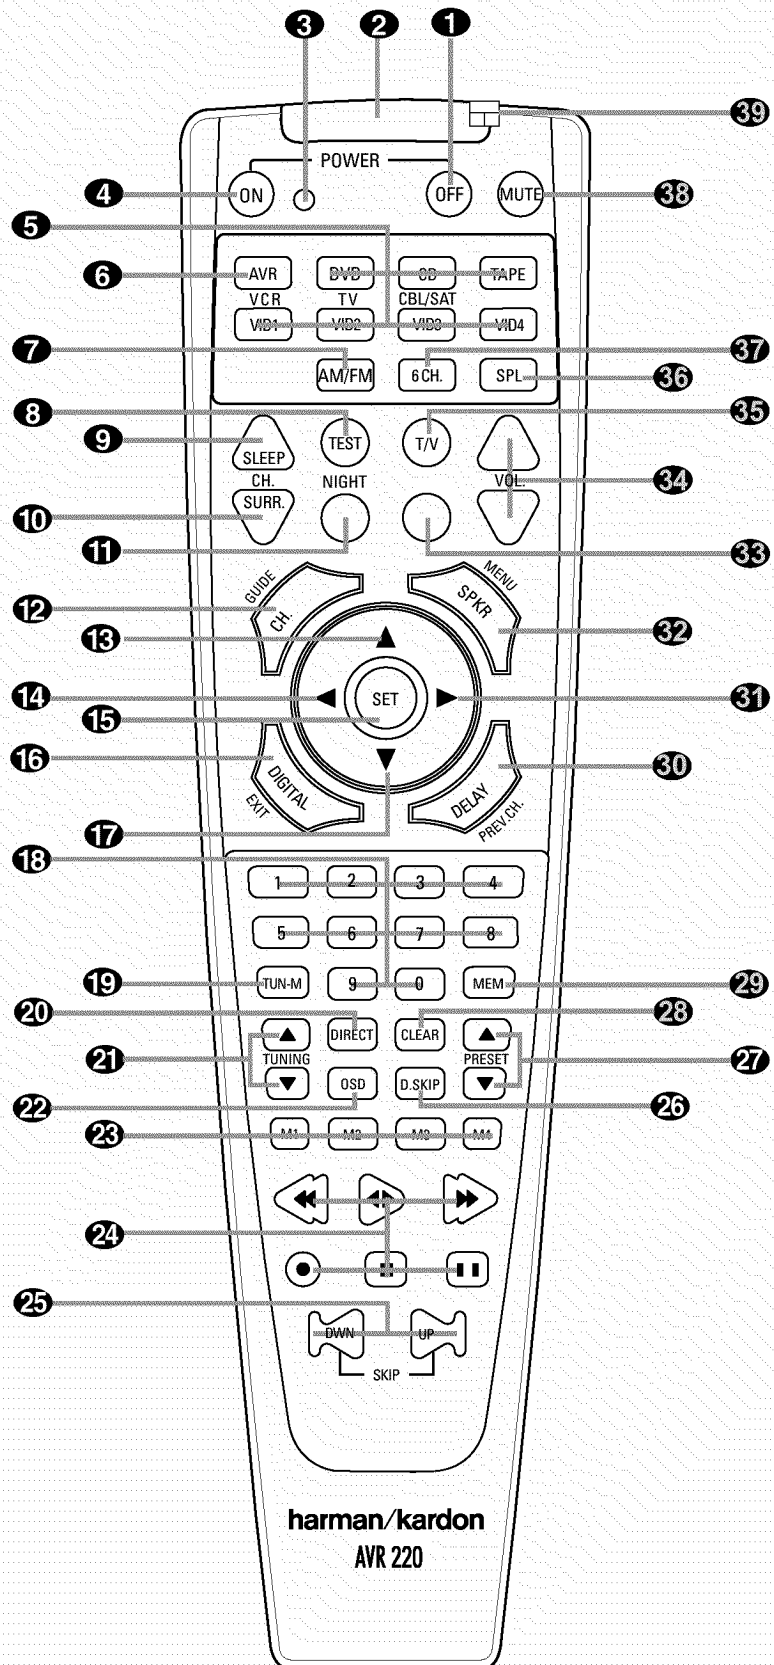

NOTE: The function names shown here are each button's feature when used with the AVR 220. Most buttons have additional functions when used with other devices. See pages 37–38 for a list of these functions.

Remote Control Functions

IMPORTANT NOTE: The AVR 220's remote may be programmed to control up to eight devices, including the AVR 220. Before using the remote, it is important to remember to press the **Input Selector Button 5** that corresponds to the unit you wish to operate. In addition, the AVR 220's remote is shipped from the factory to operate the AVR 220 and most Harman Kardon CD or DVD players and cassette decks. The remote is also capable of operating a wide variety of other products using the control codes that are part of the remote. Before using the remote with other products, follow the instructions on pages 33–36 to program the proper codes for the products in your system.

It is also important to remember that many of the buttons on the remote take on different functions, depending on the product selected using the Device Control Selectors. The descriptions shown here primarily detail the functions of the remote when it is used to operate the AVR 220. (See page 34 for information about alternate functions for the remote's buttons.)

1 Power Off Button: Pressing this button turns off (places in the Standby mode) the device that was last selected by pressing one of the **Input Selectors 5**. To place the AVR 220 in the Standby mode, first press the **AVR Selector Button 6** and then press this button.

2 IR Transmitter Window: Point this window towards the AVR 220 when pressing buttons on the remote to make certain that infrared commands are properly received.

3 Program/SPL Indicator: This three-color indicator is used to guide you through the process of programming the remote and it is also used as a level indicator when using the remote's EzSet capabilities. (See page 21 for more information on setting output levels, and see page 33 for information on programming the remote.)

4 Power On Button: Press this button to turn on power to the device that was last selected by pressing one of the **Input Selectors 5**. To turn on the AVR 220, press the **AVR Selector Button 6**.

5 Input Selectors: Pressing one of these buttons will perform three actions at the same time. First, if the AVR 220 is not turned on, this will power up the unit. Next, it will select the source shown on the button as the input to the AVR 220. Finally, it will change the remote control so that it controls the device selected. After pressing one of these buttons you must press

 
the **AVR Selector Button 6** again to operate the AVR 220's functions with the remote.

6 AVR Selector: Pressing this button will switch the remote so that it will operate the AVR 220's functions. If the AVR 220 is in the Standby mode, it will also turn the AVR 220 on.

7 AM/FM Tuner Select: Press this button to select the AVR 220's tuner as the listening choice. Pressing this button when the tuner is already in use will switch between the AM and FM bands.

8 Test Button: Press this button to begin the sequence used to calibrate the AVR 220's output levels. (See page 21 for more information on calibrating the AVR 220.)

9 Sleep Button: Press this button to place the unit in the Sleep mode. After the time shown in the display, the AVR 220 will automatically go into the Standby mode. Each press of the button changes the time until turn-off in the following order:



Note that this button is also used to change channels on your TV when the TV is selected.

This button is also used to end the process of creating a macro command. (See page 34 for more information on creating macros.)

10 Surround Mode Selector: Press this button to begin the process of changing the surround mode. After the button has been pressed, use the **▲/▼ Buttons 13 17** to select the desired surround mode. (See page 25 for more information.) Note that this button is also used to tune channels when the TV is selected using the device **Input Selector 5**. This button is also used in part of the process of erase stored macro commands. (See page 34 for more information on macros.)

NOTE: The **Sleep Button 9** and **Surround Mode Selector 10** may also function as the Channel + and – keys when the remote is programmed for use with TVs, cable boxes, VCRs, satellite receivers or other video devices with tuners. See page 35 for information on programming the remote for Channel Control Punch-Through capability so that you may change channels on a separate device when the remote is in AVR mode.

11 Night Mode: Press this button to activate the Night mode. This mode is available in specially encoded digital sources, and it preserves dialog (center channel) intelligibility at low volume levels.

12 Channel Select Button: This button is used to start the process of setting the AVR 220's output levels to an external source. Once this button is pressed, use the **▲/▼ Buttons 13 17** to select the channel being adjusted, then press the **Set Button 15**, followed by the **▲/▼ Buttons 13 17** again, to change the level setting. (See page 29 for more information.)

13 ▲ Button: This multipurpose button is used to change or scroll through items in the on screen menus, or to change configuration settings such as output levels. When changing an item such as the surround mode or digital input directly, first press the function or mode to be changed (e.g. press the **Surround Mode Selector 10** to select a surround mode or the **Digital Select Button 16** to change the digital input) and then press this button to scroll through the list of available choices.

14 ◀ Button: This button is used to change the menu selection or setting during some of the setup procedures for the AVR 220.

15 Set Button: This button is used to enter settings into the AVR 220's memory. It is also used in the setup procedures for delay time, speaker configuration and channel output level adjustment.

16 Digital Select: Press this button to assign one of the digital inputs **2 4 5 13 14** to a source. (See page 26 for more information on using digital inputs.)

17 ▼ Button: This multipurpose button is used to change or scroll through items in the on screen menus, or to change configuration settings such as output levels. When changing an item such as the surround mode or digital input directly, first press the function or mode to be changed (e.g. press the **Surround Mode Selector 10** to select a surround mode or the **Digital Select Button 16** to change the digital input) and then press this button to scroll through the list of available choices.

18 Numeric Keys: These buttons serve as a ten-button numeric keypad to enter tuner preset positions. They are also used to select channel numbers when **TV** has been selected on the remote, or to select track numbers on a CD,

Remote Control Functions

DVD or LD player, depending on how the remote has been programmed.

19 Tuner Mode: Press this button when the tuner is in use to select between automatic tuning and manual tuning. When the button is pressed so that the **AUTO Indicator R** goes out, pressing the **Tuning Buttons 21 8** will move the frequency up or down in single-step increments. When the FM band is in use, pressing this button when a station's signal is weak will change to monaural reception. (See page 28 for more information.)

20 Direct Button: Press this button when the tuner is in use to start the sequence for direct entry of a station's frequency. After pressing the button simply press the proper **Numeric Keys 18** to select a station. (See page 28 for more information on the tuner.)

21 Tuning Up/Down: When the tuner is in use, these buttons will tune up or down through the selected frequency band. If the **Tuner Mode Button 19 12** has been pressed so that the **AUTO Indicator R** is illuminated, pressing and holding either of the buttons for three seconds will cause the tuner to seek the next station with acceptable signal strength for quality reception. When the **AUTO Indicator R** is NOT illuminated, pressing these buttons will tune stations in single-step increments. (See page 28 for more information.)

22 OSD Button: Press this button to activate the On Screen Display (OSD) system used to set up or adjust the AVR 220's parameters.

23 Macro Buttons: Press these buttons to store or recall a "Macro", which is a preprogrammed sequence of commands stored in the remote. (See page 34 for more information on storing and recalling macros.)

24 Transport Controls: These buttons do not have any functions for the AVR 220, but they may be programmed for the forward/reverse play operation of a wide variety of CD or DVD players, and audio or video cassette recorders. (See page 35 for more information on programming the Transport Control Punch-Through capability of the remote.)

25 Skip Up/Down Button: This button has a direct function with the AVR 220, but when used with a compatibly programmed CD or DVD changer they will change the disc currently being played in the changer.

26 Disc Skip Button: This button has no direct function for the AVR 220, but is often used when the remote is programmed to operate a CD or DVD changer to change the discs in the changer. (See page 34 for more information on using the remote with other devices.)

27 Preset Up/Down: When the tuner is in use, press these buttons to scroll through the stations programmed into the AVR 220's memory. When some source devices, such as CD players, VCRs and cassette decks, are selected using the device **Input Selectors 5**, these buttons may function as Chapter Step or Track Advance.

28 Clear Button: Press this button to clear incorrect entries when using the remote to directly enter a radio station's frequency.

29 Memory Button: Press this button to enter a radio station into the AVR 220's preset memory. Once the **MEMORY Indicator O** flashes, you have five seconds to enter a preset memory location using the **Numeric Keys 18**. (See page 29 for more information.)

30 Delay/Prev Ch.: Press this button to begin the process for setting the delay times used by the AVR 220 when processing surround sound. After pressing this button, the delay times are entered by pressing the **Set Button 15** and then using the **▲/▼ Buttons 13 17** to change the setting. Press the **Set Button 15** again to complete the process. (See page 18 for more information.)

31 ► Button: Press this button to change a setting or selection when configuring many of the AVR 220's settings.

32 Speaker Select: Press this button to begin the process of configuring the AVR 220's bass management system for use with the type of speakers used in your system. Once the button has been pressed, use the **▲/▼ Buttons 13 17** to select the channel you wish to set up. Press the **Set Button 15** and then select another channel to configure. When all adjustments have been completed, press the **Set Button 15** twice to exit the settings and return to normal operation. (See page 19 for more information.)

33 Spare Button: This button does not have any function for the operation of the AVR 220, but it is available for use when programmed with the code from another remote. (See page

33 for information on programming the remote with codes for other devices.)

34 Volume Up/Down: Press these buttons to raise or lower the system volume. See page 35 for more information on programming the Volume Control Punch-Through capability of the remote, which allows you to change the AVR 220's volume while the remote is set to control another device.

35 TV/Video Selector: This button does not have a direct function on the AVR 220, but when used with a compatibly programmed VCR, DVD or satellite receiver that has a "TV/Video" function, pressing this button will switch between the output of the player or receiver and the external video input to that player. Consult the owner's manual for your specific player or receiver for the details of how it implements this function.

36 SPL Button: This button activates the AVR 220's EzSet function to quickly and accurately calibrate the AVR 220's output levels. Press and hold the button for three seconds and then release it. Note that the Test Tone will begin circulating, and the **Program/SPL Indicator 3** will change colors. During this sequence, EzSet will automatically adjust the output levels for all channels until they have equal output levels, as shown by the **Program/SPL Indicator 3** lighting green for each channel. Press this button again when the adjustment is complete to turn off the test tone. (See page 21 for more information on EzSet.)

37 6-Channel Direct Input: Press this button to select the component connected to the **6-Channel Direct Input 9** as the source.

38 Mute: Press this button to momentarily silence the AVR 220 or TV set being controlled, depending on which device has been selected.

When the AVR 220 remote is being programmed to operate another device, this button is pressed with the **Input Selector Button 5** to begin the programming process. (See page 33 for more information on programming the remote.)

39 EzSet Sensor Microphone: The sensor microphone for the EzSet microphone is behind these slots. When using the remote to calibrate speaker output levels using EzSet, be sure that you do not hold the remote in a way that covers these slots. (See page 21 for more information on using EzSet.)

Installation and Connections

System Installation

After unpacking the unit, and placing it on a solid surface capable of supporting its weight, you will need to make the connections to your audio and video equipment.

Audio Equipment Connections

We recommend that you use high-quality interconnect cables when making connections to source equipment and recorders to preserve the integrity of the signals.

When making connections to audio source equipment or speakers it is always a good practice to unplug the unit from the AC wall outlet. This prevents any possibility of accidentally sending audio or transient signals to the speakers that may damage them.

1. Connect the analog output of a CD player to the **CD Inputs 8**.


NOTE: When the CD player has both fixed and variable audio outputs it is best to use the fixed output unless you find that the input to the receiver is so low that the sound is noisy, or so high that the signal is distorted.

2. Connect the analog Play/Out jacks of a cassette deck, MD, CD-R or other audio recorder to the **Tape Input Jacks 1**. Connect the analog Record/In jacks on the recorder to the **Tape Output Jacks 2** on the AVR 220.

3. Connect the output of any digital sources to the appropriate input connections on the AVR 220 rear panel. Note that the **Optical and Coaxial Digital Inputs 24, 25, 13, 14** may be used with a Dolby Digital or DTS source or the output of a conventional CD or LD player's PCM (S/P-DIF) output. To take advantage of the AVR 220's built-in MP3-decoding capabilities, you may also connect the digital output of a computer or sound card to this input, provided that the signal from the computer is in the S/P-DIF format. Check your computer or sound card's instructions to verify the type of output signal or use a transcoder such as the Harman Kardon DAL 150.

4. Connect the **Coaxial or Optical Digital Outputs 10** on the rear panel of the AVR 220 to the matching digital input connections on a CD-R or MiniDisc recorder.

5. Assemble the AM Loop Antenna supplied with the unit as shown below. Connect it to the **AM and GND Screw Terminals 4**.

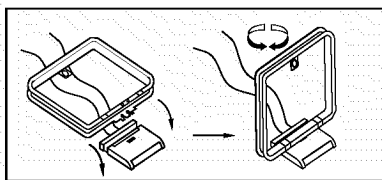

6. Connect the supplied FM antenna to the **FM Antenna (75 ohm) Connection 7**. The FM antenna may be an external roof antenna, an inside powered or wire lead antenna or a connection from a cable TV system. Note that if the antenna or connection uses 300-ohm twin-lead cable, you must use the 300-ohm-to-75-ohm adapter supplied with the unit to make the connection.

7. Connect the front, center and surround **Speaker Outputs 14, 15** to the respective speakers.

To ensure that all the audio signals are carried to your speakers without loss of clarity or resolution, we suggest that you use high-quality speaker cable. Many brands of cable are available and the choice of cable may be influenced by the distance between your speakers and the receiver, the type of speakers you use, personal preferences and other factors. Your dealer or installer is a valuable resource to consult in selecting the proper cable.

Regardless of the brand of cable selected, we recommend that you use a cable constructed of fine, multistrand copper with a gauge of 14 or smaller. Remember that in specifying cable, the lower the number, the thicker the cable.

Cable with a gauge of 16 may be used for short runs of less than ten feet. We do not recommend that you use cables with an AWG equivalent of 18 or higher due to the power loss and degradation in performance that will occur.

Cables that are run inside walls should have the appropriate markings to indicate listing with UL, CSA or other appropriate testing agency standards. Questions about running cables inside walls should be referred to your installer or a licensed electrical contractor who is familiar with the NEC and/or the applicable local building codes in your area.

When connecting wires to the speakers, be certain to observe proper polarity. Remember to connect the "negative" or "black" wire to the same terminal on both the receiver and the

speaker. Similarly, the "positive" or "red" wire should be connected to like terminals on the AVR 220 and speaker.

NOTE: While most speaker manufacturers adhere to an industry convention of using black terminals for negative and red ones for positive, some manufacturers may vary from this configuration. To ensure proper phase and optimal performance, consult the identification plate on your speaker or the speaker's manual to verify polarity. If you do not know the polarity of your speaker, ask your dealer for advice before proceeding, or consult the speaker's manufacturer.

We also recommend that the length of cable used to connect speaker pairs be identical. For example, use the same length piece of cable to connect the front-left and front-right or surround-left and surround-right speakers, even if the speakers are a different distance from the AVR 220.

8. Connections to a subwoofer are normally made via a line-level audio connection from the **Subwoofer Output 18** to the line-level input of a subwoofer with a built-in amplifier. When a passive subwoofer is used, the connection first goes to a power amplifier, which will be connected to one or more subwoofer speakers. If you are using a powered subwoofer that does not have line-level input connections, follow the instructions furnished with the speaker for connection information.

Video Equipment Connections

Video equipment is connected in the same manner as audio components. Again, the use of high-quality interconnect cables is recommended to preserve signal quality.

1. Connect a VCR's or other video source's audio and video Play/Out jacks to the **Video 1 or Video 2 In Jacks 3, 20, 23, 28** on the rear panel. The Audio and Video Record/In jacks on the VCR should be connected to the **Video 1 or Video 2 Out Jacks 5, 19, 21, 26** on the AVR 220.

2. Connect the analog audio and video outputs of a satellite receiver, cable TV converter or television set or any other video source to the **Video 3 Jacks 22, 27**.

3. Connect the analog audio and video outputs of a DVD or laser disc player to the **DVD Jacks 6, 11**.

Installation and Connections

4. Connect the digital audio outputs of a DVD player, satellite receiver, cable box or HDTV converter to the appropriate **Optical** or **Coaxial Digital Inputs** ⑭⑮⑯⑰.

5. Connect the **Video Monitor Output** ⑫ jacks on the receiver to the composite or S-Video input of your television monitor or video projector.

Video Connection Note:

- Composite and S-Video signals may only be viewed in their native formats. S-Video inputs may only be viewed when the AVR 220 is connected to a TV set or video display with S-Video capability.

Power Connections

This unit is equipped with two accessory AC outlets. They may be used to power accessory devices, but they should not be used with high-current draw equipment such as power amplifiers. The total power draw to each outlet may not exceed 100 watts.

The **Switched AC Accessory Outlet** ⑩ will receive power only when the unit is on. This is recommended for devices that have no power switch or a mechanical power switch that may be left in the "ON" position.

NOTE: Many audio and video products go into a Standby mode when they are used with switched outlets, and cannot be fully turned on using the outlet alone without a remote control command.

The **Unswitched AC Accessory Outlet** ⑪ will receive power as long as the unit is plugged into a powered AC outlet.

Finally, when all connections are complete, plug the **Power Cord** ⑬ into a nonswitched 120-volt AC wall outlet. You're almost ready to enjoy the AVR 220!

System Configuration

When all audio, video and system connections have been made, there are a few configuration adjustments that must be made. A few minutes spent to correctly configure and calibrate the unit will greatly add to your listening experience.

Speaker Selection and Placement

The placement of speakers in a multichannel home-theater system can have a noticeable impact on the quality of sound reproduced.

No matter which type or brand of speakers is used, the same model or brand of speaker should be used for the left front, center and right front speakers. This creates a seamless front soundstage and eliminates the possibility of distracting sonic disturbances that occur when a sound moves across mismatched front-channel speakers.


Speaker Placement

Depending on the type of center-channel speaker in use and your viewing device, place the center speaker either directly above or below your TV, or in the center behind a perforated front projection screen.


Once the center-channel speaker is installed, position the left front and right front speakers so that they are as far away from one another as the center-channel speaker is from the preferred listening position. Ideally, the front-channel speakers should be placed so that their tweeters are no more than 24" above or below the tweeter in the center-channel speaker.

Depending on the specifics of your room acoustics and the type of speakers in use, you may find that imaging is improved by moving the left front and right front speakers slightly forward of the center-channel speaker. If possible, adjust all front loudspeakers so that they are aimed at ear height when you are seated in the listening position.


Using these guidelines, you'll find that it takes some experimentation to find the correct location for the front speakers in your particular installation. Don't be afraid to move things around until the system sounds correct. Optimize your speakers so that audio transitions across the front of the room sound smooth, and that sounds from all speakers appear to arrive at the

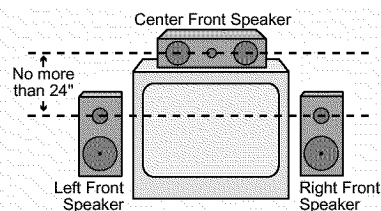

A) Front-Channel Speaker Installation with Direct-View TV Sets or Rear-Screen Projectors

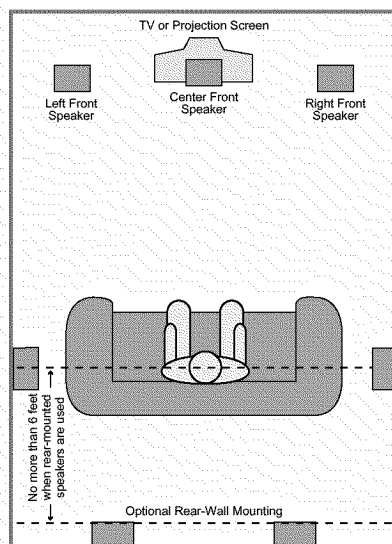

B) The distance between the left and right speakers should be equal to the distance from the seating position to the viewing screen. You may also experiment with placing the left and right speakers slightly forward of the center speaker.

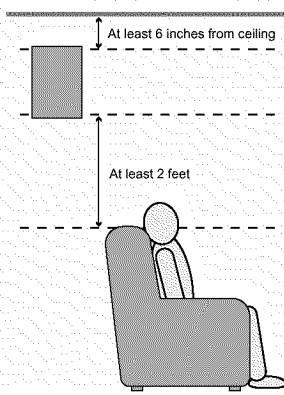

C) Optimal placement of surround speakers.

listening position at the same time (without delay from the center speaker compared to the left and right speakers).

Surround speakers should be placed on the side walls of the room, at or slightly behind the listening position. The center of the speaker should face into the room. The speakers should be located so that the bottom of the cabinet is at least two feet higher than the listeners' ears when the listeners are seated in the desired area.

If side-wall mounting is not practical, the speakers may be placed on a rear wall, behind the listening position. Again, they should be located so that the bottom of the cabinet is at least two feet higher than the listeners' ears. The speakers should be no more than six feet behind the rear of the seating area.

Subwoofers produce nondirectional sound, so they may be placed almost anywhere in a room. Actual placement should be based on room size and shape and the type of subwoofer used. One method of finding the optimal location for a subwoofer is to begin by placing it in the front of the room, about six inches from a wall, or near the front corner of the room. Another method is to temporarily place the subwoofer at your normal listening position, and then walk around the room until you find a spot where the subwoofer sounds best. Place the subwoofer in that spot. You should also follow the instructions of the subwoofer's manufacturer, or you may wish to experiment with the best location for a subwoofer in your listening room.


System Setup

Once the speakers have been placed in the room and connected, the remaining steps in the setup process are to program the AVR 220's bass management system for the type of speakers used in your system, calibrate the output levels, and set the delay times used by the surround-sound processor.

System Configuration

You are now ready to power up the AVR 220 to begin these final adjustments.

1. Plug the **Power Cable 18** into an unswitched AC outlet.
2. Press the **Main Power Switch 1** in until it latches and the word "OFF" on the top of the switch disappears inside the front panel. Note that the **Power Indicator 3** will turn amber, indicating that the unit is in the Standby mode.
3. Remove the protective plastic film from the front-panel lens. If left in place, the film may affect the performance of your remote control.
4. Install the three supplied AAA batteries in the remote as shown. Be certain to follow the (+) and (-) polarity indicators that are on the bottom of the battery compartment.

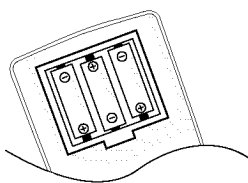

5. Turn the AVR 220 on either by pressing the **System Power Control 2** on the front panel, or via the remote by pressing the **AVR Selector 6** or any of the **Input Selectors 5 7** on the remote. The **Power Indicator 3** will turn green to confirm that the unit is on, and the **Main Information Display 25** will also light up.

Using the On-Screen Display

When making the following adjustments, you may find it easier to use the AVR 220's on-screen display system. These easy-to-read displays give you a clear picture of the current status of the unit and make it easy to see which speaker, delay, input or digital selection you are making.

To view the on-screen menus, make certain you have made a connection from the **Video Monitor Out Jack 12** on the rear panel to the composite or S-Video input of your TV or projector. In order to view the AVR 220's displays, the correct video source must be selected on the video display.

IMPORTANT NOTE: When viewing the displays on a projection TV it is important that they not be left on the screen for an extended period of time. As with any video display, but particularly with

projectors, constant display of a static image such as these menus or video game images may cause the image to be permanently "burned into" the CRT. This type of damage is not covered by the AVR 220 warranty and may not be covered by the projector TV set's warranty.

The AVR 220 has two on-screen display modes, "Semi-OSD" and "Full-OSD." When making configuration adjustments, it is recommended that the Full-OSD mode be used. This will place a complete status report or option listing on the screen, making it easier to view the available options. The Semi-OSD mode uses one-line displays only.

Making Configuration Adjustments

The full OSD system is always available by pressing the **OSD Button 22**. When this button is pressed, the **MASTER MENU** (Figure 1) will appear, and adjustments are made from the individual menus. The semi-OSD system is also available as a system default, although it may be turned off by using the **ADVANCED SELECT** menu (see page 31). With the semi-OSD system, you may make adjustments directly, by pressing the buttons on the front panel or remote control for the specific parameter to be adjusted. For example, press the **Speaker Select Button 32 27** to set the speaker configuration, etc.

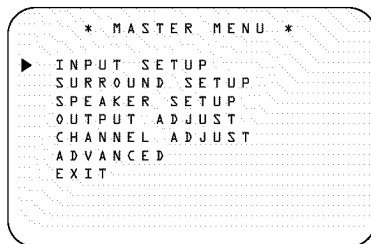


Figure 1

Note that when the full OSD system is in use, the menu selections are not shown in the **Main Information Display 25 S**. When the full OSD menu system is used, OSD ON will appear in the **Main Information Display S** and the **OSD Indicator F** will light to remind you that a video display must be used. When the semi-OSD system is used in conjunction with the discrete configuration buttons, the on-screen display will show a single line of text with the current menu selection. That selection will also be shown in the **Main Information Display S**.

To use the full OSD menu system, press the **OSD Button 22**. When the menu is on the screen, press the **▲/▼ Buttons 16 17** until

the on-screen **▶** cursor is next to the item you wish to adjust, and then press the **Set Button 15** to adjust that item. Note that the menus will remain on the screen for 20 seconds, and then they will "time-out" and disappear from the screen. The time-out may be increased to as much as 50 seconds by going to the **ADVANCED SELECT** menu, and changing the item titled **FULL OSD TIME OUT**.

Setting the System Configuration Memories

The AVR 220 features an advanced memory system that enables you to establish different configurations for the bass management, digital input, surround mode, delay times, crossover frequency and output levels for each input source. This flexibility enables you to custom-tailor the way in which you listen to each source and have the AVR 220 memorize those settings. This means, for example, that you may use different output levels or trims for different sources, or set different speaker configurations with the resultant changes to the bass management system. Once these settings are made, they will automatically be recalled whenever you select that input.

The factory default settings for the AVR 220 have all inputs configured for an analog source, Stereo as the surround mode, all speaker positions set to "Small," and a subwoofer connected. Before using the unit, you will probably want to change the settings for most inputs so that they are properly configured to reflect the use of digital or analog inputs, the type of speakers installed and the surround mode specifics. Remember that since the AVR 220 memorizes the settings for each input individually, you will need to make these adjustments for each input used. However, once they are made, further adjustment is only required when system components are changed.

To make this process as quick and as easy as possible, we suggest that you use the full-OSD system with the on-screen menus, and step through each input. Once you have completed the settings for the first input, many settings may be duplicated for the remaining inputs. It is also a good idea to set the configuration data in the order these items are listed in the **MASTER MENU**, as some settings require a specific entry in a prior menu item. Remember that once the settings are made for one input, they must be made for all other input sources in your system.

System Configuration

Input Setup

The first step in configuring the AVR 220 is to select an input. This may be done by pressing the front panel **Input Source Selector 11** until the desired input's name appears momentarily in the **Main Information Display S**, and the green LED lights next to the input's name in the front panel **Input Indicators 22**. The input may also be selected by pressing the appropriate **Input Selector 5 7** on the remote control.

When using the full-OSD system to make the setup adjustments, press the **OSD Button 22** once so that the **MASTER MENU** (Figure 1) appears. Note that the ► cursor will be next to the **INPUT SETUP** line. Press the **Set Button 15** to enter the menu and the **INPUT SETUP** menu (Figure 2) will appear on the screen. Press the ◀▶ **Buttons 14 31** until the desired input name appears in the highlighted video, as well as being indicated in the front panel **Input Indicators 22** by the green LED next to the desired input name. If the input will use the standard left/right analog inputs, no further adjustment is needed.

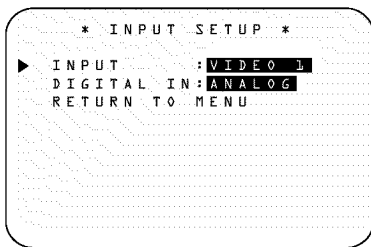


Figure 2

If you wish to associate one of the digital inputs with the selected input source, press the ▼ **Button 17** on the remote while the **INPUT SETUP** menu (Figure 2) is on the screen, and note that the on-screen cursor will drop down to the **DIGITAL IN** line. Press the ◀▶ **Buttons 14 31** until the name of the desired digital input appears. To return to the analog input, press the buttons until the word **ANALOG** appears. When the correct input source appears, press the ▼ **Button 17** until the ► cursor appears next to **RETURN TO MENU**, and press the **Set Button 15**.

To change the digital input at any time using the discrete function buttons and the semi-OSD system, press the **Digital Input Select Button 24 16** on the front panel or the remote. Within five seconds, make your input selection using the **Selector Buttons 5** on the front panel or the ▲/▼ **Buttons 13 17** on the remote until the desired digital or ana-

log input is shown in the **Main Information Display S** and in the lower third of the video display connected to the AVR 220. Press the **Set Button 15** to enter the new digital input assignment.

Surround Setup

Once the basic input setup has been completed, the next step is to set the surround mode you wish to use with an input. Since surround modes are a matter of personal taste, feel free to select any mode you wish – you may change it later. However, to make it easier to establish the initial parameters for the AVR 220, it is best to select Dolby Pro Logic II for most analog inputs and Dolby Digital for inputs connected to digital sources. In the case of inputs such as a CD Player, Tape Deck or Tuner, you may wish to set the mode to Stereo (as they are not typically used with multichannel program material), where it is unlikely that surround-encoded material will be used. Alternatively, the Logic 7 Music mode is a good choice for stereo-only source material.

NOTE: If you have selected Logic 7 C or M as your surround mode for the current listening session, and you're using a digital input, and you haven't changed the default surround mode for that input source to the same Logic 7 mode, you will notice that, if the digital signal is interrupted for any reason (such as stopping the source device), upon resumption of the signal, the AVR 220 will use a different surround mode. In fact, the AVR 220 will use whichever mode was set as the default for that source. The factory default for all sources is Stereo mode, unless the receiver detects a Dolby Digital or DTS bitstream.

It is easiest to complete the surround setup using the full-OSD on-screen menus. From the **MASTER MENU** (Figure 1), press the ▲/▼ **Buttons 13 17** until the ► cursor is next to the **SURROUND SETUP** menu. Press the **Set Button 15** so that the **SURROUND SETUP** menu (Figure 3 or 4) is on the screen.

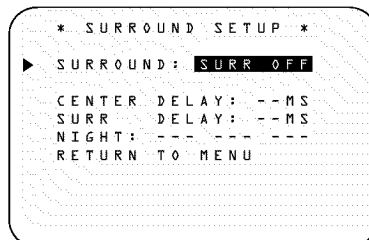


Figure 3



Figure 4

Since the factory default for all inputs is Stereo, the phrase **SURR OFF** will initially appear in highlighted video (Figure 3). To change the surround mode while the ► cursor is next to the surround line, press the ◀▶ **Buttons 14 31** until the desired surround mode's name appears in the highlighted video. As the modes are changed, a green LED will also light next to the mode names in the **Surround Mode Indicators 29** on the front panel.

Note that the data lines next to the items in the screen display will show either numbers or a series of dashes, depending on whether or not the specific parameter is adjustable. For example, the Center Delay and Night Mode items are only adjustable for Dolby Digital, and the Delay Time is only adjusted for Dolby Digital and Dolby Pro Logic II. Note, also, that Dolby Digital and DTS will only appear as choices (Figure 4) when a digital input was previously selected.

Depending on the surround mode selected, you may now proceed to change either the delay time or the crossover frequency. For Dolby Digital and Dolby Pro Logic II, pressing the ▲/▼ **Buttons 13 17** on the remote will take you to the delay settings.

Delay Settings

If Dolby Digital or Dolby Pro Logic II is selected as the surround mode for an input, you may need to adjust the delay time setting. Note that the delay time is not adjustable for any other modes.

Due to the different distances between the listening position for the front-channel speakers and the surround speakers, the amount of time it takes for sound to reach your ears from the front versus surround speakers differs. You may compensate for this difference through the use of the delay settings to adjust the timing for the specific speaker placement and acoustic conditions in your listening room or home theater.

The factory setting is appropriate for most rooms, but some installations create an uncom-

System Configuration

mon distance between the front and surround speakers that may cause the arrival of front-channel sounds to become disconnected from surround-channel sounds.

To resynchronize the front and surround channels, follow these steps:

1. Measure the distance from the listening position to the front speakers.
2. Measure the distance from the listening position to the surround speakers.
3. Subtract the distance to the surround speakers from the distance to the front speakers.
 - a. When setting the delay time for the Dolby Digital surround modes, the optimal delay time is the result of that subtraction. For example, if the front speakers are ten feet away and the surround speakers are five feet away, the optimal delay time is figured as $10-5=5$. Thus, in this example, the delay time for Dolby Digital should be set at five milliseconds.
 - b. When setting the delay time for the Pro Logic II mode, take the result of the subtraction and add 15 to obtain the optimal delay time. For example, if the front speakers are ten feet away and the surround speakers are five feet away, the optimal delay time is figured as $10-5+15=20$. Thus, in this example, the Pro Logic delay should be set at twenty milliseconds.

NOTE: The DTS, Logic 7, Hall and Theater modes use a fixed, nonadjustable delay time.

The Dolby Digital mode also includes a separate setting for the center channel delay mode, since the discrete nature of these signals makes the location of the center channel speaker more critical. To calculate the delay for the center channel, measure the distance from the preferred listening position in the center of the room to both the center channel speaker and either the left or right speaker.

If the distances are equal, no further adjustment is required and the center delay should be set to zero. If the distance to the front speakers is greater than the distance to the center speaker, you may wish to reposition the speakers by moving the front left and front right speakers closer to the listening position or the center speaker further away from the listening position.

If repositioning of the speakers is not possible, adjust the center delay time, adding one millisecond of center channel delay for every foot closer to the listening position the center speaker is than the front speakers. For example, if the front left and front right speakers are each 10 feet from the listening position and the center channel speaker is 8 feet away, the delay is figured as $10-8=2$, suggesting an optimal center delay of 2 milliseconds.

To set the delay time for a specific input, continue within the **SURROUND SETUP** (Figure 4) menu. If the system is not already at that point, press the **OSD Button 22** to bring up the **MASTER MENU**; press the **▼ Button 17** and then the **Set Button 15** to bring up the **SURROUND SETUP** menu, and then press the **▼ Button 17** once.

If the Dolby Digital mode is selected, the ► cursor will stop at the **CENTER DELAY** line. In that case, press the **◀▶ Buttons 14 31** until the number calculated using the formula shown above appears in the display. When the **CENTER DELAY** is entered, press the **▼ Button 17** once to move to the next line.

When the **CENTER DELAY** is set, or if the Dolby Pro Logic II mode is selected, the ► cursor will be at the **SURR DELAY** line so that the delay for the surround speakers may be set. Press the **◀▶ Buttons 14 31** until the number calculated using the formula shown above appears in the display. When the delay settings are complete, press the **▼ Button 17** once to move to the next line.

Note that the delay settings may also be adjusted at any time when the Dolby Digital or Dolby Pro Logic II modes are in use by pressing the **Delay Button** on the front panel **23** or remote **30**, followed by a press of the **Set Button 21 15**. Next, press the **▲/▼ Buttons 13 17** on the remote or the **Selector Buttons 5** on the front panel until the desired figure appears in the **Main Information Display S**.

Night Mode Settings

The Night mode is a feature of Dolby Digital that uses special processing to preserve the dynamic range and full intelligibility of a movie sound track, particularly the dialogue, while reducing the peak level. This prevents abruptly loud transitions from disturbing others, without reducing the sonic impact of a digital source. Note that the Night mode is only available when specially encoded Dolby Digital signals are played.

To adjust the Night mode setting for an input from the menu, make certain that the ► cursor is on the **NIGHT** line of the **SURROUND SETUP** menu. Next, press the **◀▶ Buttons 14 31** to choose among the following settings, as they appear in the on-screen display:

OFF: When **OFF** is highlighted, the Night mode will not function.

MID: When **MID** is highlighted, a mild compression will be applied.

MAX: When **MAX** is highlighted, a more severe compression algorithm will be applied.

We recommend that you select the **MID** setting as a starting point and change to the **MAX** setting later, if desired.

Note that the Night mode may be adjusted directly any time that a Dolby Digital source is playing by pressing the **Night Button 11**. When the button is pressed, the phrase **D-RANGE** will appear in the lower third of the video screen and in the **Main Information Display S**. Press the **▲/▼ Buttons 13 17** within three seconds to select the desired setting.

When all settings for the surround setup have been made, press the **▲/▼ Buttons 13 17** so that the ► cursor is next to **RETURN TO MENU**, and press the **Set Button 15** to return to the main menu.

Speaker Setup

This menu tells the AVR 220 which type of speakers are in use. This is important as it adjusts the settings that determine which speakers receive low-frequency (bass) information. For each of these settings use the **LARGE** setting if the speakers for a particular position are traditional full-range loudspeakers that are capable of reproducing sounds below 100Hz. Use the **SMALL** setting for smaller, frequency-limited satellite speakers that do not reproduce sounds below 100Hz. Note that when "small" speakers are used, a subwoofer is required to reproduce low frequency sounds. Remember that the "large" and "small" descriptions do not refer to the actual physical size of the speakers, but to their ability to reproduce low-frequency sounds. If you are in doubt as to which category describes your speakers, consult the specifications in the speakers' owner's manual, or ask your dealer.

System Configuration

It is easiest to enter the proper settings for the speaker setup through the **SPEAKER SETUP** menu (Figure 5). If that menu is not already on your screen from the prior adjustments, press the **OSD Button 22** to bring up the **MASTER MENU** (Figure 1), and then press the **▼ Button 17** twice so that the cursor is on the **SPEAKER SETUP** line. At this point, press the **Set Button 15** to bring up the **SPEAKER SETUP** menu (Figure 5).

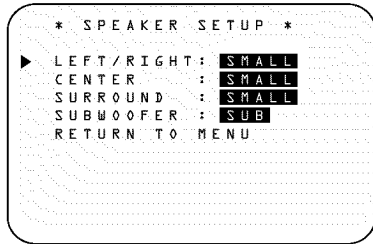


Figure 5

When the **SPEAKER SETUP** menu first appears, the on-screen cursor ► will be at the top of the list of speaker positions, pointing toward the **LEFT / RIGHT** line, which sets the configuration for the front left and right speakers. If you wish to make a change to the front speakers' configuration, press the **◀▶ Buttons 14 31** so that either **LARGE** or **SMALL** appears, matching the appropriate description from the definitions shown above.

When **SMALL** is selected, low-frequency sounds below 100Hz will be sent only to the subwoofer output. Note that if you choose this option and there is no subwoofer connected, you will not hear any low-frequency sounds below 100Hz from the front channels.

When **LARGE** is selected, a full-range output will be sent to the front left and front right outputs. Depending on the choice made in the **SUBWOOFER** line in this menu, bass information may also be directed to the front left/right speakers, a subwoofer or both.

When you have completed your selection for the front channel, press the **▼ Button 17** on the remote to move the cursor to **CENTER**.

Press the **◀▶ Buttons 14 31** on the remote to select the option that best describes your system based on the speaker definitions shown below.

When **SMALL** is selected, low-frequency center-channel sounds below 100Hz will be sent only to the subwoofer output. Note that if you choose this option and there is no subwoofer connected, you will not hear any low-frequency sounds from the center-channel speaker.

When **LARGE** is selected, a full-range output will be sent to the center speaker output, and NO center-channel signal will be sent to the subwoofer output.

NOTE: If you choose Logic 7 as the surround mode for the particular input source for which you are configuring your speakers, the AVR 220 will not make the **LARGE** option available for the center speaker. This is due to the requirements of Logic 7 processing, and does not indicate a problem with your receiver.

When **NONE** is selected, no signals will be sent to the center-channel output. The receiver will operate in a "phantom" center-channel mode and center-channel information will be sent to the left and right front-channel outputs. When only front left and right speakers are used, with no center or surround speakers, VMaX is a good alternative mode.

When you have completed your selection for the center channel, press the **▼ Button 17** on the remote to change the cursor to **SURROUND**.

Press the **◀▶ Buttons 14 31** on the remote to select the option that best describes the surround speakers in your system based on the speaker definitions shown on this page.

When **SMALL** is selected, low-frequency surround-channel sounds below 100Hz will be sent to the subwoofer output only. Note that if you choose this option and there is no subwoofer connected, you will not hear any low-frequency sounds from the surround speakers.

When **LARGE** is selected, a full-range output will be sent to the surround-channel outputs, and NO surround-channel signals will be sent to the subwoofer output.

When **NONE** is selected, surround-sound information will be split between the front left and right outputs. Note that for optimal performance when no surround speakers are in use, the Dolby 3 Stereo mode should be used instead of Dolby Pro Logic II. If only front left

and right speakers are available, select one of the two VMaX modes or "Surround Off".

When you have completed your selection for the surround channel, press the **▼ Button 17** on the remote to move the cursor to **SUBWOOFER**.

Press the **◀▶ Buttons 14 31** on the remote to select the option that best describes your system.

The choices available for the subwoofer position will depend on the settings for the other speakers, particularly the front left/right positions.

If the front left/right speakers are set to **SMALL**, the subwoofer will automatically be set to **SUB**, which is the "on" position.

If the front left/right speakers are set to **LARGE**, three options are available:

- If no subwoofer is connected to the AVR 220, press the **◀▶ Buttons 14 31** on the remote so that **NONE** appears in the on-screen menu. When this option is selected, all bass information will be routed to the front left/right "main" speakers.
- If a subwoofer is connected to the AVR 220, you have the option to have the front left/right "main" speakers reproduce bass frequencies at all times, and have the subwoofer operate only when the AVR 220 is being used with a digital source that contains a dedicated Low-Frequency Effects, or LFE, soundtrack. This allows you to use both your main and subwoofer speakers to take advantage of the special bass created for certain movies. Press the **◀▶ Buttons 14 31** on the remote so that **SUB (LFE)** appears in the on-screen menu.
- If a subwoofer is connected and you wish to use it for bass reproduction in conjunction with the main front left/right speakers, regardless of the type of program source or surround mode you are listening to, press the **◀▶ Buttons 14 31** on the remote so that **SUB L/R+LFE** appears in the on-screen menu. When this option is selected, a "complete" feed will be sent to the front left/right "main" speakers, and the subwoofer will receive bass frequencies below 100Hz.

System Configuration

When all speaker selections have been made, press the **▼ Button 17** until the on-screen cursor points to **RETURN TO MENU** and press the **Set Button 15** to return to the **MASTER MENU**.

The Speaker Configuration may also be changed at any time without using the full-OSD on-screen menu system by pressing the **Speaker Select** button on the front panel **27** or remote **32**. Once the button is pressed, **FNT SPEAKER** will appear in both the lower third of the video display and the **Main Information Display S**.

Within three seconds, press either the front panel **◀▶ Selector Buttons 5** or the **▲/▼ Buttons 13 17** on the remote to select a different speaker position, or press the **Set Button 21 15** to begin the adjustment process for the front left and right speakers.

When the **Set Button 21 15** has been pressed and the system is ready for a change to the speaker setting, the on-screen display and **Main Information Display S** will read **FNT LARGE** or **FNT SMALL**, depending on the current setting. Press the front panel **◀▶ Selector Buttons 5** or the **▲/▼ Buttons 13 17** on the remote until the desired setting is shown, using the instructions for "large" or "small" shown earlier.

If the configuration for another speaker position needs to be changed, press the front panel **◀▶ Selector Buttons 5** or the **▲/▼ Buttons 13 17** on the remote to select a different speaker position, and then press the front panel **◀▶ Selector Buttons 5** or the **▲/▼ Buttons 13 17** on the remote until the correct speaker setting is shown.

To assist in making speaker configuration settings, the icons in the **Speaker/Channel Input Indicators I** change as the speaker type is selected at each position. When only the center icon box containing the abbreviation for the speaker position is lit, the speaker is set for "small." When the inner box and the two outer boxes with circles inside them are lit, the speaker is set for "large." When no indicator appears at a speaker location, that position is set for "none" or "no" speaker.

NOTE: These icons are available only when making setup changes in the semi-OSD mode.

For example, in Figure 6, the left front and right front speakers are set for "large," the center,

left surround (LS) and right surround (RS) speakers are set for small, and a subwoofer is set, as shown by the box with the abbreviation "LFE", which stands for "low-frequency effects."

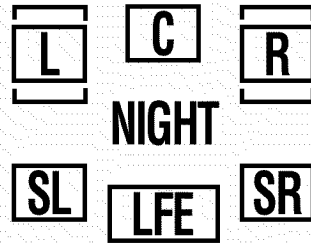


Figure 6

Output Level Adjustment

Output level adjustment is a key part of the configuration process for any surround-sound product. It is particularly important for a Dolby Digital receiver such as the AVR 220, as correct outputs will ensure that you hear sound tracks with the proper directionality and intensity.

IMPORTANT NOTE: Listeners are often confused about the operation of the surround channels. While some assume that sound should always be coming from each speaker, most of the time there will be little or no sound in the surround channels. This is because they are only used when a movie director or sound mixer specifically places sound there to create ambience, a special effect or to continue action from the front of the room to the rear. When the output levels are properly set it is normal for surround speakers to operate only occasionally. Artificially increasing the volume to the rear speakers may destroy the illusion of an enveloping sound field that duplicates the way you hear sound in a movie theater or concert hall.

Before beginning the output level adjustment process, make certain that all speaker connections have been properly made. The system volume should be set to the level that you will use during a typical listening session. Finally, make certain that the **Balance Control 18** is set to the center "12 o'clock" position.

Using EzSet

Harman Kardon's exclusive EzSet remote makes it possible to quickly and accurately set the AVR 220's output levels without the use of a sound pressure meter, although manual adjustment is also available. However, for the easiest setup, follow these steps while seated in the listening position that will be used most often:

1. Make certain that all speaker positions have been properly configured for their "large" or "small" settings (as outlined above) and turn off the OSD system if it is in use.
2. Adjust the volume so that it is at **-15 dB**, as shown in the on-screen display or **Main Information Display S**.
3. Hold the remote in front of you at arm's length, being sure not to cover the **EzSet Sensor Microphone 39** at the top of the remote.
4. Press and hold the **SPL Button 36** for three seconds. Release the button when the **Program/SPL Indicator 3** stops flashing and you hear the test noise from the front left speaker.
5. At this point, the EzSet circuitry will take over, adjusting the output level of each channel so that when the process is complete all levels will be equal and at the set reference point. This process may take a few minutes, depending on the extent of adjustment required.
6. During the adjustment process, you will see the location of the channel position being adjusted appear in both the on-screen display (if connected) and the **Main Information Display S**, alternating with a readout of the output setting, relative to the reference volume level. As the adjustment proceeds, a few things will happen simultaneously:
 - The channel position being adjusted will flash in the **Speaker/Channel Input Indicators I**. If the test noise is heard from a channel other than the one shown in the indicator, there is an error in the speaker connections. If this is the case, press the **Test Button 8** TWICE to stop the adjustment. Then, turn the unit off and verify that all speakers are connected to the proper **Outputs 14 15**.
 - As each channel is set, the channel name and the adjustment offset will appear in the on-screen display (if connected) and the **Main Information Display S**. While the level is changing, the **Program/SPL Indicator 3** will change colors to reflect the output level in relation to the reference. A red indication shows that the level is too high, while an amber indication shows that the level is too low. When the indicator is green, the level is correct, and the test

System Configuration

noise will move to the next channel. Note that the color changes are for your information, but you do not need to adjust anything, as EzSet will do all the work.

- While adjustments are being made, the red LED under the **AVR Selector 6** will flash. This is normal, and indicates that EzSet is operating.

7. After the test noise has circulated once through each channel, it will send the tone to each channel once again, to verify the settings.
8. After two complete circulations of the tone, the levels are set. The **Program/SPL Indicator 3** will remain green at each channel. Upon completion of the second circulation, the Program/SPL indicator will flash green twice and then go out. The tone will stop and the AVR 220 will return to normal operation.

If you find that the output levels chosen by EzSet are either uncomfortably low or high, you may repeat the procedure. Return to Step 2 above and set the master volume either slightly higher or lower to accommodate your particular room layout and your tastes. You may repeat this procedure as many times as necessary to achieve a desired result. In order to prevent possible damage to your hearing or your equipment, we emphasize that you should avoid setting the master volume above 0dB.

Manual Output Level Adjustment

Output levels may also be adjusted manually, either to set them to a specific level with an SPL meter, or to make fine-tuning adjustments to the levels obtained using the EzSet remote.

Manual output level adjustment is most easily done through the **OUTPUT ADJUST** menu (Figure 7). If you are already at the **MASTER MENU**, press the **▼ Button 17** until the on-screen ► cursor is next to the **OUTPUT ADJUST** line. If you are not at the **MASTER MENU**, press the **OSD Button 22** to bring up the **MASTER MENU** (Figure 1), and then press the **▼ Button 17** the on-screen ► cursor is next to the **OUTPUT ADJUST** line. Press the **Set Button 15** to bring the **OUTPUT ADJUST** menu (Figure 7) to the screen.

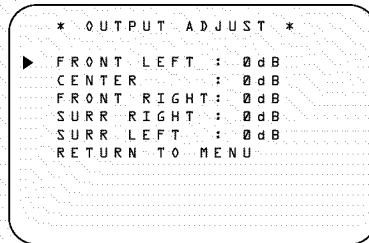


Figure 7

As soon as the new menu appears, you will hear a test noise circulate from speaker to speaker in a clockwise direction around the room. The test noise will play for two seconds in each speaker before circulating, and a blinking on-screen cursor will appear next to the name of each speaker location when the sound is at that speaker.

NOTE: Remember to verify that the speakers have been properly connected. As the test noise circulates, listen to make certain that the sound comes from the speaker position shown in the **Main Information Display S**. If the sound from a speaker location does NOT match the position indicated in the display, turn the AVR 220 off using the **Main Power Switch 1** and check the speaker wiring to make certain that each speaker is connected to the correct output terminal.

After checking for speaker placement, let the test noise circulate again, and listen to see which channels sound louder than the others. Using the front left speaker as a reference, press the **◀▶ Buttons 14 31** on the remote to bring all speakers to the same volume level. Note that when one of the **◀▶** buttons is pushed, the test noise circulation will pause on the channel being adjusted to give you time to make the adjustment. When you release the button, the circulation will resume after five seconds.

Continue to adjust the individual channels until the volume level sounds the same from each speaker. Note that adjustments should be made with the **◀▶ Buttons 14 31** on the remote only, NOT the main volume controls. If you are using a sound pressure level (SPL) meter for precise level adjustment, set the volume so that the meter reads 75dB, C-Weighting Slow.

You may also adjust the output levels manually while using the level indication feature of the EzSet remote. To activate the sensor and indica-

tor, simply press and release the **SPL Button 36** on the remote while the test tone is circulating. The **Program/SPL Indicator 3** will change color to indicate the level. Adjust the level using the **◀▶ Buttons 14 31** until the LED lights green for all channels. When it is red the level is too high; when it is amber the level is too low. Press the **SPL Button 36** when you are finished to turn the sensor and indicator off.

NOTE: The subwoofer output level is not adjustable using the test tone. To change the subwoofer level, follow the steps for Output Level Trim Adjustment on page 29.

When all channels have an equal volume level, the adjustment is complete. To exit this menu, press the **▲/▼ Buttons 13 17** until the on-screen ► cursor is next to the **RETURN TO MENU** line, and then press the **Set Button 15** to return to the **MASTER MENU**.

The output levels may also be adjusted at any time using the discrete buttons and semi-OSD system. To adjust the output levels in this fashion, press the **Test Tone Selector 28 8**. As soon as the button is pressed, the test tone will begin to circulate as indicated earlier. The correct channel from which the test noise should be heard will be shown in the lower third of the video screen and in the **Main Information Display S**. While the test noise is circulating, the proper channel position will also be indicated in the **Speaker/Channel Indicators L** by a blinking letter within the correct channel.

To adjust the output level, press the **Selector Buttons 5** on the front panel or the **◀▶ Buttons 14 31** until the desired level is shown in the display or on screen. Once the buttons are released, the test noise will begin to circulate again in five seconds.

When all channels have the same output level, press the **Test Tone Selector Button 28 8** again to complete the process.

NOTE: Output level adjustment is not available for the VMaX or Surround Off mode. However, the levels of the left and right channels in Surround Off (Stereo) mode may be adjusted relative to each other using the **Balance Control 18**.

System Configuration

Additional Input Adjustments

After one input has been adjusted for surround mode, digital input (if any), speaker type, and output levels, go back to the **INPUT SETUP** line on the **MASTER MENU** and enter the settings for each input that you will use. In most cases, only the digital input and surround mode will be different from one input to the next, while the speaker type, crossover frequency, night mode and output level settings will usually be the same and may be quickly entered by entering the same data used for the original input.

Once the settings outlined on the previous pages have been made, the AVR 220 is ready for operation. While there are some additional settings to be made, these are best done after you have had an opportunity to listen to a variety of sources and different kinds of program material. These advanced settings are described on pages 29 through 32 of this manual. In addition, any of the settings made in the initial configuration of the unit may be changed at any time. As you add new or different sources or speakers, or if you wish to change a setting to better reflect your listening taste, simply follow the instructions for changing the settings for that parameter as shown in this section.

Having completed the setup and configuration process for your AVR 220, you are about to experience the finest in music and home theater listening. Enjoy!

Operation

Basic Operation

Once you have completed the setup and configuration of the AVR 220, it is simple to operate and enjoy. The following instructions will help you maximize the enjoyment of your new receiver:

Turning the AVR 220 On or Off

 
- When using the AVR 220 for the first time, you must press the **Main Power Switch 1** on the front panel to turn the unit on. This places the unit in a Standby mode, as indicated by the amber color of the **Power Indicator 3**. Once the unit is in Standby, you may begin a listening session by pressing the **System Power Control 2** on the front panel or the **AVR Selector 6**. Note that the **Power Indicator 3** will turn green. This will turn the unit on and return it to the input source that was last used. The unit may also be turned on from Standby by pressing any of the **Input Selector Buttons 5 6 7** on the remote or the **Input Source Selector 11** on the front panel.

NOTE: After pressing one of the **Input Selector Buttons 5 7** to turn the unit on, press the **AVR Selector 6** to set the remote control to the AVR 220's functions.

To turn the unit off at the end of a listening session, simply press the **System Power Control 2** on the front panel or the **Power Off Button 1** on the remote. Power will be shut off to any equipment plugged into the rear panel **Switched AC Outlet 16** and the **Power Indicator 3** will turn amber.

When the remote is used to turn the unit "off" it is actually placing the system in a Standby mode, as indicated by the amber color of the **Power Indicator 3**.

- To program the AVR 220 for automatic turn-off, press the **Sleep Button 9** on the remote. Each press of the button will decrease the time before shut down in the following sequence:



The sleep time will be displayed in the **Preset Number/Sleep Timer Indicator 1** and it will count down until the time has elapsed.

When the programmed sleep time has elapsed, the unit will automatically turn off. Note that the front panel display will dim to one half brightness when the Sleep function is programmed. To cancel the Sleep function, press and hold the **Sleep Button 9** until the information display returns to normal brightness, the Sleep indicator numbers disappear and the words **SLEEP OFF** appear in the **Main Information Display S**.

When you will be away from home for an extended period of time it is always a good idea to completely turn the unit off with the front panel **Main Power Switch 1**.

NOTE: All preset memories are lost if the unit is left turned off by using the **Main Power Switch 1** for more than two weeks.

Source Selection

- To select a source, press any of the **Source Selector Buttons 5 7** on the remote.

- The input source may also be changed by pressing the front-panel **Input Source Selector 11**. Each press of the button will move the input selection through the list of available inputs.

- As the input is changed, the AVR 220 will automatically switch to the digital input (if selected), surround mode, speaker configuration, output levels, crossover frequency and night mode status that were entered during the configuration process for that source.

- The front-panel **Video 4 Inputs 15 16** may be used to connect a device such as a video game or camcorder to your home entertainment system on a temporary basis.

- As the input source is changed, the new input name will appear momentarily as an on-screen display in the lower third of the video display. The input name will also appear in the **Main Information Display S** and a green LED will light next to the selected input's name in the front panel **Input Indicators 22**.

- When an audio source is selected, the last video input used remains routed to the **Video Outputs 19 21** and **Video Monitor Output 12**. This permits simultaneous viewing and listening to different sources.

- When a Video source is selected, the video signal for that input will be routed to the **Video Monitor Output Jack 12** and will be viewable on a TV monitor connected to the AVR 220.

Volume Control

- Adjust the volume to a comfortable level using the front-panel **Volume Control 20** or remote **Volume Up/Down 34** buttons.

- When listening in the Stereo mode with the surround circuits off, the **Balance Control 18** may be used to adjust the relative sound output between the front left and right speakers.

- To temporarily silence all speaker outputs press the **Mute Button 38**. This will interrupt the output to all speakers and the headphone jack, but it will not affect any recording or dubbing that may be in progress. Press the **Mute Button 38** again to return to normal operation.

- During a listening session you may wish to adjust the **Bass Control 17** and **Treble Control 19** to suit your listening tastes or room acoustics.

- To set the output of the AVR 220 so that the output is "flat," with the tone controls deactivated, press the **Tone Mode Button 6** until the words **Tone Out** appear momentarily in the **Main Information Display S**. To return the tone controls to an active condition, press the **Tone Mode Button 6** until the words **Tone In** momentarily appear in the **Main Information Display S**.

- For private listening, plug the 1/4" stereo phone plug from a pair of stereo headphones into the front panel **Headphone Jack 4**. Note that when the headphone's plug is connected, the word **HEADPHONE** will scroll once across the **Main Information Display S** and all speakers will be silenced. When the headphone plug is removed, the audio feed to the speakers will be restored.

Operation

Surround Mode Chart

MODE	FEATURES	DELAY TIME RANGE
DOLBY DIGITAL	Available only with digital input sources encoded with Dolby Digital data. It provides up to five separate main audio channels and a special dedicated Low-Frequency Effects channel.	Center: 0 ms – 5 ms Initial Setting – 0 ms Surround: 0 ms – 15 ms Initial Setting – 0 ms
DTS	Available only with digital input sources encoded with DTS data. Available on special DVD, LD and audio-only discs, DTS provides up to five separate main audio channels and a special dedicated low-frequency channel.	Delay time not adjustable
DOLBY PRO LOGIC II MOVIE MUSIC EMULATION	Dolby Pro Logic II is the latest version of Dolby Laboratory's benchmark surround technology that decodes full-range, discrete left, center right, right surround and left surround channels from either matrix surround encoded programs and conventional stereo sources. The Dolby Pro Logic II Movie mode is optimized for movie soundtracks, while the Pro Logic II Music mode should be used with musical selections. The Pro Logic II Emulation mode creates compelling five-channel surround sound from conventional stereo recordings.	15 ms – 30 ms Initial Setting = 15 ms
LOGIC 7 C LOGIC 7 M	Logic 7 is an advanced mode that extracts the maximum surround information from either surround-encoded programs or conventional stereo material. The Logic 7 C or Cinema mode should be used with any source that contains Dolby Surround or similar matrix encoding. Logic 7 C delivers increased center-channel intelligibility, and more accurate placement of sounds with fades and pans that are much smoother and more realistic than with other decoding techniques. The Logic 7 M or Music mode should be used with analog or PCM stereo sources. Logic 7 M enhances the listening experience by presenting a wider front soundstage and greater rear ambience. Both Logic 7 modes also direct low-frequency information to the subwoofer (if installed and configured) to deliver maximum bass impact.	Delay time not adjustable
DOLBY 3 STEREO	Uses the information contained in a surround-encoded or two-channel stereo program to create center-channel information. In addition, the information that is normally sent to the rear-channel surround speakers is carefully mixed in with the front-left and front-right channels for increased realism. Use this mode when you have a center-channel speaker but no surround speakers.	No surround channels
THEATER	The THEATER mode creates a sound field that resembles the acoustic feeling of a standard live performance theater.	Delay time not adjustable
HALL 1 HALL 2	The two Hall modes create sound fields that resemble a small (HALL 1) or medium sized (HALL 2) concert hall.	Delay time not adjustable
VMAx Near VMAx Far	When only the two front-channel loudspeakers are used, Harman's patented VMAx mode delivers a three-dimensional sound space with the illusion of "phantom speakers" at the center and surround positions. The VMAx N, or "Near Field" mode should be selected when your listening position is less than five feet from the speakers. The VMAx F, or "Far Field" mode should be selected when your listening position is greater than five feet from the speakers. The VMAx modes are also available using the Headphones Output 4 . When headphones are being used, the Far Field mode will appear to push the sound field away from your ears, reducing the "inside the head" sensation often experienced when using headphones.	No surround channels
5-Channel Stereo	This mode takes advantage of multiple speakers to place a stereo signal at both the front and back of a room. Ideal for playing music in situations such as a party, it places the same signal at the front-left and surround-left, and front-right and surround-right speakers. The center channel is fed a summed mono mix of the in-phase material of the left and right channels.	No delay is available for this mode
SURROUND OFF (STEREO)	This mode turns off all surround processing and presents the pure left- and right-channel presentation of two-channel stereo programs.	No surround channels

Operation

Surround Mode Selection

One of the most important features of the AVR 220 is its ability to reproduce a full multichannel surround sound field from digital sources, analog matrix surround-encoded programs and standard stereo programs. In all, a total of fifteen listening modes are available on the AVR 220.

Selection of a surround mode is based on personal taste, as well as the type of program source material being used. For example, motion pictures or TV programs bearing the logo of one of the major surround-encoding processes, such as Dolby Surround, DTS Stereo or UltraStereo® may be played in either the Dolby Digital, Dolby Pro Logic II or Logic 7 Cinema surround modes depending on the source material.

NOTE: Once a program has been encoded with matrix surround information, it retains the surround information as long as the program is broadcast in stereo. Thus, movies with surround sound may be decoded via any of the analog surround modes such as Pro Logic II or Logic 7, when they are broadcast via conventional TV stations, cable, pay TV and satellite transmission. In addition, a growing number of made-for-television programs, sports broadcasts, radio dramas and music CDs are also recorded in surround sound. You may view a list of these programs at the Dolby Laboratories Web site at www.dolby.com.

Even when a program is not listed as carrying intentional surround information, you may find that the Pro Logic II, Logic 7, VMaX and the Hall or Theater modes often deliver enveloping surround presentations through the use of the natural information present in all stereo recordings. However, for stereo, but not surround programs, we suggest that you experiment with the other modes.

Surround modes are selected using either the front panel controls or the remote. To select a surround mode from the front panel, press the **Surround Mode Selector** **7** to scroll up or down through the list of available modes. To select a surround mode using the remote, press the **Surround Mode Selector** **10** and then press the **▲/▼ Buttons** **13/17** to change the mode. As you press the buttons, the Surround mode name will appear in the **Main Information Display** **S**, and an individual mode indicator will also light up **BCDEGHI**. As the surround modes change, a green LED will light next to the current mode in the

Surround Mode Indicators **29** list on the front panel.

NOTE: The name of each **Surround Mode** will scroll across the bottom of the on-screen display and through the **Main Information Display** **S** while the modes are being selected. To avoid exiting from the surround mode selection process, be certain to push the **▲** or **▼ Button** **13/17** while a mode name is still visible.

Note that the Dolby Digital and DTS modes may only be selected when a digital input is in use. In addition, when a digital source is present, the AVR 220 will automatically select and switch to the correct mode (Dolby Digital or DTS), regardless of the mode that has been previously selected. For more information on selecting digital sources, see the following section of this manual.

To listen to a program in traditional two-channel stereo, using the front-left and front-right speakers only (plus the subwoofer if installed and configured), follow the instructions shown above for using the remote until **SURR OFF** appears in the **Main Information Display** **S**.

Digital Audio Playback

Digital audio is a major advancement over older analog matrix surround systems. It delivers five discrete channels: left-front, center, right-front, left-surround and right-surround. Each channel reproduces full frequency range (20Hz to 20kHz) and offers dramatically improved dynamic range and significant improvements to signal-to-noise ratios. In addition, digital systems have the capability to deliver an additional channel that is specifically devoted to low-frequency information. This is the ".1" channel referred to when you see these systems described as "5.1". The bass channel is separate from the other channels, but since it is intentionally bandwidth-limited, sound designers have given it that unique designation.

Dolby Digital

Dolby Digital (originally known as AC-3®) is a standard part of the DVD format, and is also part of the new digital broadcasting system and it is available with many satellite receivers and some digital cable boxes, as well as with specially encoded LD discs.

Note that an optional, external RF demodulator is required to use the AVR 220 to listen to the Dolby Digital sound tracks available on laser

discs. Connect the RF output of the LD player to the demodulator and then connect the digital output of the demodulator to the **Optical** or **Coaxial Inputs** **24/25/13/14** of the AVR 220. No demodulator is required for use with DVD players or DTS-encoded laser discs.

DTS

DTS is another digital audio system that is capable of delivering 5.1 audio. Although both DTS and Dolby Digital are digital, they use different methods of encoding the signals, and thus they require different decoding circuits to convert the digital signals back to analog.

DTS-encoded sound tracks are available on select DVD and LD discs, as well as on special audio-only DTS discs. You may use any LD or CD player equipped with a digital output to play DTS-encoded discs with the AVR 220. All that is required is to connect the player's output to either the **Optical** or **Coaxial** input on the rear panel **24/25** or front panel **13/14**.

In order to listen to DVDs encoded with DTS sound tracks, the DVD player must be compatible with the DTS signal as indicated by a DTS logo on the player's front panel. Note that early DVD players may not be able to play DTS-encoded DVDs. This does not indicate a problem with the AVR 220, as some players cannot pass the DTS signal through to the digital outputs. If you are in doubt as to the capability of your DVD player to handle DTS discs, consult the player's owner's manual. Please note that some DVD players are shipped with their output set for Dolby Digital only. To insure that DTS data is being sent to the AVR, please check the setup menu system on your DVD player to make certain that DTS data output is enabled.

Selecting a Digital Source

To utilize either digital mode you must have properly connected a digital source to the AVR 220. Connect the digital outputs from DVD players, HDTV receivers, satellite systems or CD players to the **Optical** or **Coaxial Inputs** **24/25/13/14**. In order to provide a backup signal and a source for analog stereo recording, the analog outputs provided on digital source equipment should also be connected to their appropriate inputs on the AVR 220 rear panel (e.g., connect the analog stereo audio output from a DVD to the **DVD Audio Inputs** **6** on the rear panel when you connect the source's digital outputs).

Operation

When playing a digital source such as DVD, first select the input using the remote or front panel controls as outlined in this manual. Next, select the digital source by pressing the **Digital Input Selector Button** **16/24** and then using the **▲/▼ Buttons** **13/17** on the remote or the **Selector Buttons** **5** on the front panel to choose any of the **OPTICAL** or **COAXIAL** inputs, as they appear in the **Main Information Display** **S**, the **Digital Input Indicators** **UV** or the on-screen display. When the digital source is playing, the AVR 220 will automatically detect whether it is a multichannel Dolby Digital or DTS source, an MP3 signal or a conventional PCM signal, which is the standard output from CD players. A **Bitstream Indicator** **A** will light in the **Main Information Display** **25S** to confirm that the digital signal is Dolby Digital, DTS, PCM or MP3.

Digital Status Indicators

When a digital source is playing, the AVR 220 senses the type of bitstream data that is present. Using this information, the correct surround mode will automatically be selected. For example, DTS bitstreams will cause the unit to switch to DTS decoding, and Dolby Digital bitstreams will enable Dolby Digital decoding. When the unit senses PCM data from CDs or LDs, you may select any of the standard surround modes, such as Dolby Pro Logic II or Logic 7. Since the range of available surround modes is dependent on the type of digital data that is present, the AVR 220 uses a variety of indicators to let you know what type of signal is present. This will help you to understand the choice of modes.

When a digital source is playing, a **Bitstream Indicator** **A** will light to show which type of signal is playing:

DD: When the DOLBY D indicator lights, a Dolby Digital bitstream is being received. Depending on the settings on the source player and specific surround information and number of channels on the disc, a number of surround modes are possible. For discs with full 5.1 audio, only the Dolby Digital and VMaX modes are available. When the Dolby Digital signal is only two-channel, you may also select from the Logic 7 Cinema/Music, Hall 1/2, Theater, Dolby Pro Logic II Movie, Music or Emulation, or Dolby 3 Stereo Modes. When the AVR 220 senses a 2.0-channel Dolby Digital signal, the unit will automatically select Dolby Pro Logic II as the surround processing mode, and both the **Dolby Digital** **C** and **Dolby Pro Logic II**

D indicators will light in accordance with the requirements of Dolby Laboratories.

DTS: When the DTS indicator lights, a DTS bitstream is being received. When the unit senses this type of data, only the DTS mode may be used.

PCM: When the PCM indicator lights, a standard Pulse Code Modulation, or PCM, signal is being received. This is the type of digital audio used by conventional compact disc and laser disc recordings. When a PCM bitstream is present, all modes except Dolby Digital and DTS are available.

MP3: When the MP3 indicator lights, a compatible MPEG 1/Layer 3 digital signal is being received. This is the popular audio format used by many computer programs for recording compressed audio files. When an MP3 bitstream is present, the sound will automatically be played in the stereo (surround off) mode. The surround modes are not available during MP3 playback.

In addition to the bitstream indicators, the AVR 220 features a set of unique channel-input indicators that tell you how many channels of digital information are being received and/or whether the digital signal is interrupted.

These indicators are the L/C/R/LS/RS/LFE letters that are inside the center boxes of the **Speaker/Channel Input Indicators** **L** in the front panel **Main Information Display** **25**. When a standard analog signal is in use, only the "L" and "R" indicators will light, as analog signals have only left and right channels, respectively.

Digital signals, however, may have two, five or six separate channels, depending on the program material, the method of transmission and the way in which it was encoded. When a digital signal is playing, the letters in these indicators will light in response to the specific signal being received. It is important to note that although Dolby Digital, for example, is referred to as a "5.1" system, not all Dolby Digital DVDs or programs are encoded with 5.1 channels. Thus, it is sometimes normal for a DVD with a Dolby Digital soundtrack to trigger only the "L" and "R" indicators.

NOTE: Many DVD discs are recorded with both "5.1" and "2.0" versions of the same soundtrack. When playing a DVD, always be certain to check the type of material on the disc. Most discs show this information in the form of a

listing or icon on the back of the disc jacket. When a disc does offer multiple sound track choices you may have to make some adjustments to your DVD player (usually with the "Audio Select" button or in a menu screen on the disc) to send a full 5.1 feed to the AVR 220. It is also possible for the type of signal feed to change during the course of a DVD playback. In some cases the previews of special material will only be recorded in 2.0 audio, while the main feature is available in 5.1 audio. As long as your DVD player is set for 6-channel output, the AVR 220 will automatically sense changes to the bitstream and channel count and reflect them in these indicators.

The letters used by the **Speaker/Channel Input Indicators** **L** also flash to indicate when a bitstream has been interrupted. This will happen when a digital input source is selected before the playback starts, or when a digital source such as a DVD is paused. The flashing indicators remind you that the playback has stopped due to the absence of a digital signal and not through any fault of the AVR 220. This is normal, and the digital playback will resume once the playback is started again.

Night Mode

A special feature of Dolby Digital is the Night mode, which enables AC-3 input sources to be played back with full dialogue intelligibility while reducing the minimum peak level by 1/4 to 1/3. This prevents abruptly loud transitions from disturbing others, without reducing the impact of the digital source. The Night mode is available only when Dolby Digital signals with special data are being played.

The Night mode may be engaged when a Dolby Digital DVD is playing by pressing the **Night Mode Button** **11** on the remote. Next, press the **▲/▼ Buttons** **13/17** to select either the middle range or full-compression versions of the Night mode. To turn the Night mode off, press the **▲/▼ Buttons** **13/17** until the message in the lower third of the video display and the **Main Information Display** **S** reads **D-Range Off**. When the Night mode is active, the **Night Mode Indicator** **K** will also light.

The Night mode may also be selected to always be on at either level of compression using the options in the **SURROUND SETUP** Menu. See page 19 for information on using the menus to set this option.

Operation

IMPORTANT NOTES ON DIGITAL PLAYBACK:

1. When the digital playback source is stopped, or in a Pause, Fast Forward or Chapter Search mode, the digital audio data will momentarily stop, and the channel position letters inside the **Speaker/Channel Input Indicators** **1** will flash. This is normal and does not indicate a problem with either the AVR 220 or the source machine. The AVR 220 will return to digital playback as soon as the data is available and when the machine is in a standard play mode.
2. Although the AVR 220 will decode virtually all DVD movies, CDs and HDTV sources, it is possible that some future digital sources may not be compatible with the AVR 220.
3. Note that not all digitally encoded programs contain full 5.1-channel audio. Consult the program guide that accompanies the DVD or laser disc to determine which type of audio has been recorded on the disc. The AVR 220 will automatically sense the type of digital surround encoding used and adjust to accommodate it.
4. When a digital source is playing, you may not be able to select some of the analog surround modes such as Dolby Pro Logic II, Dolby 3 Stereo, Hall, Theater or Logic 7.
5. When a Dolby Digital or DTS source is playing, it is not possible to make an analog recording using the **Tape** **2** and **Video 1** or **Video 2 Outputs** **5**/**26**. However, the digital signals will be passed through to the **Digital Audio Outputs** **10**.

PCM Audio Playback

PCM (Pulse Code Modulation) is the non-compressed digital audio system used for compact discs and laser discs. The digital circuits in the AVR 220 are capable of high-quality digital-to-analog decoding, and they may be connected directly to the digital audio output of your CD or LD player.

Connections may be made to either the rear panel **Optical** or **Coaxial Inputs** **24**/**25** or the front panel **Digital Inputs** **13**/**14**.

To listen to a PCM digital source, first select the input for the desired source (e.g., CD). Next, press the **Digital Input Selector** **24**/**16** and then use the **▲/▼ Buttons** **13**/**17** on the remote, or the **Selector Buttons** **5** on the front panel, until the desired choice appears in the **Main Information Display** **5**.

When a PCM source is playing, the **PCM Indicator** **A** will light. During PCM playback, you may select any surround mode except Dolby Digital or DTS.

Playback from PCM sources may also benefit from the Logic 7 Mode. When playing back a surround-encoded PCM source, such as an LD or surround-encoded CD, use the Logic 7 C or Cinema mode. When playing true stereo recordings, use the Logic 7 M or Music mode for a wider soundstage and increased rear-channel ambience.

NOTE: If you have selected Logic 7 C or M as your surround mode for the current listening session, and you are using a digital input, and you have not changed the default surround mode for that input source to the same Logic 7 mode, then you will notice that if the digital signal is interrupted for any reason, such as stopping the source device, upon resumption of the signal, the AVR 220 will use a different surround mode. In fact, the AVR 220 will use whichever mode was set as the default for that source. The factory default for all sources is Stereo Mode, unless the receiver detects a Dolby Digital or DTS bitstream.

MP3 Audio Playback

The AVR 220 is one of the few A/V receivers to provide on-board decoding for the MP3 audio format used by computers and portable audio devices. In addition, some new CD players are capable of playing back optical discs that are recorded with MP3, rather than standard CD audio information. By offering MP3 decoding, the AVR 220 is able to deliver more precise conversion of the digital signals to an analog output, along with the benefits of listening to the MP3 audio through the AVR 220's high-current amplifier and the speakers from your surround system, rather than the smaller speakers and low-powered amplifiers typically used with computers.

To take advantage of the AVR 220's MP3 capabilities, simply connect the PCM output of a computer's sound card or the PCM output of a portable digital audio device to either the rear panel **Digital Inputs** **24**/**25** or the front panel **Digital Inputs** **13**/**14**. As soon as the digital signal is available, the **MP3 Bitstream Indicator** **A** will light, and the audio will begin playing.

NOTES:

- The AVR 220 is only capable of playing sig-

nals in the MP3 (MPEG 1/Layer 3) format. It is not compatible with other computer audio codecs.

- The digital audio input signal may be either optical or coaxial, but the signal must be in the S/P-DIF format. Direct connection of USB or serial data outputs is not possible, even though the signals are in the MP3 format. If you have any questions about the data output format from your computer or a sound card, check with the device's owner's manual or contact the manufacturer's technical support area.

Tuner Operation

The AVR 220's tuner is capable of tuning AM, FM and FM Stereo broadcast stations. Stations may be tuned manually, or they may be stored as favorite station presets and recalled from a 30-position memory.

Station Selection

1. Press the **AM/FM Tuner Select Button** **7** on the remote to select the tuner as an input. The tuner may be selected from the front panel by either pressing the **Input Source Selector** **11** until the tuner is active or by pressing the **Tuner Band Selector** **9** at any time.
2. Press the **AM/FM Tuner Select Button** **7** or **Tuner Band Selector** **9** again to switch between AM and FM so that the desired frequency band is selected.
3. Press the **FM Mode Button** **12** **19** to select manual or automatic tuning.

When the **AUTO Indicator** **R** is illuminated in the **Main Information Display** **25** the tuner will stop only at those stations that have a strong enough signal to be received with acceptable quality.

When the **AUTO Indicator** **R** is not illuminated, the tuner is in a manual mode and will stop at each frequency increment in the selected band.

4. To select stations, press the **Tuning Selector Button** **8** **21**. When the **AUTO Indicator** **R** is illuminated, press the button for two seconds and then release to cause the tuner to search for the next highest- or lowest-frequency station that has an acceptable signal. When tuning FM stations in the Auto mode, the tuner will select only stereo stations. To tune to

Operation

the next station, press the button again. If the **STEREO Indicator P** is not illuminated, tap the **Tuning Selector Button 8 21** to advance one frequency increment at a time, or press and hold it to locate a specific station. When the **TUNED Indicator Q** lights, the station is properly tuned and should be heard with clarity.

5. Stations may also be tuned directly by pressing the **Direct Button 20**, and then pressing the **Numeric Keys 18** that correspond to the station's frequency. The desired station will automatically be tuned. If you press an incorrect button while entering a direct frequency, press the **Clear Button 23** to start over.

NOTE: When the FM reception of a station is weak, audio quality will be increased by switching to Mono mode by pressing the **FM Mode Button 12 19** until the **STEREO Indicator P** goes out.

Preset Tuning

Using the remote, up to 30 stations may be stored in the AVR 220's memory for easy recall using the front panel controls or the remote.

To enter a station into the memory, first tune the station using the steps outlined above. Then:

1. Press the **Memory Button 29** on the remote. Note that the **MEMORY Indicator O** will be illuminated and flash in the **Main Information Display 25**.
2. Within five seconds, press the **Numeric Keys 18** corresponding to the location where you wish to store this station's frequency. Once entered, the preset number will appear in the **Preset Number/Sleep Time Display J**.
3. Repeat the process after tuning any additional stations to be preset.

Recalling Preset Stations

- To manually select a station previously entered in the preset memory, press the **Numeric Keys 18** that correspond to the desired station's memory location.
- To manually tune through the list of stored preset stations one by one, press the **Preset Stations Selector Buttons 10 27** on the front panel or remote.

Tape Recording

In normal operation, the audio or video source selected for listening through the AVR 220 is sent to the record outputs. This means that any program you are watching or listening to may be recorded simply by placing machines connected to the outputs for **Tape Outputs 2** or **Video 1 or 2 Outputs 5 26** in the record mode.

When a digital audio recorder is connected to the **Digital Audio Outputs 10**, you are able to record the digital signal using a CD-R, MiniDisc or other digital recording system.

NOTES:

- The digital outputs are active only when a digital signal is present, and they do not convert an analog input to a digital signal, or change the format of the digital signal. In addition, the digital recorder must be compatible with the output signal. For example, the PCM digital input from a CD player may be recorded on a CD-R or MiniDisc, but Dolby Digital or DTS signals may not.
- Please make certain that you are aware of any copyright restrictions on any material you copy. Unauthorized duplication of copyrighted materials is prohibited by federal law.

Output Level Trim Adjustment

Normal output level adjustment for the AVR 220 is established using the test tone, as outlined on pages 21 and 22. In some cases, however, it may be desirable to adjust the output levels using program material such as a test disc, or a selection you are familiar with. Additionally, the output level for the subwoofer can only be adjusted using this procedure.

To adjust the output levels using program material, first set the reference volume for the front-left and front-right channels using the **Volume Control 20 34**.

If you are using a disc with test signals or an external signal generator as the source from which to trim the output levels, you may use the EzSet feature of the remote to guide you to the reference SPL level. To use the remote for this purpose, press and quickly release the **SPL Button 36** to activate the sensor. While the test tone is circulating, the **Program/ SPL Indicator 3** will change color to indicate the level. Adjust the level as shown on pages 22

and 23 until the LED lights green for all channels. When it is red the level is too high; when it is amber the level is too low. Press the **SPL Button 36** to turn the sensor and indicator off.

Once the reference level has been set, press the **Channel Select Button 12 26** and note that **FRONT L LEV** will appear in the **Main Information Display S**. To change the level, first press the **Set Button 15 21**, and then use the **Selector Buttons 5** or the **▲/▼ Buttons 13 17** to raise or lower the level. DO NOT use the volume control, as this will alter the reference setting.

Once the change has been made, press the **Set Button 15 21** and then press the **Selector Buttons 5** or the **▲/▼ Buttons 13 17** to select the next output channel location that you wish to adjust. To adjust the subwoofer level, press the **Selector Buttons 5** or the **▲/▼ Buttons 13 17** until **WOOFER LEV** appears in the **Main Information Display S** or on-screen display.

Press the **Set Button 15 21** when the name of the desired channel appears in the **Main Information Display S** and on-screen display, and follow the instructions shown earlier to adjust the level.

Repeat the procedure as needed until all channels requiring adjustment have been set. When all adjustments have been made and no further adjustments are made for five seconds, the AVR 220 will return to normal operation.

The channel output for any input may also be adjusted using the full-OSD on-screen menu system. First, set the volume to a comfortable listening level using the **Volume Control 20 34**. Then, press the **OSD Button 22** to bring up the **MASTER MENU** (Figure 1). Press the **▼ Button 17** until the on-screen ► cursor is next to the **CHANNEL ADJUST** line. Press the **Set Button 15** to activate the **CHANNEL ADJUST** menu (Figure 8).

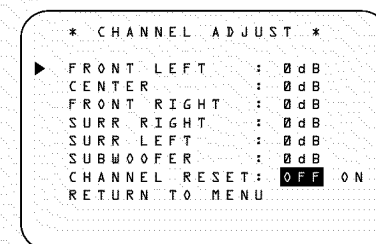


Figure 8

Operation

Once the menu appears on your video screen, use the ▲/▼ buttons **13** **17** to move the on-screen ► cursor so that it is next to the channel that you wish to adjust. Then, use the ◀▶ **Buttons** **14** **31** to raise or lower the output level. Remember, the goal is to have the output level at each channel be equal when heard at the listening position.

When all adjustments are done, press the ▲/▼ **13** **17** buttons to move the on-screen ► cursor so that it is next to **RETURN TO MENU** and then press the **Set Button** **15** if you wish to go back to the main menu to make other adjustments. If you have no other adjustments to make, press the **OSD Button** **22** to exit the menu system.

NOTE: The output levels may be separately trimmed for each digital and analog surround mode. If you wish to have different trim levels for a specific mode, select that mode and then follow the instructions in the steps shown earlier.

6-Channel Direct Input

The AVR 220 is equipped for future expansion through the use of optional, external adapters for formats that the AVR 220 may not be capable of processing. When an adapter is connected to the **6-Channel Direct Input** **9**, you may select it by pressing the **6-Ch Direct Input Selector** **37**. The 6-Channel Direct Input may also be selected by pressing the **Input Source Selector Button** **11** on the front panel until the words **6 CH DIRECT** appear in the **Main Information Display** **5**, and a green LED lights next to **6 CH** in the **Input Indicators** **22**.

Note that when the 6-Channel Direct Input is in use, you may not select a surround mode, as the external decoder determines processing. In addition, there is no signal at the record outputs when the 6-Channel Direct Input is in use.

Memory Backup

This product is equipped with a memory backup system that preserves the system configuration information and tuner presets if the unit is accidentally unplugged or subjected to a power outage. This memory will last for approximately two weeks, after which time all information must be reentered.

Advanced Features

The AVR 220 is equipped with a number of advanced features that add extra flexibility to the unit's operation. While it is not necessary to use these features to operate the unit, they provide additional options that you may wish to use.

Display Brightness

The AVR 220's **Main Information Display 25** is set at a default brightness level that is sufficient for viewing in a normally lit room. However, in some home theater installations, you may wish to occasionally lower the brightness of the display, or turn it off completely.

To change the display brightness setting for a specific listening session, you will need to make an adjustment in the **ADVANCED SELECT** menu. To start the adjustment, press the **OSD Button 22** to bring the **MASTER MENU** to the screen. Press the **▼ Button 17** until the on-screen ► cursor is next to the **ADVANCED** line. Press the **Set Button 15** to enter the **ADVANCED SELECT** menu (Figure 9).

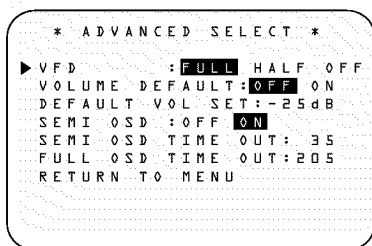


Figure 9

To change the brightness setting, at the **ADVANCED SELECT** menu, make certain that the on-screen ► cursor is next to the **VFD** line, and press the **► Button 31** until the desired brightness level is highlighted in the video display. When **FULL** is highlighted, the display is at its normal brightness. When **HALF** is highlighted, the display is at half the normal brightness level. When **OFF** is highlighted, all of the indicators in the **Main Information Display 25** will go dark. Note, however, that the green LEDs for the **Input Indicators 22** and the **Surround Mode Indicators 23**, as well as for the **Power Indicator 3**, will always remain lit to remind you that the unit is turned on.

The display brightness may also be changed by pressing and holding the **Set Button 21** on the front panel for three seconds until the message in the **Main Information Display 25**

reads **VFD FULL**. Within five seconds, press the front panel **Selector Buttons 5** until the desired brightness display level is shown. At that point, press the **Set Button 21** again to enter the setting.

Once the desired brightness level is selected, it will remain in effect until it is changed again or until the unit is turned off.

If you wish to make other adjustments, press the **▲/▼ Buttons 13 17** until the on-screen ► cursor is next to the desired setting or the **RETURN TO MENU** line and press the **Set Button 15**. If you have no other adjustments to make, press the **OSD Button 22** to exit the menu system.

Turn On Volume Level

As is the case with most audio/video receivers, when the AVR 220 is turned on, it will always return to the volume setting in effect when the unit was turned off. However, you may prefer to always have the AVR 220 turn on at a specific setting, regardless of what was last in use when the unit was turned off. To change the default condition so that the same volume level is always used at turn-on, you will need to make an adjustment in the **ADVANCED SELECT** menu. To start the adjustment, press the **OSD Button 22** to bring the **MASTER MENU** (Figure 1) to the screen. Press the **▼ Button 17** until the on-screen ► cursor is next to the **ADVANCED** line. Press the **Set Button 15** to enter the **ADVANCED SELECT** menu (Figure 9).

At the **ADVANCED SELECT** menu make certain that the on-screen ► cursor is next to the **VOLUME DEFAULT** line by pressing the **▲/▼ Buttons 13 17** as needed. Next, press the **► Button 31** so that the word **ON** is highlighted in the video display. Next, press the **▼ Button** so that the on-screen ► cursor is next to the **DEFAULT VOL SET** line. To set the desired turn-on volume, press the **◀▶ Buttons 14 31** until the desired volume level is shown on the **DEFAULT VOL SET** line. Note that this setting may NOT be made with the regular volume controls.

NOTE: Since the setting for the turn-on volume cannot be heard while the setting is being made, you may wish to determine the setting before making the adjustment. To do this, listen to any source and adjust the volume to the desired level using the regular **Volume**

Controls 20 34. When the desired volume level to be used at turn-on is reached, make a note of the setting as it appears in the lower third of the video screen or in the **Main Information Display 25**. (A typical volume level will appear as a negative number such as -25dB.) When making the adjustment, use the **◀▶ Buttons 14 31** to enter this setting.

Unlike some of the other adjustments in this menu, the turn-on volume default will remain in effect until it is changed or turned off in this menu, even when the unit is turned off.

If you wish to make other adjustments, press the **▲/▼ Buttons 13 17** until the on-screen ► cursor is next to the desired setting or the **RETURN TO MENU** line and press the **Set Button 15**. If you have no other adjustments to make, press the **OSD Button 22** to exit the menu system.

Semi-OSD Settings

The semi-OSD system places one-line messages at the lower third of the video display screen whenever the Volume, Input Source, Surround mode or tuner frequency of any of the configuration settings is changed. The semi-OSD system is helpful in that it enables you to have feedback on any control changes or remote commands using the video display when it is difficult to view the front-panel displays. However, you may occasionally prefer to turn these displays off for a particular listening session. You may also want to adjust the length of time the displays remain on the screen. Both of those options are possible with the AVR 220.

To turn off the semi-OSD system, you will need to make an adjustment in the **ADVANCED SELECT** menu (Figure 9). To start the adjustment, press the **OSD Button 22** to bring the **MASTER MENU** to the screen. Press the **▼ Button** until the on-screen ▼ cursor is next to the **ADVANCED** line. Press the **Set Button 15** to enter the **ADVANCED SELECT** menu.

At the **ADVANCED SELECT** menu, make certain that the on-screen ► cursor is next to the **SEMI OSD DEFAULT** line by pressing the **▲/▼ Buttons 13 17** as needed. Next, press the **► Button 31** so that the word **OFF** is highlighted in the video display.

Note that this setting is temporary and will remain active only until it is changed or until

Advanced Features

the AVR 220 is turned off. Once the unit is turned off, the semi-OSD displays will remain activated, even if they were switched off for the previous listening session.

To change the length of time that the semi-OSD displays remain on the screen, go to the **ADVANCED SELECT** menu as outlined earlier, and press the **▲/▼ Buttons 13 17** as needed, until the on-screen ► cursor is next to the **SEMI-OSD TIME OUT** line. Next, press the **◀/▶ Buttons 14 31** until the desired time in seconds is displayed. Note that, unlike most of the other options in this menu, this is a permanent setting change and the time-out entry will remain in effect until it is changed, even when the unit is turned off.

If you wish to make other adjustments, press the **▲/▼ Buttons 13 17** until the on-screen ► cursor is next to the desired setting or the **RETURN TO MENU** line and press the **Set Button 15**. If you have no other adjustments to make, press the **OSD Button 22** to exit the menu system.

Full-OSD Time Out Adjustment

The **FULL-OSD** menu system is used to simplify the setup and adjustment of the AVR 220 using a series of on-screen menus. The factory default setting for these menus leaves them on the screen for 20 seconds after a period of inactivity before they disappear from the screen or "Time Out." Time Out is a safety measure to prevent image retention of the menu text in your monitor or projector, which might happen if menus were left on indefinitely. However, some viewers may prefer a slightly longer or shorter period before the Time Out display.

To change the Full-OSD Time Out, you will need to make an adjustment in the **ADVANCED SELECT** menu (Figure 9). To start the adjustment, press the **OSD Button 22** to bring the **MASTER MENU** to the screen. Press the **▼ Button 17** until the on-screen ▼ cursor is next to the **ADVANCED** line. Press the **Set Button 15** to enter the **ADVANCED SELECT** menu (Figure 9).

At the **ADVANCED SELECT** menu (Figure 9), make certain that the on-screen ► cursor is next to the **FULL-OSD TIME OUT** line by pressing the **▲/▼ Buttons 13 17** as needed. Next, press the **◀/▶ Buttons 14 31** until the desired time is displayed in seconds. Note that unlike most of the other options in this menu, this is a permanent setting change, and the Time Out entry will remain in effect until it is changed, even if the unit is turned off.

If you wish to make other adjustments, press the **▲/▼ Buttons 13 17** until the on-screen ► cursor is next to the desired setting or the **RETURN TO MENU** line and press the **Set Button 15**. If you have no other adjustments to make, press the **OSD Button 22** to exit the menu system.

Programming the Remote

The AVR 220 is equipped with a powerful remote control that will control not only the receiver's functions, but also most popular brands of audio and video equipment, including CD players, cassette decks, TV sets, cable boxes, VCRs, satellite receivers and other home theater equipment. Once the AVR 220's remote is programmed with the codes for the products you own, it is possible to eliminate most other remotes and replace them with the convenience of a single, universal remote control.

Programming the Remote

As shipped from the factory, the remote is fully programmed for all AVR 220 functions, as well as those of most Harman Kardon CD changers, DVD players, CD players and cassette decks. In addition, by following one of the methods below, you may program the remote to operate a wide range of devices from other manufacturers.

Direct Code Entry

This method is the easiest way to program your remote to work with different products.

1. Use the tables in the following pages to determine the three-digit code or codes that match both the product type (e.g., VCR, TV), and the specific brand name. If there is more than one number for a brand, make note of the different choices.
2. Turn on the unit you wish to program into the AVR 220 remote.
3. Press and hold both the **Input Selector 5** for the product you wish to control (e.g., VCR, TV) and the **Mute Button 38** at the same time. When the **Program/SPL Indicator 3** turns amber and begins flashing, release the buttons. It is important that you begin the next step within 20 seconds.
4. Point the AVR 220's remote towards the unit to be programmed and enter the first three-digit code number using the **Numeric Keys 18**. If the unit turns off, the correct code has been entered. Press the **Input Selector 5** again, and note that the red light will flash three times before going dark to confirm the entry.
5. If the device to be programmed in does NOT turn off, continue to enter three-digit code numbers until the equipment turns off. At this point, the correct code has been entered. Press the **Input Selector 5** again and note that the red light under the

Input Selector 5 will flash three times before going dark to confirm the entry.

6. Try all of the functions on the remote to make certain that the product operates properly. Keep in mind that many manufacturers use a number of different combinations of codes, so it is a good idea to make certain that not only the power control, but the volume, channel and transport controls work as they should. If functions do not work properly, you may need to use a different remote code.
7. If a code cannot be entered to turn the unit off, if the code for your product does not appear in the tables in this manual, or if not all functions operate properly, try programming the remote with the Auto Search Method.

Auto Search Method

If the unit you wish to include in the AVR 220's remote is not listed in the code tables in this manual or if the code does not seem to operate properly, you may wish to program the correct code using the Auto Search method that follows:

1. Turn on the unit that you wish to include in the AVR 220 remote.
2. Press the **Input Selector 5** for the type of product to be entered (e.g., VCR, TV) and the **Mute Button 38** at the same time. Hold both buttons until the red light under the **Input Selector 5** stays lit. Note that the next step must take place while the red light is on, and it must begin within 20 seconds after the light appears.
3. Point the AVR 220 remote towards the unit to be programmed and press either the **▲ or ▼ Button 13 17**. Each press will send out a series of codes from the remote's built-in database. When the unit being programmed turns off, release the **▲ or ▼ Button 13 17**, as that is your indication that the correct code is in use.
4. Press the **Input Selector 5**, and note that the red light under the Input Selector will flash three times before going dark to confirm the entry.
5. Try all of the functions on the remote to make certain that the product operates. Keep in mind that many manufacturers use a number of different combinations of codes, and it is a good idea to make certain that not only the power control works, but

also that the volume, channel and transport controls function properly. If all functions do not work properly, you may need to Auto-Search for a different code, or enter a code via the Direct Code Entry method.

Code Readout

When the code has been entered using the Auto Search method, it is always a good idea to find out the exact code so that it may be easily reentered if necessary. You may also read the codes to verify which device has been programmed to a specific Control Selector button.

1. Press and hold both the **Input Selector 5** for the device for which you wish to find the code and the **Mute Button 38** at the same time. Note that the **Program/SPL Indicator 3** will initially turn amber. Release the buttons and begin the next step within 20 seconds.
2. Press the **Set Button 15**. The **Program/SPL Indicator 3** will then blink green in a sequence that corresponds to the three-digit code, with a one-second pause between digits. Count the number of blinks between pauses to determine the digit of the code. One blink is the number 1, two blinks is the number 2, and so forth. Ten blinks are used to indicate a "0."

Example: One blink, followed by a one-second pause, followed by six blinks, followed by a one-second pause, followed by ten blinks indicates that the code has been set to 160.

For future reference, enter the Setup Codes for the equipment in your system here:

DVD _____ CD _____
VID1/VCR _____ VID2/TV _____
VID3/CBL/SAT _____
VID4 _____ TAPE _____

Programming the Remote

Macro Programming

Macros enable you to easily repeat frequently used combinations of commands with the press of a single button on the AVR 220 remote control. Once programmed, a macro will send out up to 19 different remote codes in a predetermined sequential order, enabling you to automate the process of turning on your system, changing devices, or other common tasks. The AVR 220 remote can store up to five separate macro command sequences: one that is associated with the **Power On Button 4**, and four more that are accessed by pressing the **Macro Buttons 23**.

1. Press the **Mute Button 38** and the **Macro Button 23** to be programmed or the **Power On Button 4** at the same time. Note that the last **Input Selector 5** pressed will light red, and the **Program/SPL Indicator 3** will flash amber.
2. Enter the steps for the macro sequence by pressing the button for the actual command step. Although the macro may contain up to 19 steps, each button press, including those used to change devices, counts as a step. The **Program/SPL Indicator 3** will flash green to confirm each button press as you enter commands.

NOTE: While entering commands for Power On/Off of any device during a macro sequence, press the **Mute Button 38**. DO NOT press the actual Power Button.

3. When all the steps have been entered, press the **Sleep Button 9** to enter the commands. The red light under the **Input Selectors 5 6** will blink and then turn off.

Example: To program the **Macro 1 Button 23** so that it turns on the AVR 220, TV and a Cable Box, follow these steps:

- Press the **Macro 1 23** and **Mute 38** buttons at the same time and then release them.
- Note that the **Program/SPL Indicator 3** will flash amber.
- Press the **AVR Selector 6**.
- Press the **Mute Button 38** to store the AVR 220's Power On command.
- Press the **VID2 Input Selector Button 5** to indicate the next command is to be transmitted to the TV.
- Press the **Mute Button 38** to store the TV Power On Command.

- Press the **VID3 Input Selector Button 5** to indicate the next command is to be transmitted to the cable box.
- Press the **Mute Button 38** to store the Cable Power On command.
- Press the **Sleep Button 9** to complete the process and store the macro sequence.

After following these steps, each time you press the **Macro 1 Button 23**, the remote will send the Power On/Off command to the AVR 220, the television and the cable box with a single button press.

Erasing Macro Commands

To erase the commands that have been programmed into one of the Macro buttons, follow these steps:


1. Press the **Mute Button 38** and the **Macro Button 23** that contains the commands you wish to erase.
2. Note that the **Program/SPL Indicator 3** will flash amber, and the LED under the **AVR Selector 6** will turn red.
3. Within ten seconds, press the **Surround Mode Selector/Channel Down Button 10**.
4. The red LED under the **AVR Selector 6** will go out, and the **Program/SPL Indicator 3** will turn green and flash three times before it goes out.
5. When the **Program/SPL Indicator 3** goes out, the Macro has been erased.

Programmed Device Functions

Once the AVR 220's remote has been programmed for the codes of other devices, press the appropriate **Input Selector 5** to change the remote from controlling the AVR 220 to controlling the additional product. When you press any one of the selectors, it will briefly flash in red to indicate that you have changed the device being controlled.

When operating a device other than the AVR 220, the controls may not correspond exactly to the function printed on the remote or button. Some commands, such as the Volume Control, are the same as they are with the AVR 220. Other buttons will change their function so that they correspond to a secondary label on the remote. For example, the Sleep and Surround mode selector buttons also function as the Channel Up and Channel Down

The diagram below shows the button numbers used in the Function List on pages 37 and 38.

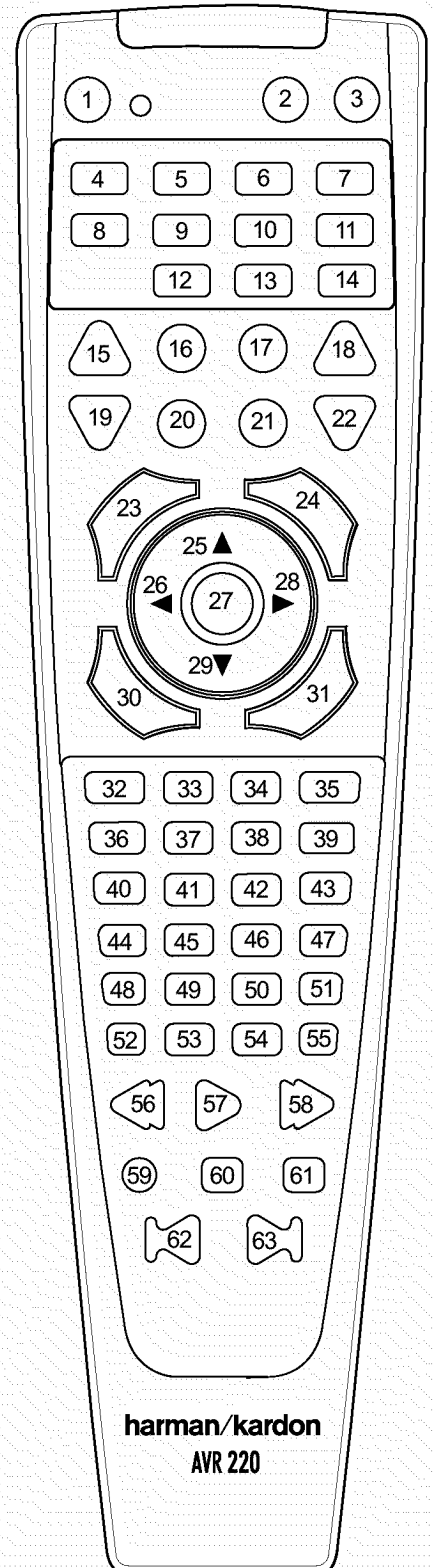

Programming the Remote

buttons when operating most TV sets, VCRs or cable boxes. The Channel Up/Down indication is printed directly on the remote. For many standard CD players, cassette decks, VCRs and DVD functions, the standard function icons are printed on top of the buttons.

For some products, however, the function of a particular button does not follow the command printed on the remote. In order to see which function a button controls, consult the Function List tables on pages 37 and 38. To use those tables, first check the type of device being controlled (e.g., TV, VCR). Next, look at the remote control diagram pictured at the left. Note that each button has a number on it.

To find out what function a particular button has for a specific device, find the button number on the Function List and then look in the column for the device you are controlling. For example, button number 52 is the Macro 1 button for the AVR 220, but it is the "Favorite" button for many cable television boxes and satellite receivers. Button number 31 is the Delay button for the AVR 220, but the Open/Close button for CD players.

NOTE: The numbers used to describe the button functions at the left for the purposes of describing how a button operates are a different set of numbers than those used in the rest of this manual to describe the button functions for the AVR 220.

Notes on Using the AVR 220 Remote With Other Devices.

- Manufacturers may use different code sets within the same product category, such as TV sets or VCRs. They may also change codes for a certain category from one model year to the next. For that reason, it is important that you check to see whether the code set you have entered operates as many controls as possible. If it appears that only a few functions operate, check to see whether another code set will work with more buttons.
- When a button is pressed on the AVR 220 remote, the red light under the **Input Selector 5** for the product being operated should flash briefly. If the Device Control Selector flashes for some but not all buttons for a particular product, it does NOT indicate a problem with the remote but rather that no function is programmed for the button being pushed.

Punch-Through Programming

The AVR 220's remote may be programmed to control one device, such as a TV, while simultaneously directing only certain functions to another device, such as the transport controls of a DVD player, without having to switch back and forth between inputs. You may also use the remote to control the system volume on the AVR without the need to switch between different devices. This is called "Punch-Through," and this section will show you how to program the remote for these functions.

NOTE: All programming for the remote codes needed to operate specific devices, such as a TV, DVD, cable box, satellite receiver or VCR, should be completed before programming punch-through commands.

Volume Punch-Through

The AVR 220's remote may be programmed to operate the **Volume Control 34** and **Mute 38** functions of either the TV or the AVR 220 in conjunction with any of the devices controlled by the remote. For example, since the AVR 220 will likely be used as the sound system for TV viewing, you may wish to have the AVR 220's volume activated, although the remote is set to run the TV. Either the AVR 220 or TV volume control may be associated with any of the remote's devices. To program the remote for Volume Punch-Through, follow these steps:

- Press the **Input Selector 5** for the unit you will be using (e.g., TV) when you wish to have Volume Punch-Through to your audio system active and the **Mute Button 38** at the same time until the red light appears under the **Input Selector 5** and note that the **Program/SPL Indicator 3** will flash amber.
- Press the **Volume Up Button 34** and note that the **Program/SPL Indicator 3** will stop flashing and stay amber.
- Press either the **AVR Selector 6** or the **Input Selector 5**, depending on which system's volume control you wish to have attached for the punch-through mode. The **Program/SPL Indicator 3** will blink green three times and then go out to confirm the data entry.

Example: To have the AVR 220's volume control activated even though the remote is set to control the TV, first press the **Video/TV Input Selector 5** and the **Mute Button 38** at the same time. Next, press the **Volume Up Button 34**, followed by the **AVR Input Selector 6**.

NOTE: Should you wish to return the remote to the original configuration after entering a Volume Punch-Through, you will need to repeat the steps shown above. However, press the same Input Selector in Steps 1 and 3.

Channel Control Punch-Through

The AVR 220's remote may be programmed to operate so that the channel control function for either the TV, cable or satellite receiver used in your system may be used in conjunction with one of the other devices controlled by the remote. For example, while using and controlling the VCR, you may wish to change channels on a cable box or satellite receiver without having to change the device selected by the AVR 220 or the remote. To program the remote for Channel Control Punch-Through, follow these steps:

- Press the **Input Selector Button 5** for the device you will be using (e.g., VCR) when you wish to have Channel Punch-Through active and the **Mute Button 38** at the same time until the red light appears under the **Input Selector 5** and the **Program/SPL Indicator 3** flashes amber.
- Press the **Volume Down Button 34**. The **Program/SPL Indicator 3** will stop flashing and stay amber.
- Press and release the **Input Selector Button 5** for the device that will be used to change the channels. The **Program/SPL Indicator 3** will blink green three times and then go out to confirm the data entry.

Example: To control the channels using your Cable Box or Satellite Receiver while the remote is set to control the VCR, first press the **VID1/VCR Input Selector Button 5** and the **Mute Button 38** at the same time. Next, release them and press the **Volume Down Button 34**, followed by the **VID2/TV Input Selector Button 5**.

Programming the Remote

NOTE: To remove the Channel Control Punch-Through and return the remote to its original configuration, repeat the steps shown above.

However, press the **VID1/VCR Input Selector 5** in Steps 1 and 3.

Transport Control Punch-Through

The AVR 220's remote may be programmed to operate so that the **Transport Control Functions 24** (Play, Stop, Fast Forward, Rewind, Pause and Record) for a VCR, cassette deck, DVD or CD will operate in conjunction with one of the other devices controlled by the remote. For example, while using and controlling the TV, you may wish to start or stop your VCR or DVD without having to change the device selected by the AVR 220 or the remote. To program the remote for Transport Control Punch-Through, follow these steps:

1. Press the **Input Selector 5** for the device you will be using (e.g., TV) when you wish to have Transport Control Punch-Through active and the **Mute Button 38** at the same time until the red light appears under the **Input Selector 5** and the **Program/SPL Indicator 3** flashes amber.
2. Press the **Play Button 24**. The **Program/SPL Indicator 3** will stop flashing and stay amber.
3. Press and release the **Input Selector Button 5** for the device whose transport mechanism will be controlled (e.g., DVD, CD). The **Program/SPL Indicator 3** will blink green three times and then go out to confirm the data entry.

Example: To control the transport of a DVD player while the remote is set to control the TV, first press the **VID2/TV Input Selector Button 5** and the **Mute Button 38** at the same time. Next, release them and press the **Play Button 24**, followed by the **DVD Input Selector Button 5**.

NOTE: To remove the Channel Control Punch-Through and return the remote to its original configuration, repeat the steps shown above. However, press the **VID2/TV Input Selector** in Steps 1 and 3.

Reassigning Device Control Selectors

Although each **Input Selector 5** is normally assigned to the category of product shown on the remote, it is possible to reassign one of these buttons to operate a second device of another type. For example, if you have two VCRs but no satellite receiver, you may program the "SAT" button to operate a second VCR. Before following the normal programming steps for either Three-Digit entry or Auto Search code entry, you must first reassign the button with the following steps:

1. Press the **Input Selector 5** you wish to reassign and the **Mute Button 38** at the same time until the red light appears under the **Input Selector 5** and the **Program/SPL Indicator 3** flashes amber.
2. Press the **Input Selector 5** for the device type you wish to program into the reassigned button.
3. Enter the three-digit code for the specific model you wish the reassigned button to operate.
4. Press the same **Input Selector 5** pressed in Step 1 once again to store the selection. The red LED under the reassigned Input Selector will flash three times and then go out.

Example: To use the CBL/SAT button to operate a second VCR, first press the **CBL/SAT Input Selector 5** and the **Mute Button 38** at the same time until the red light glows under the **CBL/SAT 5** button. Press the **VCR 5** button, followed by the three-digit code for the specific model you wish to control. Finally, press the **CBL/SAT 5** button again.

Resetting the Remote Memory

As you add components to your home theater system, occasionally you may wish to totally reprogram the remote control without the confusion of any commands, macros or "Punch-Through" programming that you may have done. To do this, it is possible to reset the remote to the original factory defaults and command codes by following these steps. Note, however, that once the remote is reset, all commands or codes that you have entered will be erased and will need to be reentered:

1. Press any of the **Input Selector Buttons 5** and the **"0" Button 18** at the same time until the **Program/SPL Indicator 3** begins to flash amber.
2. Press the **"3" Button 18** three times.
3. The red LED under the **Input Selector 5** will go out and the **Program/SPL Indicator 3** will stop flashing and turn green.
4. The **Program/SPL Indicator 3** will remain green until the remote is reset. Note that this may take a while, depending on how many commands are in the memory and need to be erased.
5. When the **Program/SPL Indicator 3** goes out, the remote has been reset to the factory settings.

Function List

No.	Button Name	AVR Function	DVD	CD/CDR	Tape	VCR (VID1)	TV (VID1)	CBL (VID3)	SAT (VID3)
1	Power Off	Power Off	Power Off	Power Off	Power Off	Power Off	Power Off	Power Off	Power Off
2	Power On	Power On	Power On	Power On	Power On	Power On	Power On	Power On	Power On
3	Mute	Mute	Mute	Mute	Mute	Mute	Mute	Mute	Mute
4	AVR	AVR Select							
5	DVD	DVD Input Select	DVD Select						
6	CD	CD Input Select		CD Select					
7	Tape	Tape Input Select			Tape Select				
8	VID1/VCR	Video 1 Select				VCR Select	TV Select	VID3 Select	
9	VID2/TV	Video 2 Select							
10	VID3/CBL/Sat	Video 3 Select							
11	VID4	Video 4 Select							
12	AM/FM	Tuner Select							
13	6 Ch. Select	6 Ch Input Select							
14	SPL				Left	Left	Left	Left	Left
15	Sleep/Channel Up	Sleep					Channel +	Channel +	Channel +
16	Test	Test Tone		Input Select					
17	TV/Video		TV/DVD	CDP Select		TV/VCR	TV/VCR	TV/Cable	TV/Sat
18	Volume Up	Volume Up		Input Level Up		Volume Up	Volume Up	Volume Up	Volume Up
19	Surround Select/Channel Down	Surround Mode Select		CDR Select		Channel –		Channel –	Channel –
20	Night	Night Mode Select							
21	Spare								
22	Volume Down	Volume Down		Input Level Down			Volume Down	Volume Down	Volume Down
23	Channel/Guide	Channel Trim	Title				Info/Guide	Info/Guide	Info/Guide
24	Speaker/Menu	Speaker Adjust	Menu			Menu	Menu	Menu	Menu
25	▲	Move/Adjust Up	Up			Up	Up	Up	Up
26	◀	Move/Adjust Left	Left			Left	Left	Left	Left
27	Set	Set	Enter			Enter	Enter	Enter	Enter
28	▶		Right			Right	Right	Right	Right
29	▼	Move/Adjust Down	Down			Down	Down	Down	Down
30	Digital/Exit	Digital Input Select	Subtitle			Exit	Exit	Exit	Exit
31	Delay/Prev. Ch.	Delay Adjust	Return	Time			Prev Channel	Prev Channel	Prev Channel
32	1		1	1		1	1	1	1
33	2		2	2		2	2	2	2
34	3		3	3		3	3	3	3
35	4		4	4		4	4	4	4
36	5		5	5		5	5	5	5
37	6		6	6		6	6	6	6
38	7		7	7		7	7	7	7
39	8		8	8		8	8	8	8
40	Tun-M	Tuner Mode							
41	9		9	9		9	9	9	9
42	0		0	0		0	0	0	0
43	Memory								
44	Tune Up	Tune Up	Next Chapter						

Function List (continued)

No.	Button Name	AVR Function	DVD	CD/CD-R	Tape	VCR (VID1)	TV (VID1)	CBL (VID3)	SAT (VID3)
45	Direct	Direct Tuner Entry		Track Direct					
46	Clear	Clear	Clear	Clear		Clear	Clear	Clear	Clear
47	Preset Up	Preset Tune Up	Slow Forward						
48	Tune Down	Tune Down	Prev Chapter	Track Increment					
49	OSD	OSD				OSD	OSD	OSD	OSD
50	D. Skip		Disc Skip	Disc Skip	Stop	Stop			
51	Preset Down	Preset Tune Down	Slow Rev	Intro Scan					
52	M1		Open/Close	Open/Close		Cancel	Sleep	PPV	Cancel
53	M2		Subtitle On/Off	Repeat				Fav	Fav
54	M3		Audio Select	Random Play				Bypass	Next
55	M4		Angle Select					Music	Alt
56	Rewind		R. Search	R. Search	Rewind	Rewind		Day -	Day -
57	Play/Reverse Play		Play	Play	Play	Play			
58	Fast Forward		F. Search	F. Search	Fast Fwd	Fast Fwd		Day +	Day +
59	Record			Record	Record	Record			
60	Stop		Stop	Stop	Stop	Stop			
61	Pause		Pause	Pause	Pause	Pause			
62	Skip Down		Skip -	Skip -		Scan -		Page -	Page -
63	Skip Up		Skip +	Skip +		Scan +		Page +	Page +

Setup Code Table: TV

Manufacturer/Brand	Setup Code Number												
A MARK	103	132											
ADMIRAL	192												
AKAI	123	160											
AMPRO	164												
ANAM	045	103	106	109	112	122							
AOC	103	123	128										
BLAUPUNKT	084												
BROKSONIC	205	206											
CANDLE	123	128											
CAPEHART	059												
CENTURION	123	171											
CENTRONIC	045												
CITIZEN	045	123	128	132									
CLASSIC	045												
CONCERTO	128												
CONTEC	045												
CORANDO	172												
CORONADO	132												
CRAIG	045	157	158	159									
CROWN	045	132											
CURTIS MATHES	123	128	132										
CXC	045												
DAEWOO	045	087	102	105	106	108	111	114	116	119	127	128	132
DAYTRON	128	132											
DIGI LINK	200												
DYNASTY	045												
DYNATECH	063												
ELECTROHOME	115	132											
EMERSON	045	123	128	132	139	157	158	159	162	205			
FUNAI	045												
FUTURETECH	045												
GE	087	121	123	128	133	145	159	163					
GOLDSTAR	101	103	110	128	132								
GRUNDIG	193												
HALL MARK	128												
HARMAN KARDON	201												
HITACHI	123	128	132	144	147								
INFINITY	148												
INKEL	120												
JBL	148												
JC PENNEY	115	123	128	132	145								
JENSEN	019												
JVC	079	087	134										
KAWASHO	173												
KEC	045												
KENWOOD	123	204											
KMC	132												
KTV	045	123	132	162									
LLOYTRON	172	173											
LODGENET	069												
LOGIK	069												
LUXMAN	128												
LXI	077	145	148										
MAGNAVOX	123	128	132	145	148								
MARANTZ	115	123	148										
MATSUI	148												
MEMOREX	069	128											

Setup Code Table: TV (continued)

METZ	084
MGA	115 123 128
MINERVA	084
mitsubishi	077 115 123 128 160 167 168
MTC	175 176
NATIONAL	148 177 179 180 181 182
NEC	115 121 123 125
NIKEI	045
ONKING	045
ONWA	045
OPTONICA	077
ORION	207 208 209 220 211
PANASONIC	087 148 169
PHILCO	045 115 123 128 132 148
PHILIPS	123 128 132 145 148
PIONEER	024 123 128 213 214
PORTLAND	128 132
PROSCAN	133
PROTON	059 122 128 132 165
QUASAR	087
RADIO SHACK	045 128 132 180 196 197
RCA	115 123 128 133 145 161 163
REALISTIC	045 196 197
RUNCO	152 153
SAA	183
SAMPO	059 123 128
SAMSUNG	124 128 132 145
SANYO	054
SCOTT	045 128 132
SEARS	128 132 145
SHARP	077 128 132
SIEMENS	084
SIGNATURE	069
SONY	117 130 136 194 212
SOUNDESIGN	045 128
SPECTRICON	103
SSS	045
SYLVANIA	123 128 145 148
SYMPHONIC	184
TANDY	077
TATUNG	063
TECHNICS	080
TECHWOOD	128
TEKNIKA	045 069 115 123 128 132
TELERENT	069
TERA	156
THOMSON	190 191
TMK	128
TOSHIBA	063 129 202
TOTEVISION	132
VIDEO CONCEPTS	160
VIDTECH	128
WARDS	069 128 132 148
YAMAHA	123 128
YORK	128
YUPITERU	045
ZENITH	069 090
ZONDA	103

Setup Code Table: VCR

Manufacturer/Brand	Setup Code Number
AIWA	040
AKAI	048 108 109 126
AMPRO	076
ASA	134
AUDIO DYNAMICS	018 048
BROKSONIC	110 147
CANDLE	134 135
CANON	135 140
CAPEHART	094
CITIZEN	134
CRAIG	045 116
DAEWOO	017 094 104
DAYTRON	094
DBX	018 048
DYNATECH	040
EMERSON	013 040 042 110 112
FISHER	017
FUNAI	040
GE	076 095 124
GO VIDEO	113
GOLDSTAR	018 107
HARMAN KARDON	018 049
HITACHI	040 048
JC PENNEY	018 045
JENSEN	048
JVC	018 048 111 132
KENWOOD	020 048
LLOYD	040
LXI	020 040
MAGIN	045
MAGNAVOX	040
MARANTZ	018
MEMOREX	017 020 040 076
MGA	049
MITSUBISHI	049 131
MULTITECH	040
NAD	139
NATIONAL	140
NEC	018 048
NORDMENDE	048
OPTIMUS	159
ORION	147
PANASONIC	125 150 167 172
PHILCO	040
PHILIPS	040 075
PORTLAND	094
PULSAR	076
QUASAR	001 125
RADIO SHACK	134 140 142 158 159
RCA	095 124 125 157 172
REALISTIC	017 020 040 045 159

Setup Code Table: VCR (continued)

SALORA	020
SAMSUNG	045 095 105 109
SANSUI	048 116 147
SANYO	017 020
SCOTT	110 112
SEARS	017 020
SHARP	129 156
SONY	080 129
SOUNDESIGN	040
SYLVANIA	040
SYMPHONIC	040
TANDY	017 040
TASHICO	134
TATUNG	048
TEAC	040 048
TEKNIKA	040
THOMAS	040
TMK	013
TOSHIBA	112 155
TOTEVISION	045
UNITECH	045
VECTOR RESEARCH	018
VIDEO CONCEPTS	018 040
VIDEOSONIC	045
WARDS	040 045 112
YAMAHA	018 040 048
ZENITH	040 076 083

Setup Code Table: CD

Manufacturer/Brand	Setup Code Number									
ADCOM	063	069								
AIWA	072	111	118	156	170					
AKAI	050	177	184							
AUDIO TECHNICA	053									
AUDIOACCESS	125									
AUDIOFILE	211									
BSR	044									
CALIFORNIA AUDIO	015	109								
CAPETRONIC	070									
CARRERA	087									
CARVER	136	140	141	143	144	145	185	186		
CASIO	117	122	166							
CLARINETTE	122	166								
DENON	187	188	213							
EMERSON	052	093	108							
FISHER	055	068								
FRABA	117									
FUNAI	126									
GE	164									
GENEXXA	108									
GOLDSTAR	016	087								
HAITAI	099	214								
HARMAN KARDON	001	002	025	054	190	218	219			
HITACHI	093									
INKEL	216									
JC PENNEY	098	147								
JENSEN	153									
JVC	176	195	196							
KENWOOD	030	062	078	079	148	151	176	178	181	
LOTTE	108									
LUXMAN	077	102								
LXI	164									
MAGNAVOX	039	113								
MARANTZ	058	084	191	192	193					
MCINTOSH	194									
MCS	080	098								
MITSUMI	152									
MODULAIRE	122	166								
NAD	013	074	197	198						
NAKAMICHI	199	200	201							
NEC	069									
NIKKO	053	055								
ONKYO	037	038	045	046	171	175	202	203		
OPTIMUS	065	089	091	092	099	104	212			
PANASONIC	015	075	109	119	158	183	204			
PHILIPS	039	138	149	209						
PIONEER	071	094	100	112	123	131	161	162	215	
PROTON	220									
QUASAR	015	109								
RADIO SHACK	122	126	213							
RCA	024	081	093	150						

Setup Code Table: CD (continued)

RCX	169
REALISTIC	058 093 095 104 105 108 164 166
SANSUI	047 081 134 157 172
SANYO	033 068 082 095 168
SCOTT	108
SHARP	058 105 114 151 159 167 180 181
SHERWOOD	003 041 058 105 133
SONY	103 115 116 118 132 139 163 205 206 207 208 212 217
SOUNDSTREAM	124
SYMPHONIC	059 110
TAEKWANG	177
TEAC	011 058 085 086 106 107 110 121 137 146 154
THETA DIGITAL	039
TOSHIBA	013 074 097 151 155 173
VECTOR RESEARCH	087
VICTOR	120 130
WARDS	095
YAMAHA	019 031 053 061 135 169
YORK	122 166

Setup Code Table: Tape

Manufacturer/Brand	Setup Code Number
HARMAN KARDON	001

Setup Code Table: Audio

Manufacturer/Brand	Setup Code Number
HARMAN KARDON	001

Setup Code Table: DVD

Manufacturer/Brand	Setup Code Number
APEX DIGITAL	061
DENON	019 051
GE	003 004
GOLDSTAR	005
HARMAN KARDON	001
JVC	006
LG	005 055 064
MAGNAVOX	056
MARANTZ	059
mitsubishi	023
NAD	062
ONKYO	009 048
PANASONIC	024 030 044
PHILIPS	056
PIONEER	041 065
PROCEED	060
PROSCAN	003 004
RCA	003 004
SAMSUNG	053 054
SHARP	028
SONY	043 045
THOMSON	003 004
TOSHIBA	009 058
YAMAHA	030 063
ZENITH	005 055 064

Setup Code Table: SAT

Manufacturer/Brand	Setup Code Number														
ALPHASTAR	472														
ALPHASTAR DBS	450														
ALPHASTAR DSR	442														
BIRDVIEW	425														
CHANNEL MASTER	320	321	322	325	361										
CHAPARRAL	315	316	380	451											
CITOH	360														
DRAKE	313	317	318	413	481										
DX ANTENNA	331	352	362	379	483										
ECHOSTAR	395	397	452	453	463	477	478	484	485						
ELECTRO HOME	392														
FUJITSU	324	329	334												
GENERAL INSTRUMENT	303	311	323	365	403	454	468	474							
HITACHI DBS	455														
HOUSTON TRACKER	463														
HUGHES	437														
JANIEL	366														
JERROLD	454	468	484												
KATHREIN	410														
LEGEND	453														
MACOM	317	365	369	370	371										
MAGNAVOX	461	473													
MEMOREX	453														
NEXTWAVE	423														
NORSAT	373														
OPTIMUS	466														
PANASONIC	366	469													
PANASONIC DBS	457														
PANSAT	420														
PERSONAL CABLE	418														
PHILIPS	375														
PICO	407														
PRESIDENT	381	404													
PRIMESTAR	412	454	468	475											
RCA	301	439	458	465											
REALISTIC	349	480													
SAMSUNG	442														
SATELLITE SERVICE CO	335	388													
SCIENTIFIC ATLANTA	339														
SONY	405														
STAR CHOICE DBS	459														
STARCAST	347														
SUPER GUIDE	327	423													
TEECOM	330	333	390	391	393	409									
TOSHIBA	302	426	460	461	462	470									
UNIDEN	323	332	348	349	350	351	354	355	381	383	389	403	466	479	480
ZENITH	384	385	387	394	419										

Setup Code Table: CBL

Manufacturer/Brand	Setup Code Number
ABC	001 011
ALLEGRO	111
AMERICAST	212
ARCHER	112
BELCOR	113
CABLE STAR	033 113
CITIZEN	111
COLOUR VOICE	085 090
DIGI	114
EAGLE	186
EASTERN	066 070
ELECTRICORD	039
EMERSON	112
FOCUS	116
G.I.	001 011 017 096 097
GC ELECTRONICS	113
GEMINI	032 060
GENERAL	220
GENERAL INSTRUMENT	168
GOODMIND	112
HAMLIN	056 099 100 101 117 175 208
HITACHI	001 188
JASCO	111
JERROLD	001 002 011 017 073 096 097 162 168 188 210
LINDSAY	118
MACOM	191
MAGNAVOX	017 019 068
MOVIE TIME	035 039
NSC	035 190
OAK	197
PACE	179
PANASONIC	053 176 177 189 214
PANTHER	114
PHILIPS	013 019 020 085 090
PIONEER	001 041 119 171 209
POPULAR MECHANICS	116
PRELUDE	120
PRIMESTAR	162
RADIO SHACK	111 112 213
RCA	053 214
RECOTON	116
REGAL	056 099 100 101 208

Setup Code Table: CBL (continued)

REMBRANT	032
SAMSUNG	072 186
SCIENTIFIC ATLANTA	183 203
SEAM	121
SIGNATURE	001 188
SPRUCER	053 081 177 189
STARCOM	002 011 163
STARGATE	120
TANDY	024
TELECAPATION	028
TEXSCAN	036
TFC	122
TIMELESS	123
TOCOM	170 205
UNITED CABLE	011
UNIVERSAL	033 034 039 042 113
VIDEOWAY	124 211
VIEWSTAR	019 025 086 089 190
ZENITH	065 125 211
ZENTEK	116

Troubleshooting Guide

Your AVR 220 receiver has been designed to provide many years of trouble-free service. In the event that you are experiencing difficulties, please check the suggestions below for a possible solution to your problem. Additional information on the AVR 220, including updated information and user hints, is available from our Web site at www.harmankardon.com.

SYMPTOM	CAUSE	SOLUTION
Unit does not function when Main Power Switch is pushed	<ul style="list-style-type: none"> • No AC Power 	<ul style="list-style-type: none"> • Make certain AC power cord is plugged into a live outlet • Check to see whether outlet is switch-controlled
Display lights, but no sound or picture	<ul style="list-style-type: none"> • Intermittent input connections • Mute is on • Volume control is down 	<ul style="list-style-type: none"> • Make certain that all input and speaker connections are secure • Press Mute button • Turn up volume control
Unit turns on, but front-panel display does not light up	<ul style="list-style-type: none"> • Display brightness is turned off 	<ul style="list-style-type: none"> • Follow the instructions in the Display Brightness section on page 31 so that the display is set to VFD FULL
No sound from any speaker; light around power switch is red	<ul style="list-style-type: none"> • Amplifier is in protection mode due to possible short • Amplifier is in protection mode due to internal problems 	<ul style="list-style-type: none"> • Check speaker wire connections for shorts at receiver and speaker ends • Contact your local Harman Kardon service center, which you can locate by visiting our Web site at www.harmankardon.com
No sound from surround or center speakers	<ul style="list-style-type: none"> • Incorrect surround mode • Input is monaural • Incorrect configuration • Stereo or Mono program material 	<ul style="list-style-type: none"> • Select a mode other than Stereo or Dolby 3 Stereo • There is no surround information from mono sources • Check speaker mode configuration • The surround decoder may not create center- or rear-channel information from nonencoded programs
Unit does not respond to remote commands	<ul style="list-style-type: none"> • Weak batteries in remote • Wrong device selected • Remote sensor is obscured 	<ul style="list-style-type: none"> • Change remote batteries • Press the AVR selector • Make certain front-panel sensor is visible to remote or connect remote sensor
Intermittent buzzing in tuner	<ul style="list-style-type: none"> • Local interference 	<ul style="list-style-type: none"> • Move unit or antenna away from computers, fluorescent lights, motors or other electrical appliances
Letters flash in the channel indicator display and digital audio stops	<ul style="list-style-type: none"> • Digital audio feed paused 	<ul style="list-style-type: none"> • Resume play for DVD • Check that Digital Input is selected

Processor Reset

In the rare case where the unit's operation or the displays seem abnormal, the cause may involve the erratic operation of the system's memory or microprocessor.

To correct this problem, first unplug the unit from the AC wall outlet and wait at least three minutes. After the pause, reconnect the AC power cord and check the unit's operation. If the system still malfunctions, a system "reset" may clear the problem.

To clear the AVR 220's entire system memory including tuner presets, output level settings, delay times and speaker configuration data,

first put the unit in Standby by pressing the **System Power Control Button** **2**. Next, simultaneously press and hold the **Tone Mode** **6** and the **FM Mode Selector** **12** buttons for three seconds.

The unit will turn on automatically and display the **RESET** message in the **Main Information Display** **5**. Note that once you have cleared the memory in this manner, it is necessary to reestablish all system configuration settings and tuner presets.

NOTE: Resetting the processor will erase any configuration settings you have made for speakers, output levels, surround modes, digital input assignments as well as the tuner presets.

After a reset, the unit will be returned to the factory presets, and all settings for these items must be reentered.

If the system is still operating incorrectly, there may have been an electronic discharge or severe AC line interference that has corrupted the memory or microprocessor.

If these steps do not solve the problem, consult an authorized Harman Kardon service center. You can locate the service center nearest to you by visiting our Web site at www.harmankardon.com.

Technical Specifications

Audio Section

Stereo Mode	
Continuous Average Power (FTC)	
55 Watts per channel, @ < 0.07% THD, 20Hz – 20kHz, both channels driven into 8 ohms	
Five-Channel Surround Modes	
Power Per Individual Channel	
Front L&R channels:	
45 Watts per channel	
@ < 0.07% THD, 20Hz–20kHz into 8 ohms	
Center channel:	
45 Watts @ < 0.07% THD, 20Hz–20kHz into 8 ohms	
Surround channels:	
45 Watts per channel	
@ < 0.07% THD, 20Hz–20kHz into 8 ohms	
Input Sensitivity/Impedance	
Linear (High-Level)	200mV/47k ohms
Signal-to-Noise Ratio (IHF-A)	95dB
Surround System Adjacent Channel Separation	
Analog Source Decoding	45dB
Dolby Digital	55dB
DTS	55dB
Frequency Response	
@ 1W (+0dB, –3dB)	10Hz–100kHz
High Instantaneous Current Capability (HCC)	
	±28 Amps
Transient Intermodulation Distortion (TIM)	
	Unmeasurable
Slew Rate	
	40V/µsec

FM Tuner Section

Frequency Range	87.5–108.0MHz
Usable Sensitivity	IHF 1.3 µV/13.2dBf
Signal-to-Noise Ratio	Mono/Stereo 70dB/68dB
Distortion	Mono/Stereo 0.2%/0.3%
Stereo Separation	40dB @ 1kHz
Selectivity	±400kHz, 70dB
Image Rejection	80dB
IF Rejection	90dB

AM Tuner Section

Frequency Range	520–1720kHz
Signal-to-Noise Ratio	45dB
Usable Sensitivity	Loop 500µV
Distortion	1kHz, 50% Mod 0.8%
Selectivity	±10kHz, 30dB

Video Section


Television Format	NTSC
Input Level/Impedance	1Vp-p/75 ohms
Output Level/Impedance	1Vp-p/75 ohms
Video Frequency Response	10Hz–8MHz (–3dB)

General

Power Requirement	AC 120V/60Hz
Power Consumption	68W idle, 540W maximum (2 channels driven)
Dimensions (Max)	
Width	17.3 inches (440mm)
Height	6.5 inches (165mm)
Depth	17.1 inches (435mm)
Weight	31 lb (14.1kg)

Depth measurement includes knobs, buttons and terminal connections.
Height measurement includes feet and chassis.
All features and specifications are subject to change without notice.

Harman Kardon is a registered trademark, and Power for the Digital Revolution is a trademark, of Harman International Industries, Inc.

 is a trademark of Harman International Industries, Inc. (Patent No. 5,386,478).

*Manufactured under license from Dolby Laboratories.
Dolby, Pro Logic II, AC-3 and the Double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. ©1992–1999 Dolby Laboratories, Inc. All rights reserved.

DTS and DTS Surround are trademarks of Digital Theater Systems, Inc.


UltraStereo is a trademark of UltraStereo Corp.

VMAx is a registered trademark of Harman International Industries, Inc., and is an implementation of Cooper Bauck Transaural Stereo under patent license.

Logic 7 is a registered trademark of Lexicon, Inc.

Crystal is a registered trademark of Cirrus Logic Corp.

Notes

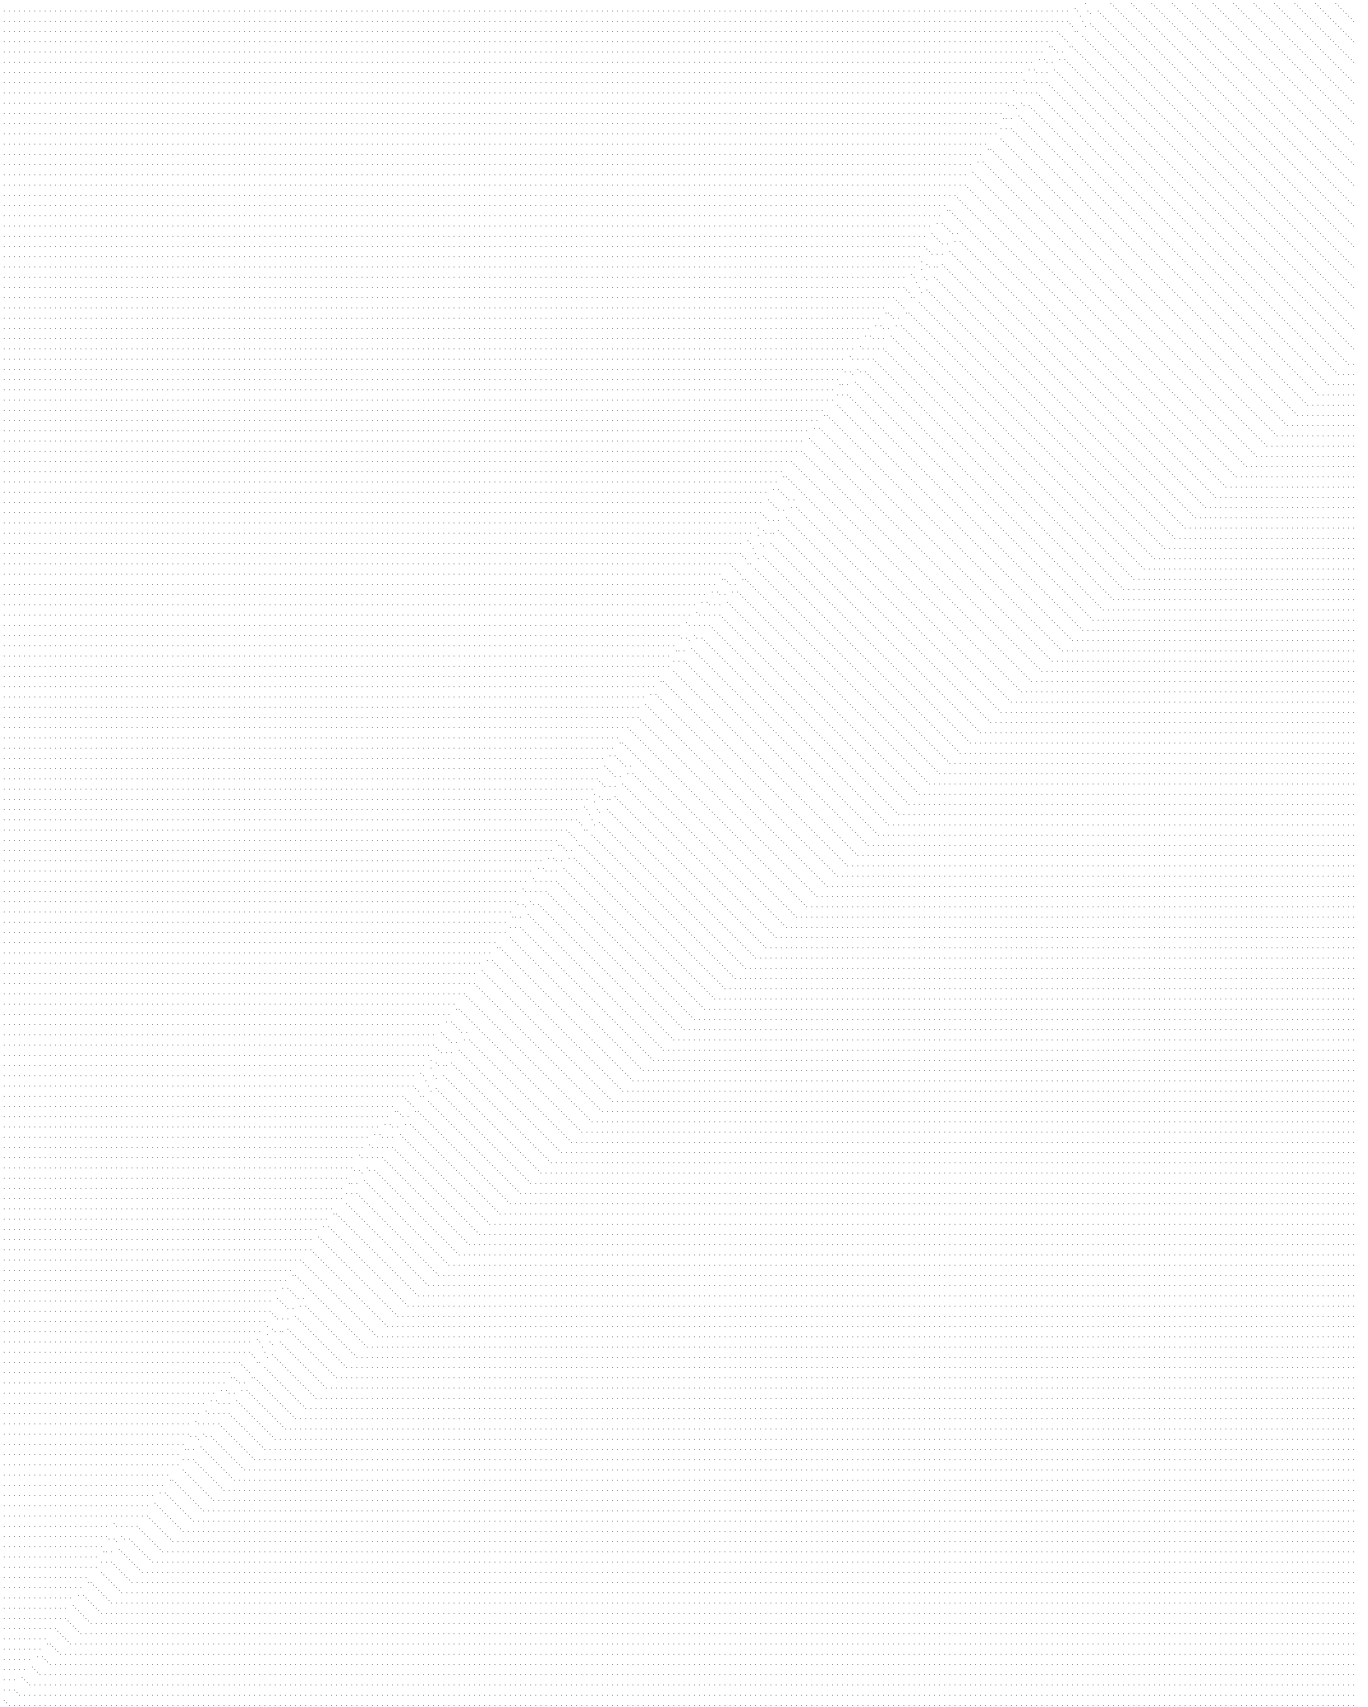

harman/kardon

H A Harman International Company
250 Crossways Park Drive, Woodbury, New York 11797
www.harmankardon.com
© 2001 Harman Kardon, Incorporated
Part No.: J90200012610