


# Quick Use and Setup Guide

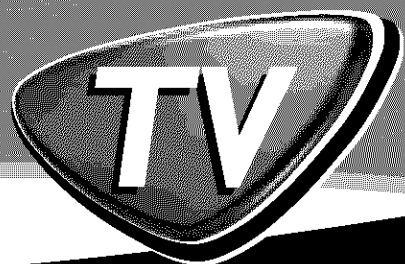

Let's make things better.



PHILIPS

## TABLE OF CONTENTS

<b>Getting Started</b>	
Warning/Important Notice . . . . .1	Setting your TV for the first time . . . . .3-4
Basic Cable Television Connection . . . . .1	Using the On-screen menu . . . . .3
Basic Antenna Television Connection . . . . .1	Using the Language Control . . . . .3
Basic VCR/Accessory Device Connection . . . . .1	Setting the Tuner Mode Control . . . . .3
Basic Television Operation . . . . .2	How to Automatically Program Channels . . . . .4
Basic Remote Control Operation . . . . .2	How to Add and Delete Channels . . . . .4

## IMPORTANT

**NOTE:** This owner's manual is used with several different television models. Not all features (and drawings) discussed in this manual will necessarily match those found with your television set. This is normal and does not require you contacting your dealer or requesting service.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS UNIT TO RAIN OR EXCESSIVE MOISTURE.**

## BASIC TELEVISION CONNECTIONS

### CABLE TV

#### CABLE INPUT/CONVERTER


Your Cable TV input into your home may be a single (75 ohm) cable, or a Converter Box installation. In either case the connection to the TV is very easy. Just put the threaded end of the cable signal to the TV's antenna plug and screw it down finger tight.

NOTE: The connecting cable for the Converter is supplied from the Cable TV Company.

**BEGIN**

**1** If your Cable TV signal is a single round cable (75 ohm) then you're ready to connect to the TV. If you have a Cable Converter Box: Connect the Cable TV signal to the Cable Signal IN(put) plug on the Converter.

**2** Connect the Cable TV cable to the ANTENNA/CABLE plug on the TV. If you have a Cable Converter Box: Connect the OUT(put) plug from the Converter to the 75Ω plug on the TV.

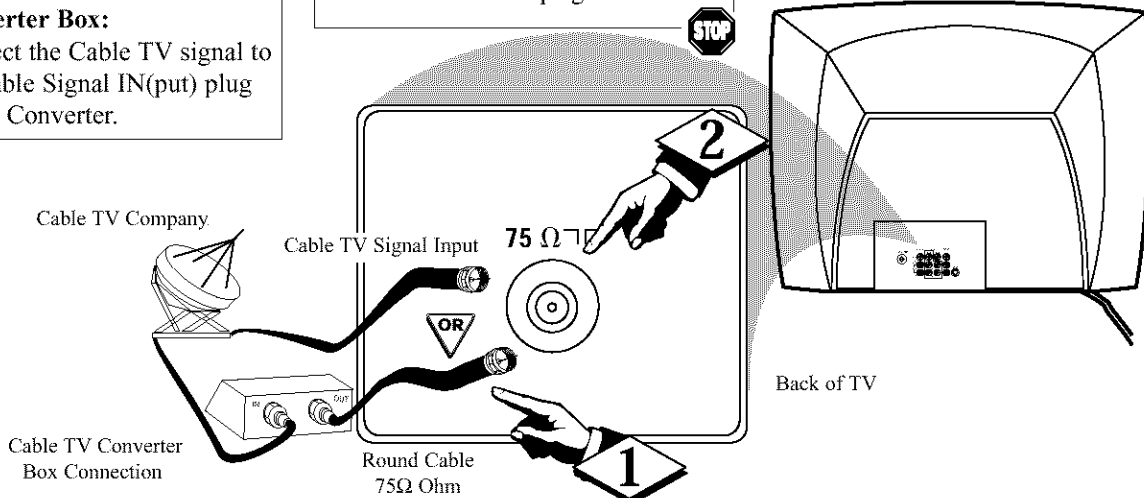

**SMART HELP**

Remember: Set the TV for the type signal you've just connected (see the "Tuner Mode" section on page 3 of this Set-Up Guide.) To select only the channel numbers on your Cable system see "Auto Program" (page 4). If you use a Cable Converter box, set the TV to the same channel as the converter's CH 3/4 switch (on the rear of the converter.)

### ANTENNA

#### COMBINATION UHF/VHF


A combination antenna receives normal broadcast channels (VHF 2-13 and UHF 14-69). Your connection is easy since there is only one 75Ω (ohm) antenna plug on the back of your TV - and that's where the antenna goes.

**BEGIN**

**1** If your antenna has a round cable (75 ohm) on the end, then you're ready to connect it to the TV. If your antenna has flat twin-lead wire (300 ohm), you first need to attach the antenna wires to the screws on a 300 to 75 ohm adapter.

**2** Push the round end of the adapter (or antenna) onto the 75Ω plug on the rear of the TV. If the round end of the antenna wire is threaded, screw it down finger tight.

Note: For homes with separate UHF and VHF antennas you will need an optional combiner to connect to the TV.

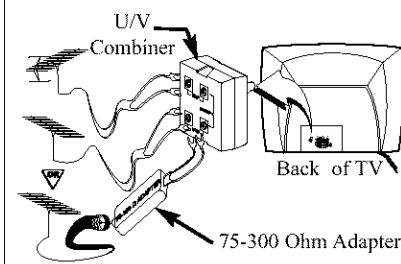

**SMART HELP**

Remember, be sure to set the TV for the type signal you've connected (see the "Tuner Mode" section on page 3 of this Set-Up Guide.) To set the TV to select only the channel numbers in your area see how to "Program" or "Add" channels in memory on page 4 (Auto Program section). To order any optional accessory contact your dealer or call the toll-free accessory ordering number (1-800-851-8885).

### TV TO VCR

#### BASIC CONNECTION


The basic Antenna, or Cable TV, to VCR to TV connection is shown to the right. For more information on other hookups (possible when Cable Converter/Descrambler boxes are included) refer to your accessory VCR and Cable Converter Owner's Manual for details.

**BEGIN**

**1** Connect your Antenna or Cable TV signal to the IN FROM ANT(enna) plug on the VCR.

**2** Connect the OUT TO TV plug on the VCR to the 75Ω plug on the TV (connecting cable supplied with the VCR.)

**3** Refer to the Owner's Manual included with your VCR for other possible connections and TV/VCR operating details.

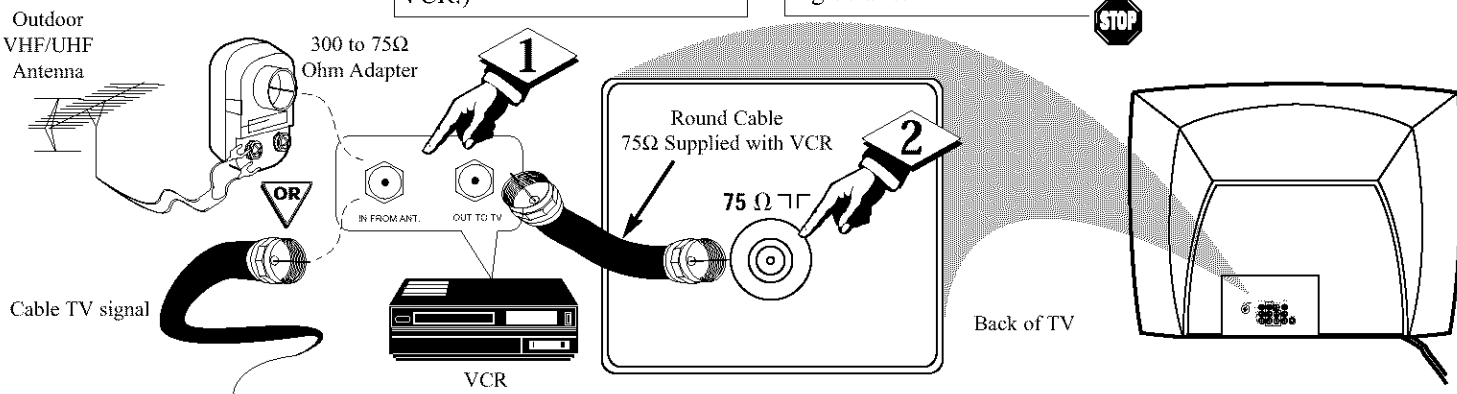

# BASIC TV AND REMOTE CONTROL OPERATION

## TELEVISION

### BEGIN


**1** Press the Power button to turn the TV ON.

**2** Press the Volume + or - buttons to increase or decrease the TV sound. Press both at the same time to display the TV's on-screen menu.


**3** Press the CH  $\nabla$  or  $\Delta$  buttons to select TV channels. These buttons can also be used to make adjustments or selections within the on-screen menu.

### SMART HELP

You can press any button on the front of the TV to turn the TV ON. The tuned channel number will always briefly appear when the TV is first turned ON (and with channel changes).

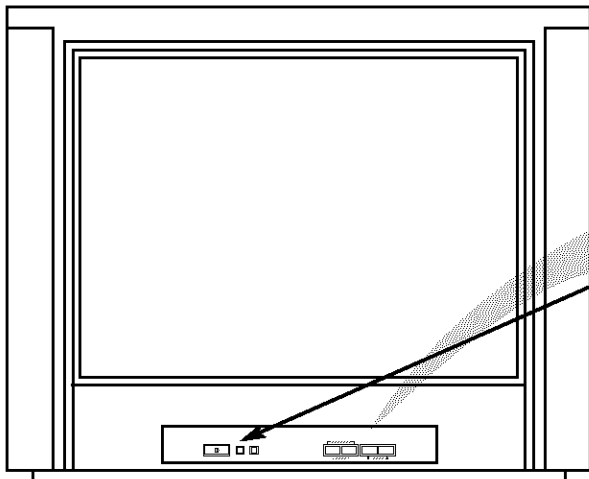

Remote Sensor Window is located on the front of the TV.

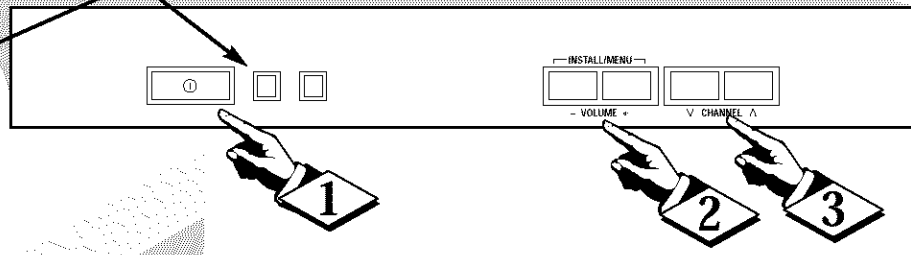

## REMOTE - BATTERIES/OPERATION

To load the supplied batteries into the remote:



### BEGIN

**1. Remove the battery compartment lid on the back of the remote.**

**2. Place the batteries (2-AA) in the remote.** Be sure the (+) and (-) ends of the batteries line up correctly (inside of case is marked).

**3. Reattach the battery lid.**

**4** Slide the TV/VCR/ACC switch to the TV position on the remote control, then point the remote at the remote sensor window when operating the TV with the remote control.

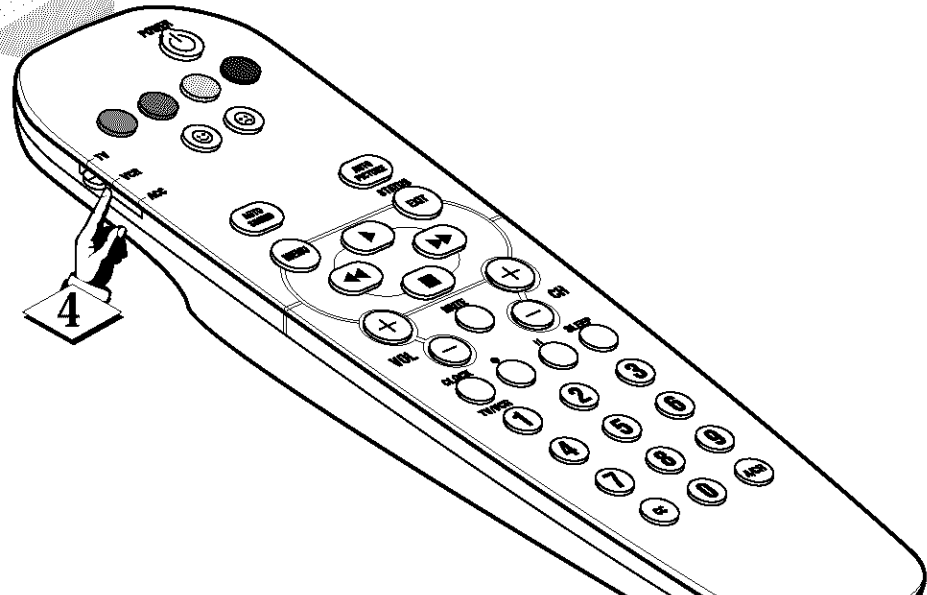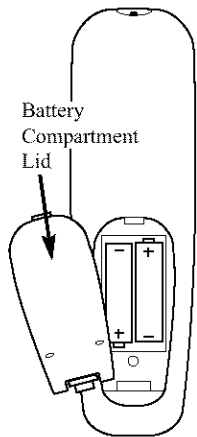

## TV/VCR/ACC MODE SWITCH

The remote's TV/VCR/ACC Switch controls how buttons on the remote are used.

For example:

**With the switch in the "TV" position:**

the Menu, CURSOR  $\blacktriangleright$ ,  $\blacktriangleleft$ ,  $\blacktriangle$  and  $\blacksquare$  buttons are used to select and adjust on-screen TV features.

**With the switch in the "ACC" position:**

the Power, Channel Number, and Channel Up (+) /Down (-) buttons on the remote work with Cable TV Converters.

**With the switch in the "VCR" position:**

the Menu, CURSOR  $\blacktriangleright$ ,  $\blacktriangleleft$ ,  $\blacktriangle$  and  $\blacksquare$  buttons on the remote work Stop, Play, Fast Forward, and other VCR features.

**Note: For more details on how the TV remote works with VCRs and Cable Converters, see the other owner's manual supplied with your TV.**

### SMART HELP

Just a couple of reminders about the STATUS/EXIT button; you can press the STATUS/EXIT button (on the remote) to see what channel the TV is ON, what sound mode (stereo or mono) is present or to remove the on-screen menu from the TV's screen at any time.

**QUADRA SURE Buttons - (Red, Green, Yellow, Blue)** Allows you to store and surf up to 10 channels you choose for each colored button.

**SMILEY Button** - Press to add channels in the "Quadra Surf" lists. Works with all colored buttons.

**TV/VCR/ACC MODE SWITCH** - Slide to position of TV to control TV functions, VCR to control VCR functions and ACC for Cable Converter, DBS, DVD, etc., functions.

**AUTO SOUND Button** - Press repeatedly to choose from different factory pre-defined sound settings. Choose from Personal (how you set the Sound Menu options), Voice (for programming with speaking only), Music (for musical type programs such as concerts), or Theatre (used when watching movies).

**MENU Button** - Press to display the on-screen menu. Also can be used to back out of the on-screen menu until it disappears from the TV's screen.

**VOL(ume) + or - Buttons** - Press the VOL + button to increase the TV's sound level. Press the VOL - button to decrease the TV's sound level.

**MUTE Button** - Press the mute button to eliminate the sound being heard from the TV. "MUTE" will be displayed on the TV's screen. Press again to restore the TV's volume to its previous level.

**CLOCK(TV/VCR) Button** - Press to display the "Timer" menu when in the TV mode. Within this menu set the time, set the TV to tune to a certain channel at a certain time once, or daily. When in the VCR Mode, press to toggle between VCR viewing and TV viewing.

**• (VCR Record) Button** - Press to start a VCR recording of a TV program.

**CC Button** - Press to activate the Closed Captioning options. Repeatedly pressing the CC button will scroll the options available on the TV screen.

**POWER button** - Press the Power button to turn the TV on or off.

**FRONIE Button** - Allows you to delete stored channels within the "Quadra Surf" lists for the colored buttons.

**AUTO PICTURE Button** - Press repeatedly to choose from 5 different factory pre-defined picture settings. Choose from Personal (how you set the Picture Menu adjustment controls), Movies (when watching movies), Sports (for any sporting event), Weak Signal (used when the signal being received is not the best) or Multi Media (for use with video games).

**STATUS/EXIT Button** - Press to display the current channel number. If the on-screen menu is displayed, pressing the Status/Exit button will remove it from the TV's screen.

**CURSOR  $\blacktriangleright$ ,  $\blacktriangleleft$ ,  $\blacktriangle$ , or  $\blacksquare$  Buttons** - Press to navigate, select and adjust controls within the on-screen menu after the Menu button is pressed. These buttons also can be used with a VCR and when the TV/VCR/ACC Switch is in the VCR position. Press to PLAY  $\blacktriangleright$ , REWIND  $\blacktriangleleft$ , FAST FORWARD  $\blacktriangleright\blacktriangleright$ , or STOP  $\blacksquare$  the viewing of a prerecorded video tape.

**CH(annel) + or - Buttons** - Press to select channels in ascending or descending order.

**SLEEP Button** - Press the Sleep button to set the TV to automatically turn itself off after a set period of time. Press repeatedly to select 15, 30, 45, 60, 90, 120, 180 or 240 minutes.

**PAUSE Button** - Press to pause the viewing of a prerecorded video tape. The picture will freeze on the screen until the Play or Pause buttons are pressed again.

**NUMBERED (0-9) Buttons** - Press the numbered buttons to select TV channels or to enter certain values within the on-screen menu. For single channel entries, press the numbered button for the channel you desire. The TV will pause for a second or two before changing to the chosen channel.

**A/CH Button - (Alternate Channel)** Press to toggle between the last view channel and the channel presently being viewed.

# SETTING UP YOUR TELEVISION FOR THE FIRST TIME


## MENU

Features for your television can be adjusted from within a MENU shown on the TV's screen. A MENU is nothing more than an on-screen list of features. Some of the features have sub-menus but each MENU item can be adjusted or activated (deactivated) by viewing the screen and simply pressing the proper button.


### BEGIN

- 1 Press the **MENU** button on the remote or the Install/Menu buttons (Volume +, -) on the TV simultaneously to show the on-screen menu.
- 2 Press the **CURSOR UP** or **DOWN** buttons on the remote (or the Volume +, - buttons on the TV) to pick any of the on-screen menu features.
- 3 Press the **CURSOR RIGHT** or **LEFT** buttons on the remote (or Channel V or ^ buttons on the TV) to adjust any highlighted on-screen feature.
- 4 Press the **STATUS/EXIT** button on the remote to clear the menu from the screen after an adjustment. You can also just wait a few seconds after you finish the feature adjustment and the menu will disappear from the screen automatically.


Picture Menu

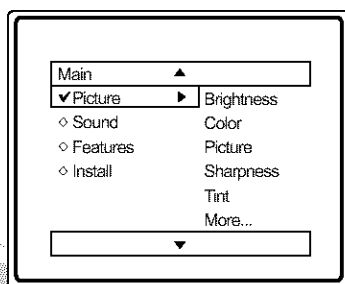


Sound Menu

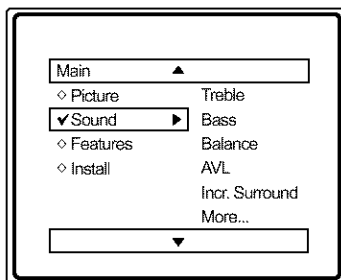

Features Menu

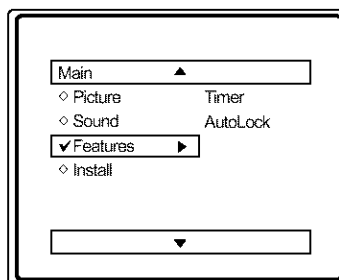

Install Menu

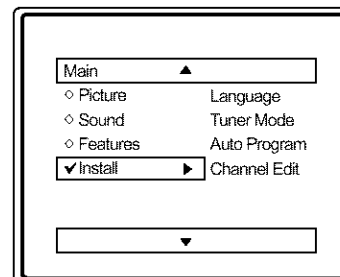

### SMART HELP

If you pass the feature you want or want to go back in the menus, press the **MENU** button on the remote to move back to the previous MENU.

The MENU has a list of features, some with sub-menus. All the on-screen menu features can be adjusted or activated (deactivated).

The on-screen menu will time out and disappear from the screen when you finish, or you can press the **STATUS/EXIT** button to clear the menu from the screen.







## LANGUAGE

For our Spanish speaking TV owners an on-screen LANGUAGE option is present. With the LANGUAGE control you can set the TV's on-screen menu to be shown in either English or Spanish.

### BEGIN

- 1 Press the **MENU** button on the remote to show the on-screen menu.
- 2 Press the **CURSOR UP** or **DOWN** buttons to scroll through the on-screen menu until the word **INSTALL** is highlighted.
- 3 Press the **CURSOR RIGHT** button to display the **INSTALL** menu features.
- 4 Press **CURSOR UP** or **DOWN** buttons to scroll the Install features until the word **LANGUAGE** is highlighted.
- 5 Press the **CURSOR RIGHT** button repeatedly to select **ENGLISH** or **ESPAÑOL** (Spanish).
- 6 When finished, press the **STATUS/EXIT** button to remove the menu from the TV's screen.

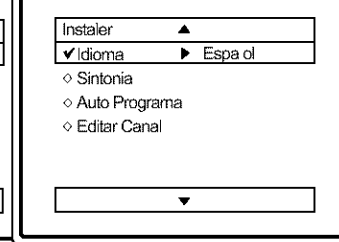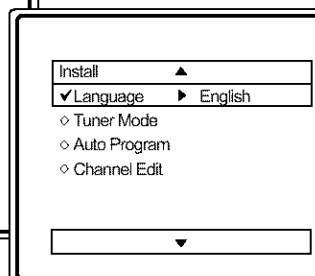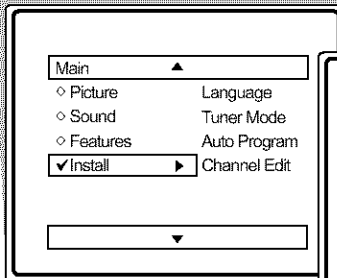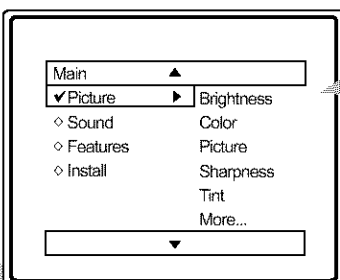

### SMART HELP

Remember, the Language control only makes the TV's on-screen MENU items appear in English or Spanish text.






It does not change the other on-screen text features such as Closed Caption (CC) TV shows.

## TUNER MODE

The **TUNER MODE** control allows you to change the TV's signal input to either **ANTENNA**, **CABLE** or **AUTO** mode. It's important for the TV to know what type of signal to look for. (From a Cable TV signal or a normal Antenna signal.) In the **AUTO** mode, when the **AUTO PROGRAM** feature is activated, the TV will automatically choose the correct mode.

### BEGIN

- 1 Press the **MENU** button on the remote to show the on-screen menu.
- 2 Press the **CURSOR UP** or **DOWN** buttons to scroll through the on-screen menu until the word **INSTALL** is highlighted.
- 3 Press the **CURSOR RIGHT** button to display the **INSTALL** menu features.
- 4 Press **CURSOR UP** or **DOWN** buttons to scroll the Install features until the words **TUNER MODE** is highlighted.
- 5 Press the **CURSOR RIGHT** button to select either **ANTENNA**, **CABLE**, or **AUTO** mode.
- 6 When finished, press the **STATUS/EXIT** button to remove the on-screen menu from the TV's screen.

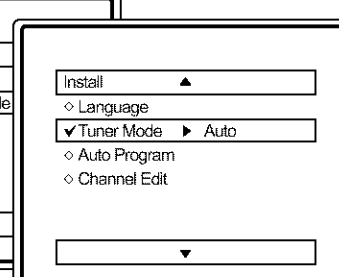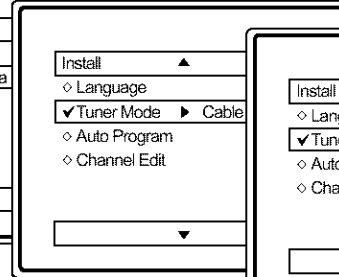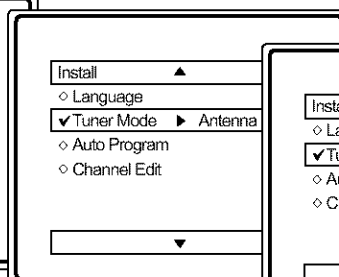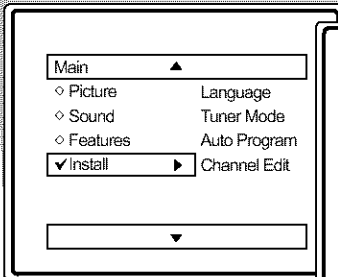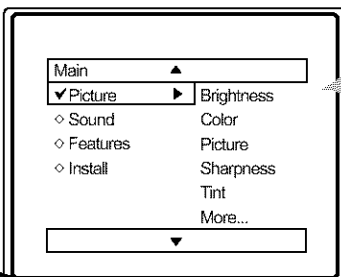

### SMART HELP

When **CABLE** is selected, channels 1-125 are available. When **ANTENNA** is selected, channels 2-69 are available.

When **AUTO** is selected, the TV will automatically set itself to the correct mode based on the type of signal it detects when the **AUTO PROGRAM** feature is activated.

# SETTING UP YOUR TELEVISION FOR THE FIRST TIME

## AUTO PROGRAM

Your TV can automatically set itself for local area (or Cable TV) channels. This makes it easy for you to select only the TV stations in your area when the CHANNEL (+), (-) buttons are pressed.

Note: Make sure the antenna or cable signal connection has been completed before AUTO PROGRAM is activated.

### BEGIN

1 Press the **MENU** button on the remote to show the on-screen menu.

2 Press the **CURSOR UP** or **DOWN** buttons to scroll through the on-screen menu until the word **INSTALL** is highlighted.

3 Press the **CURSOR RIGHT** button to display the **INSTALL** menu features.






4 Press **CURSOR UP** or **DOWN** buttons to scroll the Install features until the words **AUTO PROGRAM** are highlighted.

5 Press the **CURSOR RIGHT** button to start the Auto Program scanning of channels. Auto Programming will store all available channels in the TV's memory then tune to the lowest available channel when done.

6 When finished, press the **STATUS/EXIT** button to remove the menu from the TV's screen.

STOP

Auto Program will scan for all available channels within the Antenna/Cable signal. When finished, the TV will go back to the **INSTALL** menu.

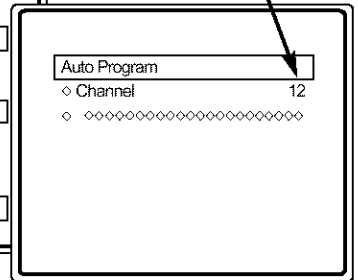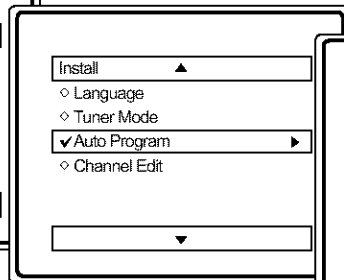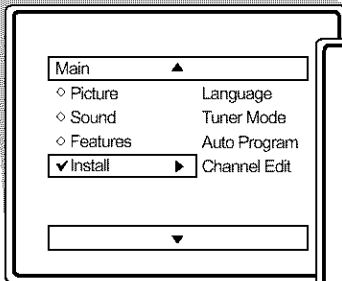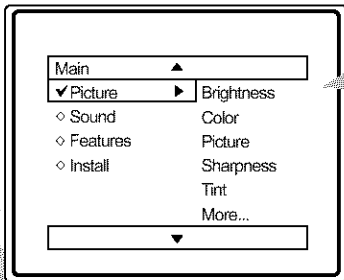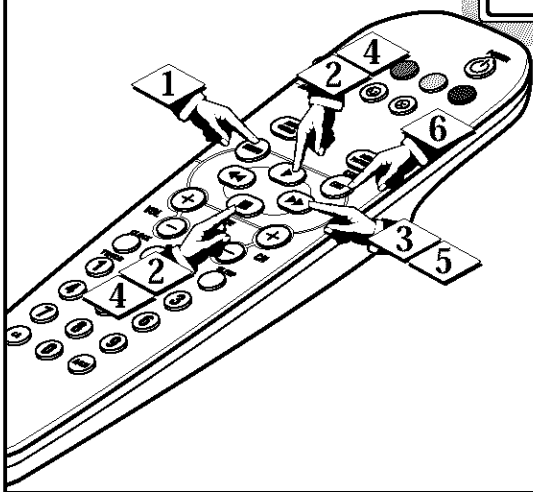

### SMART HELP

Try it out. Press the **CHANNEL (+), (-)** buttons and see which channels have been added to the TV's memory.

If you want to delete any unwanted channels from the TV's memory, refer to the section on adding and removing channels (**Channel Edit**) below.

## CHANNEL EDIT

Channel Edit makes it easy for you to **ADD** or **DELETE** channels from the list of channels stored in the TV's memory.

### BEGIN

1 Press the **MENU** button on the remote to show the on-screen menu.

2 Press the **CURSOR UP** or **DOWN** buttons to scroll through the on-screen menu until the word **INSTALL** is highlighted.

3 Press the **CURSOR RIGHT** button to display the **INSTALL** menu features.

4 Press the **CURSOR UP** or **DOWN** buttons to scroll the Install features until the words **CHANNEL EDIT** are highlighted.

5 Press the **CURSOR RIGHT** button to display the **CHANNEL EDIT** options.

6 With the **CHANNEL EDIT** options displayed, and **PROGRAM NO.** highlighted; enter the channel number (with the **NUMBERED** or the **CH + or -** buttons) you wish to add (Skipped **OFF**), or delete (Skipped **ON**) from the TV's memory.

7 Scroll down (using the **CURSOR DOWN** button) to highlight the word **SKIPPED**.

8 Now use the **CURSOR RIGHT** button to toggle between **ON** or **OFF**. If **ON** is selected the channel is skipped when scrolling channels with the **CH + or -** buttons. If **OFF** is selected the channel is not skipped when scrolling channels with the **CH + or -** buttons.

9 When finished, press the **STATUS/EXIT** button to remove the menu from the TV's screen.

STOP

