

DENON


DVD VIDEO PLAYER

DVD-2800

OPERATING INSTRUCTIONS

MODE D'EMPLOI

INSTRUCCIONES DE OPERACION

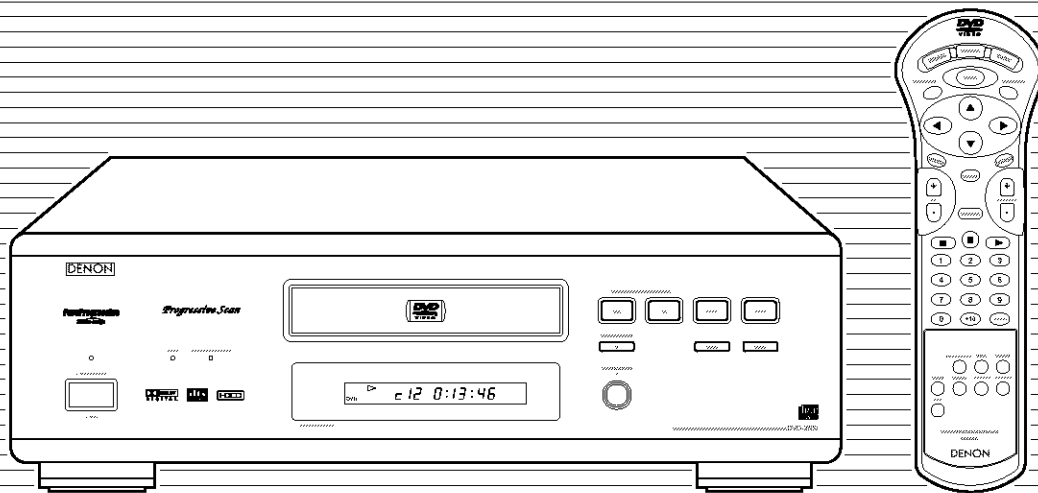

| | | | | | |
|----------------------------|--------|----|---|--------|-----|
| FOR ENGLISH READERS | PAGE | 6 | - | PAGE | 49 |
| POUR LES LECTEURS FRANCAIS | PAGE | 50 | - | PAGE | 93 |
| PARA LECTORES DE ESPAÑOL | PAGINA | 94 | - | PAGINA | 137 |

IMPORTANT TO SAFETY

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION:

1. Handle the power supply cord carefully

Do not damage or deform the power supply cord. If it is damaged or deformed, it may cause electric shock or malfunction when used. When removing from wall outlet, be sure to remove by holding the plug attachment and not by pulling the cord.

2. Do not open the top cover

In order to prevent electric shock, do not open the top cover. If problems occur, contact your DENON DEALER.

3. Do not place anything inside

Do not place metal objects or spill liquid inside the DVD video player. Electric shock or malfunction may result.

Please, record and retain the Model name and serial number of your set shown on the rating label.

Model No. DVD-2800 Serial No. _____

NOTE:

This DVD video player uses the semiconductor laser. To allow you to enjoy music at a stable operation, it is recommended to use this in a room of 5 °C (41 °F) ~ 35 °C (95 °F).

CAUTION:

USE OF CONTROLS OR ADJUSTMENTS OR REFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

THE COMPACT DISC PLAYER SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

• FOR CANADA MODEL ONLY

CAUTION


TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

• POUR LES MODELE CANADIENS UNIQUEMENT


ATTENTION

POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTERODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU' AU FOND.

FRONT PANEL
PANNEAU AVANT
PANEL FRONTAL

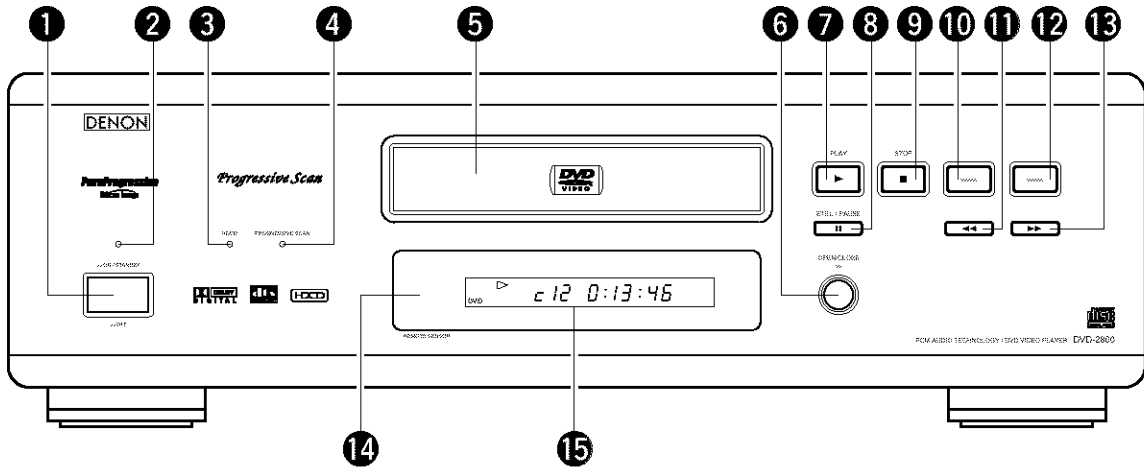

REAR PANEL
PANNEAU ARRIERE
PANEL TRASERO

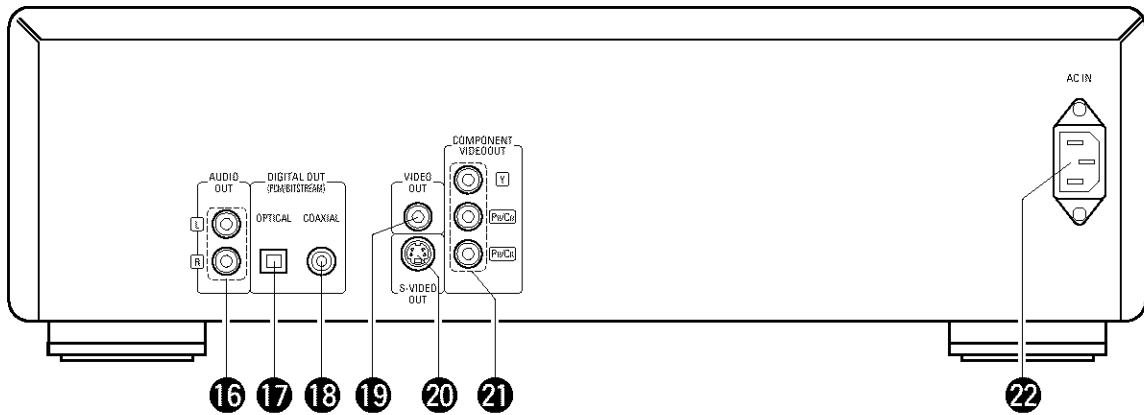


SAFETY INSTRUCTIONS









1. Read Instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and use instructions should be followed.
5. Water and Moisture – The appliance should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Carts and Stands – The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Wall or Ceiling Mounting – The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation – The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. Grounding or Polarization – Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.



12. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
14. Cleaning – The appliance should be cleaned only as recommended by the manufacturer.
15. Power Lines – An outdoor antenna should be located away from power lines.
16. Outdoor Antenna Grounding – If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.
17. Nonuse Periods – The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
18. Object and Liquid Entry – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
19. Damage Requiring Service – The appliance should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
20. Servicing – The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

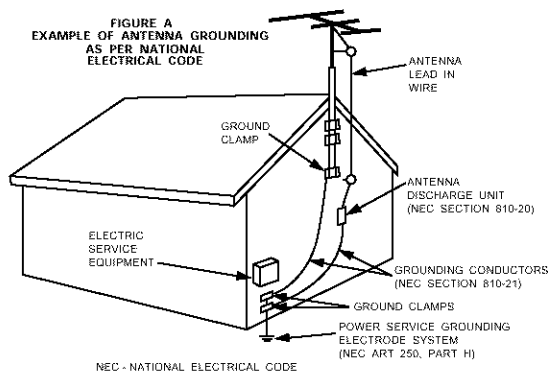

NOTE ON USE / OBSERVATIONS RELATIVES A L'UTILISATION / NOTAS SOBRE EL USO
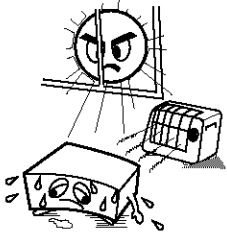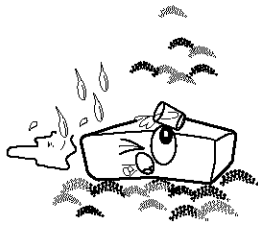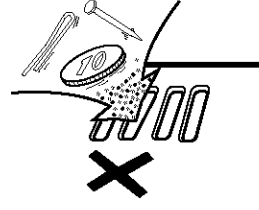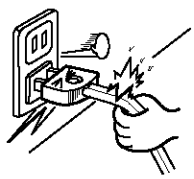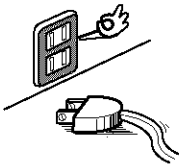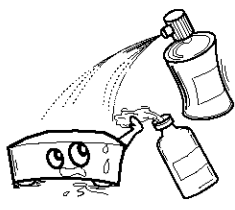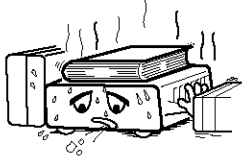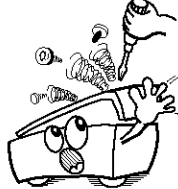
| | | |
|--|--|---|
|  <ul style="list-style-type: none"> • Avoid high temperatures. Allow for sufficient heat dispersion when installed on a rack. • Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère. • Evite altas temperaturas. Permite la suficiente dispersión del calor cuando está instalado en la consola. |  <ul style="list-style-type: none"> • Keep the set free from moisture, water, and dust. • Protéger l'appareil contre l'humidité, l'eau et lapoussière. • Mantenga el equipo libre de humedad, agua y polvo. |  <ul style="list-style-type: none"> • Do not let foreign objects in the set. • Ne pas laisser des objets étrangers dans l'appareil. • No deje objetos extraños dentro del equipo. |
|  <ul style="list-style-type: none"> • Handle the power cord carefully. Hold the plug when unplugging the cord. • Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon. • Maneje el cordón de energía con cuidado. Sostenga el enchufe cuando desconecte el cordón de energía. |  <ul style="list-style-type: none"> • Unplug the power cord when not using the set for long periods of time. • Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes. • Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo. |  <ul style="list-style-type: none"> • Do not let insecticides, benzene, and thinner come in contact with the set. • Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil. • No permita el contacto de insecticidas, gasolina y diluyentes con el equipo. |
| <ul style="list-style-type: none"> • Handle the power cord carefully. Hold the plug when unplugging the cord. • Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon. • Maneje el cordón de energía con cuidado. Sostenga el enchufe cuando desconecte el cordón de energía. |  <p>* (For sets with ventilation holes)</p> <ul style="list-style-type: none"> • Do not obstruct the ventilation holes. • Ne pas obstruer les trous d'aération. • No obstruya los orificios de ventilación. |  <ul style="list-style-type: none"> • Never disassemble or modify the set in any way. • Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre. • Nunca desarme o modifique el equipo de ninguna manera. |

Copyrights / Droits d'auteur / Derechos de Autor

■ It is prohibited by law to reproduce, broadcast, rent or play discs in public without the consent of the copyright holder.

■ La reproduction, la diffusion, la location, le prêt ou la lecture publique de ces disques sont interdits sans le consentement du détenteur des droits d'auteur.

■ De acuerdo con las leyes está prohibido reproducir, emitir, alquilar o interpretar discos en público sin la autorización del propietario de los derechos de autor.


— TABLE OF CONTENTS —

| | | | |
|---|---------|---|---------|
| 1 Features | 6 | 11 Playing Repeatedly | 24, 25 |
| 2 Discs | 7 | 12 Playing Tracks in the Desired Order | 26 |
| 3 Cautions on Handling Discs..... | 8 | 13 Playing Tracks in the Random Order | 27 |
| 4 Connections | 9 ~ 13 | 14 MP3 Playback | 28, 29 |
| 5 Part Names and Functions | 13, 14 | 15 Using the Multiple Audio, Subtitle and Angle Functions .. | 30 ~ 32 |
| 6 Remote Control Unit..... | 15, 16 | 16 Using the Menus..... | 33, 34 |
| 7 Loading Discs | 17 | 17 Changing the Default Settings..... | 35 ~ 47 |
| 8 Playback | 18 ~ 21 | 18 Troubleshooting | 48 |
| 9 Using the On-Screen Display..... | 22 | 19 Main Specifications..... | 49 |
| 10 Adjusting the Picture Quality | 23 | | |

• ACCESSORIES

Please check to make sure the following items are included with the main unit in the carton:

| | | | |
|--------------------------------------|---|--------------------------------|---|
| ① Audio video cord..... | 1 | ④ AC cord | 1 |
| ② Remote control unit (RC-546) | 1 | ⑤ Operating instructions | 1 |
| ③ "AAA" (R03) batteries | 2 | ⑥ Service station list | 1 |

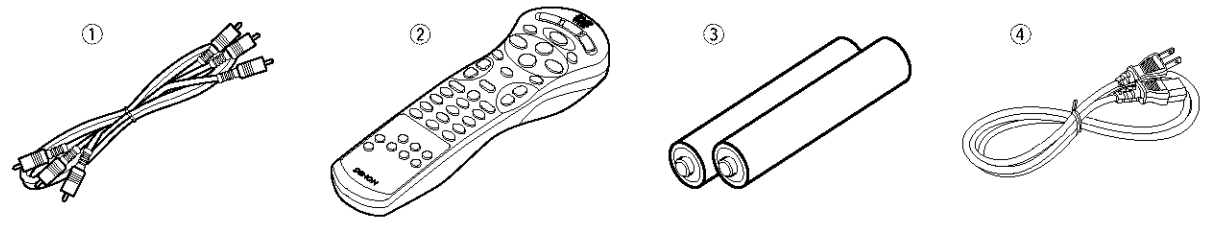

1 FEATURES

1. Progressive Scan circuit "Pure Progressive™" (NOTE 1)

The DVD-2800 is equipped with a high precision Progressive Scan circuit "Pure Progressive™" allowing it to reproduce movies and other images on DVDs with a quality near that of the original.

2. High picture quality thanks to a 12-bit 4:4:4 video D/A converter

With progressive images, oversampling of brightness signals and oversampling of colors signals is conducted, and a 54 MHz D/A converter with 12-bit processing is included for the brightness signals to achieve images with all the beauty DVDs are meant to provide.

3. CD-R/RW playback compatibility

The DVD-2800 can also play CD-R and CD-RW discs (new recording media).

4. High precision 96 kHz 24-bit D/A converter

The DVD-2800 is equipped with a 24-bit D/A converter for faithful D/A conversion of the high quality 24-bit data. This further enhances such aspects of audio performance as the S/N ratio, dynamic range and distortion and makes full use of the possibilities for high quality sound provided by a high number of bits and high sampling rates.

5. Dolby Digital bitstream output compatibility (NOTE 2)

The DVD-2800 is compatible with Dolby Digital bitstream output. When a Dolby Digital decoder is connected, the three-

dimensional sense and positioning of the sound is recreated extremely naturally, resulting in a strong sense of presence, as if you were in a movie theater or concert hall.

6. DTS bitstream output compatibility (NOTE 3)

The DVD-2800 is compatible with DTS bitstream output, an optional audio format for DVD video. DTS sound can be enjoyed by connecting a commercially available DTS decoder and AV amplifier.

7. Many convenient functions

- (1) Multiple audio function
Selection of up to 8 audio languages.
(The number of languages offered differs from DVD to DVD.)
- (2) Multiple subtitle function
Selection of up to 32 subtitle languages.
(The number of languages offered differs from DVD to DVD.)
- (3) Multiple angle function
The angle of view can be changed.
(For DVDs on which multiple angles are recorded.)
- (4) Playback disable function
This function can be used to disable playback of DVDs you do not want children to watch.

NOTES:

1. "Pure Progressive" is a trademark of Silicon Image, Inc.
2. Manufactured under license from Dolby Laboratories.
"Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992 – 1997
Dolby Laboratories. All rights reserved.
3. "DTS" is a trademark of Digital Theater Systems, Inc.

2 DISCS

- The types of discs listed on the table below can be used on the DVD-2800.
The marks are indicated on the disc labels or jackets.

| Usable discs | Mark (logo) | Recorded signals | Disc size |
|------------------------------------|-------------|---------------------------------------|-----------|
| DVD video DVD audio (NOTE 1) | | Digital audio + digital video (MPEG2) | 12 cm |
| | | | 8 cm |
| Video CD | | Digital audio + digital video (MPEG1) | 12 cm |
| | | | 8 cm |
| CD CD-R CD-RW (NOTE 2) | | Digital audio MP3 | 12 cm |
| | | | 8 cm |

■ The following types of discs cannot be played on the DVD-2800:

- DVDs with region numbers other than "1" or "ALL"
- DVD audio discs (NOTE 1)
- DVD-R/RW
- DVD-ROM/RAMs
- CVD
- SVCD
- CD-ROMs (Only MP3 file can be played)
- VSDs
- CDVs (Only the audio part can be played.)
- CD-Gs (Only the audio is output.)
- Photo CDs (NEVER play such discs on the DVD-2800.)

* If you attempt to play photo CDs, the data on the disc may be damaged.

NOTE 1: Video part which based on DVD-video specification only can be played.


NOTE 2: According to recording quality, some CD-R/RW cannot be played.

■ Disc terminology

• Titles and chapters (DVD-videos)

DVD-videos are divided into several large sections called "titles" and smaller sections called "chapters".
Numbers are allotted to these sections. These numbers are called "title numbers" and "chapter numbers".


For example:

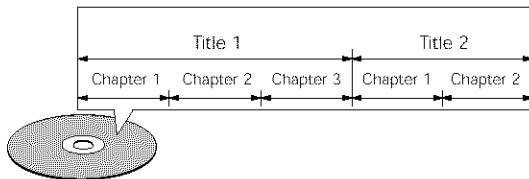

• Tracks (video and music CDs)

Video and music CDs are divided into sections called "tracks".
Numbers are allotted to these sections. These numbers are called "track numbers".

For example:

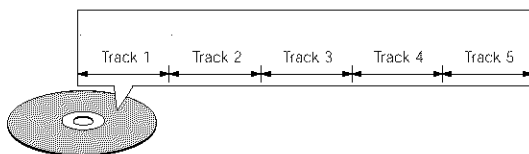

• Playback control (video CDs)

Video CDs including the words "playback control" on the disc or jacket are equipped with a function for displaying menus on the TV screen for selecting the desired position, displaying information, etc., in dialog fashion.

In this manual, playing video CDs using such menus is referred to "menu playback".

Video CDs with playback control can be used on the DVD-2800.

NOTE:

• This DVD video player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc.

If the Region number described on the DVD disc does not correspond to the Region number of this DVD video player, this DVD video player cannot play this disc. The Region number for this DVD video player is 1.




3 CAUTIONS ON HANDLING DISCS

Discs

Only the discs including the marks shown on page 7 can be played on the DVD-2800.

Note, however, that discs with special shapes (heart-shaped discs, hexagonal discs, etc.) cannot be played on the DVD-2800. Do not attempt to play such discs, as they may damage the player.

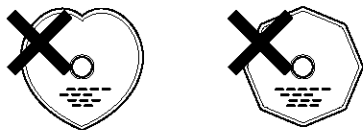

Holding Discs


Avoid touching the surface of discs when loading and unloading them.

Be careful not to get fingerprints on the signal surface (the side which shines in rainbow colors).




Cleaning Discs

- Fingerprints or dirt on the disc may lower sound and picture quality or cause breaks in playback. Wipe off fingerprints or dirt.
- Use a commercially available disc cleaning set or a soft cloth to wipe off fingerprints or dirt.

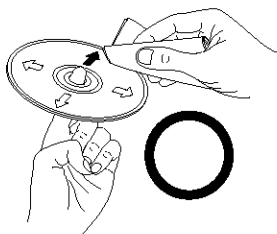


Wipe gently from the middle outwards.

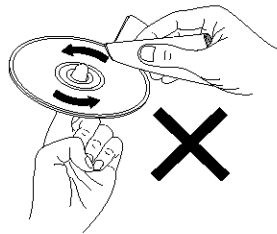

Do not wipe with a circular motion.

NOTE:

- Do not use record spray or antistatic. Also do not use volatile chemicals such as benzene or thinner.

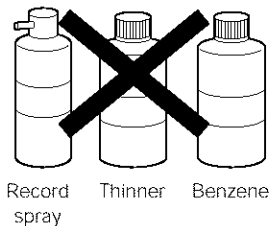

Record spray Thinner Benzene

Cautions on Handling Discs

- Do not get fingerprints, grease or dirt on discs.
- Be especially careful not to scratch discs when removing them from their cases.
- Do not bend discs.
- Do not heat discs.
- Do not enlarge the center hole.
- Do not write on the labeled (printed) side with a ball-point pen or a pencil.
- Water droplets may form on the surface if the disc is moved suddenly from a cold place to a warm one. Do not use a hairdryer, etc., to dry the disc.

Cautions on Storing Discs

- Always eject discs after playing them.
- Keep discs in their cases to protect them from dust, scratches and warping.
- Do not put discs in the following places:
 1. Places exposed to direct sunlight for long periods of time
 2. Humid or dusty places
 3. Places exposed to heat from heaters, etc.

Cautions on Loading Discs

- Only load one disc at a time. Loading one disc on top of another may result in damage or scratch the discs.
- Load 8 cm discs securely in the disc guide, without using an adapter. If the disc is not properly loaded, it may slip out of the guide and block the disc tray.
- Be careful not to let your fingers get caught when the disc tray is closing.
- Do not place anything but discs in the disc tray.
- Do not load cracked or warped discs or discs that have been fixed with adhesive, etc.
- Do not use discs on which the adhesive part of cellophane tape or glue used to attach the label is exposed, or discs with traces of tape or labels that have been peeled off. Such discs may get stuck inside the player, resulting in damage.


4 CONNECTIONS

NOTES:

- Read the manuals of all the components when making connections.
- Keep the power cord unplugged until all connections have been completed.
- If the power is on when connections are made, noise may be generated and damage the speakers.
- Be sure to connect the left and right channels properly, L (left) to L, R (right) to R.
- Plug the power cord securely into the power outlet. Incomplete connection may result in noise.
- Binding the power cord together with connection cords may result in humming or noise.

(1) Connecting to a TV

- Use the included audio video cord to connect the TV's video input connector and audio input connectors to the DVD-2800's VIDEO OUT or S-VIDEO OUT and AUDIO OUT.

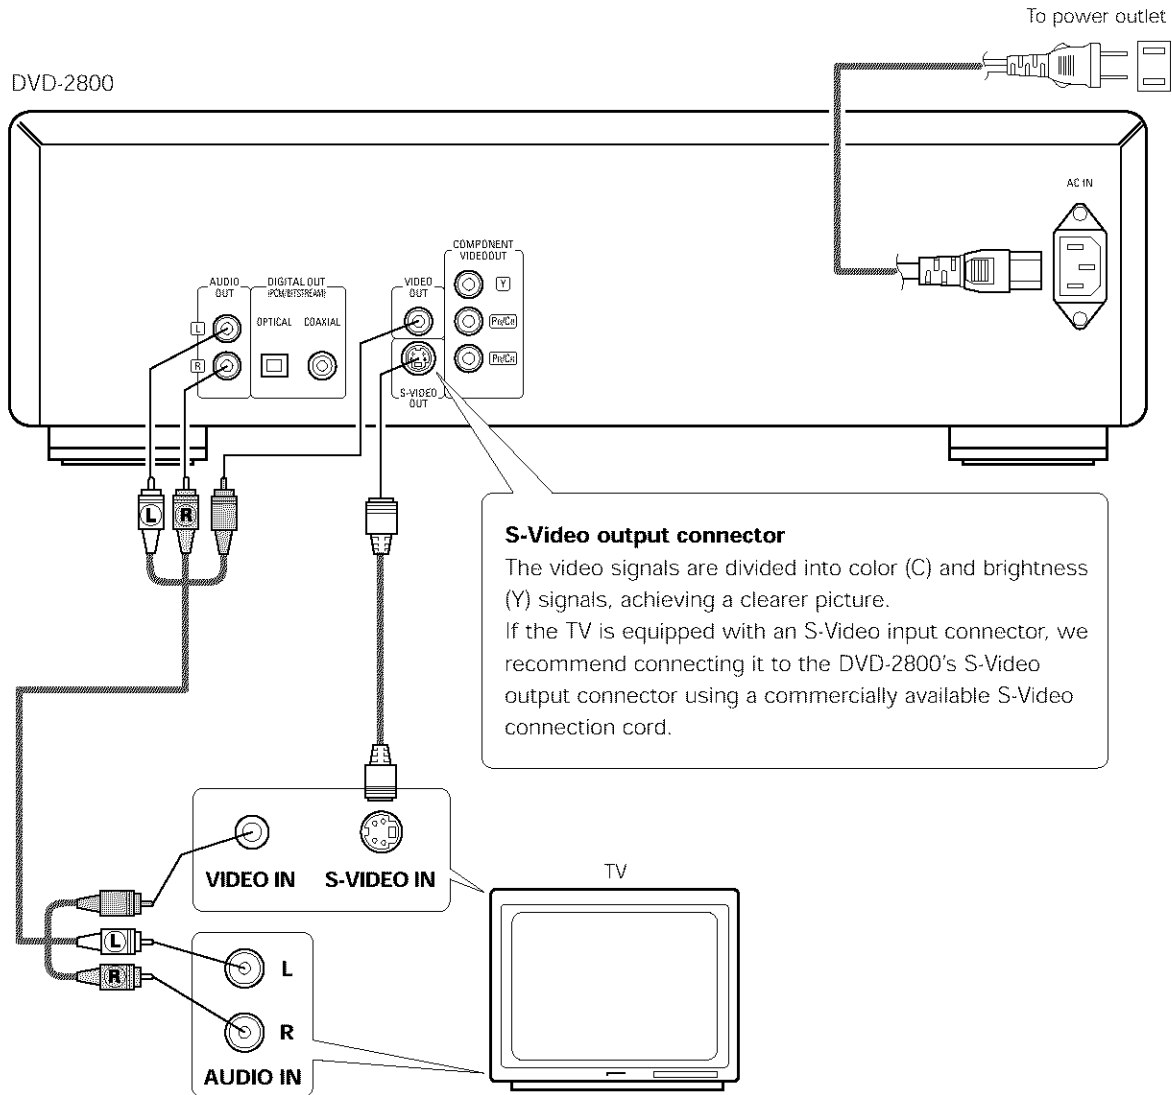

NOTES:

- Connect the DVD-2800's video outputs to the TV either directly or through an AV amplifier. Do not connect it via a VCR (video cassette recorder). Some discs contain copy prohibit signals. If such discs are played via a VCR, the copy prohibit system may cause disturbance in the picture.
- Set the "TV TYPE" in "VIDEO SETUP" in "SETUP" to comply with your TV's video format. When the TV is NTSC formatted set to NTSC. (See page 41)


(2) Connecting to a TV or Monitor Equipped with Color Component Input Connectors

Color component output connectors (Pr/CR, Pb/Cb and Y)

The red (Pr/CR), blue (Pb/Cb) and brightness (Y) signals are output independently, achieving more faithful reproduction of the colors.

- The color component input connectors may be marked differently on some TVs or monitors (Pr, Pb and Y/R-Y, B-Y and Y/CR, Cb and Y, etc.). For details, refer to the TV's operating instructions.

Connect in this way if your TV is compatible with Progressive Scan.

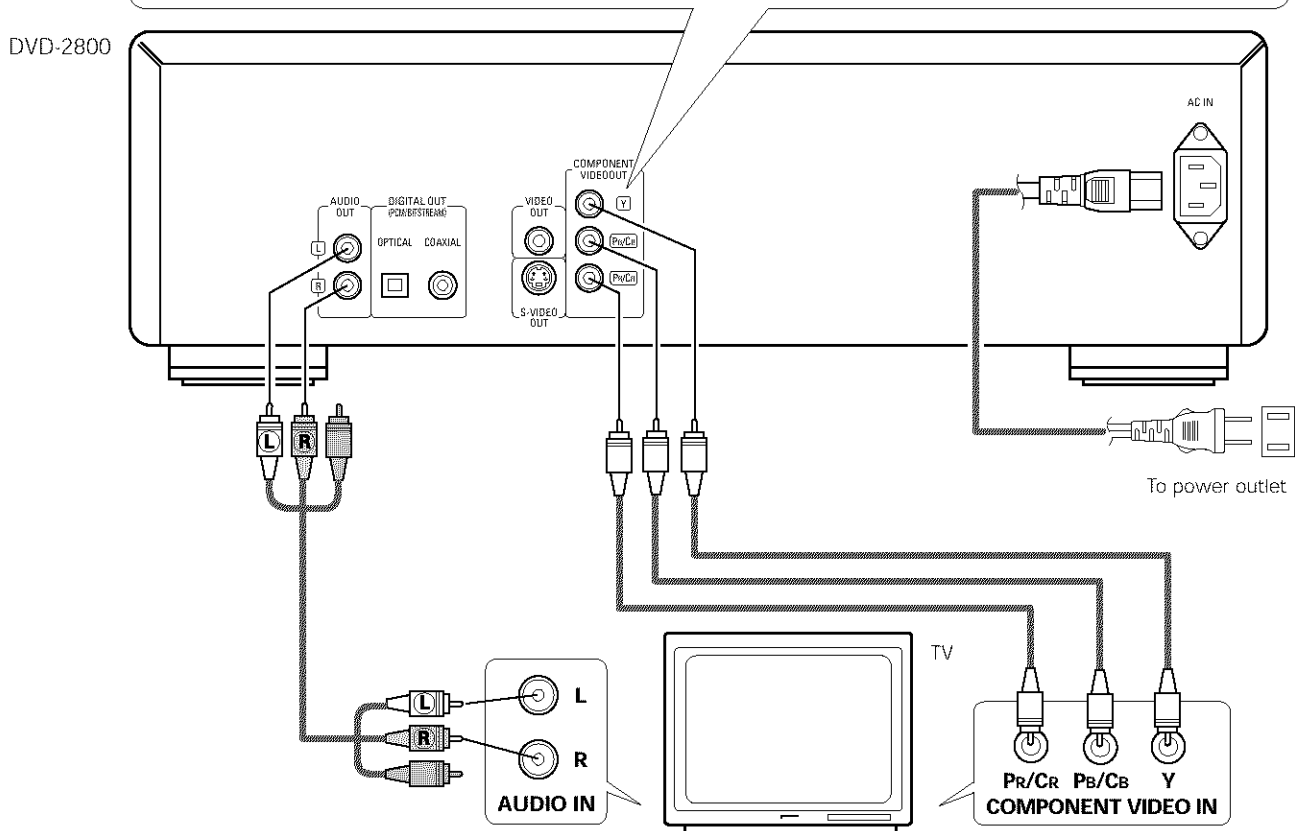


NOTES:

- Use the three commercially available video cords to connect the DVD-2800's color component output connectors to the TV or monitor.
- Set the "TV TYPE" in "VIDEO SETUP" in "SETUP" to comply with your TV's video format. When the TV is NTSC formatted set to NTSC. (See page 41)
- Set the "VIDEO OUT" in "VIDEO SETUP" in "SETUP" to comply with Progressive TV. (NTSC formatted only)

CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE "STANDARD DEFINITION" OUTPUT.

(3) Connecting to a AV amplifier with a built-in decoder


When DVDs recorded in Dolby Digital or DTS are played, Dolby Digital or DTS bitstream signals are output from the DVD player's digital audio output connectors. If a Dolby Digital or DTS decoder is connected, you can achieve sound with the power and sense of presence of a movie theater or concert hall.

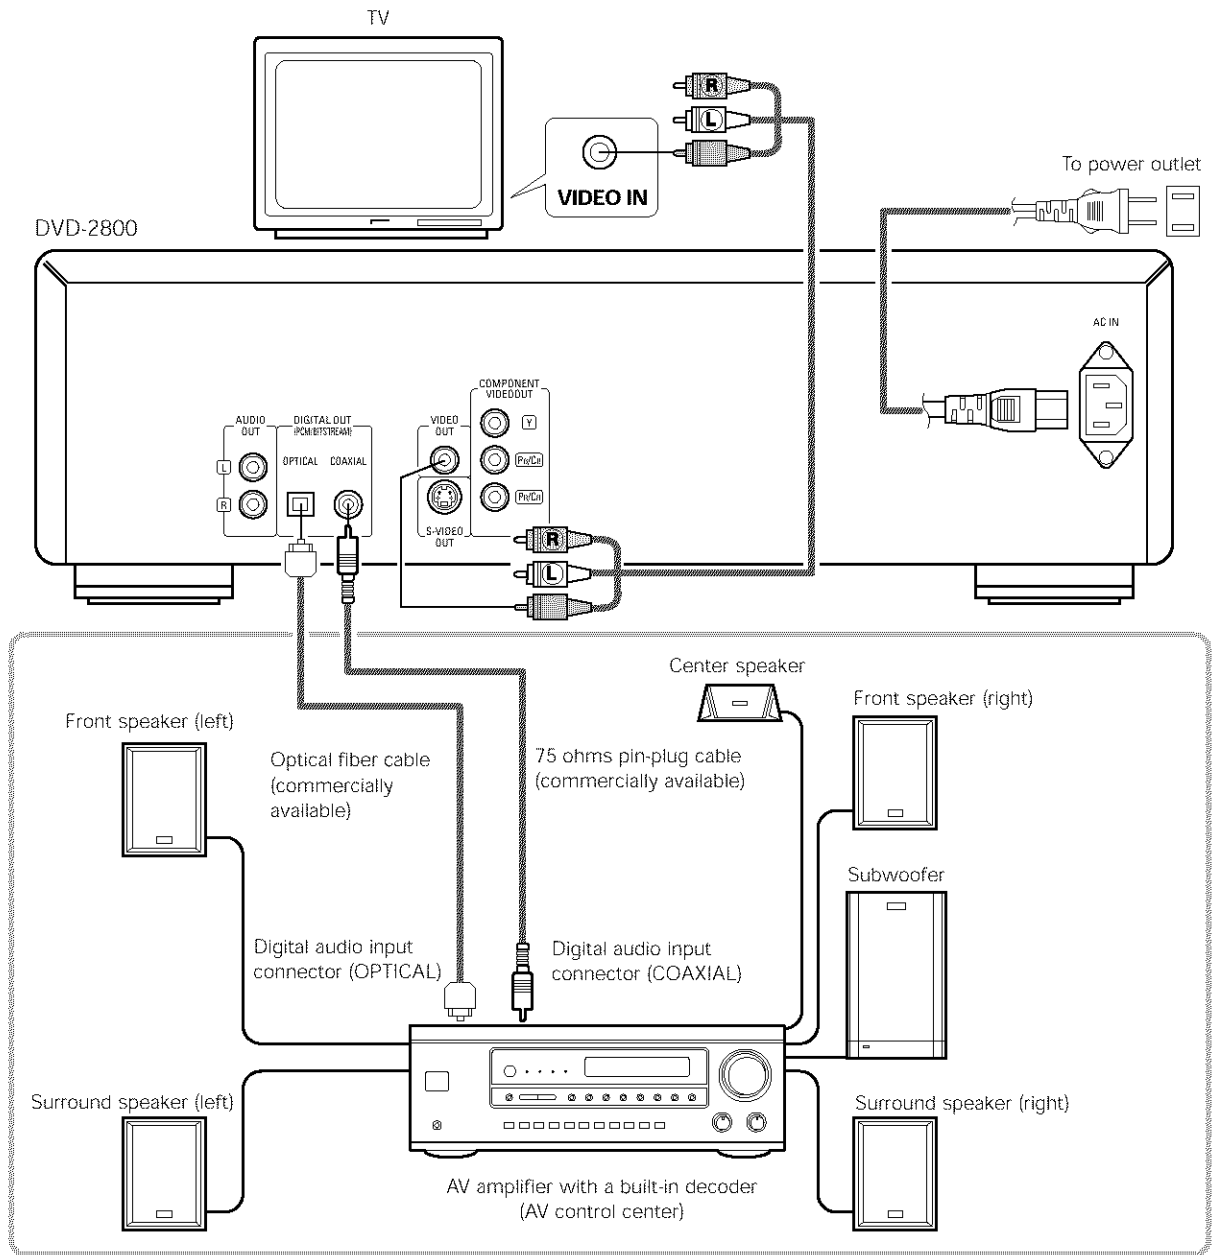

NOTES:

- Set the "TV TYPE" in "VIDEO SETUP" in "SETUP" to comply with your TV's video format. When the TV is NTSC formatted, set to NTSC. (See page 41.)
- Harsh noise that could harm your ears or damage the speakers is generated when a DVD recorded in DTS is played while using a decoder, etc., that is not DTS-compatible.

■ Connecting an optical fiber cable (commercially available) to the digital audio input connector (OPTICAL)

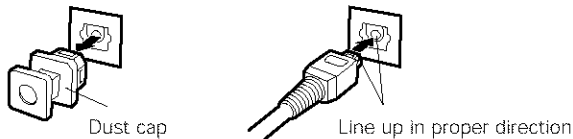

Remove the dust cap, line up the cable in the proper direction, then insert it securely as far as it goes.

NOTE:

- Store the dust cap in a safe place, and be careful not to lose it. When not using the terminal, attach the cap to protect the terminal from dust.

■ Sound output from the DVD-2800's digital audio output connectors

| | | Settings | Refer to page | Digital audio data output | |
|---|---------------|------------------------------|--------------------------------------|------------------------------------|--------------------------------------|
| Audio recording format | | | | | |
| DVD video DVD audio (video part only) | Dolby Digital | Digital out : Normal | 42 | Dolby Digital bitstream | |
| | | Digital out : PCM conversion | | 2 channels PCM data (48 kHz/16bit) | |
| | DTS | Digital out : Normal | | DTS bitstream | |
| | | Digital out : PCM conversion | | No output data | |
| | Linear PCM | 48 kHz | LPCM conversion mode : OFF | 43 | 48 kHz/16 ~24 bit PCM |
| | | | LPCM conversion mode : ON | | 48 kHz/16 bit PCM |
| | | 96 kHz | LPCM conversion mode : ON | | 48 kHz/16 bit PCM |
| | | CP : ON | LPCM conversion mode : OFF | | No output data (when copy-protected) |
| CP : OFF | | LPCM conversion mode : OFF | 96 kHz PCM (when not copy-protected) | | |
| Video CD | MPEG 1 | | | 44.1 kHz/16 bit PCM | |
| Music CD | Linear PCM | | | 44.1 kHz/16 bit PCM | |
| MP3 CD | MP 3 | | | 32 ~ 48 kHz/16 bit PCM | |

- Linear PCM audio is the signal recording format used for music CDs. While the signals are recorded at 44.1 kHz/16 bit for music CDs, for DVDs they are recorded at 48 kHz/16 bit to 96 kHz/24 bit, providing higher sound quality than music CDs.
- When "OFF" is selected, digital signals are not output from the digital audio output at this time.


(4) Connecting to a Digital Recorder (MD Recorder, DAT Deck, etc.)

* Set the "AUDIO SETUP" default setting as shown below. (See page 43.)


- "DIGITAL OUT" → "PCM"
- "LPCM SELECT" → "ON"

Playing DVDs with incorrect settings may result noise that could damage your ears or the speakers.

- Set the "TV TYPE" in "VIDEO SETUP" in "SETUP" comply with your TV's video format. When the TV is NTSC formatted, set to NTSC. (See page 41.)

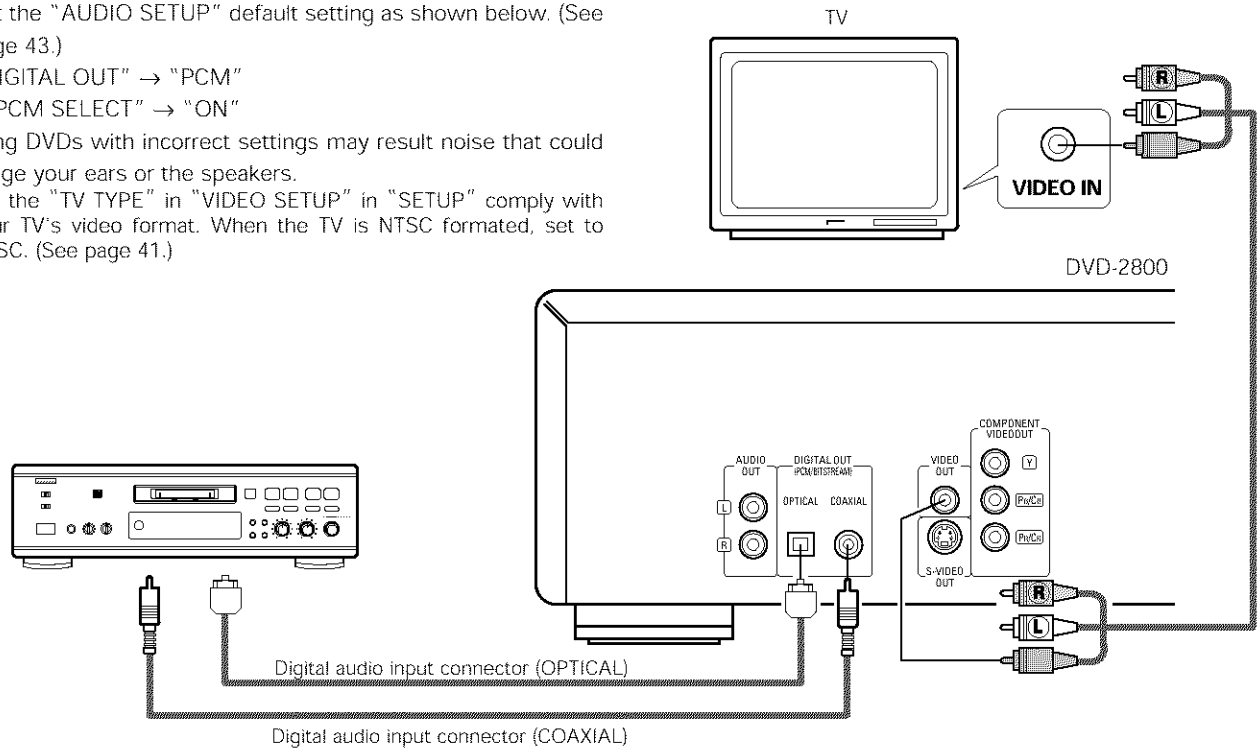

(5) Connecting to a Stereo Component

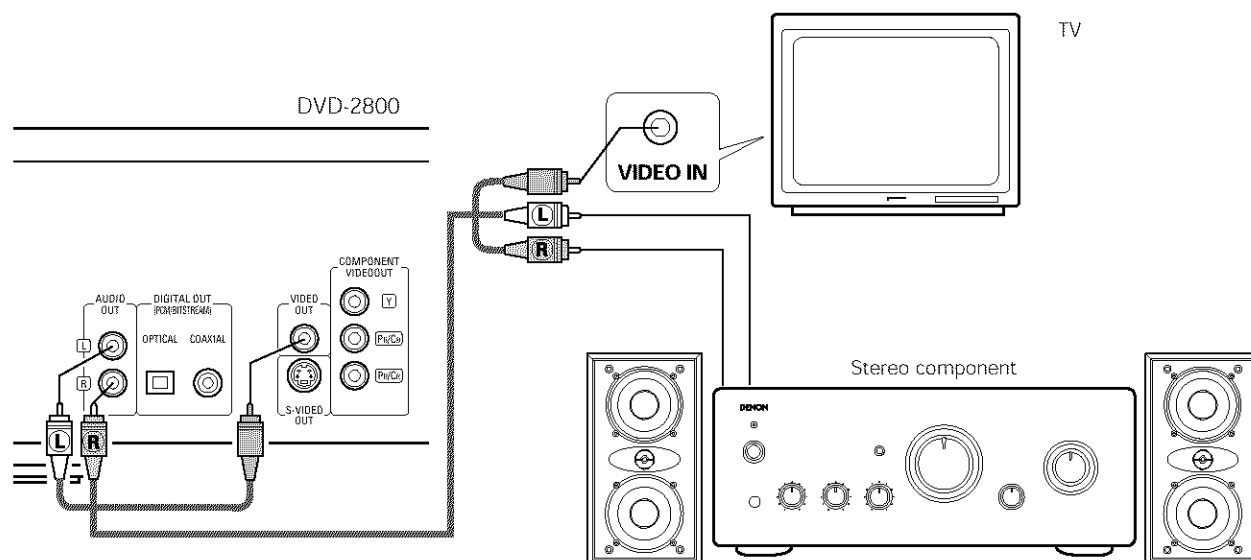

NOTE:

- Set the "TV TYPE" in "VIDEO SETUP" in "SETUP" to comply with your TV's video format. When the TV is NTSC formatted, set to NTSC. (See page 41.)

5 PART NAMES AND FUNCTIONS

(1) Front Panel

See page 3.

- 1 Power button**
 - Press once to turn the power on.
 - Press again to set to the "OFF" position and turn the power off.
 - Set the power to the standby mode by pressing the POWER button on the remote control unit while the power is on.
 - Turn the power on from the standby mode by pressing the POWER button on the remote control unit.
- 2 Power indicator**
 - This indicator lights when the power is on and when the power is in the standby mode.
- 3 HD/CD indicator**
 - This indicator lights when playing discs recorded in HD/CD® format. (NOTE 1)
- 4 Progressive Scan indicator**
 - Lights when progressive is selected as the video output.
- 5 Disc tray**
 - Load discs here. (See page 17.)
 - Press the OPEN/CLOSE button **6** to open and close the disc tray.
 - The disc tray is also closed when the PLAY button **7** is pressed.
- 6 OPEN/CLOSE button (▲ OPEN/CLOSE)**
 - Press this button to open and close the disc tray. (See page 17.)
- 7 PLAY button (▶ PLAY)**
 - Press this button to play the disc. (See page 18.)
- 8 STILL/PAUSE button (II STILL/PAUSE)**
 - Press this button to pause images or music or to play images frame by frame. (See page 20, 21.)
- 9 STOP button (■ STOP)**
 - Press this to stop the disc. (See page 20.)
- 10 Skip button (I◀◀)**
 - Press this to move back to the beginning of the current track (or chapter).
 - Press again to move back to the beginning of the previous track (or chapter). (See page 21.)
- 11 Slow/Search button (◀◀)**
 - Press this to set the slow play mode and to search in the reverse direction. (See page 20, 21.)
- 12 Skip button (▶▶I)**
 - Press this to move ahead to the beginning of the next track (or chapter). (See page 21.)
- 13 Slow/Search button (▶▶)**
 - Press this to set the slow play mode and to search in the forward direction. (See page 20, 21.)
- 14 Remote control sensor**
- 15 Display**
 - Information on the disc that is currently playing is shown on the display. (See page 14.)


NOTE 1:

HDCD®, **HDCD**®, **High Definition Compatible Digital**® and **Pacific Microsonics™** are either registered trademarks or trademarks of Pacific Microsonics, Inc. in the United States and/or other countries. HDCD system manufactured under license from Pacific Microsonics, Inc. This product is covered by one or more of the following: In the USA: 5,479,168, 5,683,074, 5,640,161, 5,808,574, 5,838,274, 5,854,600, 5,864,311, 5,872,531, and in Australia: 669114. Other patents pending.

(2) Rear Panel

- 16 Audio output connectors (AUDIO OUT)**
 - Connect using the included audio video cord.
- 17 Digital audio output connector (OPTICAL)**
 - Connect using an optical fiber cable (available in stores).
 - Digital data is output from this connector.
- 18 Digital audio output connector (COAXIAL)**
 - Connect using an audio cord. Connect a commercially available 75 Ω/ohms pin-plug cord.
 - Digital data is output from this connector.
- 19 Video output connectors (VIDEO OUT)**
 - Connect using the included audio video cord.
- 20 S-Video output connector (S-VIDEO OUT)**
 - Connect using an S-Video connection cord (available in stores).
- 21 Component video output connectors (COMPONENT VIDEO OUT)**
 - Connect using video cords (available in stores).
- 22 Power input**
 - Connect to AC power supply using the included AC cord.

(3) Display

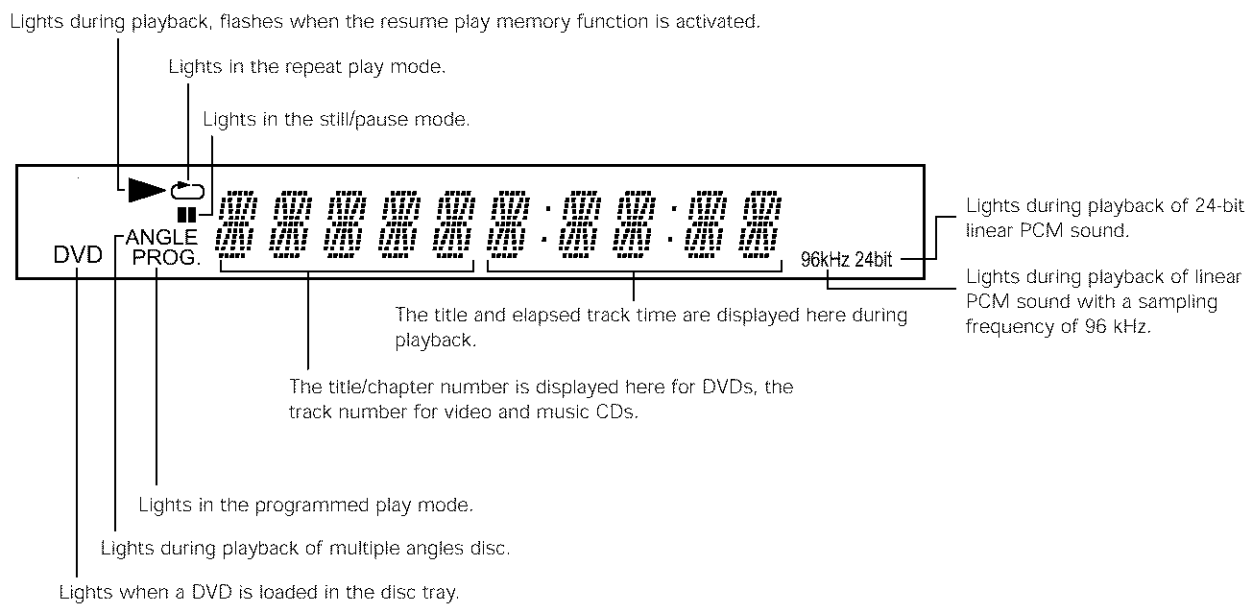


6 REMOTE CONTROL UNIT


■ The DVD-2800 can be controlled from a distance using the included remote control unit (RC-546).

(1) Inserting Batteries


① Remove the remote control unit's rear cover.

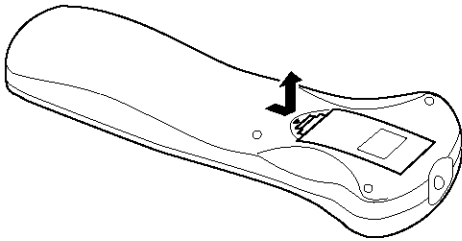

② Place two "AAA" (R03) batteries in the battery compartment in the direction indicated by the marks.

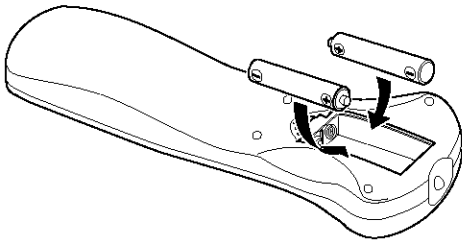


③ Close the rear cover.

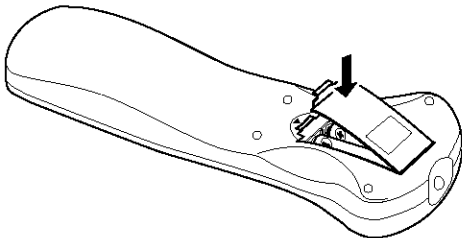

Cautions On Batteries

- Use "AAA" (R03) batteries in this remote control unit.
- Replace the batteries with new ones approximately once a year, though this depends on the frequency with which the remote control unit is used.
- If the remote control unit does not operate from close to the main unit, replace the batteries with new ones, even if less than a year has passed.
- The included battery is only for verifying operation. Replace it with a new battery as soon as possible.
- When inserting the batteries, be careful to do so in the proper direction, following the \oplus and \ominus marks in the remote control unit's battery compartment.
- To prevent damage or battery fluid leakage:
 - Do not use a new battery with an old one.
 - Do not use two different types of batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- Remove the batteries when not planning to use the remote control unit for a long period of time.
- If the batteries should leak, carefully wipe off the fluid from the inside of the battery compartment, then insert new batteries.

(2) Using the Remote Control Unit

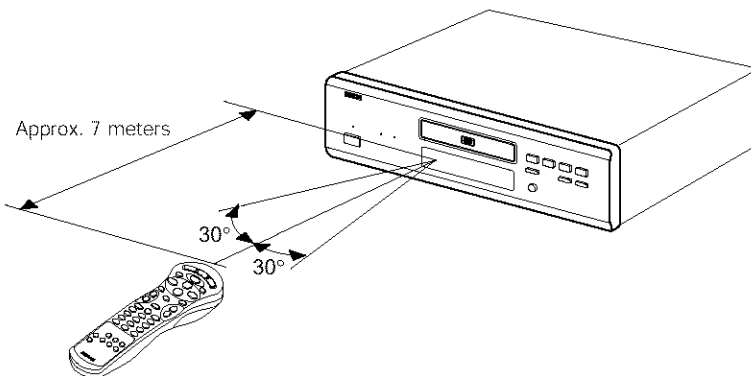

- When operating the remote control unit, point it at the remote control sensor as shown on the diagram.
- The remote control unit can be used from a direct distance of approximately 7 meters. This distance will be shorter, however, if there are obstacles in the way or if the remote control unit is not pointed directly at the remote control sensor.
- The remote control unit can be operated at a horizontal angle of up to 30° with respect to the remote control sensor.

NOTES:

- It may be difficult to operate the remote control unit if the remote control sensor is exposed to direct sunlight or strong artificial light.
- Do not press buttons on the main unit and on the remote control unit at the same time. Doing so will result in malfunction.

(3) Names and Functions of Remote Control Unit Buttons

POWER button (POWER)
Press this to switch the power between on and standby.

MENU button (MENU)

TOP MENU button (TOP MENU)

Cursor buttons
Use the ▲ and ▼ buttons to select in the vertical direction.
Use the ◀ and ▶ buttons to select in the horizontal direction.

AUDIO button (AUDIO)
For DVDs, press this to switch the audio language. For video CDs, press this to switch the channel between "LR", "L" and "R".

ENTER button (ENTER)
Press the ENTER button to select the item selected with the cursor buttons.

SKIP buttons (SKIP)

STOP button (■)


Number buttons
Use these to input numbers.
Use the +10 button to input numbers of 10 or over.
Example: To input 25
+10 → +10 → 5

PROGRAM/DIRECT button (PROG/DIRECT)
Press this to switch between the normal play, programmed play.

SET UP button (SET UP)

V.S.S. button (V.S.S.)
Sets the virtual surround sound. (Functions when playing DVDs recorded in Dolby Digital with two or more channels.)

REPEAT button (REPEAT)
Press this to play tracks repeatedly.

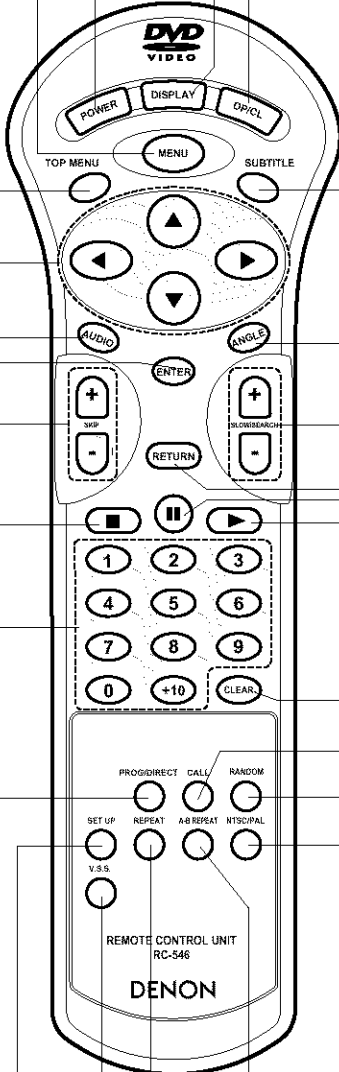

DISPLAY button (DISPLAY)
Press this to display the ON-SCREEN.

OPEN/CLOSE button (OP/CL)

SUBTITLE button (SUBTITLE)
Press this to switch the DVD's subtitle language.

ANGLE button (ANGLE)
Press this to switch the angle.

SLOW/SEARCH buttons (SLOW/SEARCH)

RETURN button (RETURN)
Press this to return to the previous menu screen.

STILL/PAUSE button (||)

PLAY button (▶)

CLEAR button (CLEAR)
Press this to clear numbers that you have input.

CALL button (CALL)
Press this to check the program contents.

RANDOM button (RANDOM)
Press this to play the tracks on the video or music CD in random order.

NTSC/PAL button (NTSC/PAL)
Use this to switch the set's video output format (NTSC/PAL).

A-B REPEAT button (A-B REPEAT)
Use this to repeat sections between two specific points.


IMPORTANT SETUP INFORMATION

This set has the following presets: "DISC SETUP", "OSD SETUP", "VIDEO SETUP", "AUDIO SETUP", "RATINGS", and "OTHER SETUP".

These presets have been preset upon shipment from the factory. If you wish to change them to suit your specific purposes, refer to pages 35 to 47.

7 LOADING DISCS

- Set discs in the disc tray with the labeled (printed) side facing up.

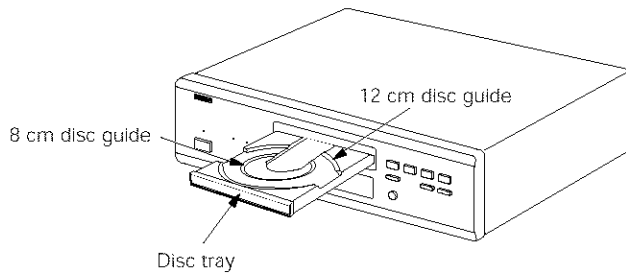


NOTE:

- Do not move the DVD-2800 while a disc is playing. Doing so may scratch the disc.

(1) Opening and Closing the Disc Tray

- ① Turn on the power.
- ② Press the OPEN/CLOSE button.

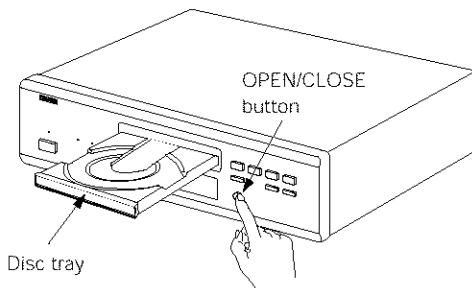

NOTES:

- Be sure to turn on the power before opening and closing the disc tray.
- Do not strike on the button with a pencil, etc.

(2) Loading Discs

- Pick up the disc carefully so as not to touch the signal surface and hold it with the labeled side facing up.
- With the disc tray fully open, set the disc in the disc tray.
- Set 12 cm discs in the outer tray guide (Figure 1), 8 cm discs in the inner tray guide (Figure 2).
- Press the OPEN/CLOSE button. The disc is automatically loaded.
- The disc tray can also be closed automatically to load the disc by pressing the PLAY button.

Figure 1


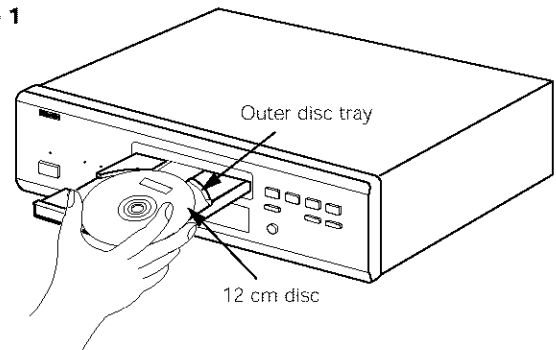


Figure 2




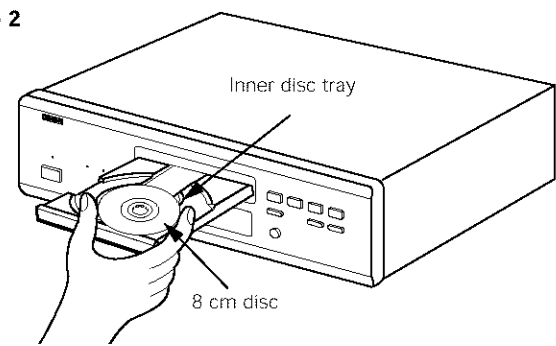





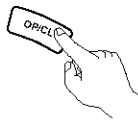
NOTES:


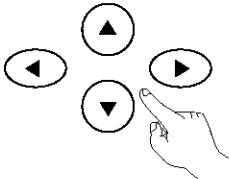
 
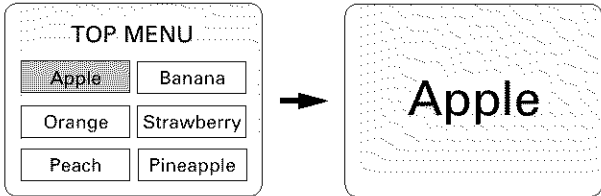
- If a foreign object is caught in the disc tray during closing, simply press the OPEN/CLOSE button again and the tray will open.
- Do not press the disc tray in by hand when the power is off. Doing so will damage it.
- Do not place foreign objects in the disc tray. Doing so will damage it.

8 PLAYBACK

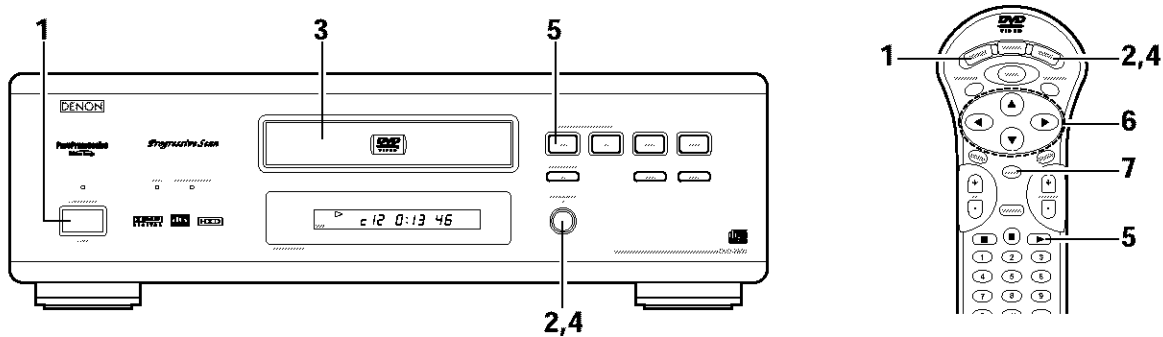
(1) Playback


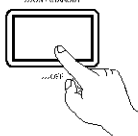

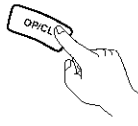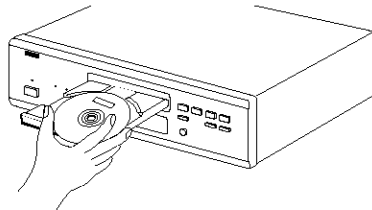
| | | | | | | | | | | | | | |
|-----------------|--|---|-------|--------|--------|------------|-------|-----------|------------|-----------------|-----------------|-----------------|-----------|
| <p>1</p> | <p>Turn on the power.</p> <ul style="list-style-type: none"> • Press the power button, the power indicator lights and the power turns on. • When standby mode, press the POWER button of remote control unit. |  <p>Main unit</p>  <p>Remote control unit</p> | | | | | | | | | | | |
| <p>2</p> | <p>Press the OPEN/CLOSE button to open the disc tray.</p> |  <p>Main unit</p>  <p>Remote control unit</p> | | | | | | | | | | | |
| <p>3</p> | <p>Set the disc in the disc tray.</p> |  | | | | | | | | | | | |
| <p>4</p> | <p>Press the OPEN/CLOSE button.</p> <ul style="list-style-type: none"> • For many interactive DVDs and video CDs with playback control, a menu screen appears. In this case use the procedure in step 6 to select the desired item. * Interactive DVDs are DVDs including multiple angles, stories, etc. |  <p>Main unit</p> <p>Example: For DVDs with menu screens</p>  <p>Remote control unit</p> <p>Example: For video CDs with playback control</p> <div data-bbox="876 1722 1136 1921" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">TOP MENU</p> <table border="1" style="width: 100%; text-align: center;"> <tr> <td>Apple</td> <td>Banana</td> </tr> <tr> <td>Orange</td> <td>Strawberry</td> </tr> <tr> <td>Peach</td> <td>Pineapple</td> </tr> </table> </div> <div data-bbox="1185 1722 1445 1921" style="border: 1px solid black; padding: 5px;"> <table border="1" style="width: 100%; text-align: center;"> <tr><td>1. Opening</td></tr> <tr><td>2. 1st movement</td></tr> <tr><td>3. 2nd movement</td></tr> <tr><td>4. 3rd movement</td></tr> <tr><td>5. Ending</td></tr> </table> </div> | Apple | Banana | Orange | Strawberry | Peach | Pineapple | 1. Opening | 2. 1st movement | 3. 2nd movement | 4. 3rd movement | 5. Ending |
| Apple | Banana | | | | | | | | | | | | |
| Orange | Strawberry | | | | | | | | | | | | |
| Peach | Pineapple | | | | | | | | | | | | |
| 1. Opening | | | | | | | | | | | | | |
| 2. 1st movement | | | | | | | | | | | | | |
| 3. 2nd movement | | | | | | | | | | | | | |
| 4. 3rd movement | | | | | | | | | | | | | |
| 5. Ending | | | | | | | | | | | | | |

| | | |
|-----------------|--|---|
| <p>5</p> | <p>Press the PLAY button.</p> |  <p>Main unit Remote control unit</p> |
| <p>6</p> | <p>Use the cursor buttons (▲, ▼, ◀ and ▶) to select the desired item.</p> <ul style="list-style-type: none"> • For some discs there is a second menu screen. If so, press the ►► button to display the next menu screen. (See the disc's jacket.) * The cursor buttons (▲, ▼, ◀ and ▶) do not work for video CDs. Use the number buttons to select the desired item. |  <p>Remote control unit</p> |
| <p>7</p> | <p>Press the ENTER button.</p> <ul style="list-style-type: none"> • The desired item is selected and playback starts. • You can return to the menu screen by pressing the TOP MENU/MENU button while the DVD is playing, though this depends on the disc. • Press the RETURN button during playback of a video CD to return to the menu screen. |  <p>Remote control unit</p> <p>Example: When "Apple" is selected</p>  |

NOTES:

- If  appears on the TV screen while buttons are being operated, that operation is not possible on the DVD-2800 or with that disc.
- Set the disc in the disc guide.
- Do not place more than one disc in the disc tray.
- The disc keeps turning while the menu screen is displayed on the TV screen.

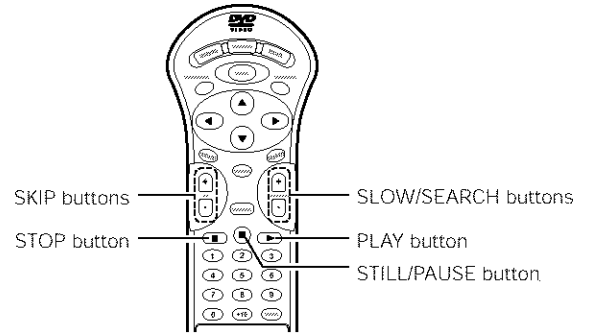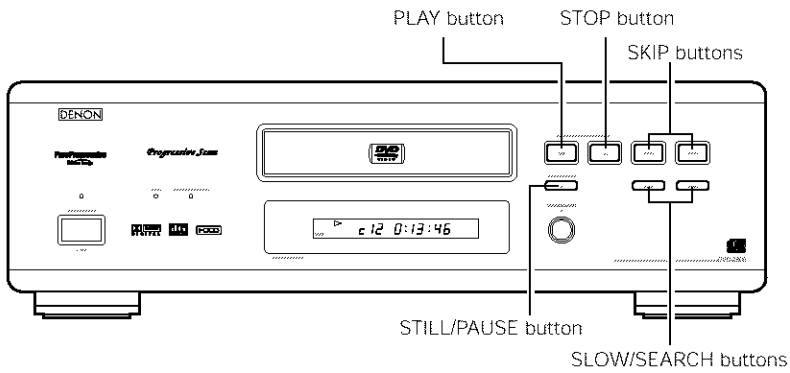


(2) Stopping Playback

During playback, press the STOP button on the main unit or the remote control unit, playback stops and wall paper is displayed.

<Resume play memory function (DVD only)>

- With the DVD-2800, when the STOP button is pressed, that position is stored in the memory. At this time, "▶" flashes on the display. When the PLAY button is pressed after pressing the STOP button, playback resumes from the position at which it was stopped. The resume play memory function is canceled if the disc tray is opened or the STOP button is pressed a second time.
- If you do not want to continue playing the disc, to save electricity either press the POWER button on the main to turn the power off or press the POWER button on the remote control unit to set the power to the standby mode.

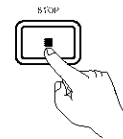

Main unit



Remote control unit

- * The resume play memory function only works for discs for which the elapsed time is shown on the display during playback.

 
(3) Playing Still Pictures (Pausing)

During playback, press the STILL/PAUSE button on the main unit or the remote control unit.

- Press the PLAY button to resume normal playback.



Main unit




Remote control unit

(4) Forward/Reverse Searching


During playback, press one of the SLOW/SEARCH buttons on the main unit or the remote control unit.

- ◀◀ / - : Reverse direction
- ▶▶ / + : Forward direction

 - When pressed again, the search speed increases (in four steps).
- Press the PLAY button to resume normal playback.



Main unit

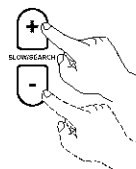

Remote control unit

NOTE:



- In some cases the menu screen may reappear when one of the SLOW/SEARCH buttons is pressed during menu playback on a video CD.

(5) Skipping to the Beginning of Chapters or Tracks

During playback, press one of the skip buttons on the main unit or the remote control unit.

- ◀◀ / - : Reverse direction (PREVIOUS)
- ▶▶ / + : Forward direction (NEXT)

- A number of chapters or tracks equal to the number of times the button is pressed is skipped.
- When the skip back button is pressed once, the pickup returns to the beginning of the currently playing chapter or track.

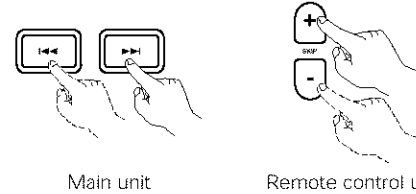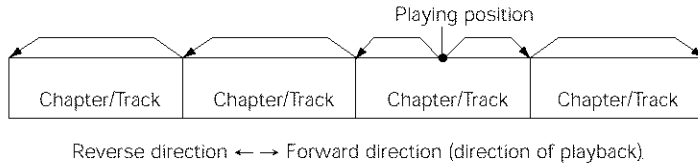

Main unit

Remote control unit

 
NOTE:

- In some cases the menu screen may reappear when one of the SKIP buttons is pressed during menu playback on a video CD.


(6) Playing Frame by Frame (for DVDs and video CDs only)

During playback, press the STILL/PAUSE button on the main unit or the remote control unit.

- The picture moves forward one frame each time the button is pressed.
- Press the PLAY button to resume normal playback.



Main unit

 


Remote control unit

(7) Slow Playback (for DVDs and video CDs only)


In the still mode, press one of the SLOW/SEARCH buttons on the main unit or the remote control unit.

- ◀◀ / - : Reverse direction
- ▶▶ / + : Forward direction

 - When pressed again, the slow play speed increases.
- Press the PLAY button to resume normal playback.



Main unit

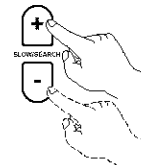

Remote control unit

NOTE:

- Reverse slow play is not possible on video CDs.

(8) Using the V.S.S. (Virtual Surround Sound) function (only for DVDs)

- Using the V.S.S. (Virtual Surround Sound) function gives the sound a sense of expansion and allows you to achieve surround effects even when only front speakers (left and right) are used. For discs with surround signals, the V.S.S. function not only gives the sound expansion, it also makes it seem as if sound is coming from the sides, even though there are no speakers there.


During playback, press the V.S.S. button on the remote control unit.



Remote control unit


NOTES:

- This function only works with DVDs containing two or more channels of Dolby Digital signals.
- Note that for some discs the effect will be weak or there will be no effect.
- For some discs the sound may be distorted. If so turn the V.S.S. function off.
- Turn off other surround functions (the TV's surround mode, etc.).
- The effect is best when listening at a distance from the TV equal to 3 to 4 times the distance of the left and right speakers (distance A).

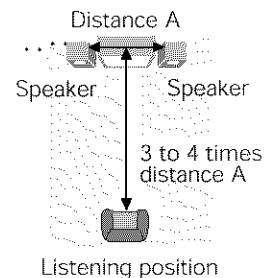

9 USING THE ON-SCREEN DISPLAY

- Use this function to display and change information on the disc (titles, chapters, time, etc.)

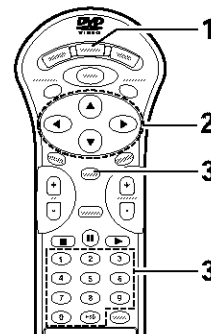


In the play mode, press the DISPLAY button.


- The On-Screen Display appears.
- The picture on the TV screen switches each time the button is pressed.
- The items displayed differ from disc to disc.

Example: For DVDs

- Normal playback screen

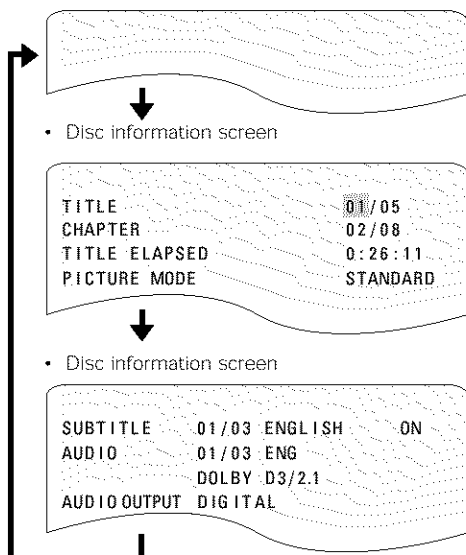


1

 

Remote control unit

Example: For video and music CDs

- Normal playback screen

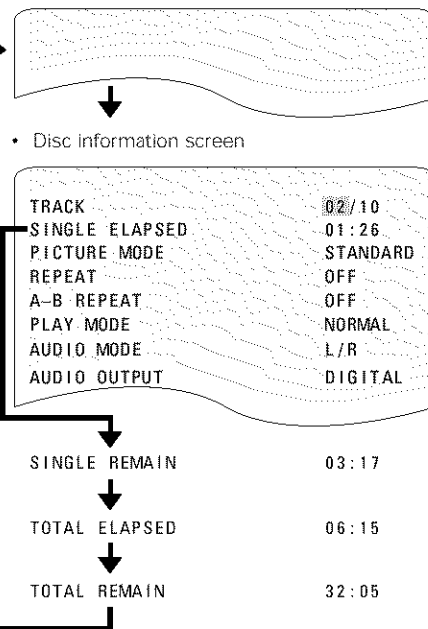

- For the on-screen display for video CDs and regular CDs, only the disc time changes.

Use the ▲ and ▼ cursor buttons to select the item you wish to change.


- The selected item is displayed with a yellow frame.

① For DVDs

"TITLE", "CHAPTER", "TITLE ELAPSED" and "PICTURE MODE" can be selected.

② For video and music CDs

"TRACK", "SINGLE ELAPSED", "SINGLE REMAIN", "TOTAL ELAPSED", "TOTAL REMAIN" and "PICTURE MODE" can be selected.

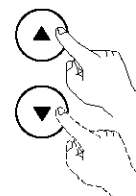

Remote control unit

2

① Changing the elapsed time

Input using the number buttons, then press the ENTER button.
Example: For 1 minute 26 seconds → "0126"


② Changing the title, track or chapter

- For DVDs

Input using the number buttons, then press the ENTER button.
(For some discs it is not possible to change the title or chapter.)

- For video and music CDs


Input using the number buttons. Playback starts from that track.

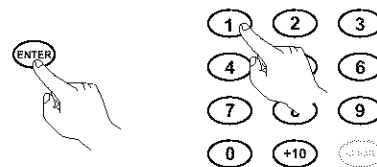



Remote control unit

3

10 ADJUSTING THE PICTURE QUALITY

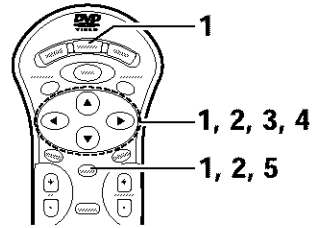


| | | |
|-----------------|---|---|
| <p>1</p> | <p>Press the DISPLAY button, use the ▲ and ▼ cursor buttons to select the "PICTURE MODE", then press the ENTER button.</p> | <p>Remote control unit</p> |
| <p>2</p> | <p>Use the ▲ and ▼ cursor buttons to select the picture memory, then press the ENTER button.</p> <ul style="list-style-type: none"> The display switches as follows: STANDARD → MEMORY 1 → MEMORY 2 → MEMORY 3 → MEMORY 4 → MEMORY 5 <p>STANDARD (Factory default) When this is selected, both the picture quality and function are reset to factory setting.</p> <p>MEMORY 1 to MEMORY 5 Picture quality settings you have adjusted can be stored here.</p> | <p>Remote control unit</p> <p>Remote control unit</p> |
| <p>3</p> | <p>Select the item to change using ▲ and ▼ buttons.</p> <ul style="list-style-type: none"> CONTRAST, BRIGHTNESS, SHARPNESS, HUE and GAMMA can be adjusted as you like. <p>CONTRAST (-6 ~ +6) Adjusts the contrast of the image.</p> <p>BRIGHTNESS (0 ~ +12) Adjusts the picture's brightness (black level).</p> <p>SHARPNESS (-6 ~ +6) Adjusts the sharpness of the picture.</p> <p>HUE (-6 ~ +6) Adjusts the balance of the green and red. (This does not affect Progressive Scan images.)</p> <p>GAMMA (-6 ~ +6) Select this if dark portions of the picture are too dark or bright portions are too bright. (This does not affect Interlaced images.)</p> <ul style="list-style-type: none"> Black Level To select the black level of the picture, "LIGHTER" or "DARKER". <p>LIGHTER (7.5 IRE) The black level of the picture is selected to the lighter one. Select this setting normally when the player is connected to a TV set through the VIDEO OUT connector or S-VIDEO OUT connector. (Factory preset)</p> <p>DARKER (0 IRE) The black level of the picture is selected to the darker one. Select this setting normally when the player is connected to a TV set through the COMPONENT VIDEO OUT (Y, Pb/Cb, Pr/Cr) connector.</p> | <p>Remote control unit</p> |
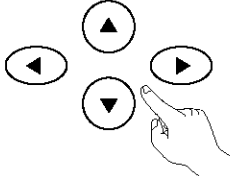
| | | |
|-----------------|--|--|
| <p>4</p> | <p>Use the ▲, ▼, ◀ and ▶ cursor buttons to select the picture quality adjustment item then to adjust its level.</p> |  <p>Remote control unit</p> |
| <p>5</p> | <p>Press the ENTER button.</p> <ul style="list-style-type: none"> • All the adjustments are stored in the memory. |  <p>Remote control unit</p> |

11 PLAYING REPEATEDLY

■ Use this function to play your favorite audio or video sections repeatedly.

Playing Repeatedly (Repeat Playback)

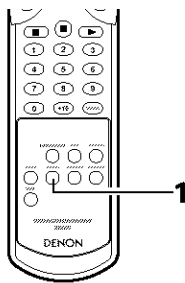


In the play mode, press the REPEAT button.

- The display on the TV screen switches each time the button is pressed, and the corresponding repeat play or stop mode is set.


① For DVDs


- Normal playback
- Chapter repeated
- Title repeated
- Repeat playback canceled

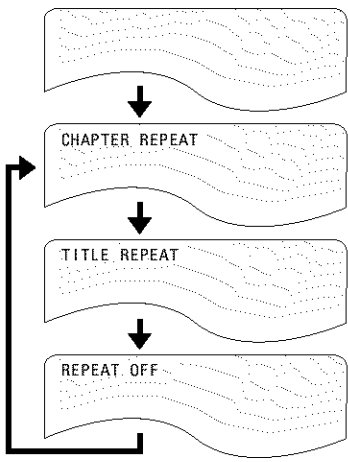

② For video and music CDs

- Normal playback
- Track repeated
- Entire disc repeated
- Repeat playback canceled

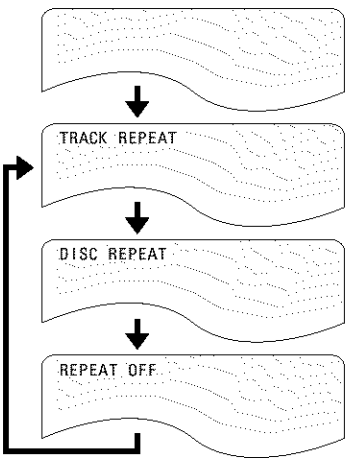






Remote control unit

1

* To return to normal playback:
Return to normal playback by pressing the button REPEAT button until "REPEAT OFF" appears on the TV screen.

Playing a Certain Section Repeatedly (A-B Repeat Playback)

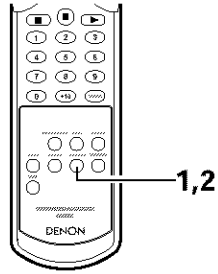

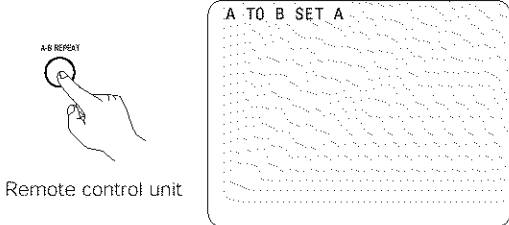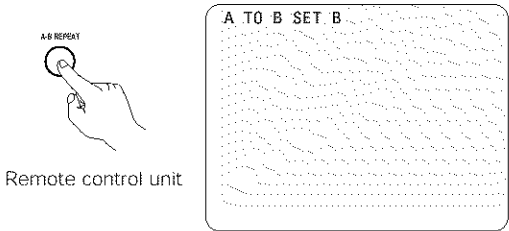
| | | |
|--|---|--|
| <p>1</p> | <p>During playback, press the A-B REPEAT button.</p> <ul style="list-style-type: none"> • This sets start point A. |  <p>Remote control unit</p> |
| <p>2</p> | <p>Press the A-B REPEAT button again.</p> <ul style="list-style-type: none"> • This sets end point B, and repeat playback of the A-B section starts. |  <p>Remote control unit</p> |
| <p>* To return to normal playback: Press the A-B REPEAT button until "A TO B CANCELED" appears on the TV screen.</p> | | |

NOTES:

- Repeat playback may not work for some DVDs.
- The repeat playback and A-B repeat playback functions will not work for DVDs and video CDs for which the elapsed time is not shown on the display during playback.
- In some cases, subtitles may not be displayed near the A and B points during A-B repeat playback.

12 PLAYING TRACKS IN THE DESIRED ORDER

- Use this function with video and music CDs to play the tracks in the desired order. This function does not affect with DVD.

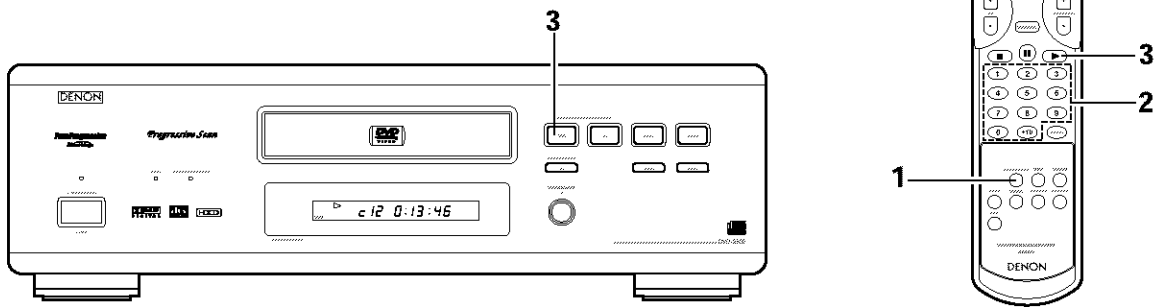

| | | |
|-----------------|---|---|
| <p>1</p> | <p>In the stop mode, press the PROG/DIRECT button once.</p> <ul style="list-style-type: none"> The program selection screen appears. | <p>Remote control unit</p> |
| <p>2</p> | <p>Use the number buttons to select the track number you want to program.</p> <p>EX: To program track 5 and track 12:</p> <p>Press 5 (number button)</p> <p>↓</p> <p>Press +10 (number button)</p> <p>↓</p> <p>Press 2 (number button)</p> | <p>Remote control unit</p> |
| <p>3</p> | <p>Press the PLAY button.</p> <ul style="list-style-type: none"> Playback of the tracks in the programmed order begins. | <p>Main unit Remote control unit</p> |

* To return to normal playback:

Press the STOP button to stop programmed playback, then press the PROG/DIRECT button. Now press the PLAY button to start normal playback from the beginning of the disc.

* To clear tracks from the program:

Press the STOP button. The program play screen appears. Press the CLEAR button to clear the last track in the program.

* To clear the entire program:


The entire program is cleared when the power is turned off or the disc is ejected.

 

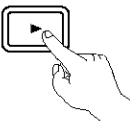
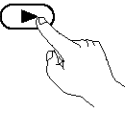
* To check the programmed contents, press the CALL button. The programmed contents are displayed step by step.

* Up to 30 tracks can be programmed.

13 PLAYING TRACKS IN THE RANDOM ORDER

- Use this function with video and music CDs to play the tracks in random order.
This function does not affect with DVD.

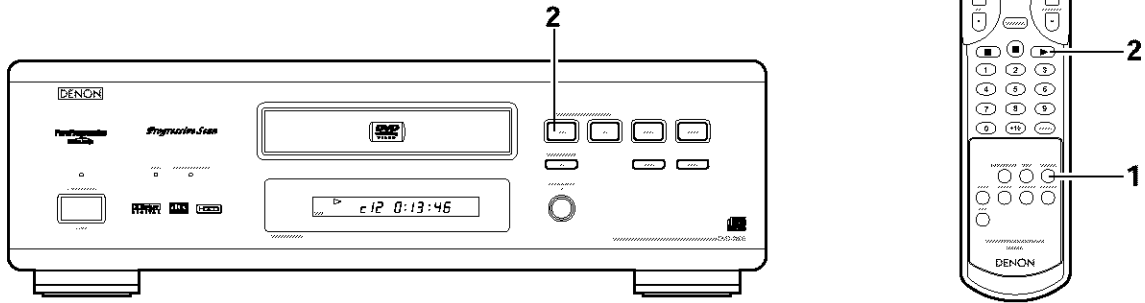

| | | |
|--|---|--|
| <p>1</p> | <p>In the stop mode, press the RANDOM button.</p> <ul style="list-style-type: none"> • The random play screen appears.  |  <p>Remote control unit</p> |
| <p>2</p> | <p>Press the PLAY button.</p> <ul style="list-style-type: none"> • The tracks start playing in random order. |  <p>Main unit</p>  <p>Remote control unit</p> |
| <ul style="list-style-type: none"> • Random playback is not possible for some discs. * To return to normal playback: Press the STOP button to stop random playback, then press the RANDOM button once. | | |



14 MP3 PLAYBACK

Listening to MP3 CD, CD-Rs and CD-RWs

There are many music distribution sites on the internet from which music files in MP3 format can be downloaded. Music downloaded as instructed on the site and written onto a CD-R/RW disc can be played on the DVD-2800.

If music recorded on commercially available music CDs is converted on a computer into MP3 files using an MP3 encoder (conversion software), the data on a 12 cm CD is reduced into about 1/10 the amount of the original data. Thus, when written in MP3 format, the data of about 10 music CDs can fit onto a single CD-R/RW disc. A single CD-R/RW disc can contain over 100 tracks.

* Values when 5-minute tracks are converted with a standard bit rate of 128 kbps into MP3 files and using a CD-R/RW disc with a capacity of 650 MB.

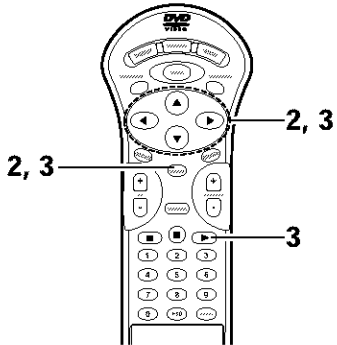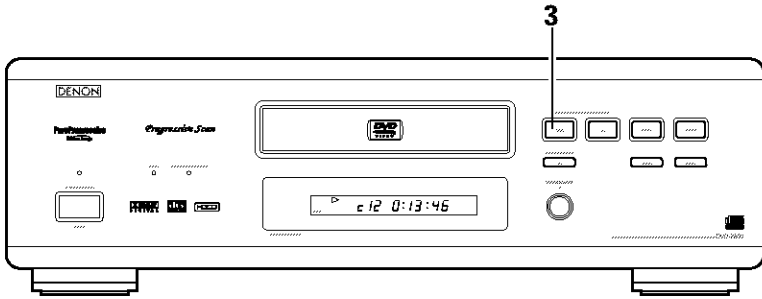

| | | |
|-----------------|---|--|
| <p>1</p> | <p>Load the CD-R/RW disc on which the MP3 format music files have been written into the DVD-2800. (See page 18.)</p> <ul style="list-style-type: none"> When the disc is loaded in the DVD-2800, the disc information screen appears. If there are multiple folders, proceed to step 2. If there are no folders on the disc (if the disc only contains MP3 files), proceed to step 3. <p>* All the folders recorded on the disc are displayed. (The folders are not displayed by layer.)</p> | |
| <p>2</p> | <p>Use the ▲ and ▼ cursor buttons to select the folder containing the file(s) you want to play, then press the ENTER button.</p> <p>* To change the folder</p> <p>Use the ▲ cursor button to select "ROOT" at the upper right of the screen, then press the ENTER button. The screen in step 1 reappears. Select the desired folder.</p> | |

Use the ▲ and ▼ cursor buttons to select the MP3 file you want to play, then press the PLAY button or ENTER button.

- Playback starts.

* The display can be switched between the single elapsed time and the single remaining time by pressing the DISPLAY button.

* Programmed playback is not possible with MP3 discs.

* To change the MP3 file

Press the STOP button, then use the ▲ and ▼ cursor buttons to reselect the desired MP3 file.

* To set the random play mode

In the stop mode, press the RANDOM button. Then press the PLAY button or ENTER button.

* To set the repeat mode

The repeat mode changes each time the REPEAT button is pressed.

NORMAL → TRACK REPEAT → FOLDER REPEAT




* To return to the initial disc information screen



Press the STOP button, use the ▲ cursor button to select "ROOT" at the upper right of the screen, then press the ENTER button.

The screen in step 1 reappears.



3

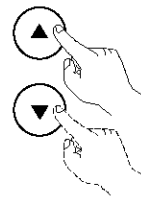

Remote control unit

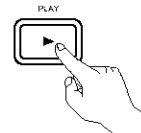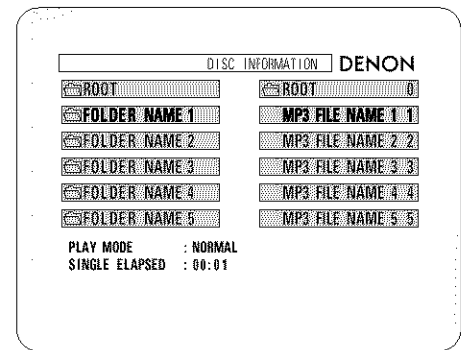

Main unit

  

Remote control unit


NOTES:


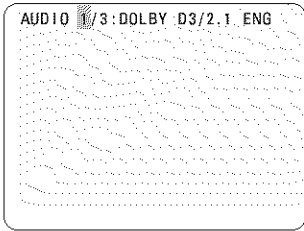
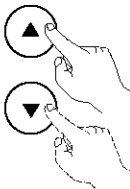
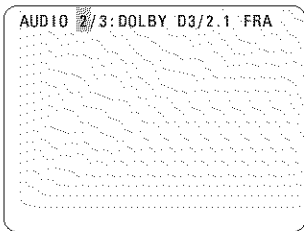
- The DVD-2800 is compatible with the "MPEG-1 Audio Layer 3" standards (sampling frequency of 32, 44.1 or 48 kHz). It is not compatible with such other standards as "MPEG-2 Audio Layer 3", "MPEG-2.5 Audio Layer 3", MP1, MP2, etc.
- It may not be possible to play some CD-R/RW discs due to disc properties, dirt, warping, etc.
- The digital signals output when playing MP3 files are MP3 signals converted into PCM, regardless of whether the audio output presetting is set to "normal" or "PCM conversion". The signals are output with the same sampling frequency as that of the music source.
- In general, the higher an MP3 file's bit rate, the better the sound quality. On the DVD-2800, we recommend using MP3 files recorded with bit rates of 128 kbps or greater.
- MP3 files may not be played in the expected order, since the writing software may change the position of the folders and the order of the files when writing them on the CD-R/RW.
- Manual search and programmed playback are not possible with MP3 discs.
- When writing MP3 files on CD-R/RW discs, select "ISO9660 level 1" as the writing software format. This may not be possible with some types of writing software. For details, refer to the writing software's usage instructions.
- With the DVD-2800 it is possible to display folder names and file names on the screen like titles. The DVD-2800 can display up to 11 characters, consisting of numbers, capital letters, and the "_" (underscore) mark.
- If recorded in a format other than "ISO9660 level 1", normal display and playback may not be possible. In addition, folder and file names including other symbols will not be displayed properly.
- Be sure to add the extension ".MP3" to MP3 files. Files cannot be played if they have any extension other than ".MP3" or if they have no extension. (with Macintosh computers, MP3 files can be played by adding the extension ".MP3" after the file name consisting of up to 8 capital or numbers and recording the files on the CD-R/RW.)
- Do not apply stickers, tape, etc., to either the label side or the signal side of CD-R/RW discs. If adhesive gets on the surface of a disc, the disc may get stuck inside the DVD-2800 and be impossible to eject.
- The DVD-2800 is not compatible with packet write software.
- The DVD-2800 is not compatible with ID3-Tag.
- The DVD-2800 is not compatible with play lists.

15 USING THE MULTIPLE AUDIO, SUBTITLE AND ANGLE FUNCTIONS

Switching the Audio Language (Multiple Audio Function)

■ With DVDs containing multiple audio language signals, the audio language can be switched during playback.

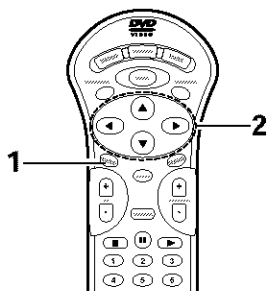


| | | |
|-----------------|---|---|
| <p>1</p> | <p>During playback, press the AUDIO button.</p> <ul style="list-style-type: none"> • The current audio language number is displayed. |  <p>Remote control unit</p>  |
| <p>2</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired language.</p> <ul style="list-style-type: none"> • The display turns off when the AUDIO button is pressed. |  <p>Remote control unit</p>  |

NOTES:

- With some discs it is not possible to change the audio language during playback. In such cases, select from the DVD menu. (See page 34.)
- If the desired language is not set after pressing the ▲ and ▼ cursor buttons several times, the disc does not include that language.
- The language selected in the default settings (see page 36) is set when the power is turned on and when the disc is replaced.

Switching the Subtitle Language (Multiple Subtitle Function)

■ With DVDs containing multiple subtitle language signals, the subtitle language can be switched during playback.

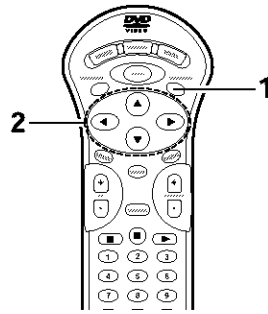


| | | |
|-----------------|--|----------------------------|
| <p>1</p> | <p>During playback, press the SUBTITLE button.</p> <ul style="list-style-type: none"> • The current subtitle language number is displayed. | <p>Remote control unit</p> |
| <p>2</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired language.</p> <ul style="list-style-type: none"> • The display turns off when the SUBTITLE button is pressed. | <p>Remote control unit</p> |

NOTES:

- If the desired language is not set after pressing the ▲ and ▼ cursor buttons several times, the disc does not include that language.
- The subtitle language set with the default settings (see page 37) is set when the power is turned on and when the disc is replaced. If that language is not included on the disc, the disc's default language is set.
- When the subtitle language is changed, several seconds may be required for the new language to appear.
- When a disc supporting the closed caption is played, the subtitle and the closed caption may overlap each other on the TV monitor. In this case, turn the subtitle off.

Switching the Angle (Multiple Angle Function)

■ With DVDs containing multiple angle signals, the angle can be switched during playback.

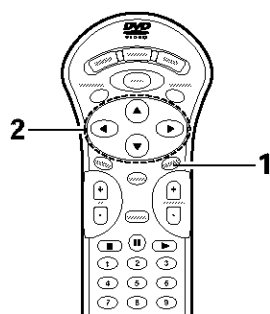

| | | |
|-----------------|--|----------------------------|
| <p>1</p> | <p>During playback, press the ANGLE button.</p> <ul style="list-style-type: none"> • The current angle number is displayed. | <p>Remote control unit</p> |
| <p>2</p> | <p>Use the ▲ and ▼ cursor buttons or the number buttons to select the desired angle.</p> <ul style="list-style-type: none"> • The display turns off when the ANGLE button is pressed. | <p>Remote control unit</p> |


NOTES:

- The multiple angle function only works with discs on which multiple angles are recorded.
- At scenes where multiple angles are recorded, the angle can be switched.

16 USING THE MENUS

Using the Top Menu

■ For DVDs containing multiple titles, the desired title can be selected and played from the top menu.

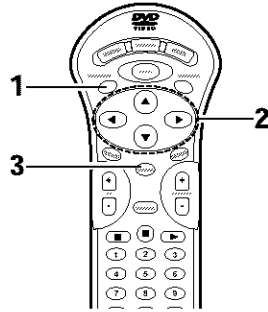

| | | |
|-----------------|--|--|
| <p>1</p> | <p>During playback, press the TOP MENU button.</p> <ul style="list-style-type: none"> • The top menu appears. | <p>Example:</p> <p>Remote control unit</p> |
| <p>2</p> | <p>Use the cursor or number buttons to select the desired title.</p> <ul style="list-style-type: none"> • If you select the title number using the number buttons, skip step 3 below. | <p>Example: When "Orange" is selected</p> <p>Remote control unit</p> |
| <p>3</p> | <p>Press the ENTER button.</p> <ul style="list-style-type: none"> • Playback starts. • Playback also starts if the PLAY button is pressed. | <p>Remote control unit</p> |


Using the DVD Menu

■ Some DVDs include special menus called DVD menus.

For example, DVDs with complex contents may contain guide menus, and DVDs with multiple languages may contain audio and subtitle language menus.


These menus are called "DVD menu".

Here we describe the general procedure for using DVD menus.

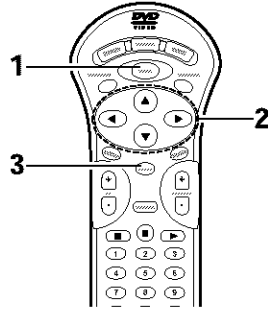


| | | |
|-----------------|---|--|
| <p>1</p> | <p>During playback, press the MENU button.</p> <ul style="list-style-type: none"> The DVD menu appears. | <p>Example:</p> <p>Remote control unit</p> |
| <p>2</p> | <p>Use the cursor or number buttons to select the desired item.</p> <ul style="list-style-type: none"> If you select the item using the number buttons, skip step 3 below. | <p>Example: "AUDIO" is selected</p> <p>Remote control unit</p> |
| <p>3</p> | <p>Press the ENTER button.</p> <ul style="list-style-type: none"> The selected item is set. If more menus appear, repeat steps 2 and 3. | <p>Remote control unit</p> |

17 CHANGING THE DEFAULT SETTINGS

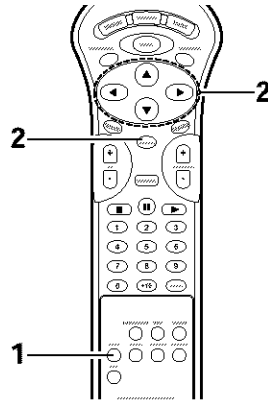

| | | |
|--|---|--------------------------------|
| <p>1</p> | <p>In the stop mode, press the SETUP button.</p> <ul style="list-style-type: none"> The setup (default settings) screen appears. <p>1. DISC SETUP Use this to set the language to be used when playing the disc. If the set language is not offered on that disc, the discs default language is set.</p> <p>2. OSD SETUP Use this to set the language for the default setting screen and messages displayed on the TV screen ("PLAY", etc.).</p> <p>3. VIDEO SETUP Use this to set the DVD-2800's screen mode. (TV aspect and TV type.)</p> <p>4. AUDIO SETUP Use this to set the DVD-2800's audio output mode. (Digital and LPCM output settings.)</p> <p>5. RATINGS Use this to disable playback of adult DVDs so that children cannot watch them. Note that playback of adult DVDs cannot be disabled if the rating level is not recorded on the DVD, but that it is possible to disable playback of all DVDs.</p> <p>6. OTHER SETUP These include special settings CAPTIONS and COMPRESSION.</p> | <p>Remote control unit</p> |
| <p>2</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired setting item, then press the ENTER button.</p> <p>Select "1. DISC SETUP". (See page 36.)</p> <p>Select "2. OSD SETUP". (See page 38.)</p> <p>Select "3. VIDEO SETUP". (See page 40.)</p> <p>Select "4. AUDIO SETUP". (See page 42.)</p> <p>Select "5. RATINGS". (See page 44.)</p> <p>Select "6. OTHER SETUP" (See page 46)</p> | <p>Remote control unit</p> |
| <p>* To exit the setup mode</p> <p>At the setup screen in step 1 on page 35, use the ▲ and ▼ cursor buttons to select "EXIT SETUP", then press the ENTER button. It is also possible to quit by pressing the SETUP button on the remote control unit.</p> | | |

When "1. DISC SETUP" is selected

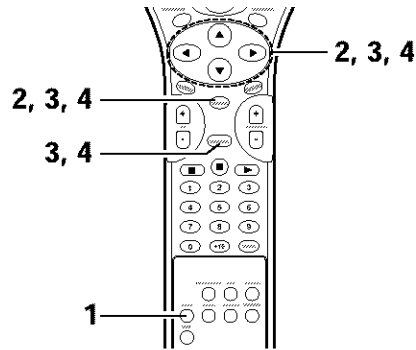

| | | |
|-----------------|--|--|
| <p>1</p> | <p>Read page 35.</p> | |
| <p>2</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired setting, then press the ENTER button.</p> <p>1. DIALOG Use this to set the language of the sound output from the speakers.</p> <p>2. SUBTITLE Use this to set the language of the subtitles displayed on the TV.</p> <p>3. DISC MENUS Use this to set the language of the menus recorded on the disc (top menu, etc.).</p> <p>* To exit the disc setup mode Use the ▲ and ▼ cursor buttons to select "MAIN PAGE", then press the ENTER button. Press RETURN button, you can go back to the previous screen.</p> <ul style="list-style-type: none"> The screen returns to as it was in step 1. | |
| <p>3</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired setting, then press the ENTER button.</p> <p>① When "1. DIALOG" is selected:</p> <p>ENGLISH (Factory default) Select this when you want to play the DVD with the sound in English.</p> <p>FRENCH Select this when you want to play the DVD with the sound in French.</p> <p>SPANISH Select this when you want to play the DVD with the sound in Spanish.</p> <p>GERMAN Select this when you want to play the DVD with the sound in German.</p> <p>CHINESE Select this when you want to play the DVD with the sound in Chinese.</p> <p>JAPANESE Select this when you want to play the DVD with the sound in Japanese.</p> | |

*** To exit the dialog mode**

Use the ▲ and ▼ cursor buttons to select "DISC SETUP", then press the ENTER button. Press RETURN button, you can go back to the previous screen.

② When "2. SUBTITLE" is selected:

ENGLISH (Factory default)

Select this when you want to play the DVD with the subtitles in English.

FRENCH

Select this when you want to play the DVD with the subtitles in French.

SPANISH

Select this when you want to play the DVD with the subtitles in Spanish.

GERMAN

Select this when you want to play the DVD with the subtitles in German.

CHINESE


Select this when you want to play the DVD with the subtitles in Chinese.

JAPANESE

Select this when you want to play the DVD with the subtitles in Japanese.

OFF


Select this if you do not want to display the subtitles. (For some discs it is not possible to turn off the subtitle display.)

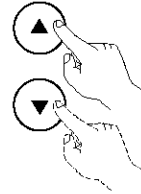

Remote control unit



Remote control unit

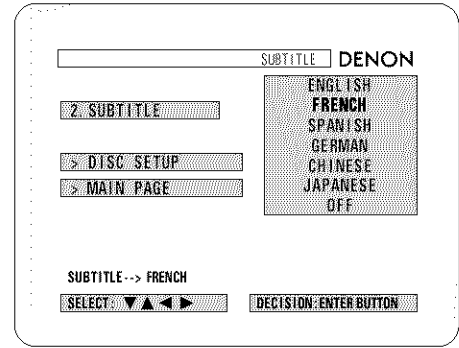

4

*** To exit the subtitle mode**

Use the ▲ and ▼ cursor buttons to select "DISC SETUP", then press the ENTER button. Press RETURN button, you can go back to the previous screen.

③ When "3. DISC MENUS" is selected:

ENGLISH (Factory default)

Select this when you want to display the menus in English.

FRENCH

Select this when you want to display the menus in French.

SPANISH

Select this when you want to display the menus in Spanish.

GERMAN


Select this when you want to display the menus in German.

CHINESE

Select this when you want to display the menus in Chinese.

JAPANESE


Select this when you want to display the menus in Japanese.

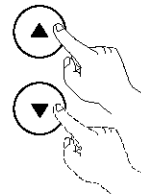


Remote control unit



Remote control unit

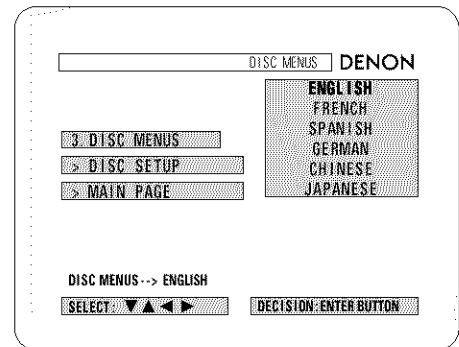

When "2. OSD SETUP" is selected

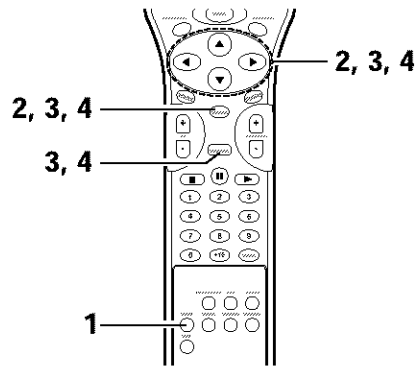

| | | |
|-----------------|--|---|
| <p>1</p> | <p>See page 35.</p> | |
| <p>2</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired setting, then press the ENTER button.</p> <p>1. OSD LANGUAGE Use this to set the language for the default setting screen and messages displayed on the TV screen ("PLAY", etc.)</p> <p>2. WALL PAPER Use this to select the image to be shown on the screen in the stop mode and CD play mode.</p> <p>* To exit the osd setup mode Use the ▲ and ▼ cursor buttons to select "MAIN PAGE", then press the ENTER button. Press RETURN button, you can go back to the previous screen.</p> <ul style="list-style-type: none"> The screen returns to as it was in step 1. | <p>Remote control unit</p> <p>Remote control unit</p> |
| <p>3</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired setting, then press the ENTER button.</p> <p>① When "1. OSD LANGUAGE" is selected:</p> <p>ENGLISH (Factory default) Select this to set the OSD language to English.</p> <p>FRANÇAIS Select this to set the OSD language to French.</p> <p>ESPAÑOL Select this to set the OSD language to Spanish.</p> <p>* To exit the osd language mode Use the ▲ and ▼ cursor buttons to select "OSD SETUP", then press the ENTER button. Press RETURN button, you can go back to the previous screen.</p> | <p>Remote control unit</p> <p>Remote control unit</p> |
| <p>4</p> | | |

4

Use the ▲ and ▼ cursor buttons to select the desired setting, then press the ENTER button.

② When "2. WALL PAPER" is selected:

BLUE (Factory default)

Select this to display a blue background.




PICTURE

Select this to display a defocussed picture.
Choose this for CRT and Plasma TVs.


*** To exit the wall paper mode**

 Use the ▲ and ▼ cursor buttons to select "OSD SETUP", then press the ENTER button.

Press RETURN button, you can go back to the previous screen.

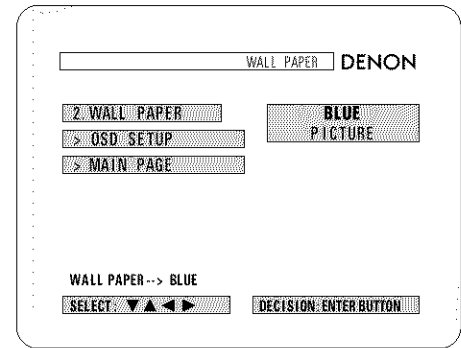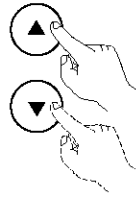

When "3. VIDEO SETUP" is selected

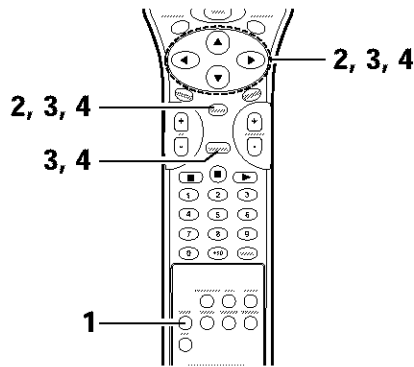

| | | |
|-----------------|--|---|
| <p>1</p> | <p>See page 35.</p> | |
| <p>2</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired setting, then press the ENTER button.</p> <p>1. TV ASPECT Use this to set the shape of your TV's screen.</p> <p>2. TV TYPE Use this to set your TV's video format (NTSC, PAL or MULTI).</p> <p>3. VIDEO OUT Use this to select either the progressive image output or interface image output.</p> <p>* To exit the video setup mode Use the ▲ and ▼ cursor buttons to select "MAIN PAGE", then press the ENTER button. Press RETURN button, you can go back to the previous screen.</p> <ul style="list-style-type: none"> The screen returns to as it was in step 1. | <p>Remote control unit</p> <p>Remote control unit</p> |
| <p>3</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired setting, then press the ENTER button.</p> <p>① When "1. TV ASPECT" is selected:</p> <p>4:3 PS (Factory default) Select this to play wide DVDs in the pan & scan mode (with the sides of the picture cut off). Discs for which pan & scan is not specified are played in the letter box mode.</p> <p>4:3 LB Select this to play wide DVDs in the letter box mode (with black strips at the top and bottom).</p> <p>WIDE (16:9) Select this to play wide DVDs in the full-screen mode.</p> <p>* To exit the TV aspect mode Use the ▲ and ▼ cursor buttons to select "VIDEO SETUP", then press the ENTER button. Press RETURN button, you can go back to the previous screen.</p> | <p>Remote control unit</p> <p>Remote control unit</p> |
| | | |

4

② When "2. TV TYPE" is selected:

MULTI (Factory default)

Select this when your TV is compatible with both the NTSC and PAL formats.

NTSC signals are output from the video output jacks when discs recorded in NTSC format are played, and PAL signals are output from the video output jacks when discs recorded in PAL format are played.

NTSC

Select this when your TV's video format is NTSC. If NTSC is selected, output format is fixed to NTSC.

PAL

Select this when your TV's video format is PAL. If PAL is selected, output format is fixed to PAL.

*** To exit the TV type mode**

Use the ▲ and ▼ cursor buttons to select "VIDEO SETUP", then press the ENTER button. Press RETURN button, you can go back to the previous screen.

③ When "3. VIDEO OUT" is selected: (NOTE)

PROGRESSIVE (Factory default)


Select this when using the DVD-2800 connected to a progressive type TV.

INTERLACED


Select this when using the DVD-2800 connected to an interlace type TV.

*** To exit the video out mode**



Use the ▲ and ▼ cursor buttons to select "VIDEO SETUP", then press the ENTER button. Press RETURN button, you can go back to the previous screen.

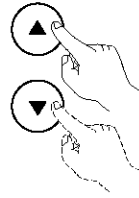


Remote control unit

 


Remote control unit

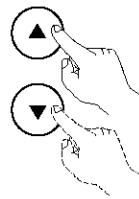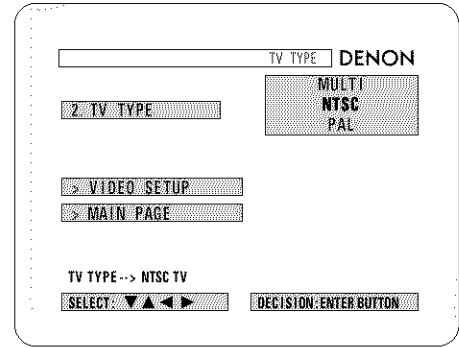

Remote control unit

 


Remote control unit

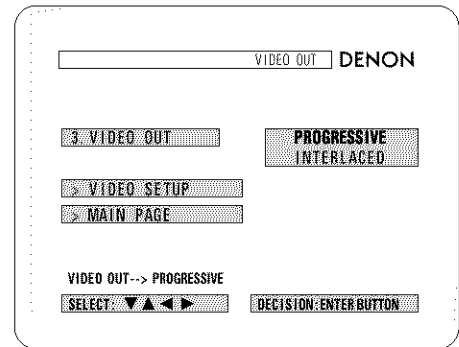

NOTE:

- For the component output only, it is possible to switch between interlace image output and progressive image output. It is not possible to specify progressive image output for the Video output connectors or S-Video output connector.

When "4. AUDIO SETUP" is selected

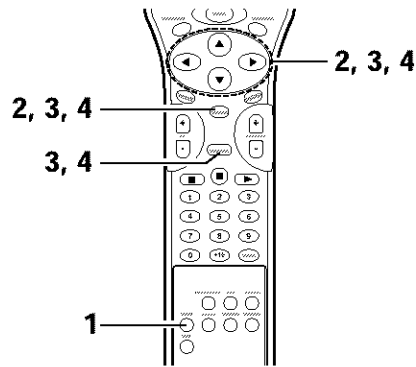

| | | |
|-----------------|--|---|
| <p>1</p> | <p>See page 35.</p> | |
| <p>2</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired setting, then press the ENTER button.</p> <p>1. DIGITAL OUT Use this to select the digital output's signal format.</p> <p>2. LPCM SELECT (96 kHz → 48 kHz) Use this to set the digital audio output when playing DVDs recorded in linear PCM audio.</p> <p>* To exit the audio setup mode Use the ▲ and ▼ cursor buttons to select "MAIN PAGE", then press the ENTER button. Press RETURN button, you can go back to the previous screen.</p> <ul style="list-style-type: none"> The screen returns to as it was in step 1. | <p>Remote control unit</p> <p>Remote control unit</p> |
| <p>3</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired setting, then press the ENTER button.</p> <p>① When "1. DIGITAL OUT" is selected:</p> <p>NORMAL (Factory default) Select this to listen to the digital audio output signals output from the digital audio output terminals (optical/coaxial) when playing DVDs recorded in Dolby Digital or DTS.</p> <p>PCM Select this to listen to the digital audio output signals output from the digital audio output terminals (optical/coaxial) when playing DVDs recorded in linear PCM.</p> <p>OFF When "OFF" is selected, analog signals are output from the set's analog audio output. Digital signals are not output from the digital audio output at this time.</p> <p>* To exit the digital out mode Use the ▲ and ▼ cursor buttons to select "AUDIO SETUP", then press the ENTER button. Press RETURN button, you can go back to the previous screen.</p> | <p>Remote control unit</p> <p>Remote control unit</p> |
| <p>4</p> | | |

4

② When "2. LPCM SELECT (96 kHz → 48 kHz)" is selected:

This setting is valid when "NORMAL" or "PCM" is selected for "1. DIGITAL OUT".

OFF (Factory default)

Only linear PCM audio signals recorded at 48 kHz/16 bits are output from the digital output terminals.

When playing DVDs containing 48 kHz/20 or 24 bit or 96 kHz linear PCM audio signals, nothing is output from the digital output terminals.

For DVDs on which no copyright protection measures are taken, however, the audio signals are output in the format in which they were recorded.

ON (96 kHz → 48 kHz)


When playing DVDs containing 48 kHz/20 or 24 bit or 96 kHz linear PCM audio signals, the signals are converted into 48 kHz/16 bit signals and output from the digital output terminals.

(In consideration of copyrights, the actual PCM audio digital output is under 48 kHz/16 bits.)


*** To exit the LPCM select mode**

Use the ▲ and ▼ cursor buttons to select "AUDIO SETUP", then press the ENTER button.


Press RETURN button, you can go back to the previous screen.

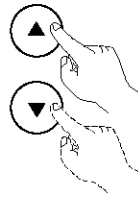


Remote control unit

 

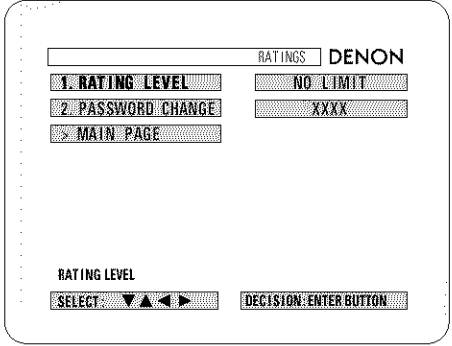
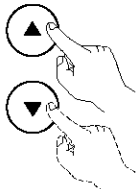

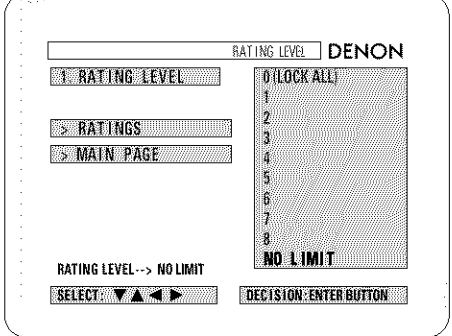
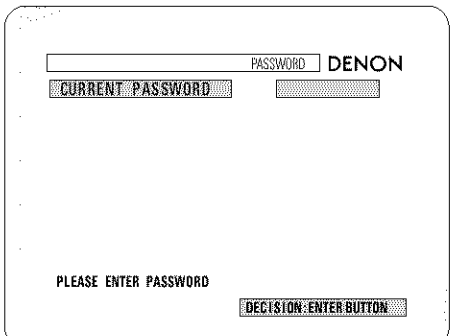


Remote control unit

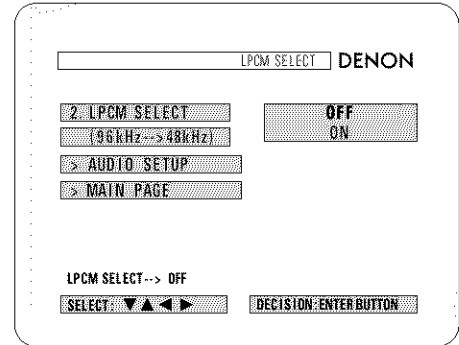


When "5. RATINGS" is selected

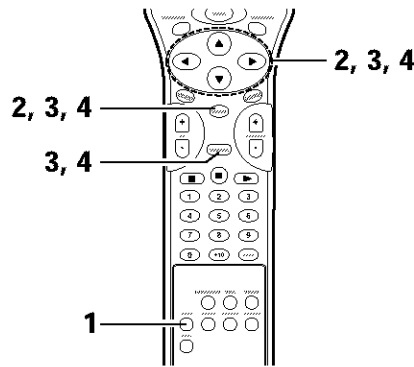

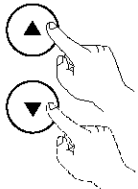
| | | |
|-----------------|--|---|
| <p>1</p> | <p>See page 35.</p> | |
| <p>2</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired setting, then press the ENTER button.</p> <p>1. RATING LEVEL Use this to restrict playback of adult DVDs you do not want children to view. Note that even with adult DVDs, viewing cannot be restricted unless the restriction level is recorded on the disc. It is however possible to disable playback of all DVDs.</p> <p>3 2. PASSWORD CHANGE Use this to change the password. The set's password is set to "0000" by default.</p> <p>* To exit the rating setup mode Use the ▲ and ▼ cursor buttons to select "MAIN PAGE", then press the ENTER button. Press RETURN button, you can go back to the previous screen.</p> <ul style="list-style-type: none"> The screen returns to as it was in step 1. |  <p>Remote control unit</p>  <p>Remote control unit</p>  |
| <p>4</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired setting, then press the ENTER button.</p> <p>① When "1. RATING LEVEL" is selected:</p> <p>Level 0 (LOCK ALL) Select this to disable playback of all DVDs. Use this for example to disable playback of adult DVDs on which the rating level is not recorded.</p> <p>Level 1 Select this to play only DVDs for children. (Adult and general audience DVDs cannot be played.)</p> <p>Level 2 to Level 8 Select this to play DVDs for general audiences and children. Adult DVDs cannot be played.</p> <p>NO LIMIT (Factory default) Select this to play all DVDs.</p> <p>Use the number buttons to input a 4-digit password, then press the ENTER button.</p> <ul style="list-style-type: none"> The set's password is set to "0000" by default. Do not forget the password. The setting cannot be changed without inputting the correct password. |  <p>Remote control unit</p>  <p>Remote control unit</p>   |

4


- ② When "2. PASSWORD CHANGE" is selected:
 Use the number buttons to input a 4-digit password, then press the ENTER button.
- * Do not forget the password.
- * The setting cannot be changed without inputting the correct password.
- * The set's password is set to "0000" by default.

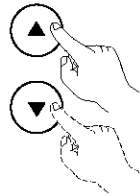


Remote control unit

 





Remote control unit

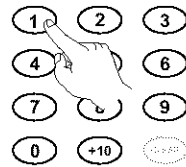


Remote control unit

 

Remote control unit

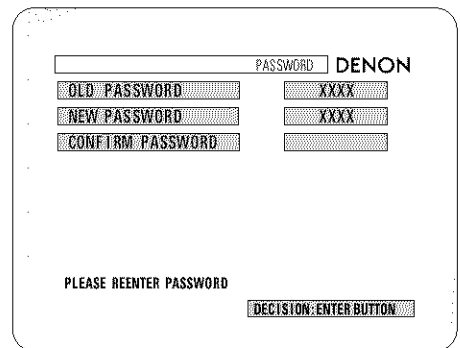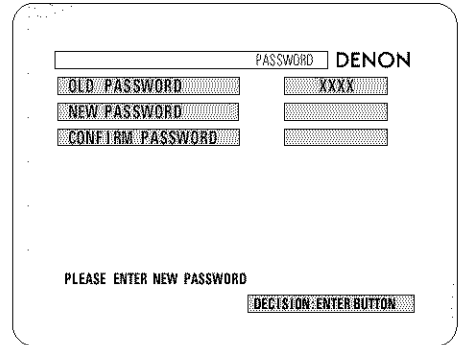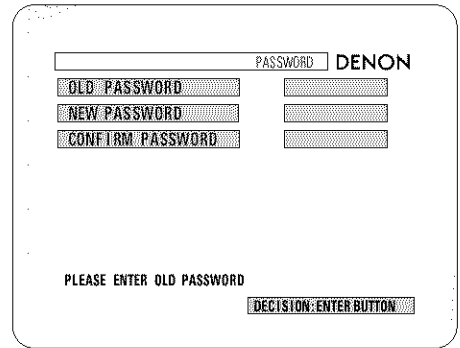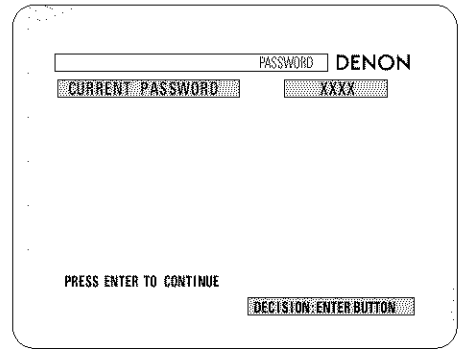

When "6. OTHER SETUP" is selected

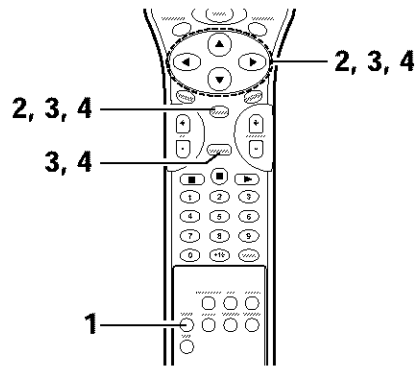

| | | |
|-----------------|--|---|
| <p>1</p> | <p>See page 35.</p> | |
| <p>2</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired setting, then press the ENTER button.</p> <p>1. CAPTIONS Use this to set whether or not to display the closed captions recorded on DVDs.</p> <p>2. COMPRESSION Use this to set the dynamic range output when playing discs.</p> <p>* To exit the other setup mode Use the ▲ and ▼ cursor buttons to select "MAIN PAGE", then press the ENTER button. Press RETURN button, you can go back to the previous screen.</p> <ul style="list-style-type: none"> The screen returns to as it was in step 1. | <p>Remote control unit</p> <p>Remote control unit</p> |
| <p>3</p> | <p>Use the ▲ and ▼ cursor buttons to select the desired setting, then press the ENTER button.</p> <p>① When "1. CAPTIONS" is selected:</p> <p>OFF (Factory default) Select this when you do not want to display the captions on the screen when playing DVDs containing English captions</p> <p>ON Select this to display the captions on the screen when playing DVDs containing English captions.</p> <p>* To exit the captions mode Use the ▲ and ▼ cursor buttons to select "OTHER SETUP", then press the ENTER button. Press RETURN button, you can go back to the previous screen.</p> <ul style="list-style-type: none"> The screen returns to as it was in step 1. | <p>Remote control unit</p> <p>Remote control unit</p> |
| <p>4</p> | | |

4

② When "2. COMPRESSION" is selected:

OFF (Factory default)

Select this for the standard range.


ON

Select this to achieve powerful sound even when the volume is low. This setting is suited for watching DVDs late at night with the volume low. (This setting is only valid for DVDs recorded in Dolby Digital.)


*** To exit the compression mode**

 Use the ▲ and ▼ cursor buttons to select "OTHER SETUP", then press the ENTER button. Press RETURN button, you can go back to the previous screen.


- The screen returns to as it was in step 1.

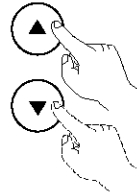




Remote control unit

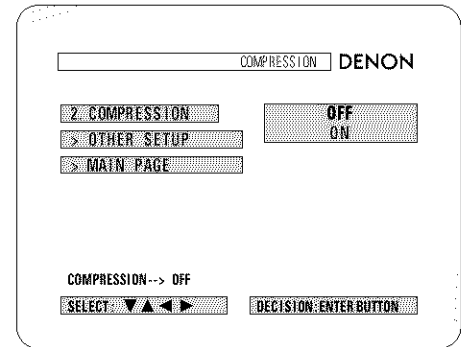

Remote control unit



NOTES:

- An English caption decoder is required to display English captions.
- DVDs with caption signals are indicated by the , , , mark.
English captions cannot be displayed when playing DVDs which do not contain caption signals.
- The characters in which the captions are displayed (capital letters, small letters, italics, etc.) depend on the DVD and cannot be selected with the DVD-2800.

18 TROUBLESHOOTING

Check again before assuming the player is malfunctioning

■ **Are all the connections correct ?**

■ **Are you following the instructions in the manual ?**

■ **Are the amplifier and speakers operating properly ?**

If the DVD-2800 does not seem to be functioning properly, check the table below. If this does not solve the problem, the DVD-2800 may be damaged. Turn off the power, unplug the power cord from the power outlet, and contact your store of purchase or nearest Denon sales office.

| Symptom | Check | Page |
|--|---|----------------------------|
| Power does not turn on. | <ul style="list-style-type: none"> Plug the power cord securely into the power outlet. | 9 |
| Playback does not start when PLAY button is pressed. Playback stops immediately. | <ul style="list-style-type: none"> Is there condensation on the disc or player ? (Let stand for 1 or 2 hours.) Discs other than DVDs, video CDs and music CDs cannot be played. Disc is dirty. Wipe off the dirt. | - 7 8 |
| Picture does not appear. | <ul style="list-style-type: none"> Check the connections. Set the TV's input to "video". | 9 - |
| Sound is not produced or sound quality is poor. | <ul style="list-style-type: none"> Check the connections. Properly set the input of the TV, stereo, etc. Check the "DIGITAL OUT" and "COMPRESSION" settings. | 9 - 42, 47 |
| Menu playback of video CD's is not possible. | <ul style="list-style-type: none"> Menu playback is not possible with anything but video CDs with playback control. | 18 |
| Picture is disturbed during the search operation. | <ul style="list-style-type: none"> Some disturbance is normal. | - |
| Buttons do not operate. | <ul style="list-style-type: none"> Some operations are disabled for some discs. | 19 |
| No subtitles are displayed. | <ul style="list-style-type: none"> Subtitles are not displayed for DVDs not containing subtitles. Subtitles are turned off. Turn the subtitles setting on. | - 31 |
| Audio (or subtitle) language does not switch. | <ul style="list-style-type: none"> The audio (or subtitle) language does not switch for discs which do not include multiple audio (or subtitle) languages. For some discs the audio (or subtitle) language cannot be switched when the operation to switch it is performed, but can be switched on the menu screens. | - 30, 31 |
| Angle does not switch. | <ul style="list-style-type: none"> The angle cannot be switched for DVDs which do not contain multiple angles. In some cases multiple angles are only recorded for specific scenes. | 32 |
| Playback does not start when the title is selected. | <ul style="list-style-type: none"> Check the "RATINGS SETUP" setting. | 44 |
| The password for rating level has been forgotten. Reset all the setting to Factory Preset. | <ul style="list-style-type: none"> While the player is in the stop mode, hold the player's SKIP (I◀◀) button and the STILL/PAUSE button down simultaneously and then hold the OPEN/CLOSE button down for longer than 3 seconds (until "INITIALIZE" disappears from the TV monitor). The lock will be released and all default settings and picture settings will return to the default values. | - |
| The disc is not played with the audio or subtitle language set as the default setting. | <ul style="list-style-type: none"> The disc does not play with the selected audio or subtitle language if that audio or subtitle language is not included on that DVD. | 36, 37 |
| Picture is not displayed in 4:3 (or 16:9). | <ul style="list-style-type: none"> Set the "TV ASPECT" default setting to the proper setting for the connected TV. | 40 |
| Menu screen messages for the desired language do not display. | <ul style="list-style-type: none"> Check the default setting for the disc language's menu language. | 37 |
| Remote control unit does not operate. | <ul style="list-style-type: none"> Check that the batteries are inserted in the proper "⊕" and "⊖" directions. The batteries are dead. Replace them with new batteries. Point the remote control unit at the remote control sensor when operating it. Operate the remote control unit within a distance of 7 meters from the remote control sensor. Remove the obstacle between the remote control unit and remote control sensor. | 15 15 15 15 15 |

19 MAIN SPECIFICATIONS

| | | |
|-------------------------------------|--|----------------------------|
| Signal system: | NTSC/PAL | |
| Applicable discs: | (1) DVD-Video discs 1-layer 12 cm single-sided discs, 2-layer 12 cm single-sided discs, 2-layer 12 cm double-sided discs (1 layer per side) 1-layer 8 cm single-sided discs, 2-layer 8 cm single-sided discs, 2-layer 8 cm double-sided discs (1 layer per side) (2) Compact discs (CD-DA, Video CD) 12 cm discs, 8 cm discs | |
| S-Video output: | Y output level: 1 Vp-p (75 Ω /ohms) | C output level: 0.286 Vp-p |
| | Output connectors: S connectors, 1 set | |
| Video output: | Output level: 1 Vp-p (75 Ω /ohms) Output connector: Pin-plug jacks, 1 set | |
| Component output: | Y output level: 1 Vp-p (75 Ω /ohms) PB/CB output level: 0.648 Vp-p (75 Ω /ohms) PR/CR output level: 0.648 Vp-p (75 Ω /ohms) Output connector: Pin jack, 1 set | |
| Audio output: | Fixed output level: 2 Vrms, 1 set | |
| Audio output properties: | (1) Frequency response ① DVDs (linear PCM) : 2 Hz to 22 kHz (48 kHz sampling) : 2 Hz to 44 kHz (96 kHz sampling) ② CDs : 2 Hz to 20 kHz | |
| | (2) S/N ratio ① DVDs : 115 dB ② CDs : 115 dB | |
| | (3) Total harmonic distortion ① DVDs : 0.0018 % ② CDs : 0.0018 % | |
| | (4) Dynamic range ① DVDs : 108 dB ② CDs : 100 dB | |
| Digital audio output: | Optical digital output | : Optical connector, 1 set |
| | Coaxial digital output | : Pin jack, 1 set |
| Power supply: | AC 120 V, 60 Hz | |
| Power consumption: | 22 W | |
| Maximum external dimensions: | 434 (width) x 132 (height) x 339 (depth) mm (including protruding parts) | |
| Mass: | 6.5 kg | |
| Remote control unit: | RC-546 | |
| Type: | Infrared pulse | |
| Power supply: | DC 3 V, 2 "AAA" (R03) batteries | |

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

* Design and specifications are subject to change without notice in the course of product improvement.