

SOLID STATE COLOR TV

 
27FX49B

OPERATING GUIDE



IMPORTANT SAFEGUARDS

2-3

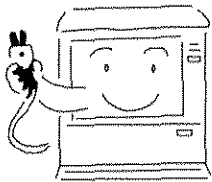


FIRST TIME USE

4-9




REMOTE CONTROL

 10-19

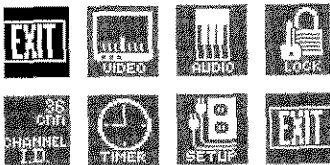

SPECIAL FUNCTIONS

 20-30

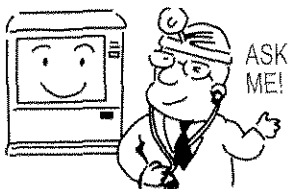



USEFUL INFORMATION

31-32

Important

Follow all warnings and instructions marked on this television receiver.


| | | |
|--|---|---|
|  | CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN |  |
| CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. | | |



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of a sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

| | |
|---|---|
|  | CAUTION: Never remove the back cover of the set as this can expose you to very high voltages and other hazards. If the set does not operate properly, unplug the set and call your authorized dealer or service shop. To prevent fire or shock hazard, do not expose this television system to rain or moisture. |
|---|---|

| | |
|--------------|--|
| NOTE: | This television receiver will display closed captioning, (CC or), in accordance with paragraph 15.119 of the FCC rules. Model and serial numbers are indicated on back side of the set. |
|--------------|--|

| | |
|----------------------|--|
| Modifications | The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Hitachi Home Electronics (America), Inc. may void the user's authority to operate the equipment. |
|----------------------|--|

POWER SOURCE

- This solid state color TV is designed to operate on 120 volts 60Hz, AC household current.
- Insert power cord into a 120 volt 60Hz outlet.
- To prevent electric shock, do not use the television's plug with an extension cord, receptacle, or other outlet unless the blades and ground terminal can be fully inserted to prevent blade exposure.
- Never connect the TV to 50Hz, direct current, or anything other than the specified voltage.

IMPORTANT SAFEGUARDS

SAFETY POINTS YOU SHOULD KNOW ABOUT YOUR HITACHI TELEVISION RECEIVER

- CAUTION:**
- Read all of these instructions.
 - Save these instructions for later use.
 - Follow all warnings and instructions marked on the television receiver.

Our reputation has been built on the quality, performance, and ease of service of HITACHI television receivers.

Safety is also foremost in our minds in the design of these units. To help you operate these products properly, this section illustrates safety tips which will be of benefit to you. Please read it carefully and apply the knowledge you obtain from it to the proper operation of your HITACHI television receiver.

 
Please fill out your warranty card and mail it at once to HITACHI. This will enable HITACHI to notify you promptly in the improbable event that a safety problem should be discovered in your product model.

FOR YOUR PERSONAL SAFETY

1. This television set is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other.) This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.



2. When the power cord or plug is damaged or frayed, unplug the television set from the wall outlet and refer servicing to qualified service personnel.

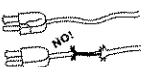

3. Do not overload wall outlets and extension cords as this can result in fire or electric shock.



4. Do not allow anything to rest on or roll over the power cord, and do not place the TV where the power cord is subject to traffic or abuse. This may result in a shock or fire hazard.



 
5. Do not attempt to service the television set yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



6. Never push objects of any kind into the television's cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the television set.



7. If the television set has been dropped or the cabinet has been damaged, unplug the television set from the wall outlet and refer servicing to qualified service personnel.

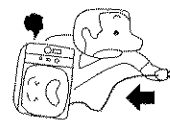

8. If liquid has been spilled into the television set, unplug it from the wall outlet and refer service to qualified service personnel.



9. Do not subject your television set to impact of any kind. Be careful not to damage the picture tube surface.



10. Unplug the television set from the wall outlet before cleaning. Use a damp cloth for cleaning. Do not use liquid or aerosol cleaners.



11-1. Do not place the television set on an unstable cart, stand, or table. The television set may fall, causing serious injury to a child or an adult, and serious damage to the appliance. Use only with a cart or stand recommended by the manufacturer, or sold with the television set. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.



 
11-2. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.




Important

PROTECTION AND LOCATION OF YOUR TELEVISION SET

12. Do not use the television set near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

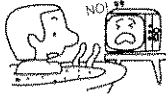

 - Never expose the set to rain or water. If the set has been exposed to rain or water, unplug set from wall outlet and refer to qualified service personnel.

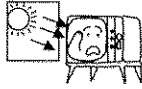


13. Choose a place where light (artificial or sunlight) does not shine directly on the screen.

14. Avoid dusty places, since accumulated dust inside the chassis may cause failure of the set when high humidity persists.



 15. The set has slots or openings in the cabinet for ventilation purposes which provide reliable operation of the receiver and protect the TV from overheating. These openings must not be blocked or covered.

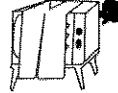

- Never cover the slots or openings with cloth or other material.

- Never block the bottom ventilation slots of the set by placing it on a bed, sofa, rug, etc.



- Never place the set near or over a radiator or heat register.

 


- Never place the set in a "built-in" enclosure, unless proper ventilation is provided.




PROTECTION AND LOCATION OF YOUR TELEVISION SET

16. If an outside antenna is connected to the television set, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, NFPA No. 70-1975, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit connection to grounding electrode, and requirements for the grounding electrode.

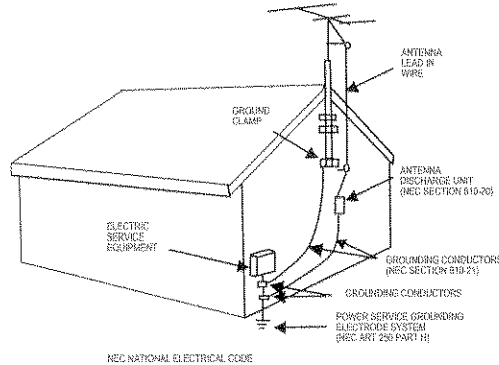


EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE INSTRUCTIONS.

 17. An outside antenna system should not be located in the vicinity of overhead power lines or other electrical lights or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

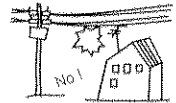

 
18. For added protection for the television set during a lightning storm, or when it is unused for long periods of time, unplugging it from the wall outlet and disconnect antenna. This will prevent damage due to lightning and power-line surges.

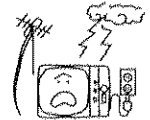


16-1. Note to CATV system installer: (Only for television sets with CATV reception) This reminder is provided to call CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

OPERATION OF YOUR TELEVISION SET

 
19. This television set should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply at your home, consult your television dealer or local power company. For television sets designed to operate from battery power, refer to the operating instructions.

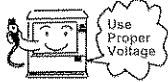

 20. If the television set does not operate normally by following the operating instructions, unplug the television set from the wall outlet and refer servicing to qualified service personnel. Adjust only those controls that are covered in the instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified service technician to restore the television set to normal operation.

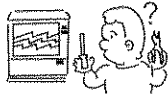

 21. If your television set is to remain unused for a period of time, (such as when going on a holiday), turn the television set OFF and unplug it from the wall outlet.

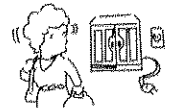


IF THE TELEVISION SET DOES NOT OPERATE PROPERLY

22. If you are unable to restore normal operation by following the detailed procedure in your operating instructions, do not attempt any further adjustments. Unplug the set and call your dealer or service technician.



23. Whenever the television set is damaged or fails, or if there is a distinct change in performance that indicates a need for service, unplug the set and have it checked by a qualified service technician.

 24. It is normal for some television sets to make occasional snapping or popping sounds, particularly when being turned on or off. If the snapping or popping is continuous or frequent, unplug the set and consult your dealer or service technician.

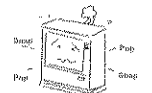


FOR SERVICING AND MODIFICATION

25. Do not use attachments not recommended by the television set manufacturer as they may cause hazards.



26. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

 27. Upon completion of any service or repairs to the television set, ask the service technician to perform routine safety checks to determine that the television is in safe operating condition.

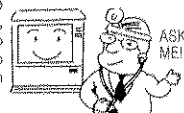

Introduction

Your new television features all solid state components. It is designed to give you many years of enjoyment. It was thoroughly tested and adjusted at the factory for best performance. In order for you to take full advantage of your new television, please read and follow the installation and operating instructions contained in this manual.

Customer Record

The model and serial number of this product are located on the back of the TV. You should note the model and serial number in the space provided and retain as a permanent record of your purchase. This will aid in identification in the event of theft or loss.

| | |
|--------|--|
| Model | |
| Number | |
| Serial | |
| Number | |

Care and Cleaning

Picture Tube (Turn TV Off)

Use a mild soap solution or window cleaner with a soft clean cloth. DO NOT USE ABRASIVE CLEANERS. Avoid excessive moisture and wipe dry.

Plastic Cabinets

Wipe the cabinet with a soft cloth dampened with water or a mild detergent solution and wipe dry with a soft clean cloth. Avoid excessive moisture. Do not use benzene, thinner or other petroleum based products.

Remote Control

Wipe the cabinet with a soft cloth dampened with water or a mild detergent solution and wipe dry with a soft clean cloth. Do not use benzene, thinner or other petroleum based products.

Television Location

This television is intended to be used with a stand or entertainment center. Consult your dealer for available options. Locate for comfortable viewing. Avoid placing where sunlight or other bright lights (including reflections) will fall on the screen. Use of some types of fluorescent lighting may reduce remote control transmitter range.

Adequate ventilation is essential to prevent internal component failure. Keep away from excessive heat or moisture. To ensure optimum color purity do not position magnetic equipment (motors, fans, external speakers) nearby.

 
Optional Cable Connections

The Audio/Video connections between components can be made with shielded video and audio cables. For best performance, video cables should utilize 75 ohm coaxial shielded wire. Cables are available from your dealer or electronic supply house.

Before you purchase any cables, be sure you know what type of output and input connectors your various components require. Also determine the length of cable you'll need.

AC Power Supply Cord

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF AC OUTLET AND FULLY INSERT. DO NOT USE A PLUG WITH A RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. FOR SOME MODELS THAT ARE NON-POLARIZED, THE USE OF AN AC ADAPTOR CONNECTOR MAY BE NECESSARY.

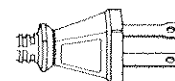


Polarized Plug

Remote Control Battery Installation

Batteries: Use two "AA" batteries.

 1. Remove the battery compartment cover on back of the remote.
2. Install the batteries in the battery compartment. (Polarity (+) or (-) must be correct.)
3. Reattach the battery cover.

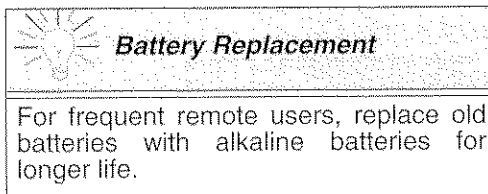

Precaution on Battery Use

Incorrect installation can cause battery leakage and corrosion that will damage the remote control.

Observe the Following Precautions:

1. Batteries must be replaced as a pair.
2. Do not combine a used battery with a new one.
3. Do not mix battery types (Example: "Zinc Carbon" with Alkaline").
4. Do not attempt to charge, short-circuit, disassemble, heat or burn used batteries.
5. Battery replacement is necessary when remote control reacts sporadically or stops operating the television.



Cable / Antenna

For proper reception, either a cable or antenna connection is required.

Cable Connection

Connect the cable supplied by your local cable company.

Note: *A cable converter box may be required for proper reception. Check with your local Cable company for compatibility requirements.*

Incoming cable from cable company

 
 


75 OHM VHF/UHF
ON BACK OF TV

Antenna Connection

- For proper reception of VHF/UHF channels, an external antenna is required. For best reception an outdoor antenna is recommended.
- Antenna must be selected as the signal source in the SET-UP menu.

Incoming cable from home antenna

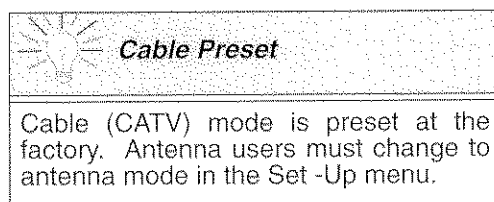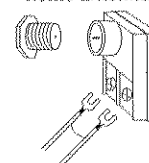


Installation

Optional Equipment Connections

Audio / Video Connections

 VCRs, video disc players, video game consoles, and SAT equipment can also be connected to the video inputs. See the optional equipment manual for details.

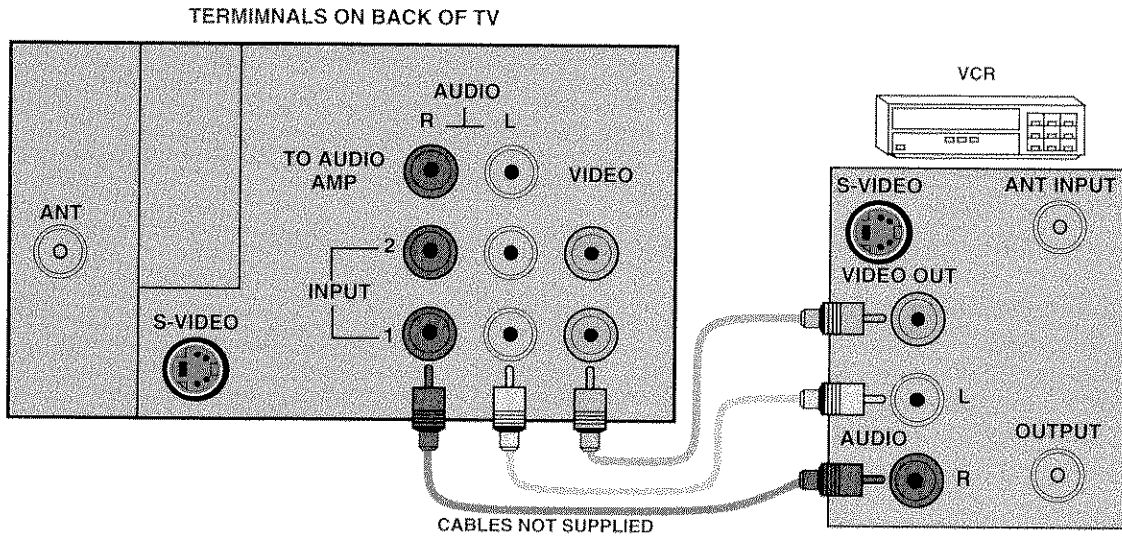

Procedure

1. Connect equipment as shown to rear Audio/Video input jacks.
2. Select the video mode by pressing **INPUT** button.
3. Operate optional equipment as instructed in equipment manual.

NOTE: The S-VIDEO connection is optional and overrides other VIDEO connection.
Use INPUT 1, AUDIO R and L with S-VIDEO connection.

Installation

 
Amplifier Connection (TO AUDIO AMP)

Connect to an external audio amplifier input for listening to TV from a stereo system speakers.

Audio Adjustments

1. Select INTERNAL SPEAKER ON located in the AUDIO menu on screen.
2. Set amplifier volume to minimum.
3. Adjust TV volume to desired level.
4. Adjust amplifier volume to match the TV.
5. Select INTERNAL SPEAKERS OFF&VAO from AUDIO menu.
6. Volume, mute, bass, treble and balance are now controlled from the TV.

Note: *TO AUDIO AMP terminals should not be connected directly to external speakers. In OFF&FAO the volume is controlled by the external amplifier.*

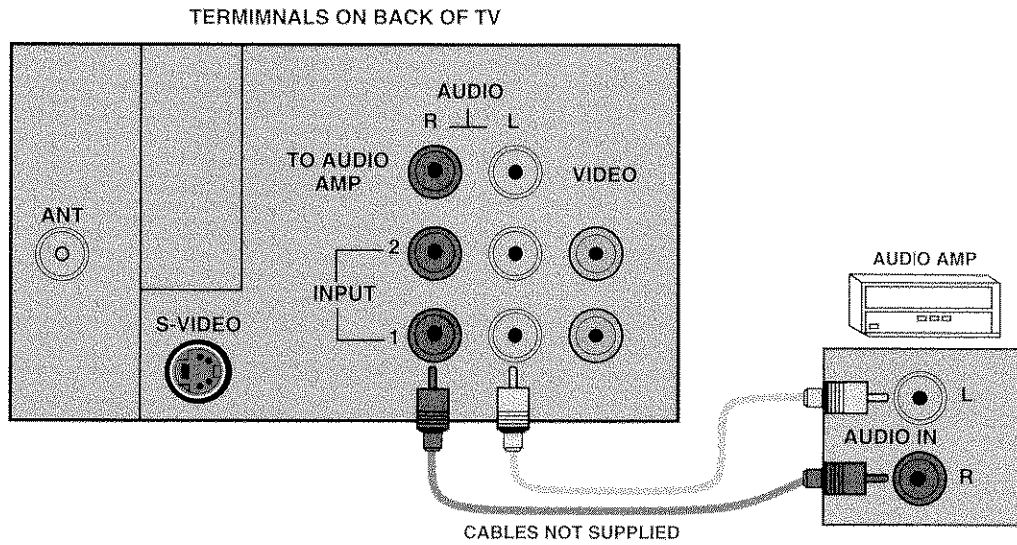

Picture in Picture (PIP) Operation

This television includes a two tuner Picture In Picture (PIP) feature. This allows watching two (2) live broadcasts at the same time with or without an external video source (VCR).

Without a VCR

 
Procedure

- Connect incoming cable to antenna (ANT) input on back of TV.
- Press the **PIP** button on the remote control to display the PIP frame.
- Choose channels for the *PIP* frame by pressing the remote control **PIP CH ▲▼** buttons.
- Choose channels for the *Main Picture* by pressing the remote control **CH ▲▼** buttons or by using the numeric keypad.

Note: *The audio is from the Main Picture only.*

With a VCR and Cable Box

Connect your television to a VCR and cable box, as shown.

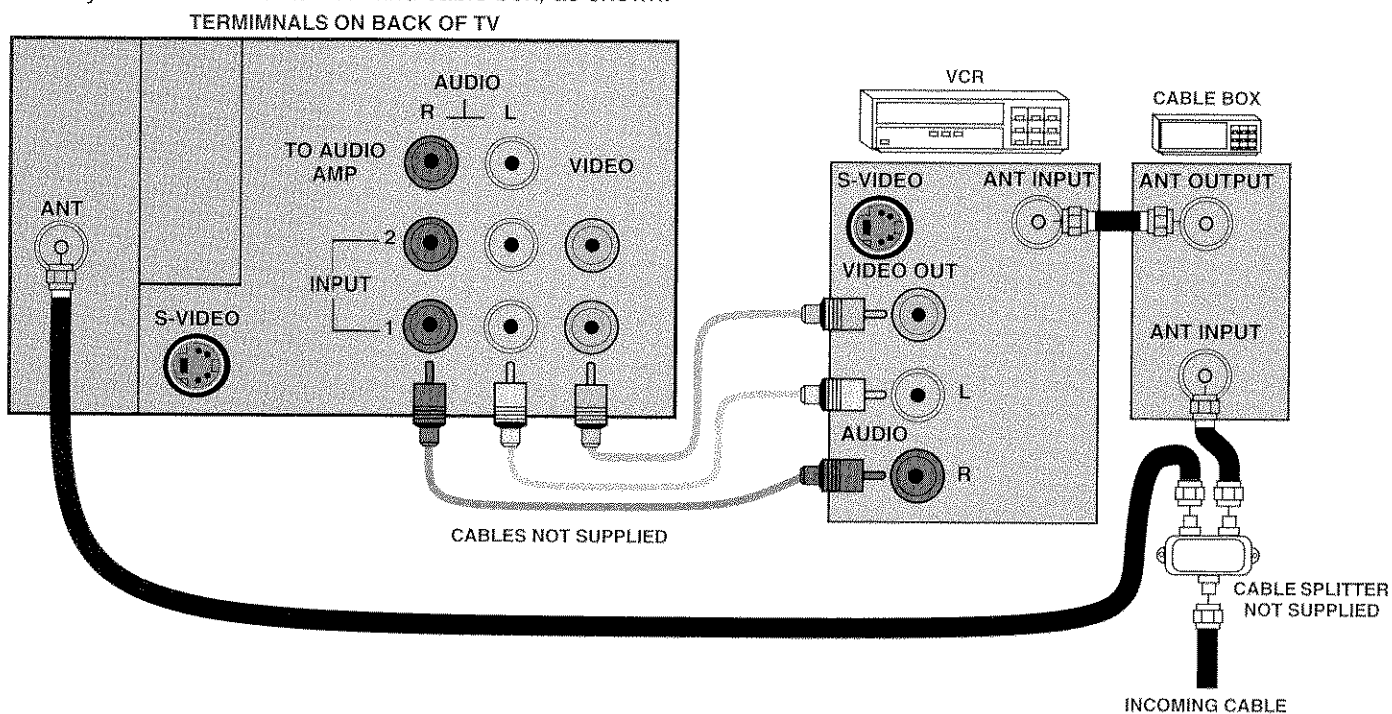

Note: *The Remote Control must be programmed with supplied codes to operate the VCR and cable box. (See "Programming the Remote" on page 16.)*


Procedure

Press the **PIP** button on the remote control to display the PIP frame.

To view scrambled channels through your cable box in the PIP frame:

- Press the **INPUT** button on the remote control to select the video input to which your VCR is connected.
- Verify the **CABLE BOX** and **VCR** are **ON** and the **VCR** tuned to channel 3 or 4.
- Choose channels for the *PIP* frame by pressing the **CABLE** button on the remote control and using the numeric keypad or **CH ▲▼** buttons.
- Choose channels for the *Main Picture* by pressing the **TV** button on the remote control and using the numeric keypad or **CH ▲▼** buttons.

Note: *The audio is from the Main Picture only.*

 **SWAP and RECALL Buttons**

 
The **SWAP** button switches the PIP and the main picture source. The **RECALL** button shows the status of the onscreen PIP and the main picture.

Picture in Picture (PIP) Operation

With a VCR - No Cable Box

This television includes a two tuner Picture In Picture (PIP) feature. This allows watching two (2) live broadcasts at the same time without or with an external video source (VCR).

Connect your television to a VCR, as shown.

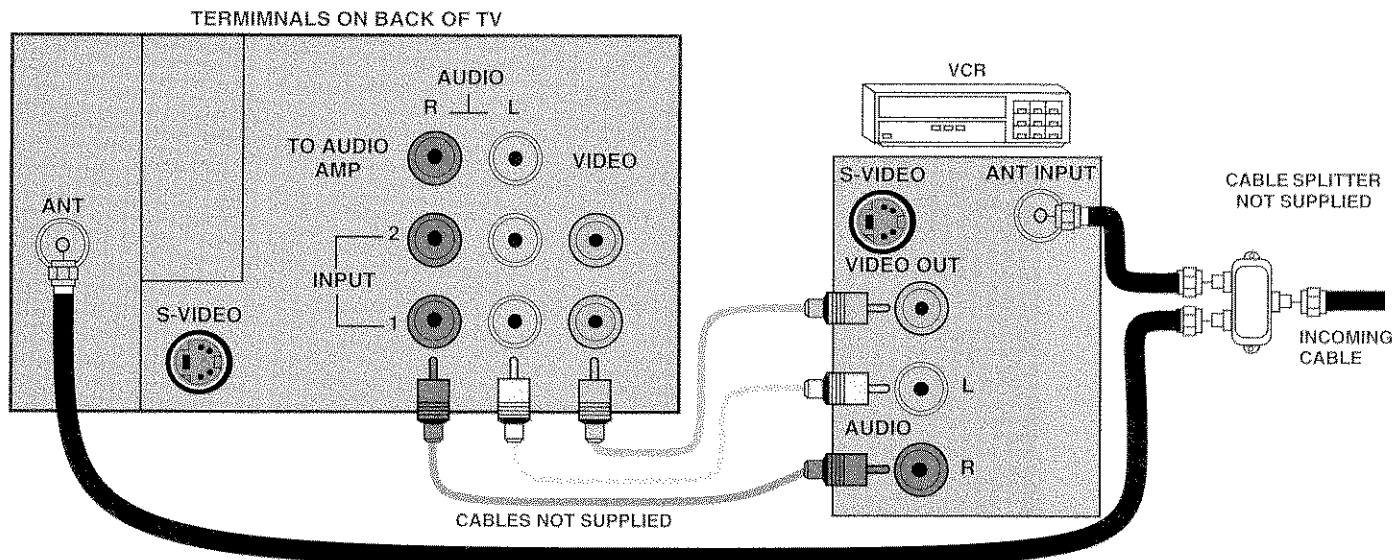

Note: *The Remote Control must be programmed with the supplied codes to operate the VCR. (See "Programming the Remote" on page 16).*


Procedure

Press the **PIP** button on the remote control to display the PIP frame.

Note: *The audio is from the Main Picture only.*

To view an external video source in the PIP frame:




















- Press the **INPUT** button on the remote control to select the video input to which your **VCR** is connected.
- Verify the VCR is on.
- View the external video source in the PIP frame.
- Choose channels for the *Main Picture* by pressing the **TV** button on the remote control and using the numeric keypad or **CH ▲ ▼** button.

| | |
|--|--------------------------------|
|  | SWAP and RECALL Buttons |
| The SWAP button switches the PIP and the main picture source. The RECALL button shows the status of the onscreen PIP and the main picture. | |








 



Remote Control

 

Quick Reference Functions Key Chart

| Key | Operates | Function |
|---|---------------------------------|--|
|  | TV VCR CABLE SATELLITE | Turns On and Off selected components |
|  | TV | TV mode selection for remote control |
|  | CABLE SATELLITE | Cable mode selection for remote control Satellite mode selection for remote control |
|  | VCR | VCR mode selection for remote control |
| PIP CH    | TV | Selects channels for the PIP frame |
| TV/VCR  | TV VCR CABLE | Selects TV or VCR mode Selects TV or VCR mode Selects A/B |
| PIP  | TV | Displays the PIP frame, press button once more, and PIP frame becomes smaller |
| SWAP  | TV | Switches PIP and Main picture source |
| MOVE  | TV | Moves the PIP frame to one of four corners of Main picture |
| FRZ  | TV | Freezes the PIP picture |
|  | VCR | Rewind |
|  | VCR | Play |
|  | VCR | Fast forward |
| REC  | VCR | Record |
| STOP  | VCR | Stop |
| PAUSE  | VCR | Pause |
| PIP SURF  | TV | Scans channels in program memory when PIP frame is displayed |

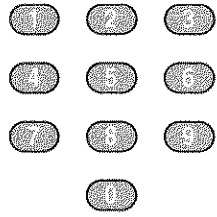 Quick Reference Functions Key Chart


| Key | Operates | Function (Continued) |
|--|----------------------------|---|
| <p>CURSOR BUTTONS</p>  | TV | Menu navigation |
|  | TV | Access and Exits menus |
|  | TV | Displays channel, time, channel I.D. and audio mode |
| <p>VOL</p>  | TV | Volume up/down |
| <p>CH</p>  | TV CABLE/ SATELLITE | Channel up/down for main picture Channel up/down |
| <p>LST-CH</p>  | TV | Returns to previous channel |
| <p>MUTE</p>  | TV | Mutes TV Audio |
| <p>KEYPAD BUTTONS</p>  | TV | Selects channel |
| | VCR CABLE/ SATELLITE | Selects channel Selects channel |
| <p>INPUT</p>  | TV | Selects input mode |
| <p>SLEEP</p>  | TV | Selects SLEEP timer menu |
| <p>LIGHT</p>  | REMOTE | Lights up VOL, LST-CH, MUTE and CH buttons |

Special Buttons

Recall Button


Press the **RECALL** button to check:

 1. Audio mode status
2. CH number or video input selected
3. Channel Caption (Station Identifier)
4. Clock time
5. Sleep timer status

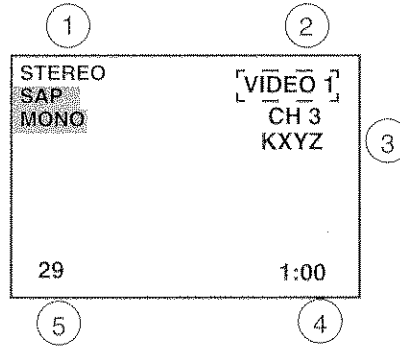

LST-CH Button

 
Pressing the **LST-CH** button will switch between the last two channels viewed.

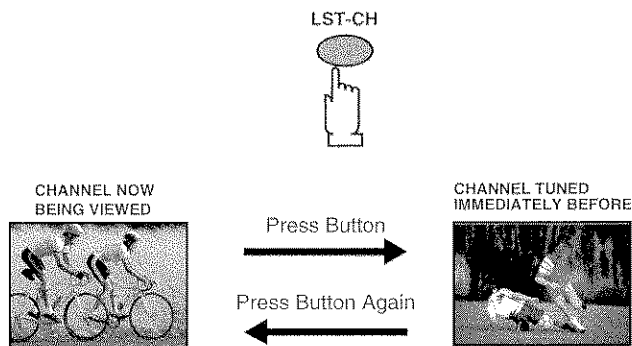

Note: When scanning channels with the **CHANNEL ▲ ▼** buttons, pressing the **LST-CH** button will switch between the last two channels scanned.

Swap Button

 Press the **SWAP** button (when the PIP frame is displayed) to interchange what is being viewed on the main picture with that of the PIP frame.

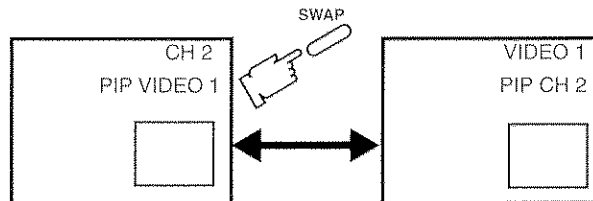

Note: The audio is from the Main Picture only.

 
Special Buttons

PIP (Picture in Picture) Button

This feature allows the viewer to monitor one channel program while watching another. The monitored source (PIP) can be a different channel or a different video source (such as a VCR) when connected to the input jacks.


PIP Operation

1. Press the **PIP** button (set must be ON). The PIP frame will appear at the position it was last displayed. The main picture video source and PIP video source will display on screen momentarily. Audio will be that of main picture.

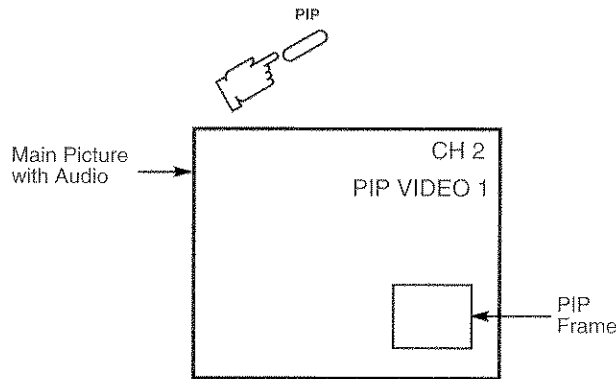


Note: *When the Main Picture is in Video mode with no signal, the PIP will not operate properly.*

 2. Press the **PIP** button again to size PIP frame or twice to cancel PICTURE IN PICTURE feature.

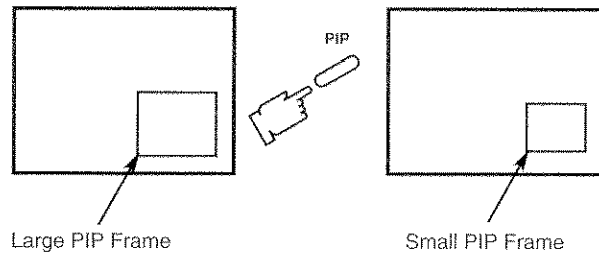

PIP CH Buttons

 
Press the **PIP CHANNEL ▲ ▼** button while the PIP frame is displayed to sequentially scan through channels.

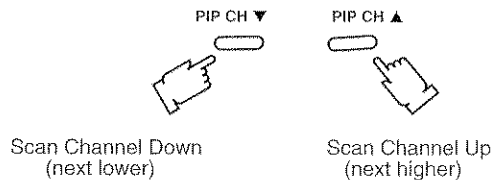

Special Buttons

Frz (Freeze) Button

 Press the **FRZ** button to stop action in the PIP frame.

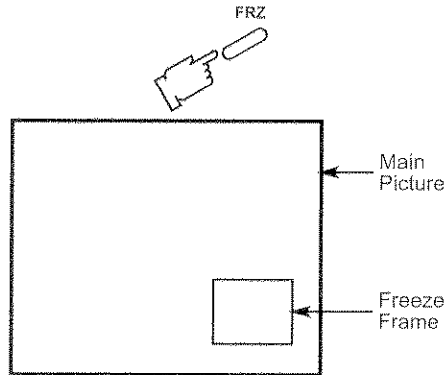


Notes:


- Pressing the **FRZ** button when the PIP frame is displayed, will freeze action from the PIP frame. Press the **FRZ** button again to continue action.
- Press the **PIP** button as needed to delete PIP frame.

Move Button

 The PIP frame may be located at any corner of the Main Picture by pressing the **MOVE** button (when the PIP frame is displayed).

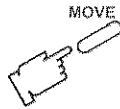

 
Note: As **MOVE** button is pressed (when the PIP frame is displayed), the PIP frame will move counterclockwise as illustrated.

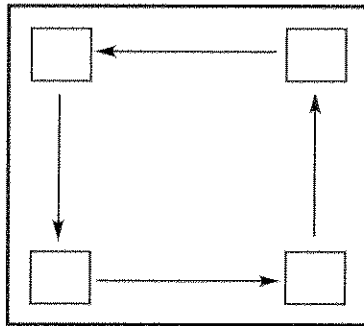

PIP SURF Button

While the PIP frame is displayed, pressing the **PIP SURF** button will continuously scan channels in sequence as programmed into channel scan memory.

 - Press the **PIP** button to stop PIP SURF feature on desired picture for PIP frame.
- Press the **SWAP** button to interchange what is being viewed on the main picture with that of the PIP frame.

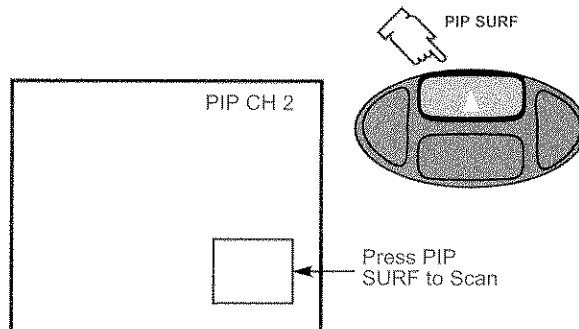

Programming the Remote

VCR Functions

This remote is designed to operate different brands of VCRs. You must first program the remote to match the remote system of your VCR.

Procedure

1. Turn ON your VCR.
2. Aim the remote control at the front of your VCR.
3. While holding down the VCR button on the remote, enter the 2-digit preset code that matches your VCR. (See "Component Codes" on page 17 ~ page 18.) The remote will turn off your VCR when the correct 2 digit preset code is entered. When this occurs, the remote control is programmed for your VCR. If the VCR does not turn off after 25 seconds, try a different code, if available.
4. The remote will now control your VCR.

Notes

- If your VCR will not operate remotely after performing the above procedures, this means that your VCR's code has not been coded into the remote. Please consult your VCR's operating guide.
- The remote control will remember the codes you have programmed in until the batteries are removed from the remote control. After replacing the batteries repeat the programming procedure stated above.
- If your VCR does not have a remote power function, the remote will issue the CHANNEL UP function.
- The **MENU** button will act as the VCR MENU button for HITACHI VCRs.
- The **INPUT** button will act as your VCR +100 button, if required.

Cable/Satellite Box Functions

This remote is designed to operate different brands of cable boxes and Satellite boxes. You must first program the remote to match the remote system in your cable/satellite box.

Procedure

1. Turn ON your cable/satellite box.
2. Aim the remote control at the front of your cable/satellite box.
3. While holding down the **CABLE** button on the remote, enter the 2 digit preset code (See "Component Codes" on page 18 ~ page 19) that matches your cable/satellite box. The remote will turn off your cable/satellite box when the correct 2 digit code is entered. When this occurs, the remote control is programmed for your cable/satellite box. If the cable/satellite box does not turn off after 5 seconds, try another 2 digit preset code, if available.
4. The remote will now control your cable/satellite box.

Notes

- If your cable/satellite box will not operate remotely after performing the above procedures, this means that your cable/satellite box code has not been coded into the remote. Please consult your cable/satellite box operating guide.
- The remote control will remember the codes you have programmed in until the batteries are removed from the remote control. After replacing the batteries, repeat the entire programming procedure stated above.
- If your cable/satellite box does not have a remote power function, the remote will issue the CHANNEL UP function.

| Write the code numbers from tables in this space. This will serve as a reference if you need to program your remote control. | |
|--|---|
| CABLE/SATELLITE BOX | VCR |
| <input type="text"/> <input type="text"/> | <input type="text"/> <input type="text"/> |

Component Codes

The remote control is capable of operating many brands of VCRs and cable/satellite boxes. You must first program the remote control to match the remote system in your VCR or cable/satellite box.

Some models of VCRs or cable/satellite boxes may not remotely operate because the codes are not available due to limited memory. The remote control is not designed to control all features that are available in all models.

VCR

| Brand | Code |
|-----------------|---|
| Adventura | 00 |
| Aiko | 50 |
| Aiwa | 00 |
| Akai | 14, 23, 49 |
| American High | 09 |
| Asha | 48 |
| Audiovox | 10 |
| Beaumark | 48 |
| Bell & Howell | 30 |
| Brandt | 38 |
| Broksonic | 33, 37, 43, 51, 52 |
| Calix | 10 |
| Canon | 09 |
| Capehart | 05 |
| Carver | 28 |
| CCE | 27, 50 |
| Citizen | 10, 50 |
| Colt | 27 |
| Craig | 10, 19, 27, 48 |
| Curtis Mathes | 09, 14, 22 |
| Cybernex | 48 |
| Daewoo | 03, 05, 17, 29, 50 |
| Dayton | 05 |
| Dynatech | 00 |
| Electrohome | 10 |
| Electrophonic | 10 |
| Emerex | 06 |
| Emerson | 00, 01, 10, 16, 23, 33, 37, 40, 41, 43, 44, 50, 51, 52, |
| Fisher | 19, 21, 25, 30 |
| Fuji | 07, 09 |
| Funai | 00 |
| Garrard | 00 |
| GE | 09, 22, 24, 39 |
| Goldstar | 04, 10, 11 |
| Gradiente | 00 |
| Harley Davidson | 00 |
| Harmon/Kardon | 11 |
| Harwood | 27 |
| Headquarter | 18 |
| HI-Q | 19 |
| Hitachi | 14, 15, 24, 31 |

| Brand | Code |
|----------------|------------------------------------|
| Jensen | 14 |
| JVC | 02, 14, 26 |
| KEC | 10, 50 |
| Kenwood | 11, 14, 26 |
| KLH | 27 |
| Kodak | 9, 10 |
| Lloyd | 00 |
| Lloyd's | 40 |
| Logik | 27 |
| LXI | 10 |
| Magnavox | 09, 12, 28, 32, 34 |
| Magnin | 48 |
| Marantz | 09, 28 |
| Marta | 10 |
| Matsushita | 09 |
| MEI | 09 |
| Memorex | 00, 09, 10, 12, 18, 19, 20, 30, 48 |
| MGA | 16, 23 |
| MGN Technology | 48 |
| Minolta | 15, 23 |
| Mitsubishi | 16, 23, 26, 36, 49 |
| Motorola | 09, 20 |
| MTC | 00, 48 |
| Multitech | 00, 27 |
| NEC | 11, 13, 14, 26, 30 |
| Nikko | 10 |
| Noblex | 48 |
| Olympus | 09, 47 |
| Optimus | 10, 20, 30 |
| Orion | 51 |
| Panasonic | 09, 35, 46, 47, 53 |
| J.C. Penney | 09, 10, 11, 13, 15, 21, 48 |
| Pentax | 15, 24, 31 |
| Philco | 09 |
| Philips | 09, 28, 32 |
| Pilot | 10 |
| Pioneer | 26 |
| Portland | 05 |
| Portec | 27 |
| Pulsar | 12 |
| Quarter | 18 |
| Quartz | 18 |

Component Codes

VCR (Cont.)

| Brand | Code |
|-------------|------------------------------------|
| Quasar | 09 |
| Radio Shack | 00, 10 |
| Radix | 10 |
| Randex | 10 |
| RCA | 15, 22, 24, 31, 34, 39 |
| Realistic | 00, 09, 10, 18, 19, 20, 25, 30, 48 |
| Ricoh | 08 |
| Runco | 12 |
| Samsung | 17, 48 |
| Sanky | 12, 20 |
| Sansui | 14, 26 |
| Sanyo | 18, 19, 30, 48 |
| Scott | 16, 17, 33, 37, 43, 44 |
| Sears | 09, 10, 15, 18, 19, 21, 25, 30, 31 |
| Sharp | 20 |
| Shintom | 27 |
| Shogun | 48 |
| Singer | 27 |
| Sony | 06, 07, 08, 09 |
| STS | 15 |
| Sylvania | 00, 09, 16, 28, 32 |

| Brand | Code |
|-----------------|--|
| Symphonic | 00 |
| Tatung | 14 |
| Teac | 00, 14 |
| Technics | 09, 35 |
| Teknika | 09, 35 |
| Telefunken | 00, 09, 10 |
| TMK | 38 |
| Toshiba | 40, 48 |
| Totevision | 16, 17, 25, 44 |
| Unitech | 10, 48 |
| Vector | 48 |
| Vector Research | 17 |
| Video Concepts | 11, 13 |
| Videosonic | 13, 17, 23 |
| Wards | 00, 09, 15, 19, 20, 22, 27, 34, 44, 48 |
| XR-1000 | 27, 34, 44, 48 |
| Yamaha | 11 |
| Zenith | 07, 08, 12 |

SATELLITE

| Brand | Code |
|--------------------|--------|
| General Instrument | 61 |
| Jerrold | 61, 62 |
| Primestar | 61, 62 |
| RCA | 60 |
| Sony | 63 |

TV

| Brand | Code |
|----------|------|
| Hitachi | 00 |
| Megatron | 00 |


Component Codes

CABLE BOX

| Brand | Code |
|--------------------|------------------------------------|
| ABC | 01, 03, 05, 06, 09, 11, 12, 14, 30 |
| Antronix | 44 |
| Archer | 28, 40, 44 |
| Belcor | 31 |
| Cable Star | 31 |
| Century | 40 |
| Citizen | 40 |
| Colour Voice | 19, 25 |
| Comtronics | 29, 34 |
| Contec | 15 |
| Dae Ryung | 06 |
| Eastern | 02 |
| Electricord | 37 |
| Everquest | 13 |
| Focus | 57 |
| Garrard | 40 |
| GC Electronics | 31, 44 |
| Gemini | 13, 32, 36, 46 |
| General Instrument | 09, 51 |
| Goldstar | 29, 39 |
| Hamlin | 08, 16, 27, 49, 50 |
| Hitachi | 09 |
| Hytex | 05 |
| Jasco | 40 |
| Jerrold | 03, 09, 10, 12, 13, 30, 51 |
| Macom | 26 |
| Magnavox | 21 |
| Memorex | 00 |
| Movie Time | 35, 37, 42 |
| NSC | 35, 36, 42 |
| Oak | 05, 15, 47 |
| Panasonic | 00, 17, 38 |
| Paragon | 00 |
| Philips | 19, 21, 22, 23, 24, 25, 40, 46, 54 |

| Brand | Code |
|--------------------|------------------------|
| Pioneer | 18, 39, 65 |
| Popular Mechanics | 57 |
| Pulsar | 00 |
| RCA | 17 |
| Realistic | 44 |
| Recoton | 57 |
| Regal | 16, 49, 50, 53 |
| Regency | 02 |
| Rembrandt | 09, 36 |
| Runco | 00 |
| Samsung | 29, 39 |
| Scientific Atlanta | 04, 06, 14, 52 |
| Signal | 13, 29 |
| Signature | 09 |
| SL Marx | 29 |
| Sprucer | 17, 55 |
| Starcom | 03, 13, 30 |
| Stargate | 13, 29 |
| Starquest | 13 |
| Starsight | 58, 59 |
| Sylvania | 01 |
| Teleview | 29 |
| Texscan | 01 |
| Tocom | 10, 11, 33 |
| Toshiba | 00 |
| Tusa | 13 |
| TV86 | 35 |
| Unika | 40, 44 |
| United Artists | 05 |
| United Cable | 03 |
| Universal | 28, 31, 37, 40, 43, 44 |
| Videoway | 48 |
| Viewstar | 21, 34, 35, 45 |
| Zenith | 00, 64 |
| Zentek | 57 |

 Location of Television Controls

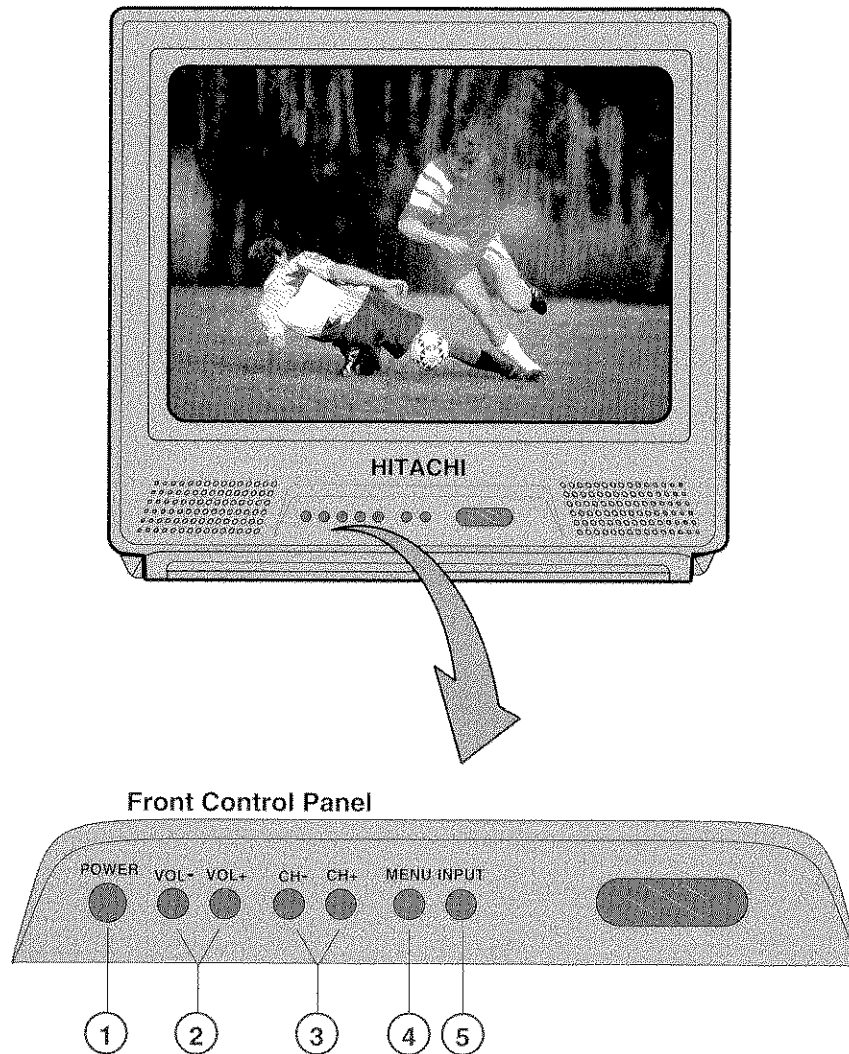


Location of Television Controls

- ① **Power Button** - Press to turn ON or OFF.
- ② **VOL (Volume) Buttons** - Press to adjust sound level.
- ③ **CH (Channel)** - Press to select programmed channels.
- ④ **Menu Button** - Press to display main menu and access onscreen features and adjustment menus.
- ⑤ **Input Button** - Press to select TV or video input.

Main Menu

 Main Menu

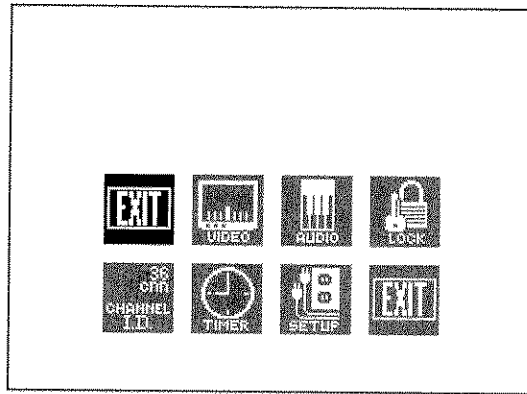


MENU Button

Press the **MENU** button to display the main menu and submenus. Select the EXIT icon and press **MENU** to exit.




Cursor Buttons

 Press the cursor buttons to select an icon, to highlight the desired features or to select and adjust features.

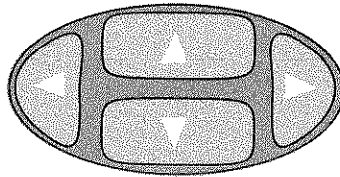


Cursor Buttons



Main Menu Feature Chart

| MENU | DESCRIPTION |
|---|---|
|  | SET-UP |
| Clock Set | Enter the time and the day of the week. (Time will display onscreen after turning on the television, pressing the RECALL button or changing channels). |
| Signal Source | Select Antenna or CATV to match the signal at your antenna input. |
| Auto Channel Set | Automatically program channels with a signal into memory. |
| Channel Memory | Manually add or delete channels from memory. |
| Closed Caption | Select C1 or C2 for Closed Captioning display. Select OFF to display closed captioning when MUTE button is pressed. |
| Menu Languages | Select English, Spanish or French menus. |
|  | AUDIO |
| Reset | Reset BASS, TREBLE and BALANCE to factory default. |
| BASS | Increase or decrease the bass response. |
| Treble | Increase or decrease the treble response. |
| Balance | Emphasize the left/right speaker volume. |
| Mode | Select the audio mode: <ul style="list-style-type: none"> • STEREO - Two channel audio reception. • SAP - (Second Audio Program) Tune to the alternate audio channel if available in your area (bilingual or descriptive audio). • MONO - One channel audio. Use when stereo signal is weak. |
| Perfect Vol. | Automatically adjust volume to maintain a comfortable listening level. |
| Surround | Enhance audio response when listening to stereo. |
| Internal Speakers | Select TV SPEAKERS: <ul style="list-style-type: none"> • ON - TV SPEAKERS operate normally. • OFF&VAO (Variable Audio Output) - TV Speakers off — audio adjustable by TV. • OFF&FAO (Fixed Audio Output) - TV SPEAKERS off — audio adjustable only by the external amplifier. |
|  | TIMER |
| Sleep | Program TV to automatically turn off in 30, 60 or 90 minutes. Select NO to turn timer off. |
| Program Event | Program TV to automatically turn on and off at selected time on a selected channel, daily or only one day. |

Main Menu Feature Chart







| <i>MENU</i> | <i>DESCRIPTION</i> |
|---|--|
|  | VIDEO |
| Reset | Reset all picture adjustments to factory default settings. |
| Color | Adjust desired color intensity. |
| Tint | Adjust natural flesh tones. |
| Brightness | Adjust dark areas for crisp detail. |
| Contrast | Adjust white areas of picture. |
| Sharpness | Adjust for best clarity of outline detail. |
|  | CHANNEL ID. |
| Channel I.D. | Provide labels for up to 30 stations using up to four characters for each station. |
|  | LOCK |
| Quick Lock | Program to prevent video games, cable box, and VCRs from being viewed. |

 



 

 

SET-UP

Language

The MENU LANGUAGE is factory set to ENGLISH. Follow the instructions to change the language menu to ESPAÑOL, FRANÇAIS or ENGLISH.



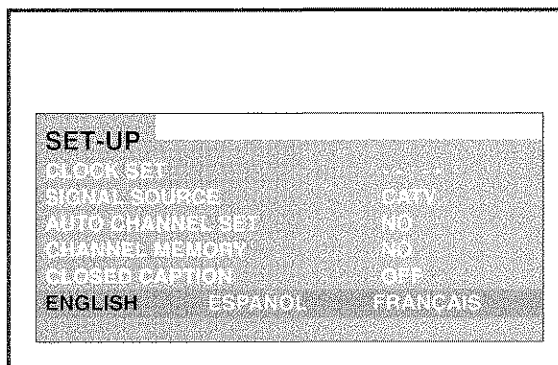



1. Press .
2. Press cursor  or  and  or  to highlight the SET-UP icon.
3. Press  to display the SET-UP menu.

 








4. Press cursor  or  to highlight ENGLISH, FRANÇAIS or ESPAÑOL.
5. Press cursor  or  to select ENGLISH, FRANÇAIS or ESPAÑOL.
6. Press  twice to exit menu.

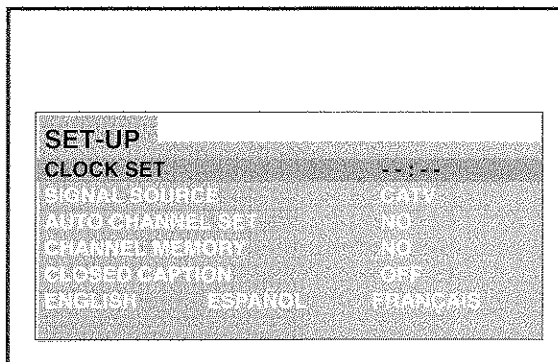Clock Set

Clock (when set) will display onscreen at initial "Turn On", after a channel change and when pressing the RECALL button. Time must be set in order to use the program event features.

1. Press .
2. Press cursor  or  and  or  to highlight the SET-UP icon.
3. Press  to display the SET-UP menu.









4. Press cursor  or  to set hours (set AM/PM).
5. Press cursor  to select minutes position.
6. Press cursor  or  repeatedly to set minutes.
7. Press  twice to exit menu.

 
Signal Source





The proper input mode must be selected for the type of signal at the antenna input.

- Antenna mode is used when the receiver is not connected to a cable TV system, for example when using a VHF/UHF antenna (channels 02 - 69).
- CATV mode is used when the Receiver is connected to a cable TV system. (channels 01 - 125).

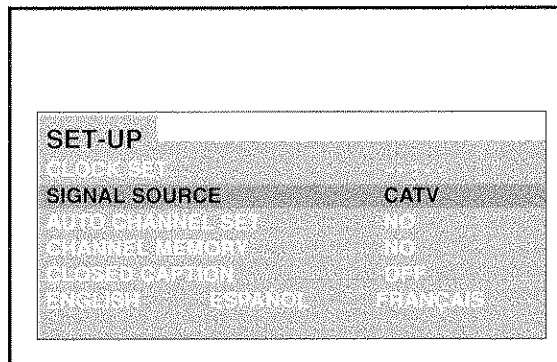Note: *This feature is disabled when QUICK LOCK is activated.*

1. Press .
2. Press cursor  or  and  or  to highlight the SET-UP icon.
3. Press  to display the SET-UP menu.








4. Press cursor  to highlight SIGNAL SOURCE.
5. Press cursor  or  to select ANTENNA (TV) or CATV.
6. Press  twice to exit menu.

Auto Channel Set

 
This feature places all channels with a video signal into channel scan memory.





Note: *This feature is disabled when Quick Lock is activated.*

1. Press .
2. Press cursor  or  and  or  to highlight the SET-UP icon.

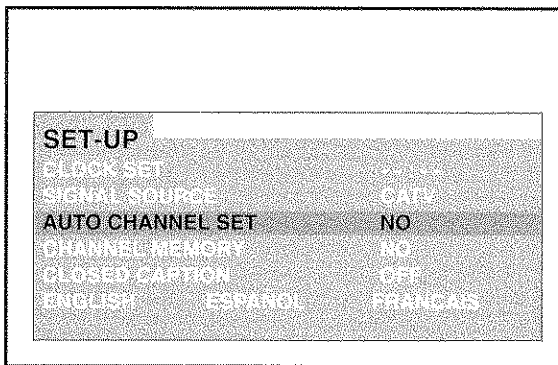Menu Selections

- Press  to display the SET-UP menu.









 
- Press cursor  to highlight AUTO CHANNEL SET.
- Press cursor  or  start AUTO CHANNEL SET. Channels will automatically advance until all channels have been scanned.
- Press  twice after completion of AUTO CHANNEL SET to exit menu.

Note: *Channel numbers with blue color, indicate they are stored in channel scan memory.*



Channel Memory


This feature allows you to select which channels are placed into channel scan memory.



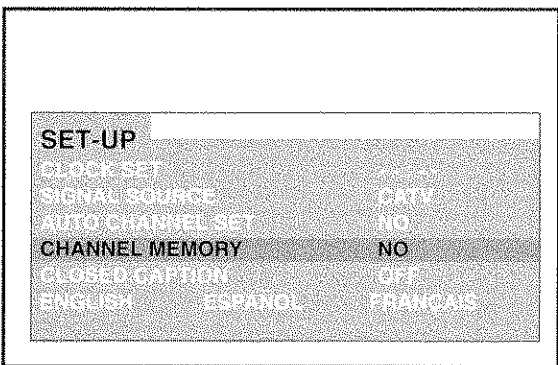

  
- Press .
- Press cursor  or  and  or  to highlight the SET-UP icon.
- Press  to display the SET-UP menu.



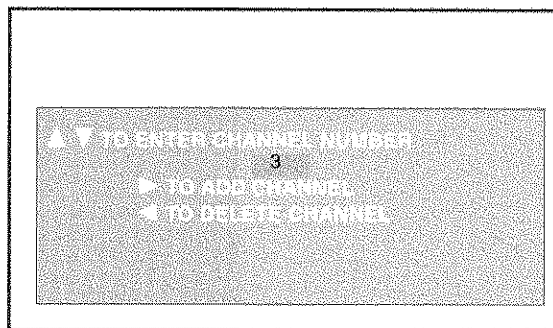- Press cursor  to highlight CHANNEL MEMORY.

- Press cursor  or  to display the CHANNEL MEMORY menu.










- Use the cursor  or  or the remote keypad "0 through 9" buttons to select channels.
- Press cursor  to **add** channel(s) to memory. Press cursor  to **delete** channels from memory.
- Repeat steps 6 and 7 to continue adding or deleting channels.
- Press  twice to exit menu.

 
Note: *This feature is disabled when Quick Lock is activated.*





Closed Caption

This receiver has a built in decoder that provides a visual depiction of the audio portion of a television program. It allows the viewer to read the dialogue of a television program or other information.

When the Closed Caption is in the OFF Mode: The viewer may display closed caption by pressing  on the remote control. Press again to delete.

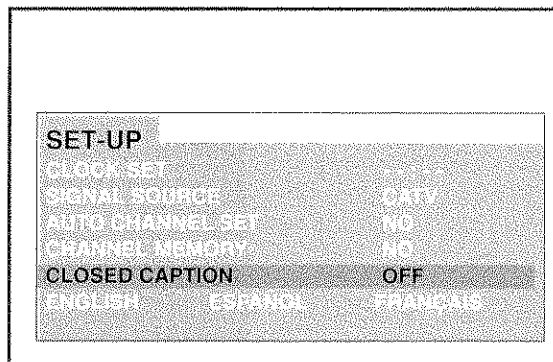 - Press .
- Press cursor  or  and  or  to highlight the SET-UP icon.
- Press  to display the SET-UP menu.









- Press cursor  to highlight CLOSED CAPTION.
- Press cursor  or  to select OFF, C1, or C2.
- Press  twice to exit menu.






TIMER

 Sleep

 
This feature is used for automatic turn off in 30, 60 or 90 minutes. Display will flash 3, 2 and 1 to indicate the last three remaining minutes prior to turn off. The Recall display will also appear.

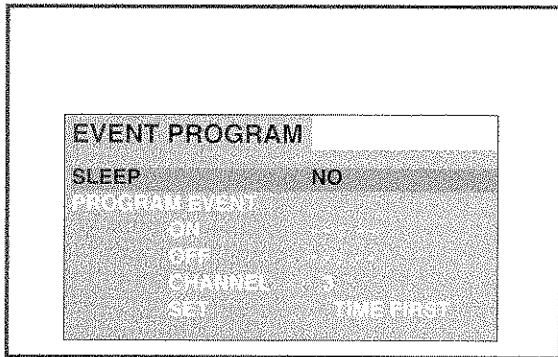1. Press .
2. Press cursor  or  and  or  to highlight TIMER icon.
3. Press  to display the EVENT PROGRAM menu.



4. Press cursor  to select NO, 30, 60 or 90 minutes (Sleep timer will be activated).
5. Press  twice to exit menu.

 
Note: To deactivate Sleep Timer, repeat steps 1 through 4. In step 4, select "NO" instead of minutes.

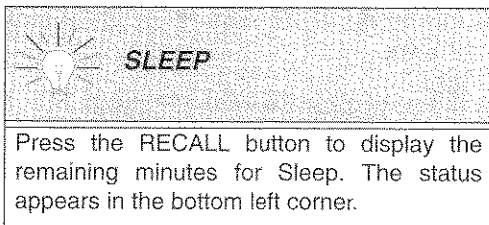












Program Event

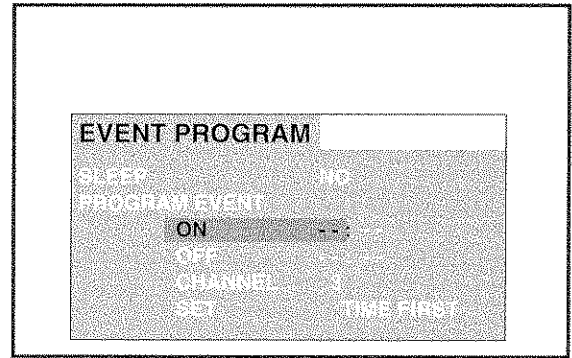  
This feature is capable of turning the TV on, tuned to a desired channel and off at a predetermined time (one day or daily). The clock must be set for this feature to operate.



 
1. Press .
2. Press cursor  or  and  or  to highlight TIMER icon.

   3. Press  to display the Event Program menu.




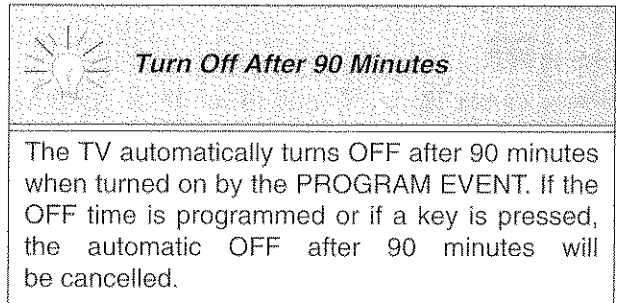4. Press cursor  to highlight ON (time).
5. Press cursor  or  repeatedly to set hours (set AM/PM).
6. Press cursor  to highlight the minutes position.
7. Press cursor  or  repeatedly to set minutes.
8. Press cursor  to highlight OFF (time).
9. Repeat steps 5 through 7 for setting OFF (time).
10. Press cursor  to highlight Channel.
11. Press cursor  or  or use the remote control keypad to enter the channel number desired when the TV turns "ON".



 12. Press cursor  to highlight SET.
13. Press cursor  to select ONE DAY, DAILY or NO.
14. Press  twice to exit menu.

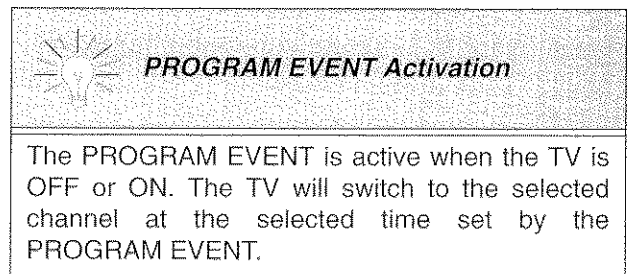


 


Note: To deactivate program timer select no in step 13.

 










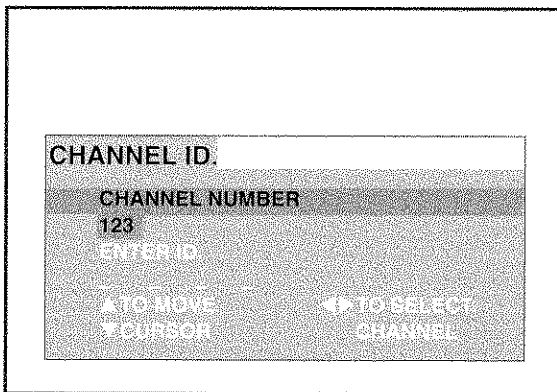

CHANNEL ID.

This feature allows you to enter the call names of up to 30 stations into memory (using up to 4 characters for each station). The call name will then display along with the channel number when changing channels or pressing RECALL.

Note: Delete CHANNEL ID. by entering dashes (-) in all four character slots.

1. Press .
2. Press cursor  or  and  or  to highlight CHANNEL ID. icon.
3. Press  to display the CHANNEL ID. menu.



4. Press cursor  or  or use the remote control keypad to enter the channel number you wish to assign a channel identifier.
5. Press cursor  to highlight ENTER ID.
6. Press cursor  or  select first character in channel identifier. Then press cursor  or  to move cursor to the second position and repeat until the complete channel identifier is entered (up to 4 characters).
7. Press cursor  or  highlight CHANNEL NUMBER. Then repeat steps 4 through 6 to continue adding channel station identifiers.
8. Press  twice to exit menu.





 

Note: To delete a channel number from memory all four characters positions in the "ENTER ID" area must display a dash (-).


LOCK




Quick Lock


Prevents video games and other video sources from being viewed. Channel 3, 4, and video inputs are locked out for 12, 24, or 48 hours.

 Note: Understand how to unlock QUICK LOCK before using it. Use a code that is easy to remember or record it in a safe place.

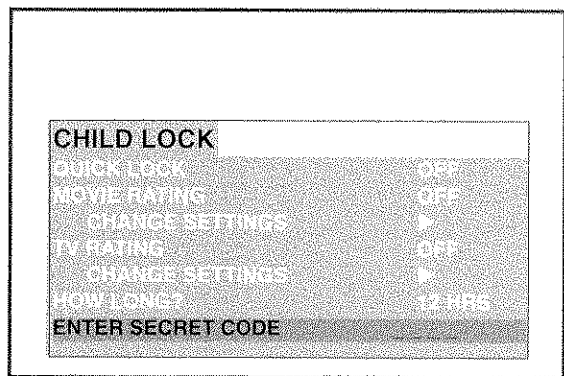1. Press .
2. Press cursor  or  and  or  to highlight LOCK icon.
3. Press  to display QUICK LOCK menu.



4. "ENTER SECRET CODE" should already be highlighted. Use the numeric keypad to enter a four-digit code.
5. Press cursor  to select ON or OFF for Quick Lock Setting.
6. Press cursor  to highlight HOW LONG?.
7. Press cursor  to select the desired amount of time (12, 24, 48 hours or ALWAYS) for QUICK LOCK to be activated.

8. Press  twice to exit menus.

To unlock QUICK LOCK follow steps 1 through 6, and on step 6 select OFF.

Note:

If you do not remember your code, LOCK will unlock in 12, 24, or 48 hours, depending on the current setup. Be cautious when selecting ALWAYS. If ALWAYS is selected and you forget your secret code, the TV must be serviced by a qualified technician to clear the LOCK setup.

NOTE: If QUICK LOCK is selected, and if a blocked channel or video input is selected, the message QUICK LOCK displays in the upper right corner of the TV screen.

For more information about Movie Rating and TV Rating, see Hitachi Child Lock reference guide.

Menu Selections









 
AUDIO






Reset

This feature is used to reset BASS, TREBLE and BALANCE back to a factory preset level.

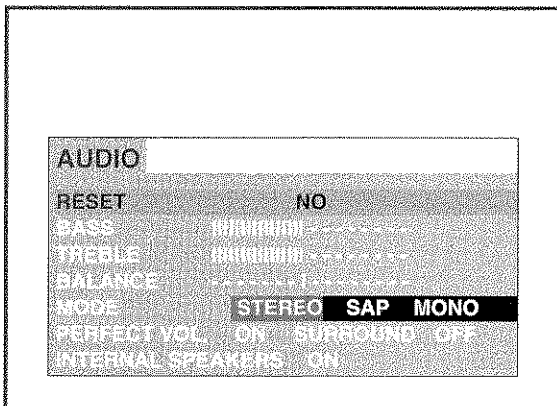





Note: *Bass and Treble is automatically set when PERFECT VOL. (VOLUME) is ON.*

 
1. Press .
2. Press cursor  or  and  or  to highlight AUDIO icon.
3. Press  to display the AUDIO menu.








4. Press cursor  or  to highlight RESET.
5. Press cursor  or  to select SET to normalize Bass, Treble and Balance.
6. Press  twice to exit menu.

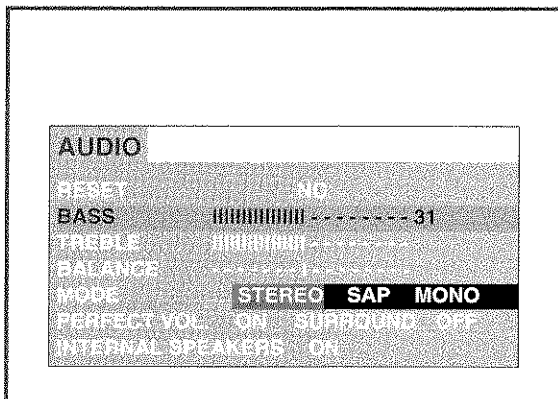
Bass, Treble and Balance.

 1. Press .
2. Press cursor  or  and  or  to highlight AUDIO icon.
3. Press  to display the AUDIO menu.







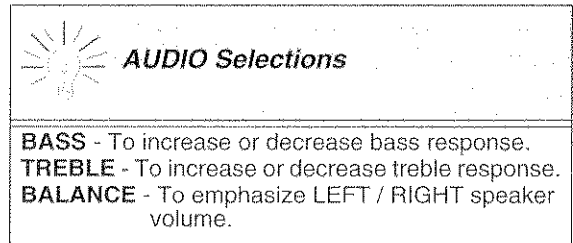

4. Press cursor  or  to highlight BASS, TREBLE or BALANCE.

 
5. Press cursor  or  to adjust for desired audio response.
6. Press  twice to exit menu.








Mode (Stereo/SAP/Mono)

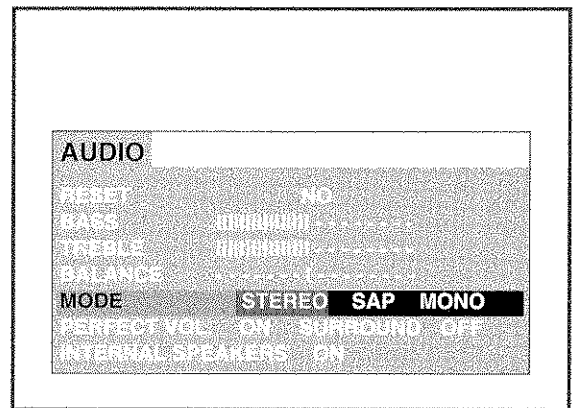 When Audio is broadcast in Stereo or SAP, an onscreen display will appear on initial "Turn On" and "Channel Change". The available choices will be highlighted.






1. Press .
2. Press cursor  or  and  or  to highlight AUDIO icon.
3. Press  to display the AUDIO menu.



4. Press cursor  or  to highlight Mode.
5. Press cursor  or  to select STEREO, SAP (Second Audio Programming), or MONO. The selected mode will be highlighted.
6. Press  twice to exit menu.

 
Perfect Vol. (Volume)


This feature automatically adjusts the volume to maintain a comfortable listening level.

1. Press .
2. Press cursor  or  and  or  to highlight AUDIO icon.

Menu Selections

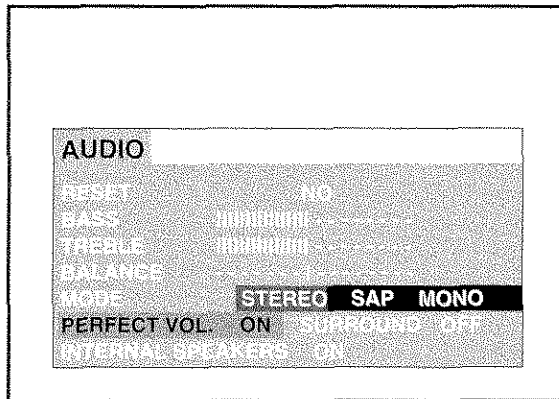

3. Press  to display the AUDIO menu.

 



4. Press cursor ▲ or ▼ to highlight PERFECT VOL.
 5. Press ◀ or ▶ to select ON or OFF.
 6. Press  twice to exit menu.

Surround

Use Surround to enhance audio response when listening to stereo broadcasts.


1. Press .
 2. Press cursor ▲ or ▼ and ◀ or ▶ to highlight AUDIO icon.
 3. Press  to display the AUDIO menu.

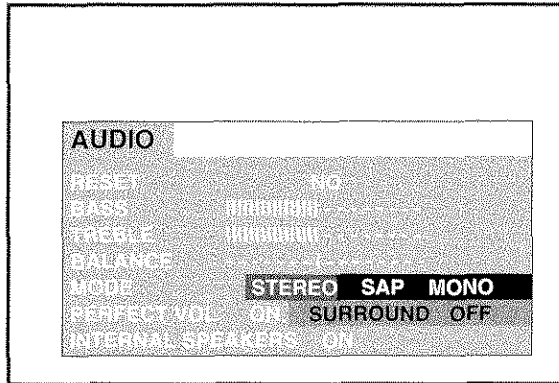


4. Press cursor ▲ or ▼ to highlight Surround.
 5. Press cursor ◀ or ▶ to select ON or OFF.
 6. Press  twice to exit menu.


Internal Speakers

This feature is used to turn the internal speakers "ON" or "OFF". It is used when the TV is connected to an external audio amplifier. (Refer to "To Audio Amp Connection" section for further information.)

1. Press .
 2. Press cursor ▲ or ▼ and ◀ or ▶ to highlight AUDIO icon.

 3. Press  to display the AUDIO menu.

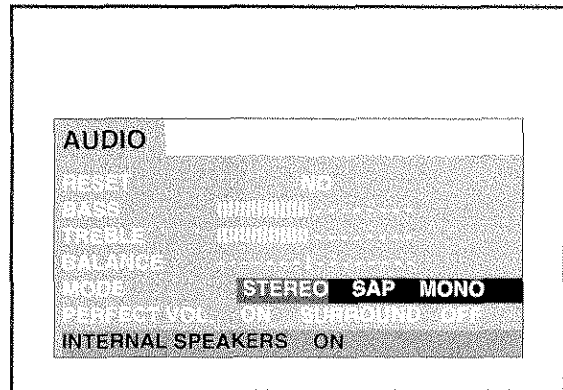



4. Press cursor ▲ or ▼ to highlight INTERNAL SPEAKERS.
 5. Press cursor ◀ or ▶ to select ON, OFF&VAO or OFF&FAO.
 - ON - TV SPEAKERS operate normally.
 - OFF&VAO (Variable Audio Output) - TV SPEAKERS off, the sound output varies according to the TV volume. Use the TV remote to control the volume, muting, bass, treble, and balance of the External Amplifier System.
 - OFF&FAO (Fixed Audio Output) - TV SPEAKERS off, sound output is not adjustable. The audio is controlled by the External Amplifier System volume control.
 6. Press  twice to exit menu.

 
VIDEO




Reset

Use to reset color, tint, brightness, contrast and sharpness adjustments back to a factory preset level.

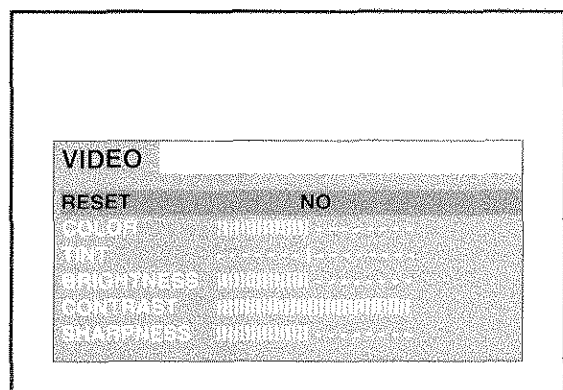

1. Press .
 2. Press cursor ▲ or ▼ and ◀ or ▶ to highlight VIDEO icon.
 3. Press  to display the VIDEO menu.

 



Menu Selections

4. Press cursor ▲ or ▼ to highlight RESET.
5. Press cursor ◀ or ▶ to select RESET to normalize color, tint, brightness, contrast and sharpness.
6. Press  twice to exit menu.

Color, Tint, Brightness, Contrast and Sharpness

1. Press .
2. Press cursor ▲ or ▼ and ◀ or ▶ to highlight VIDEO icon.
3. Press  to display the VIDEO menu.

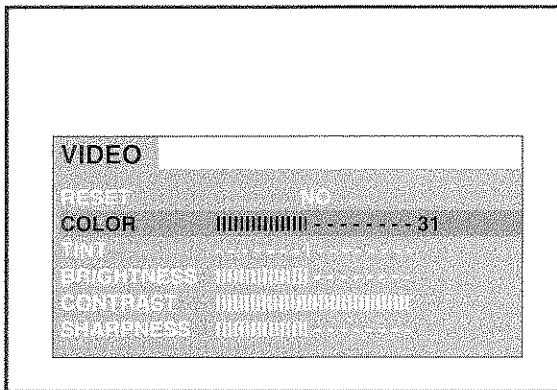

















 4. Press cursor ▲ or ▼ to select the desired adjustment (color, tint, brightness, contrast or sharpness).
5. Press cursor ◀ or ▶ to adjust your selection. (The selected picture adjustment will be displayed.)
6. Repeat steps 4 and 5 for the remaining video adjustments.
7. Press  twice to exit menu.

Useful Information

 Troubleshooting Chart

Before you call for service, determine the symptoms and make a few simple checks shown below.

| Symptoms | | Check |
|--|---|---|
| Picture | Sound | |
|  SNOWY PICTURE |  NOISY SOUND | <ul style="list-style-type: none"> - ANTENNA LOCATION AND/OR CONNECTION |
|  MULTIPLE IMAGE |  NOISY SOUND | <ul style="list-style-type: none"> - ANTENNA DIRECTION AND/OR LOCATION - ANTENNA LEAD-IN WIRE |
|  INTERFERENCE |  NOISY SOUND | <ul style="list-style-type: none"> - ELECTRICAL APPLIANCES, LIGHTS, CARS, AND TRUCKS - DIATHERMY AND OTHER MEDICAL EQUIPMENT |
|  NORMAL PICTURE |  NO SOUND | <ul style="list-style-type: none"> - VOLUME CONTROL SETTING - MUTE CONTROL (IF APPLICABLE) - TRY ANOTHER CHANNEL - TV SPEAKERS OFF |
|  NO VIDEO |  NOISY SOUND | <ul style="list-style-type: none"> - TV OR CABLE TUNING MODE SET TO PROPER SETTING - ANTENNA INPUT CORRECT (IF APPLICABLE) |
|  NO PICTURE |  NO SOUND | <ul style="list-style-type: none"> - CHECK THAT AC POWER CORD IS PLUGGED INTO AC OUTLET - BRIGHTNESS AND AUDIO CONTROLS SET PROPERLY - TRY ANOTHER CHANNEL |
|  NO COLOR |  NORMAL SOUND | <ul style="list-style-type: none"> - COLOR CONTROL SETTINGS - TRY ANOTHER CHANNEL |
|  BLACK PICTURE |  NO SOUND | <ul style="list-style-type: none"> - RECEIVER IN VIDEO MODE WITH NO SIGNAL |

Specifications

| | |
|---------------------------------|--|
| 27FX49B | 120 AC, 60 Hz |
| Channel Capability - 181 | VHF-12; UHF-56; CABLE-113 |
| 2 Video Input Jacks | 1 Vp-p, 75 Ohm, Phono Jack Type |
| 2 Audio Input Jacks | 500mV RMS 47K Ohm |
| To Audio AMP Jacks | 0-2.0V RMS 4.7K Ohm |
| S-VHS Input Jack | S-Video (Y-C) Connector |

Specifications are subject to change without notice or obligation.

*service
hotline*

To locate an authorized HITACHI service facility in the continental U.S.A. and Canada,

DIAL TOLL FREE

7 days a week, 24 hours a day

800 HITACHI
(1-800-448-2244)

**HITACHI AMERICA, LTD.
HOME ELECTRONICS DIVISION**

Hitachi has made every effort to assure you hours of trouble free operation from your unit, however, should your television require service, a network of Hitachi Authorized Service Facilities has been established in all 50 states and Puerto Rico. Each facility will provide convenient and expedient assistance. Our service hotline operator will direct you to the Hitachi Authorized Service Facility nearest you. Just present proof of purchase and/or delivery receipts to the Hitachi Authorized Service Facility, and service will be rendered in accordance with the terms of the limited warranty as stated on your warranty card or operating guide.

Should you have any questions regarding warranty service, operation or technical assistance, please contact:

**Hitachi Home Electronics (America), Inc.
1855 Dornoch Court
San Diego, CA 92154**

*In Canada, please contact : 1- 800 - HITACHI
(1- 800 - 448-2244)*

Hitachi (HSC) Canada Inc.
6740 Campobello Road
Mississauga, Ont. L5N 2L8

HITACHI