



Your Television's Directions for Use

55PW9383
60PW9383

Product Highlights

- High-definition display—1080i/480p
- Philips HD Optics
- Auto IntelliSense™ Focus
- HD DVI and Component Inputs
- Active Control™
- Eye Fidelity—selectable progressive or interlaced scan
- APAC™ (Automatic Phosphor Aging Compensation)

Features

- Multipoint digital convergence
- Protective screen filter
- Virtual Dolby® Surround—30-watt RMS
- 3-D Y/C comb filter
- Double-window, two-tuner picture-in-picture
- Slim, upscale styling
- Home-cinema universal remote with backlighting



Let's make things better.

PHILIPS

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Congratulations on your purchase, and welcome to the "family!"

PHILIPS



Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction. All of this is our way of saying welcome—and thanks for investing in a PHILIPS product.

Sincerely,

Lawrence J. Blanford
President and Chief Executive Officer

P.S. Remember, to get the most from your PHILIPS product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!

Know these safety symbols



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE


CAUTION To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

ATTENTION Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

PHILIPS Visit our World Wide Web Site at <http://www.philips.com>

IMPORTANT SAFETY INSTRUCTIONS

Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or ground-ing-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manu-facturer.
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the aparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental con-siderations. For disposal or recycling information, please contact your local authorities or the Electronic Industries


Alliance: www.eiae.org

16. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
17. **Tilt/Stability** - All televisions must comply with recommend-ed international global safety standards for tilt and stability properties of its cabinet design.
 - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet which could ultimately overturn the product.
 - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
18. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
19. **Power Lines** - An outdoor antenna should be located away from power lines.
20. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.

Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure below.
21. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclo-sure through openings.

Note to the CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Example of Antenna Grounding as per NEC - National Electric Code

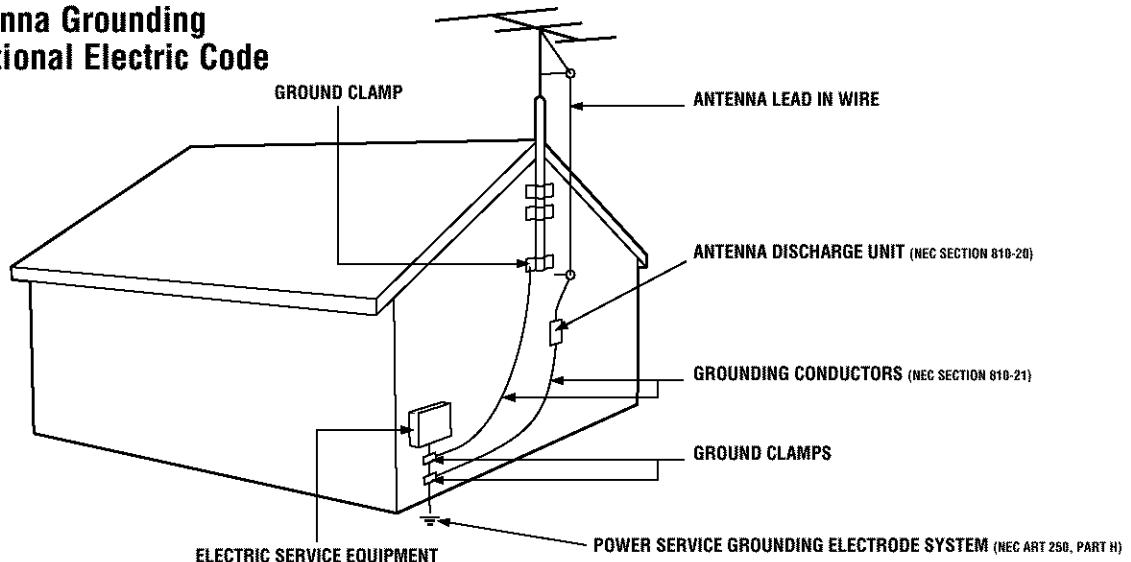

CONTENTS

INTRODUCTION

Welcome/Registration of Your TV	2
Safety/Precautions	2-3
Features	5

CONNECTING ACCESSORY DEVICES TO YOUR TV

Panel Overview: Standard Inputs and Outputs	6
Panel Overview: High-definition Inputs	7
Connecting a VCR	8
Connecting a VCR and Cable Box	9
Connecting and Using an Audio Hi-fi System with Your TV	10
Making Optional Surround-sound Connections	11
Connecting a Standard DVD Player	12
Connecting an S-Video Device	13
Connecting a DVD Player with Progressive-scan Capability	14
Connecting an HD Receiver to the HD INPUT-AV 4 Jacks	15
Connecting a Camcorder	16
Connecting and Using Headphones with Your TV	17

USING THE REMOTE CONTROL

Programming the TV Remote to Work with Accessory Devices	18
Using the Code-entry Method to Program Your TV Remote	19
Using the Search Method to Program Your TV Remote	20
Direct-entry Codes for A/V Accessory Devices	21-22
Using the TV Remote with Accessory Devices	23
Using the AV and Source Select Buttons	24
Using AutoSound™	25
Using AutoPicture™	26
Using AutoSurf™	27
Using Program List and Alternate Channel (A/CH)	28
Using the Sleep Timer Control	29

USING THE ON-SCREEN SUBMENUS

PICTURE

Adjusting the Picture Controls	30
Setting the Eye Fidelity Control	31
Setting the Dynamic Contrast Control	32
Adjusting the Manual Converge Controls: Converge Red/Blue	33
Adjusting the Manual Converge Controls: Multipoint Red/Blue	34

SOUND

Adjusting the Treble, Bass, and Balance Controls	35
Using the AVL (Audio Volume Leveler) Control	36
Selecting the Surround-sound Modes	37

Selecting the Stereo/Mono Sound Mode	38
Selecting the SAP (Second Audio Program) Feature	39
Using the Bass Boost Control	40

FEATURES

The Timer	
Setting the Clock	41
Displaying the Time	42
Setting the Timer's Start Time and Stop Time	43
Selecting the Timer's Channel	44
Setting the Timer's Activate Control	45
AutoLock™	
Understanding AutoLock™	46
Setting up the AutoLock™ Access Code	47
Using AutoLock™ to Block Channels	48
Using AutoLock™ to Block by Movie Rating	49
Using AutoLock™ to Block by TV Rating	50
Turning the AutoLock™ Blocking Control on or off	51
Using AutoLock™ to Block Unrated Broadcasts	52
Using AutoLock™ to Block Broadcasts That Have No Rating	53
Reviewing Your Current AutoLock™ Settings	54
Using the Closed Captioning Control	55
Using the Picture-format Control	56-57
Using Active Control™	58

APPENDIXES

Appendix A: Compatibility Information for the TV's High-definition Inputs	59
Appendix B: Model Specifications	60
Appendix C: Setting Color Space for HD INPUT-AV 4	61
GENERAL INFORMATION	
Care and Cleaning	62
Troubleshooting	63-64
Glossary of Television Terms	65
Index	66
Factory Service Locations	67-68
Limited Warranty	72

QUICK USE AND SETUP GUIDE

Refer to the simple *Quick Use and Setup Guide* (supplied with your TV) for details on the following:

- Basic TV connections
- Television and remote-control operation
- On-screen menu controls
- Installation features.

Items Included with This TV

As you unpack your TV, please note that this *Directions for Use* manual contains safety-tip information, the locations of factory-service centers, a warranty registration card, remote control, and batteries for the remote control. Please take a few minutes to complete your registration card. The serial number for the TV is on the rear of the set. Refer to page 62 for cleaning and care instructions.

FEATURES

Philips HD Optics gives extreme resolution HD with cutting-edge processing and display technology. Includes a Philips wideband video amplifier, microphosphor CRTs, hybrid projection lenses, first-surface mirror, and fine-pitched lenticular screen.

Auto IntelliSense™ Focus automatically adjusts picture convergence at the push of a button. After reviewing a special test pattern, optical sensors send position information to the controller, which then corrects the pictures. Auto IntelliSense™ Focus responds to the natural and man-made magnetic field conditions where the TV is located, so you will always enjoy the best possible picture.

Automatic Phosphor Aging Compensation (APAC) works with the set's Automatic Format feature to prevent screen burn left by nonmoving images. Periodically, APAC automatically shifts your television picture in very small increments, but in increments large enough to blur image retention. APAC is like a screen saver for your TV.

Active Control™ continuously measures and corrects all incoming signals to provide the best picture settings. This feature provides a sharp and virtually noise-free picture any time, from any NTSC source. NTSC is the National Television Standards Committee format devised in the 1940s for TV broadcast analog video signals (525 lines; 30 Hz).

Eye Fidelity gives you a choice between two different picture-scanning techniques—progressive and interlaced. Progressive scan doubles the number of visible picture lines per field by displaying all picture frame lines at once, eliminating line flicker. The interlaced mode provides for a double vertical display (interlaced) of progressive scan, which reduces annoying motion artifacts. The Interlaced mode also helps smooth out jagged lines sometimes seen on curved and angled surfaces.

Protective screen filter helps prevent accidental damage to the delicate front lenticular screen. This filter has been specifically formulated by Philips for HD displays to give the best possible picture and still protect your investment.

HD DVI and Component Inputs—DVI supports High-definition Copy Protected digital video input for connection to compliant set-top boxes. The HD component connection (Y Pb Pr or RGB +HV0 offers color purity, crisp color detail, and reduced color noise.

3-D Y/C Digital Comb Filter (activated when using the tuner and composite inputs) processes the video with spatial and temporal filtering, virtually eliminating cross-color and cross-luminance interference, improving video resolution. This filter uses extensive memory to analyze complete video fields, significantly reducing “dot crawl,” “hanging dots,” and “barber pole artifacts” on the image.

Double-window, two-tuner Picture-in-Picture (PIP) allows you to watch two shows, side by side. No VCR is necessary for tuning PIP pictures. Your set's two separate tuners let you select two shows and display both in windows of equal proportion.

Virtual Dolby* Surround (referred to as Dolby Virtual in the on-screen submenu) uses two speakers to simulate the surround effect produced by a multichannel system.

Incredible Surround™ enhances stereo programs by making the sound broader and fuller.

Center channel input, which has standard clip-on style speaker connectors, simplifies the connection of surround-sound equipment for optimal home-theater enjoyment. Since it contains the dialog information, the center channel is vitally important to the overall performance of any large screen in a home-theater system.

Home-cinema universal remote control operates your TV set and other devices that work by infrared remote control, such as VCRs, cable converter boxes, satellite receivers, and others. **Note:** You may need to program the remote to work with devices other than the TV. See pages 18–23.

Hi-fi stereo system, including a built-in audio amplifier and a twin speaker system with 2-inch tweeters and 5-inch woofers. The system enables you to hear stereo sound or Second Audio Program (SAP) bilingual broadcasts when they are available.

Audio/video jacks allow direct connections with VCRs and other accessories for quality TV picture and sound playback. Component video input jacks are provided for high-fidelity color and picture resolution when using digital video source material, such as a DVD.

Audio Volume Leveler (AVL) control keeps the TV's sound at an even level. Peaks and valleys that occur during program changes or commercial breaks are reduced, making for a more consistent, comfortable sound.

AutoChrom™ automatically sets the right time of day and maintains it with digital precision through brownouts, power failures, and even Daylight Savings Time adjustments.

AutoLock™ protects young children from objectionable programming with V-chip technology.

AutoSound™ allows you to select from three factory-set controls and a personal control that you set according to your own preferences through the on-screen Sound submenu. The three factory-set controls—Voice, Music, and Theatre—enable you to tailor the TV sound to enhance the particular programming you are watching.

AutoSurf™ allows you to easily switch among only the channels that are of interest to you. You can program up to 10 channels into the TV's AutoSurf™ memory through the on-screen display.

Channel Edit allows you to add or remove channels from the list of channels stored in the TV's memory. Channel Edit makes it easy to limit or expand the number of channels that are available to you when you press the CH +/- buttons on your remote control.

Closed Captioning allows you to read TV program dialog or voice conversations as on-screen text.

Dynamic Contrast helps sharpen the picture quality by making the contrast between the dark and bright picture areas more noticeable as the image on screen changes.



As an Energy Star® Partner, Philips Consumer Electronics has determined this product meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark. Using products with the Energy Star® label can save energy. Saving energy reduces air pollution and lowers utility bills.

Active Control, APAC, AutoPicture, AutoSound, AutoSurf, Incredible Surround, and IntelliSense are trademarks of Philips Consumer Electronics North America. Copyright © 2003 Philips Consumer Electronics.

*Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

End-of-life Disposal

Your new projection television and its packaging contain materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and minimize the amounts that need to be properly disposed. The batteries used by your product should not be thrown away when depleted but should be handed in and disposed of as small chemical waste. Please find out about the local regulations concerning how to dispose of your old television, batteries, and packaging materials whenever it is time to replace them.




PANEL OVERVIEW: STANDARD INPUTS AND OUTPUTS

You can connect a wide range of video and audio devices to your TV, in various ways. This page and the next one provide an overview of signal compatibilities and the types of devices you can connect to the jacks. Connection examples follow on subsequent pages. See pages 1 and 2 of the Quick Use and Setup Guide that came with your set for examples of basic connections. You may also want to refer to the user instructions that came with each particular device for information on connections.


What You Can Connect to the Standard Panel Jacks

- 1 ANTENNA IN 75Ω jack**—use to connect radio-frequency (RF) signals from VHF/UHF antennas or a cable system. These are 480i signals.
- 2 YPbPr (component video input [CVI] jacks)**—compatible with 480i signals only. Use to connect accessories having component video outputs, such as DVD players, laser-disc players, video-game players, satellite receivers, or other devices. Use the INPUT-AV 1 L(ef) and R(ight) AUDIO jacks for sound connections. CVI is not accessible in the PIP window.
- 3 S-VIDEO (super video) jacks**—compatible with 480i signals only. Use to connect accessories having Super VHS (S-VHS) outputs, such as VCRs, DVD players, laser-disc players, video-game players, satellite receivers, or other devices.
- 4 VIDEO (composite) jacks (INPUT-AV 1, INPUT-AV 2, and TV's side jack panel [AV3])**—compatible with 480i signals only. Use to connect accessories having composite video outputs, such as VCRs, video-game players, or other devices.
- 5 AUDIO inputs (INPUT-AV 1, INPUT-AV 2, and TV's side jack panel [AV3])**—use to connect from the audio output jacks on VCRs, DVDs, or other accessories.
- 6 OUTPUT (VIDEO/AUDIO)**—video is compatible with 480i signals only. Use to connect to a VCR to record programs from the TV. Or use the AUDIO outputs to connect to an audio hi-fi system.
- 7 AMP SWITCH, CENTER CHANNEL AMP INPUT, and SUBWOOFER Output**—use to make optional surround-sound connections (see page 11).
- 8 Headphone jack**—use to connect headphones for personal listening.

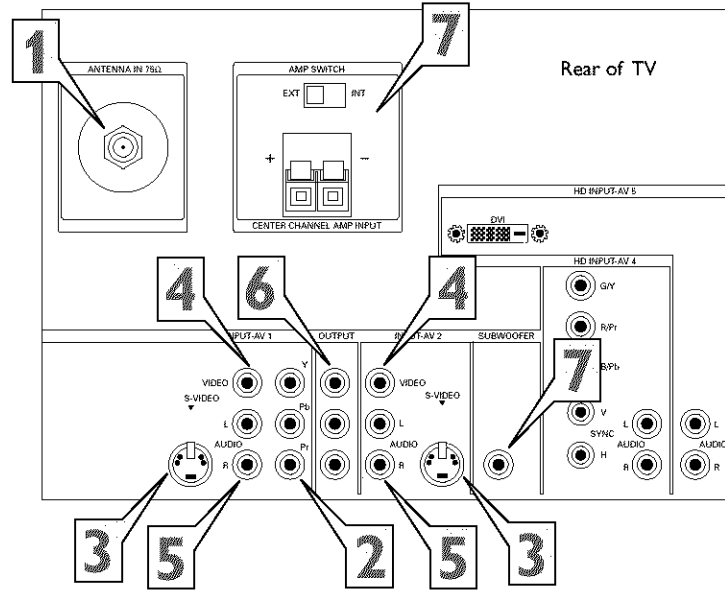

Summary of signal compatibilities

TV Input	Compatible output signal from an external source or device
ANTENNA IN 75Ω, INPUT AV-1, YPbPr (component video inputs [CVI]), INPUT AV-2, and side jack panel (AV3)	480i (480 lines, interlaced)

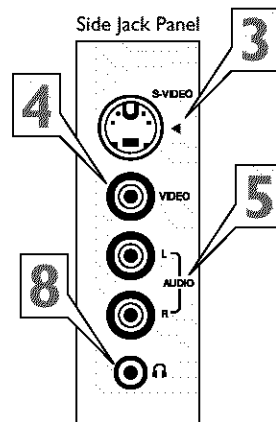

NOTE: The TV recognizes the side jack panel as AV3.

HELPFUL HINTS

Signal sources connected to the HD INPUT-AV 4 or HD INPUT-AV 5 jacks will provide the best picture (see page 7 for descriptions of those inputs). Among the standard (480i-compatible) inputs—ANTENNA IN 75Ω, INPUT AV-1, CVI [labeled Y, Pb, Pr], INPUT AV-2, and the side jack panel [AV3]—the best picture will come from signal sources connected to the CVI jacks. S-Video will provide the next-best level of picture quality.

✓ CHECK IT OUT

The side jack-panel inputs (recognized by the TV as AV3) are convenient for connecting a camcorder. See page 16.

PANEL OVERVIEW: HIGH-DEFINITION INPUTS




What You Can Connect to the High-definition Input Jacks

1 HD INPUT-AV 4—use to connect digital equipment with a 1080i or a 480p signal output, such as HD receivers (1080i or 480p) or DVD players with progressive-scan capability (480p). You can connect equipment with YPbPr component video or RGB outputs to the HD INPUT-AV 4 jacks. H and V sync connections may or may not be required for RGB connections. (See page 59.) Dedicated audio input jacks are located with the HD INPUT-AV 4 video jacks.

NOTE: The Picture-in-Picture (PIP) feature is not available for use with AV 4.

2 HD INPUT-AV 5—use to connect digital equipment with DVI (digital video interface) 1080i or 480p output. DVI is a specific digital input allowing encrypted transmission of uncompressed HD content. DVI includes HDCP (high-bandwidth digital content protection), which is supported by Hollywood, satellite providers, and most of the consumer electronics industry. DVI is gaining momentum and quickly becoming an industry standard for the consumer to view high-definition material while keeping content protected.

NOTE: The Picture-in-Picture (PIP) feature is not available for use with AV5.

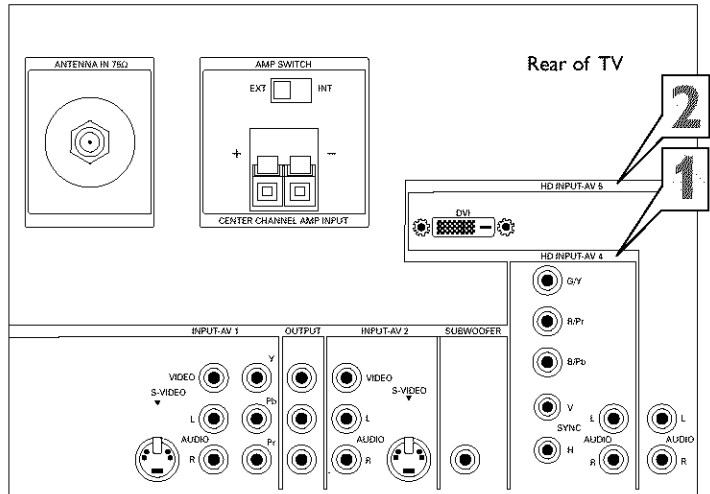

Summary of signal compatibilities

TV Input	Compatible output signal from an external source or device
HD INPUT-AV 4	1080i (1080 lines, interlaced) or 480p (480 lines, progressive scan)
HD INPUT-AV 5	Digital video interface (DVI) with 1080i (1080 lines, interlaced) or 480p (480 lines, progressive scan)

HELPFUL HINTS

- The TV's default color-space setting for HD INPUT-AV 4 is YPbPr. If the picture looks grossly incorrect, try changing the color-space setting on either the digital equipment or the TV. For more information on setting the color space on the digital equipment, see the equipment's directions-for-use manual. To set the TV's color space, see page 61 in this manual.
- This television is designed to be compatible with high-definition signal standards 1080i and 480p as specified by the Electronic Industries Association standard EIA770.3. Because output standards may vary by manufacturer, you may encounter some digital equipment that will not properly display pictures on the TV.
- The PIP (Picture-in-picture) feature allows you to tune to a program in the main window and scan other channels in the PIP window. From a single antenna or cable input, signals are separated into two signals within the television. The AV1, AV2, and AV3 inputs are also available as PIP sources.

HELPFUL HINT

Because DVI is such new technology, the electronics industry is still working toward a decision on one standard. Philips testing has determined that compatibility issues exist with respect to a limited number of high-definition receivers when they are connected to the DVI input on this television. If you should experience difficulties, please contact our Customer Care Center at 1-800-531-0039.



CONNECTING A VCR

The TV's audio/video (AV) input jacks provide for direct picture and sound connections between the TV and accessory devices such as VCRs, DVD players, and others that have AV output jacks.


This example, which uses the INPUT-AV 1 jacks, shows you one way to connect a VCR to your TV.

Refer to the directions-for-use manual for your VCR for further information on connections.

To make the connections shown in this example, you will need:

- one coaxial cable (75Ω)
- one cable for a video connection (standard RCA connector)
- two cables for audio connections (standard RCA connectors) (only one cable is needed for a nonstereo VCR).

NOTE: The cables are not supplied with your TV. You should be able to buy them at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.

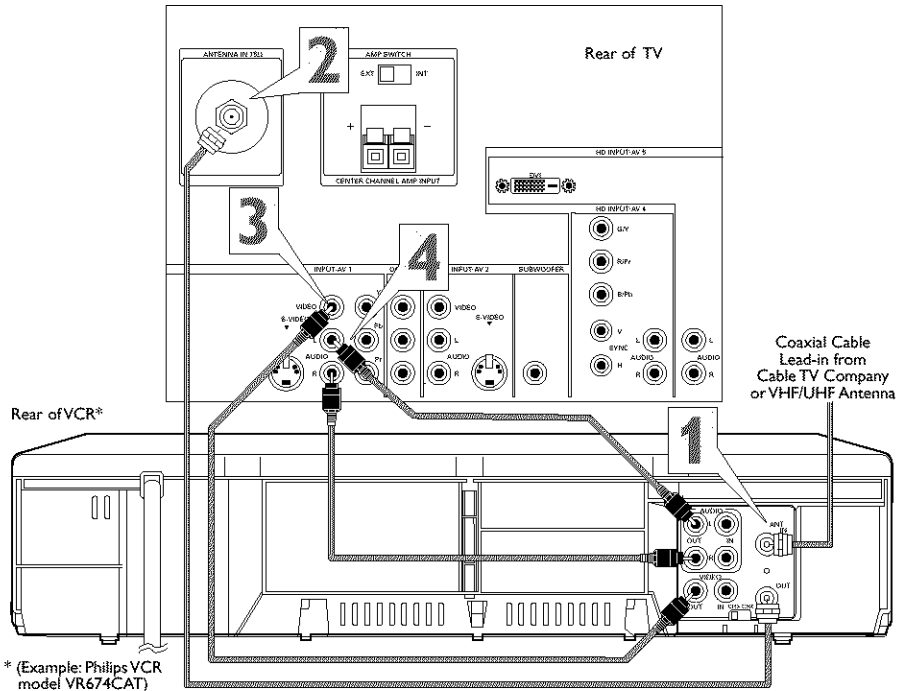

1 Connect a cable TV or antenna signal to the ANT IN jack on the rear of the VCR.



2 Connect from the OUT jack on the rear of the VCR to the ANTENNA IN 75Ω jack on the rear of the TV.

3 Connect the VIDEO OUT jack on the rear of the VCR to the INPUT AV1 VIDEO jack on the rear of the TV.

4 Connect the audio output R(ight) and L(eft) jacks on the rear of the VCR to the INPUT-AV 1 AUDIO jacks on the rear of the TV.

NOTE: If the VCR is a mono (nonstereo) unit, connect only the left audio cable, which usually has a white connector.

5 Press the AV button on the remote control as many times as necessary to select the AV1 source for the viewing of materials from your VCR.

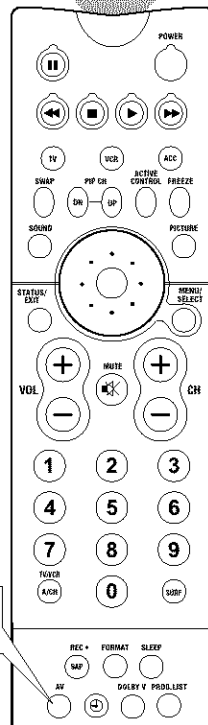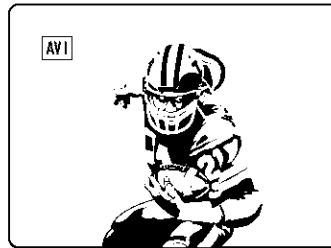

HELPFUL HINTS

- Stereo sound will pass from the ANT OUT jack on the VCR to the ANTENNA IN 75Ω jack on the TV only when the VCR is in TV mode. This is the mode that allows the TV to use its channel selector.
- To simplify making connections, audio and video cables often have color-coded plugs. The jacks on your TV are likewise color coded to match the plugs. The coding is as follows:
 - Yellow for video (composite)
 - Red for the right audio channel
 - White for the left audio channel

NOTE: If your VCR is mono (nonstereo), you will connect only one audio cable. You must ensure that the TV is set to MONO for the signal source to which you've connected the VCR (INPUT-AV 1, INPUT-AV2, or the side panel inputs [AV3]). Otherwise, you will receive sound from only one of the TV's speakers. See page 38.

✓ CHECK IT OUT

You can display the AV1, AV2, or AV3 signal sources in the PIP window. See page 8 of the *Quick Use and Setup Guide* for information on using the Picture-in-Picture (PIP) feature.

CONNECTING A VCR AND CABLE BOX




Presented here is a connection example involving a VCR and cable box.

Refer to the VCR's directions-for-use manual for further information on connections.

To make the connections in this example, you will need:

- one, two-way signal splitter
- two coaxial cables (75Ω)
- one cable for a video connection (standard RCA connector)
- two cables for audio connections (standard RCA connectors) (only one cable is needed for connection to a nonstereo VCR).

NOTE: The cables are not supplied with your TV. You should be able to buy them at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.


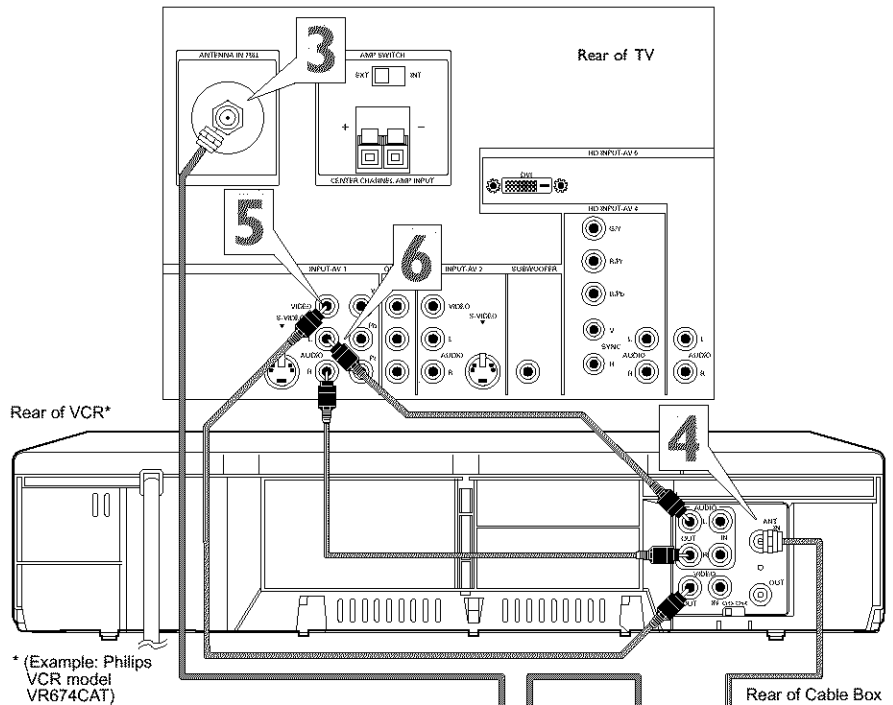


* (Example: Philips VCR model VR674CAT)

- 1** Connect a cable TV signal to a two-way signal splitter.
- 2** Connect one of the two-way signal splitter outputs to the INPUT on the cable box.
- 3** Connect the other two-way signal splitter output to the ANTENNA IN 75Ω on the rear of the TV.
- 4** Connect from the cable box OUTPUT jack to the ANT IN jack on the rear of the VCR.
- 5** Connect the VIDEO OUT jack on the VCR to the INPUT-AV 1 VIDEO jack on the rear of the TV.
- 6** Connect the AUDIO OUT R(right) and L(left) jacks on the VCR to INPUT-AV 1 AUDIO jacks on the rear of the TV.

NOTE: If the VCR is a nonstereo unit, connect only the left audio cable, which usually has a white connector.

- 7** Press the AV button on the remote control as many times as necessary to select the AV1 source for the viewing of materials from your VCR.

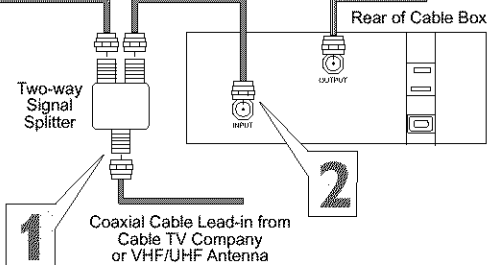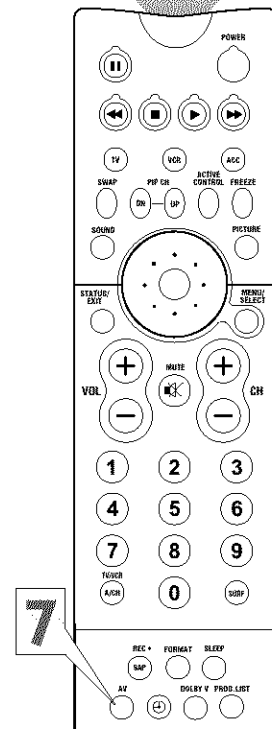

HELPFUL HINTS

- The RF output on a cable box, usually labeled "OUTPUT," "OUT," or "TO TV," will not pass a stereo sound signal to the ANTENNA IN 75Ω jack on the TV. If, however, your cable box has separate Audio/Video outputs, using A/V cables to connect to those outputs and to the A/V inputs on the TV might pass a stereo sound signal to the TV. Contact your cable TV company for more information.
- To simplify making connections, the plugs on audio and video cables are often color coded. The jacks on your TV are likewise color coded to match the plugs. The coding is as follows:
 - Yellow for video (composite)
 - Red for the right audio channel
 - White for the left audio channel

NOTE: If your VCR is mono (nonstereo), you will connect only one audio cable. You must ensure that the TV is set to MONO for the signal source to which you've connected the VCR (INPUT-AV 2, INPUT-AV 1, or the side panel inputs [AV3]). Otherwise, you will receive sound from only one of the TV's speakers. See page 38.




CONNECTING AND USING AN AUDIO HI-FI SYSTEM WITH YOUR TV

You can use your TV's AUDIO OUTPUT jacks to connect to an external audio hi-fi system. Follow the simple steps below.

To make these connections, you will need two cables for audio connections (standard RCA). **NOTE:** The cables are not supplied with your TV. You should be able to buy them at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.

- 1 **Connect from the L(ef) and R(ight) AUDIO OUTPUT jacks on the rear of the TV to the L(ef) and R(ight) AUX/TV INPUT jacks on the rear of the hi-fi system.**
- 2 **See the section below on using the AUDIO OUT control.**

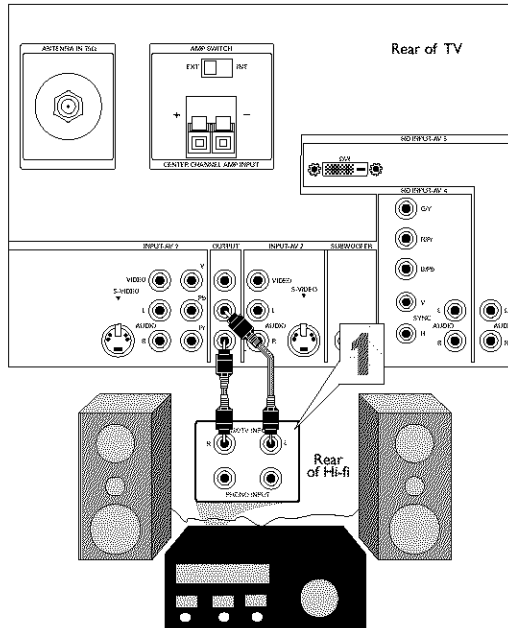

After connecting the TV's AUDIO OUTPUT jacks to the AUDIO INPUT jacks on an external hi-fi system, set the AUDIO OUT control in the SOUND submenu to either VARIABLE or FIXED to determine whether you adjust the volume at the TV or at the external hi-fi system. To change the volume at the TV using the TV's remote control, you must select VARIABLE. To adjust the volume at the stereo using the hi-fi's controls, you must select FIXED. You can also use the SPEAKERS control in the SOUND submenu to turn the TV's speakers off.

- 1 **Press the MENU/SELECT button on the remote control to show the on-screen menu.**
- 2 **Press the CURSOR RING DOWN once to highlight SOUND.**
- 3 **Press the CURSOR RING RIGHT to enter the SOUND submenu.**
- 4 **Press the CURSOR RING DOWN repeatedly until AUDIO OUT is highlighted.**
- 5 **Press the CURSOR RING LEFT or RIGHT to set the AUDIO OUT to either VARIABLE or FIXED.**
- 6 **If you want to turn the TV's internal speakers off, press the CURSOR RING DOWN repeatedly until SPEAKERS is highlighted. Then press the CURSOR RING LEFT or RIGHT to turn the speakers off.**
- 7 **Press the STATUS/EXIT button to exit the menu.**

HELPFUL HINT

The sound outputs from the TV to an external hi-fi system are not affected or tailored by the TREBLE, BASS, BALANCE, AVL, INCR. SURROUND, and BASS BOOST controls in the TV's SOUND submenu.

MAKING OPTIONAL SURROUND-SOUND CONNECTIONS




Your TV has extra jacks that allow you to connect to an external audio amplifier system and a powered subwoofer. This connection option will provide a surround-sound experience similar to a movie theater or concert hall.


To make the connections shown in this example, you will need:

- two cables for audio connections (standard RCA connectors)
- four paired wires for speaker connections
- one cable for a subwoofer connection (standard RCA connectors).

NOTE: The cables are not supplied with your TV. You should be able to buy them at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.

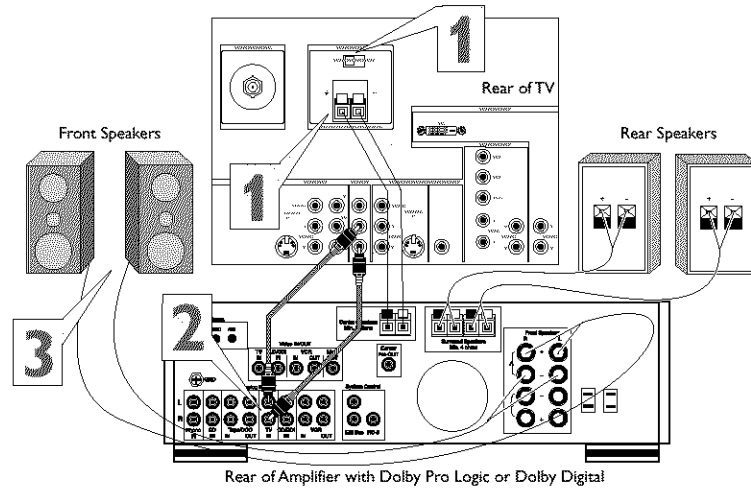

- 1** Connect from the Center Speakers output jacks on the amplifier with Dolby Pro Logic* or Dolby Digital to the corresponding CENTER CHANNEL INPUT jacks on the rear of the TV. Place the TV's AMP switch in the EXT (external) position.
- 2** Connect from the L(ef) and R(ight) AUDIO OUTPUT jacks on the rear of the TV to the L(ef) and R(ight) TV IN jacks on the rear of the Dolby receiver.
- 3** Connect from the receiver's front and surround speaker connectors to the front and rear surround speakers.
- 4** Connect from the SUBWOOFER output jack on the rear of the TV to the L(ef) and R(ight) Low Level Input jacks on the rear of the powered subwoofer.
- 5** Set the TV's AUDIO OUT control to FIXED. See page 10.

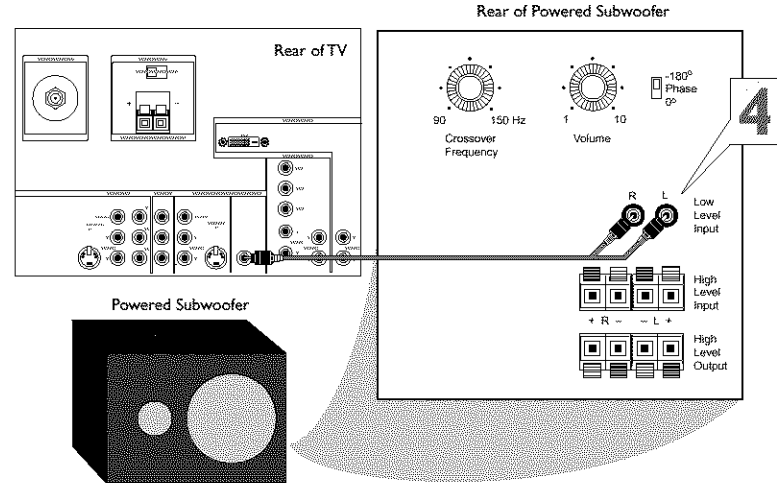


The diagram below, right shows how to arrange the speakers and subwoofer for surround sound.

HELPFUL HINTS

- If you use a single cable to make the connection to the powered subwoofer, you will need to increase the volume on the back of the subwoofer to compensate for the absence of the second cable.
- You must adjust the trim of the powered subwoofer at the powered subwoofer. *Trim* refers to the fine adjustments of volume level.

Surround-sound Setup
NOTE: The gray circle indicates the primary viewing area.

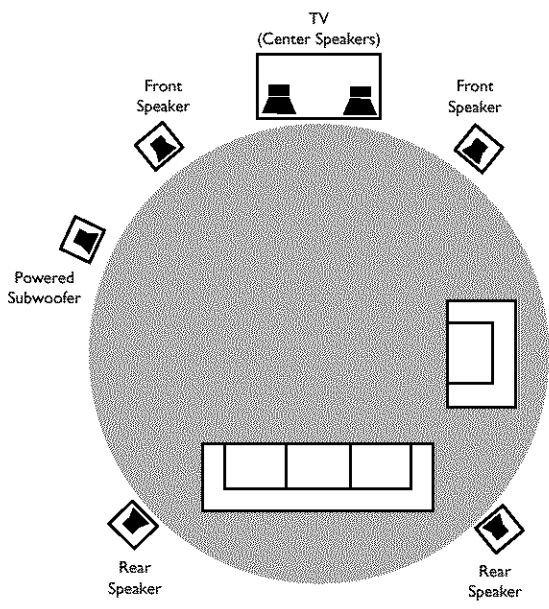

**"Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.




CONNECTING A STANDARD DVD PLAYER

Component video inputs allow the highest possible color and picture resolution in the playback of digital signals, such as those of DVD players. The color difference signals (Pb, Pr) and the luminance (Y) signal are connected and received separately. The result is better color bandwidth information than is possible with composite video (labeled VIDEO on your TV's jack panel) or S-Video connections.

To make the connections shown in this example, you will need:

- three cables for video connections (standard RCA connectors)
- two cables for audio connections (standard RCA connectors)

NOTE: The cables are not supplied with your TV. You should be able to buy them at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.

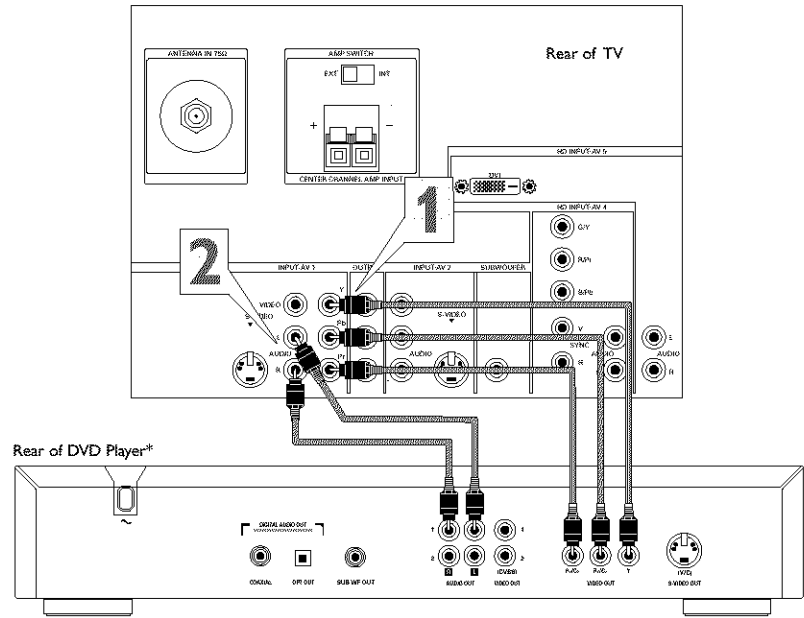



*(Example: Philips DVD model DVD712)

1 Connect the YPbPr (component) VIDEO OUT jacks from the DVD player to the INPUT-AV 1 YPbPr (component video) jacks on the rear of the TV.

NOTE: The INPUT-AV 1 YPbPr jacks will accept 480i (interlaced) output signals only. The connection example on this page assumes the use of a DVD player with interlaced output. Some DVD players, however, have YPbPr outputs that can be switched between interlaced and progressive scan. If you are attempting to use a DVD player with progressive-scan (480p output) capability to make the connection shown in this example, you must be sure to switch the DVD player to interlaced. If necessary, refer to the DVD player's directions-for-use manual for help. If you want to use the DVD player in progressive-scan mode, you must use the HD INPUT-AV 4 jacks (see page 14).

2 Connect the AUDIO OUT L(ef) and R(ight) jacks from the DVD player to the INPUT-AV 1 AUDIO jacks on the rear of the TV.

3 Press the AV button on the remote control as many times as necessary to select the CVI (component video input) source on the TV for the viewing of materials from your DVD player.

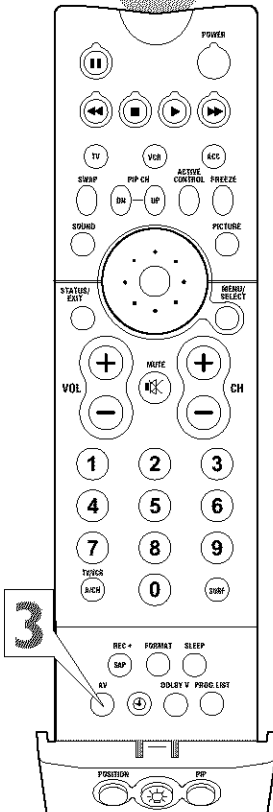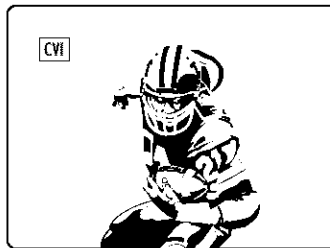

HELPFUL HINTS

- To simplify making connections, the connectors on audio and video cables are often color coded. The jacks on your TV are likewise color coded to match the connectors.
- The names for the component video jacks may differ depending on the DVD player or accessory digital source equipment used. For example, besides YPbPr, you may see R-Y/B-Y/Y; or CrCbY. Although abbreviations and terms may vary, the letters *B* and *R* stand for the blue and red color component signal connectors, respectively, and *Y* indicates the luminance signal. If necessary, refer to the directions-for-use manual for your DVD or digital accessory for more information.
- You can also connect a satellite receiver to the TV in a manner similar to the example shown on this page. If you connect a satellite receiver to the TV, you will need to use the receiver's channel-memorization system to store channels in the receiver's memory.
- If you experience difficulties receiving sound with a DVD disc, check the sound settings through the DVD disc's menu.
- CVI is not accessible in the PIP window. See page 8 in the *Quick Use and Setup Guide* for more on the PIP feature.

WARNING

To prevent uneven picture-tube aging, do not leave nonmoving images or picture borders on the screen for an extended period. See page 62.

CONNECTING AN S-VIDEO DEVICE




The S(uper)-Video connection on the rear (and side panel) of the TV can give you better picture detail and clarity for the playback of S-VHS VCR tapes or DVDs than the normal antenna (RF signal) or Video (composite) picture connections. The example given connects a DVD/VCR Combi unit to the INPUT-AV 2 jacks on the rear of the TV.

NOTE: The accessory device must have an S-VIDEO output jack to make the connection explained on this page.

To make the connections, you will need:



- one S-Video cable
- two cables for audio connections (standard RCA connectors).

NOTE: The cables are not supplied with your TV. You should be able to buy them at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.

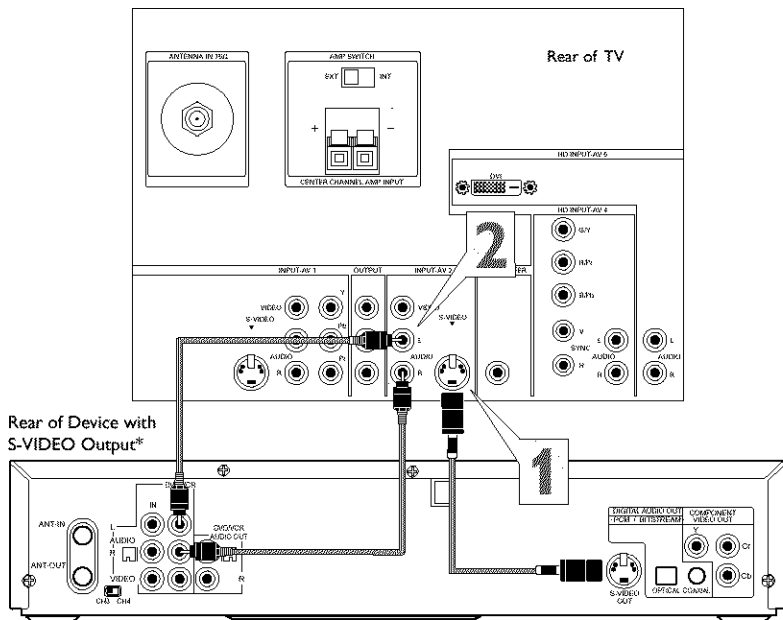

*(Example: Philips DVD/VCR Combi model DV910VHS)

- 1** Connect the S-VIDEO OUT jack on the rear of the accessory device with S-VIDEO output to the INPUT-AV 2 S-VIDEO jack on the rear of the TV.
- 2** Connect the DVD/VCR AUDIO OUT jacks on the rear of the accessory device to the INPUT-AV 2 AUDIO input jacks on the rear of the TV.
- 3** Press the AV button on the remote control as many times as necessary to select the AV2 source on the TV for the viewing of materials from your S-Video device.

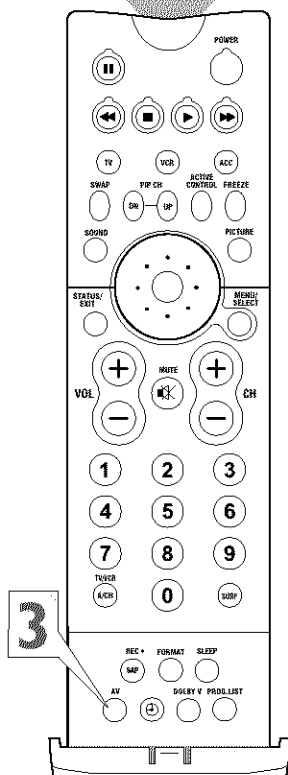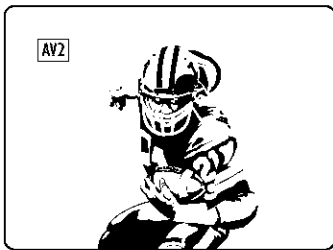

HELPFUL HINTS

- To simplify making connections, audio cables are often color coded: red for the right channel, and white for the left channel. The jacks on your TV are likewise color coded to match the connectors. To make S-Video connections, you must use an S-Video cable.
- You can also connect a satellite receiver, laser-disc player, video-game player, or other accessory device with S-Video capability to the TV in a manner similar to the example shown on this page.
- If you connect a satellite receiver to the TV, you will need to use the receiver's channel-memorization system to store channels in the receiver's memory.

WARNING

Video sources that show a constant nonmoving pattern on the TV screen can cause picture-tube damage. When you are not using your video accessory devices, turn them off. Also, regularly alternate the use of accessory video sources with normal TV viewing. See page 62.




CONNECTING A DVD PLAYER WITH PROGRESSIVE-SCAN CAPABILITY

The following instructions explain how to connect a DVD player with progressive-scan capability to the HD INPUT-AV 4 jacks on your TV.

To make the connections, you will need:

- three cables for video connections (standard RCA connectors)
- two cables for audio connections (standard RCA connectors).

NOTE: The cables are not supplied with your TV. You should be able to buy them at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.

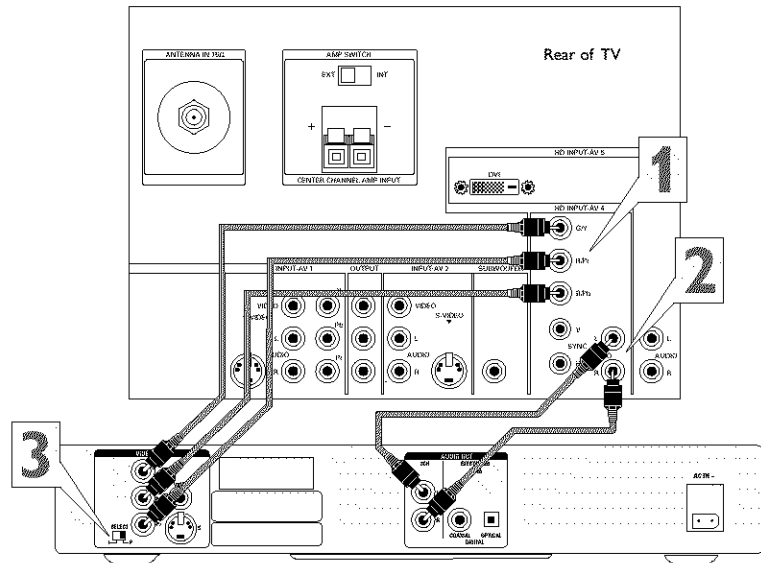

Rear of DVD Player with Progressive-scan Capability


1 Connect from the YPrPb jacks on the rear of the DVD player to the HD INPUT-AV 4 G/Y, R/Pr, B/Pb jacks on the rear of the TV.

2 Connect from the L(ef) and R(ight) AUDIO OUT jacks on the rear of the DVD player to the HD INPUT-AV 4 AUDIO L(ef) and R(ight) jacks on the rear of the TV.

3 Make sure the DVD player is in progressive-scan mode. You will not get a viewable picture through the HD INPUT-AV 4 jacks if the DVD player is in interlaced mode.

For more information on placing your DVD player in progressive-scan mode, see the DVD player's directions-for-use manual. Also, see the Helpful Hints to the right. The way in which progressive-scan mode is selected varies among DVD players.

4 Press the AV button on your TV remote control as many times as necessary to select the AV4 signal source for the viewing of materials from your progressive-scan DVD player.

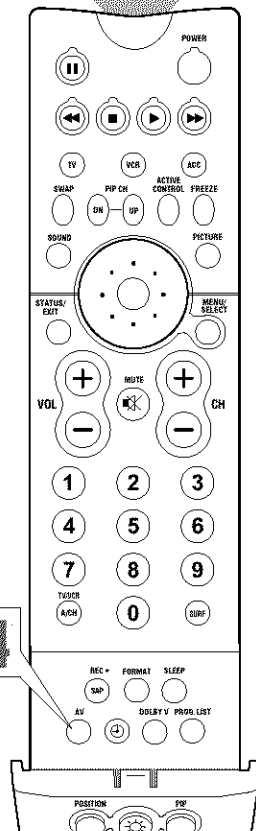

HELPFUL HINTS

- If after connecting your DVD player your display is filled with wavy lines, it may be that your DVD player is not set to progressive-scan mode. Some DVD players have an I/P (interlaced/progressive scan) switch located on the back or front of the players for changing from interlaced to progressive-scan mode. Other DVD players may allow the mode to be changed by pressing a button on the DVD player's remote control or by using the DVD player's on-screen menu. **If the interlaced/progressive-scan selection option is provided only through the DVD on-screen menu, you will need to connect the DVD player to another AV input source in addition to HD INPUT-AV 4 to see the DVD menu. Select this additional AV source on screen to see the DVD menu and choose progressive-scan mode. You will then be able to see the DVD picture through the AV4 source.**
- Some DVD players have dedicated progressive-scan output jacks that are labeled as such and require no switching to provide a picture through the HD INPUT-AV 4 jacks. See your DVD player's directions-for-use manual for information.
- The default color-space setting for the HD INPUT-AV 4 jacks is YPbPr. RGB is also an option. If the picture's color looks grossly incorrect, try changing either the DVD player's or TV's color-space setting. See the DVD player's directions-for-use manual for information on setting its color space. Or see page 61 in this manual to set the TV's color space.
- The Picture-in-Picture (PIP) feature does not function with AV4 or AV5.

HELPFUL HINT

If you experience difficulties receiving sound with a DVD disc, check the sound settings through the DVD disc's menu.

WARNING

To prevent uneven picture-tube aging, do not leave nonmoving images or picture borders on the screen for an extended period. See page 62.

CONNECTING AN HD RECEIVER TO THE HD INPUT-AV 4 JACKS




Digital equipment with a 1080i or 480p output, is compatible with the HD INPUT-AV 4 video jacks.

NOTE: This television is designed to be compatible with high-definition signal standards 1080i and 480p as specified by the Electronic Industries Association standard EIA770.3. Because output standards may vary by manufacturer, you may encounter some digital equipment that will not properly display pictures on the TV.

To make the connections shown in this example, you will need:

- one S-VIDEO cable
- three cables for video connections (standard RCA connectors)
- four cables for audio connections (standard RCA connectors)
- one coaxial cable (75Ω).

NOTE: The cables are not supplied with your TV. You should be able to buy them at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.

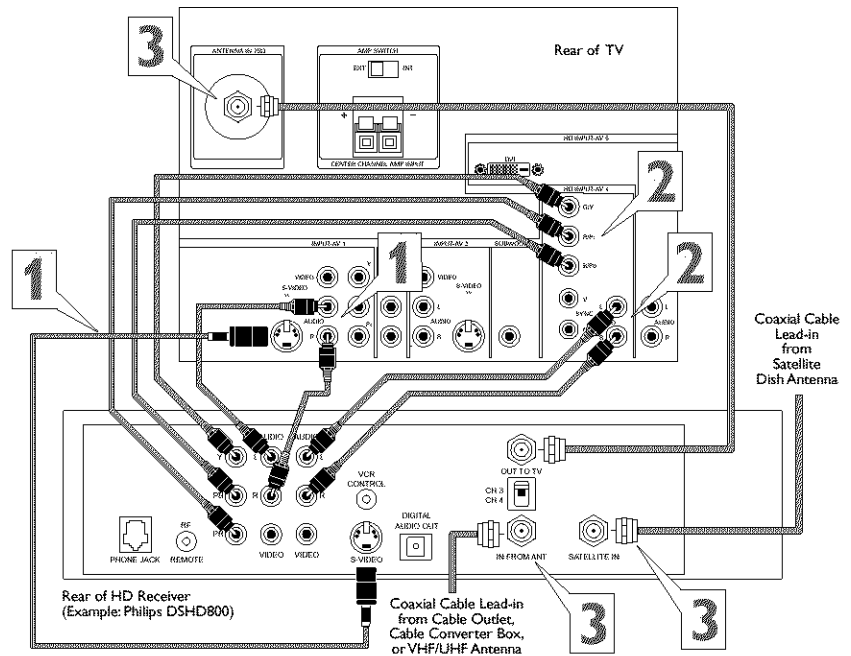

- 1 Connect S-VIDEO and audio cables.**
NOTE: This example uses INPUT-AV 1. You can use INPUT-AV 2 or the side input jacks if you want.


 - Connect an S-VIDEO cable from the HD receiver's S-VIDEO jack to the TV's INPUT-AV 1 S-VIDEO jack.
 - Connect from the HD receiver's AUDIO L(ef) and R(ight) jacks to the TV's INPUT-AV 1 L(ef) and R(ight) AUDIO jacks.
- 2 Connect component video and audio cables to the TV's HD inputs.**

 - Connect from the YPRPB jacks on the HD receiver to the TV's HD INPUT-AV 4 G/Y, R/Pr, B/Pb jacks.
 - Connect from the HD receiver's AUDIO L(ef) and R(ight) jacks to the TV's HD INPUT-AV 4 L(ef) and R(ight) AUDIO jacks.
- 3 Connect coaxial cables.**

 - Connect the coaxial cable lead-in from your cable outlet, cable converter box, or VHF/UHF antenna to the IN FROM ANT jack on the HD receiver.
 - Connect a coaxial cable from the OUT TO TV jack to the ANTENNA IN 75Ω jack on the TV.
 - Connect the coaxial cable lead-in from a satellite dish antenna to the SATELLITE IN jack on the HD receiver.
- 4 Refer to the directions-for-use manual that came with the HD receiver for setup instructions.**

HELPFUL HINTS

- HD receivers will supply stereo sound to the TV only through the audio left and right cables, not through the coaxial cable.
- Making a standard connection along with the HD connection as shown in the example (S-VIDEO) on this page will allow you to see the receiver's on-screen menu and a picture (valid signal) from the receiver should it be switched to SD mode.
- The HD INPUT-AV 4 jacks are for standard RCA-type phono plugs. Your HD receiver may use RCA or BNC output jacks. If your HD receiver comes with BNC jacks, you will need to purchase BNC-to-RCA adapters to connect the receiver to the TV. You should be able to purchase these adapters at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.

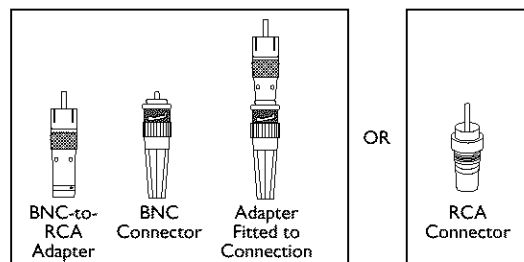

- The HD INPUT-AV 4 jacks are compatible with some digital equipment having RGB outputs with "sync on green" or RGB with "separate H and V sync." Output standards for digital equipment, however, may vary by manufacturer. No industry standards have been established for HD television RGB signal systems, timing, synchronization, and signal strengths. If the digital equipment you want to connect to your TV offers both component video and RGB outputs, component video is the suggested connection to use.
- The default color-space setting for the HD INPUT-AV 4 jacks is YPbPr. RGB is also an option. If the picture color looks grossly incorrect, try changing either the receiver's or TV's color space. See the receiver's directions-for-use manual for information on setting its color space. Or see page 61 in this manual for setting the TV's AV4 color space.
- AV4 and AV5 do not function with the PIP feature. They cannot be displayed in the PIP window, nor can the PIP window be displayed when those signal sources are being viewed on the main screen.



CONNECTING A CAMCORDER


The side panel jacks provide a convenient way for you to connect a camcorder to your TV. The side panel jacks are recognized by your TV as AV3.

You can obtain S-VIDEO quality with an S-VHS, Hi-8, or digital camcorder by connecting to the S-VIDEO input instead of the VIDEO (composite) input.


To make the connections shown in this example, you will need:

- an S-VIDEO cable
- two cables for audio connections (standard RCA connectors).

NOTE: The cables are not supplied with your TV. You should be able to buy them at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.

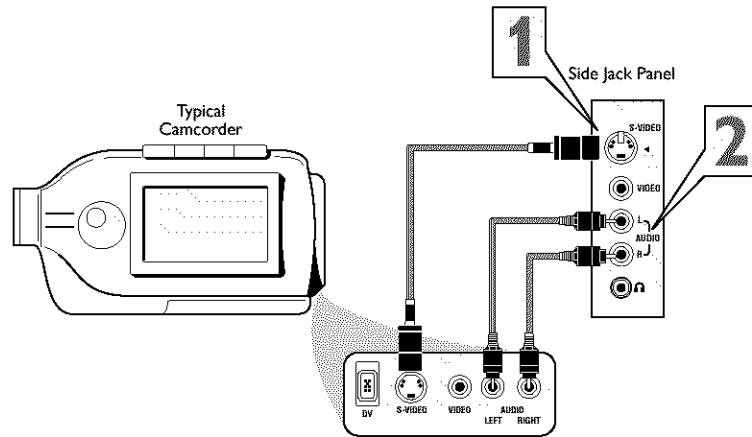


- 1** Connect from the S-VIDEO output on the camcorder to the S-VIDEO input in the TV's side panel.
- 2** Connect from the AUDIO outputs on the camcorder to the side panel AUDIO L(ef) and R(ight) inputs.
- 3** Press the AV button on the remote control as many times as necessary to select the AV3 source on the TV.
- 4** Turn the camcorder on, insert a video-tape and press PLAY to view the tape on the TV.

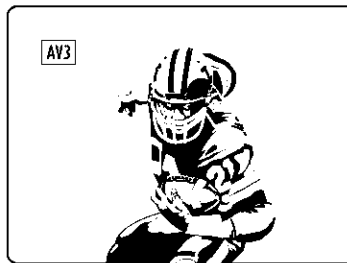

HELPFUL HINT


To simplify making connections, the connectors on audio cables are often color coded: red for the right channel, and white for the left channel. The jacks on your TV are likewise color coded to match the connectors. To make S-Video connections, you must use an S-Video cable.

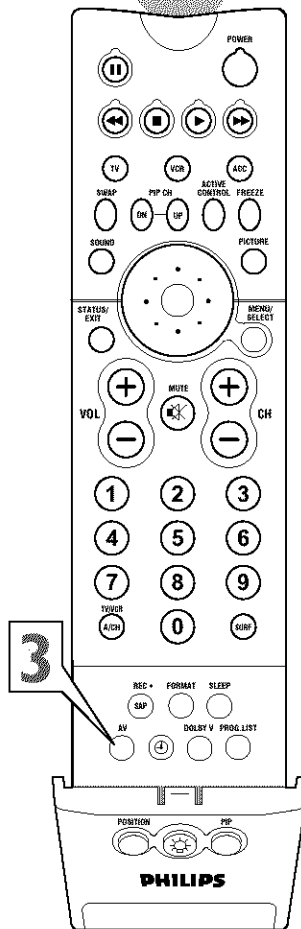




CONNECTING AND USING HEADPHONES WITH YOUR TV


The TV's side panel has a headphone jack for personal listening.

- 1** Insert the headphone plug into the headphone jack in the TV's side panel.
 - 2** Turn down the TV's volume or press the Mute button  on the remote control to turn off the TV's internal speakers. See the section below for information on adjusting headphone volume and balance.
- NOTE:** The headphone impedance must be between 8 and 4,000 ohms. The headphone jack is stereo and 3.5 mm in size.

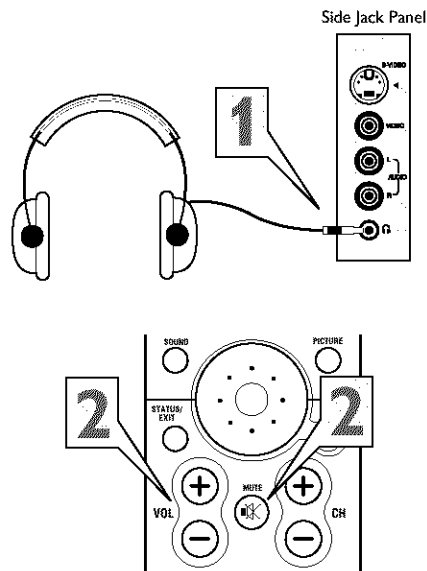

The HEADPHONE controls allow you to adjust the volume and balance of the sound going to the headphones.

- 1** Press the MENU/SELECT button on the remote control to show the on-screen menu.
- 2** Press the CURSOR RING DOWN once to highlight SOUND.
- 3** Press the CURSOR RING RIGHT to enter the SOUND submenu.
- 4** Press the CURSOR RING DOWN repeatedly until HEADPHONE is highlighted. Then press the CURSOR RING RIGHT to enter the HEADPHONE submenu.
- 5** Press the CURSOR RING DOWN or UP to highlight VOLUME or BALANCE. Then press the CURSOR RING LEFT or RIGHT to adjust the control.
- 6** Press the STATUS/EXIT button to exit the menu.

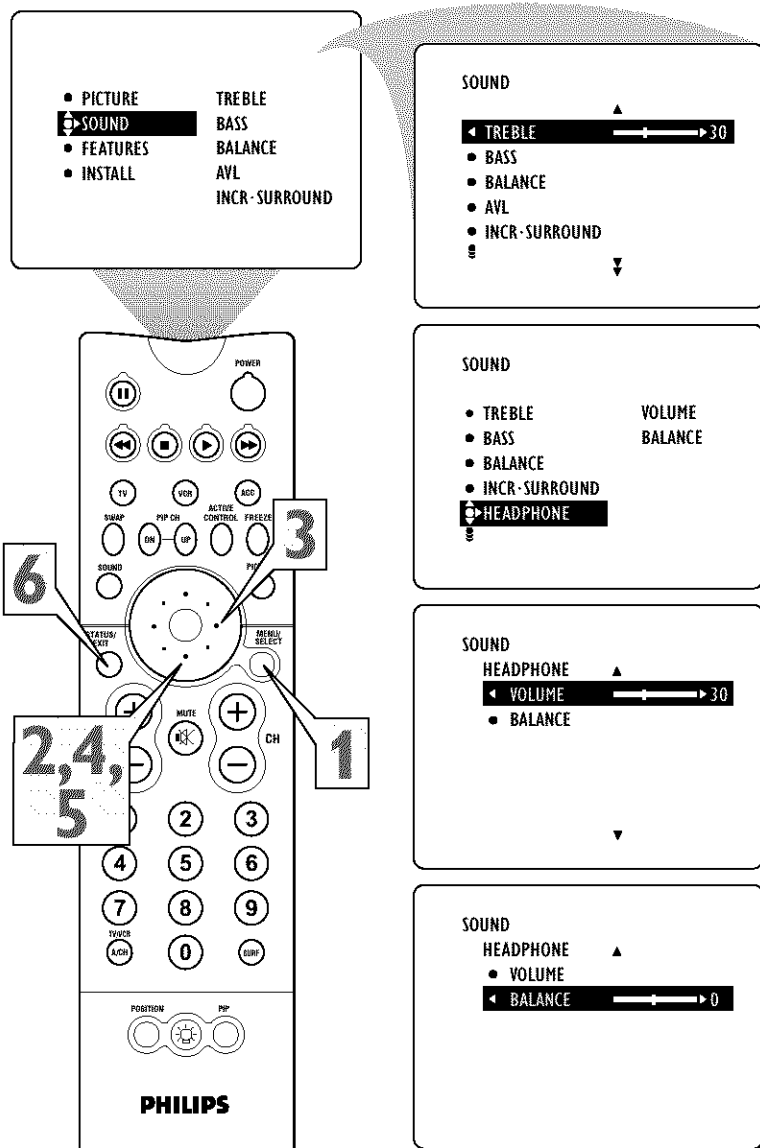

HELPFUL HINT
The AVL, INCR. SURROUND, and BASS BOOST controls do not function with the headphones.



PROGRAMMING THE TV REMOTE TO WORK WITH ACCESSORY DEVICES

Your TV remote is capable of working not only your TV but also other infrared remote (IR) controlled devices such as VCRs, cable TV converter boxes, satellite receivers, DVD players, and laser-disc players.


If you want to use your TV remote to operate a VCR or other accessory device, you will need to perform this initial check explained in this section. You may also need to go to the sections on the "Code-entry Method" and the "Search Method" in the pages that follow.

1 Press the **VCR or ACC(essory) mode button** on the TV remote for the desired accessory device category.

NOTE: Pressing the VCR mode button allows access to product codes for VCRs. Pressing the ACC(essory) mode button allows access to the product codes for cable TV converters, satellite receivers, DVD players, and laser-disc players.



2 Point the TV remote toward the desired accessory device and press the **POWER** button.

Does the remote turn the accessory device on?

If yes,  and try other function buttons on the TV remote. With a VCR, for example, try the Play, Stop, and Rewind buttons, for example. (See page 23 for information on how the remote buttons correspond with accessory device functions.) If they also work the accessory device, then the remote is ready and no further steps are needed.

If not, do the following:

Look up a **four-digit remote code number** on pages 21 or 22 for your brand of accessory device. Then go through the simple steps for entering a four-digit code as explained on page 19.

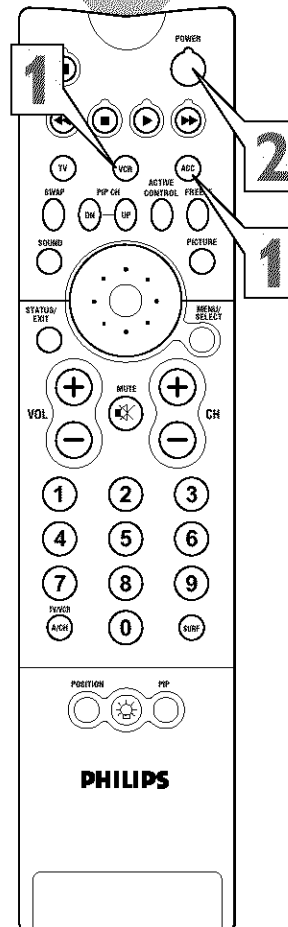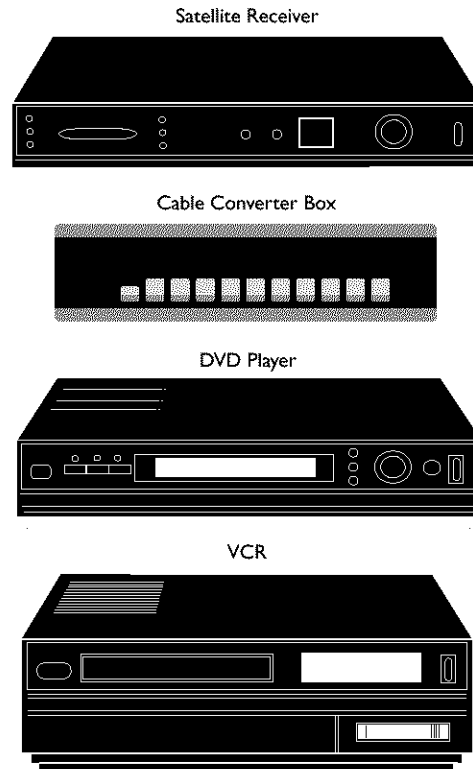

HELPFUL HINT

If more than one four-digit code number is listed, you may have to try more than the first number given to locate your device's correct code.

USING THE CODE-ENTRY METHOD TO PROGRAM YOUR TV REMOTE



Now that you have looked up the four-digit remote-control Direct-entry Code for your brand of accessory device, you are ready to follow the simple steps shown below to program your TV remote.

Please read through all the steps before beginning.


1 First, press and hold down the **VCR** or **ACC** (for an accessory device other than a VCR) mode button on the TV remote. Then press and hold down the **MENU/SELECT** button at the same time for a brief moment. Release the buttons. The TV remote back light will switch on.

NOTE: For correct operation, you must first press and hold the mode button and then press and hold the **MENU/SELECT** button simultaneously.


2 Within 30 seconds of pressing the **VCR** (or **ACC**) button and **MENU/SELECT** button, enter a four-digit code for the accessory device (see pages 21 and 22).

If you make a mistake while attempting to enter the four-digit code and want to start again, press any button other than one with a number. Then return to step 1 to begin again.


3 Point the remote at the accessory device. Then press the **POWER** button on the remote to turn the device on.

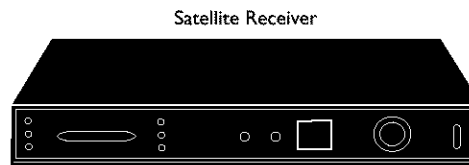


Satellite Receiver

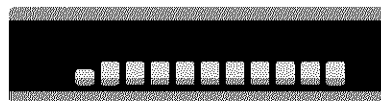 


Cable Converter Box

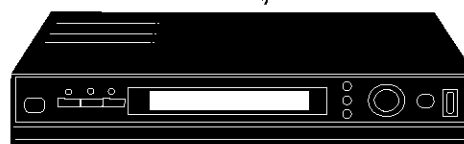

DVD Player

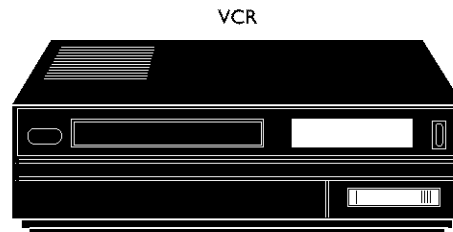

VCR

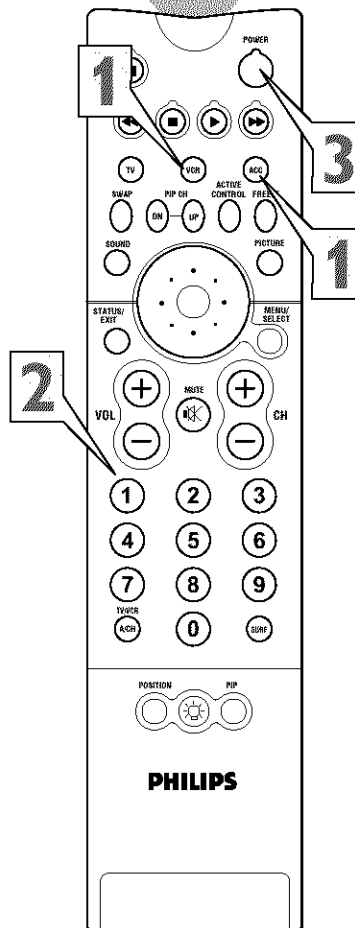

HELPFUL HINTS

- If you do not enter a complete code within 30 seconds, you will need to perform step 1 of the Code-entry Method again.
- If you enter more than four digits, the unit will retain the first four digits entered.
- If the procedure explained above does not work the first time, repeat the steps using the same remote code number.
- If after a second try the remote does not operate your accessory device, and more code numbers are listed for your brand, use the next listed code number.
- If after repeated attempts the Entry-code Method does not allow you to turn your accessory device with your TV remote, try the Search Method explained on the next page.



USING THE SEARCH METHOD TO PROGRAM YOUR TV REMOTE

Your TV remote can be set to work various accessory devices (VCRs, cable converters, and satellite receivers, for example) by what is called the Search Method.

NOTE: The Search Method works only with devices equipped with channel-display indicators on the devices themselves or the ability to show channel numbers on the TV screen. If the Code-entry Method (shown in the previous section) did not enable your TV remote to work your accessory device, then follow the easy steps listed below. Please read the steps once before performing them.

- 1 Turn on the desired device. Press and hold down the VCR or ACC (for an accessory device other than a VCR) mode button on the TV remote. Then press and hold down the SURF button as you hold down the desired mode (VCR or ACC) button.**





NOTE: For correct operation, you must press and hold down the desired mode (VCR or ACC) button first and then press and hold down the SURF button second.

While holding down the SURF and the desired mode (VCR or ACC) buttons simultaneously, point the remote toward the accessory device and continue holding the buttons down.

- 2 Watch the Channel Indicator on your accessory device.** Channel numbers will scan up when the TV remote has identified the correct code for your accessory device. This may take several minutes.

- 3 Release the mode (VCR or ACC) and SURF buttons as soon as channel numbers start to scan up.** The scanning means that your TV remote has found the code for your accessory device.

NOTE: If no channel change happens after several minutes, repeat steps 1 and 2. Then if a channel change still does not occur, the remote will not work with the desired accessory device.

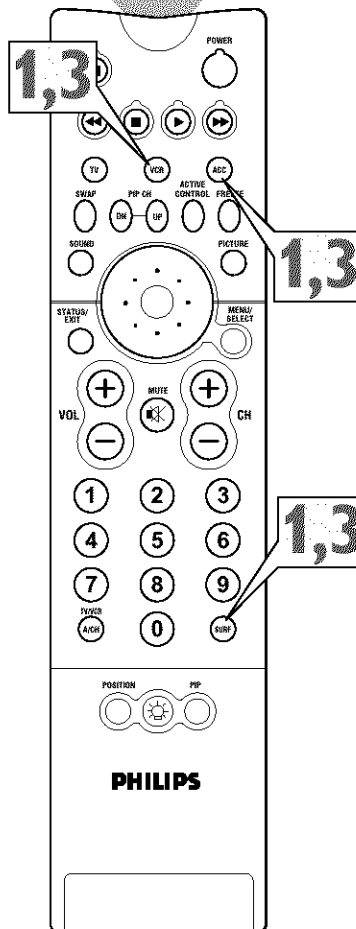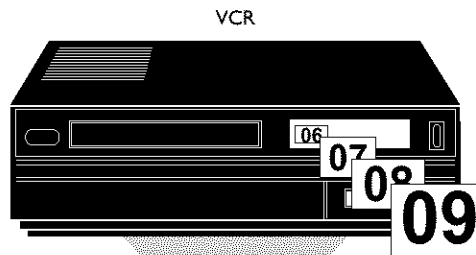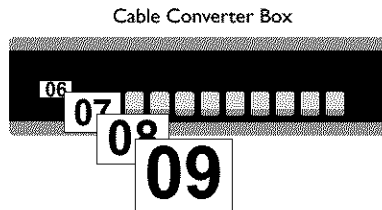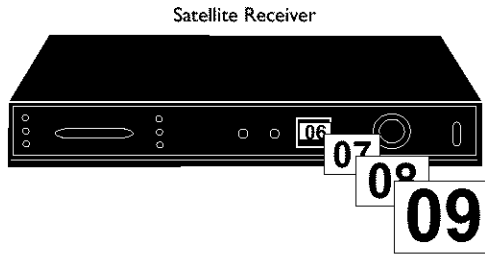

HELPFUL HINTS

- The remote's back light will blink as the remote moves through its product code list. After the remote identifies the product code for your accessory device and you release the remote buttons, the back light will blink twice.
- Your TV remote may locate the accessory device's code quickly or within several minutes.
- Don't let the accessory device scan up more than five channels when the correct code is found—the remote may pass up the right code and have to repeat the search cycle.

DIRECT-ENTRY CODES FOR A/V ACCESSORY DEVICES



VCR

	CODE NUMBER
ADMIRAL	.0075, 0236
ADVENTURA	.0027
AIKO	.0305
AIWA	.0334, 0495, 0027, 0064
AKAI	.0133, 0080, 0068, 0076, .0088, 0183, 0269
AMERICA ACTION	.0305
AMERICAN HIGH	.0062
ASHA	.0267
AUDIOVOX	.0064
BEAUMARK	.0267
BELL & HOWELL	.0131
BROKSONIC	.0148, 0211, 0029, 0236, .0238, 0322, 0388, 0506
CCE	.0099, 0305
CALIX	.0064
CANON	.0194, 0062, 0129
CAPEHART	.0047
CARVER	.0108
CINERAL	.0305
CITIZEN	.0305, 0064
COLT	.0099
CRAIG	.0064, 0099, 0074, 0267, .0298
CURTIS MATHES	.0062, 0068, 0087, 0189
CYBERNEX	.0078, 0267
DAEWOO	.0305, 0588, 0047, 0072
DAYTRON	.0047
DENON	.0069
DYNATECH	.0027
ELECTROHOME	.0064
ELECTROPHONIC	.0064
EMEREX	.0059
EMERSON	.0211, 0029, 0236, 0305, .0063, 0148, 0238, 0588, .0235, 0321, 0506, 0088, .0115, 0239, 0027, 0064, .0070, 0095, 0322, 0388, .0537
FISHER	.0074, 0131, 0081, 0093
FUJI	.0060, 0062
FUNAI	.0027
GE	.0062, 0087, 0075, 0092, .0229, 0267
GARRARD	.0027
GO VIDEO	.0306, 0459, 0553, 0259
GOLDSTAR	.0064, 0045, 0065, 0498, .0507
GRADIENTE	.0035, 0027, 0435
GRUNDIG	.0222
HI-Q	.0074
HARLEY DAVIDSON	.0027
HARMAN/KARDON	.0065, 0102, 0108
HARWOOD	.0095, 0099
HEADQUARTER	.0073
HITACHI	.0069, 0193, 0132, 0092, .0027, 0068, 0109
HUGHES NETWORK SYSTEMS	.0069
JVC	.0094, 0035, 0233, 0234, .0068, 0411

JENSEN	.0068
KEC	.0064, 0305
KLH	.0099
KENWOOD	.0068, 0094, 0411, 0065
KODAK	.0062, 0064
LXI	.0064
LLOYD'S	.0027, 0235
LOGIK	.0099
MEI	.0062
MGA	.0070, 0088, 0267
MGN TECHNOLOGY	.0267
MTC	.0027, 0267
MAGNASONIC	.0305
MAGNAVOX	.0062, 0108, 0137, 0130, .0027, 0066, 0176
MAGNIN	.0267
MARANTZ	.0108, 0062
MARTA	.0064
MATSUSHITA	.0062, 0189, 0481
MEMOREX	.0131, 0074, 0506, 0027, .0064, 0075, 0062, 0073, .0267, 0334, 0066, 0189, .0236, 0481, 0828, 0829
MINOLTA	.0132, 0069
MITSUBISHI	.0200, 0088, 0102, 0241, .0269, 0070, 0075, 0094, .0470
MOTOROLA	.0062, 0075
MULTITECH	.0027, 0099
NAD	.0085
NEC	.0065, 0067, 0068, 0077, .0094, 0109, 0131
NIKKO	.0064
NIKON	.0061, 0280
NOBLEX	.0267
OLYMPUS	.0062, 0253
OPTIMUS	.0189, 0481, 0827, 0828, .0075, 0085, 0829, 0064, .0131, 0459
OPTONICA	.0089
ORION	.0506, 0029, 0211, 0236, .0322
PANASONIC	.0062, 0189, 0828, 0481, .0253, 0104, 0405, 0829, .0129, 0252, 0254, 0273, .0827
PENNEY	.0062, 0267, 0064, 0069, .0065, 0067, 0081
PENTAX	.0069, 0092, 0132
PHILCO	.0062, 0236, 0506
PHILIPS	.0108, 0062, 0089, 0137, .0830, 0831
PILOT	.0064
PIONEER	.0085, 0195, 0094
POLK AUDIO	.0108
PORTLAND	.0047
PROFITRONIC	.0267
PROSCAN	.0087, 0229
PROTEC	.0099
PULSAR	.0066, 0078
QUARTER	.0073

QUARTZ	.0073
QUASAR	.0062, 0189, 0104, 0481, .0828
RCA	.0087, 0176, 0229, 0069, .0132, 0085, 0062, 0075, .0092, 0104, 0133, 0267, .0304
RADIO SHACK	.0027
RADIX	.0064
RANDEX	.0064
REALISTIC	.0027, 0131, 0074, 0075, .0064, 0062, 0089, 0073, .0093
RICOH	.0061, 0280
RUNCO	.0066
STS	.0069
SALORA	.0102
SAMSUNG	.0072, 0078, 0080, 0267
SANKY	.0066, 0075
SANSUI	.0068, 0506, 0027, 0094, .0109, 0236, 0298
SANYO	.0074, 0073, 0131, 0267
SCOTT	.0211, 0238, 0148, 0070, .0072, 0237, 0239
SEARS	.0081, 0132, 0064, 0069, .0027, 0062, 0073, 0074, .0093, 0131
SEMP	.0072
SHARP	.0075, 0089
SHINTOM	.0099
SHOGUN	.0078, 0267
SINGER	.0099
SONY	.0060, 0061, 0059, 0280, .0027, 0038, 0062
SUNPAK	.0280
SYLVANIA	.0062, 0108, 0027, 0070, .0130, 0137
SYMPHONIC	.0027
TMK	.0063, 0235, 0267
TATUNG	.0068
TEAC	.0027, 0068
TECHNICS	.0062, 0189, 0273
TEKNIKA	.0027, 0062, 0064, 0079
THOMAS	.0027
TOSHIBA	.0072, 0237, 0239, 0070, .0093, 0393
TOTEVISION	.0064, 0267
UNITECH	.0267
VECTOR	.0072
VECTOR RESEARCH	.0065, 0067
VIDEO CONCEPTS	.0067, 0072, 0088, 0248
VIDEOSONIC	.0267
WARDS	.0062, 0087, 0089, 0027, .0074, 0239, 0267, 0069, .0075, 0099, 0108, 0176
WHITE WESTINGHOUSE	.0099, 0305, 0236
XR-1000	.0099, 0027, 0062
YAMAHA	.0065
ZENITH	.0066, 0027, 0060, 0061, .0236, 0506

DVD PLAYER

	CODE NUMBER
DENON	.0859
GE	.0862
HARMAN/KARDON	.0871
HITACHI	.0870
JVC	.0868
KENWOOD	.0865
MAGNAVOX	.0860

MARANTZ	.0866
MITSUBISHI	.0861
ONKYO	.0860
OPTIMUS	.0869
PANASONIC	.0859
PHILIPS	.0866, 0860
PIONEER	.0869, 0863
PROSCAN	.0862

RCA	.0862, 0869
SAMSUNG	.0870
SONY	.0864
TECHNICS	.0859
THETA DIGITAL	.0869
TOSHIBA	.0860
YAMAHA	.0859, 0867
ZENITH	.0872, 0860

SEE THE NEXT PAGE FOR MORE CODES.



DIRECT-ENTRY CODES FOR A/V ACCESSORY DEVICES

LASER-DISC PLAYER

	CODE NUMBER
ADS	.0880
AIWA	.0855
CARVER	.0853, 0850, 0858
DENON	.0851, 0849, 0875
DISCO VISION	.0848
FUNAI	.0855
HARMAN/KARDON	.0853
HITACHI	.0848
KENWOOD	.0877
MAGNAVOX	.0853, 0857, 0875

MARANTZ	.0853, 0850
MIYUBISHI	.0849
NAD	.0849
NEC	.0879
NIKKODO	.0884
OPTIMUS	.0849
PANASONIC	.0856
PHILIPS	.0853, 0850
PIONEER	.0849, 0848
POLK AUDIO	.0853
QUASAR	.0856

RCA	.0881, 0874
REALISTIC	.0855
SAMSUNG	.0858
SEGA	.0848
SHARP	.0873
SONY	.0854, 0852, 0878
TECHNICS	.0856
THETA DIGITAL	.0853
VICTOR	.0876
YAMAHA	.0857

CABLE CONVERTER BOX

	CODE NUMBER
ABC	.0030, 0028, 0034, 0035, .0038, 0040, 0041, 0044, .0060
ALLEGRO	.0180, 0342
ANTRONIX	.0049, 0234
APACHE	.0797
ARCHER	.0049, 0066, 0180, 0234, .0824
BBT	.0294
BELCOR	.0083
BELL & HOWELL	.0041
CABLE STAR	.0083
CABLETENNA	.0049
CABLEVIEW	.0049
CENTURY	.0180
CITIZEN	.0180, 0342
COLOUR VOICE	.0052, 0058
COMBAND	.0259
COMTRONICS	.0067, 0087
CONTEC	.0046
DIGI	.0664
EASTERN	.0029
EMERSON	.0824
EVERQUEST	.0042, 0067
FOCUS	.0427
GC ELECTRONICS	.0083, 0234
GE	.0259
GARRARD	.0180
GEMINI	.0042, 0097, 0269, 0824
GENERAL INSTRUMENT	.0303, 0038, 0503, 0837
GOLDSTAR	.0067, 0171
GOODMIND	.0797, 0824

HAMLIN	.0047, 0036, 0286, 0061, .0300
HITACHI	.0038
HYTEX	.0034
JASCO	.0042, 0180, 0342
JERROLD	.0030, 0039, 0303, 0041, .0503, 0038, 0051, 0042, .0837
LINSAY	.0467
MACOM	.0060
MAGNAVOX	.0054
MEMOREX	.0027
MOVIE TIME	.0090, 0183
NSC	.0183, 0090, 0097
NEXUS	.0797
NOVAPLEX	.0645
OAK	.0046, 0034
OPTIMUS	.0048
PANASONIC	.0048, 0134, 0027
PANTHER	.0664
PARAGON	.0027
PHILIPS	.0052, 0058, 0269, 0317, .0054, 0180
PIONEER	.0171, 0050, 0560
POPULAR MECHANICS	.0427
PRELUDE	.0797
PULSAR	.0027
QUASAR	.0027
RCA	.0048
RADIO SHACK	.0042, 0847, 0342, 0824
REALISTIC	.0234
RECOTON	.0427
REGAL	.0300, 0047, 0286

REGENCY	.0029
REMBRANDT	.0038, 0097
RUNCO	.0027
SL MARX	.0067
SAMSUNG	.0067, 0171
SCIENTIFIC ATLANTA	.0035, 0044, 0033, 0504
SEAM	.0537
SIGNAL	.0042, 0067
SIGNATURE	.0038
SPRUCER	.0048
STARLIGHT	.0569, 0449
STARCOM	.0030, 0042
STARGATE	.0067, 0042, 0797, 0824
STARQUEST	.0042
SYLVANIA	.0028
TFC	.0337
TV86	.0090
TANDY	.0285
TELECATION	.0248
TELEVIEW	.0067
TEXSCAN	.0028
TIMELESS	.0445
TOCOM	.0039, 0040
TOSHIBA	.0027
TUSA	.0042
UNIKA	.0180, 0234, 0049
UNITED ARTISTS	.0034
UNIVERSAL	.0234, 0049, 0066, 0083, .0180, 0218
VIEWMASTER	.0847
VIEWSTAR	.0285, 0054, 0087, 0090
ZENITH	.0027, 0552, 0081
ZENTEK	.0427

SATELLITE RECEIVER/DIGITAL SATELLITE SYSTEM

	CODE NUMBER
ALPHASTAR	.0799
AMPLICA	.0099
AMWAY	.0070, 0102
ARUNTA	.0548
ASTRO INDUSTRIES	.0122
BMC	.0114
BSR	.0122
CABLE INNOVATIONS	.0581
CAPETRONIC	.0122
CENTURY	.0565
CHANNEL MASTER	.0045, 0239
CHAPARRAL	.0080, 0236, 0243
CITOH	.0191
CONIFER	.0031
CURTIS MATHES	.0088, 0099
DX ANTENNA	.0068
DRAKE	.0091, 0272, 0045, 0176
ECHOSTAR	.0307, 0802, 0175, 0186, .0296
EXPRESSVU	.0802

GE	.0593
GENERAL INSTRUMENT	.0388, 0896, 0574, 0581, .0654
GOULD	.0082
HNS	.0644
HTS	.0802
HITACHI	.0846
HomeCABLE	.0265
HUGHES NETWORK SYSTEMS	.0776
HYTEK	.0122
IQ	.0237
IQ PRISM	.0237
INTERSAT	.0070
JVC	.0802
JANEL	.0179
JERROLD	.0388, 0654
LEGEND	.0296
MACOM	.0088, 0045
MAGNAVOX	.0749, 0751
MEMOREX	.0296, 0751
NEXT LEVEL	.0896

NORSAT	.0031
PANASONIC	.0179, 0728
PHILIPS	.0227, 0749, 0751
PICO	.0102
PRIMESTAR	.0654, 0388
RCA	.0593, 0170, 0882
RADIO SHACK	.0581, 0896
RAMSEY	.0102
REALISTIC	.0079, 0078
STS	.0237, 0068
SONY	.0666
STAR CHOICE	.0896
STAR TRAK	.0207, 0448, 0574
STRONG	.0448
TOSHIBA	.0109, 0776, 0817, 0088
TOWN & COUNTRY	.0574
UNIDEN	.0265, 0079, 0101, 0397, .0581, 0751, 0103, 0323, .0749
ZENITH	.0091, 0883, 0088

TELEVISION

	CODE NUMBER
MAGNAVOX	.0583


USING THE TV REMOTE WITH ACCESSORY DEVICES




The Chart below provides you with common accessory-device functions associated with the buttons on your Philips TV remote control. (See pages 18–20 for information on programming your TV remote to operate accessory devices.)

NOTES:

- Functions can vary according to the manufacturer's specifications for each accessory device.
- First press the VCR mode button to use the TV remote to operate a VCR.
- First press the ACC mode button to use the TV remote to operate a DVD player, laser-disc player, cable converter box, or satellite receiver/digital satellite system.

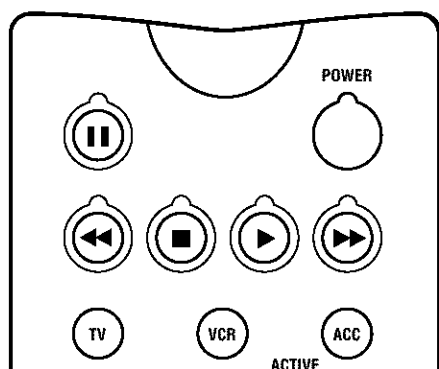

TV Remote VCR and Accessory Mode Buttons

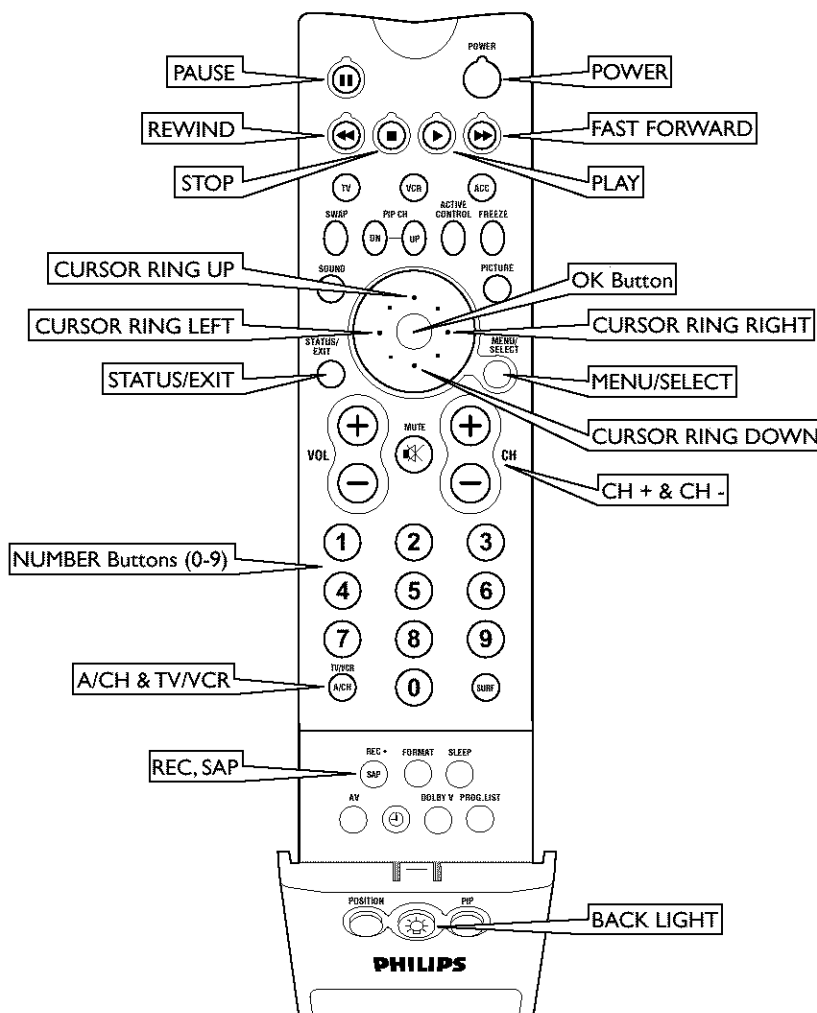

Button on TV Remote	Common VCR Function	Common DVD/LD Player Function	Common Cable Converter Box or Satellite Receiver/Digital Satellite System (DSS) Function
POWER	POWER	POWER	POWER
PAUSE	PAUSE	PAUSE	---
REWIND	REWIND	SEARCH REVERSE	---
STOP	STOP	STOP	---
PLAY	PLAY	PLAY	---
FAST FORWARD	FAST FORWARD	SEARCH FORWARD	---
CURSOR RING UP	CURSOR UP	CURSOR UP	CURSOR UP
CURSOR RING DOWN	CURSOR DOWN	CURSOR DOWN	CURSOR DOWN
CURSOR RING RIGHT	CURSOR RIGHT	CURSOR RIGHT	CURSOR RIGHT
CURSOR RING LEFT	CURSOR LEFT	CURSOR LEFT	CURSOR LEFT
OK Button	PROGRAM; MENU	MENU	MENU (also, GUIDE for satellite receivers/DSS)
STATUS/EXIT	EXIT	EXIT	EXIT
MENU/SELECT	SELECT	SELECT	SELECT
CH +	CHANNEL UP	NEXT	CHANNEL UP
CH -	CHANNEL DOWN	PREVIOUS	CHANNEL DOWN
NUMBER Buttons (0-9)	NUMBER SELECTION (0-9)	NUMBER SELECTION (0-9)	NUMBER SELECTION (0-9)
A/CH* and TV/VCR	TV/VCR, A/CH*	---	---
REC, SAP	RECORD (Press with PLAY Button)	---	---
BACK LIGHT**	BACK LIGHT**	BACK LIGHT**	BACK LIGHT**

*A/CH (Alternate Channel) allows you to switch between the currently viewed channel and the previously viewed channel.

**Press the BACK LIGHT button to light the white buttons on the remote.



USING THE AV AND SOURCE SELECT BUTTONS


The AV button on the remote control and SOURCE SELECT button on the TV allow you to access the TV's signal-source inputs. With each press of the AV button you can access a different signal-source input. The signal-source input jacks are located on the back and side panels of your TV. (See pages 6 and 7.)

Selecting a Signal Source Using the AV Button on the Remote Control

Press the AV button on the remote control as many times as necessary to select the signal source you want to watch.

Selecting a Signal Source Using the Source Select Button on the TV

Press the SOURCE SELECT button on the TV as many times as necessary to select the signal source you want to watch.

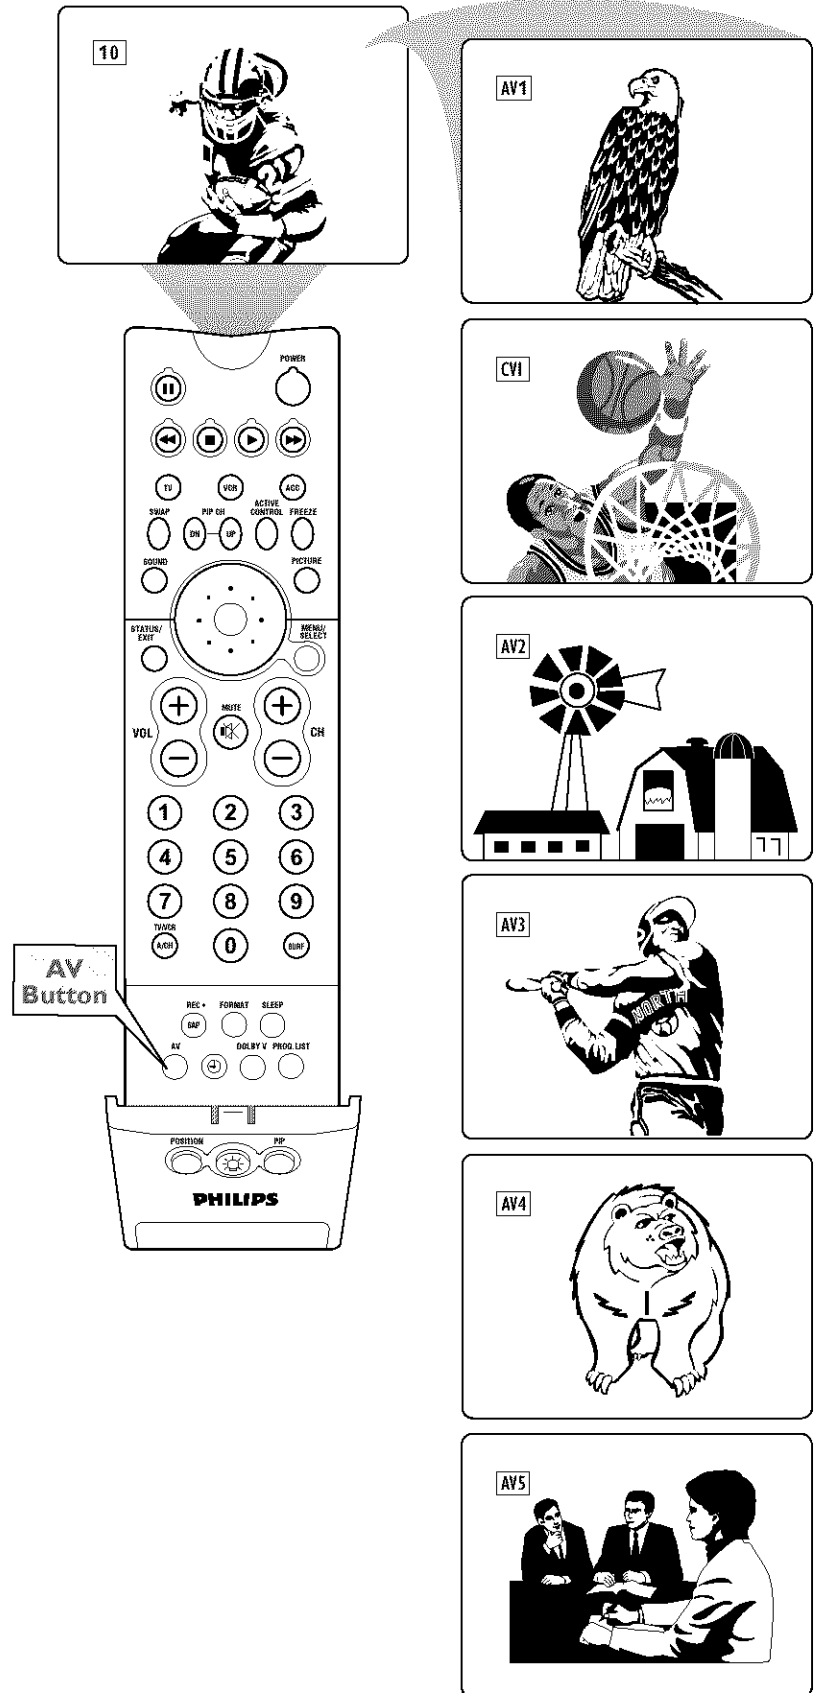


USING AUTO SOUND™



You can use the AutoSound™ options to automatically tailor the TV's sound for the type of program you are watching. The factory has set the VOICE, MUSIC, and THEATRE options. The settings for the PERSONAL option are the ones you select through the on-screen SOUND submenu. See descriptions of the options below, right.

- 1** Press the **SOUND** button on the remote control. The current AutoSound™ setting will appear on screen. Press the **SOUND** button repeatedly to cycle through the four options: PERSONAL, VOICE, MUSIC, or THEATRE.
- 2** When you see the option you want on the screen, press the **STATUS/EXIT** button to exit the menu. The AutoSound™ option you selected is then active.

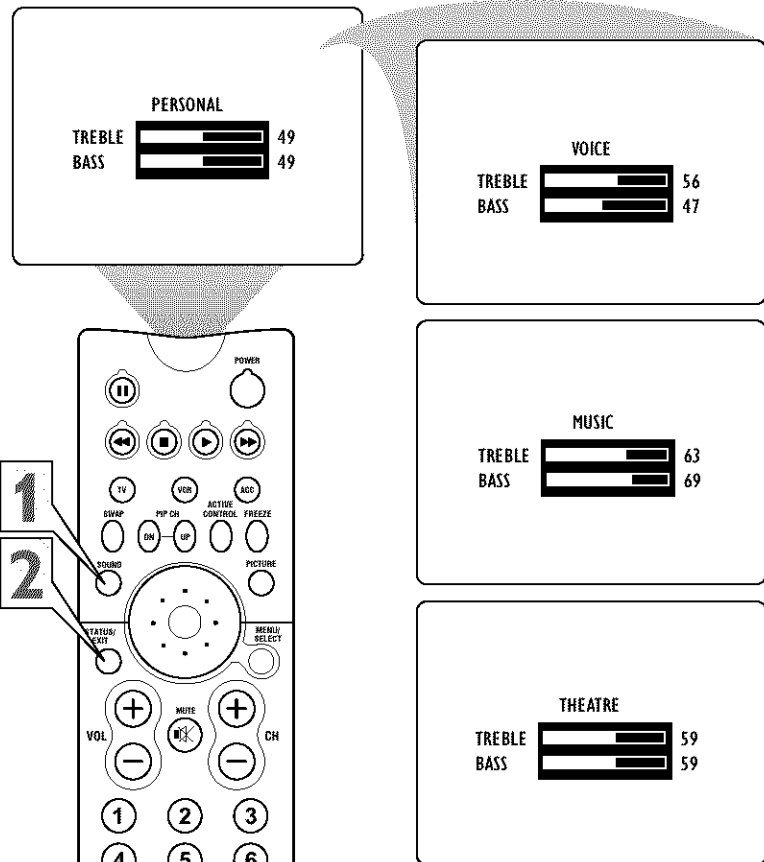

HELPFUL HINTS

- AutoSound™ works only with the programs coming through the ANTENNA IN 75Ω jack on the rear of the TV. AutoSound™ will not control the sound levels of the other jacks on the rear or side of the TV.
- If you select an AutoSound™ option other than PERSONAL, then the TREBLE and BASS settings specific to that option will also be written to the SOUND submenu items. At that point, the PERSONAL AutoSound™ option settings will not be changed. Only when you go into the SOUND submenu and change the TREBLE and BASS settings will those settings be reflected in the PERSONAL AutoSound™ option.

AutoSound™ Options

PERSONAL presents the TV's sound according to the TREBLE and BASS settings you make within the SOUND submenu.

VOICE brings voices to the forefront and emphasizes them. Moves music to the background.

MUSIC emphasizes music over voices.

THEATRE provides a balance between voices and music.



USING AUTOPICTURE™

You can use an AutoPicture™ option to automatically tailor the TV's picture for certain types of input signals. The factory has set the MOVIES, SPORTS, WEAK SIGNAL, and MULTIMEDIA options. The settings for the PERSONAL option are the ones you select through the on-screen PICTURE submenu.

- 1** Press the **PICTURE** button on the remote control. The current AutoPicture™ setting will appear on screen. Then Press the PICTURE button repeatedly to cycle through the options: PERSONAL, MOVIES, SPORTS, WEAK SIGNAL, and MULTIMEDIA picture settings.
- 2** When you see the option you want on screen, press the **STATUS/EXIT** button to turn off the on-screen display. The AutoPicture™ option you selected is then active.

PERSONAL	
BRIGHTNESS	48
COLOR	41
PICTURE	81
SHARPNESS	46

MOVIES	
BRIGHTNESS	50
COLOR	50
PICTURE	50
SHARPNESS	84

SPORTS	
BRIGHTNESS	50
COLOR	55
PICTURE	60
SHARPNESS	70

WEAK SIGNAL	
BRIGHTNESS	50
COLOR	40
PICTURE	40
SHARPNESS	28

MULTIMEDIA	
BRIGHTNESS	50
COLOR	40
PICTURE	40
SHARPNESS	70

HELPFUL HINT

If you select an AutoPicture™ setting option other than PERSONAL, then the BRIGHTNESS, COLOR, PICTURE, and SHARPNESS settings specific to that option will also be written to the PICTURE submenu items. At that point, the PERSONAL AutoPicture™ option settings will not be changed. Only when you go into the PICTURE submenu and change the settings will those settings be reflected in the PERSONAL AutoPicture™ option.

USING AUTOSURF™



After you set up a list of your favorite signal sources in the SURF list, you can press the SURF button to see the list and quickly tune to a favorite signal source. Place up to 10 signal sources in the SURF LIST.

1 Press the **NUMBER** buttons, **CH(annel) +/-** buttons, or the **AV** button to select a signal source to add to the Surf list.

2 Press the **SURF** button. The Surf list box appears. The number of the current signal source is shown with **ADD?** to the right. (If you have not added any channels to the list, "SURF LIST EMPTY" appears on screen.) Press the **CURSOR RING RIGHT** to add the signal source to the Surf list.


3 Press the **NUMBER** buttons, **CH(annel) +/-** buttons, or the **AV** button to select another signal source to add to the Surf list. Press the SURF button and then the **CURSOR RING RIGHT** to add the signal source to the list.

Repeat this step, filling the list with up to 10 favorite signal sources.

NOTE: If you exceed 10 signal sources, the first signal source on the list will be deleted from the list.

4 To tune to a favorite signal source from the list, press the **SURF** button. The Surf list box appears. Press the SURF button or the **CURSOR RING DOWN** or **UP** as many times as necessary to tune to the signal source.

5 To delete a signal source from the list, press the **SURF** button. The Surf list box appears. Press the SURF button or the **CURSOR RING DOWN** or **UP** as many times as necessary to select the signal source to be deleted. Then press the **CURSOR RING RIGHT** to delete the signal source.

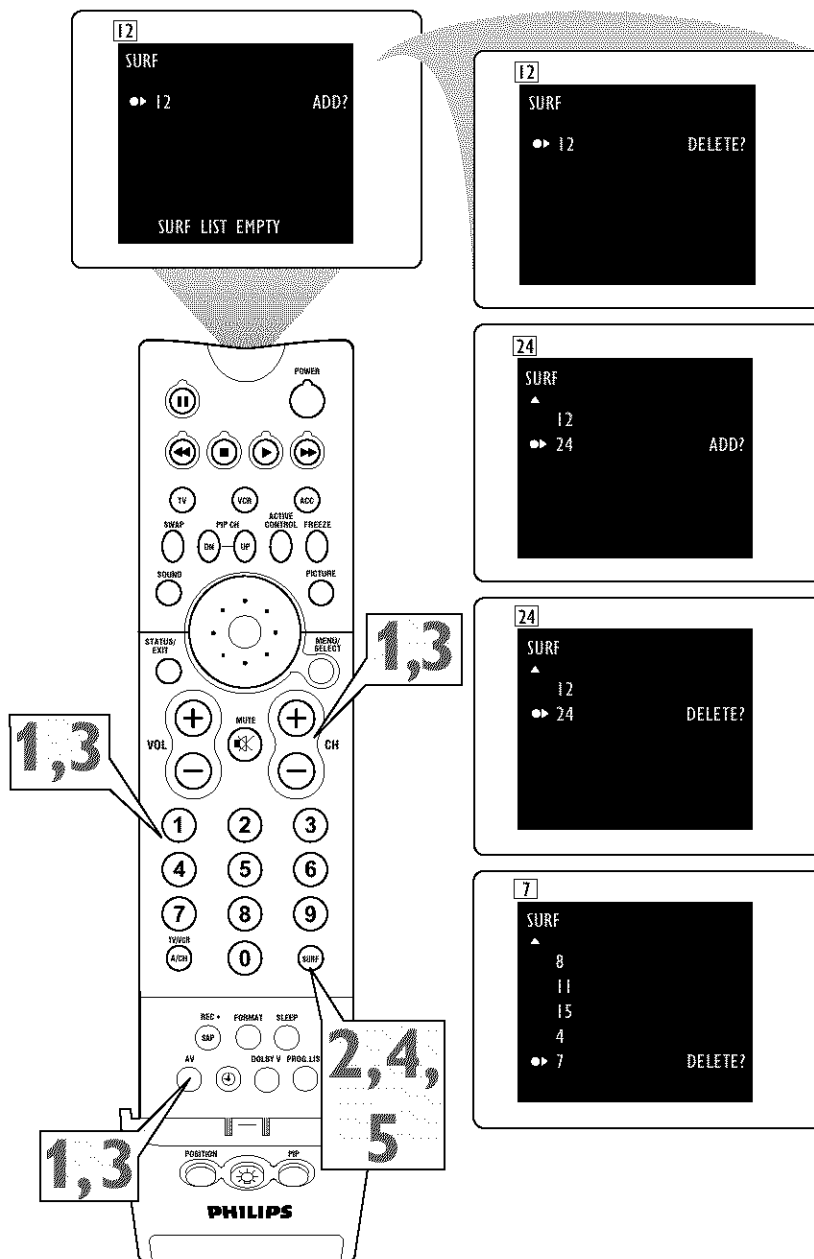

HELPFUL HINT

Five signal sources can be shown in the Surf list box at one time. Press the **CURSOR RING UP** or **DOWN** to show any other signal sources that are in the list.



USING PROGRAM LIST AND ALTERNATE CHANNEL



PROGRAM LIST

1 Press the **Program List** button on the remote control to display a list of channel numbers and their names (see the “Tuner Mode” “Auto Program,” “Channel Edit,” and “Name” sections on pages 5 and 7 in the *Quick Use and Setup Guide* that came with your TV for proper setup).


You can also access the Program List by pressing the button in the center of the Cursor Ring. Each channel will appear as a selectable item. The current channel will be highlighted by default. Only five channels will be shown in the list at one time.

2 Press the **CURSOR RING UP** or **DOWN** to go through the list and highlight a channel.

3 Press the **CURSOR RING RIGHT** to tune to the highlighted channel. Channels marked “Skipped” in the “Channel Edit” control will not appear in the list. Any channel that is being blocked by AutoLock™ will appear with a padlock icon to indicate that the channel is not viewable.

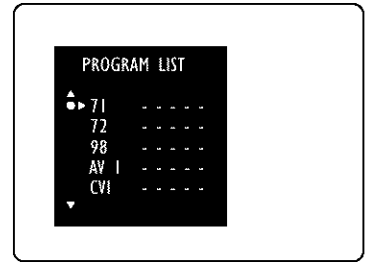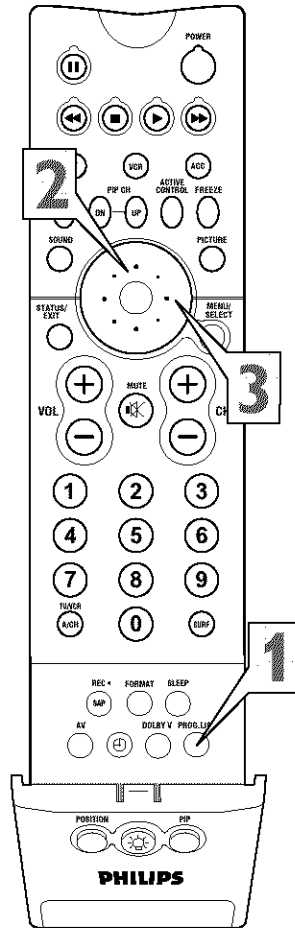


A padlock image will appear to the right of a channel or signal source that is being blocked by AutoLock™.

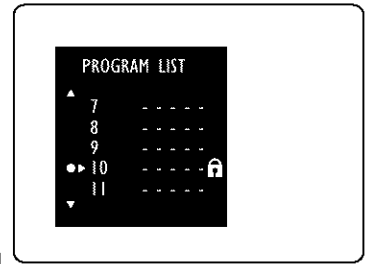


ALTERNATE CHANNEL (A/CH)

You can press the A/CH button on your remote control to go back and forth between the current channel and one previously watched channel.

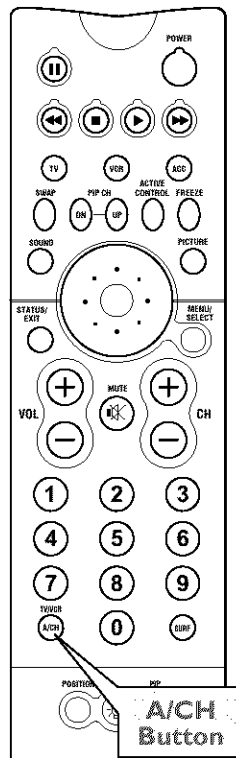

Watch channel

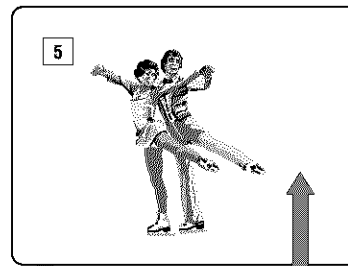

Change channel

Watch new channel



Press A/CH button to return to previously watched channel

USING THE SLEEP TIMER CONTROL





Have you ever fallen asleep in front of the TV? You can program your TV to turn off while you sleep. The Sleep Timer feature allows you to set your TV to turn off within a certain amount of time: 15, 30, 45, 60, 90, 120, 180, or 240 minutes.

Press the **SLEEP** button on the remote control. (The SLEEP Timer on-screen display will appear on screen.) Then **within five seconds, press the SLEEP button again as many times as necessary** to select the amount of time you want to pass before the TV will turn itself off.


An on-screen countdown will appear during the last minute before the TV turns off. Ten seconds before the Sleep Timer turns the TV off, the on-screen display will show "Good Bye."

HELPFUL HINTS


- To see how many minutes remain before the TV shuts itself off, press the STATUS/EXIT button.
- Changing the channel or volume during the last minute of a Sleep Timer will cancel Sleep.

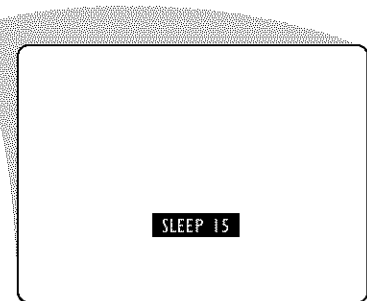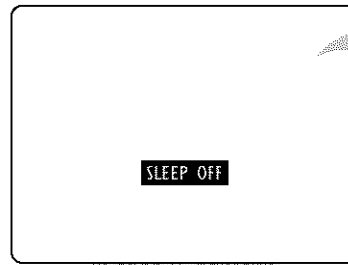


The Sleep Timer options are 15, 30, 45, 60, 90, 120, 180, or 240 minutes.

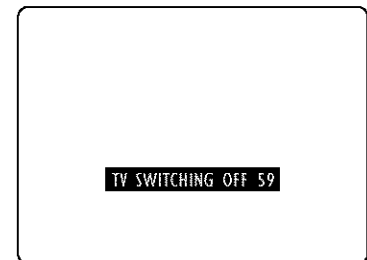

During the last minute of a Sleep Timer setting, an onscreen countdown will be displayed.

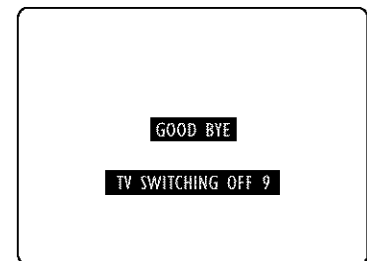

During the last 10 seconds of a Sleep Timer setting, "GOOD BYE" will be displayed on screen.

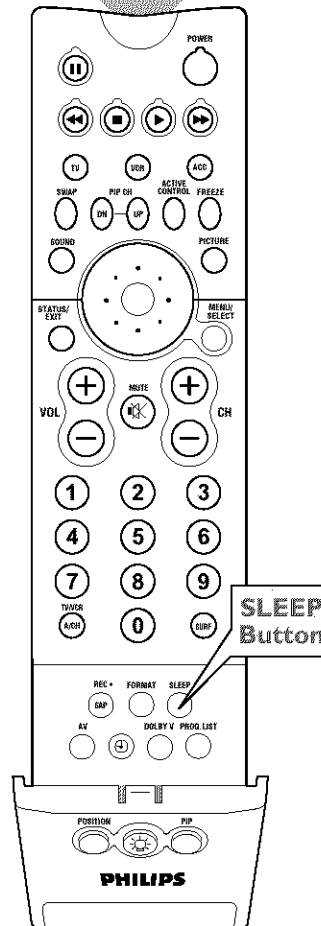





ADJUSTING THE PICTURE CONTROLS

To adjust your TV picture controls, select a channel and follow these steps. See descriptions of the picture-adjustment options below.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR RING RIGHT**. **BRIGHTNESS** will be highlighted and an adjustment bar will be shown to the right.
- 3** Press the **CURSOR RING RIGHT** or **LEFT** to adjust the **BRIGHTNESS** level of the picture. Or press the **CURSOR RING DOWN** to select another picture control to adjust.
- 4** Press the **STATUS/EXIT** button to exit the menu.

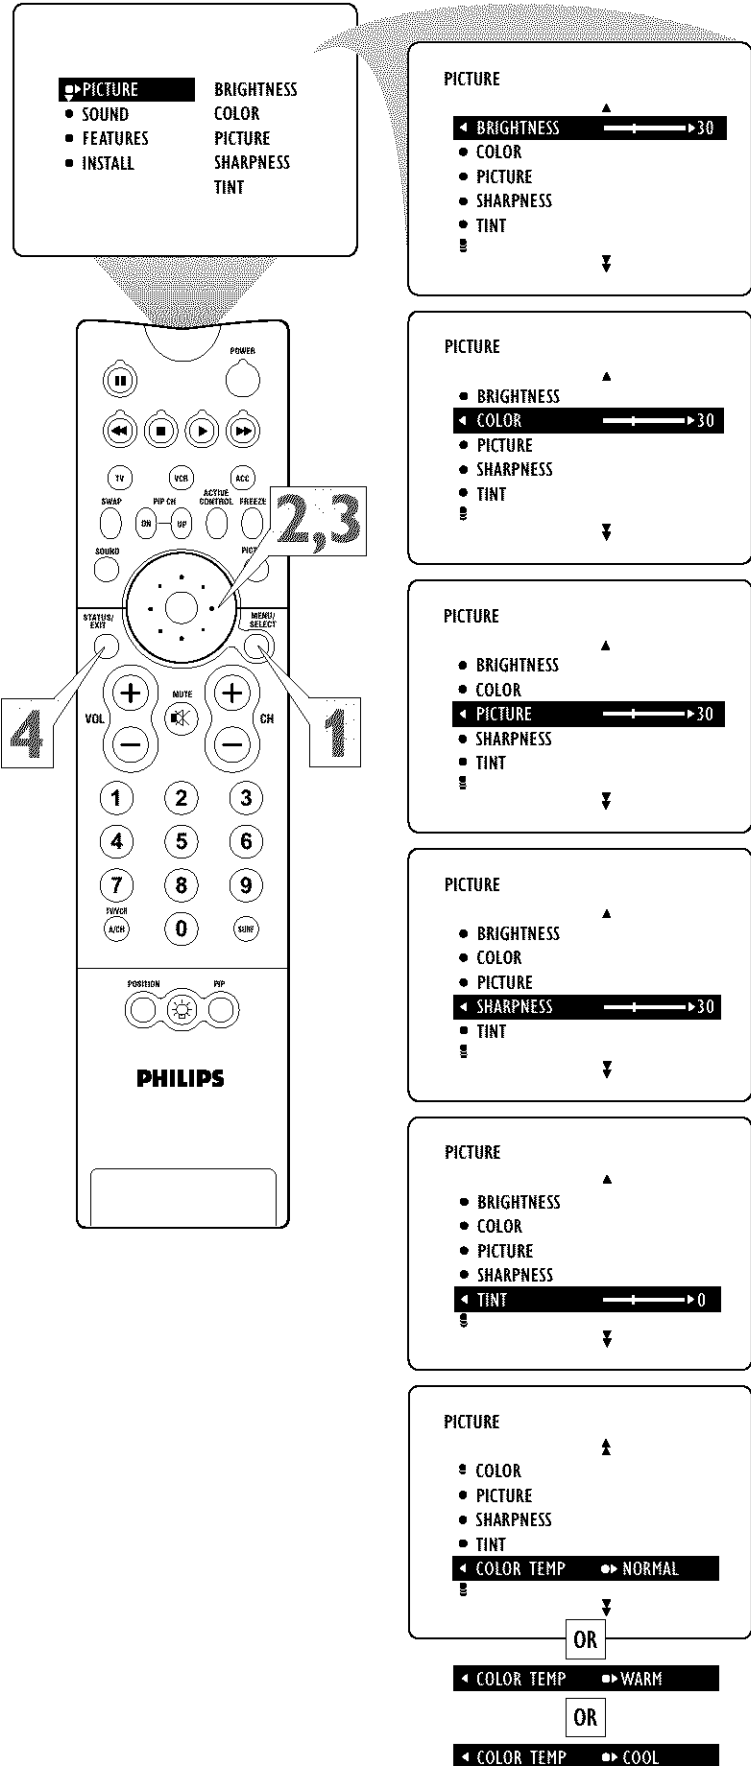

Picture-adjustment Options

Remember, when the bar scale is centered , the control settings are at normal, mid-range levels. Picture adjustments are described as follows:

BRIGHTNESS adds or subtracts light from the darkest part of the picture.

COLOR adds or eliminates color.

PICTURE improves the detail of the lightest parts of the picture.

SHARPNESS improves the detail in the picture.

TINT adjusts the picture to obtain natural skin tones.

COLOR TEMP offers **NORMAL**, **COOL**, or **WARM** picture preferences.

NORMAL keeps whites, white.

WARM makes whites, reddish.

COOL makes whites, bluish.

SETTING THE EYE FIDELITY CONTROL




Eye Fidelity gives you a choice between two different scanning techniques—progressive or interlaced.

Progressive scan doubles the number of picture lines, eliminating line flicker and providing a jitter-free picture.

Interlaced improves the appearance of on-screen motion. It also helps smooth out jagged lines that are sometimes seen on curved and angled surfaces in the picture.

- 1** Press the **MENU/SELECT** button on the remote to show the on-screen menu.
- 2** Press the **CURSOR RING RIGHT** to enter the **PICTURE** submenu.
- 3** Press the **CURSOR RING DOWN** repeatedly until the **EYE FIDELITY** control is highlighted.
- 4** Press the **CURSOR RING RIGHT** or **LEFT** until you select the option you want, either **PROGRESSIVE** or **INTERLACED**.
- 5** Press the **STATUS/EXIT** button to turn the menu off.

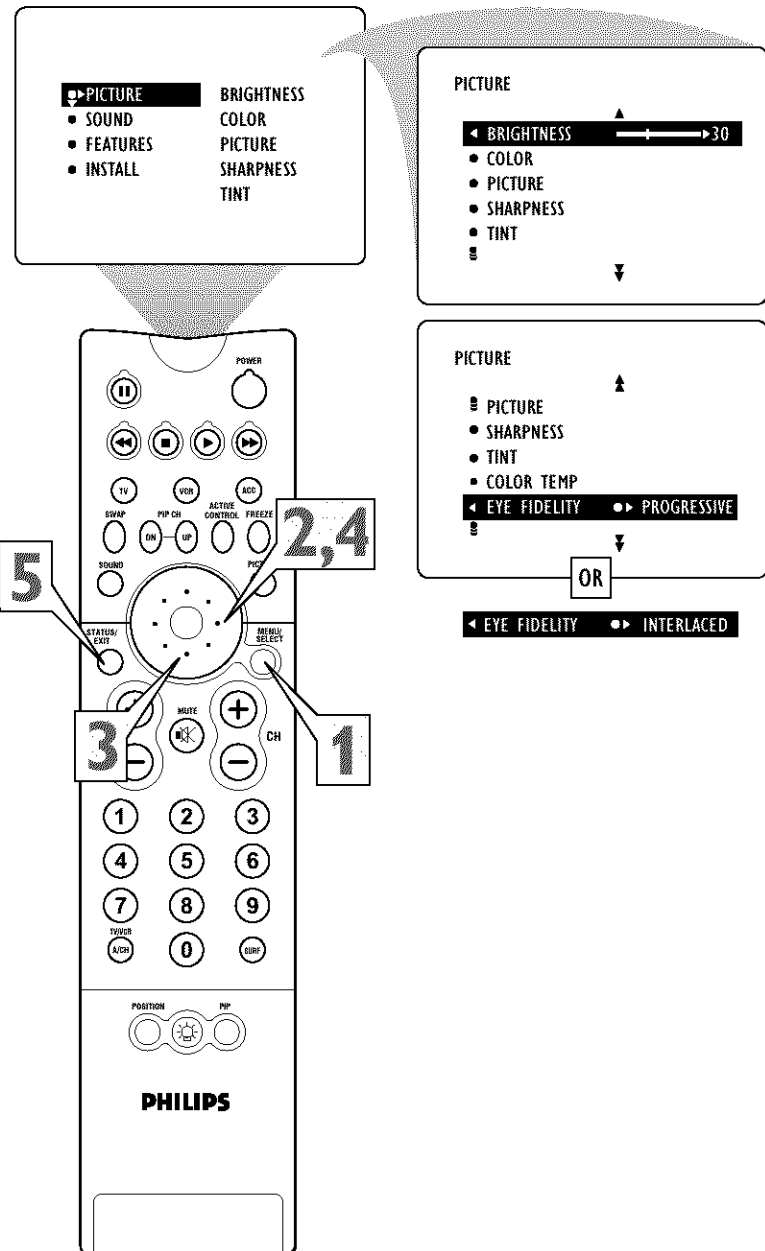

HELPFUL HINT


- The Eye Fidelity control is not available for use with AV4 and AV5.
- You may want to use the interlaced option to enhance programs containing a lot of motion.



SETTING THE DYNAMIC CONTRAST CONTROL

The Dynamic Contrast control allows you to sharpen the picture quality by making dark portions of the picture darker and light portions of the picture more noticeable. Normally, you will probably want to select **MED**. In certain circumstances, however, you may prefer **MIN** or **MAX**.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR RING RIGHT** to enter the **PICTURE** submenu.
- 3** Press the **CURSOR RING DOWN** repeatedly until the **DYN. CONTRAST** control is highlighted.
- 4** Press the **CURSOR RING RIGHT** or **LEFT** until you select the option you want: **MIN**, **MED**, or **MAX**.
- 5** Press the **STATUS/EXIT** button to exit the menu.

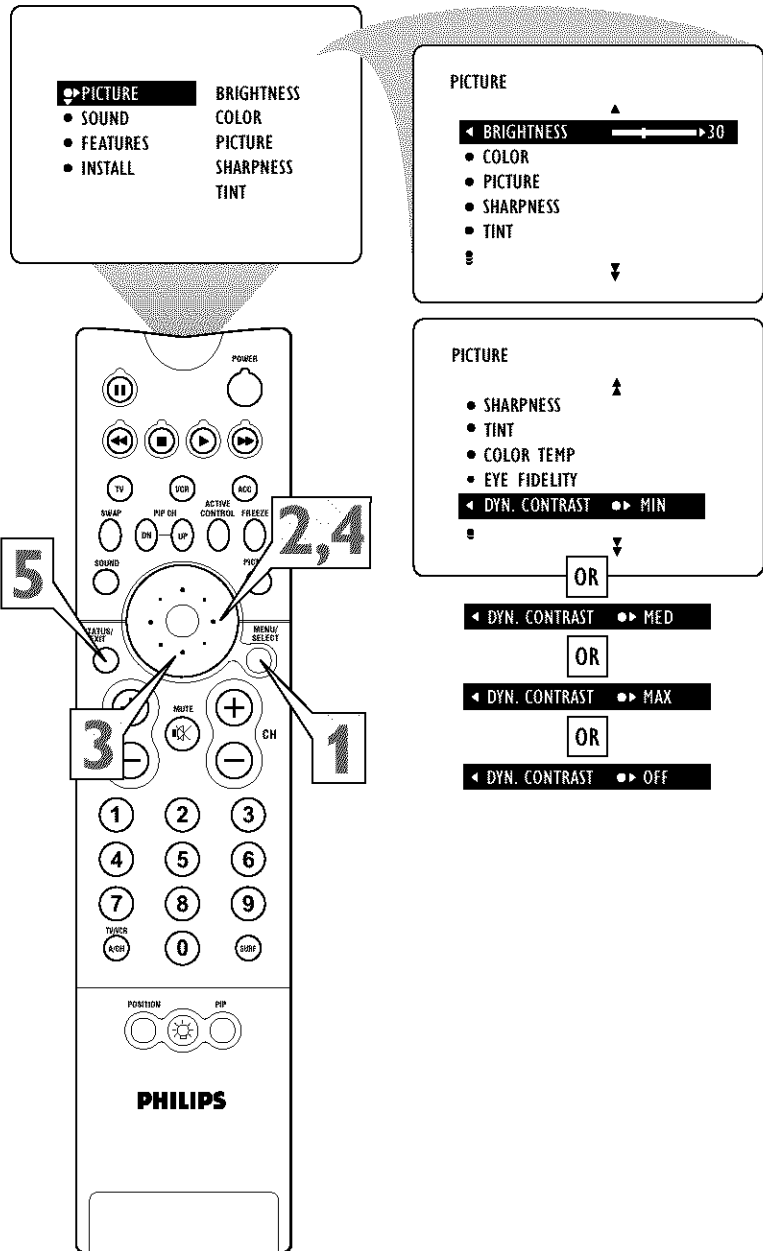

HELPFUL HINT

The Dynamic Contrast control is not available for use with the AV4 and AV 5 signal sources.

ADJUSTING THE MANUAL CONVERGE CONTROLS: CONVERGE RED/BLUE



As explained in the Quick Use and Setup Guide, your projection TV has three color projection tubes: one for red, one for green, and one for blue. When mixed in proper proportion, the beams of light coming from the tubes can produce any color. To create a clear picture, however, these color beams must be precisely aligned. This alignment is called **convergence**. Bumps and vibrations, moving the set, or the presence of magnetic fields can cause the color beams to become improperly aligned, or mis-converged, resulting in a fuzzy picture. Using the Auto IntelliSense™ feature, you can automatically adjust convergence in 20 seconds or less. See page 7 in the Quick Use and Setup Guide. Also, if you desire, you can use the MANUAL CONVERGE controls—explained on this page and the next—to make additional convergence adjustments to suit your personal preferences or to further fine-tune the picture. See the chart to the right to determine which MANUAL CONVERGE controls to use for current picture conditions.

NOTE: Allow the TV to warm up for 20 minutes before adjusting convergence.

- 1** Press the MENU/SELECT button to show the on-screen menu. Press the CURSOR RING RIGHT to enter the PICTURE submenu. Then press the CURSOR RING DOWN repeatedly until MANUAL CONVERGE is highlighted.
- 2** Press the CURSOR RING RIGHT to enter the MANUAL CONVERGE submenu. If you want to adjust the Red Convergence, press the CURSOR RING RIGHT to enter the adjust mode. To adjust the Blue Convergence, press the CURSOR RING DOWN to highlight CONVERGE BLUE, then press the CURSOR RING RIGHT to enter adjust mode.
- 3** In adjust mode, press the CURSOR RING RIGHT, LEFT, UP, or DOWN to adjust the cross hair until the color outline around it is gone. (The adjustment is automatically saved in the TV's memory.) To return to the MANUAL CONVERGE menu, press the MENU/SELECT button. To exit the on-screen display, press the STATUS/EXIT button.

1 Press the MENU/SELECT button to show the on-screen menu.

2,3 Press the CURSOR RING RIGHT to enter the MANUAL CONVERGE submenu.

1 Press the CURSOR RING RIGHT to enter the adjust mode.

Determining Which Manual Convergence Control to Use













Screen appearance	Action
Various images throughout the entire picture have red outlines.	Adjust the CONVERGE RED control. Then if any red outlines remain, adjust the MULTIPOINT RED control.
Various images throughout the entire picture have blue outlines.	Adjust the CONVERGE BLUE control. Then if any blue outlines remain, adjust the MULTIPOINT BLUE control.



ADJUSTING THE MANUAL CONVERGE CONTROLS: MULTIPOINT RED/BLUE

The Multipoint Red/Blue Convergence controls allow you to adjust picture convergence at specific points on the TV screen.

- 1** Press the **MENU/SELECT** button to show the on-screen menu. Press the **CURSOR RING RIGHT** to enter the **PICTURE** menu, then the **CURSOR RING DOWN** repeatedly until **MANUAL CONVERGE** is highlighted.
- 2** Press the **CURSOR RING RIGHT** to enter the **MANUAL CONVERGE** submenu. Press the **CURSOR RING DOWN** repeatedly until **MULTIPOINT RED** or **MULTIPOINT BLUE** is highlighted. Then press the **CURSOR RING LEFT** or **RIGHT** to enter **Navigate** mode.
- 3** Press the **CURSOR RING LEFT, RIGHT, UP, or DOWN** to move to a cross hair that has a color outline. Then press the **STATUS/EXIT** button to enter **adjust** mode.
- 4** Press the **CURSOR RING LEFT, RIGHT, UP, or DOWN** to adjust the cross hair until the color outline is gone. Then press the **STATUS/EXIT** button to return to **NAVIGATE** mode. Repeat steps 3 and 4 until all misaligned cross hairs have been adjusted.
- 5** For your adjustments to be stored in the TV's memory, you must activate **SAVE MULTIPOINT**.
NOTE: If you are not satisfied with the adjustments you just made and want to start over, you can use the **UNDO MULTIPOINT** control. This control allows you to undo the adjustments, but only if you use it before saving.
To save your multipoint adjustments, press the MENU/SELECT button to return to the **MANUAL CONVERGE** menu. Press the **CURSOR RING DOWN** repeatedly until **SAVE MULTIPOINT** is highlighted. Then press the **CURSOR RING LEFT** or **RIGHT** to store your adjustments in the TV's memory.
Or, to undo the multipoint adjustments you just made, highlight UNDO MULTIPOINT and press the **CURSOR RING LEFT** or **RIGHT**.
Or, to restore the TV's convergence to factory settings, highlight RESTORE FACTORY and press the **CURSOR RING LEFT** or **RIGHT**.
- 6** Press the **STATUS/EXIT** button to exit the menu.

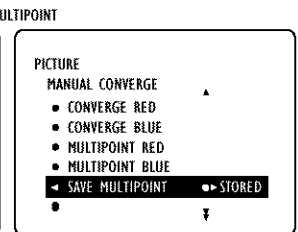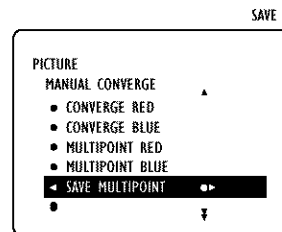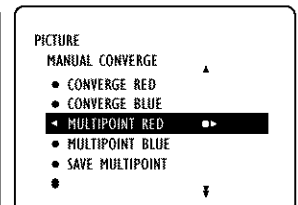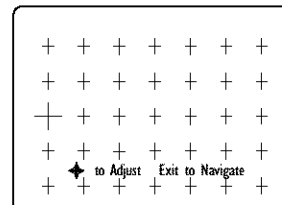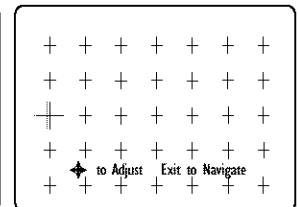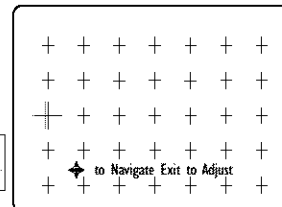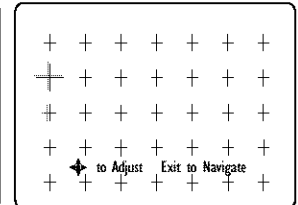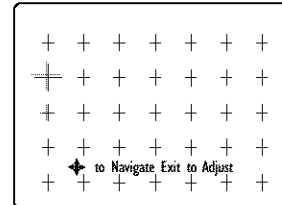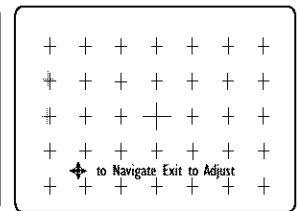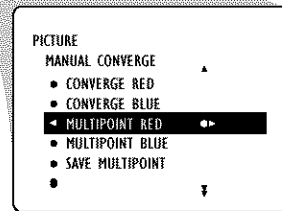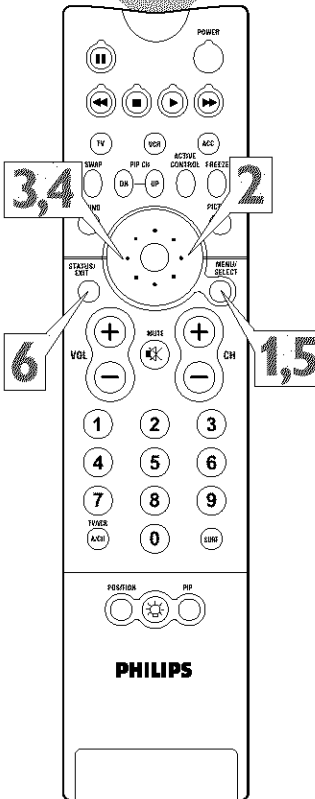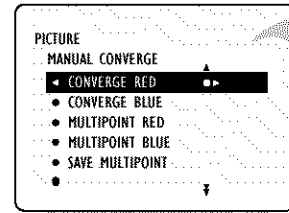

HELPFUL HINTS

- The on-screen display will disappear after 20 seconds of inactivity. If this happens, simply press the **MENU/SELECT** button to bring the **MANUAL CONVERGE** submenu back.
- If you should experience a power outage before saving your multipoint-convergence settings, your settings will be lost.

OR

UNDO MULTIPOINT

OR


RESTORE FACTORY

ADJUSTING THE TREBLE, BASS, AND BALANCE CONTROLS



Besides the normal volume level control, your TV also has individual sound-adjustment controls. You can use **TREBLE** (high frequency), **BASS** (low frequency), and **Speaker BALANCE** to further adjust the sound playback of TV programs.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR RING DOWN** once to highlight **SOUND**.
- 3** Press the **CURSOR RING RIGHT** to enter the **SOUND** submenu.
- 4** To adjust the **TREBLE** level of the television's sound, press the **CURSOR RING RIGHT** or **LEFT**. To adjust another sound control, press the **CURSOR RING DOWN** until the control (**BASS** or **BALANCE**) is highlighted. Then press the **CURSOR RING RIGHT** or **LEFT** to adjust the selected control.
- 5** Press the **STATUS/EXIT** button to exit the menu.

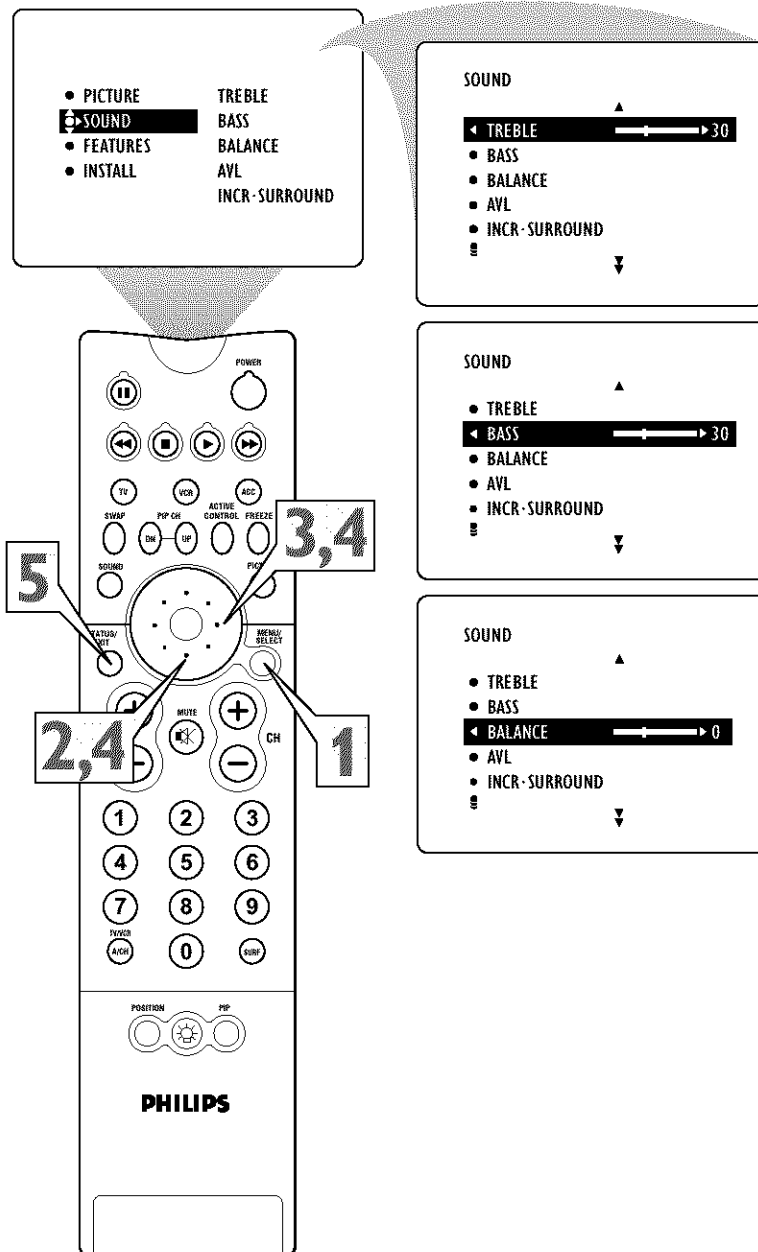

HELPFUL HINT


When the bar scale is centered, speaker sound **BALANCE** is centered between the TV's left and right side speakers.



USING THE AVL (AUDIO VOLUME LEVELER) CONTROL

You may have noticed the peaks and valleys of sound that occur between program changes or at commercial breaks. The volume levels often vary considerably. By turning on the AVL (Audio Volume Leveler) control, you can make your TV produce a more consistent volume level. Follow these steps to turn the AVL control on.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR RING DOWN** once to highlight **SOUND**.
- 3** Press the **CURSOR RING RIGHT** to enter the **SOUND** submenu.
- 4** Press the **CURSOR RING DOWN** repeatedly until **AVL** is highlighted. Then press the **CURSOR RING RIGHT** or **LEFT** to turn **AVL ON** or **OFF**.
- 5** Press the **STATUS/EXIT** button to exit the menu.

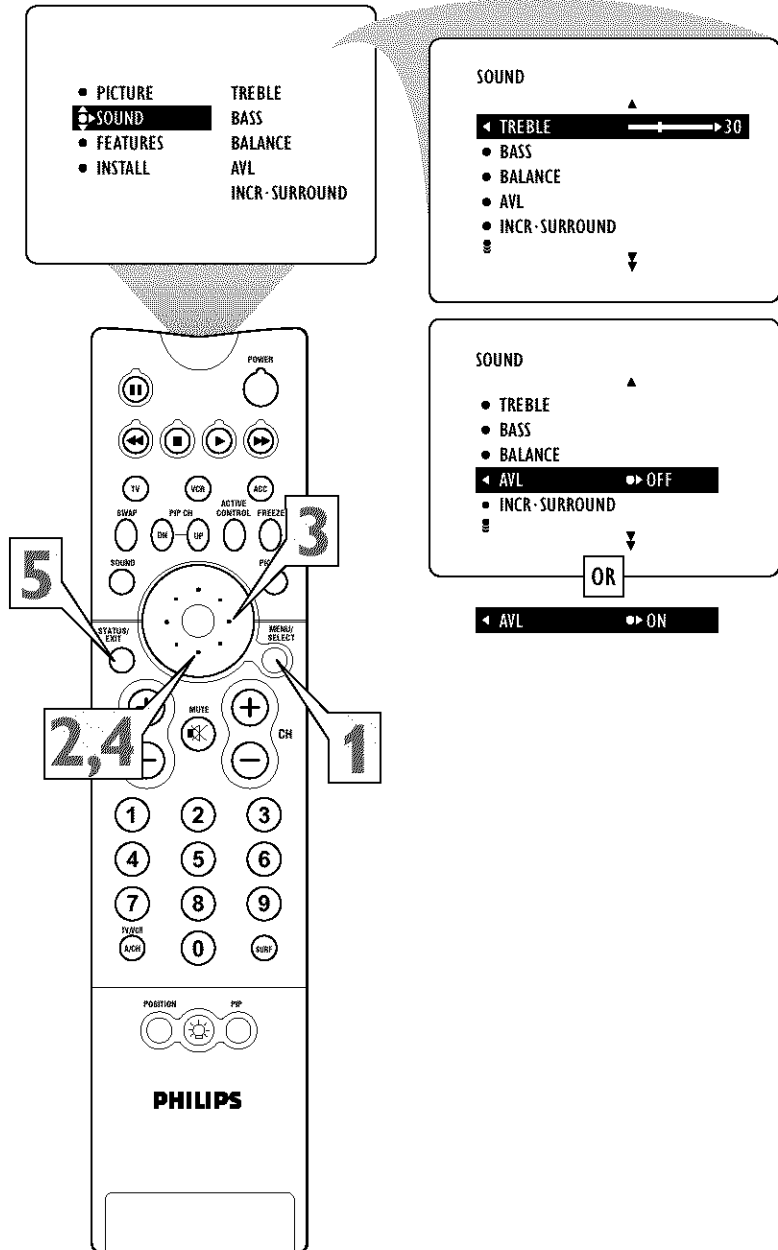

HELPFUL HINT

The AVL control does not function with the Dolby* Virtual feature, so the option disappears from the SOUND submenu when you select DOLBY VIRTUAL.

*Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.


SELECTING THE SURROUND-SOUND MODES



Based on the signal being received, you can select various surround-sound modes: MONO, SPATIAL, STEREO, INCR. SURROUND, or DOLBY* VIRTUAL (Virtual Dolby Surround). (See descriptions of the options to the right.)

Selecting a Surround-sound Option Using the Remote Control

While watching TV, you can select a surround-sound listening mode immediately by pressing the DOLBY V button. Each press of the DOLBY V button selects a different mode based on the TV signal being received.

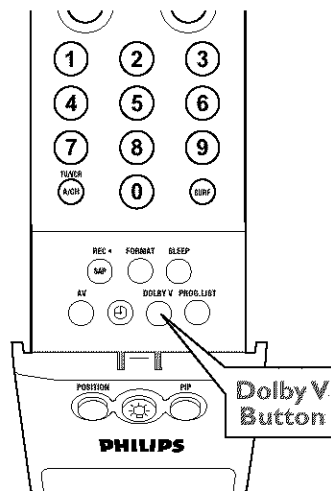

Surround-sound Modes

In stereo: select STEREO, INCR. SURROUND, or DOLBY VIRTUAL.

INCR. (Incredible) SURROUND enhances stereo programs by making the sound broader and fuller.

DOLBY VIRTUAL (with Virtual Dolby Surround signals) creates a virtualized surround-sound experience from two speakers using Dolby Pro Logic.* It retains all the original multichannel audio information and provides the listener with the sensation of being surrounded by additional speakers.


In mono: select MONO or SPATIAL.

SPATIAL enables you to add a surround effect to mono programs.

Selecting a Surround-sound Option Using the TV Buttons

Should your remote control become lost or otherwise unavailable for use, follow the steps below to use the buttons on the front of the TV to access the on-screen menu and select a surround-sound mode.

- 1** Press the **Volume +** and **–** buttons **simultaneously**. The on-screen menu appears.
- 2** Press the **Channel Down** button to highlight **SOUND**. Then press the **Volume +** button to enter the **SOUND** submenu.
- 3** Press the **Channel Down** button repeatedly until **INCR. SURROUND** is highlighted. Then press the **Volume +** or **–** button until you select the surround-sound mode you want.
- 4** Press the **Volume +** and **–** buttons **simultaneously** and repeatedly until you back out of the menu screens.

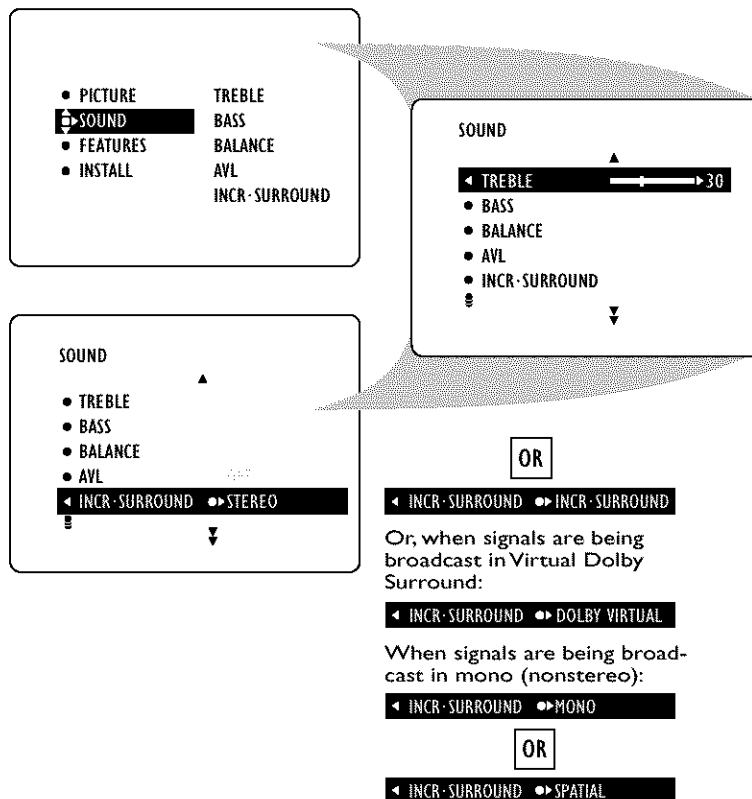

HELPFUL HINT

The AVL (Audio Volume Leveler) control does not function with the Dolby Virtual feature, so the option disappears from the SOUND submenu when you select DOLBY VIRTUAL.


*Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.



SELECTING THE STEREO/MONO SOUND MODE

You can enjoy stereo programs on your TV. It has both an amplifier and twin speakers through which stereo sound can be heard. Follow these steps to select the STEREO mode.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR RING DOWN** once to highlight SOUND.
- 3** Press the **CURSOR RING RIGHT** to enter the SOUND submenu.
- 4** Press the **CURSOR RING DOWN** repeatedly until the STEREO control is highlighted.
- 5** Press the **CURSOR RING RIGHT** or **LEFT** to select STEREO or MONO. When STEREO has been selected, the television will reproduce any stereo signal it receives.
- 6** Press the **STATUS/EXIT** button to exit the menu.

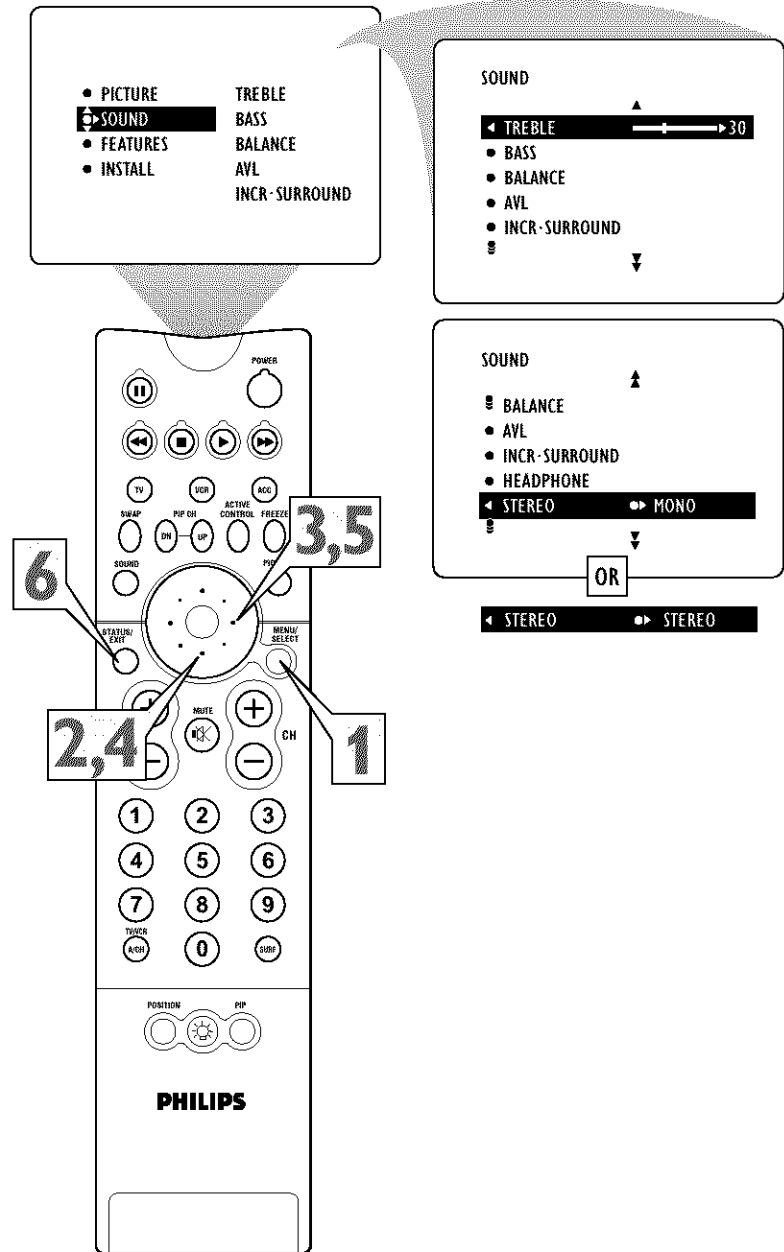

SELECTING THE SAP (SECOND AUDIO PROGRAM) FEATURE




SAP, or Second Audio Program, is an additional part of the stereo broadcast system. Sent as a third audio channel, an SAP can be heard apart from the current TV program sound. TV stations are free to use SAP for any number of purposes, such as the broadcast of a second language or other audio information.

If an SAP signal is not present with a selected program, the SAP option cannot be selected.

Selecting SAP Using the Remote Control

Select SAP immediately by pressing the SAP button on the remote control if the feature is being made available with the program you are watching.

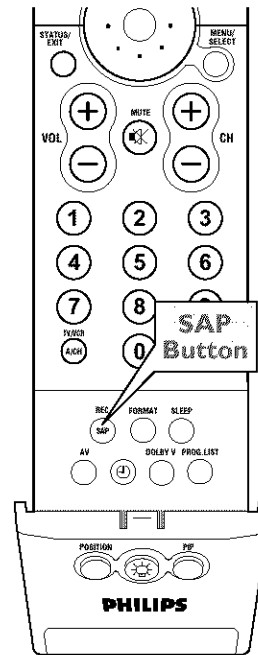


Selecting SAP Using the TV Buttons

Should your remote control become lost or otherwise unavailable for use, follow the steps below to use the buttons on the front of the TV to access the on-screen menu and select SAP.

NOTE: SAP must be broadcast with the program you are watching for you to be able to select the feature.

- 1** Press the Volume + and – buttons simultaneously. The on-screen menu appears.
- 2** Press the Channel Down button to highlight SOUND. Then press the Volume + button to enter the SOUND submenu.
- 3** Press the Channel Down button repeatedly until SAP is highlighted. Then press the Volume + or – button to turn SAP on or off.
- 4** Press the Volume + and – buttons simultaneously and repeatedly until you back out of the menu screens.

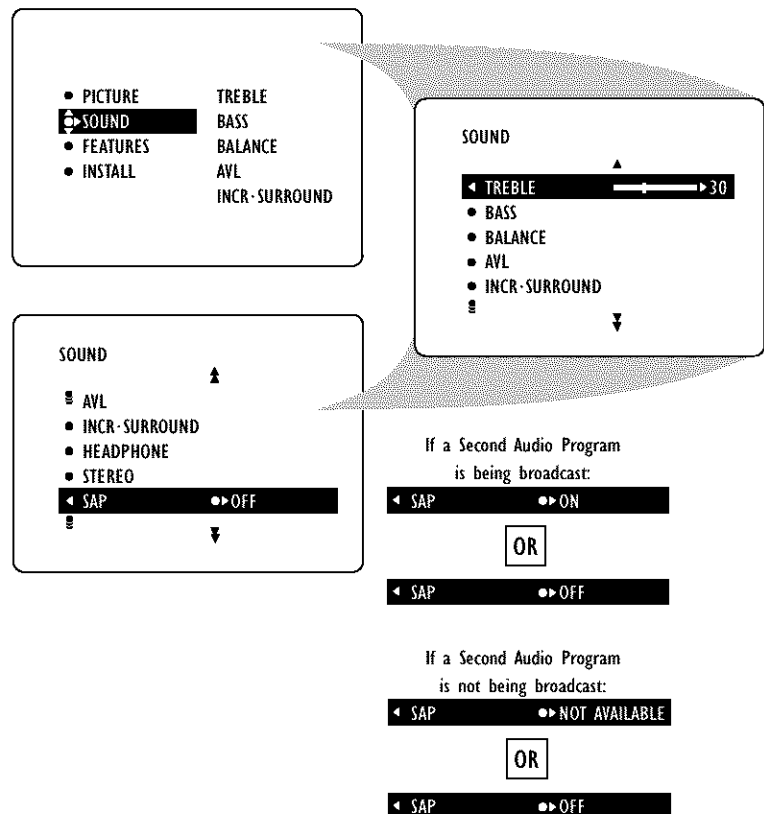




USING THE BASS BOOST CONTROL

The **BASS BOOST** control allows you to increase the low-frequency range of the TV's sound. This creates a deeper, fuller sound. Follow these steps to turn **BASS BOOST ON**.

- 1** Press **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR RING DOWN** once to highlight **SOUND**.
- 3** Press the **CURSOR RING RIGHT** to enter the **SOUND** submenu.
- 4** Press the **CURSOR RING DOWN** repeatedly until **BASS BOOST** is highlighted.
- 5** Press the **CURSOR RING RIGHT** or **LEFT** to turn **BASS BOOST ON** or **OFF**.
- 6** Press the **STATUS/EXIT** button to exit the menu.

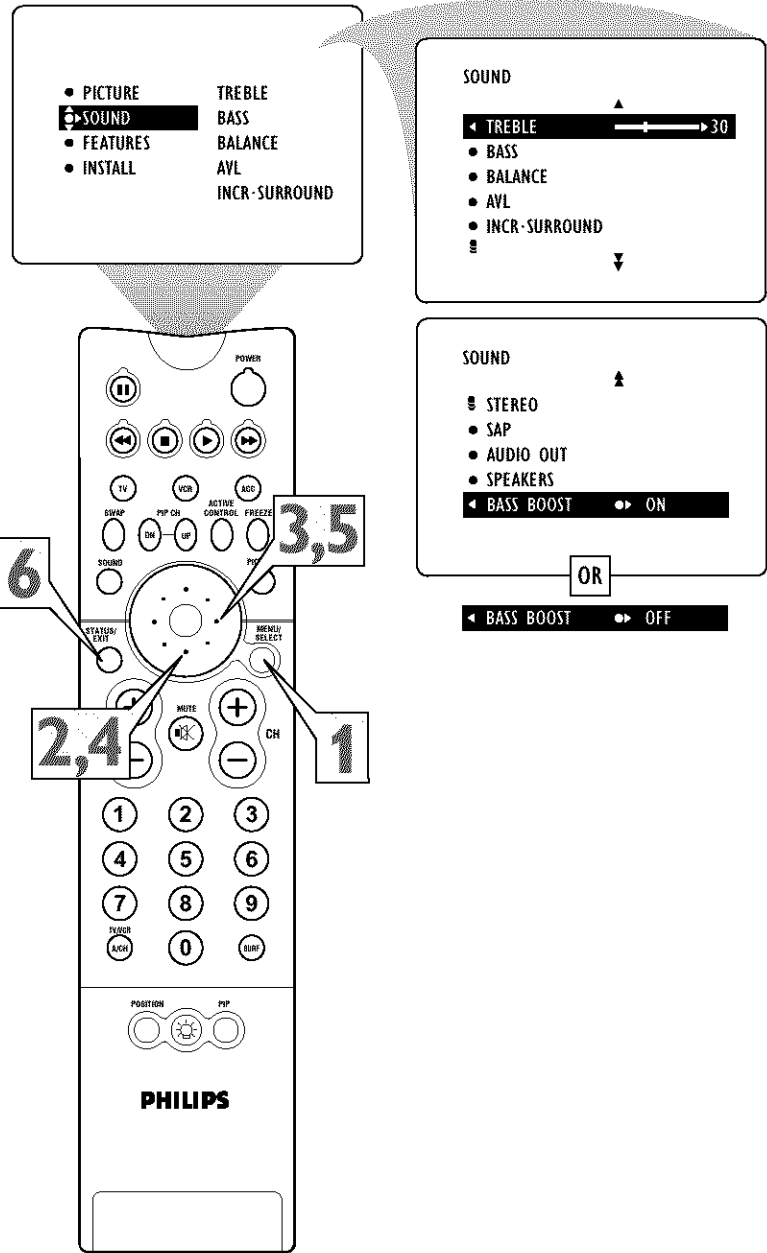

SETTING THE CLOCK




Your TV comes with an on-screen clock. You will need to set the clock before you can use the Timer feature. During normal operation, the time appears on the screen when you press the STATUS/EXIT button. You can show the time on screen constantly by turning the TIMER DISPLAY control on (see page 42).

For instructions on setting the Timer's START and STOP times, see page 43. Then go to pages 44 and 45 to learn how to select the Timer's channel and activate the Timer.

NOTE: You can access the TIME (clock) feature directly by pressing the Clock button on the remote control.

- 1** Press the MENU/SELECT button on the remote control to show the on-screen menu.
- 2** Press the CURSOR RING DOWN twice to highlight FEATURES.
- 3** Press the CURSOR RING RIGHT to enter the FEATURES submenu.
- 4** Press the CURSOR RING RIGHT again to shift the display left and highlight the TIME control.
- 5** Press the CURSOR RING RIGHT again to highlight the time indicator area.
- 6** Press the NUMBER buttons to enter the correct time. If you make a mistake entering the time, press the CURSOR RING LEFT or RIGHT to move among the input slots to make corrections.
- NOTE:** You can also press the CURSOR RING UP or DOWN to cycle through digits to input the time.
- 7** Press the CURSOR RING UP or DOWN to select AM or PM.
- 8** Press the STATUS/EXIT button to exit the menu.

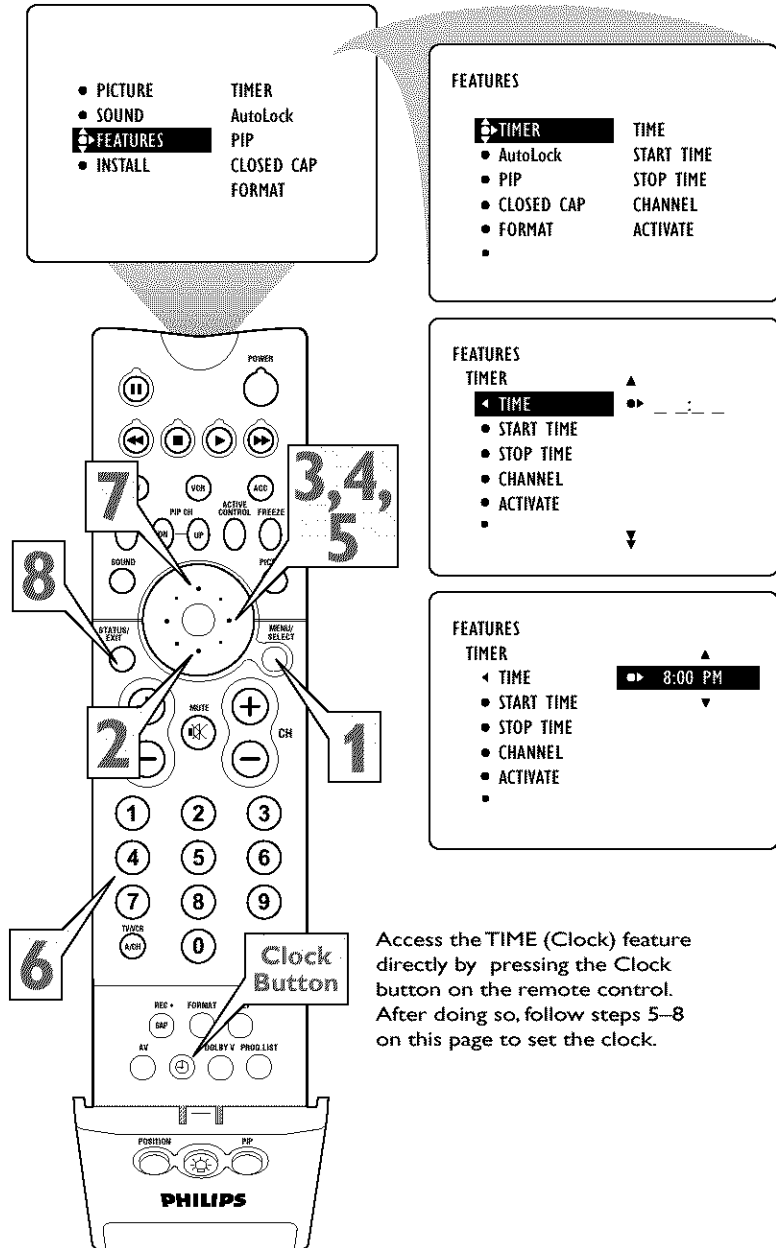

HELPFUL HINTS

- For single-digit entries, be sure to press 0 first and then the hour number.
- If you'd like, set the clock automatically using the AutoChron™ feature (on page 6 in the *Quick Use and Setup Guide*).
- Clock settings may be lost when the TV is unplugged or when AC power to the set is interrupted.



DISPLAYING THE TIME

After you have set the TV's clock, you can use your TV to keep up with the time on screen. You can also set the timer to switch to another channel, and, if you want, turn the TV off. The Timer's DISPLAY control allows you to show the time constantly in the upper right corner of the screen.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR RING DOWN** twice to highlight **FEATURES**.
- 3** Press the **CURSOR RING RIGHT** to enter the **FEATURES** submenu.
- 4** Press the **CURSOR RING RIGHT** again. Then press the **CURSOR RING DOWN** repeatedly until the **DISPLAY** control is highlighted.
- 5** Press the **CURSOR RING RIGHT** or **LEFT** to turn the **TIMER DISPLAY ON** or **OFF**.
- 6** Press the **STATUS/EXIT** button to exit the menu.

- PICTURE
- SOUND
- **FEATURES**
- INSTALL

- TIMER
- AutoLock
- PIP
- CLOSED CAP
- FORMAT

FEATURES

- **TIMER**
- AutoLock
- PIP
- CLOSED CAP
- FORMAT
-

- TIMER
- START TIME
- STOP TIME
- CHANNEL
- ACTIVATE

FEATURES

TIMER

- **TIME**
- START TIME
- STOP TIME
- CHANNEL
- ACTIVATE
-

8:06 PM

FEATURES

TIMER

- START TIME
- STOP TIME
- CHANNEL
- ACTIVATE
- **DISPLAY**

ON

OR

OFF

SETTING THE TIMER'S START TIME AND STOP TIME



You can set the Timer to switch to a selected channel at a specific time while you are watching another channel, or when the TV is in standby mode. (Standby mode is when the TV is plugged into the wall outlet but turned off.) If you want, you can also set the TV to turn off at some time after the TV switches channels. Follow the steps below to set the Timer's **START TIME** and **STOP TIME**.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR RING DOWN** twice to highlight **FEATURES**.
- 3** Press the **CURSOR RING RIGHT** to enter the **FEATURES** submenu.
- 4** Press the **CURSOR RING RIGHT** again. Then press the **CURSOR RING DOWN** once to highlight the **START TIME** control.
- 5** Press the **CURSOR RING RIGHT** to highlight the time indicator area.
- 6** Press the **NUMBER** buttons to enter the correct time. If you make a mistake entering the time, use the **CURSOR RING LEFT** or **RIGHT** to move among the time input slots to make corrections.
- NOTE:** You can also use the **CURSOR RING UP** or **DOWN** to cycle through digits to input the time.
- 7** Press the **CURSOR RING UP** or **DOWN** to select **AM** or **PM**.
- 8** Press the **CURSOR RING LEFT** repeatedly until **START TIME** is highlighted. Then press the **CURSOR RING DOWN** to highlight **STOP TIME**. If you want the TV to switch off at some time after the changing of channels, follow steps 5–7 above to set the **STOP TIME**.
- 9** Press the **STATUS/EXIT** button to exit the menu.

See pages 44 and 45 for instructions on selecting the Timer's channel and activating the timer.

- PICTURE
- SOUND
- **FEATURES**
- INSTALL

- TIMER
- AutoLock
- PIP
- CLOSED CAP
- FORMAT

FEATURES

- **TIMER**
- AutoLock
- PIP
- CLOSED CAP
- FORMAT
-

TIME
 START TIME
 STOP TIME
 CHANNEL
 ACTIVATE

FEATURES

TIMER

- **TIME**
- START TIME
- STOP TIME
- CHANNEL
- ACTIVATE
-

8:06 PM

FEATURES

TIMER

- TIME
- **START TIME**
- STOP TIME
- CHANNEL
- ACTIVATE
-

FEATURES

TIMER

- TIME
- **START TIME**
- STOP TIME
- CHANNEL
- ACTIVATE
-

8:00 AM

FEATURES

TIMER

- TIME
- START TIME
- **STOP TIME**
- CHANNEL
- ACTIVATE
-

FEATURES

TIMER

- TIME
- START TIME
- STOP TIME
- CHANNEL
- ACTIVATE
-

9:30 AM




SELECTING THE TIMER'S CHANNEL

Follow these steps to select the channel to which the Timer will switch the TV.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR RING DOWN** twice to highlight FEATURES.
- 3** Press the **CURSOR RING RIGHT** to enter the FEATURES submenu.
- 4** Press the **CURSOR RING RIGHT**. Then press the **CURSOR RING DOWN** repeatedly until the CHANNEL control is highlighted.
- 5** Press the **NUMBER** buttons to enter the desired start-up channel. Or press the **CURSOR RING RIGHT** repeatedly to enter the start-up channel you want.
- 6** Press the **STATUS/EXIT** button to exit the menu.

NOTE: Before the Timer will work, you must activate it. See page 45.

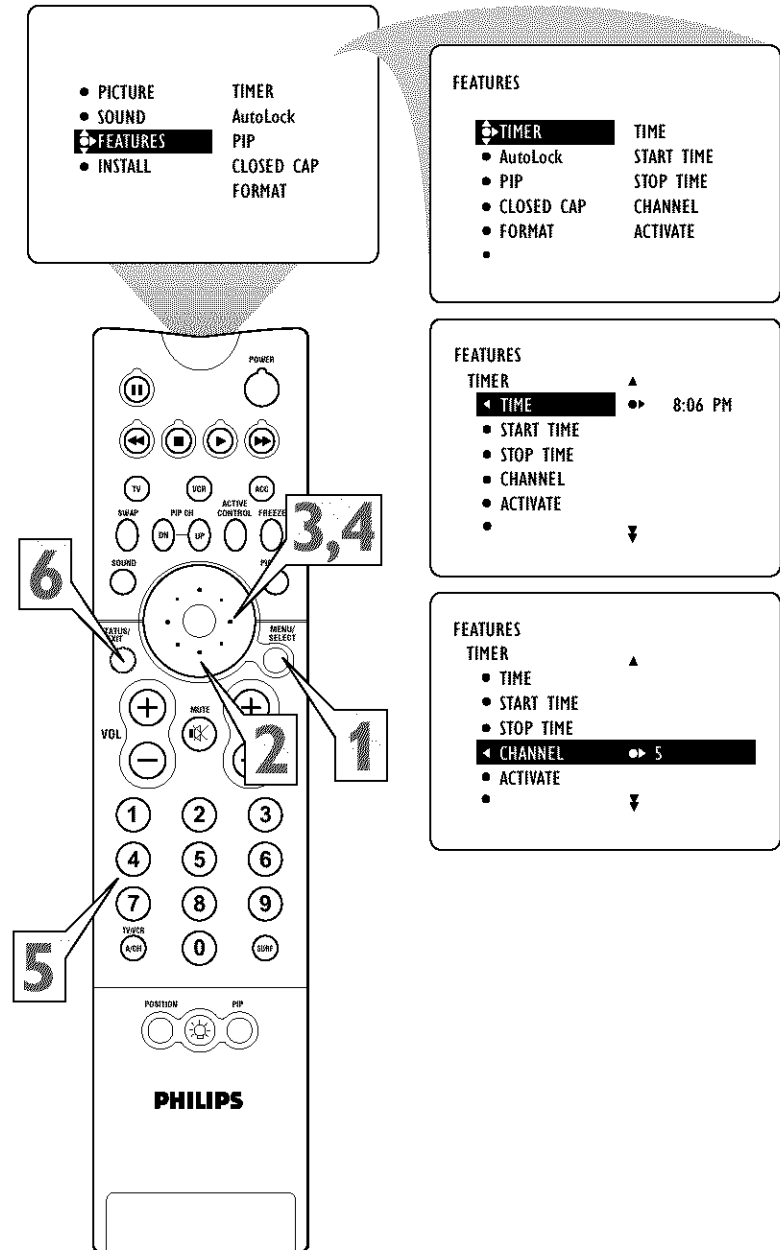


SETTING THE TIMER'S ACTIVATE CONTROL



After you have set the **TIME**, **START TIME**, **STOP TIME**, and **CHANNEL**, you must activate the Timer for it to operate. Your options are to set the Timer to work **ONCE** or **DAILY**. Set **ACTIVATE** to **OFF** if you don't want to use the Timer.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR RING DOWN** twice to highlight **FEATURES**.
- 3** Press the **CURSOR RING RIGHT** to enter the **FEATURES** submenu.
- 4** Press the **CURSOR RING RIGHT** again. Then press the **CURSOR RING DOWN** repeatedly until the **ACTIVATE** control is highlighted.
- 5** Press the **CURSOR RING RIGHT** to cycle through the options and make your selection. The options are **ONCE**, **DAILY**, or **OFF**.
- 6** Press the **STATUS/EXIT** button to exit the menu.

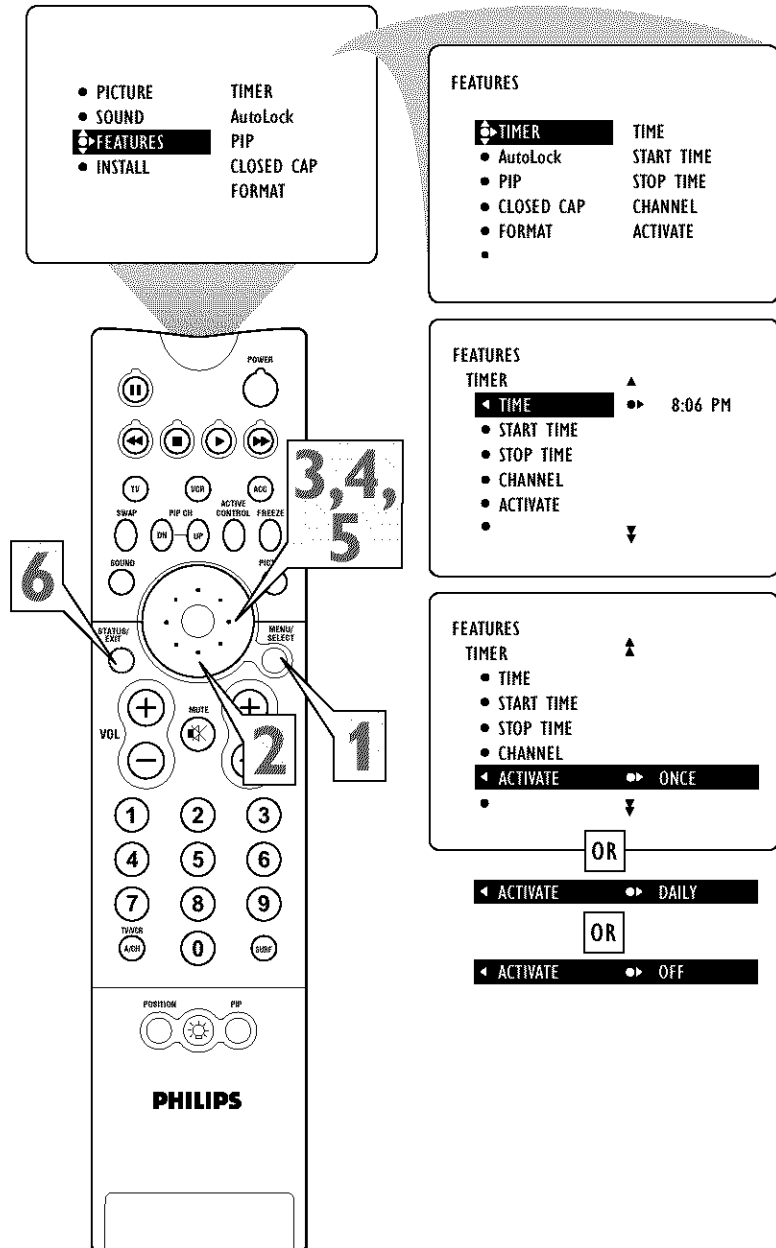

HELPFUL HINT

- Changing the channel or adjusting the volume during the last minute of a Timer setting will cancel the shutting off of the TV.
- Thirty seconds before the set changes to the channel you set (see page 44), an announcement appears on screen.

CHANGING TO
CHANNEL 5
IN 29 SEC



UNDERSTANDING AUTOLOCK™

The AutoLock™ feature can help parents control what their children watch on TV. AutoLock™ does this by using the content advisories sent by broadcasters or other program providers. After you program AutoLock™, it can respond to the content advisories and block programs that contain content that you may consider objectionable—offensive language, violence, or sexual situations. You can also use AutoLock™ to block channels that you don't want your children to watch.

In this section, you'll learn how to block channels and programming that is not rated, is unrated, or has no rating. You will also find out how to turn these blocking features on or off. Following on this page are brief explanations of AutoLock™ terms and program ratings.

Terms

BLOCKING control—can be thought of as the “master switch” for AutoLock™. This control affects the settings you have chosen for blocking programs according to movie ratings or TV ratings, or for blocking programs that have no rating or are unrated. When the BLOCKING control is OFF, the blocking or censoring of programs is disabled. When the BLOCKING control is ON, blocking will occur according to the settings you have chosen.


BLOCK UNRATED control—if set to ON, blocks all unrated programs.

Unrated programming consists of the kind of shows that the MPAA (Motion Picture Association of America) or the TV broadcasters have chosen not to rate.

NO RATING control—if set to ON, blocks all programming with no content advisory data.

Programming that has No Rating is not encoded with any rating information from the MPAA or the Parental Guidelines. Any programming could fall into this category.

BLOCK CHANNEL control—enables you to block individual channels that you don't want children to see.

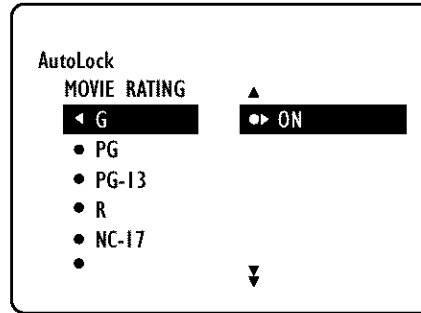

MOVIE RATINGS (MOTION PICTURE ASSOCIATION OF AMERICA)

G (General Audience)—all ages admitted. Most parents will find programs that are rated G to be suitable for children of all ages. Such programs have little or no violence, no strong language, and little or no sexual dialog or sexual situations.


PG (Parental Guidance Suggested)—contain material that parents may find unsuitable for younger children. Programs that are rated PG have one or more of the following: moderate violence, some sexual situations, infrequent coarse language, or some suggestive dialog.

PG-13 (Parents Strongly Cautioned)—contain material that parents may find unsuitable for children under the age of 13. Programs that are rated PG-13 have one or more of the following: violence, sexual situations, coarse language, or suggestive dialog.

R (Restricted)—specifically designed for adults. Anyone under the age of 17 should view programs that are rated R only with an accompanying parent or adult guardian. Such programs have one or more of the following: intense violence; intense sexual situations; strong, coarse language; or intensely suggestive dialogue.

NC-17 (No one under the age of 17 will be admitted)—should be viewed by adults only. Programs that are rated NC-17 have graphic violence; explicit sex; or crude, indecent language.

X (Adults Only)—contain one or more of the following: very graphic violence, very graphic and explicit or indecent sexual acts, or very coarse and intensely suggestive language.

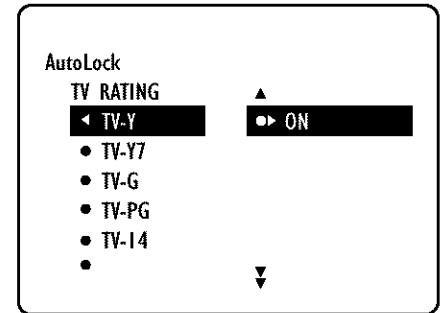

TV PARENTAL GUIDELINES (TV BROADCASTERS)

TV Y (All Children)—designed to be appropriate for all children, especially ones ages 2–6. Programs rated TV-Y are not expected to frighten younger children.

TV Y7 (Directed to Older Children)—designed for children ages 7 and older. Programs rated TV-Y7 may be more appropriate for children who have acquired the development skills needed to distinguish between make-believe and reality. Such programs may include mild fantasy and comic violence (FV).

TV G (General Audience)—most parents will consider programs that are rated TV-G to be suitable for children of all ages. Such programs have little or no violence, no strong language, and little or no sexual dialogue or sexual situations.

TV PG (Parental Guidance Suggested)—contain material that parents may find unsuitable for younger children. This type of programming has one or more of the following: moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D).

TV 14 (Parents Strongly Cautioned)—contain material that many parents will find unsuitable for children under 14 years of age. Such programs have one or more of the following: intense violence (V); intense sexual situations (S); strong, coarse language (L); or intensely suggestive dialogue (D).


TV MA (Mature Audience Only)—specifically designed to be viewed by adults and therefore may be unsuitable for children under 17. Such programs have one or more of the following: graphic violence (V); explicit sexual situations (S); or crude, indecent language (L).

SETTING UP THE AUTOLOCK™ ACCESS CODE



Your AutoLock™ access code allows you to enter the AutoLock™ submenus to set up or turn off blocking. Your access code is also the “key” that unlocks programs or channels that are being blocked by AutoLock™.

- 1** Press the MENU/SELECT button on the remote control to show the on-screen menu.
- 2** Press the CURSOR RING DOWN twice to highlight FEATURES.
- 3** Press the CURSOR RING RIGHT. Then press the CURSOR RING DOWN once to highlight the AutoLock control.
- 4** Press the CURSOR RING RIGHT to highlight ACCESS CODE.
- 5** Press 0,7,1,1 on the remote control. INCORRECT will appear on the screen.
- 6** Press 0,7,1,1 on the remote control again. ENTER NEW CODE will appear on the screen.
- 7** Enter a new four-digit code using the number buttons. CONFIRM CODE will appear on the screen.
- 8** Enter your new four-digit code again. CORRECT will flash on the screen briefly.
- 9** Press the STATUS/EXIT button exit the menu.

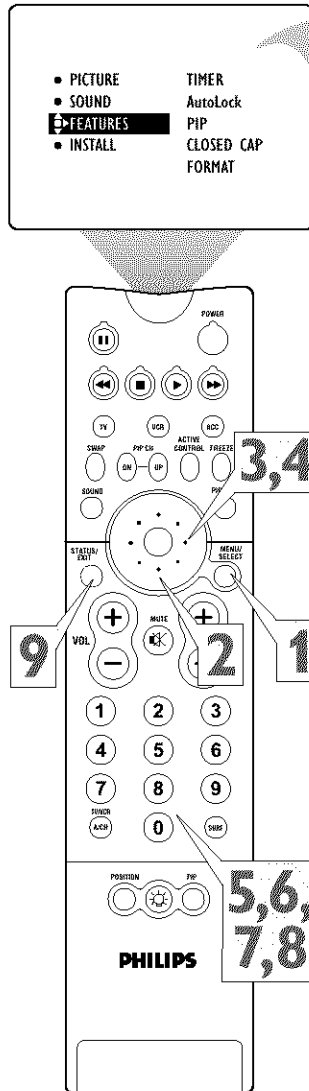

<ul style="list-style-type: none"> • PICTURE • SOUND ➤ FEATURES • INSTALL 	<ul style="list-style-type: none"> TIMER AutoLock PIP CLOSED CAP FORMAT 	<p>FEATURES</p> <ul style="list-style-type: none"> ➤ TIMER • AutoLock • PIP • CLOSED CAP • FORMAT • <p>TIME START TIME STOP TIME CHANNEL ACTIVATE</p>	<p>FEATURES</p> <ul style="list-style-type: none"> • TIMER ➤ AutoLock • PIP • CLOSED CAP • FORMAT • <p>ACCESS CODE - - - -</p>
		<p>FEATURES</p> <ul style="list-style-type: none"> • TIMER ➤ AutoLock • PIP • CLOSED CAP • FORMAT • <p>ACCESS CODE - - - -</p>	<p>FEATURES</p> <ul style="list-style-type: none"> • TIMER ➤ AutoLock • PIP • CLOSED CAP • FORMAT • <p>ACCESS CODE X X X X</p>
		<p>FEATURES</p> <ul style="list-style-type: none"> • TIMER ➤ AutoLock • PIP • CLOSED CAP • FORMAT • <p>ACCESS CODE X X X X INCORRECT</p>	<p>FEATURES</p> <ul style="list-style-type: none"> • TIMER ➤ AutoLock • PIP • CLOSED CAP • FORMAT • <p>ACCESS CODE - - - -</p>
		<p>FEATURES</p> <ul style="list-style-type: none"> • TIMER ➤ AutoLock • PIP • CLOSED CAP • FORMAT • <p>ACCESS CODE X X X X</p>	<p>FEATURES</p> <ul style="list-style-type: none"> • TIMER ➤ AutoLock • PIP • CLOSED CAP • FORMAT • <p>ENTER NEW CODE - - - -</p>
		<p>FEATURES</p> <ul style="list-style-type: none"> • TIMER ➤ AutoLock • PIP • CLOSED CAP • FORMAT • <p>ENTER NEW CODE X X X X</p>	<p>FEATURES</p> <ul style="list-style-type: none"> • TIMER ➤ AutoLock • PIP • CLOSED CAP • FORMAT • <p>CONFIRM CODE - - - -</p>
		<p>FEATURES</p> <ul style="list-style-type: none"> • TIMER ➤ AutoLock • PIP • CLOSED CAP • FORMAT • <p>CONFIRM CODE X X X X</p>	<p>FEATURES</p> <ul style="list-style-type: none"> • TIMER ➤ AutoLock • PIP • CLOSED CAP • FORMAT • <p>CONFIRM CODE X X X X</p>
		<p>FEATURES</p> <ul style="list-style-type: none"> • TIMER ➤ AutoLock • BLOCK CHANNEL • SETUP CODE • MOVIE RATING • TV RATING • BLOCK OPTIONS <p>ENTER NEW CODE X X X X</p>	<p>FEATURES</p> <ul style="list-style-type: none"> • TIMER ➤ AutoLock • BLOCK CHANNEL • SETUP CODE • MOVIE RATING • TV RATING • BLOCK OPTIONS <p>CONFIRM CODE X X X X</p>

HELPFUL HINTS

- An X appears on screen to confirm the receipt of each digit by the TV as you input your AutoLock™ access code.
- Parents, it isn't possible for your child to unblock a channel without knowing your access code or changing it to a new one. If you discover that your access code has been changed, you can assume that blocked channels may have been viewed.

You can also set up a new access code from the main AutoLock submenu using the SETUP CODE option. Simply enter and confirm the new Code to activate it.



USING AUTOLOCK™ TO BLOCK CHANNELS


After you have set up your personal access code (see page 47), you are ready to select the channels or program sources you want to block.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR RING DOWN** twice to highlight **FEATURES**.
- 3** Press the **CURSOR RING RIGHT**. Then press the **CURSOR RING DOWN** once to highlight the AutoLock control.
- 4** Press the **CURSOR RING RIGHT** again to highlight **ACCESS CODE**.
- 5** Enter your four-digit **ACCESS CODE**. **CORRECT** will flash very briefly and the submenu will move to the left with **BLOCK CHANNEL** highlighted.
- 6** Press the **CURSOR RING RIGHT** to highlight the TV's available channels.
- 7** Press the **CURSOR RING UP** or **DOWN** to highlight the channel you want to block.
- 8** Press the **CURSOR RING RIGHT** to block the channel. A padlock image will appear to the right of the channel number. If you decide you don't want to block the channel, press the **CURSOR RING RIGHT** again to remove the block. (The padlock image goes away.)


Repeat steps 7 and 8 for any channels you want to block from viewing.

NOTE: You can highlight the **ALL** option, then press the **CURSOR RING RIGHT** to block all channels at once. Or press the **CURSOR RING RIGHT** to unlock all channels.

- 9** Press the **STATUS/EXIT** button to exit the menu.

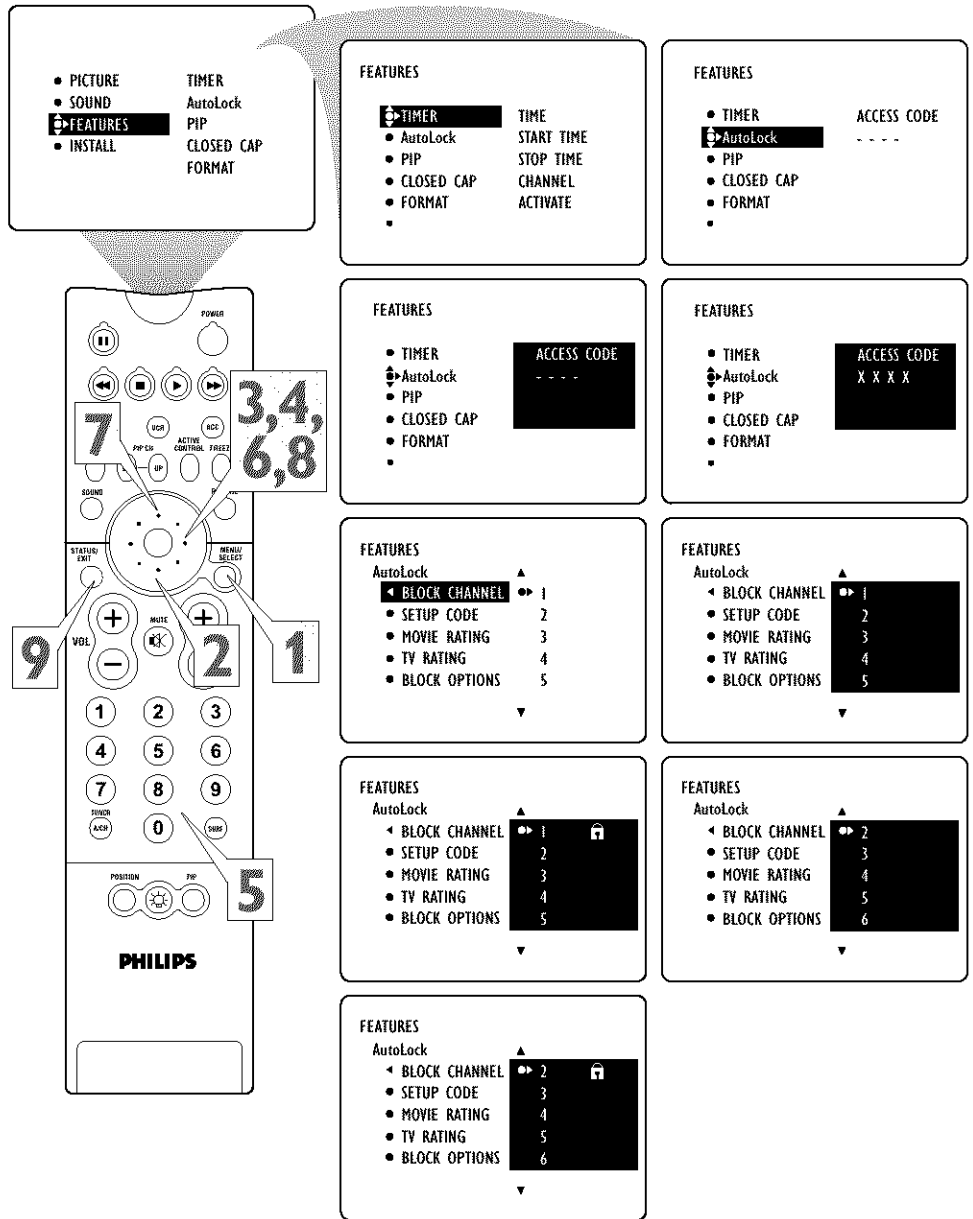

To block all channels at once, highlight **ALL** in the channel list. Then press the **CURSOR RING RIGHT** to block. Remove the blocks the same way.

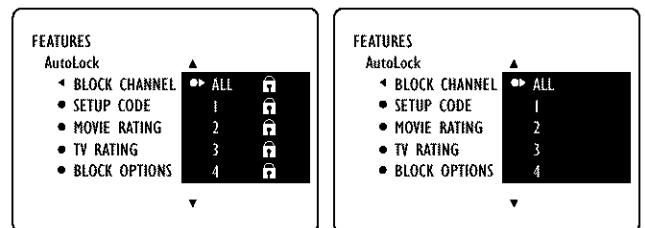

HELPFUL HINT

You can use the **BLOCK CHANNEL** control to prevent the viewing of programs coming from a VCR, DVD, or other accessory device connected to any of the audio/video (AV) inputs on the TV.

USING AUTOLOCK™ TO BLOCK BY MOVIE RATING



After you have set your personal access code (see page 47), you can block programs by specific movie ratings.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR RING DOWN** twice to highlight **FEATURES**.
- 3** Press the **CURSOR RING RIGHT**. Then press the **CURSOR RING DOWN** once to highlight the AutoLock control.
- 4** Press the **CURSOR RING RIGHT** again to highlight **ACCESS CODE**.
- 5** Enter your four-digit **ACCESS CODE**. **CORRECT** will flash very briefly in red and the submenu will move to the left with **BLOCK CHANNEL** highlighted.
- 6** Press the **CURSOR RING DOWN** repeatedly until **MOVIE RATING** is highlighted.
- 7** Press the **CURSOR RING RIGHT** and the Rating submenu will shift to the left with **G** highlighted.
- 8** Press the **CURSOR RING UP** or **DOWN** to highlight each rating you want. Then press the **CURSOR RING RIGHT** to turn the rating **ON** or **OFF**. Turning the rating **ON** will block such programs from being seen.
- 9** Press the **STATUS/EXIT** button to exit the menu.

The diagram illustrates the steps to set up AutoLock by movie rating. The remote control is shown with callouts: 1 (MENU/SELECT), 2 (CURSOR RING DOWN), 3 (CURSOR RING RIGHT), 4 (CURSOR RING RIGHT), 5 (STATUS/EXIT), 6 (CURSOR RING DOWN), 7 (CURSOR RING RIGHT), 8 (CURSOR RING UP/DOWN), and 9 (STATUS/EXIT).

The on-screen menu sequence is as follows:

- Initial menu: PICTURE, SOUND, **FEATURES**, INSTALL, TIMER, AUTOLOCK, PIP, CLOSED CAP, FORMAT.
- FEATURES menu: **FEATURES**, TIMER, AutoLock, PIP, CLOSED CAP, FORMAT.
- AutoLock menu: **AutoLock**, ACCESS CODE: - - - -.
- ACCESS CODE menu: **ACCESS CODE**, X X X X.
- BLOCK CHANNEL menu: **BLOCK CHANNEL**, SETUP CODE, MOVIE RATING, TV RATING, BLOCK OPTIONS.
- MOVIE RATING menu: **MOVIE RATING**, BLOCK CHANNEL, SETUP CODE, MOVIE RATING, TV RATING, BLOCK OPTIONS.
- G rating menu: **G**, PG, PG-13, R, NC-17.
- ON/OFF menu: **G**, **OFF**, PG, PG-13, R, NC-17.
- Final ON/OFF menu: **G**, **ON**, PG, PG-13, R, NC-17.

HELPFUL HINT

When a rating is set to be turned on (blocked), all higher ratings will also be blocked automatically. For example, if the R rating is turned on, the NC-17 and X ratings also will be turned on.



USING AUTOLOCK™ TO BLOCK BY TV RATING

You also can block programs by specific TV ratings. Follow these simple steps.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR RING DOWN** twice to highlight **FEATURES**.
- 3** Press the **CURSOR RING RIGHT**. Then press the **CURSOR RING DOWN** once to highlight the **AutoLock** control.
- 4** Press the **CURSOR RING RIGHT** again to highlight **ACCESS CODE**.
- 5** Enter your four-digit **ACCESS CODE**.
- 6** Press the **CURSOR RING DOWN** repeatedly until **TV RATING** is highlighted.
- 7** Press the **CURSOR RING RIGHT** to enter the **TV RATING** submenu.
- 8** Press the **CURSOR RING DOWN** or **UP** to select a rating.
- 9** Press the **CURSOR RING RIGHT** or **LEFT** to turn the block on the rating **ON** or **OFF**.
- 10** To access these subratings, press the **CURSOR RING RIGHT**. Press the **CURSOR RING UP** or **DOWN** to select the subrating that you want to block or unblock. Then press the **CURSOR RING RIGHT** or **LEFT** button to turn the block on the subrating **ON** or **OFF**.
- 11** Press the **STATUS/EXIT** button to exit the menu.

The screenshots show the following sequence of menu screens:

- Initial menu with **FEATURES** highlighted.
- FEATURES** menu with **AutoLock** highlighted.
- AutoLock** menu with **ACCESS CODE** highlighted.
- ACCESS CODE** input screen showing **X X X X**.
- AutoLock** menu with **BLOCK CHANNEL** highlighted.
- AutoLock** menu with **TV RATING** highlighted.
- TV RATING** submenu with **TV-Y** highlighted.
- TV RATING** submenu with **TV-Y7** highlighted.
- TV RATING** submenu with **TV-Y7** highlighted and **OFF** selected.
- TV RATING** submenu with **TV-Y7** highlighted and **ON** selected.
- TV RATING** submenu with **TV-Y7** highlighted.
- TV RATING** submenu with **TV-Y7** highlighted.

TV-Y (All Children)—designed to be appropriate for all children, especially ones ages 2–6. Programs rated TV-Y are not expected to frighten younger children.

TV-Y7 (Directed to Older Children)—designed for children ages 7 and older. Programs rated TV-Y7 may be more appropriate for children who have acquired the development skills needed to distinguish between make-believe and reality. Such programs may include mild fantasy and comic violence (FV).

TV-G (General Audience)—likely to be considered suitable for children of all ages. Such programs have little or no violence, no strong language, and little or no sexual dialogue or sexual situations.

TV-PG (Parental Guidance Suggested)—contain material that parents may find unsuitable for younger children. This type of programming has one or more of the following: moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D).

TV-14 (Parents Strongly Cautioned)—contain material that many parents will find unsuitable for children under 14 years of age. Such programs have one or more of the following: intense violence (V); intense sexual situations (S); strong, coarse language (L); or intensely suggestive dialogue (D).

TV-MA (Mature Audience Only)—specifically designed to be viewed by adults and therefore may be unsuitable for children under 17. Such programs have one or more of the following: graphic violence (V); explicit sexual situations (S); or crude, indecent language (L).

TURNING THE AUTOLOCK™ BLOCKING CONTROL ON OR OFF



The BLOCKING control can be thought of as the “master switch” for AutoLock™. Use it to turn ON or OFF all of the settings (based on ratings). This control does not affect channel blocks (see page 48).

- 1** Press the MENU/SELECT button on the remote control to show the on-screen menu.
- 2** Press the CURSOR RING DOWN twice to highlight FEATURES.
- 3** Press the CURSOR RING RIGHT. Then press the CURSOR RING DOWN once to highlight the AutoLock control.
- 4** Press the CURSOR RING RIGHT again to highlight ACCESS CODE.
- 5** Enter your four-digit ACCESS CODE.
- 6** Press the CURSOR RING DOWN repeatedly until BLOCK OPTIONS is highlighted.
- 7** Press the CURSOR RING RIGHT to enter the BLOCK OPTIONS submenu. BLOCKING will be highlighted.
- 8** Press the CURSOR RING RIGHT or LEFT to turn BLOCKING ON or OFF.
- 9** Press the STATUS/EXIT button to exit the menu.

The diagram illustrates the steps to turn the AutoLock blocking control on or off. It shows a Philips remote control with numbered callouts (1-9) pointing to the buttons used in the instructions. To the right of the remote are nine screenshots of the TV's on-screen menu, showing the step-by-step navigation process:

- Screenshot 1:** The main menu with 'FEATURES' highlighted.
- Screenshot 2:** The 'FEATURES' menu with 'AutoLock' highlighted.
- Screenshot 3:** The 'AutoLock' menu with 'ACCESS CODE' highlighted.
- Screenshot 4:** The 'ACCESS CODE' screen with 'X X X X' entered.
- Screenshot 5:** The 'AutoLock' menu with 'BLOCK OPTIONS' highlighted.
- Screenshot 6:** The 'BLOCK OPTIONS' submenu with 'BLOCKING' highlighted.
- Screenshot 7:** The 'BLOCKING' option set to 'OFF'.
- Screenshot 8:** The 'BLOCKING' option set to 'ON'.
- Screenshot 9:** The 'BLOCKING' option set to 'ON'.



USING AUTOLOCK™ TO BLOCK UNRATED BROADCASTS

In addition to blocking rated programs or channels, you may also choose to block all programming that is unrated. Unrated programming consists of shows that the MPAA (Motion Picture Association of America) or the TV broadcasters have chosen not to rate.


- 1** Press the MENU/SELECT button on the remote control to show the on-screen menu.
- 2** Press the CURSOR RING DOWN twice to highlight FEATURES.
- 3** Press the CURSOR RING RIGHT. Then press the CURSOR RING DOWN once to highlight the AutoLock control.
- 4** Press the CURSOR RING RIGHT again to highlight ACCESS CODE.
- 5** Enter your four-digit ACCESS CODE.
- 6** Press the CURSOR RING DOWN repeatedly until BLOCK OPTIONS is highlighted.
- 7** Press the CURSOR RING RIGHT to enter the BLOCK OPTIONS submenu.
- 8** Press the CURSOR RING DOWN once to select BLOCK UNRATED.
- 9** Press the CURSOR RING RIGHT or LEFT to turn BLOCK UNRATED ON or OFF.
- 10** Press the STATUS/EXIT button to exit the menu.

The screenshots show the following sequence of menus:

- Initial menu with 'FEATURES' highlighted.
- 'FEATURES' menu with 'AutoLock' highlighted.
- 'FEATURES' menu with 'AutoLock' highlighted and 'ACCESS CODE' highlighted.
- 'FEATURES' menu with 'AutoLock' highlighted and 'ACCESS CODE' highlighted (displaying 'X X X X').
- 'AutoLock' menu with 'BLOCK CHANNEL' highlighted.
- 'AutoLock' menu with 'BLOCK OPTIONS' highlighted.
- 'AutoLock BLOCK OPTIONS' menu with 'BLOCK UNRATED' highlighted and 'OFF' selected.
- 'AutoLock BLOCK OPTIONS' menu with 'BLOCK UNRATED' highlighted and 'ON' selected.
- 'AutoLock BLOCK OPTIONS' menu with 'BLOCK UNRATED' highlighted and 'ON' selected.
- 'AutoLock BLOCK OPTIONS' menu with 'BLOCK UNRATED' highlighted and 'ON' selected.
- 'AutoLock BLOCK OPTIONS' menu with 'BLOCK UNRATED' highlighted and 'ON' selected.

HELPFUL HINT

When the BLOCK UNRATED control is turned ON, attempts to view unrated programs will bring to the screen a message like the one shown to the right. To watch the program, enter your access code or go into the BLOCK OPTIONS submenu and turn the BLOCK UNRATED control OFF.

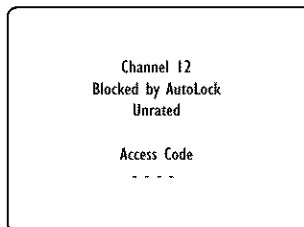


USING AUTOLOCK™ TO BLOCK BROADCASTS THAT HAVE NO RATING




Some programs contain no content advisories from the Motion Picture Association of America or the television broadcasters (see page 46). To block programs with no rating, follow these steps.

- 1** Press the MENU/SELECT button on the remote control to show the on-screen menu.
- 2** Press the CURSOR RING DOWN twice to highlight FEATURES.
- 3** Press the CURSOR RING RIGHT. Then press the CURSOR RING DOWN once to highlight the AutoLock control.
- 4** Press the CURSOR RING RIGHT again to highlight the ACCESS CODE input area.
- 5** Enter your four-digit ACCESS CODE.
- 6** Press the CURSOR RING DOWN repeatedly until BLOCK OPTIONS is highlighted.
- 7** Press the CURSOR RING RIGHT to enter the BLOCK OPTIONS submenu.
- 8** Press the CURSOR RING DOWN twice to highlight NO RATING.
- 9** Press the CURSOR RING RIGHT or LEFT to turn NO RATING ON or OFF.
- 10** Press the STATUS/EXIT button to exit the menu.

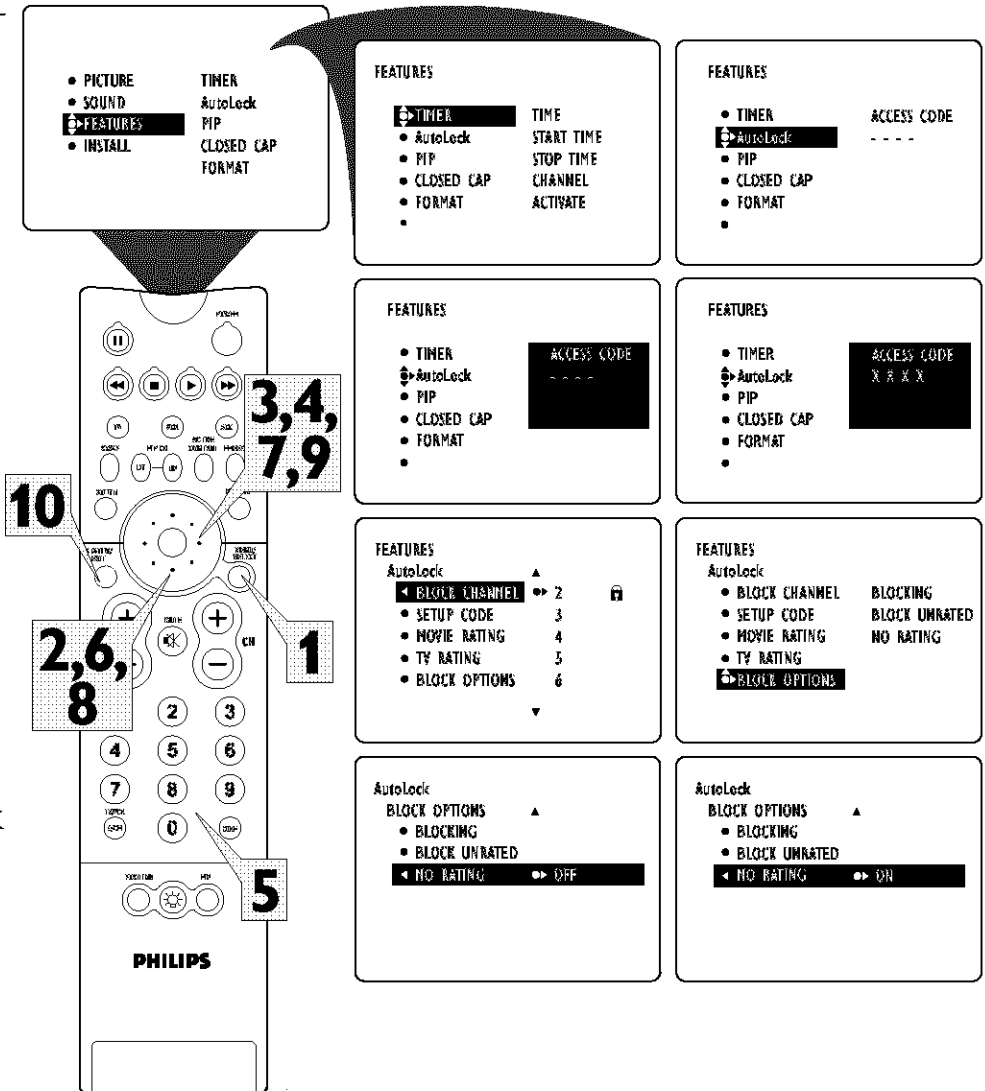

HELPFUL HINT

If the NO RATING control is turned on, all programs having no content advisory information will activate a screen like the one shown to the right. To watch the channel, enter your access code or turn the NO RATING option OFF.

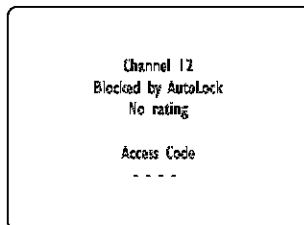



REVIEWING YOUR CURRENT AUTOLOCK™ SETTINGS

AutoLock™ provides a screen that shows the settings you have selected. Here's how to access the screen.

- 1 Press the **STATUS/EXIT** button on the remote control twice. Your AutoLock™ settings will appear on the screen.

NOTE: If you have blocked specific subratings, such as *V* for Violence in the TV-PG category, these blocked subratings will not appear in the review. Nonetheless, the subratings are still blocked according to your selections.

- 2 After a few seconds, the settings will leave the screen automatically, or you can press the **STATUS/EXIT** button to exit the menu.

HELPFUL HINT




The AutoLock™ review screen will appear only if you have turned **ON** the **BLOCKING** control (see page 51).

MOVIE RATING—shows all the movie ratings that you have chosen to block within the **MOVIE RATING** control. **NOTE:** If a lower rating is blocked, higher ratings will also be blocked automatically. For example, if you block R-rated programs, those that are rated X will also be blocked.

TV RATING—shows all the TV ratings that you have chosen to block within the **TV RATING** control. **NOTE:** If a lower rating is blocked, higher ratings will also be blocked automatically. For example, if you block TV-PG-rated programs, those rated TV-14 and TV-MA will also be blocked. The TV rating controls also have subratings for Violence (V), Fantasy Violence (FV), Sexual Situations (S), Coarse Language (L), and Suggestive Language (D). If you turn off a main rating but turn on a subrating of that main rating control, programs having the subrating will be blocked; however, the main rating will not appear within the AutoLock review submenu because you did not turn it ON.

BLOCK UNRATED—shows whether you have turned this control **ON** or **OFF**.

BLOCK NO RATING—shows whether you have turned this control **ON** or **OFF**.

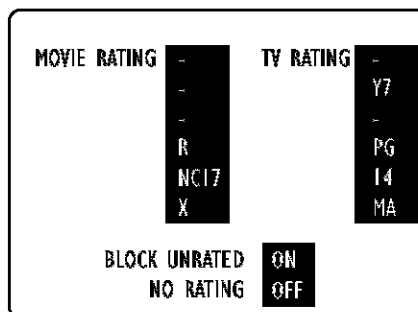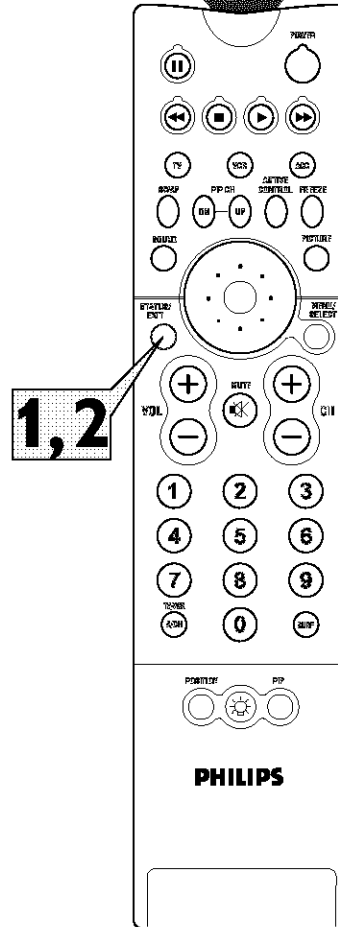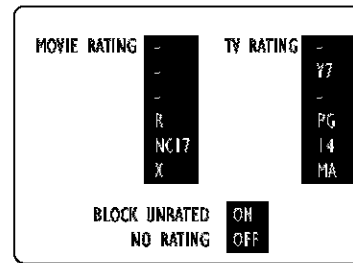

USING THE CLOSED CAPTIONING CONTROL





Closed Captioning (CC) allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, this feature uses on-screen text boxes to show dialogue and conversations while the TV program is in progress.

- 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
 - 2** Press the **CURSOR RING DOWN** twice to highlight **FEATURES**.
 - 3** Press the **CURSOR RING RIGHT** to enter the **FEATURES** submenu.
 - 4** Press the **CURSOR RING DOWN** repeatedly until the **CLOSED CAP** control is highlighted.
 - 5** Press the **CURSOR RING RIGHT**. The submenu will shift to the left and **CAPTION MODE** will be highlighted. Then press the **CURSOR RING RIGHT** again to highlight the **CAPTION MODEs** area.
 - 6** Press the **CURSOR RING UP** or **DOWN** to select a **CAPTION MODE**.
- NOTES:**
- CC1 mode is the usual setting. CC2, CC3, and CC4 may not be supported by broadcast stations.
 - The **CC MUTE** option turns the Closed Captioning mode on whenever the **MUTE** button on the remote control is pushed. Select **CC MUTE** in the on-screen submenu to turn this feature on.
- 7** Press the **CURSOR RING LEFT** to return to the **CLOSED CAP** submenu. Then press the **CURSOR RING DOWN** to highlight **CC DISPLAY**.
 - 8** Press the **CURSOR RING RIGHT** to turn the on-screen display of Closed Captioning on or off. Closed Captioning will be shown only if the TV station broadcasting on the channel has the feature available.
 - 9** Press the **STATUS/EXIT** button to exit the menu.

HELPFUL HINTS

- Refer to your area's TV program listings for the stations and times of shows being broadcast with Closed Captioning.
- Broadcasters determine the content of captions. Any occurrences of misspellings, incorrect grammar, or strange characters are not the result of TV malfunction.

Selecting the **CC MUTE** option allows you to display Closed Captioning by pressing the **MUTE** button on the remote control. Note, however, that the program you are watching must be providing Closed Captioning. You must also be sure **CC DISPLAY** is turned **ON**.

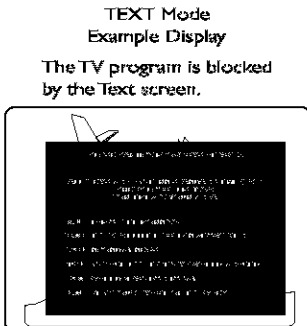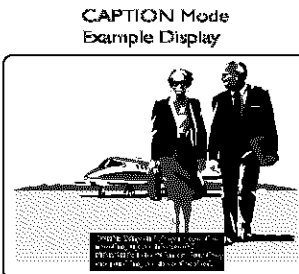



USING THE PICTURE-FORMAT CONTROL

Your TV's wide screen (16:9 aspect ratio) delivers a home-cinema experience not possible with a conventional (4:3 aspect ratio) set. High-definition (HD) programs originating in 16:9 format and other widescreen-format video sources appear more lifelike, dramatic, and theatrical. Border bars are diminished or eliminated. Most anamorphic-DVD programs will fill the wide screen without border bars.

Use your HD set-top box or progressive-scan-capable DVD player to control the picture formats of video sources connected to the TV's HD inputs.

For flexibility with video sources connected to your TV's standard inputs—ANTENNA, AV1, CVI, AV2, or AV3 (side panel)—access your TV's picture-format modes. View a video source in standard (4:3) format or enlarge it to fill the screen in various ways using EXPAND 4:3, PANORAMA, WIDE SCREEN, or AUTO.

Selecting a Picture Format Using the Remote Control

Use your TV's picture-format modes with video sources you connect to the ANTENNA, AV1, CVI, AV2, or AV3 (side panel) inputs on the TV. While watching a video source—with no on-screen menu or display present—press the CURSOR RING RIGHT or LEFT as many times as necessary to select the picture format you desire. Or press the FORMAT button to perform the same function.

Picture-format Modes

4:3 shows the conventional (4:3 aspect ratio) picture in its original format. Border bars are displayed on the sides. (See the warning above.)

EXPAND 4:3 expands, or zooms, the picture both vertically and horizontally, eliminating or reducing the size of border bars. Picture information is lost around the edges.


PANORAMA stretches the outer portions of the picture horizontally and causes some vertical expansion.

WIDE SCREEN expands the picture horizontally. No vertical expansion occurs.

AUTO senses the presence of borders bars and zooms the picture to reduce or eliminate the bars. The amount of zoom varies based on the original picture, but this option can provide more expansion than EXPAND 4:3.


AUTO works best with video programs that were originally "letterboxed." Formatted to preserve the original theatrical aspect ratio, these programs are presented with border bars at top and bottom.

Pictures appear more lifelike, dramatic, and theatrical on your TV's wide screen.

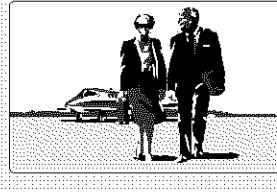

HELPFUL HINTS

- The term *aspect ratio* refers to the relationship between the width and height of a TV screen. Historically, TV screen width has been 33 percent greater than its height, amounting to a 4:3 aspect ratio. The width of your widescreen TV, however, is nearly 80 percent greater than its height, which means its aspect ratio is 16:9. This screen corresponds well with the tendency of the eyes to feel more comfortable with fields of view and action planes that are horizontally oriented. The wide screen is also proportionally truer to the formats in which movies are filmed and presented in theaters.
- Although the term *widescreen* can have various meanings, it is most commonly used to refer to a picture format or screen that has a greater aspect ratio than the conventional 4:3.

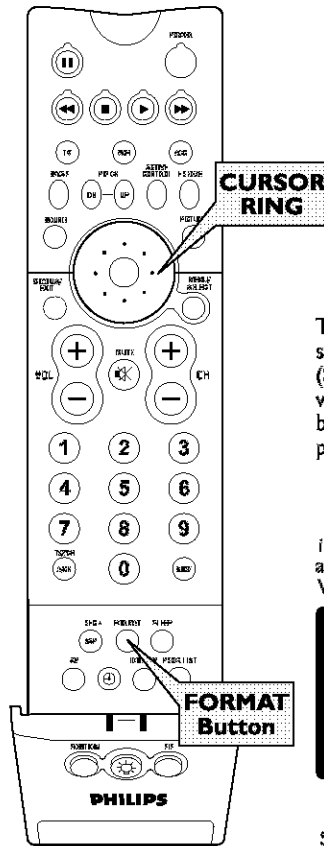

The picture-format modes are available for use only with video sources connected to the ANTENNA, AV1, CVI, AV2, and AV3 (Side Panel) inputs on the TV. Control the picture formats of video sources connected to the HD inputs through the set-top box (for HD programming) or progressive-scan-capable DVD player (for DVD programs).

4:3

Shows the conventional picture in its original format. Border bars are displayed on the sides. See the Warning on this page (below, left).




EXPAND 4:3

Zooms the picture vertically and horizontally.



PANORAMA

Stretches the outer parts of the picture horizontally and causes some vertical expansion.

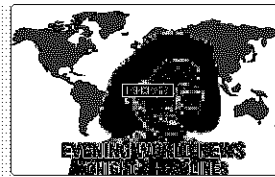

WIDE SCREEN

Expands the picture horizontally. No vertical expansion occurs.



WARNING

To prevent uneven picture-tube aging, do not leave border bars or other stationary images on screen for extended periods of time. See page 62.

AUTO

Senses the presence of picture borders and zooms the picture to reduce or eliminate the borders.




USING THE PICTURE-FORMAT CONTROL



Selecting a picture Format Using the TV Buttons

Should your remote control become lost or otherwise unavailable for use, follow the steps below to use the buttons on the front of the TV to access the on-screen menu and select a picture-format control.

- 1** Press the Volume + and – buttons simultaneously. The on-screen menu appears.
- 2** Press the Channel Down button repeatedly until FEATURES is highlighted. Then press the Volume + button to enter the FEATURES submenu.
- 3** Press the Channel Down button repeatedly until FORMAT is highlighted. Then press the Volume + or – button until you select the picture format you want.
- 4** Press the Volume + and – buttons simultaneously and repeatedly until you back out of the menu screens.

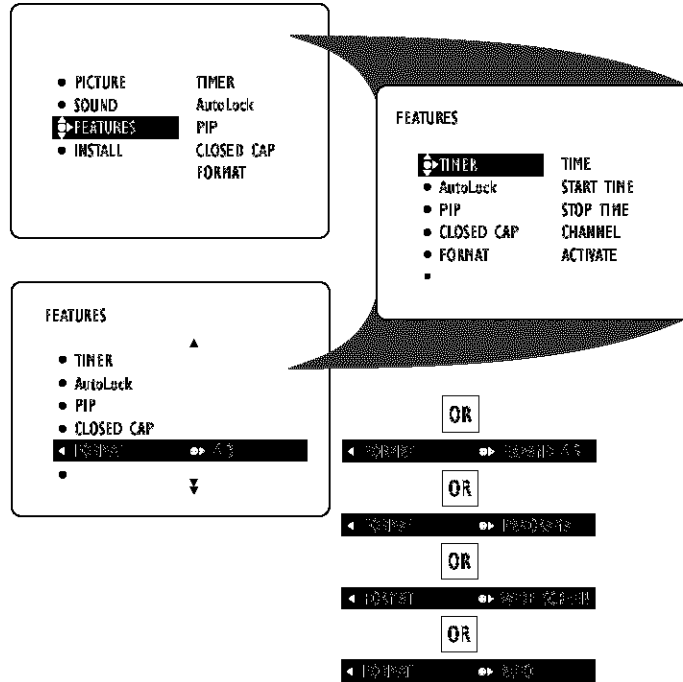

WARNING

To prevent uneven picture-tube aging, do not leave nonmoving images or black borders on the screen for an extended period. See page 62.

HELPFUL HINT

The TV's Picture-format options are available only with video sources connected to the ANTENNA, AV1, CVI, AV2, AV3 (side panel) inputs on the TV. The picture formats of video sources connected to the HD inputs are controlled through the HD set-top box or progressive-scan-capable DVD player providing the video source.






Active Control™ Measures and corrects all incoming signals to provide the best picture-quality settings.

When you choose to turn Active Control™ on, picture sharpness and noise reduction are controlled automatically. Active Control™ adapts picture settings continuously and automatically.

NOTE: Active Control™ is not available for signals connected to HD INPUT-AV 4 HD INPUT-AV5.

Turning Active Control™ on or off Using the Remote Control




While watching TV, press the ACTIVE CONTROL button on the remote control to turn the feature on or off. When you turn Active Control™ on, the on-screen display shows the up-to-the-moment picture Sharpness and Noise Reduction settings.

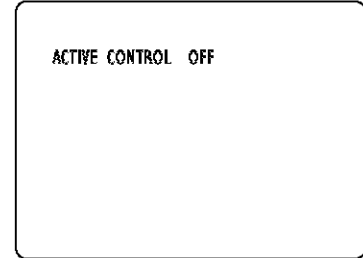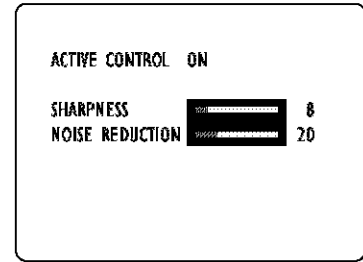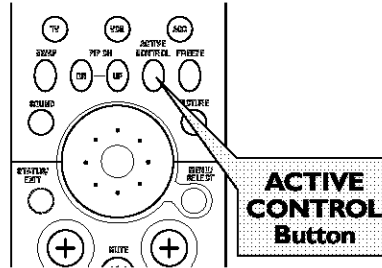

Turning Active Control™ on or off Using the TV Buttons

Should your remote control become lost or otherwise unavailable for use, follow the steps below to use the buttons on the front of the TV to access the on-screen menu and turn Active Control™ on or off.

- 1** Press the Volume + and – buttons simultaneously. The on-screen menu appears.
- 2** Press the Channel Down button repeatedly until FEATURES is highlighted. Then press the Volume + button to enter the FEATURES submenu.
- 3** Press the Channel Down button repeatedly until ACTIVE CTRL is highlighted. Then press the Volume + or – button to turn Active Control™ on or off.
- 4** Press the Volume + and – buttons simultaneously and repeatedly until you back out of the menu screens.

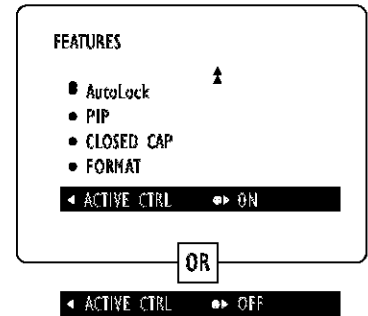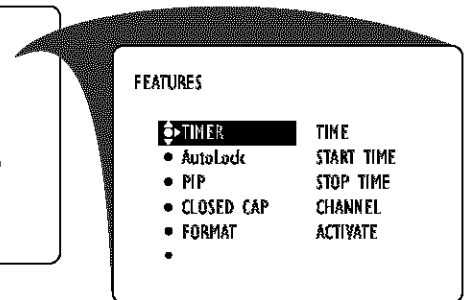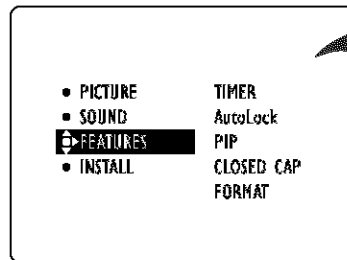



COMPATIBILITY INFORMATION FOR THE TV'S HIGH-DEFINITION INPUTS

Your set's HD inputs (HD INPUT-AV 4 and HD INPUT-AV 5) are designed to accept high-definition signal standards 480p and 1080i as specified by the Electronic Industries Association. Output standards may vary by manufacturer. Refer to the directions-for-use manual for the digital equipment before connecting.

Your TV's HD input jacks are compatible with some digital equipment having RGB outputs with "sync on green" or RGB with "separate H and V sync." As with HD component video signals, output standards may vary by manufacturer. Refer to the directions-for-use manual for the receiver before connecting.

HELPFUL HINTS

- No industry standards have been established for HD television RGB signal systems, timing, synchronization, and signal strengths. The HD INPUT-AV 4 RGB inputs on your Philips TV will not be compatible with all digital equipment that offers RGB outputs. If the digital equipment you want to connect offers both component video and RGB, component video is the suggested type of connection to use.
- Your TV's on-screen INSTALL submenu provides the option of switching the AV4 signal source between YPbPr and RGB color-space settings. The option is available only when you have selected the AV4 signal source (using the AV button on the remote or the Source Select button on the TV). The default setting for AV4 is YPbPr. See page 61.

HD INPUT-AV 4

When the Inputs Are Used with Component Video Signals

Y INPUT: 1.0 Vp-p (includes sync), 75 ohms

Pr INPUT: 700m Vp-p, 75 ohms

Pb INPUT: 700m Vp-p, 75 ohms

NOTES:

The Pb INPUT jack can also receive signals from outputs labeled Cb or B-Y.

The Pr INPUT jack can also receive signals from outputs labeled Cr or R-Y.

When the Inputs Are Used with RGB Video Signals

G/Y: 1.0 Vp-p, 75 ohms (compatible with sync on green)

R/Pr: 700 mVp-p, 75 ohms

B/Pb: 700 mVp-p, 75 ohms

H: 3 Vp-p \pm 1.0 V, 1 kohm (when using separate H and V sync)

V: 3 Vp-p \pm 1.0 V, 1 kohm (when using separate H and V sync).

HD INPUT-AV 5

This input accepts a digital video interface (DVI) connector, which uses digital data in the format data standard called transition minimized differential signaling (TMDS).

Product Type

Rear-projection HDTV Monitor

Television System

NTSC standard

Channel Coverage

VHF: 2–13

UHF: 14–69

Cable TV: Midband

Superband

Hyperband

Ultraband

Ambient Operating Temperature

+41 to 113°F (+5 to +45°C)

Mains Voltage

AC 110 ±10%

Power Consumption

180W (average)

Standby Power

<1 W

Audio

Frequency response: 20Hz–15kHz, +1/–3dB (ampl.)

Stereo output with 2 x 15W RMS

Two sets of 2" and 5" speakers.

Speaker Type

51-mm (2 in.) tweeters and 127-mm (5 in.) woofers

Video/Audio Terminals**INPUT-AV 1**

VIDEO (composite): 1 Vp-p, 75 ohms

AUDIO: 500 mVrms, 30 kohm

COMPONENT VIDEO INPUTS (YPbPr)

Y INPUT: 1.0Vp-p (includes sync), 75 ohms

Pb INPUT: 700mVp-p, 75 ohms

Pr INPUT: 700mVp-p, 75 ohms

(The Pb INPUT jack can also receive signals from outputs labeled Cb or B-Y. The Pr INPUT jack can also receive signals from outputs labeled Cr or R-Y.)

S-VIDEO INPUT (INPUT-AV 1, INPUT-AV2, side panel)

Y-INPUT: 1 Vp-p (includes sync), 75 ohms

C-INPUT: 300 mVp-p, 75 ohms

INPUT-AV 2

VIDEO (composite): 1 Vp-p, 75 ohms

AUDIO: 500 mVrms, 30 kohm

HD INPUT-AV 4

Component Video YPrPb/RGB (See page 59.)

AUDIO: 500 mVrms, 30 kohm

HD INPUT-AV 5

Digital video interface (DVI) (See page 59.)

AUDIO: 500 mVrms, 30 kohm

CENTER CHANNEL INPUT**VIDEO/AUDIO OUTPUT**

VIDEO: 1 Vpp, 75 ohms

AUDIO: Fixed: 500 mVrms into > 10 kohm

Variable: 0–2 Vrms into > 10 kohm

SUBWOOFER OUTPUT**Side Panel (AV3)**

VIDEO (composite): 1 Vp-p, 75 ohms

AUDIO: 500 mVrms, 30 kohm

HEADPHONE: 1.5 Vrms, 16 ohm

Picture Visible Area

55PW9383: 55 in.

60PP9383: 60 in.

Dimensions (W" x H" x D")

55PW9383: 52.6 x 57 x 25.6

60PW9383: 56.7 x 59.4 x 27

Weight (does not include carton)

55PW9383: 190 lb

60PW9383: 210 lb

Supplied Accessories


Remote control with two size "AA" batteries.

Design and specifications are subject to change without notice.

SETTING COLOR SPACE FOR HD INPUT-AV 4

Color space refers to how colors are defined and appear on your TV. Your TV's default color-space setting for HD INPUT-AV 4 is YPbPr. RGB is also an option. If the picture's color looks grossly incorrect, try changing the color-space setting on either the digital equipment or the TV. For more information on setting the color space on the digital equipment, see its directions-for-use manual. To set the TV's color space, follow the steps below.

- 1** Press the **AV** button on the remote control as many times as necessary to select AV4.
 - 2** Press the **MENU/SELECT** button. The on-screen menu appears.
 - 3** Press the **CURSOR RING DOWN** until **INSTALL** is highlighted. Then press the **CURSOR RING LEFT** or **RIGHT** to enter the **INSTALL** sub-menu.
 - 4** Press the **CURSOR RING DOWN** repeatedly until **AV4** is highlighted. The current color space is shown (either YPbPr or RGB).
- If you want to change the setting, press the **CURSOR RING LEFT** or **RIGHT**.
- 5** Press the **STATUS/EXIT** button to exit the menu.

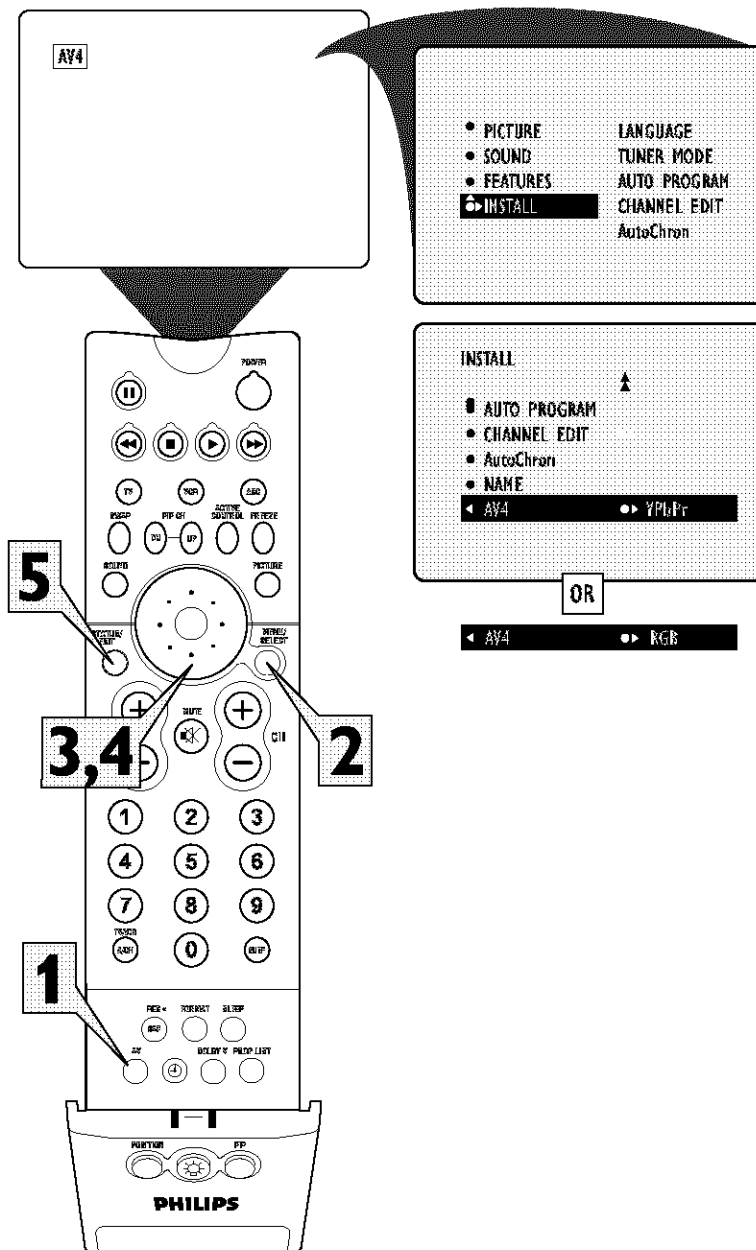



WARNING Concerning Stationary Images on the TV Screen:

Do not leave picture border bars or stationary images on screen for extended periods of time. This can cause uneven picture-tube aging.

Normal use of the TV should involve the showing of pictures that contain constantly moving and changing images that fill the screen. Be careful not to leave nonmoving images on screen for extended periods of time, or to display the same images on screen too frequently, because subtle ghost images can be left on the picture tubes. Avoid showing pictures with border bars or the same stationary images more than 15 percent of your total viewing in any one week. Sources of stationary images may be broadcast channels, cable channels, satellite channels, digital television boxes, DVD discs, laser discs, video games, CD-i discs, videotapes, and others. **Here are some examples of stationary images (this is not an all-inclusive list; you may encounter others in your viewing):**

- **Border bars**—solid bars shown when viewing a standard (4:3) picture and some widescreen movies on your widescreen (16:9) TV
- **DVD menus**—listings of DVD disc content
- **Video-game images and scoreboards**
- **Television station logos**—present a problem if they are bright and stationary; moving or low-contrast graphics are less likely to cause uneven aging of the picture tube
- **Stock-market tickers**—presented at the bottom of the TV screen
- **Shopping channel logos and pricing displays**—bright and shown constantly or repeatedly in the same location on the TV screen.

All picture tubes age with use, with their light output diminishing over time. But by maintaining normal use—mixing television picture types—you will create conditions in the tubes age at an even rate. The result will be a TV picture that is evenly bright over the entire screen.

PLACEMENT OF THE TV

- To avoid cabinet warping, cabinet color changes, and increased chance of set failure, do not place the TV where temperatures can become excessively hot; for example, in direct sunlight or near a heating appliance.
- Be sure to allow a free flow of air to and from the perforated back cover of the set.

CLEANING

- To avoid possible shock hazard, be sure the TV is unplugged from the electrical outlet before cleaning.
- Regularly dust the TV with a dry, nonscratching duster to keep the TV clean.
- When cleaning the TV, take care not to scratch or damage the screen surface. Avoid wearing jewelry or using anything abrasive. Do not use household cleaners. Wipe the front screen with a clean cloth dampened with water. Use even, easy, vertical strokes when cleaning.
Specially designed screen-cleaning kits are also available. These kits contain anti-static cleaners and cloths designed to get into the ridges of the TV screen. Purchase the kits at stores that sell electronics. Or call our Customer Care Center at 1-800-531-0039.
- Gently wipe the cabinet surfaces with a clean cloth or sponge dampened in a solution of cool, clear water and a mild soap or detergent. Use a clean, dry cloth to dry the wiped surfaces.
- Occasionally vacuum the ventilation holes or slots in the back cover of the set.
- Never use thinners, insecticide sprays, or other chemicals on or near the cabinet, as they might cause permanent marring of the cabinet finish.

TROUBLESHOOTING



Check This List of Symptoms and Possible Solutions Before Requesting Service

You may be able to solve the problem yourself. Charges for TV installation and adjustment of customer controls are not covered under your warranty.

If you need to call a customer service representative, please know the model number and serial number of your product before you call. This information is displayed on the back of the product. Also, please take a moment to identify the problem you are having, and be prepared to explain this to the representative. If you believe the representative will need to help you with operations, please stay near the product. Our representative will be happy to assist you. To reach our Customer Care Center, call 1-800-531-0039.

Difficulties and Possible Solutions (*Q refers to the Quick Use and Setup Guide that came with your TV.)

The TV remote control does not work

- Check that the batteries are installed correctly. See page Q-2*.
- If the batteries are dead, replace them with two “AA” size heavy duty (zinc chloride) or alkaline batteries. See page *Q-2.
- Be no farther than 30 feet from the TV when using the remote control and point the remote toward the remote-sensor window on the TV. See page *Q-2 for the location of the remote-sensor window.
- Clean the remote control and the remote-sensor window on the TV. See page *Q-2 for the location of the remote-sensor window.
- Check the TV power cord. Unplug the TV, wait 10 seconds, then reinsert the plug into the outlet and push the remote power or TV power/standby button again. To locate the TV power/standby button, see page *Q-2.
- If you have your TV plugged into an AC power strip, ensure that the fuse on the power strip is not blown.
- Check to see if the TV is on a wall switch.

The TV has no power

- Check the TV’s power cord. Unplug the TV, wait 10 seconds, then reinsert the plug into the outlet and push the remote-control power or TV power/standby button again. The location of the TV power/standby button is illustrated on page *Q-2.
- Check that the outlet is not on a wall switch.
- If you are using an AC power strip, be sure the fuse on the power strip is not blown.

You cannot get a picture

- Be sure that you have made signal connections correctly and securely. See pages *Q-1, *Q-2, 6–9, and 12–16.
- Check the Tuner Mode control for the correct tuner setting. See page *Q-5.
- Try running the Auto Program feature. See page *Q-5.
- Ensure that you have selected the correct picture signal source using the AV (remote) or Source Select (TV) buttons. See page 24.
- If you are attempting to view a picture from a progressive-scan-capable DVD player to the HD inputs, ensure that you have switched the DVD player to progressive-scan mode. See page 14, as well as the DVD player’s directions-for-use manual.
- If you are using an HD receiver, ensure that its output is set correctly (HD or SD) based on the connection to the TV you have made. See 15. Also, refer to the directions-for-use manual that came with the HD receiver.

Picture is fuzzy or out of focus

Check the set’s convergence and adjust if necessary. See page *Q-7 and pages 33–34.

You cannot see a picture when you play a VCR tape

Press the AV button on the remote control or the Source Select button on the TV until you have selected the source to which you connected the VCR. See page 24 (AV button) or page *Q-2 (Source Select button).

You cannot tune to a particular channel

- Use the number buttons on the remote instead of the CH +/- buttons. See page *Q-3 (remote-control buttons).
- If necessary, select the Tuner Mode and run Auto Program to store channels to the set’s memory. See page *Q-5.

You see scrolling images

Check to ensure that you have made connections correctly. See pages *Q-1, *Q-2, 6–9 and 12–16.

The list of difficulties and possible solutions continues on the next page.



Difficulties and Possible Solutions (*Q refers to the Quick Use and Setup Guide that came with your TV.)

The picture has no color or colors are not correct

- Check to ensure that you have made connections correctly. *See pages *Q-1, *Q-2, 6–9, and 12–16.*
- If you have connected digital equipment to the HD inputs, check/change the color-space setting on the equipment or TV. *See page 61.*
- If the picture has red or blue fringes, you may need to adjust the convergence. *See page *Q-7 or pages 33–34.*

You are not able to get sound

- Check the Volume buttons on the remote control or on the TV. *See pages *Q-2 (TV buttons) and *Q-3 (remote-control buttons).*
- Check the Mute button on the remote. *See page *Q-3 for the location of the Mute button.*
- Check the Audio Out and Speaker controls. *See page 10.*
- If you have connected auxiliary sound equipment, check to ensure that you have made the audio connections correctly. *See pages 6–17. (If you have connected an external audio hi-fi system or amplifier, see pages 10 and 11 to ensure that you have made the connections and set the AUDIO OUT control correctly.)*

TV displays wrong channel or no channels above 13

- Try selecting the channel again.
- Add the desired channel numbers into the TV using the Channel Edit control. *See page *Q-5.*
- Check to ensure that the Tuner Mode is properly set and run Auto Program. *See page *Q-5.*

GLOSSARY OF TELEVISION TERMS



Active Control™ • Proactive video-control system for NTSC (see definition below) sources. Active Control™ continuously measures and corrects the incoming signals to provide the best picture possible.

Alternate Channel • The feature that allows you to toggle between the last two channels viewed by pressing the A/CH button on the remote control.

Audio/Video Inputs • Jacks (standard RCA), located on the rear of the TV, used for the input of audio and video signals. These jacks are designed for use with VCRs (or other accessories) to receive higher picture resolution and offer sound-connection options.

Auto Program • The feature that, when activated, scans for all available channels from regular antenna or cable signals and stores only active broadcast stations in the TV's memory.

Channel Edit • The feature that allows you to add or delete channels from the list of channels stored in the TV's memory. Channel Edit makes it easy to limit or expand the number of channels that are available to you when you press the CH +/- buttons on your remote control.

Closed Captioning • The broadcast standard feature that allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, Closed Captioning uses on-screen text boxes to show dialogue and conversations while a TV program is in progress.

Coaxial Cable • A single solid wire normally matched with a metal plug (F-type) end connector that screws (or pushes) directly onto a 75-ohm input found on the television or VCR.

Comb Filter • TV filter that removes distortion, resulting in a sharper and purer color display. The comb filter addresses the annoying cross-color distortion that may occur in TV broadcasts when, for example, the presenter wears a striped or checked jacket.

Component Video Inputs • Inputs that allow the separate reception of blue, red, and luminance signals. These inputs provide the highest possible color and picture resolution in the playback of digital signal-source material, such as the kind available from DVD players. Component video inputs allow for improved bandwidth information not possible through composite video or S-Video connections.

Composite Video Input • An input in which all the components required for displaying the on-screen image are combined in one signal.

Convergence • The technique used in color TV for bringing the red, green, and blue color beams together so that they hit the same part of the picture tube screen at the same time. This avoids color fringes around images in the picture.

High-definition Television (HDTV) • High-resolution digital television. HDTV is high-resolution digital television. It has lifelike pictures, and with it films retain their original width, enhancing the home theater experience.

Incredible Surround™ • False acoustic management of the audio signal that produces a dramatic expansion of the wall of sound that surrounds the listener and heightens overall viewing pleasure.

Interlaced • A picture-scanning technique that improves the appearance of on-screen motion. It also helps smooth jagged lines that are sometimes seen on curved and angled surfaces in the picture.

Menu • An on-screen list of feature controls available for the user to adjust or set.

NTSC • National Television Standards Committee format devised in the 1940s for TV broadcast analog video signals (525 lines; 30 Hz).

On-screen Displays (OSD) • The wording or messages generated by the television (or VCR) to help you with specific feature controls (color adjustment or programming, for example).

Picture-in-Picture • The showing of two pictures on the TV screen at the same time (one main screen picture and one small picture, or PIP).

Progressive Scan • A picture-scanning technique that doubles the number of picture lines, eliminating the flicker and providing a jitter-free picture.

PTV • Projection Television. (Rear- and/or front-projection design systems are available.)

Remote-control Sensor Window • The window or opening found on the television control panel through which infrared remote-control command signals are received.

RGB • Red, green, and blue signal. These are the primary colors of light that are used to produce a picture in television. By mixing levels of R, G, and B, all colors (chrominance and luminance) are reproduced.

RF • Radio Frequency or modulated signal design used as the carrier for television broadcasts.

Second Audio Program (SAP) • An additional audio channel provided for in the Multichannel Television Sound (MTS) broadcast standard. A monaural soundtrack included within the recorded or video signal (usually containing a second language translation for the displayed programming).

Status/Exit Button • Remote-control button that, when pressed, shows the current channel number, name (if set), time (if set), Sleep Timer setting, and sound setting (stereo, mono, SAP, or mute). Pressing the button twice shows the current AutoLock™ settings. Pressing the button once when an on-screen display is showing removes the on-screen display. You can use Status/Exit rather than having to wait for the displays to "time out," or automatically disappear from the screen.

S-Video Input • Signal input that allows direct connection of high-resolution video sources, such as a satellite receiver, DVD player, S (Super)-VHS videocassette recorder, or video games. Provides improved picture resolution, sharpness, and clarity.

480p • Digital picture format with 704 x 480 pixels, sent at 60 complete frames per second. This is the output format of progressive-scan DVD players.

1080i • Digital high-definition picture format with 1920 x 1080 pixels, sent at 60 interlaced frames per second (30 complete frames per second).

Tint • TV function that allows you to change the general color balance between cool and warm. Adjust tint according to your personal preference.

Twin-lead Wire • The more commonly used name for the two-strand, 300-ohm antenna wire used with many indoor and outdoor antenna systems. In many cases, this type of antenna wire requires an additional adapter (or balun) in order to connect to the 75-ohm input terminals designed into the more recent TVs and VCRs.

**A**

Active Control™, 58, 65
 Alternate Channel (A/CH), 28, 65
 APAC™, 5
 Audio Out Control, 10
 Audio/Video Inputs (Definition), 65
 AutoChron™ Control, *Q-6
 Auto IntelliSense™, *Q-7
 AutoLock™ Control
 Access code, 47
 Blocking channels, 48
 Movie ratings, 49
 No rating broadcasts, 53
 On/off control, 51
 Settings review, 54
 Setup Code, 47
 TV ratings, 50
 Understanding AutoLock™, 46
 Unrated broadcasts, 52
 AutoPicture™, 26
 Auto Program, *Q-5, 65
 AutoSound™, 25
 AutoSurf™, 27
 AV Button, 24
 AVL Control, 36

B

Balance Control, 35
 Bass Boost Control, 40
 Bass Control, 35
 Brightness Control, 30
 Buttons (TV), *Q-2
 Buttons (Remote), *Q-3

C

Cables/connectors, *Q-1
 Channel Edit Control, *Q-5, 65
 Cleaning (TV/Screen), 62
 Clock (See Timer Control)
 Closed Captioning Control, 55, 65
 Coaxial Cable (Definition), 65
 Color Control, 30
 Color-space Control, 61
 Color Temp Control, 30
 Component Video Inputs (Definition), 65
 Composite Video Input (Definition), 65
 Connections
 Amplifier, 11
 Antenna/cable, *Q-1
 Basic, *Q-1, *Q-2
 Cable converter box, *Q-2
 Camcorder, 16
 Compatibility, 6, 7, 59
 DVD player, 12, 14
 HD receiver, 15
 Headphone, 17

Hi-fi system, 10
 Satellite receiver (standard), 6, 12, 13
 S-Video device, 13
 VCR, 8
 VCR and cable box, 9
 Convergence Controls
 Red/blue, 33
 Restore factory, 34
 Multipoint red/blue, 34
 Save multipoint settings, 34
 Undo multipoint, 34

D

Digital video interface (DVI), 7, 59
 Dolby® Virtual Control, 37
 Dynamic Contrast Control, 32

E

Eye Fidelity Control, 31

F

Factory Service Locations, 67–68

G

Glossary, 65

H

Headphone Control, 17
 High-definition Television (Definition), 65

I

Incredible Surround™ Control, 37, 65
 Inputs (See Panel Jacks)

L

Language Control
 (See Menu Language Control)

M

Menu, *Q-4, 65
 Menu Language Control, *Q-4
 Movie Ratings, 46, 49
 MPAA, 46, 65
 Mute Button, *Q-3, 17, 55

N

Name Control, *Q-7
 NTSC, 65

O

On-screen Displays (Definition), 65

P

Panel Jacks (Overviews), 6, 7
 Picture Button (See AutoPicture™)
 Picture Control, 30
 Picture-format Control, 56–57
 PIP (Picture-in-Picture)

Definition, 65
 Feature description, 5
 Remote-control buttons, *Q-3, *Q-8
 Tint control, *Q-8
 Tuning channels, *Q-5
 Program List, *Q-3, 28

R

Registration/Welcome, 2
 Remote Control
 Battery installation/caution, *Q-2
 Button descriptions, *Q-3
 Programming, 18–23
 Sensor Window, *Q-2, 65
 Usage, *Q-2, *Q-3, *Q-4
 RF (Definition), 65
 RGB Color Space Setting (See Color Space Control)

S

Safety/Precautions, *Q-2, 2, 3
 SAP, 39, 65
 Sharpness Control, 30
 Sleep Timer Control, 29
 Source Select Button, *Q-2, 24
 Specifications, 60
 Stationary Images/Warning, 62
 Status/Exit Button, *Q-3, 65
 Stereo/Mono Control, 38
 Surf Button (See AutoSurf™)
 Surround-sound Modes, 37
 S-Video, *Q-1, 6, 13

T

Timer Control,
 Activate, 45
 Channel, 44
 Clock, 41
 Start time, 43
 Stop time, 43
 Time display, 42
 Tint Control, 30, 65
 Treble Control, 35
 Troubleshooting, 63–64
 Tuner Mode, *Q-5
 Twin-lead Wire (Definition), 65

V

Volume Control, *Q-2, *Q-3

W

Warranty, 72

Y


YPbPr Color Space Setting (See Color Space Control)

*Q refers to the *Quick Use and Setup Guide* that came with your TV.

**Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.



FACTORY SERVICE LOCATIONS

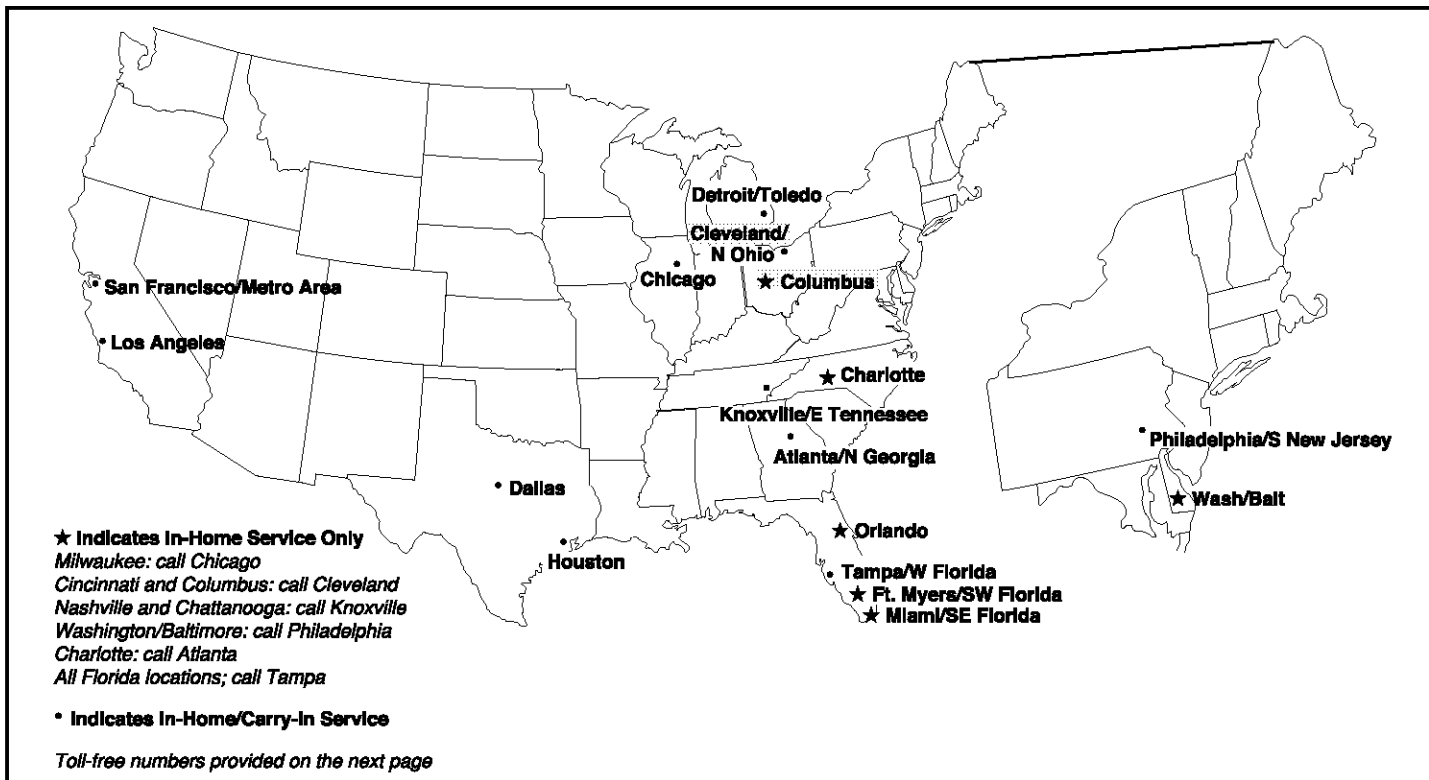

NOTE: If you reside in one of our Philips Factory Service Branch areas (see directory on back), you can contact the nearest Service Branch to obtain efficient and expedient repair for your product. If your product is In-Warranty, you should have proof-of-purchase to ensure No Charge Service. For Out-of-Warranty service, call the location nearest you.

NOTA: Si vous résidez dans une des régions desservies par une succursale de service après vente du fabricant Philips (voir liste ci-dessous), vous pourrez contacter la branche de service après vente la plus près de chez vous pour obtenir un service après vente rapide et efficace. Si le produit est sous garantie, il suffira de présenter une preuve d'achat pour bénéficier d'un service sans frais. Pour les produits non couverts par la garantie, contactez le centre le plus près de chez vous.

NOTA: Si Ud. reside en una de nuestras zonas para sucursales Philips de servicio al de fábrica (ver directorio más abajo), Ud. puede comunicarse con la sucursal de servicio más cercana para obtener una reparación oportuna y eficaz de su producto. Si su producto está todavía bajo garantía, Ud. debe presentar comprobante de compra para no ocasionar ningunos cargos por servicio. Para servicio después del vencimiento de la garantía, llame al lugar más cercano de los abajo indicados.

In Canada

How you can obtain efficient and expedient carry-in, mail-in, or in-home service for your product

Please contact Philips at

1-800-661-6162 (French speaking)

1-800-531-0039 (English or Spanish speaking)

Au Canada

Comment obtenir le service après-vente pour les produits apportés ou envoyés par la poste à notre centre de service ou le service à domicile

Veillez contacter philips à:

1-800-661-6162 (Francophone)

1-800-531-0039 (Anglais ou Espagnol)

En el Canadá

Cómo recibir servicio eficiente para su producto, en persona, por correo o a domicilio

Favor de comunicarse con Philips al:

1-800-661-6162 (francófono)

1-800-531-0039 (Inglés o Español))



FACTORY SERVICE LOCATIONS

QUALITY SERVICE IS AS CLOSE AS YOUR TELEPHONE! SIMPLY LOOK OVER THE LIST BELOW FOR THE NUMBER OF A FACTORY SERVICE CENTER NEAR YOU. YOUR PRODUCT WILL RECEIVE EFFICIENT AND EXPEDIENT CARRY-IN, MAIL-IN, OR IN-HOME SERVICE, AND YOU WILL RECEIVE PEACE OF MIND, KNOWING YOUR PRODUCT IS BEING GIVEN THE EXPERT ATTENTION OF PHILIPS' FACTORY SERVICE.

COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SOIT PAR COURRIER, À DOMICILE, OU EN SE PRÉSENTANT À UN CENTRE DE SERVICE PHILIPS. PLUS DE 600 CENTRES DE RÉCEPTION DE PRODUITS À RÉPARER À TRAVERS LE PAYS: CONTACTER LE CENTRE DE SERVICE AUX CONSOMMATEURS LE PLUS PROCHE POUR SAVOIR L'EMPLACEMENT DE CES DÉPÔTS DANS UN RAYON DE 50 À 75 MILES (80 KM À 120 KM) DU CENTRE DE SERVICE LOCAL.

CÓMO OBTENER UN SERVICIO OPORTUNO Y EFICIENTE POR CORREO, EN CASA O EN PERSONA PARA SU PRODUCTO A TRAVÉS DE UN CENTRO PHILIPS DE SERVICIO. MAS DE 600 SITIOS POR TODO EL PAIS PARA LA RECEPCION DE PRODUCTOS NECESITADOS DE REPARACIONES: COMUNICARSE CON EL CENTRO DE SERVICIO DE FABRICA MAS CERCANO PARA ESTOS LUGARES DENTRO DE UN RADIO DE 80 A 120 KM (50 A 75 MILLAS) DEL CENTRO DE SERVICIO LOCAL.

ATLANTA

Philips Factory Service
550 Franklin Road., Suite F
Marietta, GA 30067
800-273-1501

TAMPA

Philips Factory Service
1911 US Highway 301 North, Suite 100
Tampa, FL 33619
800-442-2027

SAN FRANCISCO

Philips Factory Service
681 East Brokaw Rd.
San Jose, CA 95112
800-300-9013

HOUSTON

Philips Factory Service
1110 N. Post Oak Rd., Suite 100
Houston, TX 77055
800-952-3254

CLEVELAND

Philips Factory Service
950 Keynote Circle
Brooklyn Heights, OH 44131
800-331-7037

DETROIT

Philips Factory Service
25173 Dequindre
Madison Heights, MI 48071
800-438-1398

DALLAS

Philips Factory Service
415 N. Main Street, #107
Euless, TX 76040
800-952-3254

LOS ANGELES

Philips Factory Service
20930 Bonita, Ste. V
Carson, CA 90746
800-300-9013

CHICAGO

Philips Factory Service
1279 W. Hamilton Pkwy.
Itasca, IL 60143
800-531-2922

KNOXVILLE

Philips Factory Service
One Philips Drive
Knoxville, TN 37914
800-821-1767

PHILADELPHIA

Philips Factory Service
352 Dunks Ferry Rd.
Bensalem, PA 19020
800-847-9320

This page is intentionally left blank.

This page is intentionally left blank.



LIMITED WARRANTY

PROJECTION TELEVISION

One Year Free Labor

One Year Free Service on Parts

Two Years Free Service on Cathode Ray Tube Parts / 30 days Free Service on Projection TV Screen

This product can be repaired in-home.

WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For one year thereafter (30 days for the projection TV screen), all parts will be repaired or replaced, and labor and transportation are free. From one to two years from the day of purchase, you pay for the replacement or repair of all parts except the cathode ray tube and the "Clear-Vu" lens, and for all labor and transportation charges. After two years from the day of purchase, you pay for the replacement or repair of all parts except the "Clear-Vu" lens (which is guaranteed against manufacturer's defects for the life of the product), and for all labor and transportation charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes.

WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

TO GET WARRANTY SERVICE...

Repair must be performed by an authorized service center or a factory service center. If you do not live near a factory service center, contact your dealer. If your dealer is an authorized service center, he will arrange repair. If your dealer is not an authorized service center, he will direct you to the authorized service center engaged by him to service the products he sells.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

IF YOU HAVE QUESTIONS...

Please contact Philips at:

1-800-531-0039, if calling from the USA (English or Spanish Speaking)

1-800-661-6162, if calling from Canada (French Speaking)

1-800-531-0039, if calling from Canada (English or Spanish Speaking).

REMEMBER...

Please record below the model and serial numbers found on the product. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # _____

SERIAL # _____

Quick Use and Setup Guide

Rear-projection
HDTV Monitor

Let's make things better.

PHILIPS

CONTENTS

Important Notice/Warning	1
Making Basic TV Connections	1-2
Operating the Television and Remote Control	2-4
Using the Installation Features	4-7
Using Auto IntelliSense™ to Adjust Picture Convergence	7
Using the Picture-in-Picture (PIP) Feature	8

As an Energy Star® Partner, Philips Consumer Electronics has determined this product meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark. Using products with the Energy Star® label can save energy. Saving energy reduces air pollution and lowers utility bills.

IMPORTANT

This owner's manual is used with several different television models. Not all features (and drawings) discussed in this manual will necessarily match those found with your television set. This is normal and does not require that you contact your dealer or request service.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR EXCESSIVE MOISTURE.

MAKING BASIC TV CONNECTIONS

BEST VIEWING

The major benefit of this projection television is its large viewing screen. To see this large screen at its best, test various locations in the room to find the optimal spot for viewing.

NOTE: Be sure to allow a free flow of air to and from the perforated back cover of the set.

To avoid cabinet warping, cabinet color changes, and increased chance of set failure, do not place the TV where temperatures can become excessively hot—for example, in direct sunlight or near a heating appliance.

 
Magnetic fields, such as those of external speakers, may cause the picture to distort if the speakers are placed too close to the television. Move the magnetic field source away from the TV until there is no picture distortion.

CABLES AND CONNECTORS


If you are new to making TV hookups, you may want to read this section. (The cables and connectors discussed are not supplied with your set. You can buy them at most stores that sell audio or video products. Or call our Customer Care Center at 1-800-531-0039.)

This publication provides you with examples of basic connections. See pages 6-17 in the Directions for Use manual for more information on connections, along with connection examples.


A 75-ohm **coaxial cable** connects signals from an antenna or a cable TV company to the antenna jack on the back of the TV. Coaxial cables use "F" connectors.

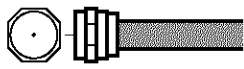

 
A **two-way signal splitter** enables you to take a single antenna or cable TV signal and supply it to two different inputs.

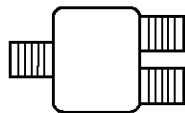

A **300- to 75-ohm twin-lead adapter** accepts the antenna cables (called twin-lead wires) from an antenna, allowing you to connect the antenna signal to the TV.

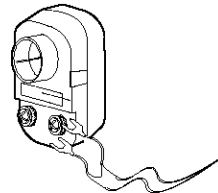


Video and audio cables with standard RCA (phono) connectors connect the video and audio jacks of accessory devices such as VCRs and DVD players to the jacks on the TV.

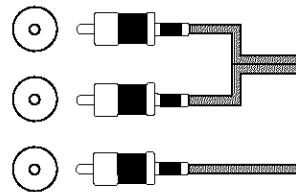

To simplify making connections, the connectors are usually color coded. The jacks on your TV are likewise color coded to match the colors of the connectors. The coding is as follows: yellow for video (composite) and red and white for the right

and left audio channels, respectively. Use an audio cable with a white connector when making mono, or nonstereo, connections. The connectors of video cables used to connect component video or RGB (high-resolution) jacks are often color coded red, green, and blue. Component video connections provide you with the highest possible color and picture resolution.

 An **S-Video cable** connects devices such as DVD players, VCRs, or camcorders to your TV. S-Video provides better picture performance than regular (composite) video connections. S-Video cables can be used only with S-Video-compatible accessory devices. You must also connect the left and right audio cables along with S-Video because the S-Video jack carries only the picture signal, not the sound.

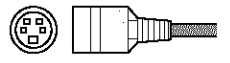

ANTENNA OR CABLE TV

This section shows you how to make a basic TV connection using a cable TV or antenna signal.


If you have cable TV service, you'll simply connect the coaxial cable lead-in from the cable TV company to your TV. If you intend to connect a VHF/UHF antenna, you may need a 300- to 75-ohm adapter, which is not supplied with your TV.

NOTE: You should be able to buy optional accessories such as a VHF/UHF antenna or a 300- to 75-ohm adapter at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.

1 Connect the Cable TV or antenna signal to the **ANTENNA IN 75Ω** jack on the rear of the TV.

NOTE: If you are using an antenna with a round coaxial cable (75Ω), then you are ready to connect to the back of the TV. If your antenna has a flat, twin-lead wire (300Ω), you must first attach the antenna wires on a 300- to 75-ohm adapter. Then push the round end of the adapter onto the ANTENNA IN 75Ω jack on the rear of the TV.

2 Insert the TV's power plug into the wall power outlet.

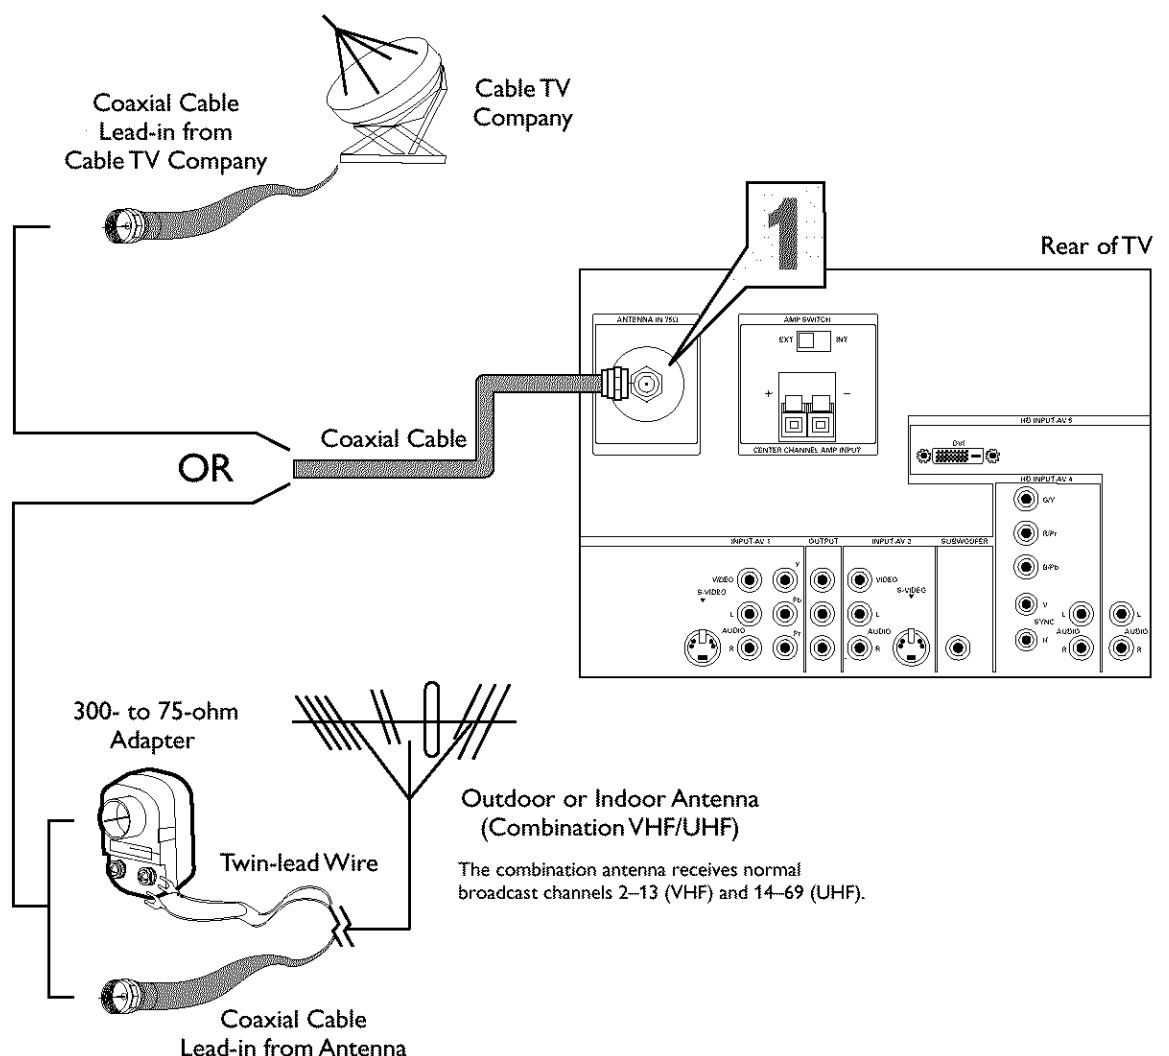

MAKING BASIC TV CONNECTIONS (CONTINUED)




CABLE CONVERTER BOXES

Follow the steps below to connect a cable converter box to your TV.

To make the connections in this example, you will need one coaxial cable (75Ω).

NOTE: The coaxial cable is not supplied with your TV. You should be able to buy one at most stores that sell electronics. Or you can call our Customer Care Center at 1-800-531-0039.

- 1 Connect your cable TV signal to the INPUT jack on the back of the cable converter box.
- 2 Connect a coaxial cable from the OUTPUT jack on the back of the cable converter box to the ANTENNA IN 75Ω jack on the rear of the TV.
- 3 Insert the TV's power plug into the wall socket.

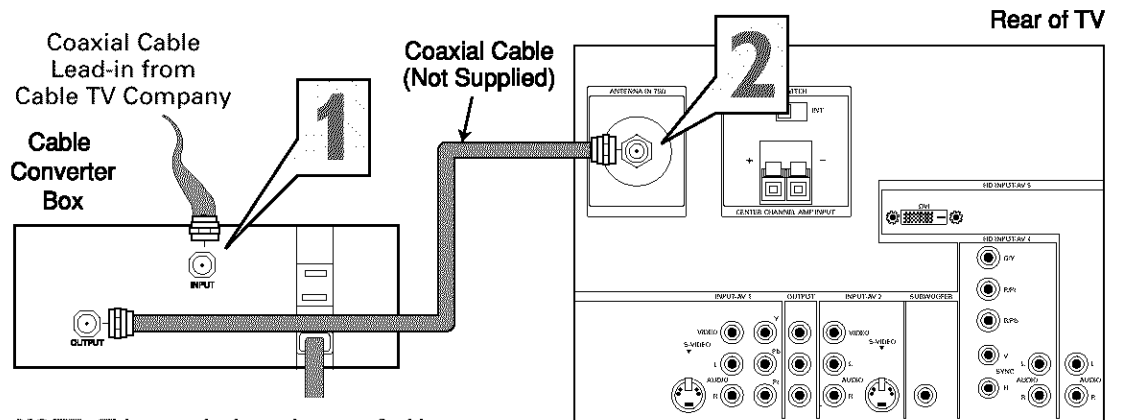

NOTE: This example shows the type of cable converter box most commonly used. The RF outputs on cable converter boxes, usually labeled "OUTPUT" or "TO TV," will not pass a stereo sound signal to the TV. If, however, your cable converter box has separate Audio/Video outputs, using A/V cables to connect to those outputs and to the A/V inputs on the TV might pass a stereo sound signal to the TV. Contact your cable TV company for more information.

OPERATING THE TELEVISION AND REMOTE CONTROL




TELEVISION

USING THE TV BUTTONS

Should your remote control be lost or broken, you can still change some of the basic picture and sound settings with the buttons on the TV. Follow the steps below to familiarize yourself with the functions of the TV buttons.

- 1 Press **POWER/STANDBY** to turn the TV on (or off). Allow about 10 seconds for the TV to power on.
- 2 Press the **VOLUME +** or **-** buttons to decrease or increase the sound level.
Press the **VOLUME +** and **-** buttons simultaneously to display the on-screen menu. After the menu appears, use these buttons to enter submenus and make selections or adjustments. (Use the **CHANNEL** buttons to move up and down in the menu or submenus.) Press both **VOLUME** buttons simultaneously to back out of the on-screen menus.
- 3 Press **SOURCE SELECT** to choose from among the signal inputs you have connected to the TV.
- 4 Press the **CHANNEL** buttons to select TV channels.

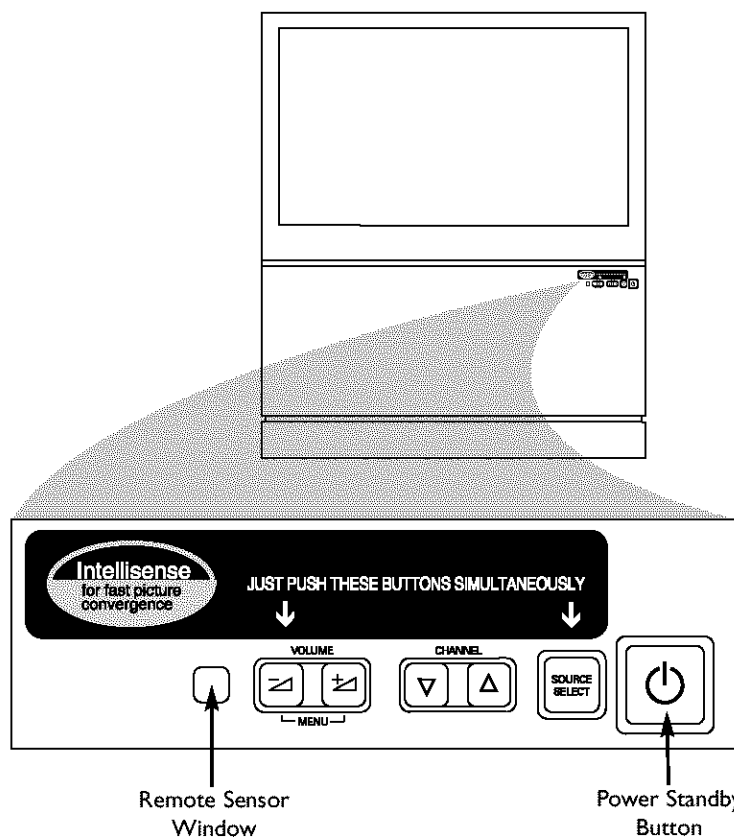

HELPFUL HINTS

- You can press any of the buttons on the front of the TV to turn the TV on, but you must press the Power/Standby button to turn the set off.
- As shown in the illustration below, pressing the **VOLUME -** and **SOURCE SELECT** buttons simultaneously activates Auto IntelliSense™. This feature automatically adjusts the picture's convergence (color alignment) if the picture appears fuzzy. For more on Auto IntelliSense™, see page 7.

Auto IntelliSense is a trademark of Philips Consumer Electronics Company. Copyright 2002 Philips Consumer Electronics.



REMOTE CONTROL


INSTALLING BATTERIES

To load the supplied batteries into the remote, follow these steps.

- 1 Gently press and hold the indentation on the back of the remote and slide the battery cover off the remote.
- 2 Place the two "AA" size batteries in the remote's battery case. Ensure that the (+) and (-) ends of the batteries line up correctly with the (+) and (-) inside the case.
- 3 Slide the battery cover back into place.

POINTING THE REMOTE

Press the **TV mode button** on the remote to ensure that the remote sends its commands to the TV. When operating the remote control, point the remote toward the remote sensor window on the TV.

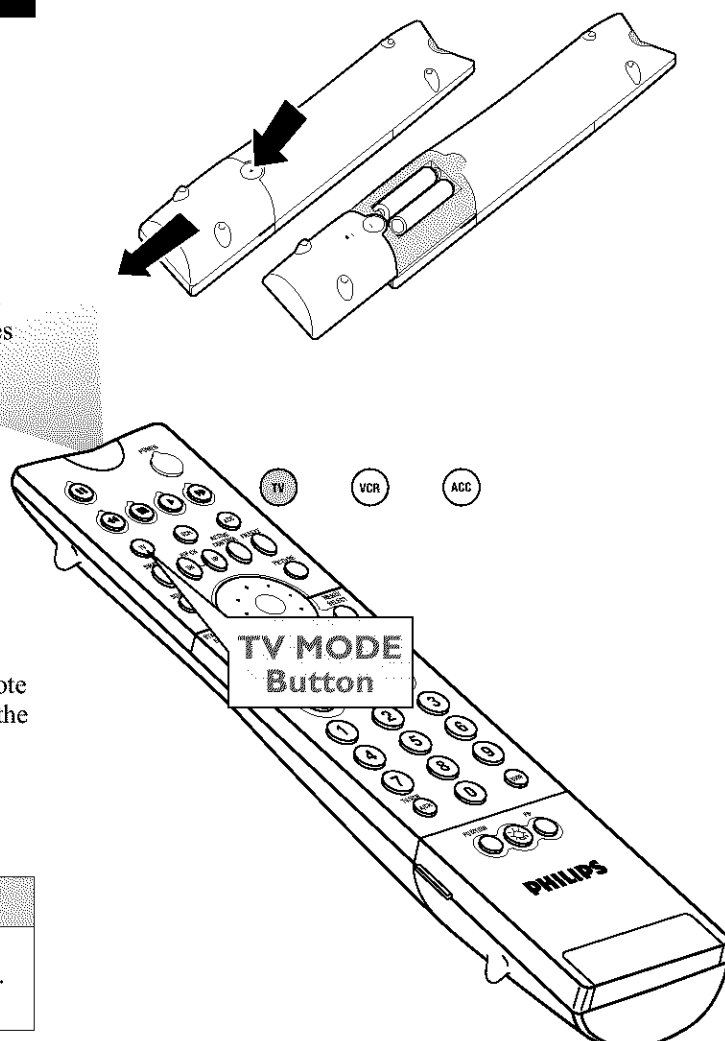

BATTERY USAGE CAUTION

To prevent battery leakage that may result in injury to you or damage to the remote control:

- Install ALL batteries correctly, + and -, as marked on the unit.
- Do not mix batteries (OLD and NEW or CARBON and ALKALINE, etc.)
- Remove batteries when the remote control is not used for a long time.

Do not take apart, heat, or put batteries in fire.

HELPFUL HINTS

- Be sure to point the remote toward the sensor window on the TV or accessory device you wish to operate.
- Press the correct mode button for the device: TV, VCR, ACC (for accessories other than VCRs).
- Be within about 30 feet (10 meters) of the TV or accessory device you are using the remote to operate.
- Avoid dropping the remote on hard surfaces.
- Do not use harsh chemicals to clean the remote. Use only a soft, lightly moistened cloth.

✓ CHECK IT OUT

You can set up your TV remote control to work with accessory devices such as VCRs, DVD players, and cable converter boxes. See pages 18–23 in the *Directions for Use* manual.

OPERATING THE TELEVISION AND REMOTE CONTROL

REMOTE CONTROL

VCR control buttons

Press to pause, rewind, stop, play, or fast forward a videotape.

TV • VCR • ACC (Mode buttons)

Press to send remote signals to either the TV, VCRs, or other accessory devices such as cable TV converters, satellite receivers, DVDs, or laser disc players. (You may need to program the remote to work accessory devices. See pages 18–23 in the *Directions for Use* manual that came with your TV.)

PIP buttons: SWAP, PIP CH DN/UP, FREEZE

Press to operate the Picture-in-Picture (PIP) features. See page 8 in this publication for more information on using these buttons.

Sound

Press to select an AutoSound™ control. (See page 25 in the *Directions for Use* manual.) Choose from three factory-set controls—Voice, Music, and Theatre—and a Personal control that you set according to your own preferences through the on-screen Sound menu. The three factory-set controls will tailor the TV sound to enhance the type of program you are watching.

Status/Exit

Pressing the button once shows the current channel number, name (if set), time (if set), Sleep Timer setting, and sound setting (stereo, mono, SAP, or mute). Pressing the button twice shows the current AutoLock™ settings. Pressing the button once when an on-screen display is showing removes the on-screen display.

Cursor Ring

Up/Down: allows you to select the next or previous menu item in the menu. Left/Right: allows you to access the sub-menus and adjust the settings. When no on-screen displays or menus are present, use the Cursor Ring Left/Right to select a picture format for a video source connected to the ANTENNA, AV1, CVI, AV2, or AV3 (side panel inputs) on the TV.

Volume +/-

Press to adjust the TV sound level.

Number Buttons

Press to select TV channels. When selecting single-digit channels, press the number of the desired channel. The TV will pause for a few seconds and then tune to the selected channel.

TV/VCR

Press while in VCR mode to view the playback of a videotape. Press again to return to TV mode.

A/CH

Press to alternate between the currently viewed channel and the previously viewed channel.

Rec ●

Press this button simultaneously with the ► button when in VCR mode to record.

SAP

Press to select between main sound and SAP (Second Audio Program) when you tune to a program offering SAP. (See page 39 in the *Directions for Use* manual.)

AV

Press repeatedly to select the different signal sources connected to the TV: TV, AV1, CVI, AV2, AV3 (side jack panel), AV4, and AV5. (See page 24 in the *Directions for Use* manual.)

Clock

Press to access the on-screen Timer menu, where you can set the time for the TV's clock or set the TV's Timer features, such as channel switch over, power on set, and power off set. (See page 6 in this publication for setting the time manually. See pages 41–45 in the *Directions for Use* manual for information on using the TV's Timer feature.)

Position


Press to move the PIP picture to any of the four corners of the screen.

Back Light button

Press to light the buttons on the remote control.

PIP

Press to turn PIP (picture-in-picture) on or off or control the size of the PIP window. (See page 8 in this publication for more information on PIP.)

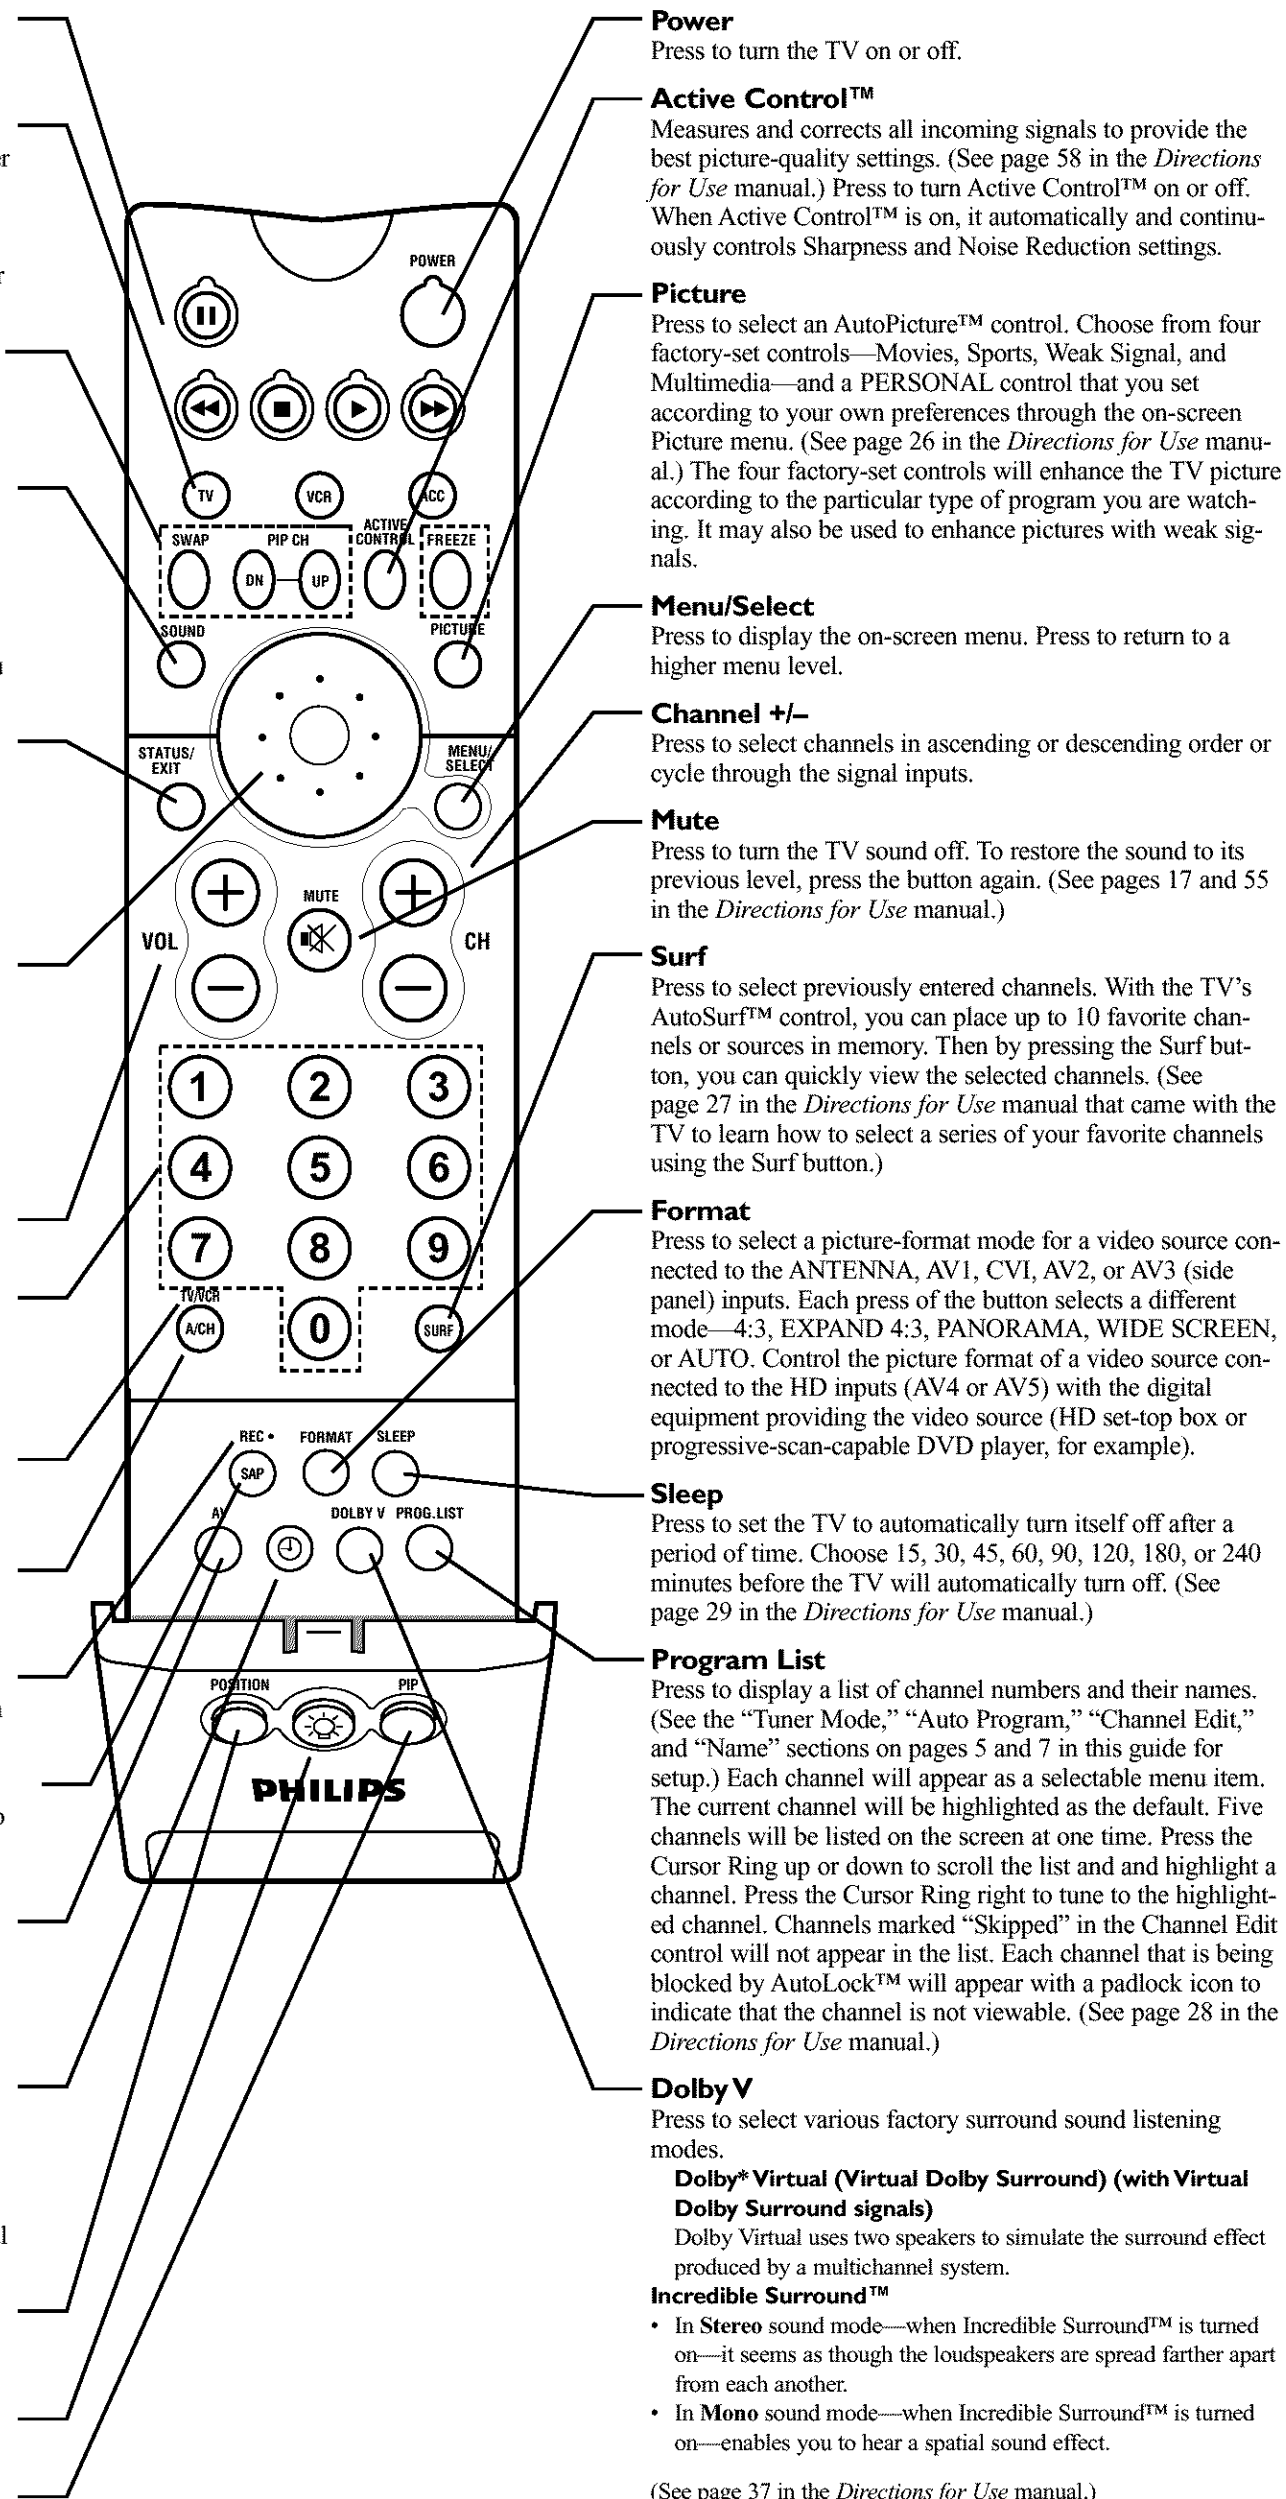

Power

Press to turn the TV on or off.

Active Control™

Measures and corrects all incoming signals to provide the best picture-quality settings. (See page 58 in the *Directions for Use* manual.) Press to turn Active Control™ on or off. When Active Control™ is on, it automatically and continuously controls Sharpness and Noise Reduction settings.

Picture

Press to select an AutoPicture™ control. Choose from four factory-set controls—Movies, Sports, Weak Signal, and Multimedia—and a PERSONAL control that you set according to your own preferences through the on-screen Picture menu. (See page 26 in the *Directions for Use* manual.) The four factory-set controls will enhance the TV picture according to the particular type of program you are watching. It may also be used to enhance pictures with weak signals.

Menu/Select

Press to display the on-screen menu. Press to return to a higher menu level.

Channel +/-

Press to select channels in ascending or descending order or cycle through the signal inputs.

Mute

Press to turn the TV sound off. To restore the sound to its previous level, press the button again. (See pages 17 and 55 in the *Directions for Use* manual.)

Surf

Press to select previously entered channels. With the TV's AutoSurf™ control, you can place up to 10 favorite channels or sources in memory. Then by pressing the Surf button, you can quickly view the selected channels. (See page 27 in the *Directions for Use* manual that came with the TV to learn how to select a series of your favorite channels using the Surf button.)

Format

Press to select a picture-format mode for a video source connected to the ANTENNA, AV1, CVI, AV2, or AV3 (side panel) inputs. Each press of the button selects a different mode—4:3, EXPAND 4:3, PANORAMA, WIDE SCREEN, or AUTO. Control the picture format of a video source connected to the HD inputs (AV4 or AV5) with the digital equipment providing the video source (HD set-top box or progressive-scan-capable DVD player, for example).

Sleep

Press to set the TV to automatically turn itself off after a period of time. Choose 15, 30, 45, 60, 90, 120, 180, or 240 minutes before the TV will automatically turn off. (See page 29 in the *Directions for Use* manual.)

Program List

Press to display a list of channel numbers and their names. (See the "Tuner Mode," "Auto Program," "Channel Edit," and "Name" sections on pages 5 and 7 in this guide for setup.) Each channel will appear as a selectable menu item. The current channel will be highlighted as the default. Five channels will be listed on the screen at one time. Press the Cursor Ring up or down to scroll the list and highlight a channel. Press the Cursor Ring right to tune to the highlighted channel. Channels marked "Skipped" in the Channel Edit control will not appear in the list. Each channel that is being blocked by AutoLock™ will appear with a padlock icon to indicate that the channel is not viewable. (See page 28 in the *Directions for Use* manual.)

Dolby V

Press to select various factory surround sound listening modes.

Dolby* Virtual (Virtual Dolby Surround) (with Virtual Dolby Surround signals)

Dolby Virtual uses two speakers to simulate the surround effect produced by a multichannel system.

Incredible Surround™

- In Stereo sound mode—when Incredible Surround™ is turned on—it seems as though the loudspeakers are spread farther apart from each other.
- In Mono sound mode—when Incredible Surround™ is turned on—enables you to hear a spatial sound effect.

(See page 37 in the *Directions for Use* manual.)

OPERATING THE TELEVISION AND REMOTE CONTROL

REMOTE CONTROL

ADJUSTING OR SETTING MENU OPTIONS

A menu is simply a list of options. You can adjust or set your TV's on-screen menu options by pressing buttons on the remote control. The following steps will familiarize you with how to use the remote control with the on-screen menu.

- 1 Press the TV mode button** to ensure that the remote control is in TV mode.
- 2 Press the MENU/SELECT button** to bring the menu to the screen. Then, as necessary, press the CURSOR RING DOWN or UP to highlight a menu option. Press the CURSOR RING RIGHT to enter the submenu for the option.
- 3 Within the submenu, press the CURSOR RING DOWN or UP** to highlight an option. Based on the submenu you are in, you can press the CURSOR RING RIGHT or LEFT to make an adjustment, select a setting, or enter a list or another submenu. You can return to the submenu from a list by pressing the CURSOR RING LEFT. To go from a submenu to the previous menu, highlight the option at the top of the screen and press the CURSOR RING UP. You can also press MENU/SELECT to return to the previous menu. Press STATUS/EXIT to exit the menu.

HELPFUL HINTS

- If you don't press any remote buttons, the menu will automatically disappear after about 20 seconds. To bring the menu back, press MENU/SELECT.
- Sometimes not all the menu items are visible on the screen. If more items exist in the menu, a cursor arrow will appear. Also, a bullet will appear for each remaining item, up to a maximum of three. This will help you determine how many items are left in the menu. Keep pressing the CURSOR RING DOWN until you display all items.
- Should your remote become lost or otherwise unavailable for use, you can use the buttons on the front of the TV to access the on-screen menu and make adjustments or settings. See page 2.

USING THE INSTALLATION FEATURES

LANGUAGE

The menu LANGUAGE control enables you to set the TV's on-screen menu and on-screen displays to be shown in English, French, or Spanish. Follow the steps in this section to set the control.

- 1 Press the MENU/SELECT button.** The on-screen menu appears.
- 2 Press the CURSOR RING DOWN** repeatedly until INSTALL is highlighted. Then press the CURSOR RING RIGHT to enter the INSTALL submenu.
- 3 Press the CURSOR RING RIGHT again** to highlight the menu LANGUAGE options list.
- 4 Press the CURSOR RING DOWN or UP** to select your menu language. Instantaneously, the on-screen displays appear in the language that you choose.
- 5 Press the STATUS/EXIT button** to exit the menus.

HELPFUL HINT


The LANGUAGE control makes only the TV's on-screen menu items appear in English, French, or Spanish text. The control does not change the language of Closed Captioning (CC) text that may be included with programs.

USING THE INSTALLATION FEATURES

TUNER MODE

Set the **TUNER MODE** control according to the type of signal you have connected to the TV—**ANTENNA** or **CABLE**. If you select **AUTO**, the TV will automatically detect the type of signal you have connected.

- 1 Press the **MENU/SELECT** button. The on-screen menu appears. Press the **CURSOR RING DOWN** repeatedly until **INSTALL** is highlighted.
- 2 Press the **CURSOR RING RIGHT** to enter the **INSTALL** submenu. Then press the **CURSOR RING DOWN** once to highlight **TUNER MODE**.
- 3 Press the **CURSOR RING RIGHT** to highlight the **TUNER MODE** options list.
- 4 Press the **CURSOR RING DOWN** or **UP** repeatedly until you select the option that matches your signal connection, **CABLE** or **ANTENNA**. If you want the TV to determine the type of signal, select **AUTO**. (You have selected an option when the dot and triangle are next to the option.)
- 5 Press the **STATUS/EXIT** button to exit the menu.
- 6 Proceed to the section on “Auto Program.”

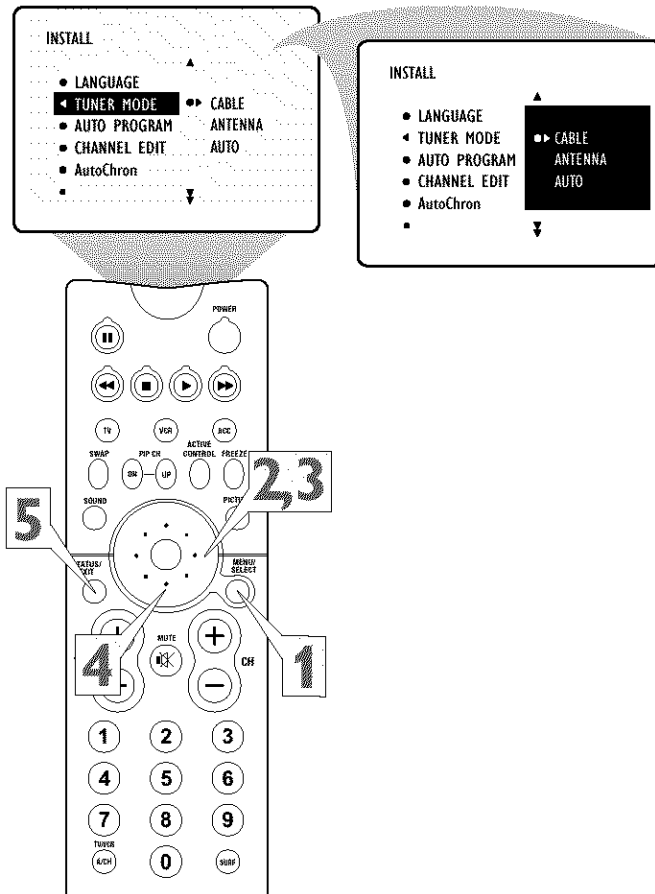


HELPFUL HINT

If you select the Tuner Mode option that matches your signal source rather than **AUTO**, the time required for **AUTO PROGRAM** to store channels to the TV's memory may be reduced.

AUTO PROGRAM

The **AUTO PROGRAM** feature will scan for channels with active broadcast signals and store those channels in the TV's memory. It will tune up to 69 channels for antenna, and up to 125 channels for cable. After you run **AUTO PROGRAM**, you can use the **CH(annel) +/-** buttons to quickly and easily select stations. You can also press the **PROG. LIST** (Program List) button on your remote to see a list of the channels.

- 1 Press the **MENU/SELECT** button. The on-screen menu appears. Then press the **CURSOR RING DOWN** repeatedly until **INSTALL** is highlighted.
- 2 Press the **CURSOR RING RIGHT** to enter the **INSTALL** submenu. Then press the **CURSOR RING DOWN** repeatedly until **AUTO PROGRAM** is highlighted.
- 3 Press the **CURSOR RING RIGHT** to begin the automatic search for channels. The progress of autoprogramming is displayed.
- 4 When the programming is done, press the **STATUS EXIT** button to exit the menu.

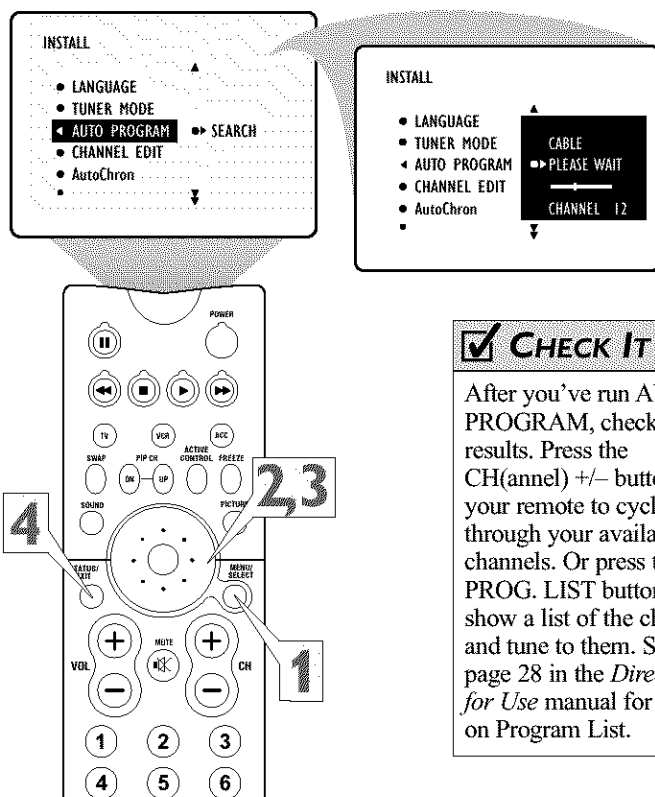

CHECK IT OUT

After you've run **AUTO PROGRAM**, check the results. Press the **CH(annel) +/-** buttons on your remote to cycle through your available channels. Or press the **PROG. LIST** button to show a list of the channels and tune to them. See page 28 in the *Directions for Use* manual for more on Program List.


HELPFUL HINTS

- Philips strongly recommends that you run Auto Program. Otherwise, the TV may not tune the channels properly, resulting in improper pictures.
- If you change signal sources—to a new cable company or from antenna to cable, for example—be sure that Tuner Mode is properly set for the new source. Then run Auto Program again. This will ensure that the channels are correctly stored in the TV's memory.
- If you have made AutoLock™ settings, remember that you must remove any channel blocks before Auto Program will work. (See pages 46–54 in the *Directions for Use* manual.)

CHANNEL EDIT

This feature allows you to edit or skip channels from the channel list that have bad or weak signals or channels you do not want to watch.

- 1 Press the **MENU/SELECT** button. The on-screen menu appears. Then press the **CURSOR RING DOWN** repeatedly until **INSTALL** is highlighted. Press the **CURSOR RING RIGHT** to enter the **INSTALL** submenu.
- 2 Press the **CURSOR RING DOWN** repeatedly until **CHANNEL EDIT** is highlighted. Then press the **CURSOR RING RIGHT** or **LEFT** to access the **CHANNEL EDIT** list.
- 3 Press the **CURSOR RING UP** or **DOWN** to scroll through the list of channels. Or press the **NUMBER** buttons on your remote control to select a specific channel.
- 4 With the channel you want to edit selected, press the **CURSOR RING RIGHT** to mark the channel as **SKIPPED**. (Channels you mark **SKIPPED** will not appear when you use the **CH[annel] +/-** buttons to change channels while watching TV.)
When you want to add a channel that has been marked **SKIPPED**, press the **CURSOR RING UP** or **DOWN** to highlight the channel. Then press the **CURSOR RING RIGHT** to remove the word **SKIPPED**.
- 5 Press the **STATUS/EXIT** button to exit the menu.

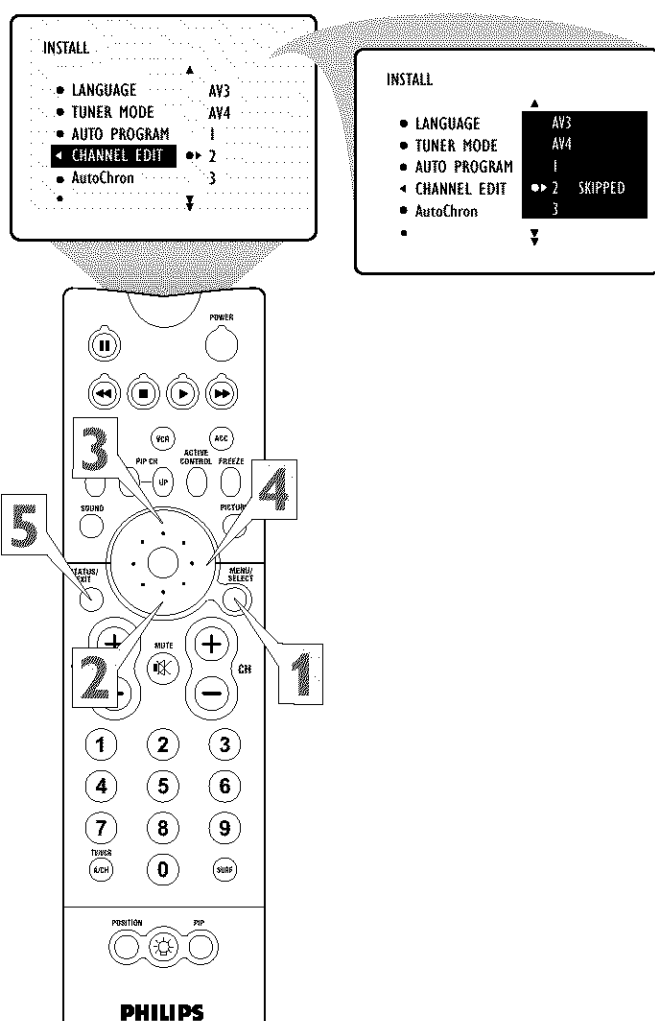

HELPFUL HINT

Channels that Auto Program (see above) determined not to contain active broadcast signals are marked **SKIPPED**.

USING THE INSTALLATION FEATURES


AutoChron™

AutoChron™ gives you the option of setting the time manually or automatically.

SETTING TIME AUTOMATICALLY

Follow the steps below to set AutoChron™ to download the time from your PBS station to your TV. After successful setup, AutoChron™ will automatically maintain the correct time using the PBS station until you set the time using the AutoChron™ MANUAL option (see below).


- 1** Press the **MENU/SELECT** button. The on-screen menu appears. Then press the **CURSOR RING DOWN** repeatedly until **INSTALL** is highlighted.
- 2** Press the **CURSOR RING RIGHT** to enter the **INSTALL** submenu. Then press the **CURSOR RING DOWN** repeatedly until **AutoChron** is highlighted.
- 3** Press the **CURSOR RING RIGHT** to enter the **AutoChron SET TIME** area.
- 4** Press the **CURSOR RING RIGHT** again to select **AUTO**. Within a few seconds, a menu containing the time-zone options appears.
- 5** If necessary, press the **CURSOR RING UP** or **DOWN** to highlight your correct time zone. Then press the **CURSOR RING RIGHT**. Within a few seconds, the option of **Daylight Savings Time** appears on screen.
- 6** If the **Daylight Savings Time** option you want to select is not highlighted, press the **CURSOR RING UP** or **DOWN** to highlight the option. Then press the **CURSOR RING RIGHT** to activate your selection.
- 7** Press the **number buttons** on your remote to enter the channel number for your PBS station (02, 15, or 121, for example). Wait until the TV completes its search. If the time was not found, you will need to locate the correct channel number for your PBS station and input that number.
- 8** Press the **STATUS/EXIT** button to exit the menu.

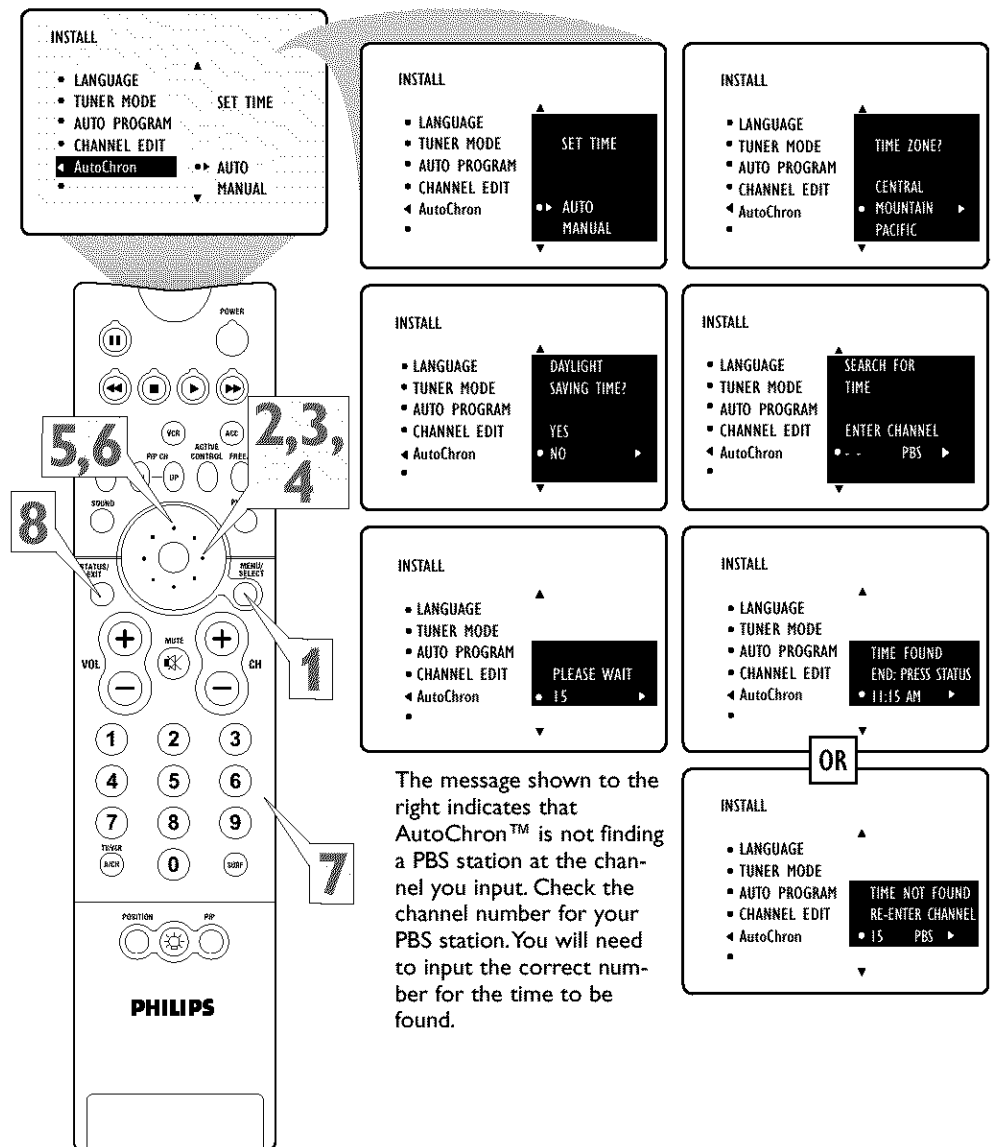


The message shown to the right indicates that AutoChron™ is not finding a PBS station at the channel you input. Check the channel number for your PBS station. You will need to input the correct number for the time to be found.

SETTING TIME MANUALLY

- 1** Follow steps 1–3 in the section “Setting Time Automatically” above, then press the **CURSOR RING DOWN** to highlight **MANUAL** and **CURSOR RING RIGHT** to enter the **MANUAL** time input area.
- 2** Use the **number buttons** on your remote control to input the first digit for the time. You can also press the **CURSOR RING UP** or **DOWN** to select a digit. Press the **CURSOR RING RIGHT** to move to the next digit input slot and input the time.
If you should need to change a number you have input, you can cursor left or right to the digit input slot to make the correction.
- 3** After you have input the time, press the **CURSOR RING RIGHT** to enter the **AM/PM** area. Then press the **CURSOR RING UP** or **DOWN** to select **AM** or **PM**.
- 4** Press the **STATUS/EXIT** button to exit the menu.

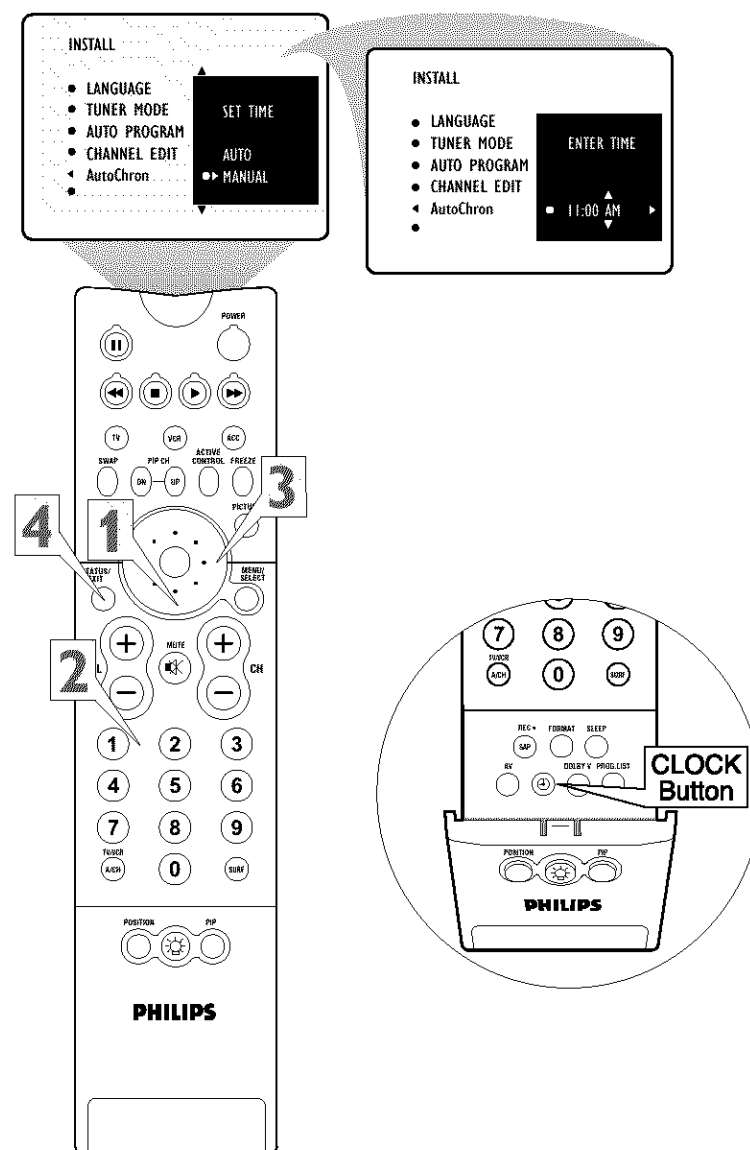

HELPFUL HINTS

- The **CLOCK** button  on your remote provides another way in which you can set the TV's clock.
- After setting the clock, you will be able to access the time by pressing the **STATUS/EXIT** button. Or you can view the time constantly in the upper right-hand corner of the screen by turning the **DISPLAY** control on (see page 42 in the *Directions for Use* manual).

USING THE INSTALLATION FEATURES

NAME


The channel **NAME** feature allows you to list the “call” letters of your favorite stations beside their channel numbers when they appear on the screen. The TV has in memory a list of the 50 most popular channel names (NBC, ABC, or FOX, for example). You also can enter a custom name (up to five characters).

- 1** Press the **NUMBER** buttons, the **CH(annel) +/-** buttons, or the **AV** button to select a TV channel or input source to which you want to assign a name or whose name you want to modify.
- 2** Press the **MENU/SELECT** button. The on-screen menu appears. Then press the **CURSOR RING DOWN** repeatedly until **INSTALL** is highlighted. Press the **CURSOR RING RIGHT** to enter the **INSTALL** submenu.
- 3** Press the **CURSOR RING DOWN** repeatedly until the **NAME** control is highlighted. Then press the **CURSOR RING RIGHT** to highlight the **NAME** options area.
- 4** At this point you can choose between options of creating a personal name for the channel or selecting a preset one from a list.

To create your own personal name for the channel or change a personal name you created previously, press the **CURSOR RING RIGHT**. Then press the **CURSOR RING UP** or **DOWN** to select the first character of the name. You can input up to five characters for the name. When finished, press the **MENU/SELECT** button.

Or

To choose from the list of preset names, press the **CURSOR RING UP** or **DOWN** to highlight your choice for the channel name. Press the **CURSOR RING RIGHT** to select the name. Then press the **MENU/SELECT** button.
- 5** Press the **STATUS/EXIT** button to exit the menu. If you press the **STATUS/EXIT** button when no on-screen display is present or change to the channel you’ve named, the name will appear on the screen next to the channel number or signal source name.

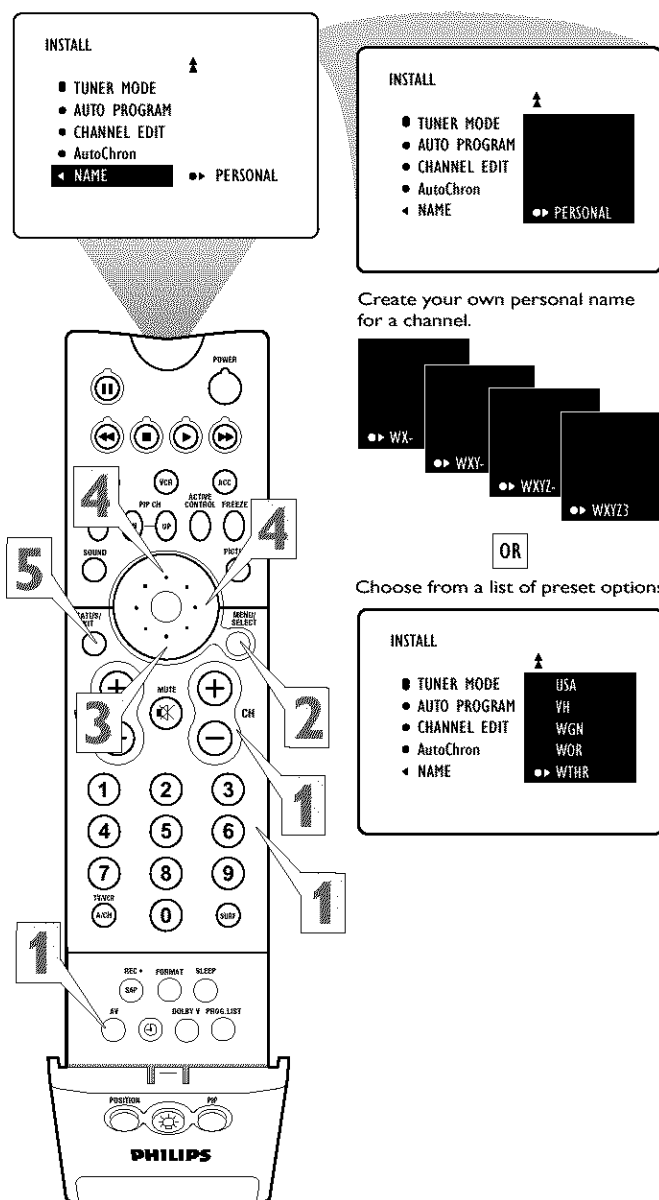

HELPFUL HINTS

- The five **PERSONAL** name characters you can input may be letters, a dash, or the numbers 0 through 9.
- If you begin inputting a personal name or changing an existing one and decide you’d rather select a name from the preset list, press the **MENU/SELECT** button. This will return you to the **INSTALL** submenu, with **NAME** highlighted. Simply press the **CURSOR RING RIGHT** to highlight the **NAME** options area again and choose a preset name as explained in step 4 to the left.

USING AUTO INTELLISENSE™ TO ADJUST PICTURE CONVERGENCE

Your projection TV has three color projection tubes: one for red, one for green, and one for blue. When mixed in proper proportion, the beams of light coming from the tubes can produce any color. To create a clear picture, however, these color beams must be precisely aligned. This alignment is called **convergence**. Bumps and vibrations, moving the set, or the presence of magnetic fields can cause the color beams to become improperly aligned, or **misconverged**, resulting in a fuzzy picture. Using the **Auto IntelliSense™** feature, you can automatically adjust convergence in 20 seconds or less.


NOTE: Allow the TV to warm up for 20 minutes before using **Auto IntelliSense™**.

ACTIVATING AUTO INTELLISENSE™ USING THE TV BUTTONS

With the TV on, press the **VOL -** and **SOURCE SELECT** buttons simultaneously.

ACTIVATING AUTO INTELLISENSE™ USING THE ON-SCREEN PICTURE SUBMENU

Within the **PICTURE** submenu, highlight **INTELLISENSE** and then press the **CURSOR RING LEFT** or **RIGHT** to activate the feature.

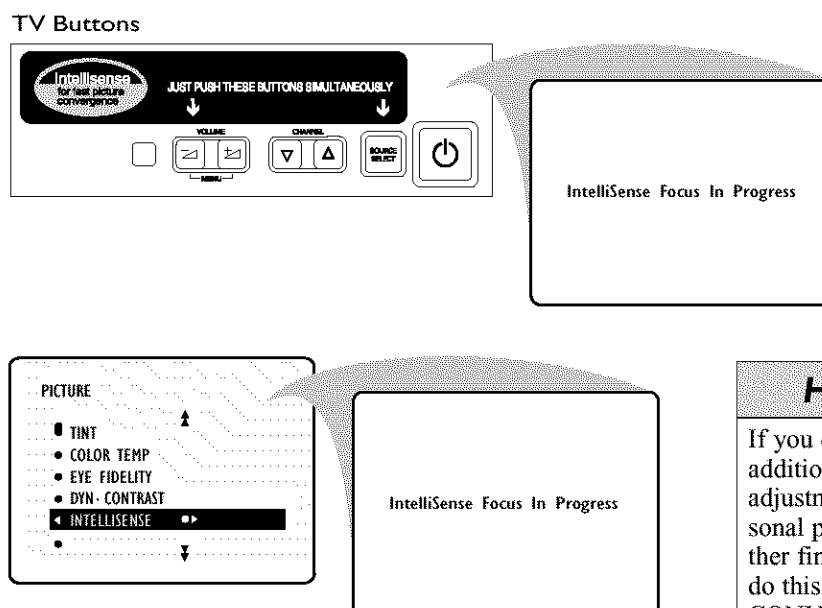


HELPFUL HINT

If you desire, you can make additional convergence adjustments to suit your personal preferences or to further fine-tune the picture. To do this, use the **MANUAL CONVERGE** controls in the **PICTURE** submenu. See pages 33 and 34 in the *Directions for Use* manual that also came with your set.

USING THE PICTURE-IN-PICTURE (PIP) FEATURE

The Picture-In-Picture (PIP) feature allows you to display a subscreen within your main screen and watch two video sources at once. Because your set has two tuners, you can enjoy all the benefits of PIP without using a VCR as a second tuner for your PIP picture. Tune to your favorite show on the main screen with tuner one while scanning other channels with tuner two in the PIP window. Also view the AV1, AV2, or AV3 sources in the PIP window. **NOTE:** CVI cannot be displayed in the PIP window, and AV4 and AV5 do not function with PIP. (For information on connecting accessory devices to the AV inputs, see the Directions for Use manual that came with your set. Connection information begins on page 6.)

With the dual-window option you can divide the main screen in half, showing the main picture on the left side and the PIP picture on the right.

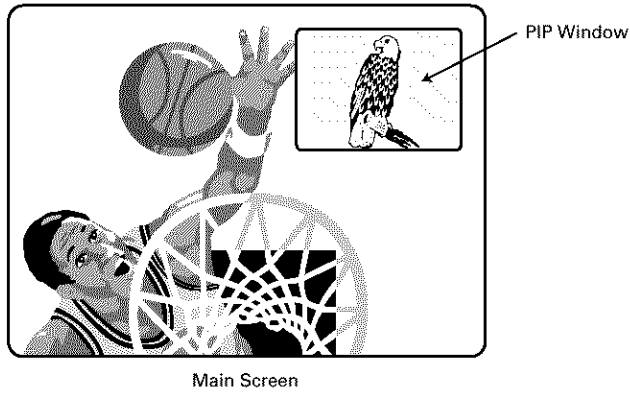

Main Screen

USING THE PIP BUTTONS

- 1** Press the **PIP** button to turn PIP on.
- 2** Press the **PIP** button a second time to make the PIP window smaller.
- 3** Press the **PIP** button a third time to turn on the dual-window screen. The PIP window is on the right, equally sharing the screen with the main picture.
- 4** To select a video source to watch in the PIP window, press the **PIP CH(annel) DN/UP** buttons.
If you press and hold the PIP CH UP button for three seconds, the set will automatically perform a forward scan for channels. Press and hold the PIP CH DN button for three seconds, and the set will automatically perform a backward scan for channels. Auto scanning will stop if you press any key, and it will also stop upon reaching the channel at which scanning began.
- 5** To turn PIP off, press the **PIP** button a fourth time.

MOVING THE PIP SCREEN


Press the **POSITION** button. Each time you press this button, the PIP screen moves to another corner of the main screen.

FREEZING THE PIP SCREEN

Press the **FREEZE** button. The picture in the PIP screen stands still. Stopping motion allows you to write down on-screen phone numbers or addresses.

SWITCHING THE MAIN AND PIP SCREENS

Press the **SWAP** button. The main screen and PIP screen change places.

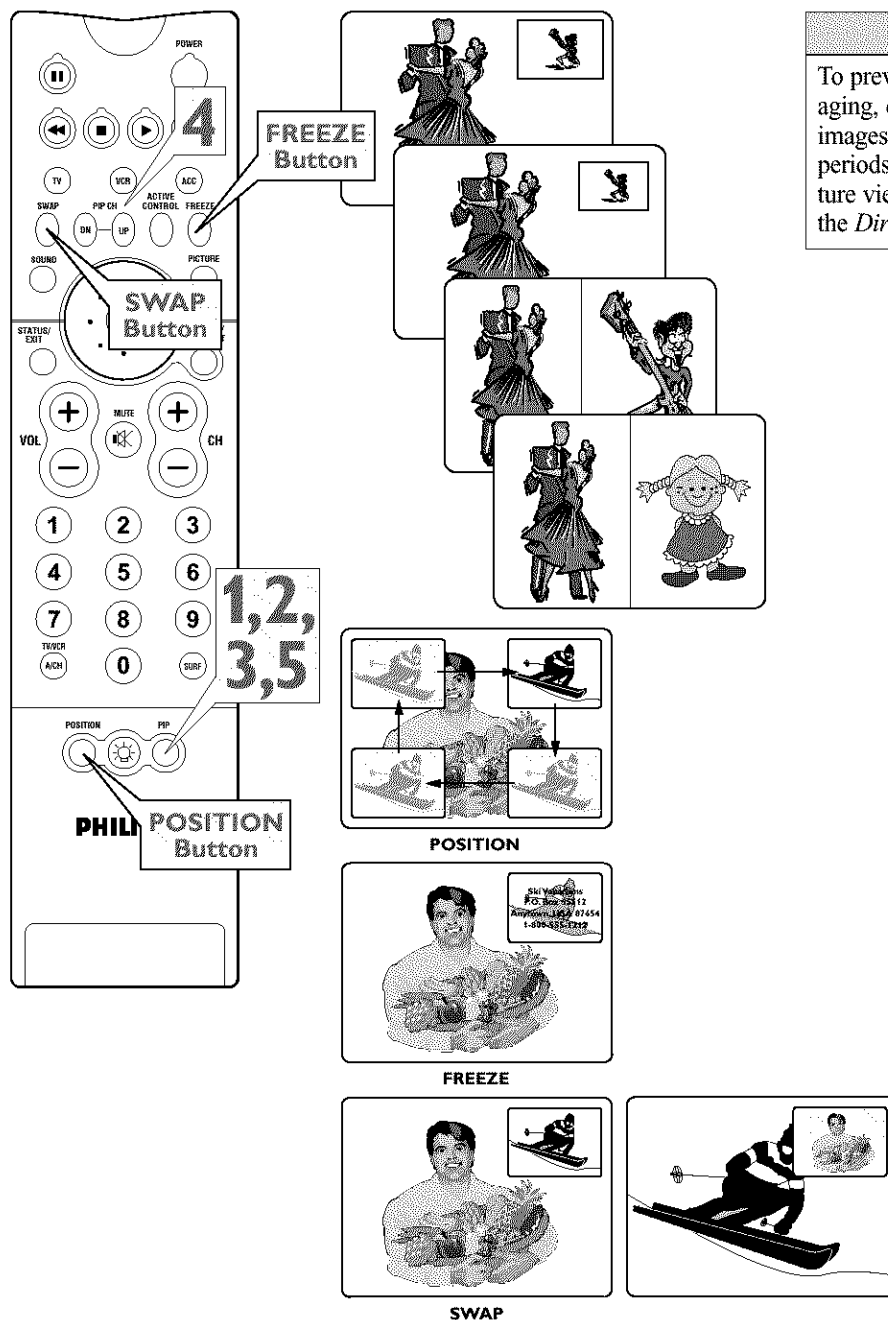

WARNING

To prevent uneven picture-tube aging, do not leave stationary images on screen for extended periods of time. Vary your picture viewing. See page 62 in the Directions for Use manual.

ADJUSTING PIP TINT

The Picture-in-Picture (PIP) TINT control allows you to adjust the PIP picture to obtain natural skin tones.

- 1** Press the **MENU/SELECT** button. The on-screen menu appears. Then press the **CURSOR RING DOWN** twice to highlight FEATURES.
- 2** Press the **CURSOR RING RIGHT** to enter the FEATURES submenu. Then press the **CURSOR RING DOWN** repeatedly until the PIP item is highlighted. Press the **CURSOR RING RIGHT** to enter the PIP submenu.
- 3** Press the **CURSOR RING RIGHT** or **LEFT** to adjust the TINT to the desired level.
- 4** Press the **STATUS/EXIT** button to exit the menu.

