
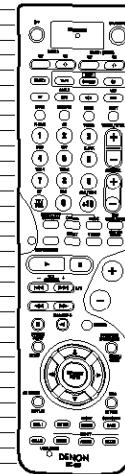


# DENON

## AV SURROUND RECEIVER AVR-2803

OPERATING INSTRUCTIONS  
BEDIENUNGSANLEITUNG  
MODE D'EMPLOI  
ISTRUZIONI PER L'USO

INSTRUCCIONES DE OPERACION  
GEBRUIKSAANWIJZING  
BRUKSANVISNING

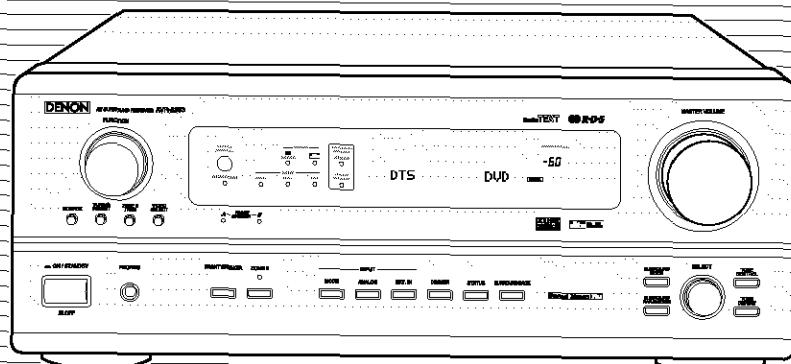

FOR ENGLISH READERS

PAGE 2 ~ PAGE 45

SEITE 46 ~ SEITE 88

FÜR DEUTSCHE LESER

PAGE 89 ~ PAGE 131

POUR LES LECTEURS FRANÇAIS

PAGINA 132 ~ PAGINA 174

PER IL LETTORE ITALIANO

PAGINA 175 ~ PAGINA 217

PARA LECTORES DE ESPAÑOL

PAGINA 218 ~ PAGINA 260

VOOR NEDERLANDSTALIGE LEZERS

PAGINA 261 ~ SIDA 303

FOR SVENSKA LÄSARE



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**• DECLARATION OF CONFORMITY**

We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards:  
EN60065, EN55013, EN55020, EN61000-3-2 and EN61000-3-3.

Following the provisions of 73/23/EEC, 89/336/EEC and 93/68/EEC Directive.

**• ÜBEREINSTIMMUNGSERKLÄRUNG**

Wir erklären unter unserer Verantwortung, daß dieses Produkt, auf das sich diese Erklärung bezieht, den folgenden Standards entspricht:  
EN60065, EN55013, EN55020, EN61000-3-2 und EN61000-3-3.

Entspricht den Verordnungen der Direktive 73/23/EEC, 89/336/EEC und 93/68/EEC.

**• DECLARATION DE CONFORMITÉ**

Nous déclarons sous notre seule responsabilité que l'appareil, auquel se réfère cette déclaration, est conforme aux standards suivants:  
EN60065, EN55013, EN55020, EN61000-3-2 et EN61000-3-3.

D'après les dispositions de la Directive 73/23/EEC, 89/336/EEC et 93/68/EEC.

**• DICHIARAZIONE DI CONFORMITÀ**

Dichiariamo con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative:  
EN60065, EN55013, EN55020, EN61000-3-2 e EN61000-3-3.

In conformità con le condizioni delle direttive 73/23/EEC, 89/336/EEC e 93/68/EEC.

QUESTO PRODOTTO E' CONFORME

AL D.M. 28/08/95 N. 548

**• DECLARACIÓN DE CONFORMIDAD**

Declaramos bajo nuestra exclusiva responsabilidad que este producto al que hace referencia esta declaración, está conforme con los siguientes estándares:  
EN60065, EN55013, EN55020, EN61000-3-2 y EN61000-3-3.

Siguiendo las provisiones de las Directivas 73/23/EEC, 89/336/EEC y 93/68/EEC.

**• ENVORMIGHEIDSVERKLARING**

Wij verklaaren uitsluitend op onze verantwoordelijkheid dat dit produkt, waarop deze verklaring betrekking heeft, in overeenstemming is met de volgende normen:  
EN60065, EN55013, EN55020, EN61000-3-2 en EN61000-3-3.

Volgens de bepalingen van de Richtlijnen 73/23/EEC, 89/336/EEC en 93/68/EEC.

**• ÖVERENSSTÄMMELSESINTY**

Härmed intygas helt på eget ansvar att denna produkt, vilken detta intyg avser, uppfyller följande standarder:  
EN60065, EN55013, EN55020, EN61000-3-2 och EN61000-3-3.

Enligt stadgarna i direktiv 73/23/EEC, 89/336/EEC och 93/68/EEC.

**• CAUTION**


Dichiariamo con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative:  
EN60065, EN55013, EN55020, EN61000-3-2 e EN61000-3-3.

In conformità con le condizioni delle direttive 73/23/EEC, 89/336/EEC e 93/68/EEC.

QUESTO PRODOTTO E' CONFORME

AL D.M. 28/08/95 N. 548

**NOTE ON USE / HINWEISE ZUM GEBRAUCH /  
OBSERVATIONS RELATIVES A L'UTILISATION / NOTE SULL'USO  
NOTAS SOBRE EL USO / ALVORENS TE GEBRUIKEN / OBSERVERA**

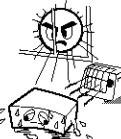


- Avoid high temperatures.  
Allow for sufficient heat dispersion when installed on a rack.
- Vermeiden Sie hohe Temperaturen.  
Beachten Sie, daß eine ausreichend Luftzirkulation gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird.
- Evitez des températures élevées.  
Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.
- Evite de espore l'unità a temperature alte.  
Assicuratevi che ci sia un'adeguata dispersione del calore quando installate l'unità in un mobile per componenti audio.
- Evite altas temperaturas.  
Permitte la suficiente dispersión del calor cuando está instalado en la consola.
- Vermijd hoge temperaturen.  
Zorg voor een degelijk hitteafvoer indien het apparaat op een rek wordt geplaatst.
- Undvik höga temperaturer.  
Se till att det finns möjlighet till god värmeavledning vid montering i ett rack.




- Keep the set free from moisture, water, and dust.
- Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.
- Protéger l'appareil contre l'humidité, l'eau et la poussière.
- Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere.
- Mantenga el equipo libre de humedad, agua y polvo.
- Laat geen vochtigheid, water of stof in het apparaat binnendringen.
- Utsätt inte apparaten för fukt, vatten och damm.



 - Do not let foreign objects in the set.
- Keine fremden Gegenstände in das Gerät kommen lassen.
- Ne pas laisser des objets étrangers dans l'appareil.
- E' importante che nessun oggetto è inserito all'interno dell'unità.
- No dejar objetos extraños dentro del equipo.
- Laat geen vreemde voorwerpen in dit apparaat vallen.
- Se till att främmande föremål inte tränger in i apparaten.



- Unplug the power cord when not using the set for long periods of time.
- Wenn das Gerät eine längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker.
- Assicuratevi che l'unità non venga in contatto con insetticidi, benzolo o solventi.
- Ne permette il contacto de insecticidas, gasolina y diluyentes con el equipo.
- Laat geen insectenverdelgende middelen, benzine of verdunninger met dit apparaat in kontakt komen.
- Se till att inte insektsmedel på spraybruk, bensin och thinner kommer i kontakt med apparatens hölje.

 

- Handle the power cord carefully.  
Hold the plug when unplugging the cord.
- Gehen Sie vorsichtig mit dem Netzkabel um.  
Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen.
- Manipuler le cordon d'alimentation avec précaution.  
Tenir la prise lors du débranchement du cordon.
- Maneggiate il filo di alimentazione con cura.  
Agite per la spina quando scollegate il cavo dalla presa.
- Maneje el cordón de energía con cuidado.  
Sostenga el enchufe cuando desconecte el cordón de energía.
- Hanteer het netsnoer voorzichtig.  
Houd het snoer bij de stekker vast wanneer deze moet worden aan- of losgekoppeld.
- Handled nätkablen varsamt.  
Håll i kabeln när den kopplas från el-uttaget.



- (For sets with ventilation holes).
- Do not obstruct the ventilation holes.
- Die Belüftungsöffnungen dürfen nicht verdeckt werden.
- Ne pas obstruer les trous d'aération.
- No obstruya los orificios de ventilación.
- De ventilatieopeningen mogen niet worden bedekt.
- Täpp inte till ventilationsöppningarna.



- Never disassemble or modify the set in any way.
- Versuchen Sie niemals das Gerät auseinander zu nehmen oder auf jegliche Art zu verändern.
- Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.
- Non smontate mai, né modificate l'unità in nessun modo.
- Nunca desarmando o modificando el equipo de ninguna manera.
- Noot dit apparaat demonteren of op andere wijze modifieren.
- Ta inte isär apparaten och försök inte bygga om den.

**CAUTION**

- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.

- Please be care the environmental aspects of battery disposal.
- The apparatus shall not be exposed to dripping or splashing for use.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.

- We greatly appreciate your purchase of the AVR-2803.
- To be sure you take maximum advantage of all the features the AVR-2803 has to offer, read these instructions carefully and use the set properly. Be sure to keep this manual for future reference, should any questions or problems arise.

"SERIAL NO. \_\_\_\_\_

PLEASE RECORD UNIT SERIAL NUMBER ATTACHED TO THE REAR OF THE CABINET FOR FUTURE REFERENCE"

## ■ INTRODUCTION

Thank you for choosing the DENON AVR-2803 Digital Surround AV receiver. This remarkable component has been engineered to provide superb surround sound listening with home theater sources such as DVD, as well as providing outstanding high fidelity reproduction of your favorite music sources. As this product is provided with an immense array of features, we recommend that before you begin hookup and operation that you review the contents of this manual before proceeding.


## TABLE OF CONTENTS

[1] Before Using.....	3	[10] Surround.....	27~31
[2] Cautions on Installation.....	3	[11] DSP Surround Simulation.....	31~34
[3] Cautions on Handling.....	3	[12] Listening to the Radio.....	35~38
[4] Features.....	4	[13] Last Function Memory.....	38
[5] Connections.....	4~8	[14] Initialization of the Microprocessor.....	38
[6] Part Names and Functions.....	8, 9	[15] Troubleshooting.....	38, 39
[7] Setting up the System.....	9~17	[16] Additional Information.....	39~44
[8] Remote Control Unit.....	17~22	[17] Specifications.....	45
[9] Operation.....	22~27		

## ■ ACCESSORIES

Check that the following parts are included in addition to the main unit:

① Operating instructions.....	1	④ R6P/AA batteries.....	3
② Service station list.....	1	⑤ AM loop antenna.....	1
③ Remote control unit (RC-925) .....	1	⑥ FM indoor antenna.....	1

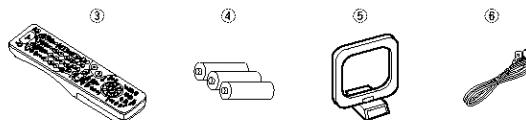

## 1 BEFORE USING

Pay attention to the following before using this unit:

### • Moving the set

To prevent short circuits or damaged wires in the connection cords, always unplug the power cord and disconnect the connection cords between all other audio components when moving the set.

### • Before turning the power switch on

Check once again that all connections are proper and that there are not problems with the connection cords. Always set the power switch to the standby position before connecting and disconnecting connection cords.

### • Store this instructions in a safe place.

After reading, store this instructions along with the warranty in a safe place.



### • Note that the illustrations in this instructions may differ from the actual set for explanation purposes.

## 2 CAUTIONS ON INSTALLATION

Noise or disturbance of the picture may be generated if this unit or any other electronic equipment using microprocessors is used near a tuner or TV. If this happens, take the following steps:

- Install this unit as far as possible from the tuner or TV.
- Set the antenna wires from the tuner or TV away from this unit's power cord and input/output connection cords.
- Noise or disturbance tends to occur particularly when using indoor antennas or 300 Ω/ohms feeder wires. **We recommend using outdoor antennas and 75 Ω/ohms coaxial cables.**

**For heat dispersal, leave at least 10 cm of space between the top, back and sides of this unit and the wall or other components.**

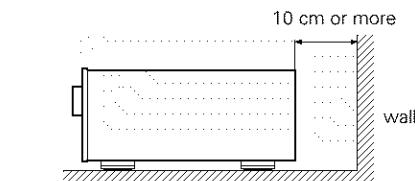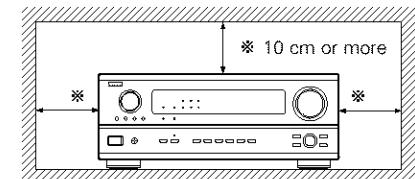

## 3 CAUTIONS ON HANDLING

### • Switching the input function when input jacks are not connected

A clicking noise may be produced if the input function is switched when nothing is connected to the input jacks. If this happens, either turn down the MASTER VOLUME control or connect components to the input jacks.

### • Muting of PRE OUT jacks, HEADPHONE jacks and SPEAKER terminals

The PRE OUT jacks, HEADPHONE jack and SPEAKER terminals include a muting circuit. Because of this, the output signals are greatly reduced for several seconds after the power switch is turned on or input function, surround mode or any other-set-up is changed. If the volume is turned up during this time, the output will be very high after the muting circuit stops functioning. Always wait

until the muting circuit turns off before adjusting the volume.

### • Whenever the power switch is in the OFF state, the apparatus is still connected on AC line voltage.

Please be sure to unplug the cord when you leave home for, say, a vacation.

## 4 FEATURES

### 1. Digital Surround Sound Decoding

Featuring 32 bit high speed DSP, operating entirely in digital domain, surround sound from digital sources such as DVD, LD, DTV and satellite are faithfully re-created.

### 2. DTS 96/24 compatibility

The AVR-2803 can be decoded with sources recorded in DTS 96/24, a new multi-channel digital signal format developed by Digital Theater Systems Inc.

DTS 96/24 sources can be played in the multi-channel mode on the AVR-2803 with high sound quality of 96 kHz/24 bits or 88.2 kHz/24 bits.

### 3. DTS-ES Extended Surround and DTS Neo:6

The AVR-2803 is compatible with DTS-ES Extended Surround, a new multi-channel format developed by Digital Theater Systems Inc.

The AVR-2803 is also compatible with DTS Neo:6, a surround mode allowing 6.1-channel playback of regular stereo sources.

### 4. DTS (Digital Theater Systems)

DTS provides up to 5.1 channels of wide-range, high fidelity surround sound, from sources such as laser disc, DVD and specially-encoded music discs.

### 5. Dolby Digital

Using advanced digital processing algorithms, Dolby Digital provides up to 5.1 channels of wide-range, high fidelity surround sound. Dolby Digital is the default digital audio delivery system for DVD and North American DTV.

### 6. Dolby Pro Logic II decoder

Dolby Pro Logic II is a new format for playing multi-channel audio signals that offers improvements over conventional Dolby Pro Logic. It can be used to decode not only sources recorded in Dolby Surround but also regular stereo sources into five channels (front left/right, center and surround left/right). In addition, various parameters can be set according to the type of source and the contents, so you can adjust the sound field with greater precision.

### 7. Dolby Digital EX decoder system

Dolby Digital EX is a 6.1-channel surround format proposed by Dolby Laboratories that allows users to enjoy in their homes the "DOLBY DIGITAL SURROUND EX" audio format jointly developed by Dolby Laboratories and Lucas Films and first used for the movie "Star Wars Episode 1 - Phantom Menace".

The 6.1 channels of sound, including surround back channels, provide improved sound positioning and expression of space.

### 8. Wide screen mode for a 7.1-channel sound even with 5.1-channel sources

DENON has developed a wide screen mode with a new design which recreates the effects of the multi surround speakers in movie theaters. The result is 7.1-channel sound taking full advantage of surround back speakers, even with Dolby Pro Logic or Dolby Digital/DTS 5.1-channel signals.

### 9. Multi Zone Music Entertainment System

Multi Source Function:

This unit's Multi Source function lets you select different audio sources for listening. Different sources can thus be enjoyed in the main room (MAIN) and the subroom (ZONE 2) simultaneously.

### 10. Component Video Switching

In addition to composite video and "S" video switching, the AVR-2803 provides 2 sets of component video (Y, Pb/Cb, Pr/Cr) inputs, and one set of component video outputs to the television, for superior picture quality.

### 11. Video Select Function

Allow you to watch one source (visual) while listening to another source (audio).

### 12. Future Sound Format Upgrade Capability via Eight Channel Inputs & Outputs


For future multi-channel audio format(s), the AVR-2803 is provided with 7.1 channel (seven main channels, plus one low frequency effects channel) inputs, along with a full set of 7.1 channel pre-amp outputs, controlled by the 8 channel master volume control. This assures future upgrade possibilities for any future multi-channel sound format.

## 5 CONNECTIONS

- Do not plug in the AC cord until all connections have been completed.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Insert the plugs securely. Incomplete connections will result in the generation of noise.
- **Use the AC OUTLET for audio equipment only. Do not use them for hair dryers, etc.**
- Note that binding pin plug cords together with AC cords or placing them near a power transformer will result in generating hum or other noise.
- Noise or humming may be generated if a connected audio equipment is used independently without turning the power of this unit on. If this happens, turn on the power of this unit.


### Connecting the audio components

- When making connections, also refer to the operating instructions of the other components. The power to this outlet is turned on and off when the power is switched between on and standby from the remote control unit or power switch.

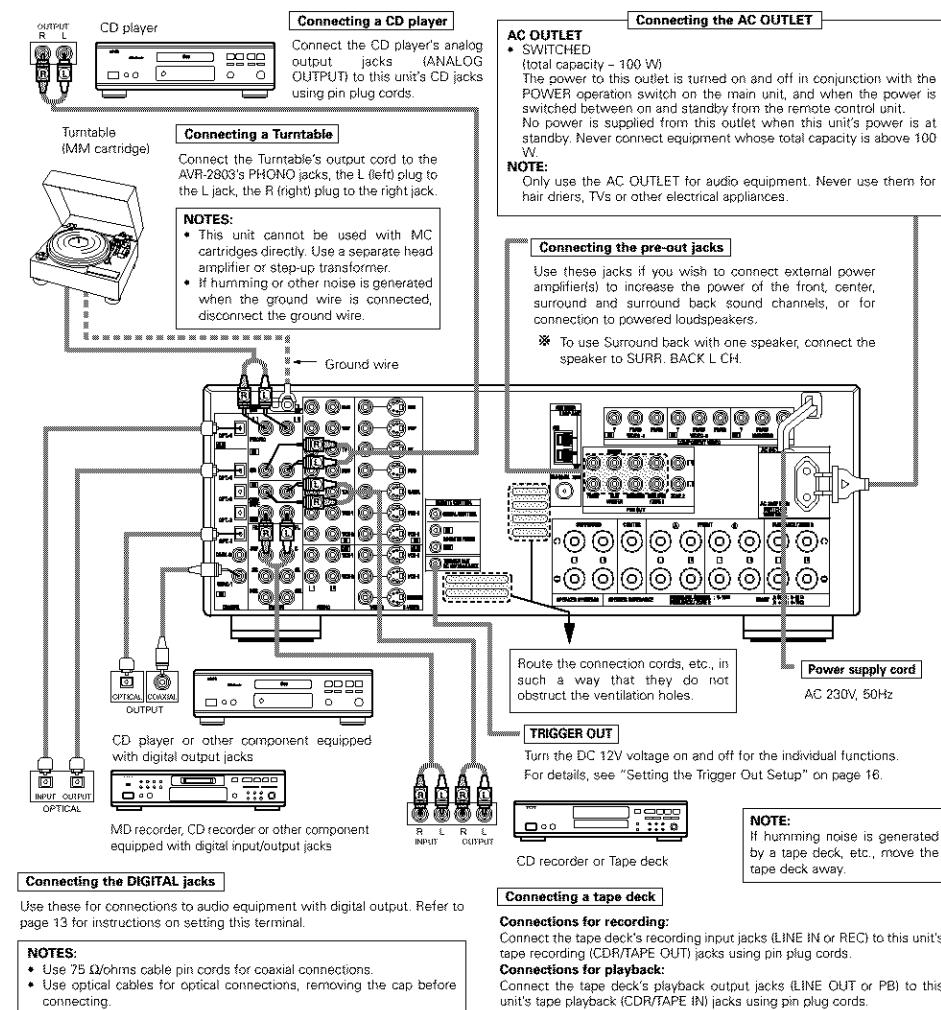

## Connecting the video components

- To connect the video signal, connect using a 75 Ω/ohms video signal cable cord. Using an improper cable can result in a drop in video quality.
- When making connections, also refer to the operating instructions of the other components.

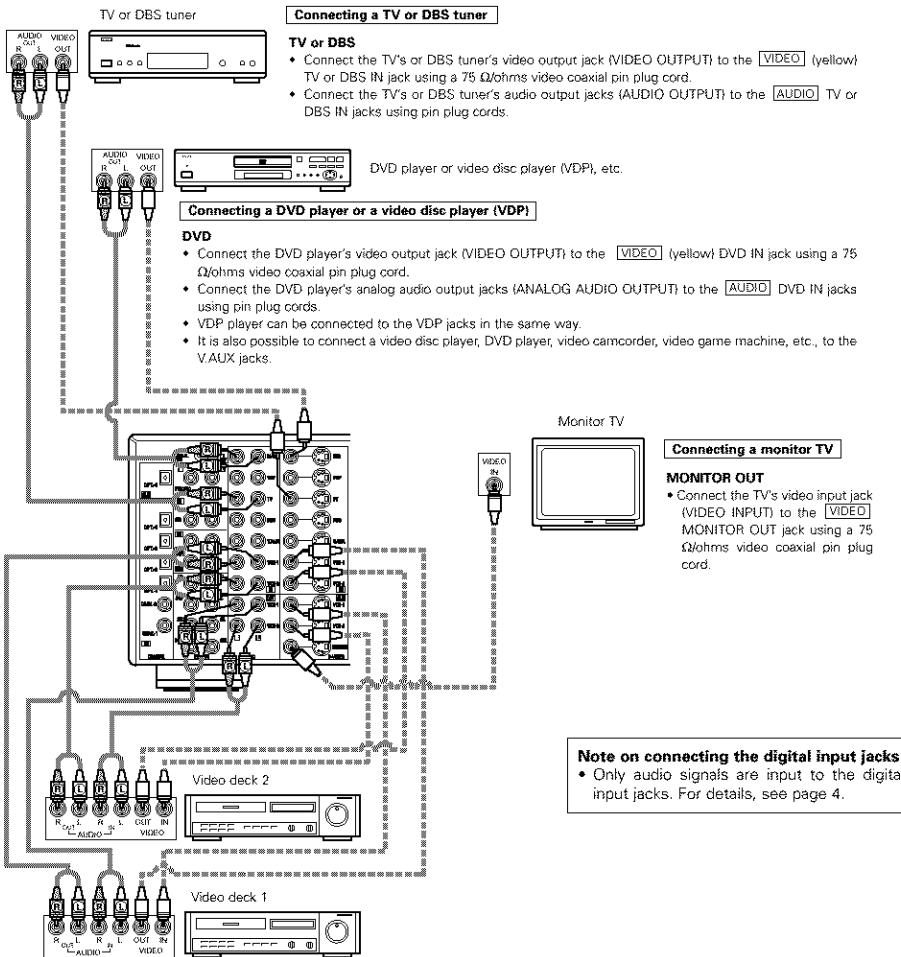

### Connecting a video decks

- There are two sets of video deck (VCR) jacks, so two video decks can be connected for simultaneous recording or video copying.
- Video input/output connections:**
  - Connect the video deck's video output jack (VIDEO OUT) to the [VIDEO] (yellow) VCR-1 IN jack, and the video deck's video input jack (VIDEO IN) to the [VIDEO] (yellow) VCR-1 OUT jack using 75 Ω/ohms video coaxial pin plug cords.
  - Connect the video deck's audio output jacks (AUDIO OUT) to the [AUDIO] VCR-1 IN jacks, and the video deck's audio input jacks (AUDIO IN) to the [AUDIO] VCR-1 OUT jacks using pin plug cords.
  - Connect the second video deck to the VCR-2 jacks in the same way.

## Connecting the video components equipped with S-Video jacks

- When making connections, also refer to the operating instructions of the other components.


### A note on the S input jacks

The input selectors for the S inputs and Video inputs work in conjunction with each other.

### Precaution when using S-jacks


This unit's S-jacks (input and output) and video pin jacks (input and output) have independent circuit structures, so that video signals input from the S-jacks are only output from the S-jack outputs and video signals input from the pin jacks are only output from the pin jack outputs.

When connecting this unit with equipment that is equipped with S-jacks, keep the above point in mind and make connections according to the equipment's instruction manuals.

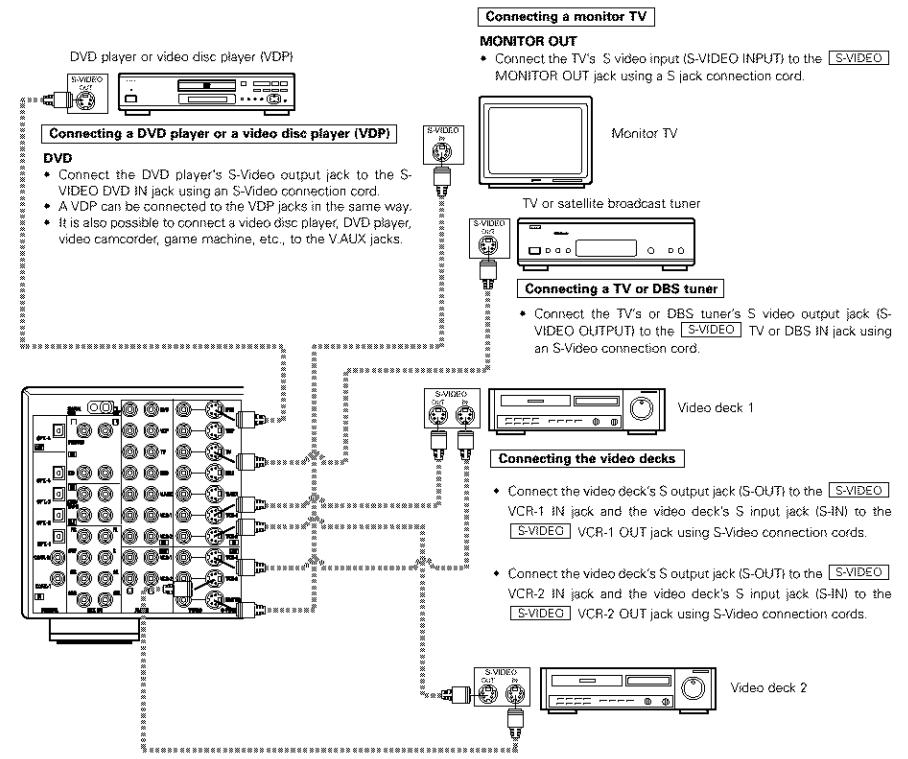


- When connecting the AVR-2803 with a monitor TV or DVD player equipped with an SCART connector, use a converter cable (sold separately) as shown in the diagram.

\* The AVR-2803 does not support input/output of RGB video signals.

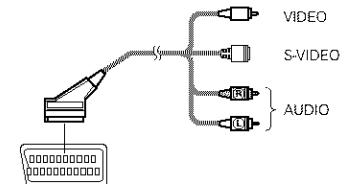


## Connecting the Video Components equipped with Color Difference (Component - Y, PR/CR, PB/CB) Video Jacks

- When making connections, also refer to the operating instructions of the other components.
- The signals input to the color difference (component) video jacks are not output to the VIDEO output jack (yellow) or the S-Video output jack.
- Some video sources with component video outputs are labeled Y, Cb, Cr, or Y, Pb, Pr, or Y, R-Y, B-Y. These terms all refer to component video color difference output.
- The function assigned to the component video input can be changed at the system setup. For details, see "Setting the Video In Assignment" on page 13.
- The AVR-2803's on-screen display signals are not output from the color difference (component) video output jacks (MONITOR OUT).

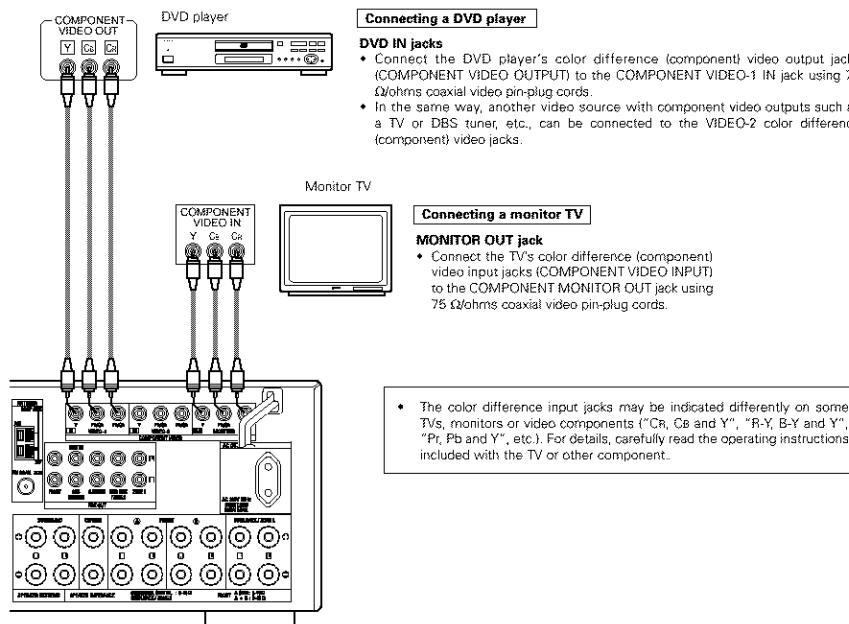


## Connecting the antenna terminals

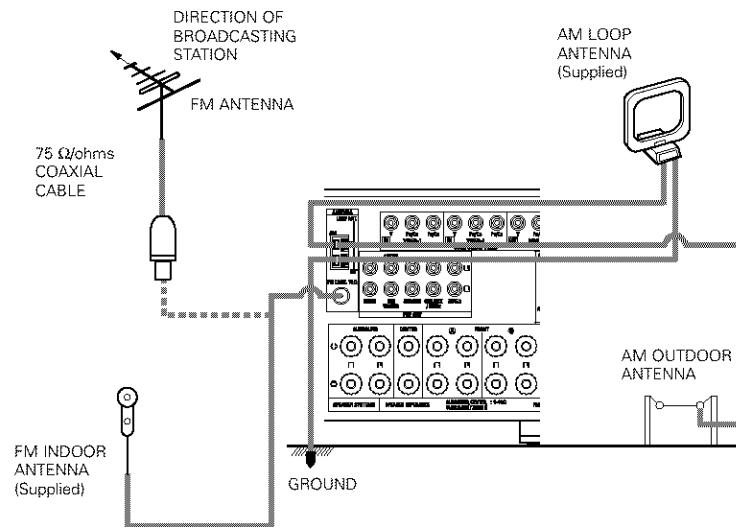


- An F-type FM antenna cable plug can be connected directly.

### AM loop antenna assembly

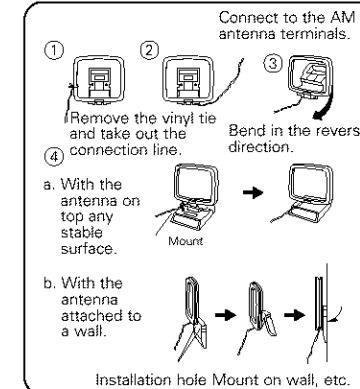

### Connection of AM antennas

 


### NOTES:

- Do not connect two FM antennas simultaneously.
- Even if an external AM antenna is used, do not disconnect the AM loop antenna.
- Make sure AM loop antenna lead terminals do not touch metal parts of the panel.

## Connecting the external input (EXT. IN) jacks


- These jacks are for inputting multi-channel audio signals from an outboard decoder, or a component with a different type of multi-channel decoder, such as a DVD Audio player, or a multi-channel SACD player, or other future multi-channel sound format decoder.
- When making connections, also refer to the operating instructions of the other components.

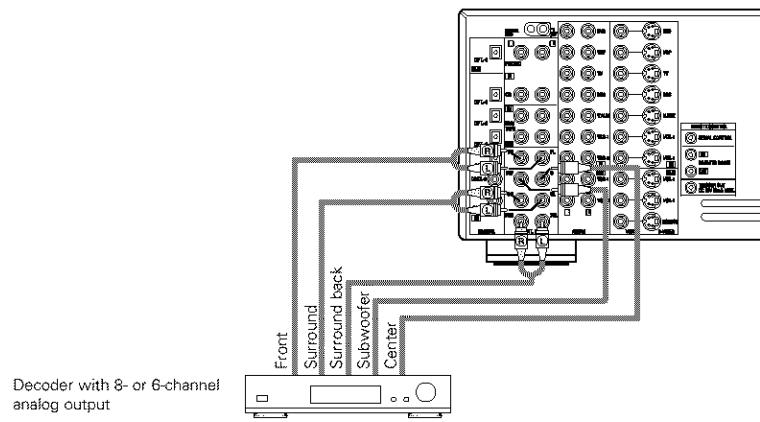

\* For instructions on playback using the external input (EXT. IN) jacks, see page 24.

## Connecting the ZONE 2 jacks

- If another pre-main (integrated) amplifier or power amplifier is connected, the ZONE 2 jacks can be used to play a different program source in ZONE 2 at the same time.

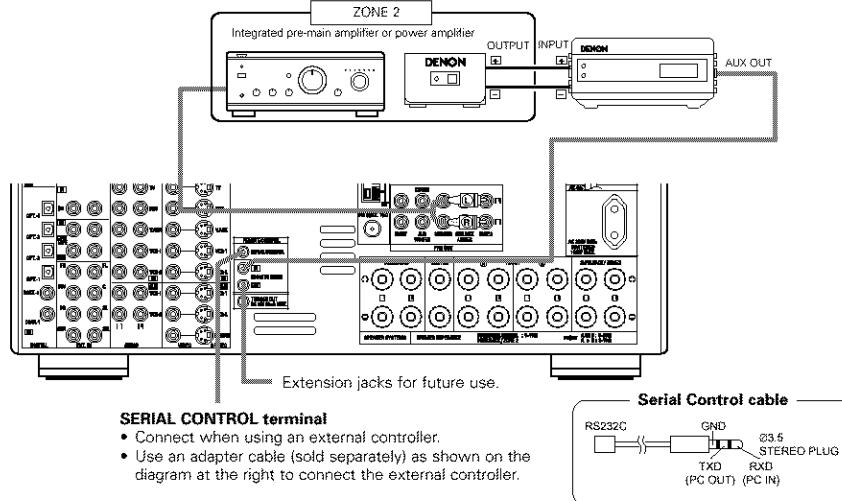

\* For instructions on operations using the ZONE 2 jacks, see pages 26, 27.

## Speaker system connections

- Connect the speaker terminals with the speakers making sure that like polarities are matched ( $\oplus$  with  $\oplus$ ,  $\ominus$  with  $\ominus$ ). Mismatching of polarities will result in weak central sound, unclear orientation of the various instruments, and the sense of direction of the stereo being impaired.
- When making connections, take care that none of the individual conductors of the speaker cord come in contact with adjacent terminals, with other speaker cord conductors, or with the rear panel.

**NOTE:**  
**NEVER touch the speaker terminals when the power is on.**  
**Doing so could result in electric shocks.**

 
### Speaker impedance

- Speakers with an impedance of from 6 to 16  $\Omega$ /ohms can be connected for use as front and center speakers.
- Speakers with an impedance of 6 to 16  $\Omega$ /ohms can be connected for use as surround and surround back speakers.
- Be careful when using two pairs of front speakers (A + B) at the same time, since use of speakers with an impedance of less than 8  $\Omega$ /ohms will lead to damage.
- The protector circuit may be activated if the set is played for long periods of time at high volumes when speakers with an impedance lower than the specified impedance are connected.

### Connecting the speaker cords

1. Loosen by turning counterclockwise.
2. Insert the cord.
3. Tighten by turning clockwise.

**Either tightly twist or terminate the core wires.**



### Protector circuit

- This unit is equipped with a high-speed protection circuit. The purpose of this circuit is to protect the speakers under circumstances such as when the output of the power amplifier is inadvertently short-circuited and a large current flows, when the temperature surrounding the unit becomes unusually high, or when the unit is used at high output over a long period which results in an extreme temperature rise. When the protection circuit is activated, the speaker output is cut off and the power supply indicator LED flashes. Should this occur, please follow these steps: be sure to switch off the power of this unit, check whether there are any faults with the wiring of the speaker cables or input cables, and wait for the unit to cool down if it is very hot. Improve the ventilation condition around the unit and switch the power back on. If the protection circuit is activated again even though there are no problems with the wiring or the ventilation around the unit, switch off the power and contact a DENON service center.


### Note on speaker impedance

- The protector circuit may be activated if the set is played for long periods of time at high volumes when speakers with an impedance lower than the specified impedance (for example speakers with an impedance of lower than 4  $\Omega$ /ohms) are connected. If the protector circuit is activated, the speaker output is cut off. Turn off the set's power, wait for the set to cool down, improve the ventilation around the set, then turn the power back on.

**Connections**

- When making connections, also refer to the operating instructions of the other components.


Connection jack for subwoofer with built-in amplifier (super woofer), etc.

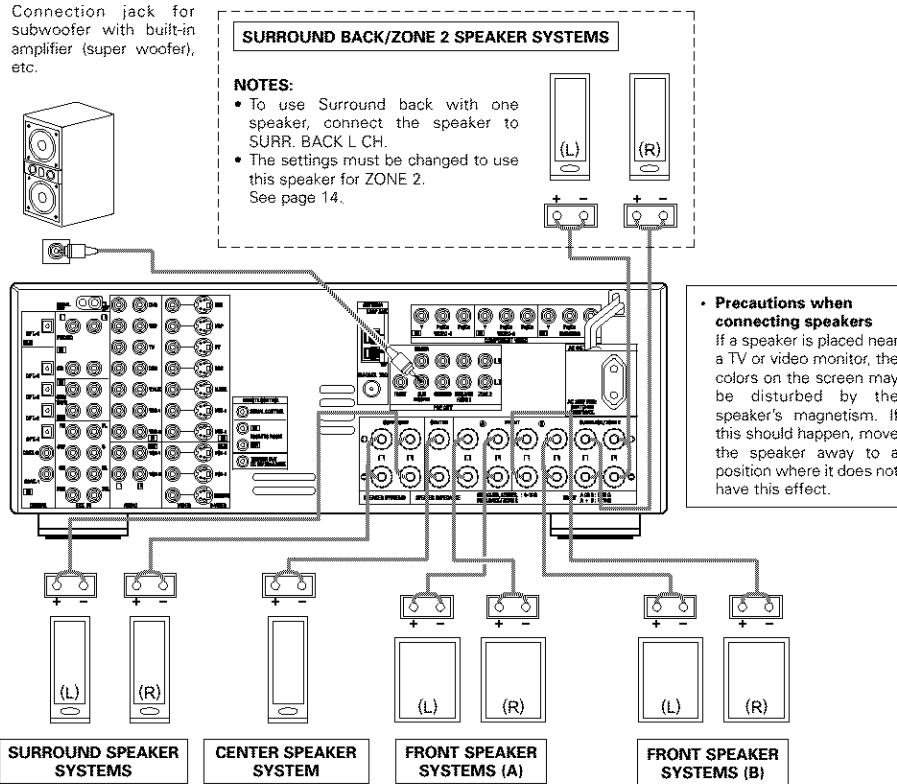

## 6 PART NAMES AND FUNCTIONS

**Front Panel**


- For details on the functions of these parts, refer to the pages given in parentheses ( ).

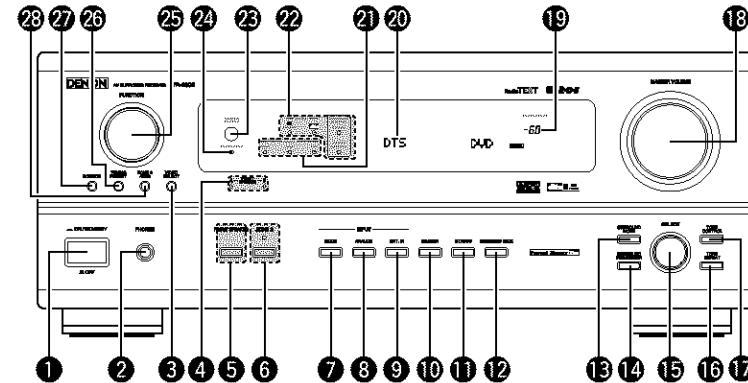

- ① Power operation switch .....(22, 38)
- ② Headphones jack (PHONES) .....(25)
- ③ VIDEO SELECT button .....(25)
- ④ Front speaker system indicators (FRONT SPEAKER A/B) .....(22, 38)
- ⑤ FRONT SPEAKER button .....(22, 38)
- ⑥ ZONE 2 button/indicator .....(26, 38)
- ⑦ MODE button .....(23, 24, 30)
- ⑧ ANALOG button .....(23, 24)
- ⑨ EXT. IN button .....(23, 24)
- ⑩ DIMMER button .....(25)
- ⑪ STATUS button .....(25)
- ⑫ SURROUND BACK button .....(30)
- ⑬ SURROUND MODE button .....(23, 28~30, 32)
- ⑭ SURROUND PARAMETER button .....(28~30, 32)
- ⑮ SELECT knob .....(23, 24, 28~30, 32, 33)
- ⑯ TONE DEFEAT button .....(24)
- ⑰ TONE CONTROL button .....(24, 33)
- ⑱ MASTER VOLUME control .....(23)
- ⑲ Master volume indicator (VOLUME LEVEL) .....(23)
- ⑳ Display
- ㉑ INPUT mode indicators .....(23)
- ㉒ SIGNAL indicators .....(23)
- ㉓ Remote control sensor (REMOTE SENSOR) .....(17)
- ㉔ Power indicator .....(22)
- ㉕ FUNCTION knob .....(23, 25, 26, 30, 35, 36)
- ㉖ TUNING PRESET button .....(36)
- ㉗ SOURCE selector button .....(23)
- ㉘ ZONE 2/REC button .....(25, 26)

## Remote control unit

- For details on the functions of these parts, refer to the pages given in parentheses ( ).

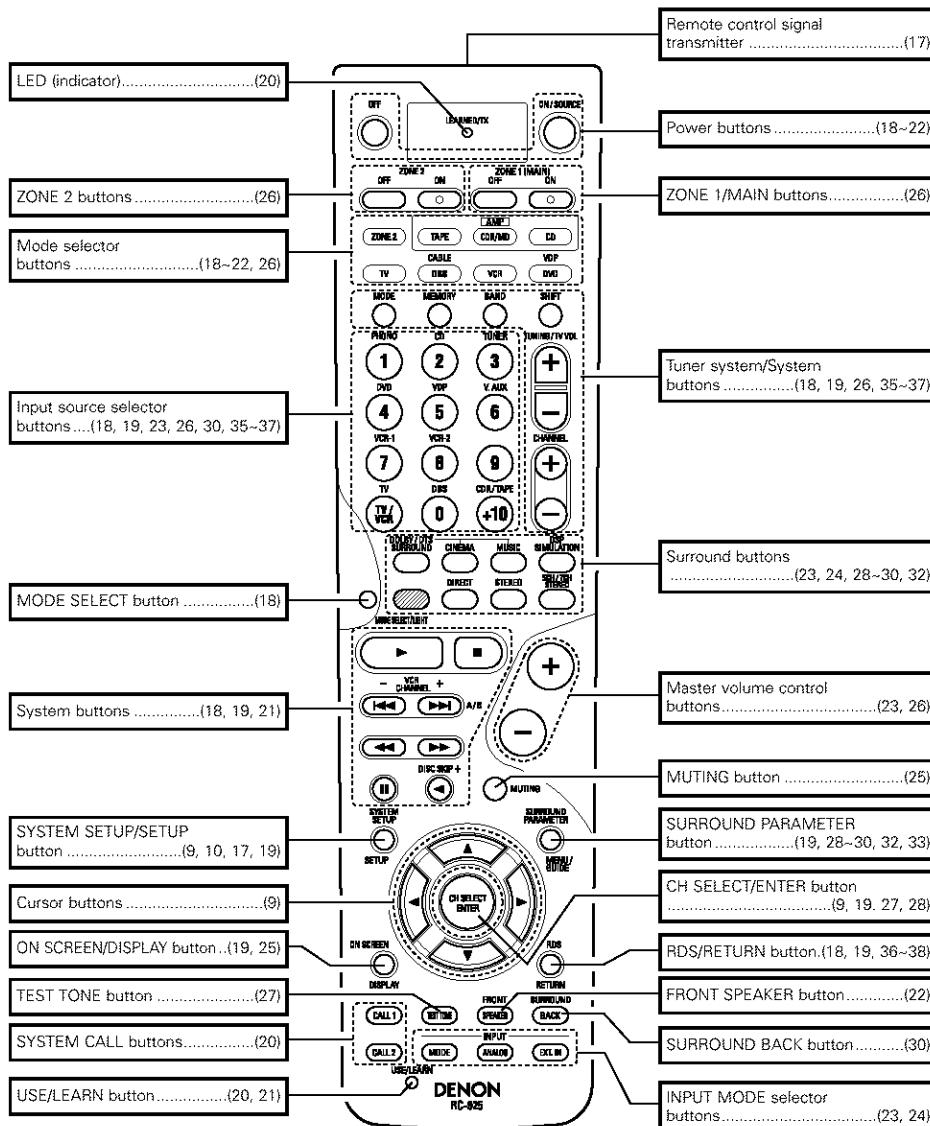


### NOTE:

- The shaded button does not function with the AVR-2803. (Nothing happens when they are pressed.)

## 7 SETTING UP THE SYSTEM

- Once all connections with other AV components have been completed as described in "CONNECTIONS" (see pages 4 to 8), make the various settings described below on the monitor screen using the AVR-2803's on-screen display function.
- These settings are required to set up the listening room's AV system centered around the AVR-2803.
- Check that the remote control unit is set to AMP mode (TAPE, CDR/MD or CD).
- The system settings can be reset to the default (factory shipment) settings by initialization of the microprocessor (see page 38).
- Use the following buttons to set up the system:

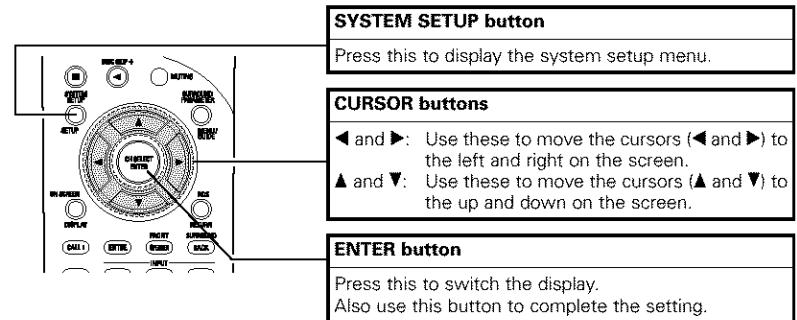

- System setup items and default values (set upon shipment from the factory)

System setup			Default settings				
① Speaker Configuration	Input the combination of speakers in your system and their corresponding sizes (Small for regular speakers, Large for full-size, full-range) to automatically set the composition of the signals output from the speakers and the frequency response.	Front Sp.	Center Sp.	Sub Woofer	Surround Sp.	Surround Back Sp.	
		Large	Small	Yes	Small	Small / 2spkrs	
② Crossover Frequency	Set the frequency (Hz) below which the bass sound of the various speakers is to be output from the subwoofer.	80 Hz					
③ Subwoofer mode	This selects the subwoofer speaker for playing deep bass signals.	LFE					
④ Delay Time	This parameter is for optimizing the timing with which the audio signals are produced from the speakers and subwoofer according to the listening position.	Front L & R	Center	Sub Woofer	Surround L & R	SBL & SBR	
		3.6 m (12 ft)	3.6 m (12 ft)	3.6 m (12 ft)	3.0 m (10 ft)	3.0 m (10 ft)	
⑤ Channel Level	This adjusts the volume of the signals output from the speakers and subwoofer for the different channels in order to obtain optimum effects.	Front L	Front R	Center	Surround L	Surround R	Surround Back L
		0 dB	0 dB	0 dB	0 dB	0 dB	0 dB
⑥ Digital In Assignment	This assigns the digital input jacks for the different input sources.	Input source	CD	DVD	VDP	TV	DBS
		Digital Inputs	COAX1	COAX2	OPT1	OPT2	OPT3
⑦ Video In Assignment	This assigns the color difference (component) video input jacks for the different input sources.		DVD	VDP	TV	DBS	V. AUX
			VIDEO1	NONE	NONE	VIDEO2	NONE
⑧ Dolby Digital Setup	Turn the audio compression on or off when down-mixing Dolby Digital signals.	OFF					
⑨ Zone2 Control	Power AMP Assignment	Surround Back					
	Zone2 vol. Level	Variable					

System setup		Default settings										
⑧ Ext. In Subwoofer Level	Set the Ext. In Subwoofer terminal playback level.	Subwoofer = +15 dB										
⑨ Auto Surround Mode	Set the Auto surround mode function.	Auto Surround Mode = ON										
⑩ On Screen Display	This sets whether or not to display the on-screen display that appears on the monitor screen when the controls on the remote control unit or main unit are operated.	On Screen Display = ON										
⑪ Trigger Out Setup	Set the Trigger Out output for the different input sources.											
		PHONO	CD	TUNER	TAPE	DVD	VDP	TV	DBS	VCR-1	VCR-2	V. AUX
		OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON	ON
		A1 ~ A8				87.5 / 89.1 / 98.1 / 108.0 / 90.1 / 90.1 / 90.1 MHz						
		B1 ~ B8				522 / 603 / 999 / 1404 / 1611 kHz, 90.1 / 90.1 MHz						
		C1 ~ C8				90.1 MHz						
		D1 ~ D8				90.1 MHz						
		E1 ~ E8				90.1 MHz						
⑫ Setup Lock	Set whether or not to lock the system setup settings so that they cannot be changed.	Setup Lock = OFF										


**NOTES:**

- The on-screen display signals are output with priority to the S-VIDEO MONITOR OUT jack during playback of a video component. For example, if the TV monitor is connected to both the AVR-2803's S-Video and video monitor output jacks and signals are input to the AVR-2803 from a video source (VDP, etc.) connected to both the S-Video and video input jacks, the on-screen display signals are output with priority to the S-Video monitor output. If you wish to output the signals to the video monitor output jack, do not connect a cord to the S-VIDEO MONITOR OUT jack. (For details, see page 17.)
- The AVR-2803's on-screen display function is designed for use with high resolution monitor TVs, so it may be difficult to read small characters on TVs with small screens or low resolutions.
- The setup menu is not displayed when headphones are being used.

**Speaker system layout**

Basic system layout


- The following is an example of the basic layout for a system consisting of eight speaker systems and a television monitor.

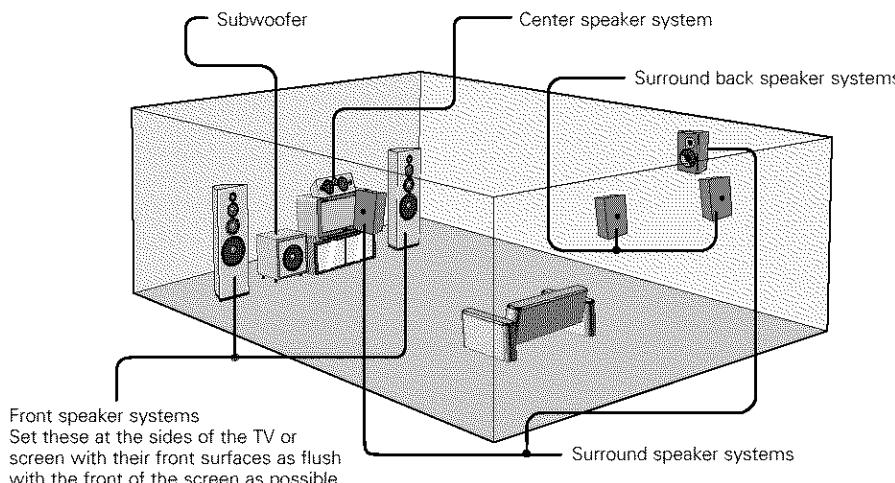**Before setting up the system**

- Before setting up, connect the AVR-2803's MONITOR OUT connector with the monitor TV and turn off the power of all playback devices connected to the AVR-2803's video input connectors. (For instructions on connecting the monitor TV, see page 5 and 6.)

**1** Check that all the connections are correct, then turn on the main unit's power.

**2** Display the System Setup Menu.

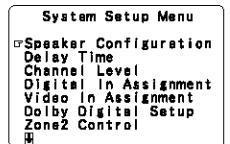


- ※ To stop system setup before it is completed, press the system setup button again.  
System setup can be stopped at any time.  
The changed settings are stored and the on-screen display turns off.

- If you make a mistake at a system setup setting, you can reset it by selecting the desired menu from the System Setup Menu screen.

**Setting the type of speakers**

- Set up in function of your speaker systems. Performing this setup optimizes the system.
- The composition of the signals output to the different channels and the frequency response are adjusted automatically according to the combination of speakers actually being used.


**1** At the System Setup Menu select "Speaker Configuration".

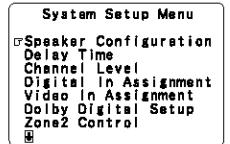


**2** Switch to the speaker configuration screen.



**3** Set whether or not speakers are connected and, if so, their size parameters.  
• To select the speaker

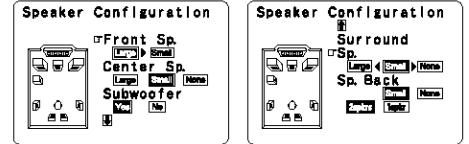

- To select the parameter

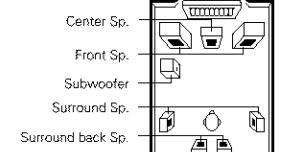

**4**

Press the ENTER button to finalize the setting.

**3**

Enter the setting.  
The System Setup Menu reappears.

**NOTE:**

- Select "Large" or "Small" not according to the actual size of the speaker but according to the speaker's capacity for playing low frequency (bass sound below frequency set for the Crossover Frequency mode and below) signals. If you do not know, try comparing the sound at both settings (setting the volume to a level low enough so as not to damage the speakers) to determine the proper setting.

**Parameters**



- Large.....Select this when using speakers that have sufficient performance for reproducing bass sound below the frequency set for the Crossover Frequency mode.
- Small.....Select this when using speakers that do not have sufficient performance for reproducing bass sound below the frequency set for the Crossover Frequency mode. When this is set, bass sound with a frequency below the frequency set for the Crossover Frequency mode is sent to the subwoofer.
- When this setting is selected, low frequencies of below the frequency set for the Crossover Frequency mode are assigned to the subwoofer.
- None.....Select this when no speakers are installed.
- Yes/No.....Select "Yes" when a subwoofer is installed, "No" when a subwoofer is not installed.
- 2spkr/sprkr ....Set the number of speakers to be used for the surround back channel.
- \* If the subwoofer has sufficient low frequency playback capacity, good sound can be achieved even when "Small" is set for the front, center and surround speakers.
- \* For the majority of speaker system configurations, using the Small setting for all five main speakers and Subwoofer On with a connected subwoofer will yield the best results.

### Setting the crossover frequency and low frequency distribution when playing Dolby Digital and DTS signals

- Set the crossover frequency and subwoofer mode according to the speaker system being used.

**1**



Select the "Crossover Frequency" mode.

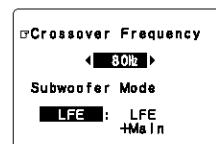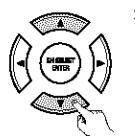

Select the Frequency.

**2**

Select the "Subwoofer Mode".

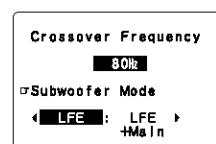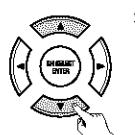

Select the setting.

**NOTES:****— Assignment of low frequency signal range —**

- The only signals produced from the subwoofer channel are LFE signals (during playback of Dolby Digital or DTS signals) and the low frequency signal range of channels set to "Small" in the setup menu. The low frequency signal range of channels set to "Large" are produced from those channels.

**— Crossover Frequency —**

- When "Subwoofer" is set to "Yes" at the "Speaker Configuration Setting", set the frequency (Hz) below which the bass sound of the various speakers is to be output from the subwoofer (the crossover frequency).

- For speakers set to "Small", sound with a frequency below the crossover frequency is cut, and the cut bass sound is output from the subwoofer instead.

**NOTE:** For ordinary speaker systems, we recommend setting the crossover frequency to 80 Hz. When using small speakers, however, setting the crossover frequency to a high frequency may improve frequency response for frequencies near the crossover frequency.

**— Subwoofer mode —**

- The subwoofer mode setting is only valid when "Large" is set for the front speakers and "Yes" is set for the subwoofer in the "Speaker Configuration" settings (see page 10).
- When the "LFE+MAIN" playback mode is selected, the low frequency signal range of channels set to "Large" are produced simultaneously from those channels and the subwoofer channel. In this playback mode, the low frequency range expand more uniformly through the room, but depending on the size and shape of the room, interference may result in a decrease of the actual volume of the low frequency range.
- Selection of the "LFE" play mode will play the low frequency signal range of the channel selected with "Large" from that channel only. Therefore, the low frequency signal range that are played from the subwoofer channel are only the low frequency signal range of LFE (only during Dolby Digital or DTS signal playback) and the channel specified as "Small" in the setup menu.
- Select the play mode that provides bass reproduction with quantity.
- When the subwoofer is set to "Yes", bass sound is output from the subwoofer regardless of the subwoofer mode setting in surround modes other than Dolby/DTS.
- In surround modes other than Dolby Digital and DTS, if the subwoofer is set to "YES", the low frequency portion is always output to the subwoofer channel. For details, refer to "Surround Modes and Parameters" on page 34.


### Setting the delay time

- Input the distance between the listening position and the different speakers to set the delay time for the surround mode.


**Preparations:**

Measure the distances between the listening position and the speakers (L1 to L5 on the diagram at the right).

- L1: Distance between center speaker and listening position
- L2: Distance between front speakers and listening position
- L3: Distance between surround speakers and listening position
- L4: Distance between surround back speakers and listening position
- L5: Distance between subwoofer and listening position


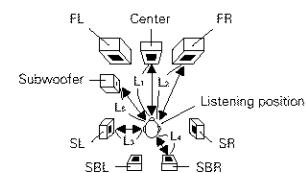
**1**

At the System Setup Menu select "Delay Time".

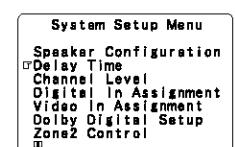

**2**



Switch to the Delay Time screen.

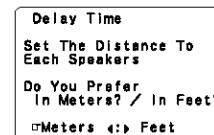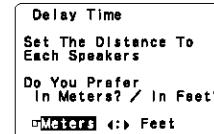**3**Select the desired unit, meters or feet.  
Select (darken) the desired units, "Meters" or "Feet".



Example: When "Meters" is selected

**4**

Once "Meter" or "Feet" is selected in Step 3, the Delay Time screen appears automatically.

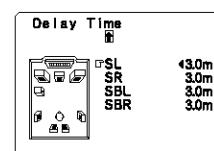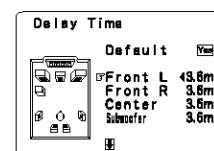**5**


Select the speaker to be set.

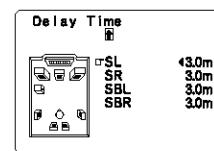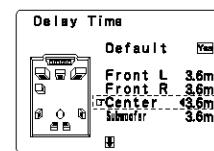Set the distance between the center speaker and listening position.  
The distance changes in units of 0.1 meters (1 foot) each time the button is pressed. Select the value closest to the measured distance.

Example: When the distance is set to 3.6 m for the center speaker

\* If "Yes" is selected for "Default", the settings are automatically reset to the default values.

Please note that the difference of distance for every speaker should be 6.0 m (20 ft) or less. If you set an invalid distance, a CAUTION notice, such as screen right will appear. In this case, please relocate the blinking speaker(s) so that its distance is no larger than the value shown in highlighted line.

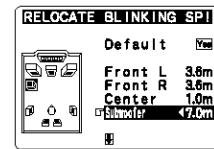**7**Enter the setting.  
The System Setup Menu reappears.  
The AVR-2803 automatically sets the optimum surround delay time for the listening room.**NOTES:**


- If the distance unit is changed after the delay time is set, the settings are reset to the factory default values (see pages 9, 10).

**Setting the channel level**


- Use this setting to adjust so that the playback level between the different channels is equal.
- From the listening position, listen to the test tones produced from the speakers to adjust the level.
- The level can also be adjusted directly from the remote control unit. (For details, see page 27.)

**1**


At the System Setup Menu select "Channel Level".

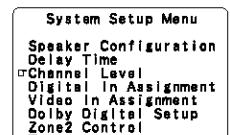**2**

Switch to the Channel Level screen.

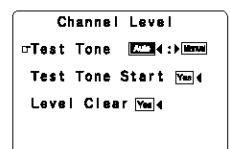**3**

Select "Test Tone".

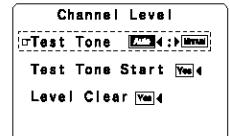
**4**Select the mode.  
Select "Auto" or "Manual".

- Auto:  
Adjust the level while listening to the test tones produced automatically from the different speakers.
- Manual:  
Select the speaker from which you want to produce the test tone to adjust the level.

Example: When the "Auto" mode is selected

**5**

Select "Test Tone Start".


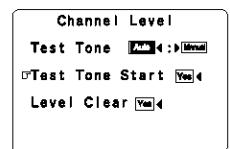
**6**

Select "Yes".

**7**

 a. If the "Auto" mode is selected:

Test tones are automatically emitted from the different speakers.  
The test tones are emitted from the different speakers in the following order, at 4-second intervals the first time and second time around, 2-second intervals the third time around and on:  
Flashing

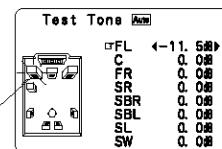

Example: When the volume is set to -11.5 dB while the test tone is being produced from the Front L-ch speaker


\* When the surround back speaker setting is set to "1spkr" for "Speaker Configuration", this is set to "SB".

Use the CURSOR left and right buttons to adjust all the speakers to the same volume. The volume can be adjusted between -12 dB and +12 dB in units of 0.5 dB.




b. When the "Manual" mode is selected

Use the CURSOR up and down to select the speaker for which you want to output test tones, then use the CURSOR left and right to adjust so that the volume of the test tones from the various speakers is the same.

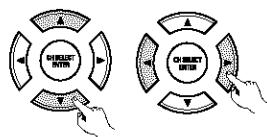

Flashing

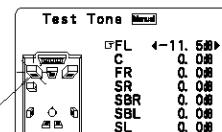

Example: When the volume is set to -11.5 dB while the Front L-ch speaker is selected

**8**

After the above settings are completed, press the ENTER button. The "Channel Level" screen reappears.

\* To cancel the settings, select "Level Clear" and "Yes" on the "Channel Level" screen, then make the settings again.

The level of each channel should be adjusted to 75 dB (C-weighted, slow meter mode) on a sound level meter at the listening position.

If a sound level meter is not available adjust the channels by ear so the sound levels are the same. Because adjusting the subwoofer level test tone by ear is difficult, use a well known music selection and adjust for natural balance.

**NOTE:** When adjusting the level of an active subwoofer system, you may also need to adjust the subwoofer's own volume control.


- \* When you adjust the channel levels while in the SYSTEM SETUP CHANNEL LEVEL mode, the channel level adjustments made will affect ALL surround modes. Consider this mode a Master Channel Level adjustment mode.
- \* After you have completed the SYSTEM SETUP CHANNEL LEVEL adjustments, you can then activate the individual surround modes and adjust channel levels that will be remembered for each of those modes. Then, whenever you activate a particular surround sound mode, your preferred channel level adjustments for just that mode will be recalled. Check the instructions for adjusting channel levels within each surround mode on page 27.
- \* You can adjust the channel levels for each of the following surround modes: DIRECT, STEREO, DOLBY/DTS SURROUND, 5/7 CH STEREO, MONO MOVIE, ROCK ARENA, JAZZ CLUB, VIDEO GAME, MATRIX and VIRTUAL.

## Setting the Digital In Assignment



- This setting assigns the digital input jacks of the AVR-2803 for the different input sources..

**1**

At the System Setup Menu select "Digital In Assignment".

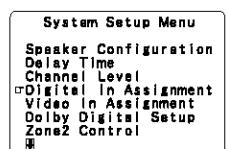**2**

Switch to the Digital In Assignment screen.

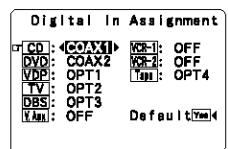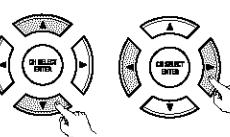**3**

Select the digital input jack to be assigned to the input source.

- To select the input source
- To select the digital input jack

Select "OFF" for input sources for which no digital input jacks are used.

\* If "Yes" is selected for "Default", the settings are automatically reset to the default values.

**4**

Enter the setting.  
The System Setup Menu reappears.

## NOTES:


- The OPTICAL 4 jacks on the AVR-2803's rear panel are equipped with an optical digital output jack for recording digital signals on a CD recorder, MD recorder or other digital recorder. Use this for digital recording between a digital audio source (stereo - 2 channel) and a digital audio recorder.
- Do not connect the output of the component connected to the OPTICAL 4 OUT jack on the AVR-2803's rear panel to any jack other than the OPTICAL 4 IN jack.
- "PHONO" and "TUNER" cannot be selected on the Digital In Assignment.

## Setting the Video In Assignment

- This setting assigns the color difference (component) video input jacks of the AVR-2803 for the different input sources..


**1**

At the System Setup Menu select "Video In Assignment".

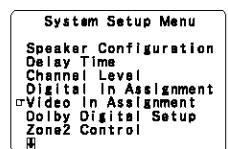


**2**

Switch to the Video In Assignment screen.

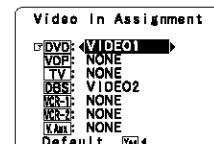**3**

 Select the component (Y, Pb/Cb and Pr/Cr) video input terminal to be assigned to the input source.



① Input source selection



② Component video terminal selection

Select "NONE" for sources for which the component (Y, Pb/Cb and Pr/Cr) video input is not to be used.


※ When the default, "Yes", is selected, the settings are reset to the factory defaults.

**4**ENTER the setting.  
The System Setup Menu reappears.**Setting the Dolby Digital Setup**


Sets the down-mixing method when not using a center speaker or surround speakers.

OFF: The dynamic range is not compressed.

ON: The dynamic range is compressed automatically according to the combination of speakers being used.

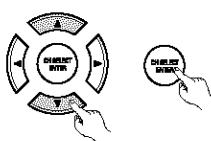**1**

At the System Setup Menu select "Dolby Digital Setup" and press the ENTER button.

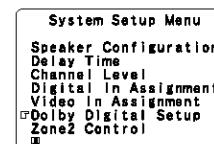**2**

Select "ON" if you want to use the Compression, "OFF" if you do not want to use it.


**NOTE:**

When not using a center speaker or surround speakers, the sound is played from the front speakers. If the sound should seem distorted because the input level exceeds the allowable input for the front speakers, set "Compression" to "ON".




**3**Enter the setting.  
The System Setup Menu reappears.**Setting the ZONE2 Control****[1] Setting the power amplifier assignment**

Make this setting to switch the power amplifier for the surround back channel to ZONE2.



If ZONE2 is selected, the signal that selected at ZONE2 is output at "SURR. BACK/ZONE2 PREOUT" terminals.

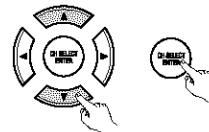**1**

At the System Setup Menu select "Zone2 Control" and press the ENTER button.

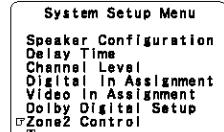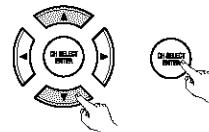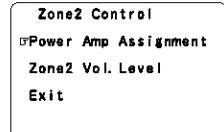**2**The "Zone2 Control" screen appears.  
Select "Power Amp Assignment" and press the ENTER button.**3**

Select "Surround Back" to use as the surround back channel, "Zone2" to use as Zone 2 out.

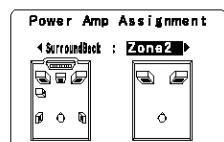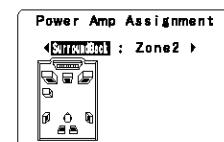


When "Surround Back" is selected




When "Zone2" is selected

**4**Enter the setting.  
At the "Zone2 Control" screen, select "Exit" and press the ENTER button.  
The System Setup Menu reappears.**[2] Setting the Zone2 vol. level**

Set the Zone 2 pre-out output level adjustment.

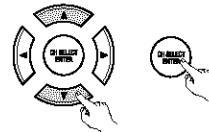**1**

At the System Setup Menu select "Zone2 Control" and press the ENTER button.

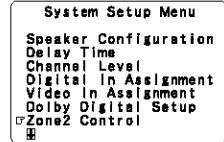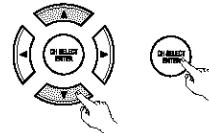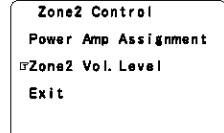**2**The "Zone2 Control" screen appears.  
Select "Zone2 Vol. Level" and press the ENTER button.

**3**


Select the desired setting.

**Variable:**

The level can be adjusted freely using the buttons on the remote control unit.

**0 dB, -40 dB:**

The output level is fixed at the set level and the volume can no longer be adjusted.

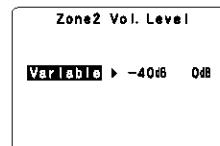
**4**

Enter the setting.


At the "Zone2 Control" screen, select "Exit" and press the ENTER button.  
The System Setup Menu reappears.

### Setting the Ext. In Subwoofer Level


 
- Set the method of playback of the analog input signal connected to the Ext.In Subwoofer.

**1**

At the System Setup Menu select "Ext.In Subwoofer Level".

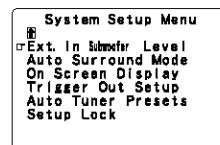**2**

Switch to the Ext.In Subwoofer Level screen.

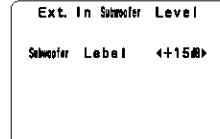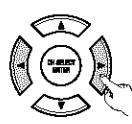**3**

Select the desired setting.

Select according to the specifications of the player being used. Also refer to the player's operating instructions.

+15dB (default) recommended. (0, +5, +10 and +15 can be selected.)

**4**

Enter the setting.


The System Setup Menu reappears.

### Setting the Auto Surround Mode


The surround mode used at last for the three types of input signals shown below is stored in the memory, and the signal is automatically played with that surround mode the next time it is input.

Note that the surround mode setting is also stored separately for the different input sources.

- ① Analog and PCM 2-channel signals
- ② 2-channel signals of Dolby Digital, DTS or other multi-channel format
- ③ Multi-channel signals of Dolby Digital, DTS or other multi-channel format

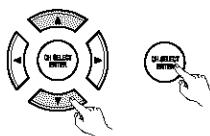**1**

At the System Setup Menu select "Auto Surround Mode" and press the ENTER button.

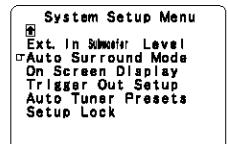**2**


Select "ON" if you want to use the auto surround mode, "OFF" if you do not want to use it.

**3**


Enter the setting.  
The System Setup Menu reappears.

### Setting the on screen display (OSD)

- Use this to turn the on-screen display (messages other than the menu screens) on or off.

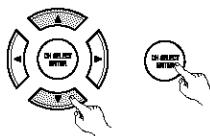**1**

At the System Setup Menu select "On Screen Display" and press the ENTER button.

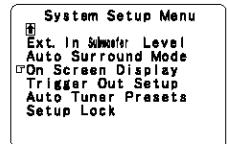**2**


Select "ON" or "OFF".

**3**


Enter the setting.  
The System Setup Menu reappears.

## Setting the Trigger Out Setup



- Sets the Trigger Out output for the different input sources.

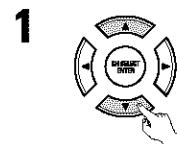

At the System Setup Menu select "Trigger Out Setup".

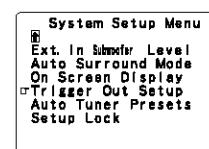

Switch to the Trigger Out Setup screen.

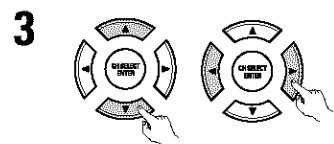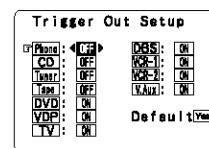

Select the input source and select "ON" or "OFF".




Enter the setting.  
The System Setup Menu reappears.

## Auto tuner preset


Use this to automatically search for FM broadcasts and store up to 40 stations at preset channels A1 to 8, B1 to 8, C1 to 8, D1 to 8 and E1 to 8.

### NOTE:

- If an FM station cannot be preset automatically due to poor reception, use the "Manual tuning" operation to tune in the station, then preset it using the manual "Preset memory" operation.

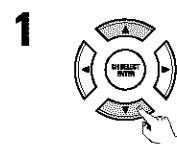

At the System Setup Menu select "Auto Tuner Presets".

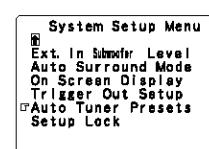

Press the ENTER button.  
The "Auto Preset Memory" screen appears.




**3**




Use the CURSOR button to select "Yes".  
"Search" flashes on the screen and searching begins.  
"Completed" appears once searching is completed.  
The display automatically switches to screen.

## Protecting the setting

- The system setup settings can be locked so that they cannot be changed easily.

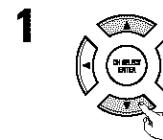

At the System Setup Menu select "Setup Lock".

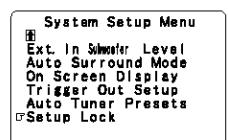

Switch to the Setup Lock screen.



Select "ON", to lock the system setup settings.



Press the ENTER button to finalize the setting and exit the system setup mode.  
When the setup lock function is activated, the settings listed below cannot be changed, and "Setup Locked" is displayed when related buttons are operated.

- System setup settings
- Surround parameter settings
- Tone control settings
- Channel level settings (including test tones)

To unlock, press the System Setup button again and display the Setup Lock screen, then select "OFF" and press "ENTER".

\* **System setup is complete. Once these settings are made, there is no need to change them unless different AV components are connected or the speakers are repositioned.**

## After completing system setup

This button can be pressed at any time during the system setup process to complete the process.



At the System Setup Menu, press the SYSTEM SETUP button.

\* The changed settings are entered and the on-screen display turns off.

### On-screen display signals

	Signals input to the AVR-2803		On-screen display signal output	
	VIDEO signal input jack (yellow)	S-video signal input jack	VIDEO MONITOR OUT video signal output jack (yellow)	S-video MONITOR OUT video signal output jack
1	X	X	O	O
2	O	X	O	X
3	X	O	X	O
4	O	O	X	O

(O: Signal X: No signal)

(O: On-screen signals output X: On-screen signals not output)

#### NOTES:


- The on-screen display signals are not output from the color difference (component) video signal MONITOR OUT jacks.
- For 4 above, the on-screen display signals are output to the VIDEO MONITOR OUT video signal output jack (yellow) if the monitor TV is not connected to the S-video MONITOR OUT video signal output jack.

## 8 REMOTE CONTROL UNIT


- The included remote control unit (RC-925) can be used to operate not only the AVR-2803 but other remote control compatible DENON components as well. In addition, the memory contains the control signals for other remote control units, so it can be used to operate non-Denon remote control compatible products.

### Inserting the batteries


- ① Remove the remote control unit's rear cover.

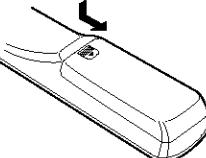

- ② Set three R6P/AA batteries in the battery compartment in the indicated direction.

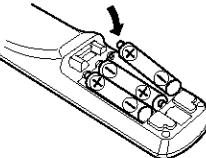


- ③ Put the rear cover back on.

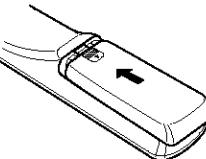

#### Notes on Batteries

- Use R6P/AA batteries in the remote control unit.
- The batteries should be replaced with new ones approximately once a year, though this depends on the frequency of usage.
- Even if less than a year has passed, replace the batteries with new ones if the set does not operate even when the remote control unit is operated nearby the set. (The included battery is only for verifying operation. Replace it with a new battery as soon as possible.)
- When inserting the batteries, be sure to do so in the proper direction, following the "⊕" and "⊖" marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
  - Do not use a new battery together with an old one.
  - Do not use two different types of batteries.
  - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- Remove the batteries from the remote control unit when you do not plan to use it for an extended period of time.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.

### Using the remote control unit

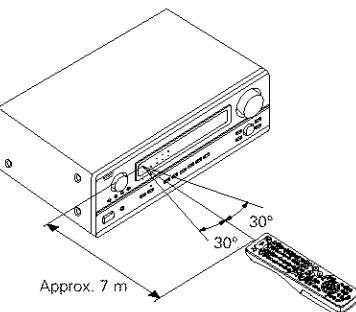



- Point the remote control unit at the remote sensor on the main unit as shown on the diagram.
- The remote control unit can be used from a straight distance of approximately 7 meters from the main unit, but this distance will be shorter if there are obstacles in the way or if the remote control unit is not pointed directly at the remote sensor.
- The remote control unit can be operated at a horizontal angle of up to 30 degrees with respect to the remote sensor.

#### NOTES:

 - It may be difficult to operate the remote control unit if the remote sensor is exposed to direct sunlight or strong artificial light.
- Do not press buttons on the main unit and remote control unit simultaneously. Doing so may result in malfunction.
- Neon signs or other devices emitting pulse-type noise nearby may result in malfunction, so keep the set as far away from such devices as possible.


## Operating DENON audio components

- 1** Use the mode selector buttons to select the component you want to operate.  
 • The function will change one step in the sequence described below each time the MODE SELECT button is pressed.

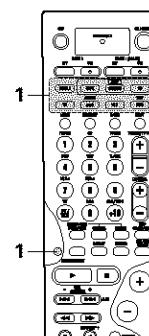


- 2** Operate the audio component.  
 • For details, refer to the component's operating instructions.  
 • It may not be possible to operate some models.

### 1. CD player (CD) system buttons

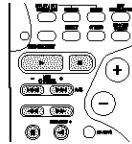


- ◀▶ : Manual search (forward and reverse)
- : Stop
- ▶ : Play
- ◀▶ : Auto search (to beginning of track)
- II : Pause
- DISC SKIP + : (for CD changers only)

### 2. Tape deck (TAPE) system buttons

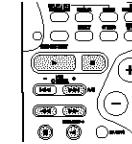

- ◀ : Rewind
- ▶ : Fast forward
- : Stop
- ▶ : Forward play
- II : Pause
- ◀ : Reverse play
- A/B : Switch between sides A and B


### 3. MD recorder (MD), CD recorder (CDR) system buttons

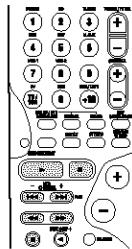

- ◀▶ : Manual search (forward and reverse)
- : Stop
- ▶ : Play
- ◀▶ : Auto search (to beginning of track)
- II : Pause

\* Default setting : CDR

### 4. Tuner system buttons

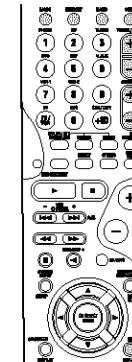

- |              |                                  |
|--------------|----------------------------------|
| TUNING +, -  | : Tuning up/down                 |
| BAND         | : Switch between AM and FM bands |
| MODE         | : Switch between AUTO and MANUAL |
| MEMORY       | : Preset memory                  |
| SHIFT        | : Switch preset channel range    |
| CHANNEL +, - | : Preset channel up/down         |
| RDS          | : RDS search                     |
- \* The tuner can be operated in the amplifier (CD, CDR/MD, or TAPE) mode.

## Preset memory

The included remote control unit can be used to operate devices of different brands by registering the preset number corresponding to the brand of your device.  
 For some models the remote control unit or the device may not operate properly. In this case, use the learning function (page 20) to store your device's remote control signals in the included remote control unit.

- 1** Press the power ON/SOURCE button and the OFF button at the same time.  
 • The LEARNED/TX indicator flashes.




- 2** Press the mode button of the equipment that is to be entered to a preset memory.  
 • The mode button flashes.



- 3** Referring to the included List of Preset Codes, use the number buttons to input the preset code (a 4-digit number) for the manufacturer of the component whose signals you want to store in the memory.

- 4** When stored correctly, the mode button and the LEARNED/TX indicator will light.

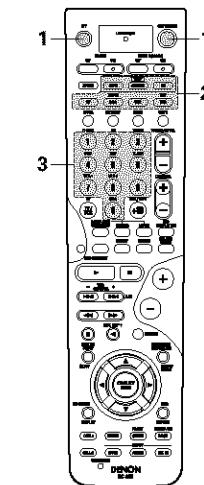

- 5** To store the codes of another component in the memory, repeat steps 1 to 4.

### NOTES:

- Depending on the model and year of manufacture, this function cannot be used for some models, even if they are of makes listed on the included list of preset codes.
- Some manufacturers use more than one type of remote control code. Refer to the included list of preset codes to change the number and check it out.
- The preset memory can be set for one component only among the following: CDR/MD, DVD/VDP and DBS/CABLE.

 
The preset codes are as follows upon shipment from the factory and after resetting:

TV, VCR.....	HITACHI
CD, TAPE.....	DENON
CDR/MD.....	DENON (CDR)
DVD/VDP.....	DENON (DVD)
DBS/CABLE.....	ABC (CABLE)

DVD preset codes	0000	0001
DENON Model No.	DVD-900 DVD-1000 DVD-1500 DVD-2800 DVD-2800II DVD-3800 DVD-A1	DVD-800 DVD-1600 DVD-2000 DVD-2500 DVD-3000 DVD-3300


## Operating a component stored in the preset memory

- 1** Press the mode selector button for the component you want to operate.



### NOTE:

- For the DVD player remote control buttons, function names may differ according to manufacturer. Compare with the remote control operation of the various components.

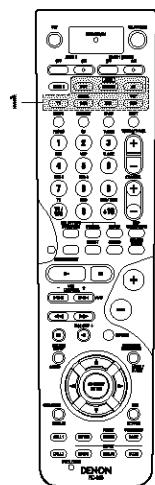


- 2** Operate the component.

- For details, refer to the component's operating instructions.
- ※ Some models cannot be operated with this remote control unit.


### 1. Digital video disc player (DVD, DVD SETUP) system buttons

- |                      |                                       |
|----------------------|---------------------------------------|
| POWER<br>(ON/SOURCE) | : Power on/standby                    |
| ◀◀, ▶▶               | : Manual search (forward and reverse) |
| ■                    | : Stop                                |
| ▶                    | : Play                                |
| ◀◀◀, ▶▶▶             | : Auto search (to beginning of track) |
|                      | : Pause                               |
| 0 ~ 9, +10           | : 10 key                              |
| DISC SKIP +          | : Disc skip (for DVD changer only)    |
| DISPLAY              | : Display                             |
| MENU                 | : Menu                                |
| RETURN               | : Return                              |
| SETUP                | : Setup                               |
| ENTER                | : Enter                               |
| ▲, ▼, ▲, ▼           | : Cursor up, down, left and right     |

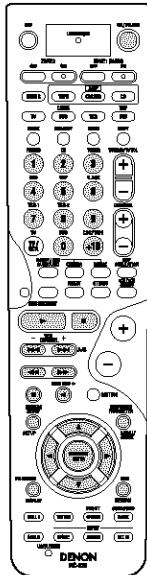


### 2. Video disc player (VDP) system buttons

- |                      |                                       |
|----------------------|---------------------------------------|
| POWER<br>(ON/SOURCE) | : Power on/standby                    |
| ◀◀, ▶▶               | : Manual search (forward and reverse) |
| ■                    | : Stop                                |
| ▶                    | : Play                                |
| ◀◀◀, ▶▶▶             | : Auto search (cue)                   |
|                      | : Pause                               |
| 0 ~ 9, +10           | : 10 key                              |

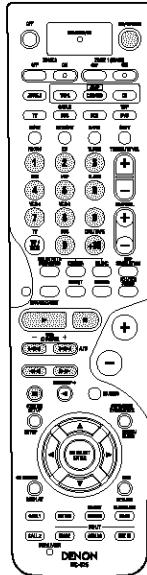


### 3. Video deck (VCR) system buttons

- |                      |                                       |
|----------------------|---------------------------------------|
| POWER<br>(ON/SOURCE) | : Power on/standby                    |
| ◀◀, ▶▶               | : Manual search (forward and reverse) |
| ■                    | : Stop                                |
| ▶                    | : Play                                |
|                      | : Pause                               |
| Channel +, -         | : Channels                            |

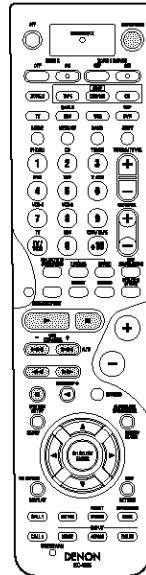

### 4. Monitor TV (TV), digital broadcast satellite (DBS) tuner and cable (CABLE) system buttons

- |                      |                                      |
|----------------------|--------------------------------------|
| POWER<br>(ON/SOURCE) | : Power on/standby                   |
| MENU                 | : Menu                               |
| ▲, ▼, ▲, ▼           | : Cursor up, down, left and right    |
| ENTER                | : Enter                              |
| CHANNEL              | : Switch channels                    |
| +,-                  | : 0 ~ 9, +10                         |
| TV/VCR               | : Switch between TV and video player |
| TV VOL +, -          | : Volume up/down                     |
| DISPLAY              | : Switch display                     |
| RETURN               | : Return                             |

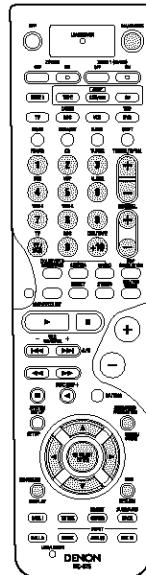


### NOTES:

- For this CD, CDR, MD and TAPE components, buttons can be operated in the same way as for Denon audio components.
- The television can be operated in the DVD/VDP, VCR and TV modes.


## Learning function

If your AV component is not a DENON product or if it cannot be operated using the preset memory, it can be controlled with the included remote control unit by storing its remote control signals in the remote control unit. For some remote control signals it is not possible to "learn" the signals or the device will not operate properly. In such cases use the remote control unit included with the device to operate it.

- 1 Press the USE/LEARN button with the tip of a pen etc., to set the learn mode.  
• Both the mode selector buttons and LEARNED/TX indicator flash.

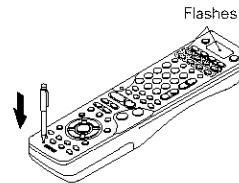

 - 2 Press the mode button of the equipment for which learning is desired.  
• Mode button and LEARNED/TX indicator flash.



- 3 Press the button that is to be learned. The LEARNED/TX indicator stops flashing and the mode button lights.  
• Mode button and LEARNED/TX indicator flashed if a button that cannot be "learned" is pressed.  
• To cancel, press the USE/LEARN button.

- 4 Point the remote control units directly at each other and press and hold  
in the button on the other remote control unit which you want to "learn".




- 5 The mode button and the LEARNED/TX indicator lights, release the button on the other remote control unit.  
• The mode button and the LEARNED/TX indicator start flashing again.




### NOTES:

- If the codes could not be stored, the LEARNED/TX indicator start flashing rapidly. For limited number of models, codes cannot be stored in RC-925.
- If the mode button and LEARNED/TX indicator start flashing rapidly, this means that the memory is already full, and the code you have just attempted to store was not stored. To "learn" that code, first perform the resetting operation. (See page 21.)

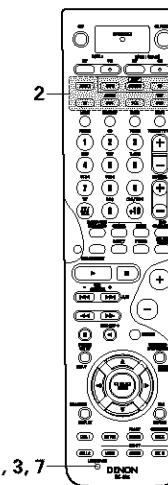

- 6 To "learn" other buttons, repeat steps 2 to 5.

- 7 Once the learning operation is completed, press the USE/LEARN button again. The mode button and the LEARNED/TX indicator stop flashing and the learning mode is cancelled.

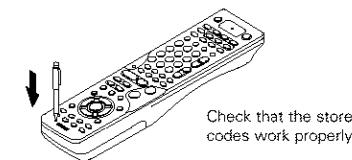


## System call

The accessory remote control unit is equipped with "system call" function allowing a series of remote control signals to be transmitted by pressing a single button.

This function can be used for example to turn on the amplifier's power, select the input source, turn on the monitor TV's power, turn on the source component's power and set the source to the play mode, all at the touch of a button.

### (1) System call buttons

 - Up to 10 signals each can be stored at the "CALL1" and "CALL2" buttons.



### (2) Storing system call signals

- 1 Press the power ON/SOURCE button and the OFF button at the same time.  
• The LEARNED/TX indicator flashes.



- 2 Press the CALL 1 button.  
• The mode selector buttons and LEARNED/TX indicator flash.




- 3 Press the mode buttons of the equipment that is to be registered to System Call.



- 4 Press the buttons whose remote control signals you want to store one by one.

- 5 Repeat steps 3 and 4 to register the desired buttons.

- 6 Press the CALL1 or CALL2 button and register System Call.

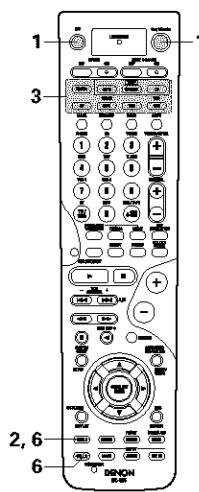

### NOTES:

- The remote control signals for the buttons pressed while storing the system call signals are transmitted when the buttons are pressed, so cover the remote sensor or take other measures so that the components do not operate while the signals are being stored.
- The mode button and LEARNED/TX indicator flashing rapidly if you have already stored the maximum number of signals.

### (3) Using the system call function

- 1 Press the button at which the system call signals have been stored.  
• The stored signals are transmitted successively.

## Punch Through


### (1) Punch through button

Buttons used in the CD, CDR/MD, TAPE, DVD/VDP, and VCR modes can be assigned to the buttons shown on the diagram at the right which are not normally used in the TV and DBS/CABLE modes.

For example, when the CD mode is set to the punch through mode in the TV mode, the CD mode's PLAY, STOP, MANUAL SEARCH, AUTO SEARCH, PAUSE and DISC SKIP buttons' signals are sent in the TV mode.

### (2) Making the punch through setting

- Press the power ON/SOURCE button and the OFF button at the same time.  
• The LEARNED/TX indicator flashes.

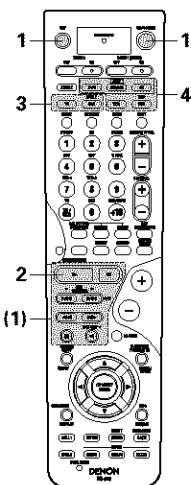


- Press the ▶ (play) button.  
• TV and DBS/CABLE mode buttons and LEARNED/TX indicator flash.



- Press the mode button of the equipment for which Punch Through is to be set.  
• The CD, CDR/MD, TAPE, DVD/VDP, and VCR mode buttons and LEARNED/TX indicator will flash.



 - Press the mode button of the equipment that is to be punched through.  
• The mode button that was set will light..



**(2) Resetting the punch through setting**

- 1** Press the power ON/SOURCE button and the OFF button at the same time.  
• The LEARNED/TX indicator flashes.




- 2** Press the ▶ (play) button.  
• TV and DBS/CABLE mode buttons and LEARNED/TX indicator flash.



- 3** Press the mode button of the equipment (TV or DBS/CABLE) that is to be reset.  
• The CD, CDR/MD, TAPE, DVD/VDP, and VCR mode buttons and LEARNED/TX indicator will flash.



- 4** Press the mode button of the equipment that is to be reset again.  
• During the resetting operation, the selected mode button and the LEARNED/TX indicator will light; they will return to steady state upon completion.

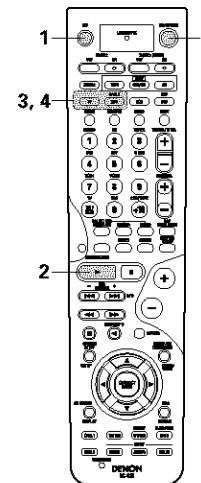**9 OPERATION****Before operating**

- 1** Refer to "CONNECTIONS" (pages 4 to 8) and check that all connections are correct.

- 2** Select "AMP mode" using the TAPE, CDR/MD or CD button. (only when operating with the remote control unit)



(Remote control unit)


- 3** Turn on the power.  
Press the POWER operation switch (button).





- **■ ON/STANDBY**  
The power turns on and "ON/STANDBY" indicator is light.  
Several seconds are required from the time the power operation switch is set to the "■ ON/STANDBY" position until sound is output. This is due to the built-in muting circuit that prevents noise when the power switch is turned on and off.  
Set the power operation switch to this position to turn the power on and off from the included remote control unit (RC-925).

- **■ OFF**  
The power turns off and "ON/STANDBY" indicator is off.  
In this position, the power cannot be turned on and off from the remote control unit (RC-925).


- 4** The front speakers switch as shown below each time the FRONT SPEAKER button is pressed.

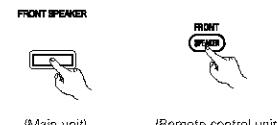

FRONT SPEAKER  
FRONT  
FRONT A → FRONT B → FRONT A+B

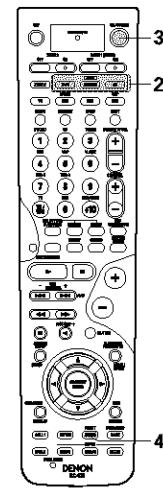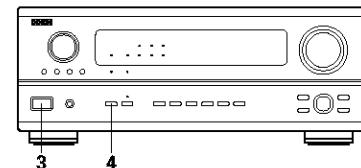


## Playing the input source

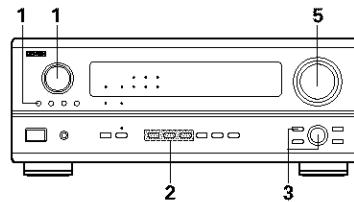

- 1** Select the input source to be played.

**Example: CD**

 

- \* To select the input source when ZONE2/REC OUT or TUNING PRESET is selected, press the SOURCE button then operate the input function selector.

- 2** Select the input mode.

- Selecting the analog mode



Press the ANALOG button to switch to the analog input.



- Selecting the external input (EXT. IN) mode
- Press the EXT. IN (on the EXT. IN button on the remote control unit) to switch the external input.



- Selecting the AUTO, PCM and DTS modes
- The mode switches as shown below each time the INPUT MODE button is pressed.

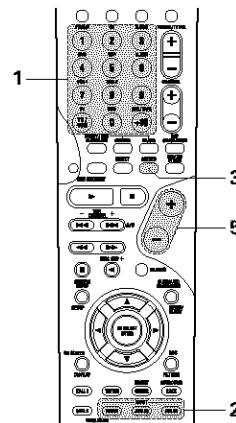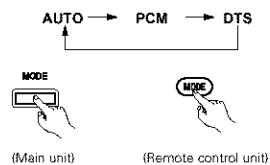

### Input mode selection function

Different input modes can be selected for the different input sources. The selected input modes for the separate input sources are stored in the memory.

① AUTO (auto mode)

In this mode, the types of signals being input to the digital and analog input jacks for the selected input source are detected and the program in the AVR-2803's surround decoder is selected automatically upon playback. This mode can be selected for all input sources other than PHONO and TUNER.

The presence or absence of digital signals is detected, the signals input to the digital input jacks are identified and decoding and playback are performed automatically in DTS, Dolby Digital or PCM (2 channel stereo) format. If no digital signal is being input, the analog input jacks are selected.

Use this mode to play Dolby Digital signals.

② PCM (exclusive PCM signal playback mode)  
Decoding and playback are only performed when PCM signals are being input.

Note that noise may be generated when using this mode to play signals other than PCM signals.

③ DTS (exclusive DTS signal playback mode)

Decoding and playback are only performed when DTS signals are being input.

④ ANALOG (exclusive analog audio signal playback mode)

The signals input to the analog input jacks are decoded and played.

⑤ EXT. IN (external decoder input jack selection mode)

The signals being input to the external decoder input jacks are played without passing through the surround circuitry.

**NOTE:**

 
- Note that noise will be output when CDs or LDs recorded in DTS format are played in the "PCM" (exclusive PCM signal playback) or "ANALOG" (exclusive PCM signal playback) mode. Select the AUTO or DTS mode when playing signals recorded in DTS from a laser disc player or CD player.

### Note on playing a source encoded with DTS

- Noise may be generated at the beginning of playback and while searching during DTS playback in the AUTO mode. If so, play in the DTS mode.

- 3** Select the play mode.

**Example: Stereo**




- \* To select the surround mode while adjusting the surround parameters, channel volume or tone control, press the surround mode button then operate the selector.

- 4** Start playback on the selected component.

- For operating instructions, refer to the component's manual.

- 5** Adjust the volume.

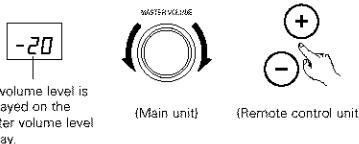

The volume level is displayed on the master volume level display.


- \* The volume can be adjusted within the range of -80 to 0 to 18 dB, in steps of 0.5 dB. However, when the channel level is set as described on page 12 or pages 27 and 28, if the volume for any channel is set at +1 dB or greater, the volume cannot be adjusted up to 18 dB. (In this case the maximum volume adjustment range is "18 dB — (Maximum value of channel level)".)

### Input mode when playing DTS sources

 
- Noise will be output if DTS-compatible CDs or LDs are played in the "ANALOG" or "PCM" mode. When playing DTS-compatible sources, be sure to connect the source component to the digital input jacks (OPTICAL/COAXIAL) and set the input mode to "DTS".

### Input mode display


- In the AUTO mode




- In the DIGITAL PCM mode

 

- In the DIGITAL DTS mode

 

- In the ANALOG mode

 

One of these lights, depending on the input signal.



### Input signal display

- DOLBY DIGITAL



- DTS



- PCM



 
- \* The [DIGITAL] indicator lights when digital signals are being input properly. If the [DIGITAL] indicator does not light, check whether the digital input component setup (page 13) and connections are correct and whether the component's power is turned on.

**NOTE:**

- The [DIGITAL] indicator will light when playing CD-ROMs containing data other than audio signals, but no sound will be heard.

## Playback using the external input (EXT. IN) jacks

- 1** Set the external input (EXT. IN) mode.  
Press the EXT. IN to switch the external input.





Once this is selected, the input signals connected to the FL (front left), FR (front right), C (center), SL (surround left), SR (surround right), SBL (surround back left) and SBR (surround back right) channels of the EXT. IN jacks are output directly to the front (left and right), center, surround (left and right) and surround back (left and right) speaker systems as well as the pre-out jacks without passing through the surround circuitry.

In addition, the signal input to the SW (subwoofer) jack is output to the PRE OUT SUBWOOFER jack.

- 2** Cancelling the external input mode  
To cancel the external input (EXT. IN) setting, press the input mode (AUTO, PCM, DTS) or ANALOG button to switch to the desired input mode. (See page 23.)



 - When the input mode is set to the external input (EXT. IN), the surround mode (DIRECT, STEREO, DOLBY/DTS SURROUND, 5/7CH STEREO or DSP SIMULATION) cannot be set.

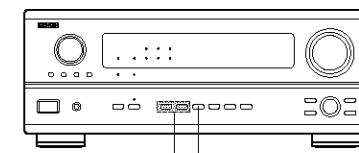


### NOTES:

- In play modes other than the external input mode, the signals connected to these jacks cannot be played. In addition, signals cannot be output from channels not connected to the input jacks.
- The external input mode can be set for any input source. To watch video while listening to sound, select the input source to which the video signal is connected, then set this mode.

## Playing audio sources (CDs and DVDs)

The AVR-2803 is equipped with two 2-channel playback modes exclusively for music. Select the mode to suit your tastes.

 - 1** **DIRECT mode**  
Use this mode to achieve good quality 2-channel sound while watching images. In this mode, the audio signals bypass such circuits as the tone circuit and are transmitted directly, resulting in good quality sound.



- 2** **STEREO mode**  
Use this mode to adjust the tone and achieve the desired sound while watching images.




## After starting playback

### [1] Adjusting the sound quality (TONE)

- The tone control function will not work in the Direct mode.
- The tone control setting only affects the front speakers.
- If the tone control function is used, the main volume cannot be adjusted up to 18 dB. (The maximum main volume level differs in the different surround modes.).

- 1** The tone switches as follows each time the TONE CONTROL button is pressed.

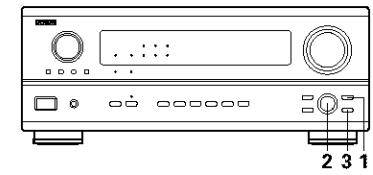

- 2** With the name of the volume to be adjusted selected, turn the SELECT knob to adjust the level.

- To increase the bass or treble: Turn the control clockwise. (The bass or treble sound can be increased to up to +10 dB in steps of 2 dB.)
- To decrease the bass or treble: Turn the control counterclockwise. (The bass or treble sound can be decreased to up to -10 dB in steps of 2 dB.)

- 3** If you do not want the bass and treble to be adjusted, turn on the tone defeat mode.




\* The signals do not pass through the bass and treble adjustment circuits, providing higher quality sound.

## [2] Listening over headphones

- 1** Plug the headphones' plug into the jack.

\* Connect the headphones to the PHONES jack.  
The pre-out output (including the speaker output) is automatically turned off when headphones are connected.

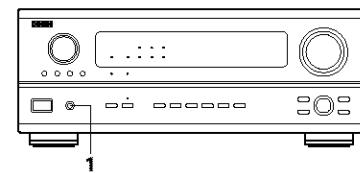

### NOTE:

To prevent hearing loss, do not raise the volume level excessively when using headphones.

## [3] Turning the sound off temporarily (MUTING)

- 1** Use this to turn off the audio output temporarily.



Press the MUTING button.

\* Cancelling MUTING mode.

Press the MUTING button again or adjust the main volume level.

(Remote control unit)


 


## [4] Combining the currently playing sound with the desired image

- 1** Simulcast playback

Use this switch to monitor a video source other than the audio source.

Press the VIDEO SELECT button, turn the FUNCTION knob until the desired source appears on the display.

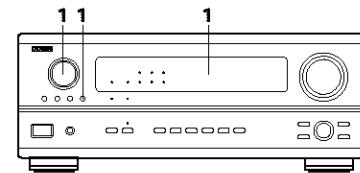

\* Cancelling simulcast playback.


- Select "SOURCE" using the VIDEO SELECT button and the FUNCTION knob.
- Switch the program source to the component connected to the video input.

Display  
IN=U SOURCE

## [5] Checking the currently playing program source, etc.

 - 1** On screen display

- Each time an operation is performed, a description of that operation appears on the display connected to the unit's VIDEO MONITOR OUT jack.



(Remote control unit)

Also, the unit's operating status can be checked during playback by pressing the remote control unit's ON SCREEN/DISPLAY button.

Such information as the position of the input selector and the surround parameter settings is output in sequence.


### Front panel display

- Descriptions of the unit's operations are also displayed on the front panel display.

In addition, the display can be switched to check the unit's operating status while playing a source by pressing the STATUS button.



(Main unit)

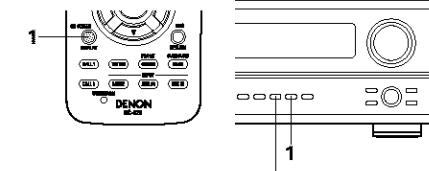

### Using the dimmer function

- Use this to change the brightness of the display.

The display brightness changes in four steps (bright, medium, dim and off) by pressing the main unit's DIMMER button repeatedly.



(Main unit)


## Multi-source recording/playback

### [1] Playing one source while recording another (REC OUT mode)

- 1** Press the ZONE2/REC button.



(Main unit)

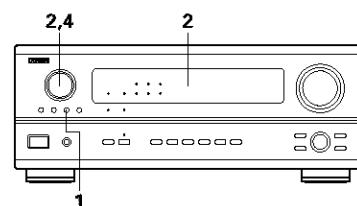

- 2** With "RECOUT SOURCE" displayed, turn the FUNCTION knob to select the source you wish to record.

- The "REC" indicator and the indicator of the selected source light.



(Main unit)



- 3** Set the recording mode.

- For operating instructions, refer to the manual of the component on which you want to record.




(Main unit)

- 4** To cancel, turn the function knob and select "SOURCE".


- When "SOURCE" is selected, the "REC" indicator turns off.

**NOTES:**

- Recording sources other than digital inputs selected in the REC OUT mode are also output to the Zone 2 preout jacks.
- Digital signals are not output from the REC SOURCE or audio output jacks.

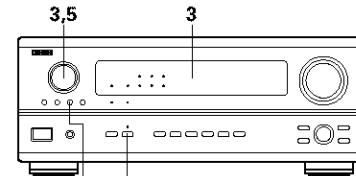**[2] Outputting a program source to an amplifier, etc., in a different room (ZONE2 mode)****1** Press the ZONE2 button.**2** Press the ZONE2/REC button.**3** With "ZONE2 SOURCE" displayed, turn the FUNCTION knob and select the source you wish to output.

 
- The "MULTI" indicator and the indicator of the selected source light.

**4** Start playing the source to be output.

- For operating instructions, refer to the manuals of the respective components.

**5** To cancel, turn the function knob and select "SOURCE".

 - When "SOURCE" is selected, the "MULTI" indicator turns off.


**NOTES:**

- The signals of the source selected in the ZONE2 mode are also output from the VCR-1, VCR-2 and CDR/TAPE recording output jacks.
- Digital signals are not output from the ZONE2 audio output jacks.

**[3] Remote control unit operations during multi-source playback (selecting the input source)**

 This operation is possible when ZONE2 mode is selected.

This operation is not possible in the REC OUT mode.


**1** Select "ZONE2" using the ZONE 2 button.**2** Press the ZONE2 "ON" button.

※ To cancel the ZONE2 mode.

Press the ZONE2 "OFF" button.

**3** Press the input source button.

- The ZONE2 source switches directly.

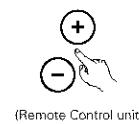
**4** The output level of the ZONE 2 OUT terminals can be controlled using the VOLUME + and - buttons on the remote control unit.

The output level of ZONE 2 OUT can be controlled only if ZONE2 vol. level is set "Variable" at Zone2 Control in System Setup Menu. (See page 14)


※ DEFAULT SETTING (ZONE2 VOLUME LEVEL) : --- dB (MINIMUM)

**5** When the ZONE2 SOURCE function is set to TUNER,

 the preset channel can be selected using the CHANNEL + and - buttons on the remote control unit.



The main zone output can be turned on and off with the "MAIN ON/OFF" button.

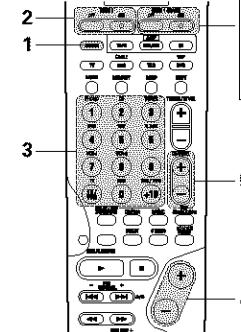

## Multi-zone playback with multi-source


### MULTI ZONE MUSIC ENTERTAINMENT SYSTEM

- When the outputs of the "ZONE 2" OUT terminals are wired and connected to integrated amplifiers installed in other rooms, different sources can be played in rooms other than the main zone in which this unit and the playback devices are installed. (Refer to ZONE 2 on the diagram below.)
- ZONE 2 SPEAKER OUT can be used when "ZONE2" is selected at System Setup Menu "Power Amp Assignment". In this case, Surround Back Speaker OUT cannot be used for MAIN ZONE. (See page 14.)


#### NOTES:

- For the AUDIO output, use high quality pin-plug cords and wire in such a way that there is no humming or noise.
- For instructions on installation and operation of separately sold devices, refer to the devices' operating instructions.

### MULTI ZONE MUSIC ENTERTAINMENT SYSTEM (When using PREOUT)

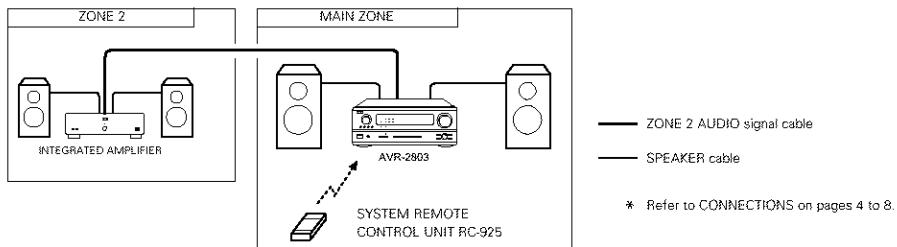

### MULTI ZONE MUSIC ENTERTAINMENT SYSTEM (When using SPEAKER OUT)

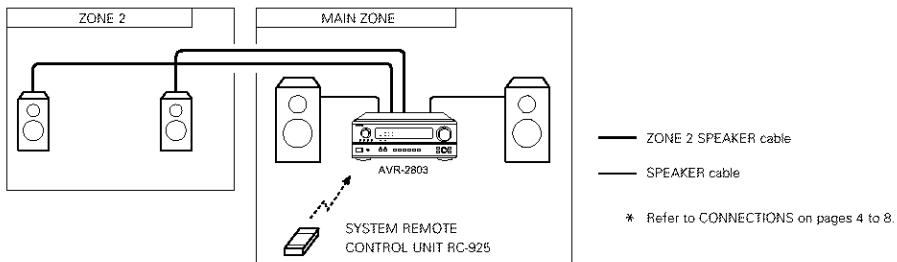

## 10 SURROUND

### Before playing with the surround function

- Before playing with the surround function, be sure to use the test tones to adjust the playback level from the different speakers. This adjustment can be performed with the system setup (see page 12) or from the remote control unit, as described below.
- Adjusting with the remote control unit using the test tones is only possible in the "Auto" mode and only effective in the DOLBY/DTS SURROUND modes. The adjusted levels for the different modes are automatically stored in the memory.

1



Press the TEST TONE button.

2



(Remote control unit)

Test tones are output from the different speakers. Use the channel volume adjust buttons to adjust so that the volume of the test tones is the same for all the speakers.

3



After completing the adjustment, press the TEST TONE button again.

1





Select the speaker whose level you want to adjust.

2



Adjust the level of the selected speaker.

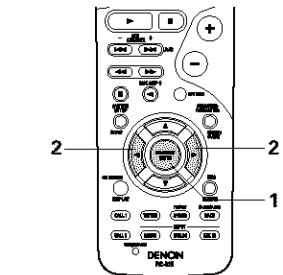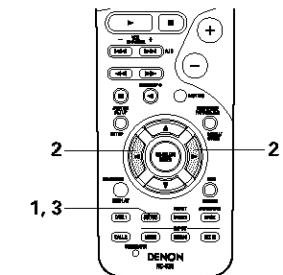

#### NOTES:

- The adjustment range for the different channels is +12 dB to -12 dB.
- The sound from the subwoofer can be cut by lowering the SW (subwoofer) setting one step from -12 dB (setting it to "OFF").

\* When the surround back speaker setting is set to "1spkr" for "Speaker Configuration", this is set to "SB".

## Fader function

 
- This function makes it possible to lower the volume of the front channels (FL, C and FR) or the rear channels (SL, SR, SBL and SBR) together. Use it for example to adjust the balance of the sound from the different positions when playing multi-channel music sources.

**1** Select "FADER".



(Remote control unit)

The channel switches in the order shown below each time this button is pressed.




**2** Press the  $\blacktriangleleft$  button to reduce the volume of the front channels, the  $\triangleright$  button to reduce the volume of the rear channels.

\* The fader function does not affect the SW channel.



(Remote control unit)

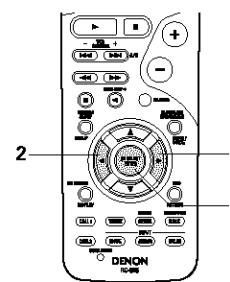

Fader	FRONT $\blacktriangleleft$ > REAR
FL	0.0dB
C	0.0dB
FR	0.0dB
SR	0.0dB
SBR	0.0dB
SBL	0.0dB
SL	0.0dB

This is only displayed when setting the fader control.

- The channel whose channel level is adjusted lowest can be faded to -12 dB using the fader function.
- If the channel levels are adjusted separately after adjusting the fader, the fader adjustment values are cleared, so adjust the fader again.

## Dolby Surround Pro Logic II mode



**1** Select the Dolby Surround Pro Logic II mode.  
• The Dolby Pro Logic indicator lights.




(Main unit)



(Remote control unit)



DOLBY PLII cine

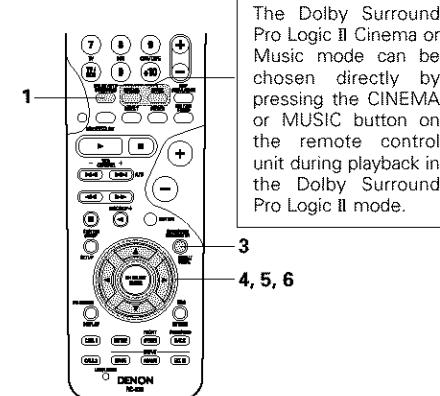

The Dolby Surround Pro Logic II Cinema or Music mode can be chosen directly by pressing the CINEMA or MUSIC button on the remote control unit during playback in the Dolby Surround Pro Logic II mode.

**Surround parameters ①****Pro Logic II Mode:**

The Cinema mode is for use with stereo television shows and all programs encoded in Dolby Surround. The Music mode is recommended as the standard mode for autosound music systems (no video), and is optional for A/V systems.

The Dolby PL mode offers the same robust surround processing as original Pro Logic in case the source contents is not of optimum quality.

Select one of the modes ("Cinema", "Music" or "Dolby PL").

**Panorama Control:**

This mode extends the front stereo image to include the surround speakers for an exciting "wraparound" effect with side wall imaging.

Select "OFF" or "ON".

**Dimension Control:**

This control gradually adjust the soundfield either towards the front or towards the rear.

The control can be set in 7 steps from 0 to 6.



 

**Center Width Control:**

This control adjust the center image so it may be heard only from the center speaker; only from the left/right speakers as a phantom image; or from all three front speakers to varying degrees.




The control can be set in 8 steps from 0 to 7.

**DTS NEO:6 mode**



- Surround playback can be performed for the analog input and PCM digital input 2-channel signals.

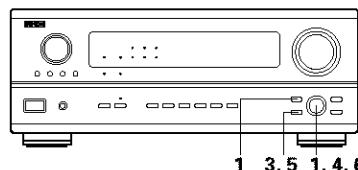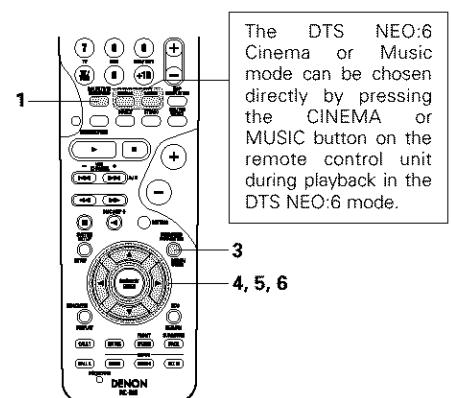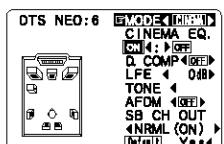**1 Select the DTS NEO:6 mode.****2 Play a program source.****3 Set the surround parameter mode.**

 This is the screen when operated with the remote control unit.

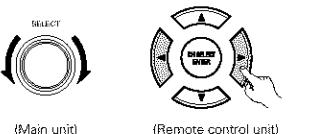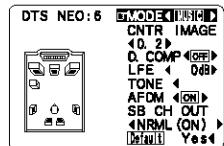**4 Select the play mode.****Display**

This is the screen when operated with the remote control unit.

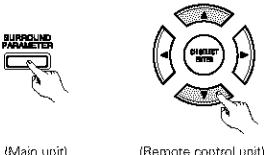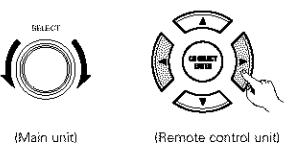**5 Select the various parameters. (See "Surround parameters ③" on page 33 for a description of the various parameters.)****6 Set the various surround parameters.**


**7** When the surround parameters are set using the buttons on the main unit, stop operating buttons after completing the settings. The settings are automatically finalized and the normal display reappears after several seconds.

When the settings are made using the buttons on the remote control unit, press the SURROUND PARAMETER button to finish.

**NOTE:**

- When "Default" is selected and the **◀** cursor button is pressed, "MODE" and "TONE" are automatically reset to the default values and "CINEMA EQ" is set to "OFF".


## Dolby Digital mode (only with digital input) and DTS Surround mode (only with digital input)

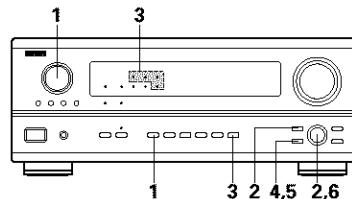

### 1 Select the input source.

Playback with digital input

 - ① Select an input source set to digital (COAXIAL/OPTICAL) (see page 13).



(Main unit)



(Remote control unit)

- ② Set the input mode to "AUTO" or "DTS".



(Main unit)




(Remote control unit)

### 2 Select the Dolby/DTS Surround mode.



 (Remote control unit)

When performing this operation from the main unit's panel, press the SURROUND MODE button, then turn the SELECT knob and select Dolby Pro logic II or DTS NEO:6.



(Main unit)

### 3 Play a program source with the mark.



- The Dolby Digital indicator lights when playing Dolby Digital sources.




- The DTS indicator lights when playing DTS sources.



- The SIGNAL DETECT indicator lights when playing 6.1-channel surround sources containing the identification signal.

\* When the SIGNAL DETECT indicator is lit, we recommend turning the surround back channel using the SURROUND BACK button on the remote control unit and main unit during playback.

\* To use DTS 96/24 sources with the optimum system, we recommend turning the surround back channel off.

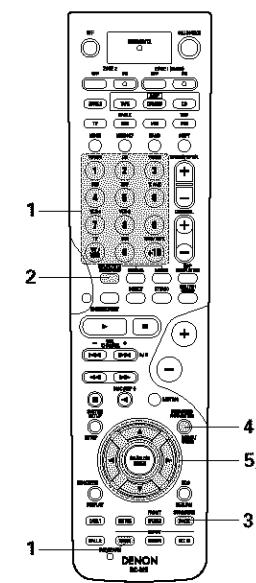


### 4 Display the surround parameter menu.



(Main unit)



(Remote control unit)

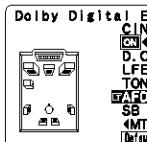

**NOTE:** The display on the screen differs depending on whether you are performing the operation from the main unit or the remote control unit.

### 5 Select the various parameters.

 


(Main unit)



(Remote control unit)

### 6 Adjust the parameter settings.



(Main unit)



(Remote control unit)


#### ■ Dialogue Normalization

 The dialogue normalization function is activated automatically when playing Dolby Digital program sources. Dialogue normalization is a basic function of Dolby Digital which automatically normalizes the dialog level (standard level) of the signals which are recorded at different levels for different program sources, such as DVD, DTV and other future formats that will use Dolby Digital. These contents can be verified with the STATUS button.


OFFSET - 4dB

The number indicates the normalization level when the currently playing program is normalized to the standard level.

**NOTE:** When "Default" is selected and the **◀** cursor button is pressed, "CINEMA EQ." and "D.COMP." are automatically turned off, "LFE" is reset, and the tone is set to the default value.




(Main unit)

 

(Remote control unit)



 (Remote control unit)



(Main unit)



(Remote control unit)

**Surround parameters ②****CINEMA EQ. (Cinema Equalizer):**

The Cinema EQ function gently decreases the level of the extreme high frequencies, compensating for overly-bright sounding motion picture soundtracks. Select this function if the sound from the front speakers is too bright.

This function only works in the Dolby Pro Logic, Dolby Digital, DTS Surround, DTS NEO:6 and WIDE SCREEN modes. (The same contents are set for all operating modes.)

**D.COMP. (Dynamic Range Compression):**

Motion picture soundtracks have tremendous dynamic range (the contrast between very soft and very loud sounds). For listening late at night, or whenever the maximum sound level is lower than usual, the Dynamic Range Compression allows you to hear all of the sounds in the soundtrack (but with reduced dynamic range). (This only works when playing program sources recorded in Dolby Digital or DTS.) Select one of the four parameters ("OFF", "LOW", "MID" (middle) or "HI" (high)). Set to OFF for normal listening.

**LFE (Low Frequency Effect):**

This sets the level of the LFE (Low Frequency Effect) sounds included in the source when playing program sources recorded in Dolby Digital or DTS.

If the sound produced from the subwoofer sounds distorted due to the LFE signals when playing Dolby Digital or DTS sources when the peak limiter is turned off with the subwoofer peak limit level setting (system setup menu), adjust the level as necessary.

Program source and adjustment range:

1. Dolby Digital: -10 dB to 0 dB
2. DTS Surround: -10 dB to 0 dB

\* When DTS encoded movie software is played, it is recommended that the LFE LEVEL be set to 0 dB for correct DTS playback.

\* When DTS encoded music software is played, it is recommended that the LFE LEVEL be set to -10 dB for correct DTS playback.

**TONE:**

This adjusts the tone control. (See "Surround parameters ③" on page 33.)

**SB CH OUT:**

## (1) Dolby Digital/DTS source

- "OFF" ..... Playback is conducted without using the surround back speaker.
- "NON MTRX" ..... Playback is conducted using the surround back speaker.  
The same signals those of the surround channels are output from the surround back channels.
- "MTRX ON" ..... Playback is conducted using the surround back speaker.  
Surround back channel is reproduced using digital matrix processing.
- "NRML (OFF)" ..... Playback is conducted without using the surround back speaker.
- "NRML (ON)" ..... Playback is conducted using the surround back speaker.  
Surround back channel is reproduced using digital matrix processing.

## (2) Other source

- "OFF" ..... Playback is conducted without using the surround back speaker.
- "ON" ..... Playback is conducted using the surround back speaker.

**NOTE:** This operation can be performed directly using the "SURROUND BACK" button on the main unit's panel.

**11 DSP SURROUND SIMULATION**

- The AVR-2803 is equipped with a high performance DSP (Digital Signal Processor) which uses digital signal processing to synthetically recreate the sound field. One of seven preset surround modes can be selected according to the program source and the parameters can be adjusted according to the conditions in the listening room to achieve a more realistic, powerful sound. These surround modes can also be used for program sources not recorded in Dolby Surround Pro Logic or Dolby Digital.

**Surround modes and their features**

1	ROCK ARENA	Use this mode to achieve the feeling of a live concert in an arena with reflected sounds coming from all directions.
2	JAZZ CLUB	This mode creates the sound field of a live house with a low ceiling and hard walls. This mode gives jazz a very vivid realism.
3	MONO MOVIE (NOTE 1)	Select this when watching monaural movies for a greater sense of expansion.
4	VIDEO GAME	Use this to enjoy video game sources.
5	MATRIX	Select this to emphasize the sense of expansion for music sources recorded in stereo. Signals consisting of the difference component of the input signals (the component that provides the sense of expansion) processed for delay are output from the surround channel.
6	VIRTUAL	Select this mode to enjoy a virtual sound field, produced from the front 2-channel speakers.
7	5CH/7CH STEREO	In this mode, the signals of the front left channel are output from the left surround channel, the signals of the front right channel are output from the right surround channel, and the same (in-phase) component of the left and right channels is output from the center channel. This mode provides all speaker surround sound, but without directional steering effects, and works with any stereo program source.

\* Depending on the program source being played, the effect may not be very noticeable.

In this case, try other surround modes, without worrying about their names, to create a sound field suited to your tastes.

NOTE 1: When playing sources recorded in monaural, the sound will be one-sided if signals are only input to one channel (left or right), so input signals to both channels. If you have a source component with only one audio output (monophonic camcorder, etc.) obtain a "Y" adaptor cable to split the mono output to two outputs, and connect to the L and R inputs.

**Personal Memory Plus**

This set is equipped with a personal memorize function that automatically memorizes the surround modes and input modes selected for the input different sources. When the input source is switched, the modes set for that source last time it was used are automatically recalled.

\* The surround parameters, tone control settings and playback level balance for the different output channels are memorized for each surround mode.

## DSP surround simulation


 
- To operate the surround mode and surround parameters from the remote control unit.

- 1** Select the surround mode for the input channel.



(Remote control unit)

The surround mode switches in the following order each time the DSP SIMULATION button is pressed:

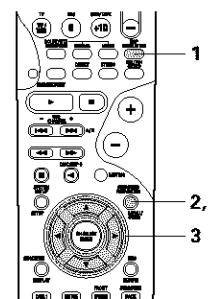


- 2** Display the surround parameter screen on the monitor.  
※ The screen for the selected surround mode appears.



(Remote control unit)



- 3** Set the parameters.

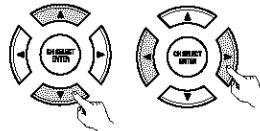

(Remote control unit)

- 4** To end the setting mode, press the surround parameter button again.




(Remote control unit)

### NOTES:

 
- When "Default" is selected and the **◀** cursor button is pressed, "CINEMA EQ." and "D.COMP." are automatically turned off, "ROOM SIZE" is set to "medium", "EFFECT LEVEL" to "10", "DELAY TIME" to "30ms" and "LFE" to "0 dB".
- The "ROOM SIZE" expresses the expansion effect for the different surround modes in terms of the size of the sound field, not the actual size of the listening room.

- Operating the surround mode and surround parameters from the main unit's panel.


- 1** Turn the SELECT knob to select the surround mode.




(Main unit)

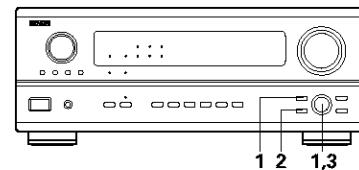

- When turned clockwise

 

- When turned counterclockwise

 

※ To select the surround mode while adjusting the surround parameters or tone control, press the surround mode button then operate the selector.



(Main unit)

- 2**



(Main unit)

Press the SURROUND PARAMETER button.

Press and hold in the surround parameter button to select the parameter you want to set.

• The parameters which can be set differ for the different surround modes. (Refer to "Surround Modes and Parameters" on page 34.)

- 3**


Display the parameter you want to adjust, then turn the SELECT knob to set it.

### NOTE:










 
- When playing PCM digital signals or analog signals in the DOLBY PRO LOGIC II, DTS NEO:6 modes and the input signal switches to a digital signal encoded in Dolby Digital, the Dolby surround mode switches automatically. When the input signal switches to a DTS signal, the mode automatically switches to DTS surround.

## Tone control setting

- Use the tone control setting to adjust the bass and treble as desired.
- To operate the tone control from the remote control unit.
- The tone control setting only affects the front speakers.
- If the tone control function is used, the main volume cannot be adjusted up to 18 dB. (The maximum main volume level differs in the different surround modes.)





  Display the surround parameter screen on the monitor.  
※ The screen for the selected surround mode appears.  
“TONE” cannot be selected in the Direct mode.

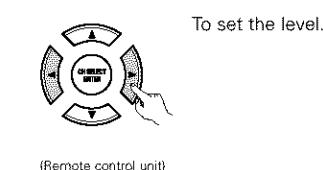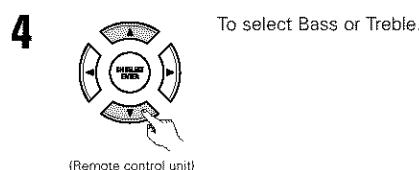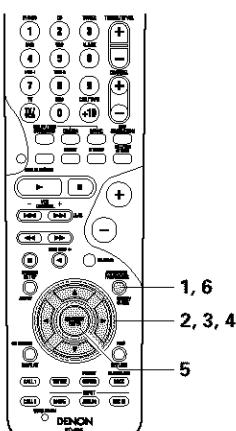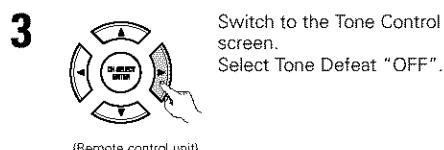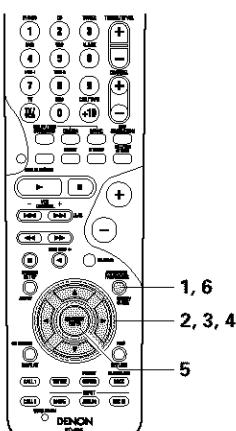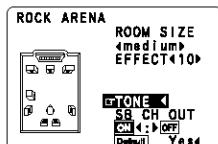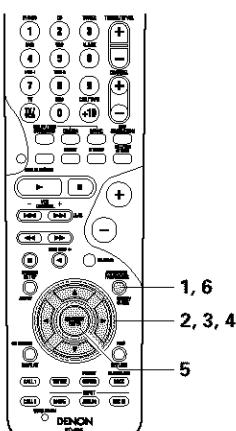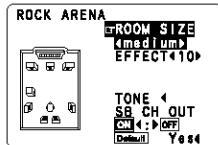

- To operate the tone control from the main unit.

 - 1** The tone switches as follows each time the TONE CONTROL button is pressed.

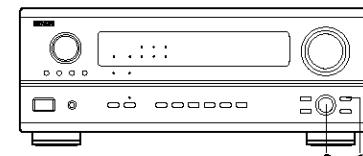

- 2**



With the name of the volume to be adjusted selected, turn the SELECT knob to adjust the level.

- To increase the bass or treble:  
Turn the control clockwise. (The bass or treble sound can be increased to up to +10 dB in steps of 2 dB.)
- To decrease the bass or treble:  
Turn the control clockwise. (The bass or treble sound can be decreased up to -10 dB in steps of 2 dB.)

### Surround parameters ③

#### MODE: (DTS NEO:6)

##### • Cinema

This mode is optimum for playing movies. Decoding is performed with emphasis on separation performance to achieve the same atmosphere with 2-channel sources as with 6.1-channel sources.

This mode is effective for playing sources recorded in conventional surround formats as well, because the in-phase component is assigned mainly to the center channel (C) and the reversed phase component to the surround (SL, SR and SB channels).

##### • Music

This mode is suited mainly for playing music. The front channel (FL and FR) signals bypass the decoder and are played directly so there is no loss of sound quality, and the effect of the surround signals output from the center (C) and surround (SL, SR and SB) channels add a natural sense of expansion to the sound field.

#### ROOM SIZE:

This sets the size of the sound field.

There are five settings: “small”, “med.s” (medium-small), “medium”, “med.l” (medium-large) and “large”. “small” recreates a small sound field, “large” a large sound field.

#### EFFECT LEVEL:

This sets the strength of the surround effect.

The level can be set in 15 steps from 1 to 15. Lower the level if the sound seems distorted.

#### DELAY TIME:

In the matrix mode only, the delay time can be set within the range of 0 to 300 ms.

#### TONE CONTROL:

This can be set individually for the separate surround modes other than Direct. However, the same contents are set for DOLBY/DTS modes.

## ■ Surround modes and parameters

Mode	Signals and adjustability in the different modes								
	Channel output					When playing Dolby Digital Signals	When playing DTS signals	When playing PCM signals	When playing ANALOG signals
	Front L/R	CENTER	SURROUND L/R	SUB-WOOFER	SURROUND BACK L/R				
DIRECT	○	×	×	○	×	○	○	○	○
STEREO	○	×	×	○	×	○	○	○	○
EXTERNAL INPUT	○	○	○	○	○	○	×	×	○
DOLBY PRO LOGIC II	○	○	○	○	○ *2	○ *1	×	○	○
DTS NEO:6	○	○	○	○	○	○ *1	×	○	○
DOLBY DIGITAL	○	○	○	○	○	○	×	×	×
DTS SURROUND (DTS ES MTRX 6.1)	○	○	○	○	○	○	○	×	○
5/7CH STEREO	○	○	○	○	○	○	○	○	○
ROCK ARENA	○	○	○	○	○	○	○	○	○
JAZZ CLUB	○	○	○	○	○	○	○	○	○
VIDEO GAME	○	○	○	○	○	○	○	○	○
MONO MOVIE	○	○	○	○	○	○	○	○	○
MATRIX	○	○	○	○	○	○	○	○	○
VIRTUAL	○	×	×	○	×	○	○	○	○

○: Signal  
×: No signal  
◎: Turned on or off by speaker configuration setting

○: Able  
×: Unable  
\* 1 Only for 2 ch contents  
\* 2 Signal output can be changed with the "SB CH OUT" surround parameter setting.

Mode	Signals and adjustability in the different modes											When playing Dolby Digital / DTS signals	
	Parameter (default values are shown in parentheses)						PRO LOGIC II MUSIC MODE ONLY				NEO:6 MUSIC MODE ONLY		
	TONE CONTROL	MODE	CINEMA EQ.	ROOM SIZE	EFFECT LEVEL	DELAY TIME	SURROUND BACK	PANORAMA	DIMENSION	CENTER WIDE	CENTER IMAGE	D. COMP	LFE
DIRECT	×	×	×	×	×	×	×	×	×	×	×	○ (OFF)	(dB)
STEREO	○ (0dB)	×	×	×	×	×	×	×	×	×	×	○ (OFF)	(dB)
EXTERNAL INPUT	×	×	×	×	×	×	×	×	×	×	×	×	×
DOLBY PRO LOGIC II	○ (0dB)	○ (CINEMA)	○ (OFF) (Note2)	×	×	×	○ (NRML (OFF))	○ (OFF)	○ (3)	○ (3)	×	○ (OFF)	(dB)
DTS NEO:6	○ (0dB)	○ (CINEMA)	○ (OFF) (Note3)	×	×	×	○ (NRML (ON))	×	×	×	○ (0.2)	○ (OFF)	(dB)
DOLBY DIGITAL	○ (0dB)	×	○ (OFF)	×	×	×	○ (MTRX ON)	×	×	×	×	○ (OFF)	(dB)
DTS SURROUND (DTS ES MTRX 6.1)	○ (0dB)	×	○ (OFF)	×	×	×	○ (MTRX ON)	×	×	×	×	○ (OFF)	(dB)
5/7CH STEREO	○ (0dB)	×	×	×	×	×	×	×	×	×	×	○ (OFF)	(dB)
ROCK ARENA	○ (Note1)	×	×	○ (Medium)	○ (10)	×	×	×	×	×	×	○ (OFF)	(dB)
JAZZ CLUB	○ (0dB)	×	×	○ (Medium)	○ (10)	×	×	×	×	×	×	○ (OFF)	(dB)
VIDEO GAME	○ (0dB)	×	×	○ (Medium)	○ (10)	×	×	×	×	×	×	○ (OFF)	(dB)
MONO MOVIE	○ (0dB)	×	×	○ (Medium)	○ (10)	×	×	×	×	×	×	○ (OFF)	(dB)
MATRIX	○ (0dB)	×	×	×	×	○ (30msec)	×	×	×	×	×	○ (OFF)	(dB)
VIRTUAL	○ (0dB)	×	×	×	×	×	×	×	×	×	×	○ (OFF)	(dB)

(Note 1) BASS: +8 dB, TREBLE: 4 dB

(Note 2) Cinema, DOLBY PL Mode only

(Note 3) Cinema Mode only

○: Adjustable

×: Not adjustable

## 12 LISTENING TO THE RADIO

 
- Check that the remote control unit is set to AMP mode (TAPE, CDR/MD or CD).

### Auto tuning

- 1** Set the input function to "TUNER".



- 2** Watching the display, press the BAND button to select the desired band (AM or FM).





- 3** Press the MODE button to set the auto tuning mode.  
"Auto" appears on the display.



- 4** Press the TUNING + (up) or - (down) button.  
Automatic searching begins, then stops when a station is tuned in.



If tuning does not stop at the desired station, use the "Manual tuning" operation.

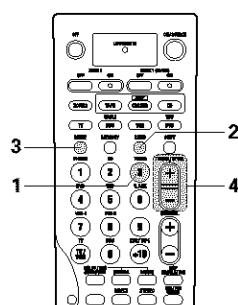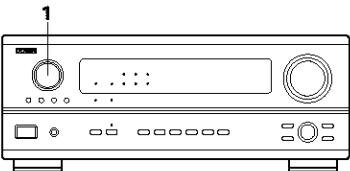

### Manual tuning

- 1** Set the input function to "TUNER".



- 2** Watching the display, press the BAND button to select the desired band (AM or FM).



- 3** Press the MODE button to set the manual tuning mode.  
Check that the display's "AUTO" indicator turns off.



- 4** Press the TUNING + (up) or - (down) button to tune in the desired station.  
The frequency changes continuously when the button is held in.



#### NOTES:

- When in the auto tuning mode on the FM band, the "STEREO" indicator lights on the display when a stereo broadcast is tuned in. At open frequencies, the noise is muted and the "TUNED" and "STEREO" indicators turn off.
- When the manual tuning mode is set, FM stereo broadcasts are received in monaural and the "STEREO" indicator turns off.

### Preset memory

- 1** Use the "Auto tuning" or "Manual tuning" operation to tune in the station to be preset in the memory.

- 2** Press the MEMORY button.



- 3** Press the SHIFT button and select the desired memory block (A to E).




- 4** Press the CHANNEL + (up) or - (down) button to select the desired preset channel (1 to 8).



- 5** Press the MEMORY button again to store the station in the preset memory.




To preset other channels, repeat steps 2 to 5. A total of 40 broadcast stations can be preset — 8 stations (channels 1 to 8) in each of blocks A to E.

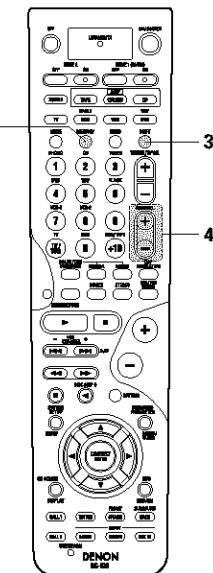

### Checking the preset stations

- The preset (broadcast) stations can be checked on the on screen display (OSD).

 - 1** Press the ON SCREEN/DISPLAY button repeatedly until the "Tuner Preset Stations" screen appears on the on screen display.




Tuner Preset Stations
A1FM 87.50MHz
A2FM 89.10MHz
A3FM 98.10MHz
A4FM 108.00MHz
A5FM 90.10MHz
A6FM 90.10MHz
A7FM 90.10MHz
A8FM 90.10MHz



OSD-3

## Recalling preset stations

 - To call out preset stations from the remote control unit.




 Watching the display, press the SHIFT button to select the preset memory block.


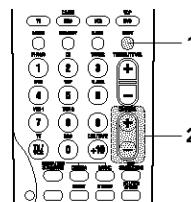


Watching the display, press the CHANNEL + (up) or - (down) button to select the desired preset channel.

- Calling out preset stations from the main unit's panel.

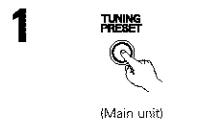

Press the TUNING PRESET button.

 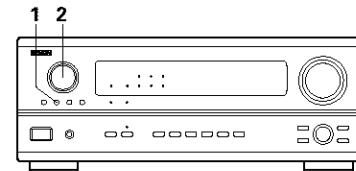

Turn the FUNCTION knob and select the desired station.

## RDS (Radio Data System)

RDS (works only on the FM band) is a broadcasting service which allows station to send additional information along with the regular radio program signal.

The following three types of RDS information can be received on this unit:

### ■ Program Type (PTY)

PTY identifies the type of RDS program.

The program types and their displays are as follows:

NEWS	News	ROCK M	Rock Music	PHONE IN	Phone In
AFFAIRS	Current Affairs	EASY M	Easy Listening Music	TRAVEL	Travel
INFO	Information	LIGHT M	Light Classical	LEISURE	Leisure
SPORT	Sports	CLASSICS	Serious Classical	JAZZ	Jazz Music
EDUCATE	Education	OTHER M	Other Music	COUNTRY	Country Music
DRAMA	Drama	WEATHER	Weather	NATION M	National Music
CULTURE	Culture	FINANCE	Finance	OLDIES	Oldies Music
SCIENCE	Science	CHILDREN	Children's programmes	FOLK M	Folk Music
VARIED	Varied	SOCIAL	Social Affairs	DOCUMENT	Documentary
POP M	Pop Music	RELIGION	Religion		

### ■ Traffic Program (TP)

TP identifies programs that carry traffic announcements.

This allows you to easily find out the latest traffic conditions in your area before you leaving home.

 
### ■ Radio Text (RT)

RT allows the RDS station to send text messages that appear on the display.


**NOTE:** The operations described below using the RDS, PTY and RT buttons will not function in areas in which there are no RDS broadcasts.

## RDS search



Use this function to automatically tune to FM stations that provide RDS service.




Set the input function to "TUNER".

 

 Press the RDS button until "RDS SEARCH" appears on the display.

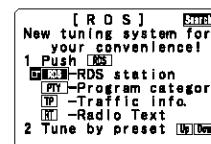


This is the screen when operated.

 


Press the CHANNEL + (up) or - (down) button to automatically begin the RDS search operation.

If no RDS stations is found with above operation, all the reception band are searched.

When a broadcast station is found, that station's name appears on the display.

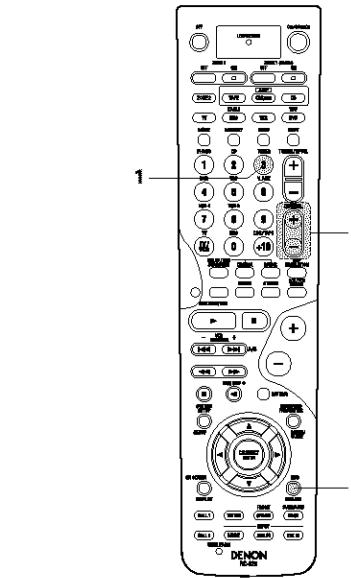

5 To continue searching, repeat step 3. If no other RDS station is found when all the frequencies are searched, "NO RDS" is displayed.

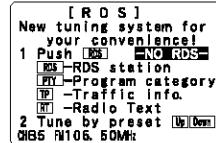

This is the screen when operated.

## PTY search

Use this function to find RDS stations broadcasting a designated program type (PTY). For a description of each program type, refer to "Program Type (PTY)".

- 1** Set the input function to "TUNER".



(Remote control unit)


 
- 2** Press the RDS button until "PTY SEARCH" appears on the display.




(Remote control unit)

\* The main unit's display switches as follows each time the RDS buttons are pressed.

## Display

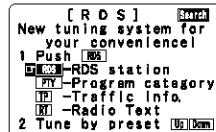

This is the screen when operated.

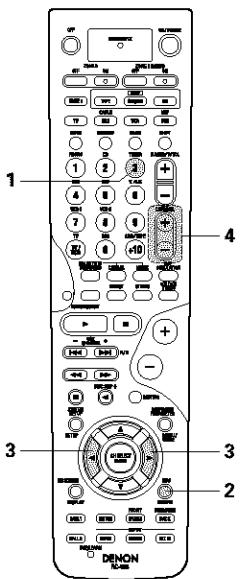

- 3** Watching the display, press the **◀** and **▶** cursor buttons to call out the desired program type.




(Remote control unit)



This is the screen when operated.


- 5** The station name is displayed on the display after searching stops.

- 6** To continue searching, repeat step 4. If no other station broadcasting the designated program type is found when all the frequencies are searched, "NO PROGRAMME" is displayed.

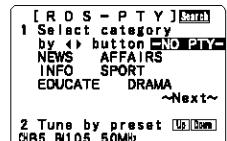

This is the screen when operated.

 - 4** Press the CHANNEL + (up) or - (down) button to automatically begin the PTY search operation.



(Remote control unit)

If there is no station broadcasting the designated program type with above operation, all the reception bands are searched.

## TP search

Use this function to find RDS stations broadcasting traffic program (TP stations).

- 1** Set the input function to "TUNER".



(Remote control unit)

 
- 2** Press the RDS button until "TP SEARCH" appears on the display.




(Remote control unit)

\* The main unit's display switches as follows each time the RDS buttons are pressed.

## Display



This is the screen when operated.

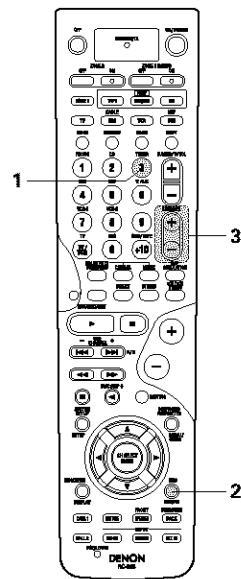

- 3** Press the CHANNEL + (up) or - (down) button TP search begins.




(Remote control unit)

If no TP station is found with above operation, all the reception bands are searched.

- 4** The station name is displayed on the display after searching stops.

- 5** To continue searching, repeat step 3. If no other TP station is found when all the frequencies are searched, "NO PROGRAMME" is displayed.

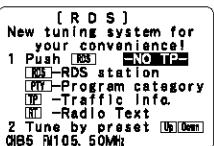


This is the screen when operated.


**RT (Radio Text)**

"RT" appears on the display when radio text data is received.

When the RDS button is pressed until "RT" appears on the display while receiving an RDS broadcast station, the text data broadcast from the station is displayed. To turn the display off, use the **◀** and **▶** cursor buttons on the remote control unit. If no text data is being broadcast, "NO TEXT DATA" is displayed.

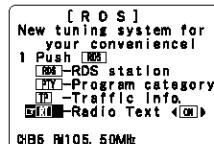

This is the screen when operated.

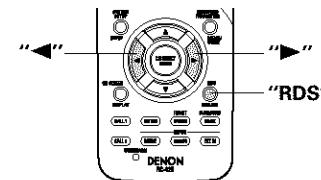**13 LAST FUNCTION MEMORY**

- This unit is equipped with a last function memory which stores the input and output setting conditions as they were immediately before the power is switched off. This function eliminates the need to perform complicated resettings when the power is switched on.
- The unit is also equipped with a back-up memory. This function provides approximately one week of memory storage when the main unit's power switch is off and with the power cord disconnected.

**14 INITIALIZATION OF THE MICROPROCESSOR**

When the indication of the display is not normal or when the operation of the unit does not show the reasonable result, the initialization of the microprocessor is required by the following procedure.

**1** Switch off the unit using the main unit's power operation switch.

**2** Hold the following FRONT SPEAKER button and ZONE 2 button, and turn the main unit's power operation switch on.


**3** Check that the entire display is flashing with an interval of about 1 second, and release your fingers from the 2 buttons and the microprocessor will be initialized.

**NOTES:**

- If step 3 does not work, start over from step 1.
- If the microprocessor has been reset, all the button settings are reset to the default values (the values set upon shipment from the factory).

**Turning on the main unit's power from the standby mode without using the remote control unit**

- Press the power switch on the main unit while pressing the SOURCE button on the main unit's panel to turn on the power.

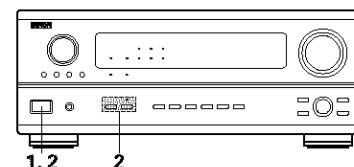**15 TROUBLESHOOTING**

If a problem should arise, first check the following.

- Are the connections correct?
- Have you operated the receiver according to the Operating Instructions?
- Are the speakers, turntable and other components operating properly?

If this unit is not operating properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.

Disconnect the power immediately and contact your store of purchase.

	Symptom	Cause	Measures	Page
Common problems when listening to the CD, records, tapes and FM broadcasts, etc.	DISPLAY not lit and sound not produced when power switch set to on.	• Power cord not plugged in securely.	• Check the insertion of the power cord plug. • Turn the power on with the remote control unit after turning the POWER switch on.	4 22
	DISPLAY lit but sound not produced.	• Speaker cords not securely connected. • Improper position of the audio function button. • Volume control set to minimum. • MUTING is on. • Digital signals not input Digital input selected.	• Connect securely. • Set to a suitable position.  • Turn volume up to suitable level. • Switch off MUTING. • Input digital signals or select input jacks to which digital signals are being input.	8 23 23 25 23
	DISPLAY not lit and power indicator is flashing rapidly.	• Speaker terminals are short-circuited.  • Block the ventilation holes of the set.  • The unit is operating at continuous high power conditions and/or inadequate ventilation.	• Switch power off, connect speakers properly, then switch power back on.  • Turn off the set's power, then ventilate it well to cool it down. Once the set is cooled down, turn the power back on.  • Turn off the set's power, then ventilate it well to cool it down. Once the set is cooled down, turn the power back on.	8 3, 7 3, 7
	Sound produced only from one channel.	• Incomplete connection of speaker cords. • Incomplete connection of input/output cords.	• Connect securely.  • Connect securely.	8 4 ~ 8
When playing records	Positions of instruments reversed during stereo playback.	• Reverse connections of left and right speakers or left and right input/output cords.	• Check left and right connections.	8
	The on screen display is not displayed.	• "On screen display" is set to off on the system setup menu screen.	• Set "on screen display" on the system setup menu screen to on.	15
	System setup screen does not appear	• You are using headphones.  • Mute mode is set. • Monitor TV not connected to AVR-2803.	• Unplug the headphones from the headphones jack. • Cancel the mute mode. • Connect a monitor TV.	25 25 5, 6
	Humming noise produced when record is playing.	• Ground wire of turntable not connected properly. • Incomplete PHONO jack connection. • TV or radio transmission antenna nearby.	• Connect securely.  • Connect securely.  • Contact your store of purchase.	4 4 —
	Howling noise produced when volume is high.	• Turntable and speaker systems too close together. • Floor is unstable and vibrates easily.	• Separate as much as possible.  • Use cushions to absorb speaker vibrations transmitted by floor. If turntable is not equipped with insulators, use audio insulators (commonly available).	— —
When listening to the radio	Sound is distorted.	• Stylus pressure too weak. • Dust or dirt on stylus. • Cartridge defective.	• Apply proper stylus pressure. • Check stylus. • Replace cartridge.	— — —
	Volume is weak.	• MC cartridge being used.	• Replace with MM cartridge or use a head amplifier or step-up transformer.	4

	Symptom	Cause	Measures	Page
Remote control unit	This unit does not operate properly when remote control unit is used.	<ul style="list-style-type: none"> <li>Batteries dead.</li> <li>Remote control unit too far from this unit.</li> <li>Obstacle between this unit and remote control unit.</li> <li>Different button is being pressed.</li> <li>⊕ and ⊖ ends of battery inserted in reverse.</li> </ul>	<ul style="list-style-type: none"> <li>Replace with new batteries.</li> <li>Move closer.</li> <li>Remove obstacle.</li> <li>Press the proper button.</li> <li>Insert batteries properly.</li> </ul>	17 17 17 — 17

## 16 ADDITIONAL INFORMATION

### Optimum surround sound for different sources

There are currently various types of multi-channel signals (signals or formats with more than two channels).

#### ■ Types of multi-channel signals


Dolby Digital, Dolby Pro Logic, DTS, high definition 3-1 signals (Japan MUSE Hi-Vision audio), DVD-Audio, SACD (Super Audio CD), MPEG multi-channel audio, etc.

"Source" here does not refer to the type of signal (format) but the recorded content. Sources can be divided into two major categories.

#### Types of sources


- Movie audio** Signals created to be played in movie theaters. In general sound is recorded to be played in movie theaters equipped with multiple surround speakers, regardless of the format (Dolby Digital, DTS, etc.).

Movie theater sound field

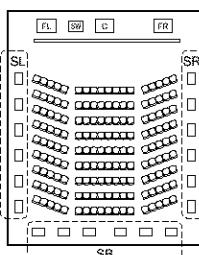

Multiple surround speakers

(For 6.1-channel system)

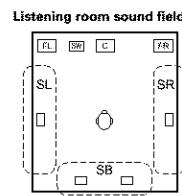


In this case it is important to achieve the same sense of expansion as in a movie theater with the surround channels.

To do so, in some cases the number of surround speakers is increased (to four or eight) or speakers with bipolar or dipolar properties are used.

SL: Surround L channel  
SR: Surround R channel  
SB: Surround back channel

- Other types of audio** These signals are designed to recreate a 360° sound field using three to five speakers.

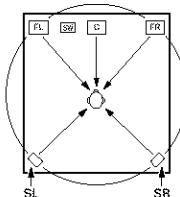


In this case the speakers should surround the listener from all sides to create a uniform sound field from 360°. Ideally the surround speakers should function as "point" sound sources in the same way as the front speakers.

These two types of sources thus have different properties, and different speaker settings, particularly for the surround speakers, are required in order to achieve the ideal sound.

### Surround back speakers


A 6.1-channel system is a conventional 5.1-channel system to which the "surround back" (SB) channel has been added. This makes it easy to achieve sound positioned directly behind the listener, something that was previously difficult with sources designed for conventional multi surround speakers. In addition, the acoustic image extending between the sides and the rear is narrowed, thus greatly improving the expression of the surround signals for sounds moving from the sides to the back and from the front to the point directly behind the listening position.

Change of positioning and acoustic image with 5.1-channel systems

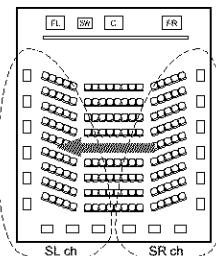

Movement of acoustic image from SR to SL

Change of positioning and acoustic image with 6.1-channel systems

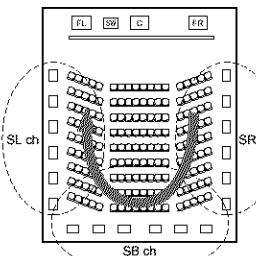

Movement of acoustic image from SR to SB to SL

With this set, speaker(s) for 1 or 2 channels are required to achieve a 6.1-channel system (DTS-ES, etc.). Adding these speakers, however, increases the surround effect not only with sources recorded in 6.1 channels but also with conventional 2- to 5.1-channel sources. The WIDE SCREEN mode is a mode for achieving surround sound with up to 7.1 channels using surround back speakers, for sources recorded in conventional Dolby Surround as well as Dolby Digital 5.1-channel and DTS Surround 5.1-channel sources. Furthermore, all the Denon original surround modes (see page 31) are compatible with 7.1-channel playback, so you can enjoy 7.1-channel sound with any signal source.

#### ■ Number of surround back speakers

Though the surround back channel only consists of 1 channel of playback signals for 6.1-channel sources (DTS-ES, etc.), we recommend using two speakers. When using speakers with dipolar characteristics in particular, it is essential to use two speakers.

Using two speakers results in a smoother blend with the sound of the surround channels and better sound positioning of the surround back channel when listening from a position other than the center.

#### ■ Placement of the surround left and right channels when using surround back speakers

Using surround back speakers greatly improves the positioning of the sound at the rear. Because of this, the surround left and right channels play an important role in achieving a smooth transition of the acoustic image from the front to the back. As shown on the diagram above, in a movie theater the surround signals are also produced from diagonally in front of the listeners, creating an acoustic image as if the sound were floating in space.

To achieve these effects, we recommend placing the speakers for the surround left and right channels slightly more towards the front than with conventional surround systems. Doing so sometimes increases the surround effect when playing conventional 5.1-channel sources in the 6.1 surround or DTS-ES Matrix 6.1 mode. Check the surround effects of the various modes before selecting the surround mode.


## Speaker setting examples

Here we describe a number of speaker settings for different purposes. Use these examples as guides to set up your system according to the type of speakers used and the main usage purpose.

### 1. DTS-ES compatible system (using surround back speakers)


#### (1) Basic setting for primarily watching movies

This is recommended when mainly playing movies and using regular single way or 2-way speakers for the surround speakers.

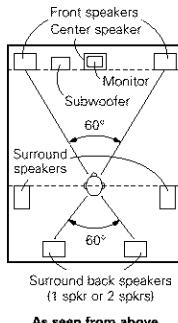


As seen from above

- Set the front speakers with their front surfaces as flush with the TV or monitor screen as possible. Set the center speaker between the front left and right speakers and no further from the listening position than the front speakers.
- Consult the owner's manual for your subwoofer for advice on placing the subwoofer within the listening room.
- If the surround speakers are direct-radiating (monopolar) then place them slightly behind and at an angle to the listening position and parallel to the walls at a position 60 to 90 centimeters above ear level at the prime listening position.
- When using two surround back speakers, place them at the back facing the front at a narrower distance than the front left and right speakers. When using one surround back speaker, place it at the rear center facing the front at a slightly higher position (0 to 20 cm) than the surround speakers.
- We recommend installing the surround back speaker(s) at a slightly downward facing angle. This effectively prevents the surround back channel signals from reflecting off the monitor or screen at the front center, resulting in interference and making the sense of movement from the front to the back less sharp.

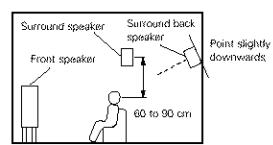


As seen from the side

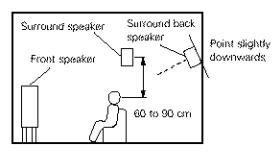

### 2. When not using surround back speakers

- Set the front speakers with their front surfaces as flush with the TV or monitor screen as possible. Set the center speaker between the front left and right speakers and no further from the listening position than the front speakers.
- Consult the owner's manual for your subwoofer for advice on placing the subwoofer within the listening room.

- If the surround speakers are direct-radiating (monopolar) then place them slightly behind and at an angle to the listening position and parallel to the walls at a position 60 to 90 centimeters above ear level at the prime listening position.

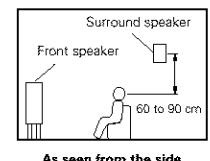

As seen from the side

## Surround

The AVR-2803 is equipped with a digital signal processing circuit that lets you play program sources in the surround mode to achieve the same sense of presence as in a movie theater.

### Dolby Surround

#### (1) Dolby Digital

Dolby Digital is the multi-channel digital signal format developed by Dolby Laboratories. Dolby Digital consists of up to "5.1" channels - front left, front right, center, surround left, surround right, and an additional channel exclusively reserved for additional deep bass sound effects (the Low Frequency Effects - LFE - channel, also called the ".1" channel, containing bass frequencies of up to 120 Hz). Unlike the analog Dolby Pro Logic format, Dolby Digital's main channels can all contain full range sound information, from the lowest bass, up to the highest frequencies - 22 kHz. The signals within each channel are distinct from the others, allowing pinpoint sound imaging, and Dolby Digital offers tremendous dynamic range from the most powerful sound effects to the quietest, softest sounds, free from noise and distortion.


### Dolby Digital and Dolby Pro Logic

Comparison of home surround systems	Dolby Digital	Dolby Pro Logic
No. recorded channels (elements)	5.1 ch	2 ch
No. playback channels	5.1 ch	4 ch
Playback channels (max.)	L, R, C, SL, SR, SW	L, R, C, S (SW - recommended)
Audio processing	Digital discrete processing Dolby Digital encoding/decoding	Analog matrix processing Dolby Surround
High frequency playback limit of surround channel	20 kHz	7 kHz

### (2) Setting for primarily watching movies using diffusion type speakers for the surround speakers


For the greatest sense of surround sound envelopment, diffuse radiation speakers such as bipolar types, or dipolar types, provide a wider dispersion than is possible to obtain from a direct radiating speaker (monopolar). Place these speakers at either side of the prime listening position, mounted above ear level.

#### Path of the surround sound from the speakers to the listening position

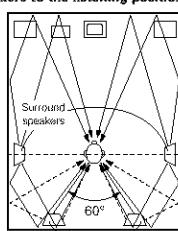

As seen from above

- Set the front speakers, center speaker and subwoofer in the same positions as in example (1).
  - It is best to place the surround speakers directly at the side or slightly to the front of the viewing position, and 60 to 90 cm above the ears.
  - Same as surround back speaker installation method (1). Using dipolar speakers for the surround back speakers as well is more effective.
  - Connect the surround speakers to the surround speaker jacks.
  - The signals from the surround channels reflect off the walls as shown on the diagram at the left, creating an enveloping and realistic surround sound presentation.
- For multi-channel music sources however, the use of bipolar or dipolar speakers mounted at the sides of the listening position may not be satisfactory in order to create a coherent 360 degree surround sound field. Connect another pair of direct radiating speakers as described in example (3) and place them at the rear corners of the room facing towards the prime listening position.

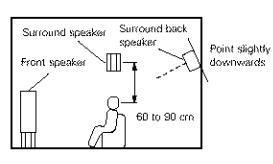

As seen from the side

## ■ Dolby Digital compatible media and playback methods

Marks indicating Dolby Digital compatibility: 

The following are general examples. Also refer to the player's operating instructions.

Media	Dolby Digital output jacks	Playback method (reference page)
LD (VDP)	Coaxial Dolby Digital RF output jack ※ 1	Set the input mode to "AUTO". (Page 23)
DVD	Optical or coaxial digital output (same as for PCM) ※ 2	Set the input mode to "AUTO". (Page 23)
Others (satellite broadcasts, CATV, etc.)	Optical or coaxial digital output (same as for PCM)	Set the input mode to "AUTO". (Page 23)

- ※ 1 Please use a commercially available adapter when connecting the Dolby Digital RF output jack of the LD player to the digital input jack.  
Please refer to the instruction manual of the adapter when making connection.
- ※ 2 Some DVD digital outputs have the function of switching the Dolby Digital signal output method between "bit stream" and "(convert to) PCM". When playing in Dolby Digital surround on the AVR-2803, switch the DVD player's output mode to "bit stream". In some cases players are equipped with both "bit stream + PCM" and "PCM only" digital outputs. In this case connect the "bit stream + PCM" jacks to the AVR-2803.

## (2) Dolby Pro Logic II

- Dolby Pro Logic II is a new multi-channel playback format developed by Dolby Laboratories using feedback logic steering technology and offering improvements over conventional Dolby Pro Logic circuits.
- Dolby Pro Logic II can be used to decode not only sources recorded in Dolby Surround (※) but also regular stereo sources into five channels (front left, front right, center, surround left and surround right) to achieve surround sound.
- Whereas with conventional Dolby Pro Logic the surround channel playback frequency band was limited, Dolby Pro Logic II offers a wider band range (20 Hz to 20 kHz or greater). In addition, the surround channels were monaural (the surround left and right channels were the same) with previous Dolby Pro Logic, but Dolby Pro Logic II they are played as stereo signals.
- Various parameters can be set according to the type of source and the contents, so it is possible to achieve optimum decoding (see page 28).

## ※ Sources recorded in Dolby Surround

These are sources in which three or more channels of surround have been recorded as two channels of signals using Dolby Surround encoding technology.

Dolby Surround is used for the sound tracks of movies recorded on DVDs, LDs and Video cassettes to be played on stereo VCRs, as well as for the stereo broadcast signals of FM radio, TV, satellite broadcasts and cable TV.

 
Decoding these signals with Dolby Pro Logic II makes it possible to achieve multi-channel surround playback. The signals can also be played on ordinary stereo equipment, in which case they provide normal stereo sound.

There are two types of DVD Dolby surround recording signals.

- ① 2-channel PCM stereo signals
- ② 2-channel Dolby Digital signals

When either of these signals is input to the AVR-2803, the surround mode is automatically set to Dolby Pro Logic II when the "DOLBY/DTS SURROUND" mode is selected.

## ■ Sources recorded in Dolby Surround are indicated with the logo mark shown below.

Dolby Surround support mark: 

Manufactured under license from Dolby Laboratories.

"Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

## DTS Digital Surround

Digital Theater Surround (also called simply DTS) is a multi-channel digital signal format developed by Digital Theater Systems.

DTS offers the same "5.1" playback channels as Dolby Digital (front left, front right and center, surround left and surround right) as well as the stereo 2-channel mode. The signals for the different channels are fully independent, eliminating the risk of deterioration of sound quality due to interference between signals, crosstalk, etc.

DTS features a relatively higher bit rate as compared to Dolby Digital (1234 kbps for CDs and LDs, 1536 kbps for DVDs) so it operates with a relatively low compression rate. Because of this the amount of data is great, and when DTS playback is used in movie theaters, a separate CD-ROM synchronized with the film is played.

With LDs and DVDs, there is of course no need for an extra disc; the pictures and sound can be recorded simultaneously on the same disc, so the discs can be handled in the same way as discs with other formats.

There are also music CDs recorded in DTS. These CDs include 5.1-channel surround signals (compared to two channels on current CDs). They do not include picture data, but they offer surround playback on CD players that are equipped with digital outputs (PCM type digital output required).

DTS surround track playback offers the same intricate, grand sound as in a movie theater, right in your own listening room.

## ■ DTS compatible media and playback methods

Marks indicating DTS compatibility:  and 

The following are general examples. Also refer to the player's operating instructions.

Media	Dolby Digital output jacks	Playback method (reference page)
CD	Optical or coaxial digital output (same as for PCM) ※ 2	Set the input mode to "AUTO" or "DTS" (page 23). Never set the mode to "ANALOG" or "PCM". ※ 1
LD (VDP)	Optical or coaxial digital output (same as for PCM) ※ 2	Set the input mode to "AUTO" or "DTS" (page 23). Never set the mode to "ANALOG" or "PCM". ※ 1
DVD	Optical or coaxial digital output (same as for PCM) ※ 3	Set the input mode to "AUTO" or "DTS" (page 23).

- ※ 1 DTS signals are recorded in the same way on CDs and LDs as PCM signals. Because of this, the un-decoded DTS signals are output as random "hissy" noise from the CD or LD player's analog outputs. If this noise is played with the amplifier set at a very high volume, it may possibly cause damage to the speakers. To avoid this, be sure to switch the input mode to "AUTO" or "DTS" before playing CDs or LDs recorded in DTS. Also, never switch the input mode to "ANALOG" or "PCM" during playback. The same holds true when playing CDs or LDs on a DVD player or LD/DVD compatible player. For DVDs, the DTS signals are recorded in a special way so this problem does not occur.

- ※ 2 The signals provided at the digital outputs of a CD or LD player may undergo some sort of internal signal processing (output level adjustment, sampling frequency conversion, etc.). In this case the DTS-encoded signals may be processed erroneously, in which case they cannot be decoded by the AVR-2803, or may only produce noise. Before playing DTS signals for the first time, turn down the master volume to a low level, start playing the DTS disc, then check whether the DTS indicator on the AVR-2803 (see page 30) lights before turning up the master volume.

- ※ 3 A DVD player with DTS-compatible digital output is required to play DTS DVDs. A DTS Digital Output logo is featured on the front panel of compatible DVD players. Recent DENON DVD player models feature DTS-compatible digital output – consult the player's owner's manual for information on configuring the digital output for DTS playback of DTS-encoded DVDs.

Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942, 5,956,674, 5,974,380, 5,978,762 and other world-wide patents issued and pending.

"DTS", "DTS-ES Extended Surround" and "Neo:6" are trademarks of Digital Theater Systems, Inc. ©1996, 2000 Digital Theater Systems, Inc. All Rights Reserved.

## DTS-ES Extended Surround™

DTS-ES Extended Surround is a new multi-channel digital signal format developed by Digital Theater Systems Inc. While offering high compatibility with the conventional DTS Digital Surround format, DTS-ES Extended Surround greatly improves the 360-degree surround impression and space expression thanks to further expanded surround signals. This format has been used professionally in movie theaters since 1999.

In addition to the 5.1 surround channels (FL, FR, C, SL, SR and LFE), DTS-ES Extended Surround also offers the SB (Surround Back, sometimes also referred to as "surround center") channel for surround playback with a total of 6.1 channels. DTS-ES Extended Surround includes two signal formats with different surround signal recording methods, as described below.

### DTS-ES™ Discrete 6.1

DTS-ESTM Discrete 6.1 is the newest recording format. With it, all 6.1 channels (including the SB channel) are recorded independently using a digital discrete system. The main feature of this format is that because the SL, SR and SB channels are fully independent, the sound can be designed with total freedom and it is possible to achieve a sense that the acoustic images are moving about freely among the background sounds surrounding the listener from 360 degrees.

Though maximum performance is achieved when sound tracks recorded with this system are played using a DTS-ES decoder, when played with a conventional DTS decoder the SB channel signals are automatically down-mixed to the SL and SR channels, so none of the signal components are lost.

### DTS-ES™ Matrix 6.1

With this format, the additional SB channel signals undergo matrix encoding and are input to the SL and SR channels beforehand. Upon playback they are decoded to the SL, SR and SB channels. The performance of the encoder used at the time of recording can be fully matched using a high precision digital matrix decoder developed by DTS, thereby achieving surround sound more faithful to the producer's sound design aims than with conventional 5.1- or 6.1-channel systems.

In addition, the bit stream format is 100% compatible with conventional DTS signals, so the effect of the Matrix 6.1 format can be achieved even with 5.1-channel signal sources. Of course it is also possible to play DTS-ES Matrix 6.1 encoded sources with a DTS 5.1-channel decoder.

When DTS-ES Discrete 6.1 or Matrix 6.1 encoded sources are decoded with a DTS-ES decoder, the format is automatically detected upon decoding and the optimum playing mode is selected. However, some Matrix 6.1 sources may be detected as having a 5.1-channel format, so the DTS-ES Matrix 6.1 mode must be set manually to play these sources.

(For instructions on selecting the surround mode, see page 30.)

The DTS-ES decoder includes another function, the DTS Neo:6 surround mode for 6.1-channel playback of digital PCM and analog signal sources.

### DTS Neo:6™ surround

This mode applies conventional 2-channel signals to the high precision digital matrix decoder used for DTS-ES Matrix 6.1 to achieve 6.1-channel surround playback. High precision input signal detection and matrix processing enable full band reproduction (frequency response of 20 Hz to 20 kHz or greater) for all 6.1 channels, and separation between the different channels is improved to the same level as that of a digital discrete system.

DTS Neo:6 surround includes two modes for selecting the optimum decoding for the signal source.

- **DTS Neo:6 Cinema**

This mode is optimum for playing movies. Decoding is performed with emphasis on separation performance to achieve the same atmosphere with 2-channel sources as with 6.1-channel sources.

This mode is effective for playing sources recorded in conventional surround formats as well, because the in-phase component is assigned mainly to the center channel (C) and the reversed phase component to the surround (SL, SR and SB channels).

- **DTS Neo:6 Music**

This mode is suited mainly for playing music. Changes in the sound quality are reduced by decoding with emphasis on the front channel signals (FL and FR), and a natural sense of expansion is given to the sound field by the effect of the surround signals output from the center (C) and surround (SL, SR and SB) channels.

## DTS 96/24

The sampling frequency, number of bits and number of channels used for recording of music, etc., in studios has been increasing in recent years, and there are a growing number of high quality signal sources, including 96 kHz/24 bit 5.1-channel sources.

For example, there are high picture/sound quality DVD video sources with 96 kHz/24 bit stereo PCM audio tracks. However, because the data rate for these audio tracks is extremely high, there are limits to recording them on two channels only, and since the quality of the pictures must be restricted it is common to only include still pictures.

In addition, 96 kHz/24 bit 5.1-channel surround is possible with DVD audio sources, but DVD audio players are required to play them with this high quality.

DTS 96/24 is a multi-channel digital signal format developed by Digital Theater Systems Inc. in order to deal with this situation.

Conventional surround formats used sampling frequencies of 48 or 44.1 kHz, so 20 kHz was about the maximum playback signal frequency. With DTS 96/24, the sampling frequency is increased to 96 or 88.2 kHz to achieve a wide frequency range of over 40 kHz.

In addition, DTS 96/24 has a resolution of 24 bits, resulting in the same frequency band and dynamic range as 96 kHz/24 bit PCM.

As with conventional DTS Surround, DTS 96/24 is compatible with a maximum of 5.1 channels, so sources recorded using DTS 96/24 can be played in high sampling frequency, multiple channel audio with such normal media as DVD videos and CDs.

Thus, with DTS 96/24, the same 96 kHz/24 bit multi-channel surround sound as with DVD-Audio can be achieved while viewing DVD-Video images on a conventional DVD-Video player (\*1). Furthermore, with DTS 96/24 compatible CDs, 88.2 kHz/24 bit multi-channel surround can be achieved using normal CD/LD players (\*1).

Even with the high quality multi-channel signals, the recording time is the same as with conventional DTS surround sources.

What's more, DTS 96/24 is fully compatible with the conventional DTS surround format, so DTS 96/24 signal sources can be played with a sampling frequency of 48 kHz or 44.1 kHz on conventional DTS or DTS-ES surround decoders (\*2).

\*1: A DVD player with DTS digital output capabilities (for CD/LD players, a player with digital outputs for conventional DTS CDs/LDs) and a disc recorded in DTS 96/24 are required.

\*2: The resolution is 24 or 20 bits, depending on the decoder.

## System setup items and default values (set upon shipment from the factory)

System setup			Default settings											
① Speaker Configuration	Input the combination of speakers in your system and their corresponding sizes (Small for regular speakers, Large for full-size, full-range) to automatically set the composition of the signals output from the speakers and the frequency response.		Front Sp.	Center Sp.	Sub Woofer	Surround Sp.	Surround Back Sp.							
			Large	Small	Yes	Small	Small / 2spks							
Crossover Frequency	Set the frequency (Hz) below which the bass sound of the various speakers is to be output from the subwoofer.						80 Hz							
Subwoofer mode	This selects the subwoofer speaker for playing deep bass signals.						LFE							
② Delay Time	This parameter is for optimizing the timing with which the audio signals are produced from the speakers and subwoofer according to the listening position.			Front L & R	Center	Sub Woofer	Surround L & R	SBL & SBR						
				3.6 m (12 ft)	3.6 m (12 ft)	3.6 m (12 ft)	3.0 m (10 ft)	3.0 m (10 ft)						
③ Channel Level	This adjusts the volume of the signals output from the speakers and subwoofer for the different channels in order to obtain optimum effects.			Front L	Front R	Center	Surround L	Surround R	Surround Back L	Surround Back R	Subwoofer			
				0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB			
④ Digital In Assignment	This assigns the digital input jacks for the different input sources.		Input source	CD	DVD	VDP	TV	DBS	V. AUX	VCR-1	VCR-2	TAPE		
			Digital Inputs	COAX1	COAX2	OPT1	OPT2	OPT3	OFF	OFF	OFF	OPT4		
⑤ Video In Assignment	This assigns the color difference (component) video input jacks for the different input sources.			DVD	VDP	TV	DBS	VCR-1	VCR-2	V. AUX	—			
				VIDEO1	NONE	NONE	VIDEO2	NONE	NONE	NONE	—			
⑥ Dolby Digital Setup	Turn the audio compression on or off when down-mixing Dolby Digital signals.						OFF							
⑦ Zone2 Control	Power AMP Assignment	Set this to switch the surround back channel's power amplifier for use for zone 2.						Surround Back						
	Zone2 vol. Level	This sets the output level for the zone 2 output jacks.						Variable						
⑧ Ext. In Subwoofer Level	Set the Ext. In Subwoofer terminal playback level.			Subwoofer = +15 dB										
⑨ Auto Surround Mode	Set the Auto surround mode function.			Auto Surround Mode = ON										
⑩ On Screen Display	This sets whether or not to display the on-screen display that appears on the monitor screen when the controls on the remote control unit or main unit are operated.			On Screen Display = ON										
⑪ Trigger Out Setup	Set the Trigger Out output for the different input sources.			PHONO	CD	TUNER	TAPE	DVD	VDP	TV	DBS	VCR-1	VCR-2	V. AUX
				OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON	ON
⑫ Auto Tuner Preset	FM stations are received automatically and stored in the memory.			A1 ~ A8	87.5 / 89.1 / 98.1 / 108.0 / 90.1 / 90.1 / 90.1 MHz									
				B1 ~ B8	522 / 603 / 999 / 1404 / 1611 kHz, 90.1 / 90.1 MHz									
				C1 ~ C8	90.1 MHz									
				D1 ~ D8	90.1 MHz									
				E1 ~ E8	90.1 MHz									
⑬ Setup Lock	Set whether or not to lock the system setup settings so that they cannot be changed.			Setup Lock = OFF										

## Surround modes and parameters

Mode	Signals and adjustability in the different modes						When playing Dolby Digital Signals	
	Channel output			When playing Dolby Digital Signals	When playing DTS signals	When playing PCM signals		
	Front L/R	CENTER	SURROUND L/R					
DIRECT	○	×	×	◎	×	○	○	
STEREO	○	×	×	◎	×	○	○	
EXTERNAL INPUT	○	◎	◎	◎	◎	×	×	
DOLBY PRO LOGIC II	○	◎	◎	◎	◎	○ *1	○	
DTS NEO:6	○	◎	◎	◎	◎	○ *1	×	
DOLBY DIGITAL	○	◎	◎	◎	○	×	×	
DTS SURROUND (DTS ES MTRX 6.1)	○	◎	◎	◎	◎	○	×	
5/7CH STEREO	○	◎	◎	◎	○	○	○	
ROCK ARENA	○	◎	◎	◎	○	○	○	
JAZZ CLUB	○	◎	◎	◎	○	○	○	
VIDEO GAME	○	◎	◎	◎	○	○	○	
MONO MOVIE	○	◎	◎	◎	○	○	○	
MATRIX	○	◎	◎	◎	○	○	○	
VIRTUAL	○	×	×	◎	×	○	○	

○: Signal  
×: No signal  
◎: Turned on or off by speaker configuration setting

○: Able  
×: Unable  
\* 1 Only for 2 ch contents  
\* 2 Signal output can be changed with the "SB CH OUT" surround parameter setting.

Mode	Signals and adjustability in the different modes													
	Parameter (default values are shown in parentheses)													
	SURROUND PARAMETER							PRO LOGIC II MUSIC MODE ONLY		NEO:6 MUSIC MODE ONLY		When playing Dolby Digital / DTS signals		
	TONE CONTROL	MODE	CINEMA EQ.	ROOM SIZE	EFFECT LEVEL	DELAY TIME	SURROUND BACK	PANORAMA	DIMENSION	CENTER WIDE	CENTER IMAGE	D. COMP	LFE	
DIRECT	X	X	X	X	X	X	X	X	X	X	X	O (OFF)	O (dB)	
STEREO	O (dB)	X	X	X	X	X	X	X	X	X	X	O (OFF)	O (dB)	
EXTERNAL INPUT	X	X	X	X	X	X	X	X	X	X	X	X	X	X
DOLBY PRO LOGIC II	O (dB)	O (CINEMA)	O (OFF) (Note2)	X	X	X	O (NRML OFF)	O (OFF)	O (3)	O (3)	X	O (OFF)	O (dB)	
DTS NEO:6	O (dB)	O (CINEMA)	O (OFF) (Note3)	X	X	X	O (NRML ON)	X	X	X	O (0.2)	O (OFF)	O (dB)	
DOLBY DIGITAL	O (dB)	X	O (OFF)	X	X	X	O (MTRX ON)	X	X	X	X	O (OFF)	O (dB)	
DTS SURROUND (DTS ES MTRX 6.1)	O (dB)	X	O (OFF)	X	X	X	O (MTRX ON)	X	X	X	X	O (OFF)	O (dB)	
5/7CH STEREO	O (dB)	X	X	X	X	X	X	X	X	X	X	O (OFF)	O (dB)	
ROCK ARENA	O (Note1)	X	X	O (Medium)	O (10)	X	X	X	X	X	X	O (OFF)	O (dB)	
JAZZ CLUB	O (dB)	X	X	O (Medium)	O (10)	X	X	X	X	X	X	O (OFF)	O (dB)	
VIDEO GAME	O (dB)	X	X	O (Medium)	O (10)	X	X	X	X	X	X	O (OFF)	O (dB)	
MONO MOVIE	O (dB)	X	X	O (Medium)	O (10)	X	X	X	X	X	X	O (OFF)	O (dB)	
MATRIX	O (dB)	X	X	X	X	O (30msec)	X	X	X	X	X	O (OFF)	O (dB)	
VIRTUAL	O (dB)	X	X	X	X	X	X	X	X	X	X	O (OFF)	O (dB)	

(Note 1) BASS: +8 dB, TREBLE: 4 dB

O: Adjustable

(Note 2) Cinema, DOLBY PL Mode only

X: Not adjustable

(Note 3) Cinema Mode only

**■ Differences in surround mode names depending on the input signals**

Surround Mode	Input signals						
	ANALOG	LINEAR PCM	DTS			DOLBY DIGITAL	
DIRECT			DTS (5.1 ch)	DTS 96/24(5.1 ch)	DTS (6.1 ch)	D. D. (2 ch)	D. D. (5.1 ch)
STEREO	O	O	O	O	O	O	O
DTS SURROUND	DTS NEO:6	DTS NEO:6	*DTS ES MTRX	*DTS ES MTRX	DTS 96/24	O DTS ES DSCRT6.1 DTS MTRX6.1 *DTS SURROUND	X X
DOLBY SURROUND	DOLBY	DOLBY	X	X	X	DOLBY PRO LOGIC II	*DOLBY DIGITAL EX PRO LOGIC II DOLBY DIGITAL
DSP SIMULATION	O	O	O	O	O	O	O

O: Selectable

\*: The surround mode name differs depending on the "SB CH OUT" surround parameter setting.

◎: The surround mode name differs depending on the input signal.

X: Not selectable

## 17 SPECIFICATIONS

### ■ Audio section

- Power amplifier

**Rated output:**

Front:	90 W + 90 W 125 W + 125 W	(8 Ω/ohms, 20 Hz – 20 kHz with 0.05% T.H.D.) (6 Ω/ohms, 1 kHz with 0.7% T.H.D.)
Center:	90 W 125 W	(8 Ω/ohms, 20 Hz – 20 kHz with 0.05% T.H.D.) (6 Ω/ohms, 1 kHz with 0.7% T.H.D.)
Surround:	90 W + 90 W 125 W + 125 W	(8 Ω/ohms, 20 Hz – 20 kHz with 0.05% T.H.D.) (6 Ω/ohms, 1 kHz with 0.7% T.H.D.)
Surround back:	90 W + 90 W 125 W + 125 W	(8 Ω/ohms, 20 Hz – 20 kHz with 0.05% T.H.D.) (6 Ω/ohms, 1 kHz with 0.7% T.H.D.)

**Dynamic power:**

120 W x 2 ch	(8 Ω/ohms)
170 W x 2 ch	(4 Ω/ohms)
200 W x 2 ch	(2 Ω/ohms)

**Output terminals:**

Front:	A or B	6 ~ 16 Ω/ohms
	A + B	8 ~ 16 Ω/ohms
Center, Surround, Sur. Back/Zone 2:		6 ~ 16 Ω/ohms

**Analog**

**Input sensitivity / input impedance:** 200 mV / 47 kΩ/kohms

**Frequency response:** 10 Hz ~ 100 kHz: +0, -3 dB (DIRECT mode)

**S/N:** 102 dB (DIRECT mode)

**Distortion:** 0.005% (20 Hz ~ 20 kHz) (DIRECT mode)

**Rated output:** 1.2 V

**Digital**

**D/A output:** Rated output — 2 V (at 0 dB playback)  
Total harmonic distortion — 0.008% (1 kHz, at 0 dB)

**Digital input:** S/N ratio — 102 dB  
Dynamic range — 96 dB

**Digital input:** Format — Digital audio interface

**• Phono equalizer (PHONO input — REC OUT)**

**Input sensitivity:** 2.5 mV

**RIAA deviation:** ±1 dB (20 Hz to 20 kHz)

**Signal-to-noise ratio:** 74 dB (A weighting, with 5 mV input)

**Rated output / Maximum output:** 150 mV / 8 V

**Distortion factor:** 0.03% (1 kHz, 3 V)

### ■ Video section

**• Standard video jacks**

**Input / output level and impedance:** 1 Vp-p, 75 Ω/ohms  
**Frequency response:** 5 Hz ~ 10 MHz — +0, -3 dB

**• S-video jacks**

**Input / output level and impedance:** Y signal — 1 Vp-p, 75 Ω/ohms  
C signal — 0.286 Vp-p, 75 Ω/ohms  
**Frequency response:** 5 Hz ~ 10 MHz — +0, -3 dB

**• Color component video terminal**

**Input / output level and impedance:** Y signal — 1 Vp-p, 75 Ω/ohms  
Pb/Cb signal — 0.7 Vp-p, 75 Ω/ohms  
Pr/Cr signal — 0.7Vp-p, 75 Ω/ohms  
**Frequency response:** DC ~ 100 MHz — +0, -3 dB

### ■ Tuner section

**[FM] (note:  $\mu$ V at 75 Ω/ohms, 0 dBf=1  $\times 10^{-15}$  W) [AM]**

**Receiving Range:** 87.50 MHz ~ 108.00 MHz

**Usable Sensitivity:** 1.0  $\mu$ V (11.2 dBf)

**50 dB Quieting Sensitivity:** MONO 1.6  $\mu$ V (15.3 dBf)

522 kHz ~ 1611 kHz

18  $\mu$ V

**S/N (IHF-A):** STEREO 23  $\mu$ V (38.5 dBf)

MONO 77 dB

STEREO 72 dB

**Total Harmonic Distortion (at 1 kHz):** MONO 0.15%

STEREO 0.3%

### ■ General

**Power supply:** AC 230 V, 50 Hz

**Power consumption:** 270 W

1 W Max (Standby)

**Maximum external dimensions:** 434 (W) x 171 (H) x 416 (D) mm

**Mass:** 13.0 kg

### ■ Remote control unit (RC-925)

**Batteries:** R6P/AA Type (three batteries)

**External dimensions:** 58 (W) x 230 (H) x 37 (D) mm

**Mass:** 230 g (including batteries)

\* For purposes of improvement, specifications and design are subject to change without notice.

- Agradecemos que haya comprado el equipo AVR-2803.
- Para obtener el máximo rendimiento de todas las prestaciones que el AVR-2803 le ofrece, lea atentamente estas instrucciones y utilice el equipo de forma correcta. Conserve este manual para su consulta posterior, en caso de que surgieran dudas o problemas.

"Nº DE SERIE \_\_\_\_\_  
PARA FUTURAS CONSULTAS, ANOTE EL NÚMERO DE SERIE DEL EQUIPO, QUE FIGURA EN LA PARTE POSTERIOR DE LA CARCASA"

## ■ INTRODUCCIÓN

Agradecemos que haya elegido el amplificador DENON AVR-2803 digital de sonido envolvente (digital surround) AV. Este notable componente ha sido diseñado para proporcionarle la escucha de un espléndido sonido de fuentes tales como un DVD en el sistema "Home Theatre" y para obtener una reproducción de alta fidelidad extraordinaria de su música preferida.

Puesto que este producto dispone de enormes posibilidades, le recomendamos que antes de comenzar a instalarlo y a ponerlo en funcionamiento, lea el contenido de este manual.

 
## ÍNDICE

1 Antes de utilizar el aparato .....	175	10 Surround .....	199~203
2 Precauciones en la instalación .....	175	11 Simulación surround DSP .....	203~206
3 Precauciones en el manejo .....	175	12 Recepción de Radio .....	207~210
4 Características .....	176	13 Memoria de la última función .....	210
5 Conexiones .....	176~180	14 Inicialización del microprocesador .....	210
6 Nombres y funciones de las piezas .....	180, 181	15 Resolución de problemas .....	210, 211
7 Configuración del sistema .....	181~189	16 Información adicional .....	211~216
8 Mando a distancia .....	189~194	17 Especificaciones .....	217
9 Funcionamiento .....	194~199		

## ■ ACCESORIOS

Compruebe que la unidad principal va acompañada de las piezas siguientes:

① Instrucciones de funcionamiento .....	1	④ Pilas R6P/AA .....	3
② Lista de estaciones de servicio .....	1	⑤ Antena AM de cuadro .....	1
③ Mando a distancia (RC-925) .....	1	⑥ Antena interior de FM .....	1



## ■ 1 ANTES DE UTILIZAR EL APALATO

Antes de usar este equipo preste atención a las siguientes indicaciones:

- **Mover el equipo**  
Para evitar cortocircuitos o daños en los cables de conexión, cuando quiera mover el equipo, antes de hacerlo desenchufe siempre el cable de alimentación y desconecte los cables de conexión entre todos los demás componentes de audio.

- **Antes de encender el interruptor de alimentación**



Compruebe de nuevo que todas las conexiones están correctamente hechas y que los cables no presentan problemas. Sitúe siempre el interruptor de alimentación en la posición de espera antes de conectar o desconectar los cables de conexión.

## ■ 2 PRECAUCIONES EN LA INSTALACIÓN

Se pueden producir ruidos o la imagen se puede distorsionar si este equipo, o cualquier otro equipo electrónico que utilice microprocesadores, está situado cerca de un sintonizador o de una televisión. Si este fuera el caso, siga los pasos que se indican a continuación:

- Instale este equipo lo más lejos posible del sintonizador o de la televisión.
- Coloque los cables de la antena del sintonizador o de la televisión lejos del cable de alimentación de este equipo y de los cables de conexión de entrada y salida del mismo.
- Se pueden producir ruidos o distorsiones, sobre todo cuando se utilizan antenas de interior o cables de alimentación de 300 Ω/ohmios. **Recomendamos que se utilicen antenas de exterior y cables coaxiales de 75 Ω/ohmios.**

Para facilitar la difusión del calor, deje, como mínimo, una distancia de 10 cm entre la parte superior, la parte posterior y los lados de este equipo y la pared u otros componentes.

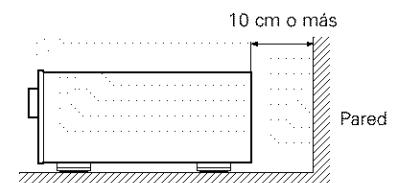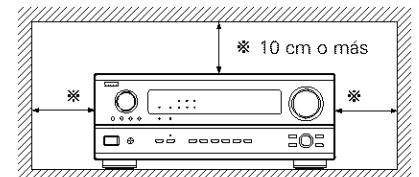

## ■ 3 PRECAUCIONES EN EL MANEJO

- **Activar la función de entrada cuando las tomas de entrada no están conectadas**

Si la función de entrada se activa cuando en las tomas de entrada no hay nada conectado, puede producirse un ruido de chasquido. Si ocurre esto, gire el mando de volumen MASTER VOLUME para bajarlo o conecte los componentes en las tomas de entrada.

- **Silenciamiento de los conectores PRE OUT, HEADPHONE y de las terminales**

Los conectores PRE OUT y HEADPHONE y los terminales SPEAKER tienen un circuito de silenciamiento. Por esta razón, las señales de salida son atenuadas considerablemente durante varios segundos cuando el interruptor de funcionamiento de alimentación es activado o cuando se cambia de modo de sonido envolvente o se hace cualquier otra modificación de configuración.

El aumentar el nivel de volumen durante este período, resultará en una salida extremadamente alta una vez que el circuito de silenciamiento deje de funcionar. Por lo tanto, espere siempre a que el circuito de silenciamiento se desactive antes de ajustar el volumen.

- **Aún cuando el interruptor de encendido esté en la posición ■ OFF, el aparato sigue estando conectado a la línea de CA.**

Cuando vaya a ausentarse de casa durante un tiempo, por ejemplo en vacaciones, asegúrese de que el cable de alimentación queda desenchufado.

## 4 CARACTERÍSTICAS

### 1. Decodificación de sonido digital surround (envolvente)

Con un sistema de procesadores de alta velocidad DSP a 32 bit, operando enteramente en campo digital, son fielmente recreados generadores digitales del sonido surround tales como DVD, LD, DTV y satélite.

### 2. Compatibilidad DTS 96/24

El AVR-2803 es compatible con fuentes grabadas en DTS 96/24, un nuevo formato de señal digital multicanal desarrollado por Digital Theater Systems Inc.

Las fuentes de DTS 96/24 pueden reproducirse en modo multicanal en el AVR-2803 con gran calidad de sonido de 96 kHz/24 bits o 88.2 kHz/24 bits.

### 3. DTS-ES Extended Surround y DTS Neo:6

El AVR-2803 es compatible con DTS-ES Extended Surround, un nuevo formato multicanal desarrollado por Digital Theater Systems Inc.

El AVR-2803 también es compatible con DTS Neo:6, un modo de sonido envolvente que permite la reproducción "6,1-channel" de fuentes estereofónicas convencionales.

### 4. DTS (Sistemas Digital Theater (DTS))

Los DTS proporcionan hasta 5,1 canales de sonido envolvente de alta fidelidad y amplia extensión procedente de fuentes como los discos láser, DVD y discos musicales especialmente codificados.

### 5. Dolby Digital

Haciendo uso de avanzados algoritmos digitales de proceso, Dolby Digital provee hasta 5.1 canales de sonido surround de amplio campo y de alta fidelidad. Dolby Digital es el sistema de entrega de audio digital por defecto para Norte América DVD y DTV.

### 6. Descodificador Dolby Pro Logic II

Dolby Pro Logic II es un nuevo formato para reproducir señales de audio, que ofrece mejoras frente al sistema convencional Dolby Pro Logic. Puede utilizarse para descodificar fuentes de audio grabadas tanto con Dolby Surround como fuentes de audio estéreo normales en cinco canales (delantero izquierdo/derecho, central y surround izquierdo/derecho). Además, pueden ajustarse varios parámetros en función del tipo de fuente y de los contenidos, de modo que puede ajustar el campo de sonido con mayor precisión.

### 7. Sistema de descodificador Dolby Digital EX

Dolby Digital EX es un formato surround de 6.1 canales propuesto por Dolby Laboratories, que permite a los usuarios disfrutar en sus hogares del formato de audio "DOLBY DIGITAL SURROUND EX", desarrollado conjuntamente por Dolby Laboratories y Lucas Films y utilizado por primera vez en la película "La Guerra de las Galaxias". Episodio I: La Amenaza Fantasma".

Los canales de sonido 6.1, incluidos los canales traseros surround, proporcionan un posicionamiento mejorado del sonido y de la expresión del espacio.

### 8. Modo de pantalla ancha para un canal de sonido 7,1 incluso con fuentes de canal 5,1

DENON ha desarrollado un modo de pantalla ancha con un nuevo diseño que recrea los efectos de los altavoces multi surround en cines. El resultado es que el canal de sonido 7,1 toma total ventaja de los altavoces traseros surround, incluso con Dolby Pro Logic o Dolby Digital/DTS señales de canal 5,1.

### 9. Sistema de entretenimiento musical de zonas múltiples

Esta función de fuentes múltiples de la unidad le permite seleccionar diferentes fuentes de audio para escuchar. Se puede de esta forma disfrutar de diferentes fuentes simultáneamente en la habitación principal (MAIN) y en la habitación secundaria (ZONE 2).

### 10. Cambio a Component Video

Además de poder pasar de composite video a "S" video, el equipo AVR-2803 dispone de 2 conjuntos de entradas de aparatos de video (Y, Pb/Cb, Pr/Cr) y un conjunto de salidas de aparatos de video a televisión, para obtener una calidad superior de imagen.

### 11. Función selección video

Esta función permite ver una fuente (visual) mientras se escucha otra fuente (de audio).

### 12. Posibilidad de actualizar en el futuro el formato de sonido mediante entradas y salidas de ocho canales

Para futuros formatos de audio multicanal, el AVR-2803 está provisto de 7,1 entradas de canales (siete canales principales más un canal de efectos de baja frecuencia), junto con un conjunto completo de 7,1 salidas de canal preamplificadas, controladas por un mando máster de volumen de 8 canales. Esto asegura que en el futuro el sistema se pueda actualizar con formatos de sonido multicanal.

## 5 CONEXIONES

- No enchufe el cable de CA hasta que se hayan hecho todas las conexiones.
- Asegúrese de conectar correctamente los canales izquierdo y derecho (izquierdo con izquierdo, derecho con derecho).
- Introduzca bien los enchufes. Las conexiones mal hechas harán que se produzca ruido.
- Utilice tomas de CA para equipo de audio solamente. No las utilice para secadores de pelo, etc.

- Advierta que si se entrelazan los cables de enchufe de patillas con los cables de CA o se colocan cerca de un transformador de corriente, se producirán zumbidos o ruidos.
- Pueden producirse ruidos o zumbidos si se utilizan de forma independiente, sin encender este equipo, equipos de audio que estén conectados. Si ocurre esto, encienda este equipo.

### Conexión de los componentes de audio

- Al hacer las conexiones consulte también las instrucciones de los otros componentes. La alimentación a estas salidas es conectada o desconectada cuando se hace la conexión entre ON (encendido) y STANDBY (posición de espera).

#### Conexión de reproductor de CD

Conecte las tomas de salida analógica del reproductor de CD (SALIDA ANALÓGICA) a las tomas de CD de esta unidad, utilizando para ello los cables con enchufe de patilla.




#### Plato giradiscos (Cartucho MM)

Conecte el cable de salida del plato giradiscos a las tomas PHONO del AVR-2803, colocando el enchufe L (izquierdo) en la toma L y el enchufe R (derecho) en la toma derecha.



#### NOTA:

- Esta unidad no puede utilizarse directamente con cartuchos MC. Utilice un amplificador o un transformador.
- Si se produjeron zumbidos o ruidos cuando se conectó el cable de toma de tierra, desconecte el cable de toma de tierra.

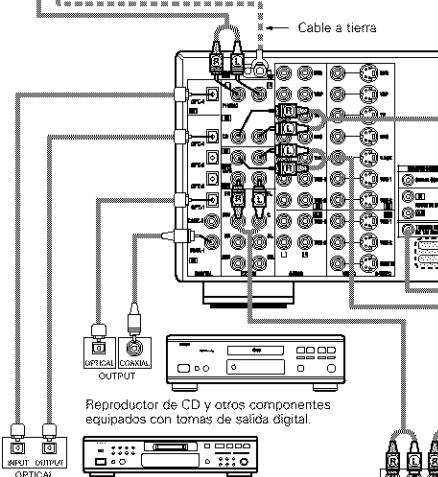

#### Conexión de tomas DIGITALES

Utilice estas tomas para conexiones a equipos de audio con salida digital. Consulte en la página 185 las instrucciones sobre el ajuste de este terminal.

#### NOTAS:

- Para las conexiones coaxiales utilice cables de patillas de 75 Ω/ohmios.
- Para las conexiones ópticas utilice cables ópticos, quitando la tapa antes de hacer la conexión.

#### Conexión de la SALIDA DE CA

- CONECTADA (Capacidad total – 100 W)

El suministro eléctrico a estas salidas se activa o desactiva en conjunción con el interruptor POWER situado en la unidad central, y cuando el interruptor de corriente está situado entre la situación de encendido y la de espera en el mando a distancia. Estas salidas no reciben corriente cuando el interruptor de este equipo está en posición de espera. No conecte nunca equipos con capacidad total superior a 100 W.


#### NOTA:

Utilice la TOMA DE SALIDA DE CA exclusivamente para equipos de audio. No la utilice nunca para secadores de pelo, televisiones u otros aparatos eléctricos.

#### Conexión de las tomas "pre-out"

Utilice estas tomas si desea conectar uno o varios amplificadores de potencia externos para aumentar la potencia de los canales frontal, central y surround posterior o de sonido envolvente, o para conectarlos a altavoces potentes.


\* Para utilizar el Surround posterior con un altavoz, conecte el altavoz a SURR. BACK L CH.

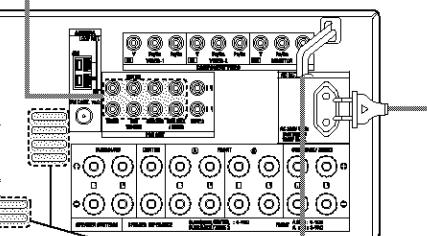

Coloque los cables de conexión, etc., de forma que no obstruyan las aberturas de ventilación.

#### TRIGGER OUT

 Active y desactive el voltaje de 12 V de CC para las funciones individuales. Para más detalles, consulte "Ajuste de la configuración de la salida de activación" en la página 188.



#### Conexión de una unidad de cinta

##### Conexiones para realizar una grabación:

Conecte las tomas de entrada de grabación de la unidad de cinta (LINE IN o REC) a las tomas de grabación de cinta de esta unidad (CDR/TAPE OUT), utilizando los cables con enchufe de patillas.

##### Conexiones para reproducir una grabación:


Conecte las tomas de salida reproducción de la unidad de cinta (LINE OUT o PB) a las tomas de reproducción de la cinta de esta unidad(CDR/TAPE IN), utilizando los cables de enchufe de patillas.

Cable de fuente de alimentación  
CA 230V, 50Hz

NOTA:  
Si ruido de zumbido es producido por un magnetófono, etc., aleje el magnetófono.

## Conexión de aparatos de video

- Para conectar la señal de video utilice un cable de señal de video de 75 Ω/ohmios. El utilizar un cable no adecuado puede empeorar la calidad del video.
- Al hacer las conexiones consulte también las instrucciones sobre los otros componentes.

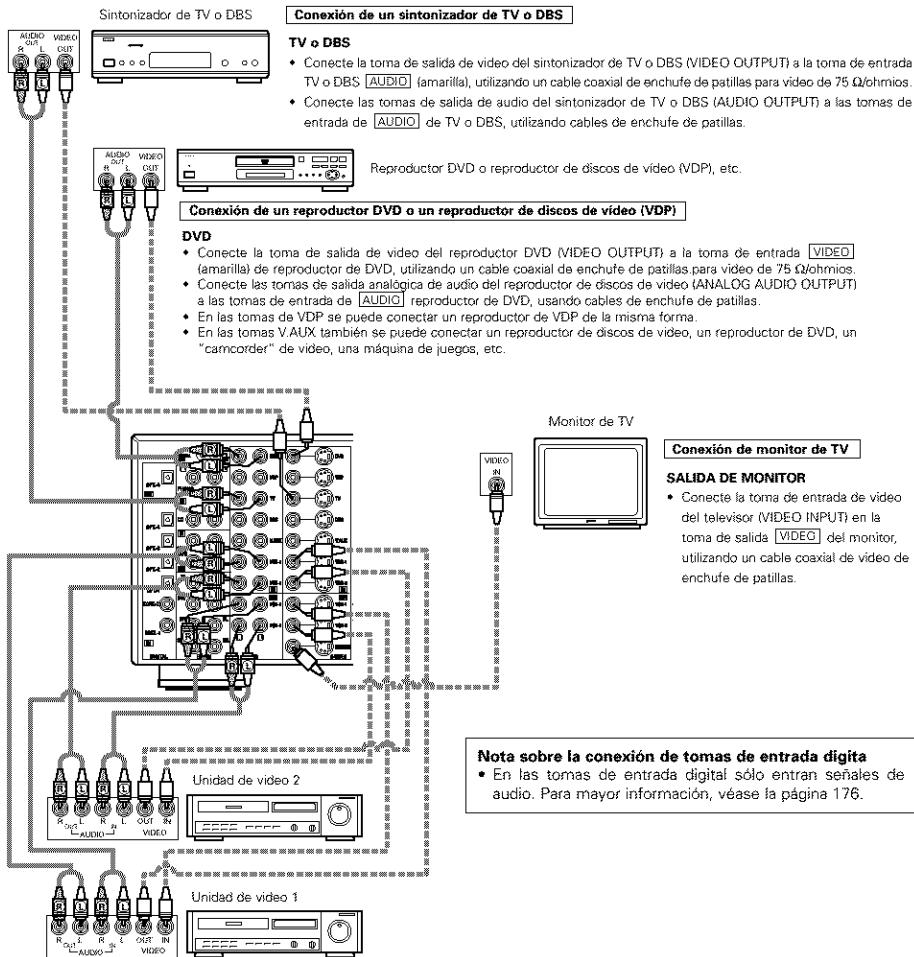

### Conexión de unidades de video

- Hay dos tipos de tomas de unidad de video (VCR), de modo que se puedan conectar dos unidades de video para la grabación simultánea o para copiar videos.

### Conexiones de entrada/salida de video:

- Conecte la toma de salida de video de la unidad de video (VIDEO OUT) a la toma [VIDEO] (amarilla) de entrada VCR-1 IN, y la toma de entrada de video de la unidad de video a la toma [VIDEO] (amarilla) de salida VCR-1 OUT, utilizando cables coaxiales de video de 75 Ω/ohmios con enchufes de patillas.
  - Conecte la toma de salida de audio de la unidad de video (AUDIO OUT) a la toma de entrada [AUDIO] VCR-1 IN, y la toma de entrada de audio de la unidad de video (AUDIO OUT) a la toma de salida [AUDIO] VCR-1 OUT, usando los cables con enchufes de patillas.
- \* Conecte de la misma manera la segunda unidad de video a las tomas VCR-2.

## Conexión de aparatos de video equipados con tomas S-Video

- Al hacer las conexiones consulte también las instrucciones de funcionamiento de los otros componentes.


### Nota sobre las tomas de entrada S

Los selectores de entrada para las entradas S y Video funcionan en conjunto.

### Precaución en el uso de las tomas S

Las tomas S de esta unidad (entrada y salida) y las tomas de patilla de video (entrada y salida) tienen estructuras de circuito distintas, de modo que las entradas de señales de video procedentes de las tomas S son exclusivamente salidas procedentes de las salidas de las tomas S y la entrada de señales de video procedentes de las tomas de patillas son exclusivamente salidas procedentes de las salidas de las tomas de patillas.


Al conectar esta unidad a equipos que tengan tomas S, tenga en cuenta lo anterior y haga las conexiones siguiendo las instrucciones que se indiquen en el manual del equipo.

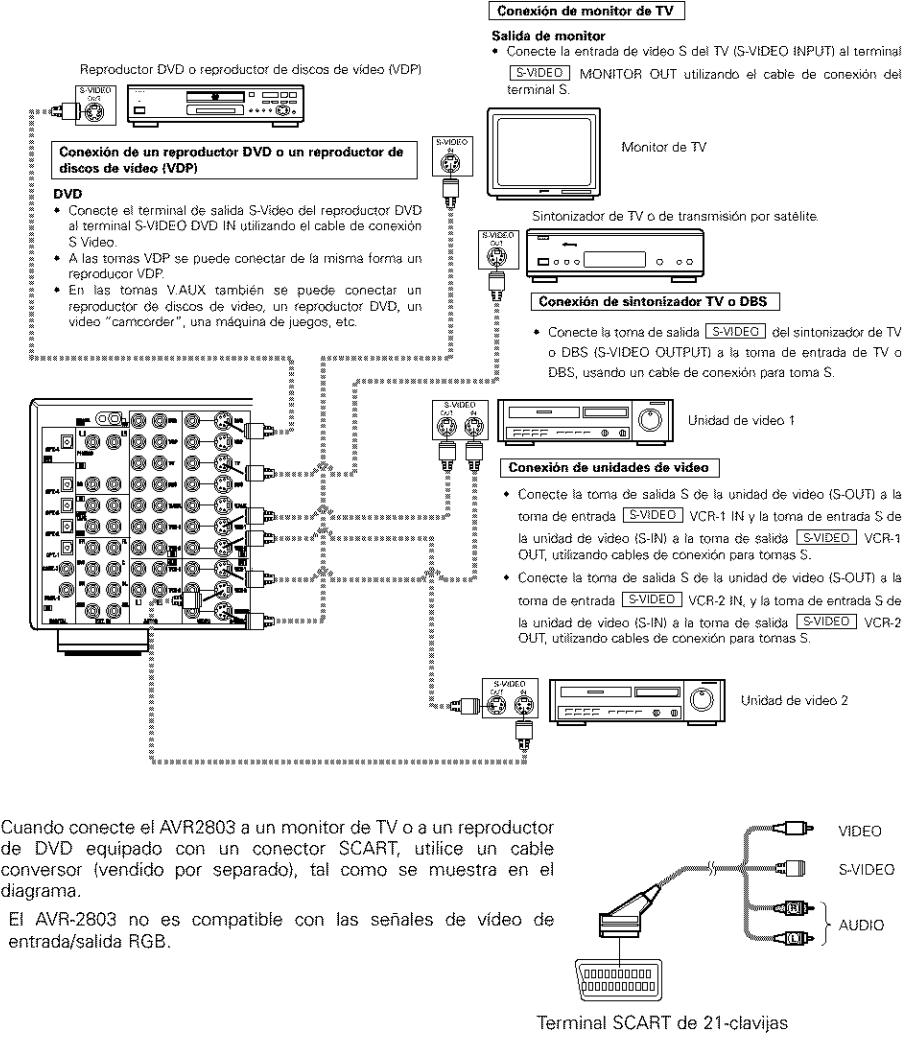

Terminal SCART de 21-clavijas

## Conexión de aparatos de video equipados con tomas de video de diferencia de color (componente - Y, PR/CR, PB/CB)

- Al hacer las conexiones, consulte también las instrucciones de funcionamiento de los otros componentes.
- La entrada de señales en las tomas de video de diferencia de color (componente) no son salidas procedentes de la toma de salida de VIDEO (amarilla) ni de la toma de salida S-Video.
- Algunas fuentes de video que tienen salidas de video de componentes llevan la marca Y, Ca, Cr, o Y, Pb, Pr, o Y, R-Y, B-Y. Todos estos términos hacen referencia a la salida de diferencia de color de video del componente.
- La función asignada a la entrada de video componente se puede cambiar en la configuración del sistema. Para más detalles al respecto, consulte "Ajuste de la asignación de entrada de video" en la página 185.
- Las señales visualizadas en pantalla del AVR-2803, no son salidas procedentes de las tomas de salida de video (MONITOR OUT) de diferencia de color (componente).

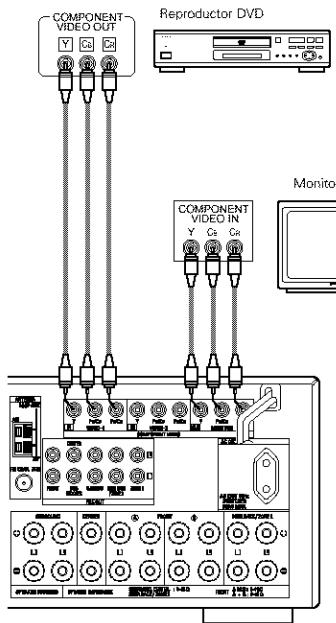

### Conexión de reproductor DVD

#### Tomas de entrada DVD

- Conecte las tomas de salida de video de diferencia de color (componente) del reproductor DVD (COMPONENT VIDEO OUTPUT) a la toma de entrada COMPONENT VIDEO-1 IN, utilizando cables coaxiales de 75 Ω/ohmios para video, con enchufes de patilla.
- De la misma forma se puede conectar otra fuente de video con salidas de video de componente, como puede ser un sintonizador TV/DBS, etc., a las tomas de video de diferencia de color (componente) VIDEO-2.

Monitor de TV


### Conexión de monitor de TV

#### Tomas de salida (OUT) del monitor

- Conecte las tomas de entrada de video (COMPONENT VIDEO INPUT) de diferencia de color (componente) del televisor a la toma de salida COMPONENT MONITOR OUT, utilizando cables coaxiales de video de 75 Ω/ohmios, con enchufes de patilla.


Las tomas de entrada de diferencia de color pueden estar marcadas de distinta forma en algunos televisores, monitores o videos ("Cr, Cs e Y", "R-Y, B-Y e Y", "Pr, Pb e Y", etc.). Para mayor información, lea detenidamente las instrucciones de funcionamiento que se incluyen con el televisor y otros componentes.

## Conexión de los terminales de antena

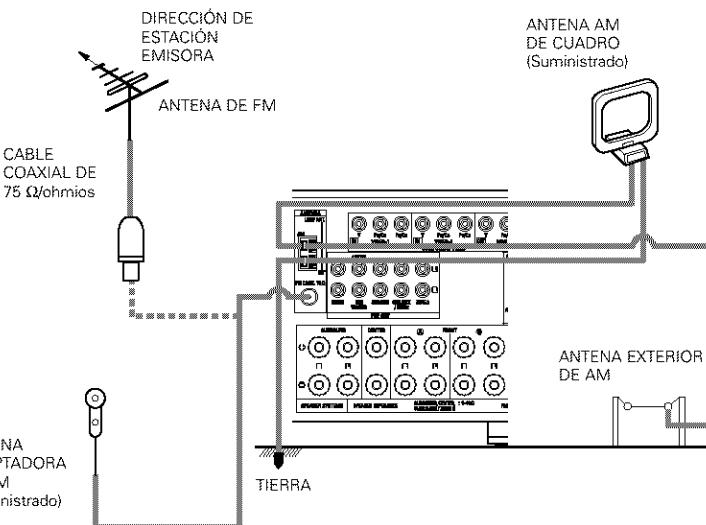

- Una clavija del cable de la antena FM de tipo F, puede ser conectada directamente.

## Montaje de la antena AM de cuadro

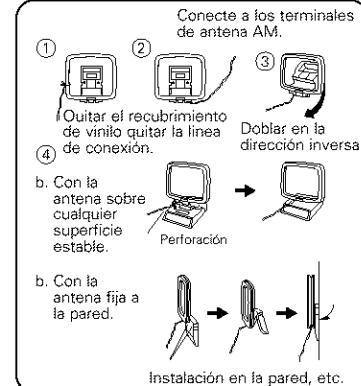

### Conexión de antenas de AM




### NOTAS:

- No conecte dos antenas de FM simultáneamente.
- Aunque se use una antena exterior de AM, no desconecte la antena AM de cuadro.
- Asegúrese de que los terminales de la antena AM de cuadro no toquen las partes metálicas del panel.

## Conexión de las tomas de entrada exteriores (EXT. IN)


- Estos conectores son para recibir señales de audio multicanal desde un decodificador externo o desde un componente con un tipo de decodificador multicanal distinto, como un reproductor Audio DVD o un reproductor SACD multicanal, o para decodificadores de formato de sonido multicanal futuros.
- Al hacer la conexión, consulte las instrucciones de funcionamiento de los otros componentes.

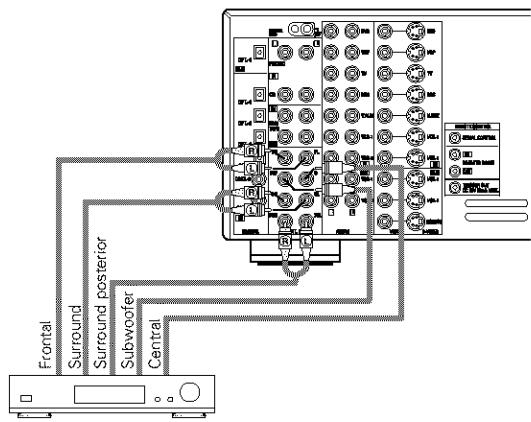

\* Véanse en la página 196 las instrucciones sobre reproducción utilizando tomas de entrada externas (EXT. IN).

## Conexión de terminales ZONE 2

- Si se conecta otro amplificador previo al principal (integrado) o un amplificador de potencia, los terminales de la zona 2 (ZONE2) se pueden utilizar para reproducir al mismo tiempo un fuente de programa diferente en la zona 2 (ZONE 2).

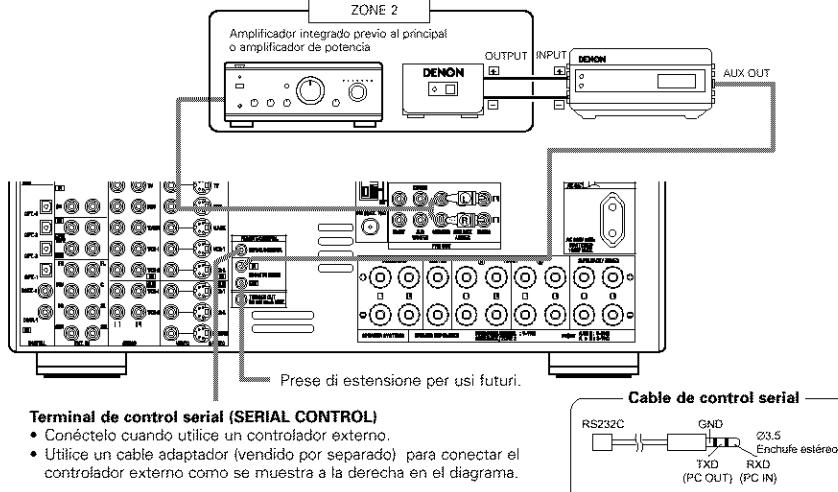

### Terminal de control serial (SERIAL CONTROL)

- Conéctelo cuando utilice un controlador externo.
- Utilice un cable adaptador (vendido por separado) para conectar el controlador externo como se muestra a la derecha en el diagrama.

\* Para instrucciones sobre funcionamiento utilizando los terminales ZONE 2, ver página 198, 199.

## Conexión del sistema de altavoces

- Conecte los terminales del altavoz en el altavoz, verificando que las polaridades coinciden (+ con + y - con -). Si las polaridades no coinciden, se producirá un sonido central débil, una orientación confusa de los distintos instrumentos y un mal sentido de dirección del estéreo.
- Cuando haga las conexiones, cuide que ninguno de los conductores individuales del cable del altavoz estén en contacto con los terminales de al lado, con otros conductores del altavoz o con el panel posterior.

### NOTA:

**NO TOQUE NUNCA los terminales del altavoz cuando la corriente eléctrica esté activada. Si lo hace podría recibir una descarga eléctrica.**

 
### Impedancia del altavoz

- Los altavoces con impedancias de 6 a 16 Ω/ohmios pueden ir conectados para utilizarlos como altavoces frontales y centrales.
- Los altavoces con una impedancia de 6 a 16 Ω/ohmios se pueden conectar para utilizarlos como altavoces de sonido envolvente y de sonido envolvente traseros.
- Tenga cuidado cuando utilice dos pares de altavoces frontales (A + B) al mismo tiempo, puesto que la utilización de altavoces con impedancias de 8 Ω/ohmios dañará el equipo.
- Se puede activar el circuito protector si el equipo se usa durante largos períodos de tiempo con volumen de sonido alto y hay conectados altavoces con impedancias inferiores a las especificadas.

## Conexión de los terminales del altavoz

- Soltar girando en el sentido de las agujas del reloj.
- Inserte el cable.
- Apretar girando en sentido contrario a las agujas del reloj.

**Enrolle fuertemente el extremo de los hilos interiores o córtelo.**



## Circuito protector


- Esta unidad está equipada con un circuito de protección de alta velocidad. El objeto de este circuito es proteger los altavoces en circunstancias tales como cuando la salida del amplificador de potencia ha quedado cortocircuitada de forma inadvertida y se produce un gran flujo de corriente, o cuando la temperatura ambiente que rodea al equipo es más alta de lo normal, o cuando el equipo se utiliza con una salida muy alta durante un tiempo largo, lo que produce un aumento grande de la temperatura. Cuando se activa el circuito de protección, se corta la salida del altavoz y el indicador LED de alimentación eléctrica destella. Si esto se produjera, siga estas instrucciones: desconecte el suministro eléctrico de este aparato, compruebe si algo está mal en los cables del altavoz o en los cables de entrada y espere a que el aparato se enfrie si estuviera muy caliente. Aumente la ventilación alrededor del aparato y vuelva a conectar la alimentación eléctrica. Si el circuito de protección se activara de nuevo aún cuando no detectara problemas en el cableado o en la ventilación del aparato, desconecte la alimentación eléctrica y póngase en contacto con el servicio técnico de DENON.

## Nota sobre la impedancia de los altavoces


- El circuito protector puede activarse si el equipo está en funcionamiento durante largos períodos de tiempo a gran volumen cuando hay conectados altavoces con impedancias inferiores a la impedancia especificada (por ejemplo altavoces con impedancias inferiores a de 4 Ω/ohmios). Si el circuito protector se activara, la salida del altavoz se corta. Apague el aparato, espere a que el aparato se enfrie, mejore la ventilación alrededor del aparato y luego vuelva a encender el aparato.

**Conexiones**

- Al hacer las conexiones consulte las instrucciones de funcionamiento de los otros aparatos.

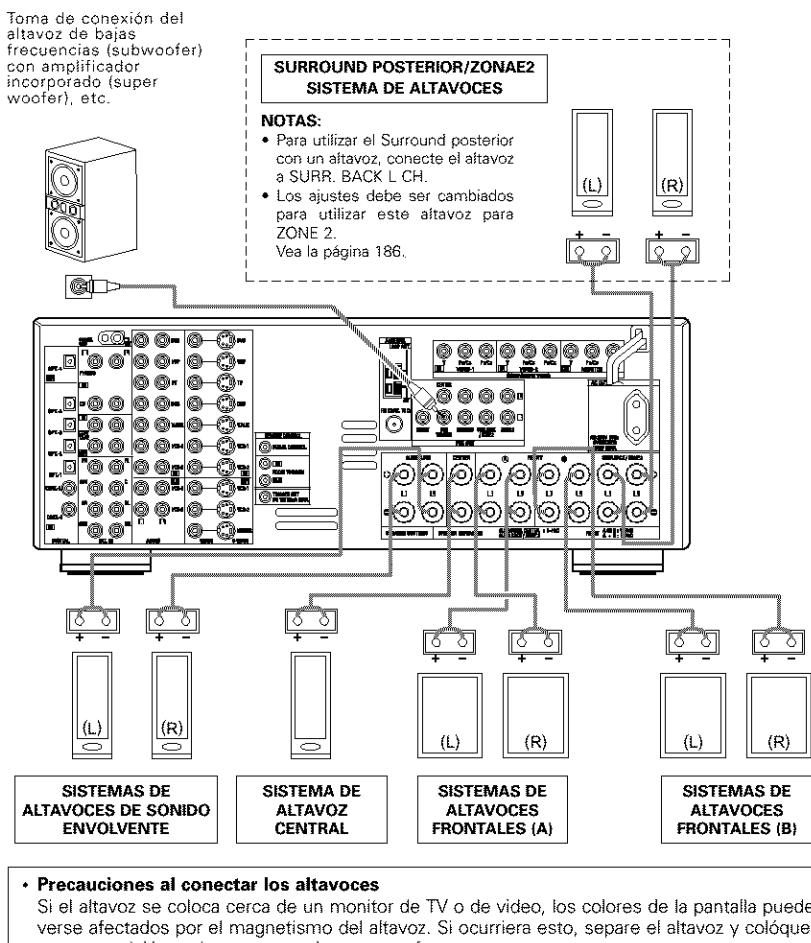**6 NOMBRES Y FUNCIONES DE LAS PIEZAS****Panel frontal**

- Para mayor información sobre las funciones de estas piezas, consulte las páginas que se indican entre paréntesis ( ).

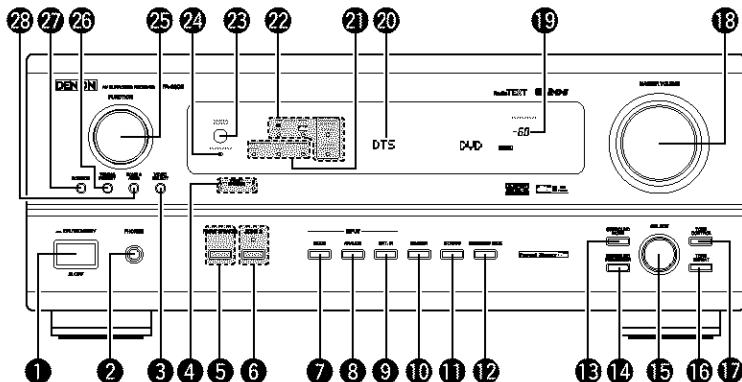

- ① Interruptor para operar la alimentación .....(194, 210)
- ② Toma de los auriculares (PHONES) .....(197)
- ③ Botón VIDEO SELECT .....(197)
- ④ Indicadores del sistema de altavoces frontales (FRONT SPEAKER A/B)
- ⑤ Botón FRONT SPEAKER .....(194, 210)
- ⑥ Botón ZONE 2/indicador .....(198, 210)
- ⑦ Botón MODE .....(195, 196, 202)
- ⑧ Botón ANALOG .....(195, 196)
- ⑨ Botón EXT. IN .....(195, 196)
- ⑩ Botón DIMMER .....(197)
- ⑪ Botón STATUS .....(197)
- ⑫ Botón SURROUND BACK .....(202)
- ⑬ Botón SURROUND MODE .....(195, 200~202, 204)
- ⑭ Botón SURROUND PARAMETER .....(200~202, 204)
- ⑮ Botón SELECT .....(195, 196, 200~202, 204, 205)
- ⑯ Botón TONE DEFEAT .....(196)
- ⑰ Botón TONE CONTROL .....(196, 205)
- ⑱ Control MASTER VOLUME .....(195)
- ⑲ Indicador del volumen principal (VOLUME LEVEL) .....(195)
- ⑳ Visualizar
- ㉑ Indicadores del modo de INPUT .....(195)
- ㉒ Indicador SIGNAL .....(195)
- ㉓ Sensor del control remoto (REMOTE SENSOR) .....(189)
- ㉔ Indicador de la alimentación .....(194)
- ㉕ Botón FUNCTION .....(195, 197, 198, 202, 207, 208)
- ㉖ Botón TUNING/PRESET .....(208)
- ㉗ Botón selector SOURCE .....(195)
- ㉘ Botón ZONE 2/REC .....(197, 198)












**2**

 Pase a la pantalla de asignación de entrada de video.

**3**

Seleccione el terminal de entrada de video componente (Y, Pb/Cb y Pr/Cr) que se va a asignar a la fuente de entrada.



① Selección de la fuente de entrada.



② Selección del terminal de video componente.

Seleccione ninguno "NONE" para fuentes para las cuales la entrada de video componente (Y, Pb/Cb y Pr/Cr) no se va a utilizar.

\* Cuando se selecciona por defecto si, "Yes", se reestablecen los ajustes por defecto de fábrica.

**4**

Introduzca el ajuste.


Reaparece el menú de configuración del sistema.

## Ajuste del control de la zona 2 (ZONE2)



### [1] Ajuste de la asignación del amplificador de potencia

Realice este ajuste para cambiar el amplificador de potencia para el canal trasero de sonido envolvente a la zona 2 (ZONE2).

Si se selecciona la zona 2 (ZONE2), la señal que se selecciona en esta zona se emite en los terminales de sonido envolvente trasero/salida previa de zona 2 "SURR.BACK/ZONE2 PREOUT".

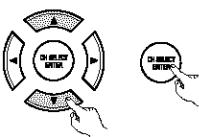
**1**

En el Menú de Configuración del Sistema seleccione "Zone2 Control" y pulse el botón ENTER.

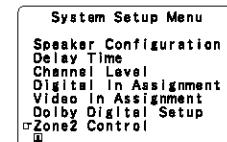
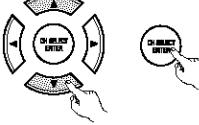
**2**

Aparecerá la pantalla de control de la zona 2 "Zone2 Control".

Seleccione la asignación del amplificador de potencia "Power Amp Assignment" y pulse el botón intro (ENTER).

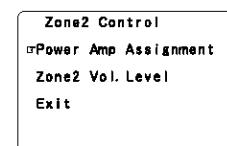**3**

Seleccione envolvente posterior "Surround Back" para utilizarlo como el canal de sonido envolvente posterior. Zona 2 "Zone2" para utilizarla como salida de la zona 2 "Zone2".

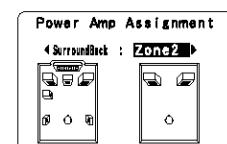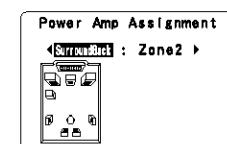

Cuando se selecciona "Surround Back"

Cuando se selecciona "Zone 2"

**4**

 
Introduzca el ajuste.

En la pantalla de control de la zona 2 "Zone2 Control", seleccione salir "Exit" y pulse el botón intro (ENTER).



Reaparece el menú de configuración del sistema.

### [2] Ajuste del nivel Zone2 vol.

Fije el ajuste del nivel de salida a la salida previa de la zona 2.


**1**

En el Menú de Configuración del Sistema seleccione "Zone2 Control" y pulse el botón ENTER.

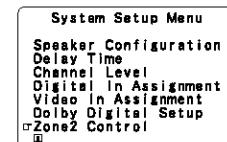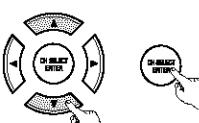**2**

Aparecerá la pantalla de control de la zona 2 "Zone2 Control".

Seleccione la asignación del amplificador de potencia "Zone2 Vol. Level" y pulse el botón intro (ENTER).

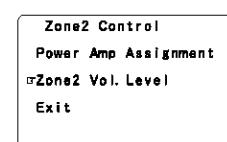**3**

Introduzca la configuración.  
Volverá a aparecer el System Setup Menu.

**3**


Seleccione el ajuste deseado.

**Variable:**

El nivel puede ajustarse libremente usando los botones del mando a distancia.

**0 dB, -40 dB:**

El nivel de salida queda fijo en el nivel establecido y el volumen ya no puede ser ajustado.

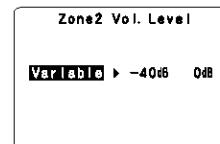**4**

Introduzca el ajuste.

En la pantalla de control de la zona 2 "Zone2 Control", seleccione salir "Exit" y pulse el botón intro (ENTER).


Reaparece el menú de configuración del sistema.

## Configuración del modo Auto Surround


El modo de sonido envolvente utilizado al final para los tres tipos de señales de entrada mostrado abajo se almacena en la memoria, y la señal se reproduce automáticamente con ese modo de sonido envolvente la próxima vez que esté se introduce.

Tenga en cuenta que la configuración del modo surround también se almacena por separado para cada una de las distintas fuentes de entrada.


- ① Señales de 2 canales análogos PCM
- ② Señales de 2 canales de Dolby Digital, DTS u otro formato multicanal
- ③ Señales multicanal de Dolby Digital, DTS u otro formato multicanal

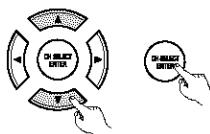**1**

En el Menú de Configuración del Sistema seleccione "Auto Surround Mode" y pulse el botón ENTER.

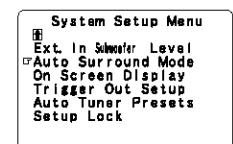**2**


Seleccione "ON" si desea utilizar el modo surround auto, "OFF" si no quiere utilizarlo.

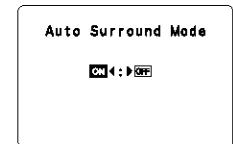**3**


Introduzca el ajuste.  
Reaparece el menú de configuración del sistema.

## Ajuste del nivel de subwoofer Ext.In

 
- Ajuste el método de reproducción de la señal de entrada analógica conectada al subwoofer Ext.In..

**1**

En el System Setup Menu, seleccione "Ext.In Subwoofer Level".

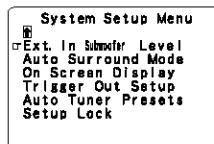**2**

Cambie a la pantalla de nivel del subwoofer Ext.In.

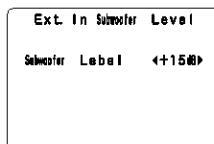**3**

Seleccione el ajuste deseado.

Seleccione de acuerdo con las especificaciones del reproductor que se está utilizando. También remítase a las instrucciones de funcionamiento del reproductor.

Recomendados +15 dB (por defecto). 0, +5, +10 y +15 dB seleccionable.


**4**

Introduzca el ajuste.



Reaparece el menú de configuración del sistema.

## Ajuste de la visualización en pantalla (OSD)

- Utilice esta facilidad para apagar o encender las visualizaciones en pantalla (mensajes que no sean pantallas de menú).

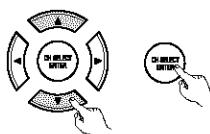**1**

En el Menú de Configuración del Sistema seleccione "On Screen Display" y pulse el botón ENTER.

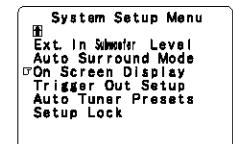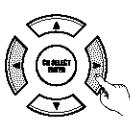**2**


Seleccione "ON" o "OFF".

**3**


Introduzca el ajuste.  
Reaparece el menú de configuración del sistema.

## Ajuste de la configuración de la salida de la señal de activación



- Ajuste la salida de la señal de activación para las diferentes fuentes de entrada.

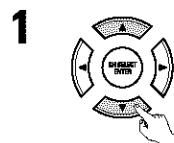

En el Menú de Configuración del Sistema seleccione "Trigger Out Setup".

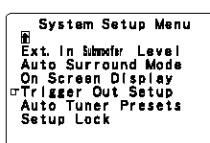

Cambie a la pantalla de configuración de salida de la señal de activación.

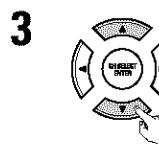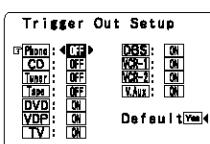

Seleccione la fuente de entrada y seleccione activado "ON" o desactivado "OFF".




Introduzca el ajuste.  
Reaparece el menú de configuración del sistema.

## Pre-ajustes del Auto Sintonizador


Utilizarlo para buscar automáticamente emisoras FM y para almacenar hasta 40 emisoras en los canales ajustados previamente A del 1 al 8, B del 1 al 8, C del 1 al 8, D del 1 al 8, E del 1 al 8.

### NOTA:

- Si una emisora FM no puede ser ajustada automáticamente debido a una mala recepción, llevar a cabo la operación descrita en el "Manual de Sintonización" ("Manual Tuning") para sintonizar la emisora. A continuación ajustarla siguiendo la operación descrita en el manual "memoria de preajuste" ("Preset memory").

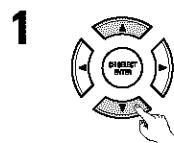

En el Menú de Configuración del Sistema seleccione "Auto Tuner Presets".

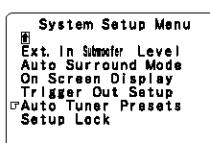

Pulsar el botón ENTER.  
Aparecerá la pantalla "Auto Pre-ajuste de Memoria" ("Auto Preset Memory").




3




Utilizar el CURSOR para seleccionar "Yes" ("Sí").  
"Search" ("Buscar") parpadea en la pantalla y comienza a buscar.  
"Completed" ("Completado") aparece una vez que se haya completado la búsqueda.  
La visualización automáticamente se cambia a pantalla.

## Protección de la configuración


- La configuración del sistema puede bloquearse para que no pueda modificarse tan fácilmente.

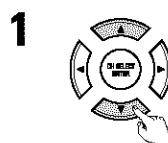

Seleccione "Setup Lock" en la pantalla System Setup Menu.

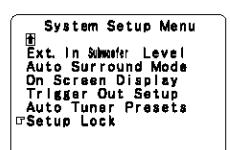

Cambie a la pantalla de bloqueo de la configuración.

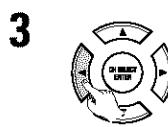

Seleccione "ON" para bloquear la configuración del sistema.



Pulse el botón intro (ENTER) para completar el ajuste y salir del modo de configuración del sistema.

Cuando se activa la función de bloqueo de la configuración, la configuración que aparece a continuación no puede modificarse y aparecerá "Setup Locked" cuando se pulsen los botones cercanos.

- Configuración del sistema
- Configuración de los parámetros surround
- Configuración del control de tono
- Configuración del nivel de canal (incluidos los tonos de prueba)

Para desbloquear, pulse nuevamente el botón de configuración del sistema y visualizará la pantalla de bloqueo de la configuración, luego seleccione desactivado "OFF" y pulse intro "ENTER".

\* La configuración del sistema se ha completado. Una vez establecida esta configuración, no necesita cambiarla a no ser que conecte distintos componentes AV o que vuelva a colocar los altavoces.

## Después de haber configurado el sistema

Este botón puede pulsarse en cualquier momento durante el proceso de configuración del sistema para terminar el proceso.

1



Pulse el botón SYSTEM SETUP (configuración del sistema) en el menú de configuración del sistema.

\* Los ajustes modificados son ingresados y la visualización de pantalla se apaga.

### • Señales visualizadas en pantalla

	Entrada de señales al AVR-2803	Salida de señales visualizadas en pantalla		
	Toma de entrada de señales de video (amarilla)	Toma de entrada de señales de S-video	Toma de salida de señales de video VIDEO MONITOR OUT (amarilla)	Toma de salida de señales de video S-VIDEO MONITOR OUT
1	x	x	o	o
2	o	x	o	x
3	x	o	x	o
4	o	o	x	o

(o: señal x: sin señal)

(o: Salida de señales en pantalla x: sin salida de señales en pantalla)

(x: sin señal)

### NOTAS:


- Las señales de visualización de pantalla no son emitidas desde la toma de señal de video MONITOR OUT de diferencia de color (componente).
- En el punto 4 más arriba, las señales visualizadas en pantalla son salidas a la toma de salida de señales de video VIDEO MONITOR OUT (amarilla) si el monitor de TV no está conectado a la toma de salida de señales de video de S-video MONITOR OUT.

## 8 MANDO A DISTANCIA


- El mando a distancia que se incluye (RC-925) puede utilizarse para activar las funciones no sólo del AVR-2803, sino también de otros aparatos DENON compatibles y que también se puedan accionar con mando a distancia. Además, la memoria contiene la señales de control para otras unidades de mando a distancia, entonces esta puede ser utilizada para operar productos compatibles de mando a distancia que no sean Denon.

### Colocación de las pilas


- Quite la cubierta trasera del mando a distancia.

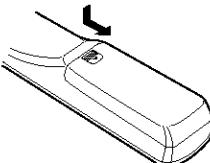

- Coloque tres pilas R6P/AA, en la dirección que se indica, en el compartimento de baterías.

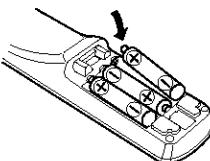


- Coloque nuevamente la cubierta trasera.

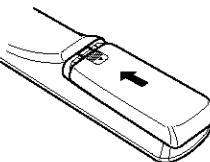

### Notas sobre las pilas

- Para el mando a distancia utilice pilas R6P/AA.
- Las pilas debe sustituirse por otras nuevas aproximadamente una vez al año, aunque esto depende de la frecuencia con que se utilicen.
- Aunque haya transcurrido menos de un año, sustituya las pilas por otras nuevas si el equipo no funciona aún cuando el mando a distancia se accione cerca del aparato. (La pila suministrada es solo para verificar el funcionamiento. Reemplacela por una nueva tan pronto sea posible.)
- Cuando introduzca las baterías, compruebe que quedan en la dirección correcta, siguiendo las marcas "+" y "−" que hay en el compartimento de las pilas.
- Para evitar daños o fugas del líquido de las pilas:
  - No utilice baterías nuevas junto con otras viejas.
  - No utilice dos tipos distintos de pilas.
  - No cortocircuite, deshaga o caliente las pilas ni las tire al fuego.
- Saque las pilas del mando a distancia cuando no vaya a utilizarlo durante un largo tiempo.
- Si se produjera una fuga del líquido de las pilas, límpie bien el interior del compartimento de las pilas y coloque pilas nuevas.
- Al sustituir las pilas, tenga las pilas nuevas preparadas y colóquelas lo más rápidamente posible.

### Utilización del mando a distancia

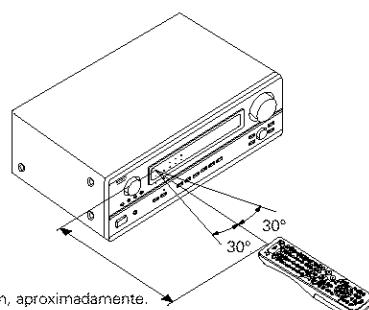

- Dirija el mando a distancia de modo que apunte hacia el sensor remoto situado en la unidad principal, como se indica en la ilustración.


- El mando a distancia puede utilizarse a una distancia, en línea recta, de unos 7 metros de la unidad principal, pero esta distancia será menor si existen obstáculos entre los dos aparatos o si el mando a distancia no apunta directamente al sensor remoto.
- El mando a distancia puedeaccionarse situándolo en ángulo horizontal de hasta 30 grados con respecto a sensor remoto.

### NOTAS:

 - Puede resultar difícil accionar el mando a distancia si el sensor remoto está expuesto a la luz solar directa o a una luz artificial muy fuerte.
- No pulse los botones de la unidad principal y del mando a distancia simultáneamente. Si lo hace puede producirse un mal funcionamiento.
- Los anuncios de neón u otros dispositivos que emitan ruidos de tipo pulsátil y que estén situados en las proximidades del aparato, pueden producir un mal funcionamiento de éste, por lo que el aparato debe estar lo más apartados que sea posible de estos dispositivos.


## Funcionamiento de los componentes de audio DENON

- 1** Utilice los botones selectores de modo para seleccionar el componente que deseé manejar.  
 \* La función se modificará un paso en secuencia descrita a continuación cada vez que se pulse el botón de selección de modo MODE SELECT.




- 2** Haga funcionar el componente de audio.  
 • Para detalles, remítase a las instrucciones de manejo del componente.  
 \* Es posible que algunos modelos no puedan ser manejados.

### 1. Botones del sistema reproductor de CDs (CD)

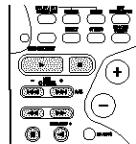


- ◀◀, ▶▶ : Búsqueda manual (hacia adelante y hacia atrás)
- : Parada
- ▶ : Reproducción
- ◀◀▶▶ : Búsqueda automática (al comienzo de la pista)
- II : Pausa
- DISC SKIP + : (para cambiadores de CD solamente)

### 2. Botones del sistema de pletina de cassette (TAPE)

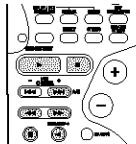


- ◀◀ : Rebobinado
- ▶▶ : Avance rápido
- : Parada
- ▶ : Reproducción hacia adelante
- II : Pausa
- ◀ : Reproducción hacia atrás
- A/B : Cambia entre los lados A y B

### 3. Botones del sistema de grabadora de MD (MD) y reproductor de CD (CDR)

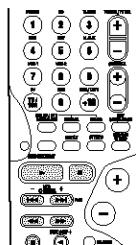


- ◀◀, ▶▶ : Búsqueda manual (hacia adelante y hacia atrás)
- : Parada
- ▶ : Reproducción
- ◀◀▶▶ : Búsqueda automática (al comienzo de la pista)
- II : Pausa

\* Ajustes por defecto : CDR

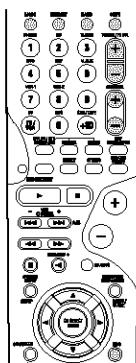

- |              |  |
|--------------|--|
| TUNING +, -  | : Sintonización hacia adelante/hacia atrás     |
| BAND         | : Cambia entre las bandas AM y FM              |
| MODE         | : Cambia entre AUTO y MANUAL                   |
| MEMORY       | : Memoria de preajustes                        |
| SHIFT        | : Cambia la gama de canales preajustados       |
| CHANNEL +, - | : Preajusta canales hacia adelante/hacia atrás |
| RDS          | : Buscar RDS                                   |
- \* No puede utilizarse el sintonizador en el modo de amplificador (CD, CDR/MD o TAPE).

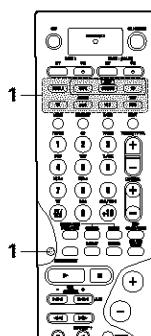

## Memoria preestablecida

El mando a distancia incluido se puede utilizar para operar dispositivos de diferentes marcas al registrar el número de preajuste correspondiente a la marca de su dispositivo. Para algunos modelos el mando a distancia o el dispositivo pueden no funcionar apropiadamente. En este caso, utilice la función de aprendizaje (página 192) para almacenar las señales del mando a distancia del dispositivo en el mando a distancia incluido.


- 1** Pulse el botón ON/SOURCE y el botón OFF al mismo tiempo.  
 • El indicador LEARNED/TX parpadea.



- 2** Pulse el botón de modo del equipo que va a introducirse en una memoria prefijada.  
 • El botón de modo parpadea.



- 3** Respecto a la Lista de Códigos Preajustados suministrada, utilice los botones de número para introducir el código de preajuste (un número de 4 dígitos) para el fabricante del componente cuyas señales usted quiere almacenar en la memoria.

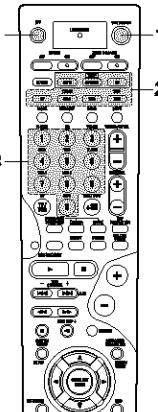

- 4** Cuando se haya almacenado correctamente, el botón de modo y el indicador LEARNED/TX se iluminarán.

- 5** Para guardar los códigos de otro componente en la memoria, repita los pasos 1 a 4.

### NOTAS:

- Dependiendo del modelo y del año de fabricación, esta función no puede ser utilizada en algunos modelos, aún si las marcas están incluidas en la lista de códigos preajustados.
- Algunos fabricantes utilizan más de un tipo de código de control remoto. Consulte la lista de códigos prefijados incluidos para modificar el número y verifíquelo.
- La memoria prefijada puede ajustarse sólo para uno de los siguientes componentes: CDR/MD, DVD/VDP y DBS/CABLE.

 
Los códigos de preajuste a la salida de fábrica y después de un reajuste son los siguientes:

TV, VCR.....	HITACHI
CD, TAPE.....	DENON
CDR/MD.....	DENON (CDR)
DVD/VDP.....	DENON (DVD)
DBS/CABLE.....	ABC (CABLE)


Códigos de preajuste de DVD	0000	0001
DENON Nº de modelo	DVD-900 DVD-1000 DVD-1500 DVD-2800 DVD-2800II DVD-3800 DVD-A1	DVD-800 DVD-1600 DVD-2000 DVD-2500 DVD-3000 DVD-3300

## Manejo del componente almacenado en la memoria de preajustes

- 1** Pulse el botón selector de modo para el componente que deseé manejar.


**NOTA:**

- Para los botones del mando a distancia del reproductor DVD, los nombres de las funciones pueden ser diferentes de acuerdo al fabricante. Compare con la operación del mando a distancia de los componentes varios.

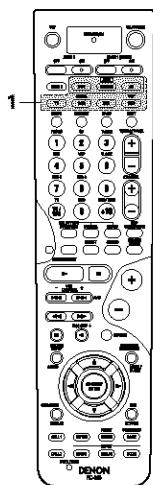


- 2** Ponga en marcha el aparato.

- Para mayor detalle, consulte las instrucciones de funcionamiento del aparato.

※ Algunos modelos no funcionan con este mando a distancia.


### 1. Botones del sistema de reproducción de discos de video digital (DVD, DVD SETUP)

POWER (ON/SOURCE)	: Alimentación activada/en espera
◀◀, ▶▶	: Búsqueda manual (hacia adelante y hacia atrás)
■	: Parada
▶▶, ■	: Reproducción
◀◀, ▶▶	: Búsqueda automática (al comienzo de la pista)
■	: Pausa
0 ~ 9, +10	: 10 tecla
DISC SKIP +	: Salto de disco (sólo para el cambiador de DVDs)
DISPLAY	: Pantalla
MENU	: Menú
RETURN	: Regresar
SETUP	: Configuración
ENTER	: Introducir
▲, ▼, ▲, ▼	: Cursor hacia arriba, hacia abajo, hacia la izquierda y hacia la derecha

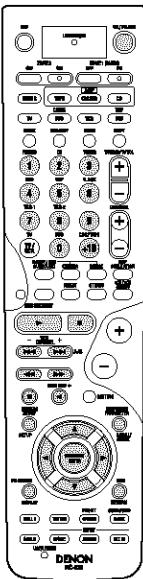

### 2. Botones del sistema de reproductor de disco de video (VDP)

POWER (ON/SOURCE)	: Alimentación activada/en espera
◀◀, ▶▶	: Búsqueda manual (hacia adelante y hacia atrás)
■	: Parada
▶▶, ■	: Reproducción
◀◀, ▶▶	: Búsqueda automática (al comienzo de la pista)
■	: Pausa
0 ~ 9, +10	: 10 tecla

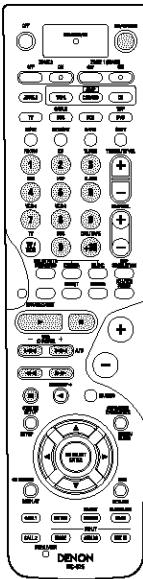


### 3. Botones del sistema de la unidad de video (VCR)

POWER (ON/SOURCE)	: Alimentación activada/en espera
◀◀, ▶▶	: Búsqueda manual (hacia adelante y hacia atrás)
■	: Parada
▶▶	: Reproducción
■	: Pausa
Channel +, -	: Canales

### 4. Botones de sistemas de monitor de TV (TV), sintonizador de emisiones digitales por satélite (DBS) y cable (CABLE)

POWER (ON/SOURCE)	: Alimentación activada/en espera
MENU	: Menú
▲, ▼, ▲, ▼	: Cursor hacia arriba, hacia abajo, hacia la izquierda y hacia la derecha
ENTER	: Introducir
CHANNEL +, -	: Cambio de canales
+, -	: Canales
0~9, +10	: Cambia entre el televisor y el aparato de video
TV/VCR	: Volumen hacia arriba/hacia abajo
DISPLAY	: Pantalla
RETURN	: Regresar

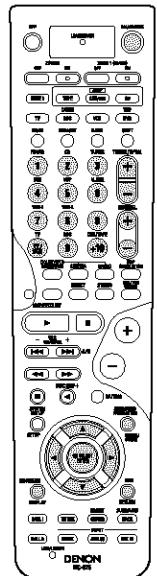
**NOTAS:**

- Para estos componentes de CD, CDR, MD y TAPE, pueden utilizarse los botones del mismo modo que para los componentes de audio de Denon.
- Puede utilizarse la televisión en los modos DVD/VDP, VCR y TV.

## Función aprendizaje

Si su componente AV no es un producto Denon o si este no puede ser operado utilizando la memoria preajustada, este puede ser controlado con la unidad de mando a distancia mediante el almacenamiento de sus señales de mando a distancia en la unidad de mando a distancia.

Para algunas señales del mando a distancia no es posible "aprender" las señales o el dispositivo no funcionará correctamente. En tales casos utilice el mando a distancia incluido con el dispositivo para operarlo.

 
- Pulse el botón USE/LEARN con la punta de un bolígrafo, etc, para ajustar el modo learn.

- Parpadean los botones de selección y el indicador LEARNED/TX.



- Pulse el botón de modo del equipo en el que se desee activar el modo learn.

- Parpadean el botón de modo y el indicador LEARNED/TX.





- Pulse el botón que se desea que se asigne al modo learn.

El indicador LEARNED/TX deja de parpadear y se ilumina el botón de modo.

- El botón de modo y el indicador LEARNED/TX parpadean si se pulsa algún botón al que no pueda asignarse el modo "learn".


- Para cancelar, pulse el botón USE/LEARN.

- Apunte las unidades de mando a distancia directamente unas a otras y mantenga pulsado el botón en la unidad de mando a distancia de la que quiere "aprender".

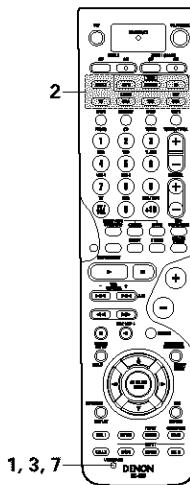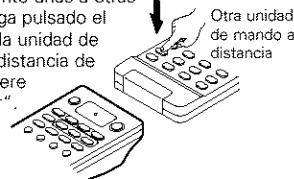

- El botón de modo y el indicador LEARNED/TX se iluminan; suelte el botón en la otra unidad de control remoto.

 
- El botón de modo y el indicador LEARNED/TX empiezan otra vez a parpadear.



- Para asignar el modo "learn" a otros botones, repita los pasos del 2 al 5.

- Cuando haya terminado la operación del modo "aprendizaje", vuelva a pulsar el botón USE/LEARN.

El botón de modo y el indicador LEARNED/TX dejan de parpadear y el modo learning se cancela.

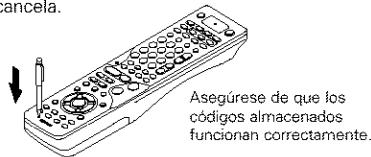

### NOTAS:

- Si no pudieran almacenarse los códigos, el indicador LEARNED/TX empezará a parpadear rápidamente. En un número limitado de modelos, no pueden almacenarse códigos en el RC-925.
- Si el botón de modo y el indicador LEARNED/TX empiezan a parpadear rápidamente, significa que la memoria ya está llena y el código que ha intentado almacenar no estaba almacenado. Para que este código pase al modo "learn", primero realice la operación de restablecimiento de valores. (Vea la página 193).

 
## Recuperación de sistema

La unidad de mando a distancia está equipada con una función de llamada de sistema que permite transmitir una serie de señales de mando a distancia al pulsar un simple botón.

Esta función puede ser utilizada por ejemplo para activar la alimentación del amplificador, seleccionar la fuente de entrada, activar la alimentación del monitor del TV, activar la alimentación de los componentes de fuente y ajustar la fuente al modo de reproducción, todo con el toque de un botón.

### (1) Botones de recuperación de sistema

Se pueden almacenar un máximo de 10 señales cada vez en los botones de llamada 1 "CALL 1" y de llamada 2 "CALL 2".



### (2) Almacenamiento de las señales de recuperación de sistema

- Pulse el botón de alimentación ON/SOURCE y el botón OFF al mismo tiempo.

- El indicador LEARNED/TX parpadea.



- Pulse el botón CALL 1.

- Los botones del selector de modo y el indicador LEARNED/TX parpadean.




- Pulse los botones de modo del equipo en el que desea registrar System Call.



- Pulse los botones cuyas señales de control deseé almacenar uno por uno.

- Repita los pasos 3 y 4 para registrar los botones que desee.

- Pulse el botón CALL1 o CALL2 y registre System Call.

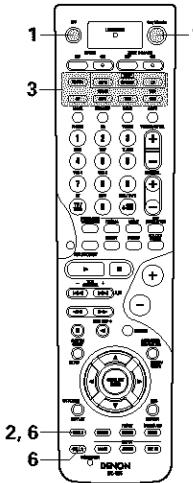

### NOTAS:

- Las señales de control remoto de los botones pulsados durante el almacenamiento de señales de llamadas del sistema (system call) se transmiten cuando se pulsan los botones; por tanto, tape el sensor remoto o tome otras medidas para que los componentes no funcionen mientras se estén almacenando las señales.

- El botón de modo y el indicador LEARNED/TX parpadean rápidamente si ya se ha almacenado el número máximo de señales.

### (3) Utilización de la función de recuperación de sistema

- Pulse el botón en el que se hayan almacenado las señales de recuperación de sistema.


- Las señales almacenadas serán transmitidas en sucesión.

## Función de aprendizaje (Punch Through)

### (1) Botón de "cruce del sonido"

Los botones utilizados en los modos de CD, CDR/MD, TAPE, DVD/VDP y VCR se pueden asignar a los botones mostrados en el diagrama a la derecha, los cuales no son utilizados normalmente en los modos TV, y DBS/CABLE.

Por ejemplo, cuando el modo CD se ajusta al modo de "cruce del sonido" en el modo TV, los botones de reproducción (PLAY), parada (STOP), búsqueda manual (MANUAL SEARCH), búsqueda automática (AUTO SEARCH), pausa (PAUSE) y omitir disco (DISC SKIP) del modo CD son enviados al modo TV.

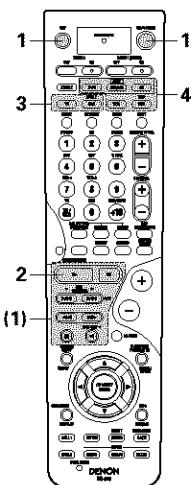

### (2) Realizando el ajuste de "cruce del sonido"

- 1** Pulse el botón de alimentación ON/SOURCE y el botón OFF al mismo tiempo.  
• El indicador LEARNED/TX parpadea.



- 2** Pulse el botón ► (reproducción).  
• Los botones de modo TV y DBS/CABLE y el indicador LEARNED/TX parpadean.



- 3** Pulse el botón de modo del equipo en el que deseé configurar la función "Punch Through".  
• Los botones de modo CD, CDR/MD, TAPE, DVD/VDP y VCR y el indicador LEARNED/TX parpadearán.




- 4** Pulse el botón de modo del equipo en el que deseé activar la función "Punch Through".  
• Se iluminará el botón de modo que se haya configurado.



## Reajuste

### (1) Reajuste de botones "registrados"


- 1** Pulse el botón USE/LEARN con la punta de un bolígrafo, etc., para ajustar el modo learn.  
• Los botones del selector de modo y el indicador LEARNED/TX parpadean.

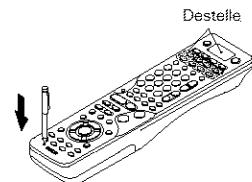


- 2** Pulse el botón de modo del equipo cuyos valores desee restablecer.  
• El botón de modo y el indicador LEARNED/TX parpadean.



 - 3** Mantenga durante 4 segundos o más pulsado el botón de modo del equipo cuyos valores desee restablecer y el botón ON/SOURCE.  
• El botón de modo y el indicador LEARNED/TX volverán a parpadear y la señal del control remoto en modo "aprender" del equipo seleccionado se borrará.




- 4** Pulse el botón USE/LEARN.

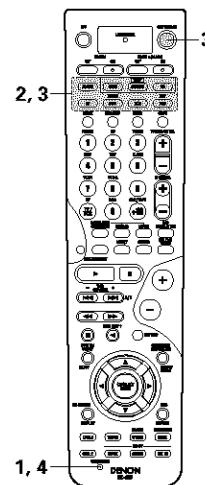

**(2) Reposición del ajuste de "cruce del sonido"**

 
- 1** Pulse el botón de alimentación ON/SOURCE y el botón OFF al mismo tiempo.  
• El indicador LEARNED/TX parpadea..






- 2** Pulse el botón ▶ (reproducción).  
• Los botones de modo TV y DBS/CABLE y el indicador LEARNED/TX parpadean.



 - 3** Pulse el botón de modo del equipo (TV o DBS/CABLE) cuyos valores vaya a restablecer.  
• Los botones de modo CD, CDR/MC, TAPE, DVD/VDP y VCR y el indicador LEARNED/TX parpadean.




 - 4** Pulse el botón de modo del equipo cuyos valores vaya a volver a restablecer.  
• Durante la operación de restablecimiento de valores, el botón de modo seleccionado y el indicador LEARNED/TX se iluminarán; regresarán al estado fijo tras finalizar.

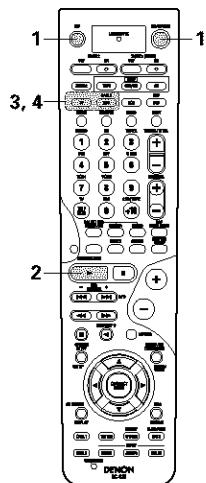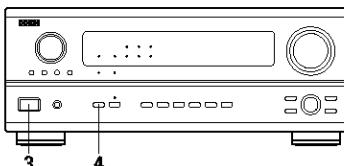**9 FUNCIONAMIENTO****Antes de la puesta en marcha**

- 1** Consulte la sección "CONEXIONES" (páginas 176 a 180) y verifique que todas las conexiones están correctamente hechas.

 - 2** Seleccione "modo AMP" utilizando el botón TAPE, CDR/MC o CD. (sólo cuando se esté accionado el aparato con el mando a distancia)



(Mando a distancia)

- 3** Encienda el aparato.  
Pulse el interruptor (botón) para operar la alimentación POWER.



(Unidad principal) (Mando a distancia)

- ■ ■ ON/STANDBY (ENCENDIDO/EN ESPERA.)


La alimentación se activa y el indicador "ON/STANBY" se ilumina. Transcurren varios segundos desde el momento en que el interruptor se sitúa en la posición de encendido "■ ■ ■ ON/STANDBY" y se produce la salida de sonido. Esto se debe al circuito silenciador que el equipo lleva incorporado y que evita el ruido que se produce cuando el interruptor de alimentación se apaga o enciende.

Sitúe el alimentación POWER en esta posición para activar o desactivar la alimentación eléctrica desde el mando a distancia que se incluye (RC-925).

- ■ ■ OFF (APAGADO)

La alimentación eléctrica se corta y el indicador "ON/STANDBY" se apaga.

En esta posición, la alimentación eléctrica no se puede activar o desactivar desde el mando a distancia que se incluye (RC-925).

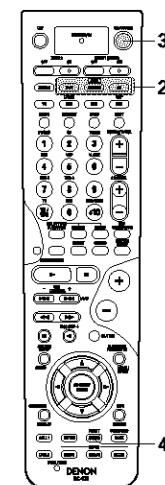


- 4** Los altavoces delanteros cambian como se muestra abajo cada vez que se pulsa el botón FRONT SPEAKER.




(Unidad principal)



 (Mando a distancia)




## Reproducción de la fuente de entrada

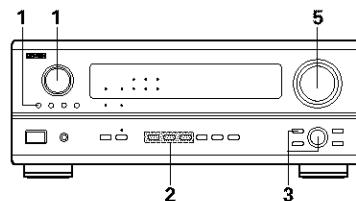

- 1** Seleccione la fuente de entrada que se va a reproducir.

### Ejemplo: CD

 

- \* Para seleccionar la fuente de entrada cuando se selecciona ZONE2/REC OUT o TUNING PRESET, pulsar el botón SOURCE y luego operar el selector de la función de entrada.

 
- 2** Seleccione el modo de entrada.

- Seleccionando el modo analógico. Pulse el botón ANALOG (análogo) para pasar a la entrada analógica.





- Selección del modo de entrada externa (EXT.IN)

Pulsar EXT.IN (o el botón EXT.IN en la unidad de mando a distancia) para activar la salida externa.



- Seleccionando los modos AUTO, PCM y DTS. El modo cambia como se indica más abajo cada vez que se pulsa el botón INPUT MODE (modo de entrada).

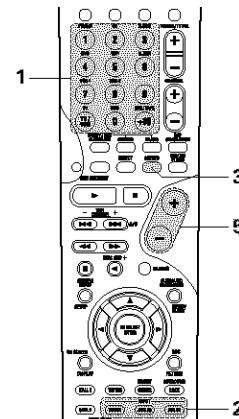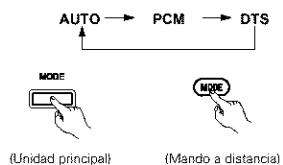

## Funciónde selección del modo de entrada

Se pueden seleccionar distintos modos de entrada para las diferentes fuentes de entrada. Los modos de entrada seleccionados para fuentes de entrada separadas se almacenan en la memoria.

### ① AUTO (modo automático)

En este modo, se detectan los tipos de señales que entran en las tomas de entrada digital y analógica para la fuente de entrada seleccionada y el programa del decodificador surround del AVR-2803 queda automáticamente seleccionado al efectuar la reproducción. Este modo puede seleccionarse para todas las fuentes de entrada que no sean PHONO y TUNER.

Se detecta la presencia o ausencia de señales digitales, se identifica la entrada de señales en las tomas de entrada digital y la descodificación y reproducción se realizan automáticamente en formato DTS, Dolby Digital o PCM (2 canales estéreo). Si no hay entrada de señales digitales, se seleccionan las tomas de entradas analógicas.

Utilice este modo para reproducir señales Dolby Digital.

### ② PCM (modo de reproducción de señales PCM exclusivamente)

La descodificación y la reproducción se efectuan solamente cuando se reciben señales PCM.

Observe que puede generarse ruido al utilizar este modo para reproducir señales distintas a las señales PCM.

### ③ DTS (modo de reproducción de exclusiva señal DTS)

La descodificación y la reproducción se llevan a cabo sólo cuando se introducen las señales DTS.

### ④ ANALOG (modo de reproducción de señales analógicas de audio exclusivamente)

Las señales introducidas a los terminales de entrada analógicos son descodificadas y reproducidas.

### ⑤ EXT. IN (Modo de selección de tomas de entrada de decodificador externo)

Las señales que se reciben en las tomas de entradas de decodificadores externos se reproducen sin pasar por la circuitería surround.

### NOTA:

 
- Adviértase que pueden producirse ruidos cuando CDs o LDs que han sido grabados en formato DTS se reproducen en modo "PCM" (reproducción de señales PCM exclusivamente) o en modo "ANALOG" (reproducción de señales PCM exclusivamente). Seleccionar el modo AUTO y DTS al reproducir en un reproductor de disco láser o Reproductor de CD señales grabadas en DTS.

## Notas sobre la reproducción de una fuente codificada con DTS

- Podría producirse ruido al comienzo de la reproducción y al realizar la búsqueda durante la reproducción y realizar la búsqueda durante la reproducción DTS en el modo AUTO. Si sucediera esto, reproduzca en el modo DTS.

- 3** Seleccione el modo de reproducción

### Ejemplo: Estéreo




- \* Para seleccionar el modo surround mientras que se este ajustando los parámetros surround, volumen del canal o control del tono, pulsar el botón de modo surround y luego operar el selector.

- 4** Inicie la reproducción en el componente seleccionado.

- Consulte las instrucciones de funcionamiento en el manual del componente.

- 5** Ajuste el volumen.

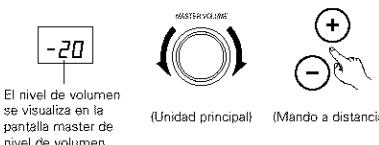

El nivel de volumen se visualiza en la pantalla master de nivel de volumen.

- \* El volumen puede ajustarse dentro del intervalo entre -80 y 0 a 18 dB, en pasos de 0,5 dB. Sin embargo, cuando el nivel de canal se ajusta como se ha descrito en la página 184 o en la página 199 y 200, si el volumen de cualquier canal está ajustado en +1 dB o más, el volumen no puede ajustarse hasta los 18 dB. (En este caso el intervalo máximo de ajuste del volumen es "18 dB — máximo valor del nivel de canal").

## Modo de entrada cuando se reproducen fuentes DTS

- Se producirá ruido si se reproducen CDs o LDs compatibles con DTS en el modo "ANALOG" o "PCM".

 
Cuando se reproducen fuentes compatibles con DTS, cerciórese de conectar el componente fuente a las tomas de entrada digital (OPTICA/COAXIAL) y sitúe el modo de entrada en "DTS".

## Visualización del modo de entrada

Una de estas luces, dependiendo de la señal de entrada.




- En el modo AUTO




- En el modo DIGITAL PCM



 - En el modo DTS DIGITAL



- En el modo ANALÓGICO

 

## Visualización de señales de entrada

### DOLBY DIGITAL



### DTS



### PCM



- \* El indicador DIGITAL se ilumina cuando las señales digitales se reciben correctamente. Si el indicador DIGITAL no se ilumina, compruebe si la configuración (página 185) y las conexiones del componente de entrada digital son correctas y si la alimentación eléctrica del componente está conectada o no.

### NOTA:

- El indicador DIGITAL se iluminará durante la reproducción de CD-ROMs que contienen otro tipo de datos (no señales de audio), pero no se escuchará ningún sonido.

## Reproducir utilizando las tomas de entrada exterior (EXT. IN)

 
- 1** Posicionar el modo de entrada exterior (EXT. IN).  
Pulsar el EXT.IN para encender la entrada externa.





Una vez que este se selecciona, las señales de entrada conectadas a los canales FL (izquierdo delantero), FR (derecho delantero), C (central), SL (izquierdo surround), SR (derecho surround), SBL (izquierdo posterior surround) y SBR (derecho posterior surround) de los terminales EXT. IN salen directamente a los sistemas de altavoces delantero (izquierdo y derecho), centro, surround (izquierdo y derecho) y surround posterior (izquierdo y derecho) así como también los terminales de salida previa sin pasar a través del circuito surround.

Además, la señal de entrada al terminal SW (subwoofer) sale al terminal PRE OUT SUBWOOFER.

- 2** Anulación del modo de entrada exterior  
Para anular el ajuste de entrada exterior (EXT. IN), pulse el botón entrada deseada (AUTO,PCM,DTS) o ANALOG para cambiar al modo de entrada deseada. (Véase la página 195.)



 - Cuando el modo de entrada es la entrada exterior (EXT. IN) el modo de envolventes (DIRECT, STEREO, DOLBY/DTS SURROUND, 5/7CH STEREO, o DSP SIMULATION) no puede ajustarse.

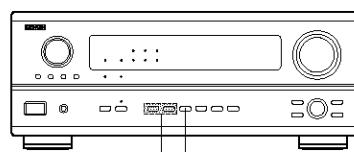

### NOTAS:

- En los modos de reproducción que no sean el modo entrada externa, las señales conectadas a estas tomas no pueden reproducirse. Además, no pueden salir señales de los canales que no estén conectados a las tomas de entrada.
- El modo entrada exterior puede ajustarse para cualquier fuente de entrada. Para ver video al mismo tiempo que se escucha sonido, seleccione la fuente de entrada en la que esté conectada la señal de video y luego ajuste este modo.

## Reproducción de fuentes de audio (CDs y DVDs)

 
El AVR-2803 tiene dos modos de reproducción de 2 canales que son exclusivamente para música. Seleccione el modo que mejor corresponda a sus preferencias.

- 1** **Modo DIRECT**

Use este modo para lograr un sonido de 2 canales de buena calidad mientras reproduce imágenes. En este modo, las señales de audio omiten circuitos tales como el circuito de tonalidad y son transmitidas directamente, lo que se traduce en un sonido de buena calidad.



(Mando a distancia)



- 2** **Modo STEREO**

Use este modo para ajustar la tonalidad y lograr el sonido deseado mientras reproduce imágenes.



(Mando a distancia)

## Después de iniciar la reproducción


### [1] Ajuste de la calidad del sonido (TONE)

- La función de control del tono no funciona en el modo directo.
- El ajuste de control de tono sólo afecta a los altavoces delanteros.
- Si se utiliza la función de control de tono, el volumen principal no se puede ajustar hasta 18 dB. (El máximo nivel del volumen principal es distinto en los diferentes modos surround.)


- 1** El tono se activa de la siguiente forma cada vez que se pulsa el botón TONE CONTROL.



(Unidad principal)

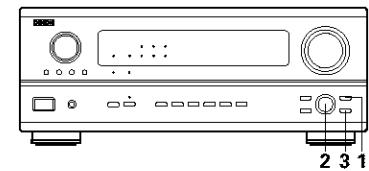

 - 2** Una vez seleccionado el canal del volumen que se desea ajustar, girar el botón SELECT para ajustar el nivel.



(Unidad principal)

- Para aumentar los graves o los agudos gire el mando hacia la derecha. (Los tonos graves o agudos pueden aumentarse hasta +10 dB en pasos de 2 dB.)
- Para bajar los tonos graves o agudos gire el mando hacia la izquierda. (Los sonidos graves o agudos pueden bajarse hasta los -10 dB en pasos de 2 dB.)

- 3** Si no quiere ajustar los sonidos graves o agudos, active el modo "defeat tone" (silenciador de tono).



- Las señales no pasan por los circuitos de ajuste de graves o agudos, proporcionando un sonido de mayor calidad.

**[2] Escucha con los auriculares**

 
- 1** Enchufe la clavija de los auriculares en la toma.  
※ HONES.  
La salida pre-out (incluyendo la salida de altavoces) se desactiva automáticamente cuando se conectan los auriculares.

**NOTA:**



Para evitar pérdida de audición, no suba el volumen excesivamente cuando use los auriculares.

**[3] Quitar el sonido momentáneamente (MUTING)**

- 1** Utilice esta facilidad para desactivar la salida de audio momentáneamente.  
Pulse el botón MUTING (silenciador)  
※ Anulación del modo MUTING.  
Pulse nuevamente el botón MUTING o ajuste el nivel de volumen principal.

**[4] Combinación del sonido que se está reproduciendo con la imagen que se quiere**

 - 1** Transmisión simultánea de imagen y sonido  
Utilice este interruptor para controlar fuentes de video que no sean fuente de audio.  
Pulse el botón selector de vídeo (VIDEO SELECT), gire la perilla de función (FUNCTION) hasta que aparezca en la pantalla la fuente que desea.

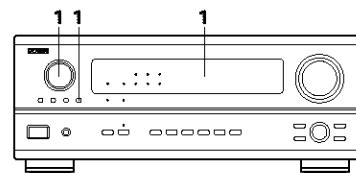

Pantalla  
**IN/EU SOURCE**

- ※ Cancelación de transmisión simultánea.  
• Seleccione fuente "SOURCE" utilizando el botón selector de vídeo (VIDEO SELECT) y la perilla de función (FUNCTION).  
• Conecte la fuente de programas al componente conectado a la entrada de video.

**[5] Comprobación de la fuente de programas que se está reproduciendo, etc.**

- 1** Visualización en pantalla  
• Cada vez que se efectúa una operación, aparece una descripción de la operación en la pantalla conectada a la toma VIDEO MONITOR OUT del equipo.



(Mando a distancia)

También se puede comprobar la situación en que está funcionando el equipo durante la reproducción, pulsando el botón ON SCREEN DISPLAY del mando a distancia de este equipo.


Aparecen sucesivamente datos sobre la posición del selector de entrada y los ajustes del parámetro surround (de sonido envolvente).

- Visualización en el panel frontal  
• Las descripciones de las operaciones realizadas en el equipo también se visualizan en el panel frontal de visualización.



(Unidad principal)

Además, pulsando el botón STATUS se puede cambiar el dato visualizado para comprobar en qué situación está funcionando el equipo mientras se reproduce una fuente.

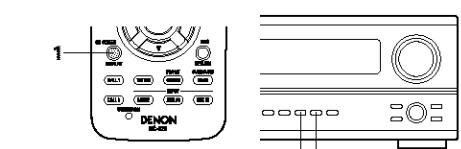

Utilización de la función del regulador de intensidad de luz

- Utilice esta función para cambiar la intensidad de luz de la pantalla.

La intensidad de brillo de la pantalla cambia en cuatro pasos (brillante, medio, débil y apagado), pulsando repetidamente el botón DIMMER (reductor de intensidad de luz) del mando a distancia del equipo.



(Unidad principal)


**Reproducción y grabación de varias fuentes****[1] Reproducir una fuente mientras se graba otra fuente (modo REC OUT)**

 - 1** Pulsar el botón ZONE2/REC.




(Unidad principal)

- 2** Al mismo tiempo que se visualiza "REC OUT SOURCE" girar el botón FUNCTION para seleccionar el generador que se desea grabar.  
• El indicador "REC" y el indicador de la luz del generador seleccionado.




(Unidad principal)

- 3** Ajuste del modo de grabación.  
• Para instrucciones de uso, hacer referencia al manual del componente en el que se desea realizar la grabación.

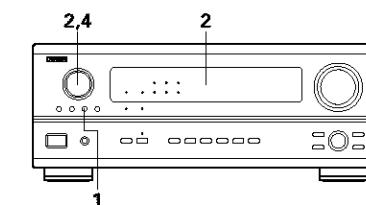

Pantalla  
**RECOUT SOURCE**

 - 4** Para cancelar, gire la perilla de función y seleccione "SOURCE".  
• Si se selecciona "SOURCE", el indicador "REC" se desactiva.



(Unidad principal)

**NOTAS:**

- Las fuentes de grabación diferentes a las entradas digitales seleccionadas en el modo de salida de grabación (REC OUT) son emitidas también en los terminales de salida previa de la zona 2.


- Las señales digitales no salen del REC SOURCE o conectores de salida audio.

**[2] Envío de una fuente de programas a un amplificador, etc., situado en una sala diferente (modo ZONE2)**

1 Pulsar el botón ZONE2.



(Unidad principal)

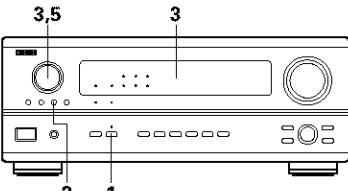


2 Pulsar el botón ZONE2/REC.



(Unidad principal)

3 Al mismo tiempo que se visualiza "ZONE2 SOURCE" girar el botón FUNCTION y seleccionar el generador que se desee producir.

 - El indicador "MULTI" y el indicador de la luz del generador seleccionado.



(Unidad principal)



**NOTAS:**

 
- Las señales de la fuente seleccionada en el modo ZONE2 salen también de los terminales de salida de grabación VCR-1, VCR-2 y CDR/TAPE.
- Las señales digitales no son salidas procedentes de las tomas de salida de audio de fuentes ZONE2.

4 Comience a reproducir la fuente que va a ser enviada fuera.

- Consulte en los manuales de los componentes respectivos las instrucciones de funcionamiento.

5 Para cancelar, gire la perilla de función y seleccione "SOURCE".

- Si se selecciona "SOURCE", el indicador "MULTI" se desactiva.



(Unidad principal)

**[3] Uso de la unidad de control remoto durante la reproducción del MULTI-SOURCE (selección de generador salida)**

Esta operación es posible cuando se selecciona el modo ZONE2.

 
Esta operación no es posible en el modo REC OUT.

1 Seleccione "ZONE2" utilizando el botón ZONE 2.



(Mando a distancia)

2 Pulse el botón de activación de la zona 2 (ZONE2 "ON").




(Mando a distancia)

3 Pulse el botón de fuente de entrada.

- La fuente de la zona 2 (ZONE2) cambia directamente.

 4 El nivel de salida de los terminales de salida de la zona 2 (ZONE2 OUT) se puede controlar utilizando los botones de volumen (VOLUME) + y - en el mando a distancia.




(Mando a distancia)


El nivel de salida de la salida de la zona 2 (ZONE2 OUT) se puede controlar solo si el nivel de volumen de la zona 2 (ZONE2 vol) se ajusta a variable "Variable" en el control de la zona 2 (Zone2 Control) el menú de configuración del sistema. (Consulte la página 186)

\* Ajuste por defecto (ZONE2 VOLUME LEVEL):---dB (MINIMUM)

 5 Cuando la función de fuente de la zona 2 (ZONE2 SOURCE) se ajusta a sintonizador (TUNER), se puede seleccionar el canal preajustado utilizando los botones de canal (CHANNEL) + y - en el mando a distancia.



(Mando a distancia)

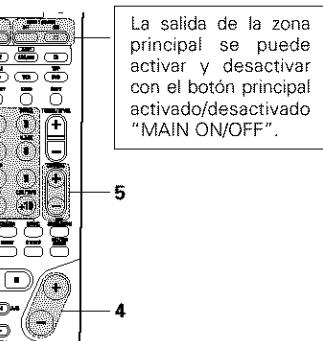

La salida de la zona principal se puede activar y desactivar con el botón principal activado/desactivado "MAIN ON/OFF".

## Reproducción de múltiples zonas con fuentes múltiples


### SISTEMA DE ENTRETENIMIENTO MÚSICA MULTI ZONE

- Cuando las salidas de los terminales de salida de la zona 2 ("ZONE2" OUT) están conectado a amplificadores integrados instalados en otras habitaciones, se pueden reproducir fuentes diferentes en habitaciones que no estén en la zona principal en la cual esta unidad y los dispositivos de reproducción están instalados. (Remítase a la zona 2 (ZONE2) en el diagrama de abajo).
- Se puede utilizar la salida del altavoz de la zona 2 (ZONE 2 SPEAKER OUT) cuando se ha seleccionado la zona 2 "ZONE 2" en asignación el amplificador de potencia "Power Amp Assignment" del menú de configuración del sistema. En este caso, no se puede utilizar para la zona principal (MAIN ZONE) la salida de altavoz trasera de sonido envolvente (Surround Back Speaker OUT). (Consulte la página 186).

#### NOTAS:

- Para la salida AUDIO, utilizar los cordones de alta calidad pin-plug y conectarlo de tal forma que no se produzcan zumbidos o ruidos.
- Para instrucciones sobre la instalación y funcionamiento de los dispositivos vendidos por separado, remítase a las instrucciones de funcionamiento de los dispositivos.

### SISTEMA DE ENTRETENIMIENTO MÚSICA MULTI ZONE (Al utilizar PREOUT)

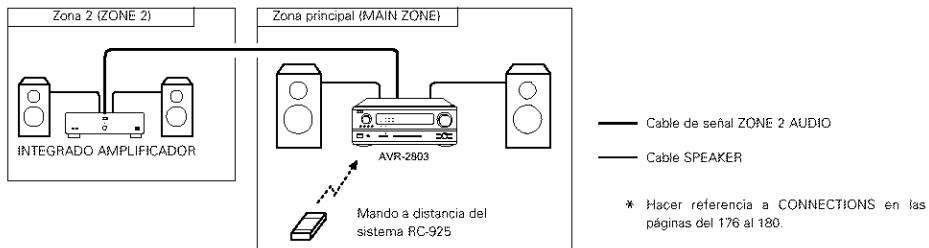

### MULTI ZONE MUSIC ENTERTAINMENT SYSTEM (When using SPEAKER OUT)




## 10 SURROUND

### Antes de poner en marcha la función surround

- Antes de poner en marcha la función surround, utilice los tonos de prueba para ajustar el nivel de reproducción de los distintos altavoces. Este ajuste puede hacerse con la configuración del sistema (véase la página 184) o con el mando a distancia, como se describe a continuación.
- El ajuste con la unidad de control remoto utilizando los tonos de prueba es posible sólo en el modo "Auto" y efectivo sólo en los modos DOLBY/DTS SURROUND. Los niveles ajustados para los distintos modos se almacenan automáticamente en la memoria.

1 Pulse el botón TEST TONE (tono de prueba).  
(Mando a distancia)

2 En los distintos altavoces se producen los tonos de prueba. Utilice los botones de ajuste del volumen de los canales para hacer los ajustes precisos de modo que el volumen de los tonos de prueba sea el mismo para todos los altavoces.  
(Mando a distancia)

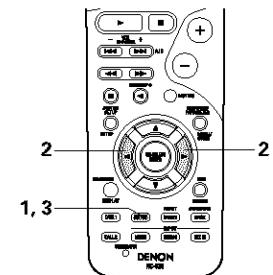


3 Despues de hacer estos ajustes, pulse de nuevo el botón TEST TONE.  
(Mando a distancia)


- Despues de hacer los ajustes mediante los tonos de prueba, ajuste los niveles de los canales, bien según las fuentes de reproducción o de acuerdo con sus gustos, como se indica a continuación.

1 Seleccione el altavoz cuyo nivel quiera ajustar.  
(Mando a distancia)

 Cada vez que se pulsa el botón el canal cambia como se indica más abajo.



2 Ajuste el nivel del altavoz seleccionado.

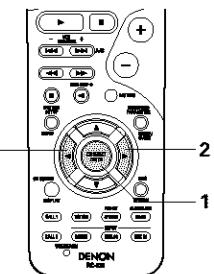


#### NOTAS:

- El margen de ajuste de los diferentes canales es de +12 dB a -12 dB.
- El sonido del subwoofer se puede detener al disminuir el ajuste SW (subwoofer) una fase desde -12 dB (desactivándolo "OFF").


\* Si la configuración del altavoz posterior surround se ajusta a "1spkr" para "Speaker Configuration" esta se ajusta a "SB".

## Función disminución de volumen


 
- Esta función permite reducir el volumen de los canales frontales (FL, C y FR) o de los canales traseros (SL, SR, SBL y SBR) juntos. Utilice esta función para, por ejemplo, ajustar el balance del sonido procedente de las distintas posiciones cuando reproduzca fuentes musicales multicanal.



 Cada vez que se pulse el botón el canal cambia en el orden indicado a continuación.



- 2** Pulse el botón **◀** para reducir el volumen de los canales frontales, y el botón **▶** para reducir el volumen de los canales traseros.

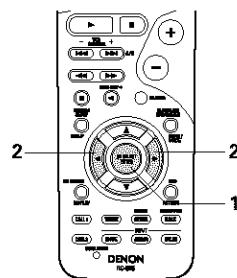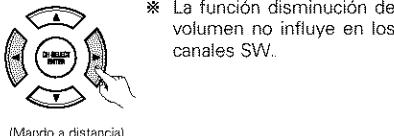


Fader	FRONT <--> REAR
	FL 0.0dB
	FR 0.0dB
	SR 0.0dB
	SBR 0.0dB
	SBL 0.0dB
	SL 0.0dB



Esta pantalla se visualiza solamente cuando se ajusta el control de disminución de volumen (fader).

- El canal cuyo volumen se haya ajustado en el valor más bajo puede disminuirse hasta -12 dB mediante la función disminución de volumen.
- Si los niveles de los canales se ajustan separadamente después de ajustar la función disminución de volumen, los valores del ajuste de esta función se borran, por lo que deberá ajustar de nuevo la función de disminución de volumen.

## Modo Dolby Surround Pro Logic II

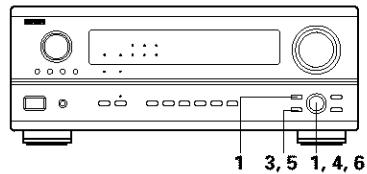


- 1** Seleccione el modo Dolby Surround Pro Logic II.  
 • El indicador Dolby Pro Logic se ilumina.

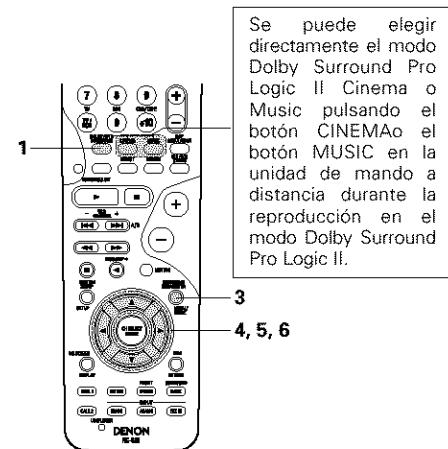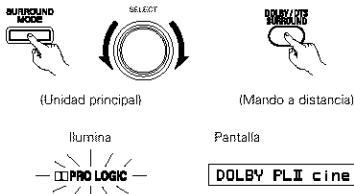



- 2** Reproducir una fuente de programa con la marca **DOLBY SURROUND**.  
 • Para instrucciones de uso, consulte los manuales de los componentes respectivos.

- 3** Ajuste el modo de parámetros de sonido envolvente.

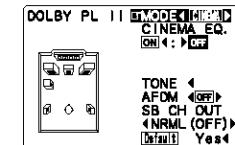



Esta es la pantalla cuando se opera con el mando a distancia.

- 4** Seleccione el modo de reproducción.

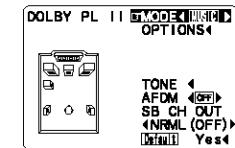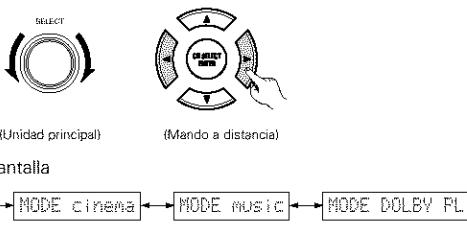


Esta es la pantalla cuando se opera con el mando a distancia.

- 5** Seleccione varios parámetros. (Vea "Surround parameters ①" para obtener una descripción de los variados parámetros).

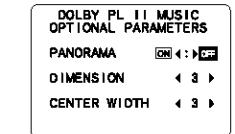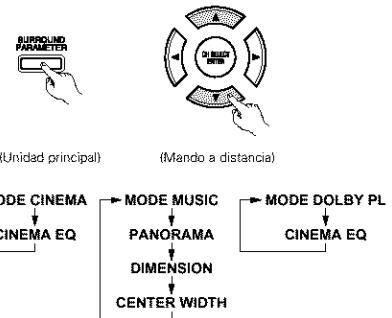

- \* Cuando ajuste la visualización en pantalla utilizando la unidad de mando a distancia mientras esté en el modo MUSIC, ajuste la marca "■" en "OPTION ▲" utilizando los botones de cursor ▲ y ▼, al pulsar el botón de cursor ▲.
- Pulse el botón ENTER para regresar a la pantalla anterior.

- 6** Ajuste los diversos parámetros de sonido envolvente.

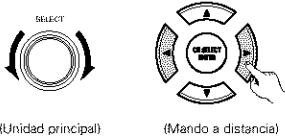

- 7** Cuando se ajusten los parámetros de sonido envolvente utilizando los botones en la unidad principal, no opere los botones hasta que se hayan completado los ajustes. Los ajustes finalizan automáticamente y la visualización normal se restablece después de algunos segundos.

Cuando los ajustes se realizan utilizando los botones en la unidad de mando a distancia, pulse el botón SURROUND PARAMETER para finalizar.







## Simulación surround DSP


 
- Cómo operar el modo surround y los parámetros surround desde la unidad de control remoto.

**1** Seleccione el modo surround para el canal de entrada.



(Mando a distancia)

El modo surround cambia en el orden siguiente cada vez que se pulsa el botón DSP SIMULATION:

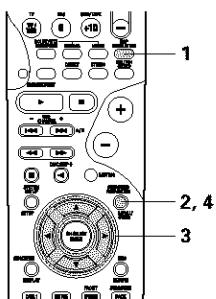


**2** Visualice la pantalla de parámetros surround en el monitor.


- \* Aparece la pantalla del modo surround que se ha seleccionado.



(Mando a distancia)

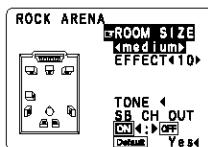

**3** Ajuste los parámetros.

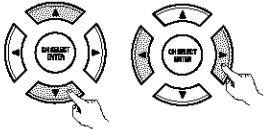

(Mando a distancia)

 
**4** Para finalizar el modo ajuste, pulse de nuevo el botón de parámetros surround.




(Mando a distancia)

- Cómo operar el modo surround y los parámetros surround desde el panel de la unidad principal.


**1** Girar el botón SELECT para seleccionar el modo surround.




(Unidad principal)

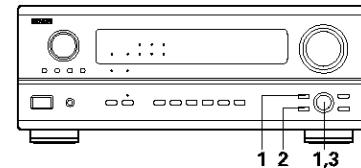

 - Cuando se gira en el sentido de las agujas del reloj



 - Cuando se gira en el sentido contrario al de las agujas del reloj



\* Para seleccionar el modo surround mientras que se está realizando el ajuste de los parámetros surround o control del tono, pulsar el botón del modo surround y luego operar el selector.



(Unidad principal)

**2**



(Unidad principal)

Pulsar el botón SURROUND PARAMETER

Pulsar y mantener pulsado el botón del parámetro surround para seleccionar el parámetro que deseé ajustar.

- Los parámetros que pueden ser ajustados difieren según los diferentes modos surround. (Remítase a "Modos surround y parámetros" ("Modos y parámetros surround") en la página 206.)

**3**

Visualizar el parámetro que se deseé ajustar, a continuación girar el botón SELECT para ajustarlo.

### NOTA:

- Al reproducir señales digitales PCM o señales analógicas en los modos surround DOLBY PRO LOGIC II, DTS NEO:6 la señal de entrada cambia a señal digital codificada en Dolby Digital, el modo surround Dolby cambia automáticamente. Cuando la señal de entrada cambia a señal DTS, el modo automáticamente cambia a surround DTS.

### NOTAS:


- Cuando se selecciona "Default" y se pulsa el cursor , "CINEMA EQ." Y "D.COMP." se desconectan automáticamente, "ROOM SIZE" se ajusta a "medium", "EFFECT LEVEL" a "10", "DELAY TIME" a "30 ms" y "LFE" a "0 dB".
- El parámetro "ROOM SIZE" expresa el efecto expansivo de los distintos modos surround en términos de tamaño del campo sonoro, no del tamaño real de la sala de audición.

## Ajuste del control de tonos



- Use el ajuste control de tonos para ajustar los sonidos graves y agudos según su deseo.
- Para operar el control del tono desde el mando a distancia.
- El ajuste de control de tono sólo afecta a los altavoces delanteros.
- Si se utiliza la función de control de tono, el volumen principal no se puede ajustar hasta 18 dB. (El máximo nivel del volumen principal es distinto en los diferentes modos surround.)



Visualice en la pantalla del monitor el parámetro surround.  
\* Apague la pantalla del modo surround que se ha seleccionado.  
No se puede seleccionar "TONE" en el modo Direct.

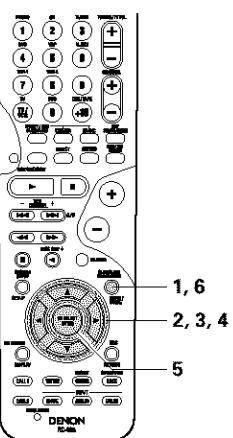


**2** Seleccione "TONE".

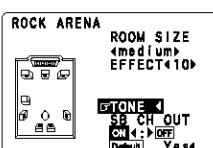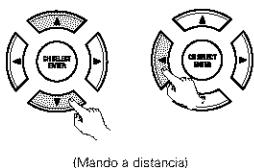

**3**

Cambie a la pantalla de control de tono.  
Seleccione el tono de cancelación activado "OFF".

(Mando a distancia)

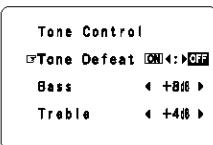

**4** Para seleccionar Bass o Treble.



Para ajustar el nivel.



**5** Introduzca el ajuste.  
Reaparece la pantalla de menú surround.

 

 


**6** Para finalizar el modo ajuste, pulse de nuevo el botón de parámetros surround.



- Para operar el control del tono desde la unidad principal.

**1** El tono se activa de la siguiente forma cada vez que se pulsa el botón TONE CONTROL.

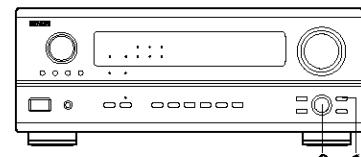

Una vez seleccionado el canal del volumen que se desea ajustar, girar el botón SELECT para ajustar el nivel.  
• Para aumentar los graves o los agudos gire el mando hacia la derecha :  
(Los tonos graves o agudos pueden aumentarse hasta +10 dB en pasos de 2 dB.)  
• Para bajar los tonos graves o agudos gire el mando hacia la izquierda :  
(Los sonidos graves o agudos pueden bajarse hasta los -10 dB en pasos de 2 dB.)

### Parámetros surround ③

#### MODE: (DTS NEO:6)

##### • Cine:

Este modo es óptimo para reproducir películas. La descodificación se lleva a cabo con énfasis en la realización de separación para alcanzar la misma atmósfera tanto con fuentes de 2 canales como con fuentes de 6,1 canales.

Este modo es eficaz para reproducir fuentes grabadas en formatos surround convencionales tan bien, porque el componente dentro de la fase es asignado principalmente al canal central (C) y el componente de la fase revertida al surround (SL, SR y canales SB).

##### • Música

Este modo es conveniente principalmente para reproducir música. Las señales del canal delantero (FL y FR) evitan el decodificador y son reproducidas directamente por esto no hay perdida de la calidad de sonido, y el efecto de las señales surround que salen de los canales central (C) y surround (SL, SR y SB) agregan una sensación natural de expansión al campo del sonido.

##### ROOM SIZE:

Aquí se ajusta el tamaño del campo sonoro.

Hay cinco ajustes: "small" (pequeño), "med.s" (medio-pequeño), "medium" (medio) "med.l" (medio-grande) y "large" (grande). El ajuste "small" recrea un campo sonoro pequeño y "large" un campo sonoro grande.

##### EFFECT LEVEL:

Aquí se ajusta la fuerza del efecto surround (sonidos graves)

El nivel puede ajustarse en 15 pasos, de 1 a 15. Reduzca el nivel si el sonido parece distorsionado.

##### DELAY TIME:

En el modo matrix solamente, el tiempo de demora puede ajustarse en un intervalo de 0 a 300 ms.

##### TONE CONTROL:

Esto se puede ajustar individualmente por los separados modos surround distintos al Direct.

Sin embargo, los mismo contenidos son ajustados para los modos DOLBY/DTS.




## 12 RECEPCIÓN DE RADIO

- Verifique que la unidad de mando a distancia esté ajustada en el modo AMP (TAPE, CDR/MD o CD).

### Sintonización automática


- 1** Ajuste la función de entrada a "TUNER".

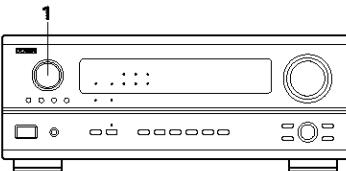

- 2** Observando el visualizador, presione el botón BAND para seleccionar la banda deseada (AM o FM).  
(Mando a distancia)

- 3** Presione el botón MODE para ajustar el modo de sintonización automática.  
(Mando a distancia)  
"Auto" aparece en el visualizador.

- 4** Presione el botón TUNING arriba o abajo.  
(Mando a distancia)  
Comienza la búsqueda automática, luego se detiene cuando una estación está sintonizada.

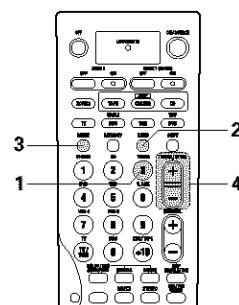

Si la sintonización no se detiene en la emisora deseada, utilizar el "sintonización manual".

### Sintonización manual

- 1** Ajuste la función de entrada a "TUNER".



Presione el botón TUNING arriba o abajo para sintonizar la estación deseada. La frecuencia cambia continuamente cuando el botón se mantiene pulsado.

- 2** Observando el visualizador, presione el botón BAND para seleccionar la banda deseada (AM o FM).  
(Mando a distancia)

- 3** Presione el botón MODE para ajustar el modo de sintonización manual. Verifique que el indicador "AUTÓ" esté apagado.  
(Mando a distancia)

#### NOTAS:

- En el modo de sintonización automática en la banda de FM, el indicador "STEREO" se enciende en el visualizador cuando una emisión estereofónica es sintonizada. En frecuencias abiertas, el ruido es silenciado y los indicadores "TUNED" y "STEREO" se apagan.
- Cuando se ajusta el modo de sintonización manual, las emisiones estereofónicas de FM se reciben en modo monoauricular y el indicador "STEREO" se apaga.

### Memoria de preajuste

- 1** Use la función "Auto Tuning" (sintonización automática) o "Manual Tuning" (sintonización manual) para sintonizar la estación ajustada en la memoria.


- 2** Presione el botón MEMORY.  
(Mando a distancia)

- 3** Presione el botón SHIFT y seleccione el bloque de memoria deseado (A a E).  
(Mando a distancia)

- 4** Presione el botón CHANNEL + (UP) o - (DOWN) para seleccionar el canal de preajuste deseado (1 a 8).  
(Mando a distancia)

- 5** Presione el botón MEMORY nuevamente para almacenar la estación en la memoria de preajuste.  
(Mando a distancia)


Para grabar otros canales, repita los pasos 2 a 5. Se pueden memorizar un total de 40 estaciones, 8 estaciones (canales 1 a 8) en cada bloque A a E.

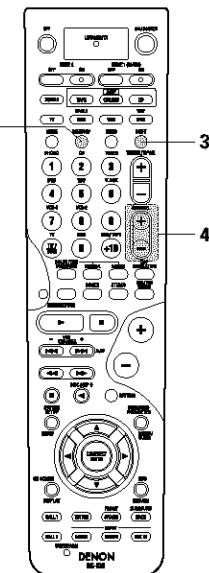

### Comprobación de las emisoras pre-ajustadas

- Las estaciones (emisoras) preajustadas se pueden verificar en la pantalla de visualización (OSD).

 - 1** Pulse repetidamente el botón en-pantalla/visualización (ON SCREEN/DISPLAY) hasta que aparezca la pantalla de estaciones preajustadas del sintonizador "Tuner Preset Stations".



Tuner Preset Stations
A1F 87. 5MHz
A2F 89. 0MHz
A3F 93. 1MHz
A4F 95. 0MHz
A5F 90. 1MHz
A6F 90. 1MHz
A7F 90. 1MHz
A8F 90. 1MHz



OSD-3

## Sintonización de estaciones memorizadas

- Para llamar las estaciones preajustadas desde la unidad de mando a distancia.




Observando el visualizador, presione el botón SHIFT para seleccionar el bloque de memoria preajustada.

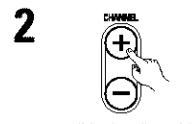
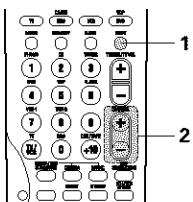


Observando el visualizador, presione el botón CHANNEL + o - para seleccionar el canal de presintonización deseado.

- Cómo llamar a las emisoras pre-ajustadas desde el panel de la unidad principal.

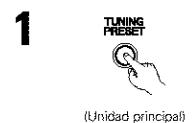

Pulsar el botón TUNING PRESET.

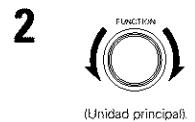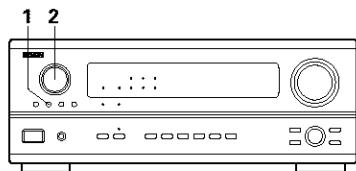

Girar el botón FUNCTION y seleccionar la emisora deseada.

## RDS (Sistema de información radial)

RDS (sólo funciona en la banda de FM) es un servicio de transmisión que permite a la estación enviar información adicional junto con las señales del programa radial normal.  
Se puede recibir los tres tipos de información RDS siguientes en esta unidad:

### Tipo de programa (PTY)

PTY identifica el tipo de programa RDS.

Los tipos de programa y su visualización son los siguientes:

NEWS	Noticias	ROCK M	Música rock	PHONE IN	Participación telefónica
AFFAIRS	Aegocios	EASY M	Música ligera	TRAVEL	Viajes
INFO	Información	LIGHT M	Clásico liviano	LEISURE	Ocio
SPORT	Deportes	CLASSICS	Clásico serio	JAZZ	Música de Jazz
EDUCATE	Educación	OTHER M	Otra música	COUNTRY	Música Country
DRAMA	Drama	WEATHER	Tiempo	NATION M	Música nacional
CULTURE	Cultura	FINANCE	Finanzas	OLDIES	Clásicos
SCIENCE	Ciencia	CHILDREN	Programas para niños	FOLK M	Música folk
VARIETY	Varios	SOCIAL	Asuntos sociales	DOCUMENT	Documentales
POP M	Música pop	RELIGION	Religión		

### ■ Programas de tráfico (TP)

TP identifica los programas que dan anuncios del tráfico.  
Esto le permite informarse rápidamente de las últimas condiciones del tráfico en su área antes que parte de su casa.

 
### ■ Texto de radio (RT)

RT permite a las estaciones RDS enviar mensajes de texto que aparecen en el visualizador.


**NOTA:** Las operaciones que se describen abajo usando los botones RDS, PTY y RT no pueden efectuarse en áreas donde no haya emisiones RDS.

## Búsqueda RDS

Use esta función para sintonizar automáticamente las estaciones de FM que proporcionan servicio RDS.





Ajuste la función de entrada a "TUNER".

 


Presione el botón RDS hasta que aparezca "RDS SEARCH" en el visualizador.

- La pantalla de la unidad principal cambia de la siguiente manera cada vez que se pulsan los botones RDS.

 Pantalla

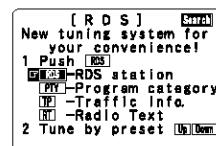

 
Esta es la pantalla que aparece durante el funcionamiento.




Presione el botón CHANNEL + o - para comenzar automáticamente la operación de búsqueda RDS.

Si no se encuentra ninguna estación RDS con la operación anterior, la búsqueda se realiza en todas las bandas receptoras.

- Cuando se encuentra una estación, el nombre de esa estación aparece en el visualizador.

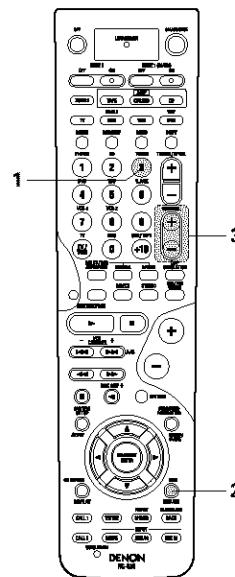

- Para continuar la búsqueda, repita el paso 3.  
Si no se encuentran otras estaciones RDS en todas las frecuencias en que se realizó la búsqueda, se enciende "NO RDS".

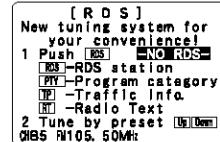

Esta es la pantalla que aparece durante el funcionamiento.

## Búsqueda PTY


 
Use esta función para buscar las estaciones RDS que transmitan un tipo de programa designado (PTY). Para una descripción de cada tipo de programa, ver "Tipo de programa (PTY)".

- 1**  Ajuste la función de entrada a "TUNER".  
(Mando a distancia)

- 2**  Presione el botón RDS hasta que aparezca "PTY SEARCH" en el visualizador.  
(Mando a distancia)

\* La pantalla de la unidad principal cambia de la siguiente manera cada vez que se pulsan los botones RDS.

Pantalla

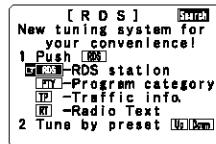

Esta es la pantalla que aparece durante el funcionamiento.


- 3**  Observando la pantalla, pulse los botones de cursor **◀** y **▶** para llamar el tipo de programa deseado.  
(Mando a distancia).



Esta es la pantalla que aparece durante el funcionamiento.

- 4**  Pulsar el botón CHANNEL + o - para que la operación de búsqueda PTY comience automáticamente.  
(Mando a distancia)

Si no se encuentra ninguna estación que transmita el tipo de programa con la operación anterior, la búsqueda se realiza en todas las bandas receptoras.

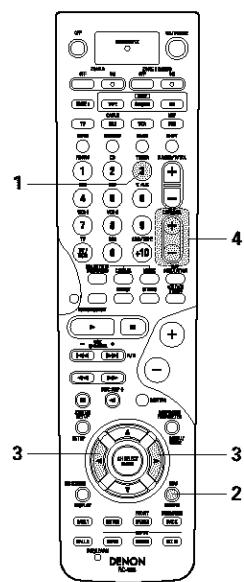

## Búsqueda TP

 
Utilice esta función para encontrar estaciones RDS que emitan programas de tráfico (estaciones TP).

- 1**  Ajuste la función de entrada a "TUNER".  
(Mando a distancia)

- 2**  Presione el botón RDS hasta que aparezca "TP SEARCH" en el visualizador.  
(Mando a distancia)

\* La pantalla de la unidad principal cambia de la siguiente manera cada vez que se pulsan los botones RDS.

Pantalla




Esta es la pantalla que aparece durante el funcionamiento.

- 3**  Pulsar el botón CHANNEL + o - para que la búsqueda TP comience.


Si no se encuentra ninguna estación TP con esta operación, la búsqueda se realiza en todas las bandas receptoras.

- 4** El nombre de la estación es exhibido en el visualizador una vez que la búsqueda termina.

- 5** Para continuar la búsqueda, repita el paso 3. Si no se encuentra ninguna estación TP cuando se ha realizado la búsqueda en todas las frecuencias, la indicación "NO PROGRAMME" es exhibida.

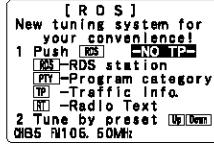


Esta es la pantalla que aparece durante el funcionamiento.

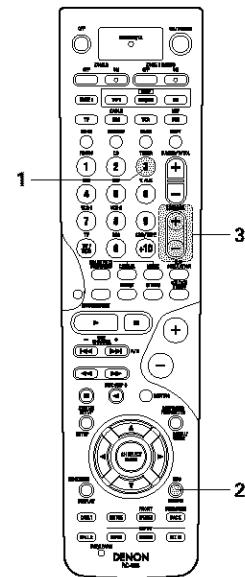


## RT (Texto de radio)

"RT" aparece en el visualizador cuando se reciben datos de texto de radio.

Cuando se pulsa el botón RDS hasta que aparece en la pantalla "RT" mientras se reciben emisoras RDS, se visualiza la emisión de datos de texto de la estación. Para apagar la pantalla, utilice los botones de cursor **◀** y **▶** en el mando a distancia. Si no se emiten datos de texto, se visualizará que no hay datos de texto "NO TEXT DATA".

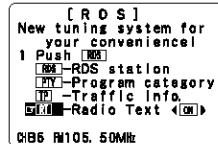

Esta es la pantalla que aparece durante el funcionamiento.

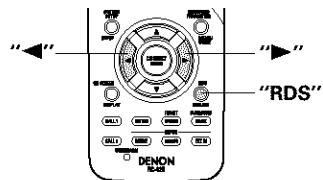

## 13 MEMORIA DE LA ÚLTIMA FUNCIÓN

- Este equipo está equipado con una memoria de la última función ejecutada, que almacena las condiciones de ajuste de entradas y salidas tal como eran inmediatamente antes de que la alimentación eléctrica se cortara. Esta función elimina la necesidad de realizar reajustes complicados cuando la alimentación eléctrica se activa.
- Este equipo también está equipado con una memoria de "seguridad". Esta función posibilita el almacenaje de datos en la memoria durante una semana aproximadamente cuando la unidad principal se apaga y se desconecta el cable de alimentación.

## 14 INICIARIZACIÓN DEL MICROPROCESADOR

Cuando lo que se indica en la pantalla no es normal o cuando el aparato no funciona como es razonable que lo haga, es necesario inicializar el microprocesador, siguiendo el procedimiento que se indica a continuación.


- Desconecte la unidad utilizando el interruptor de la alimentación de la unidad principal.
- Mantenga pulsados los botones FRONT SPEAKER y ZONE 2, y conecte el interruptor de operación de la alimentación de la unidad principal.
- Compruebe que toda la pantalla destella a intervalos de 1 segundo y deje de pulsar los 2 botones, el microprocesador se inicializará.

### NOTAS:

- Si el paso 3 no funciona, comience de nuevo desde el paso 1.
- Si el microprocesador se ha reajustado, todos los ajustes de los botones quedan reajustados a los valores por defecto (los valores que se establecieron en fábrica).

**Active la alimentación de la unidad principal en el modo de espera sin utilizar la unidad de mando a distancia**

- Pulse el interruptor POWER en la unidad principal mientras pulsa el botón SOURCE en el panel de la unidad principal para activar la alimentación.

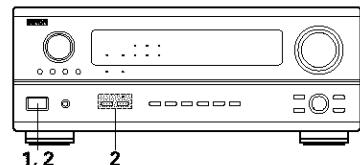

## 15 RESOLUCIÓN DE PROBLEMAS

Si se produce algún problema, siga primero los pasos siguientes.

- ¿Las conexiones están correctamente hechas?
- ¿Ha utilizado el receptor de acuerdo con las instrucciones de funcionamiento?
- ¿Funcionan correctamente los altavoces, el giradiscos y los otros aparatos o componentes?

Si este aparato no funciona correctamente, compruebe los elementos que figuran en la tabla siguiente. Si persistiera el problema, puede producirse un funcionamiento erróneo. Desconecte la alimentación eléctrica inmediatamente y póngase en contacto con su proveedor.

	Síntoma	Causa	Medidas a tomar	Página
Problemas normales que surgen al escuchar CDs, discos, cintas y transmisiones de FM, etc.	La pantalla no se enciende y no hay sonido cuando se enciende el aparato.	<ul style="list-style-type: none"> <li>El cable de alimentación no está bien enchufado.</li> </ul>	<ul style="list-style-type: none"> <li>Compruebe la colocación del cable de alimentación.</li> <li>Encienda el aparato con el mando a distancia después de haber encendido el interruptor POWER.</li> </ul>	176 194
	La pantalla se enciende, pero no hay sonido.	<ul style="list-style-type: none"> <li>Los cables de los altavoces no están bien conectados.</li> <li>Los botones de la función de audio no están en la posición correcta.</li> <li>El control de volumen está en el mínimo.</li> <li>La función MUTING está activada.</li> <li>Las señales digitales no introducen la entrada digital seleccionada.</li> </ul>	<ul style="list-style-type: none"> <li>Haga bien las conexiones.</li> <li>Póngalo en la posición correcta.</li> <li>Suba el volumen al nivel adecuado.</li> <li>Desconecte la función MUTING.</li> <li>Introduzca señales digitales o seleccione las tomas de entrada en las que están entrando señales digitales.</li> </ul>	180 195 195 197 195
Cuando se reproduce una grabación	La pantalla no se enciende y el indicador de alimentación destella con rapidez.	<ul style="list-style-type: none"> <li>Los terminales de los altavoces están cortocircuitados.</li> <li>Están bloqueadas las aberturas de ventilación del aparato.</li> <li>El aparato está funcionando en condiciones continuas de alta potencia y/o con ventilación inadecuada.</li> </ul>	<ul style="list-style-type: none"> <li>Apague el aparato, conecte bien los altavoces y luego encienda el aparato.</li> <li>Apague el aparato y ventilelo para que se enfrie.</li> <li> Cuando se haya enfriado, vuelva a encenderlo.</li> <li>Apague el aparato y ventilelo para que se enfrie.</li> <li> Cuando esté frío, enciéndalo de nuevo.</li> </ul>	180 175, 179
	El sonido procede de un canal solamente.	<ul style="list-style-type: none"> <li>La conexión de los cables de los altavoces no está completamente realizada.</li> <li>La conexión de los cables de entrada/salida no está terminada.</li> </ul>	<ul style="list-style-type: none"> <li>Haga bien las conexiones.</li> <li>Haga bien las conexiones.</li> </ul>	180 176~180
Problemas normales que surgen al reproducir CDs, discos, cintas y transmisiones de FM.	Las posiciones de los instrumentos se invierten durante la reproducción en estéreo.	• Existe una inversión en las conexiones de derecha e izquierda de los altavoces y de derecha e izquierda de los cables de salida y entrada.	• Compruebe las conexiones izquierda y derecha.	180
	No se produce visualización en la pantalla.	<ul style="list-style-type: none"> <li>En la pantalla de menú de configuración del sistema la leyenda "On screen display" está apagada.</li> </ul>	<ul style="list-style-type: none"> <li>Encienda la pantalla de menú de configuración del sistema para visualizar "on screen display".</li> </ul>	187
Cuando se reproduce una grabación	No aparece la pantalla de configuración del sistema.	<ul style="list-style-type: none"> <li>Está utilizando auriculares.</li> <li>Se ha fijado el modo Mute.</li> <li>El monitor de TV no está conectado al AVR-2803.</li> </ul>	<ul style="list-style-type: none"> <li>Desconecte los auriculares de la clavija de auriculares.</li> <li>Cancelle el modo Mute.</li> <li>Conecte un monitor de TV.</li> </ul>	197 197 177, 178
	Cuando se reproduce una grabación se produce un ruido de zumbido.	<ul style="list-style-type: none"> <li>El cable de toma de tierra del plato giradiscos no está bien conectado.</li> <li>Las conexiones de la toma PHONO no están bien hechas.</li> <li>En las proximidades hay una antena de transmisión de radio o TV.</li> </ul>	<ul style="list-style-type: none"> <li>Haga bien las conexiones.</li> <li>Haga bien las conexiones.</li> <li>Póngase en contacto con su proveedor.</li> </ul>	176 176 —
El sonido está distorsionado.	Se produce un gran ruido cuando el volumen está alto.	<ul style="list-style-type: none"> <li>Los sistemas de altavoces y de plato giradiscos están demasiado juntos.</li> <li>El suelo es inestable y vibra con facilidad.</li> </ul>	<ul style="list-style-type: none"> <li>Separélos lo más posible.</li> <li>Utilice cojines para absorber las vibraciones de los altavoces que se transmiten por el suelo. Si el plato giradiscos no tiene aisladores, utilice aisladores de radio (que se encuentran fácilmente).</li> </ul>	— —
	El volumen es débil.	<ul style="list-style-type: none"> <li>La presión de la aguja es demasiado débil.</li> <li>La aguja tiene polvo o está sucia.</li> <li>El cartucho es defectuoso.</li> <li>Se está usando un cartucho MC.</li> </ul>	<ul style="list-style-type: none"> <li>Aplique la presión correcta en la aguja.</li> <li>Compruebe la aguja.</li> <li>Sustituya el cartucho.</li> <li>Sustitúyalo por un cartucho MM o utilice un preamplificador o un transformador de incremento.</li> </ul>	— — — 176

	Síntoma	Causa	Medidas a tomar	Página
Mando a distancia	Este aparato no funciona bien cuando se utiliza el mando a distancia.	<ul style="list-style-type: none"> <li>Las pilas están agotadas.</li> <li>El mando a distancia está demasiado lejos del aparato.</li> <li>Existen obstáculos entre este aparato y el mando a distancia.</li> <li>Se está pulsando un botón distinto.</li> <li>Los polos + y - de las pilas están colocados en posición invertida.</li> </ul>	<ul style="list-style-type: none"> <li>Ponga baterías nuevas.</li> <li>Póngalo más cerca.</li> <li>Retire los obstáculos.</li> <li>Pulse el botón correcto.</li> <li>Ponga las pilas en la posición correcta.</li> </ul>	189 189 189 — 189

## 16 INFORMACIÓN ADICIONAL

### Sonido surround óptimo para distintas fuentes

En la actualidad hay varios tipos de señales multicanal (señales o formatos con más de dos canales).

#### ■ Tipos de señales multicanal


Señales Dolby Digital, Dolby Pro Logic, DTS, de alta definición 3-1 (Audio Hi-Vision MUSE de Japón) DVD-Audio, SACD (Super audio CD), MPEG, audio multicanal, etc.

Con la palabra "fuente" no se indica aquí el tipo de señal (formato) sino el contenido grabado. Las fuentes pueden dividirse en dos categorías principales.

#### Tipos de fuentes


- Movie audio** Son señales creadas para reproducirse en cines. En general, el sonido se graba para su reproducción en salas de cine equipadas con varios altavoces surround, con independencia del formato (Dolby Digital, DTS, etc.).

Campo sonoro tipo sala de cine

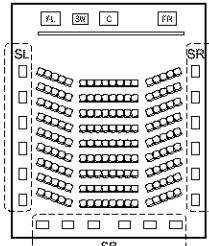


Altavoces surround múltiples  
(Para sistema de- 6,1 canales)

Campo sonoro de sala de audición

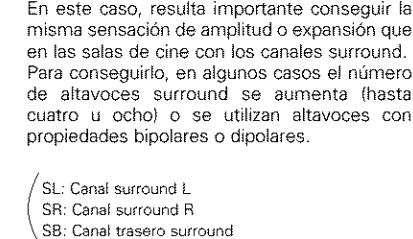

#### • Otros tipos de audio

Estas señales están diseñadas para recrear un campo sonoro de 360°, utilizando entre tres y cinco altavoces.

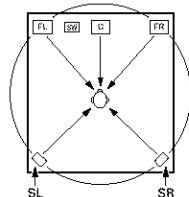


En este caso, los altavoces deben rodear al oyente desde todos los puntos para crear un campo sonoro uniforme en 360°. De forma ideal, los altavoces surround deben funcionar como fuentes de sonido "point" en la misma manera que los altavoces frontales.

Estos dos tipos de fuentes tienen distintas propiedades, y son necesarios ajustes diferentes de los altavoces, especialmente de los altavoces surround, para conseguir el sonido ideal.

### Altavoces traseros surround


Un sistema de 6,1 canales es un sistema convencional de 5,1 canales al cual ha sido agregado el canal "surround posterior" (SB). Esto facilita lograr sonido colocado directamente detrás del oyente, algo que era antes difícil con fuentes diseñadas para altavoces multi surround convencionales. Además, la imagen acústica extendiéndose entre los lados y la parte de atrás se estrecha, mejorando así la expresión de las señales surround para sonidos que se mueven desde los lados hacia atrás y desde delante hacia el punto directamente detrás de la posición de escucha.

Cambio del posicionamiento e imagen acústica con sistemas de canal 5,1

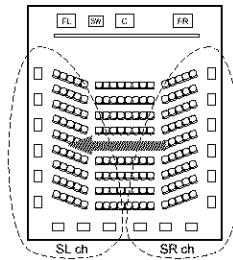

Movimiento de imagen acústica desde SR a SL

Cambio del posicionamiento e imagen acústica con sistemas de canal 6,1

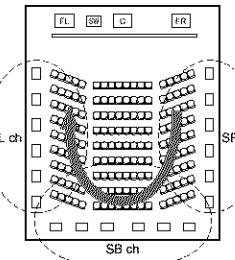

Movimiento de imagen acústica desde SR a SB a SL

Con este conjunto, se requiere de altavoces para 1 o 2 canales para conseguir un sistema de 6,1 canales (DTS-ES, etc.). Agregando estos altavoces, sin embargo, el efecto surround se incrementa no solo con fuentes grabadas en 6,1 canales sino también con fuentes convencionales de 2 a 5,1 canales. El modo WIDE SCREEN es un modo para alcanzar sonido surround con hasta canales 7,1 utilizando altavoces traseros surround, para fuentes grabadas en Dolby Surround convencional así como Dolby Digital canal 5,1 y fuentes DTS Surround canal 5,1. Aún más, todos los modos de Denon original surround (vea página 203) son compatibles con la reproducción de canal 7,1, de tal forma que puede usted disfrutar del sonido del canal 7,1 con cualquier fuente de señal.

#### ■ Número de altavoces traseros surround

Aunque el canal surround posterior solo está formado por 1 canal de señales de reproducción para fuentes de 6,1 canales (DTS-ES, etc.), recomendamos utilizar dos altavoces. Cuando utilice altavoces con características dipolares, es esencial que utilice dos altavoces. Utilizando dos altavoces se consigue una combinación más suave con el sonido de los canales surround y mejor posicionamiento del sonido del canal trasero surround al escuchar desde una posición distinta a la del centro.

#### ■ Colocación de los canales izquierdo y derecho al utilizar altavoces traseros surround

La utilización de altavoces traseros surround mejora notablemente el posicionamiento del sonido en la parte trasera. Debido a esto, los canales izquierdo y derecho surround juegan un papel importante en conseguir una transición suave de la imagen acústica desde delante hacia atrás. Como se muestra en el diagrama de arriba, en un cine las señales surround se producen también diagonalmente delante de los oyentes, creando una imagen acústica como si el sonido estuviera flotando en el espacio.

Para alcanzar estos efectos, recomendamos colocar los altavoces para los canales surround izquierdo y derecho ligeramente más hacia el frente que con un sistema surround convencional. Al hacer esto algunas veces incrementa el efecto surround cuando se reproducen fuentes convencionales de 5,1 canales en el modo surround 6,1 o en el modo Matriz 6,1 DTS-ES. Verifique los efectos surround de modos varios antes de seleccionar el modo surround.


## Ejemplos de ajustes de altavoces

Aquí describimos una serie de ajustes de altavoces para distintos objetivos. Use estos ejemplos como guía para configurar su propio sistema de acuerdo con el tipo de altavoces que se están utilizando y su finalidad principal.


### 1. Sistema compatible DTS-ES (utilizando altavoces surround posteriores)

#### (1) Ajustes básicos para ver películas

Esto se recomienda principalmente al reproducir películas y al utilizar altavoces regulares de un camino o 2 caminos para los altavoces surround.

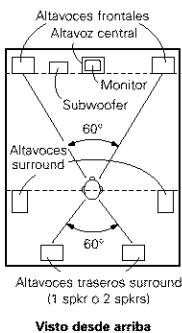

- Coloque los altavoces frontales con las caras frontales lo más alineadas posible con la pantalla del monitor de TV. Coloque el altavoz central entre los altavoces frontal izquierdo y frontal derecho y no más alejado de la posición de escucha que los altavoces frontales.
- Consulte en el manual de instrucciones del subwoofer las recomendaciones para colocar el subwoofer en la sala de audición.
- Si los altavoces surround son de radiación directa (monopolar), sitúelos ligeramente detrás y en ángulo con respecto a la posición de escucha y en posición paralela a las paredes, a unos 60 a 90 centímetros por encima de la altura del oído, con el oyente en la posición de escucha habitual.
- Al utilizar dos altavoces traseros surround, colóquelos en la parte de atrás de cara hacia adelante a una distancia menor que los altavoces izquierdo y derecho. Al utilizar un altavoz trasero surround, colóquelo en la parte central posterior de cara hacia adelante a una posición ligeramente más elevada (0 a 20 cm) que los altavoces surround.
- Recomendamos instalar el(s) altavoz(es) a un ángulo ligeramente inclinado hacia abajo. Esto evita efectivamente que las señales del canal trasero surround se reflejen en el monitor o pantalla en el centro frontal, dando como resultado una interferencia y haciendo que el sentido del movimiento desde delante hacia atrás sea menos agudo.

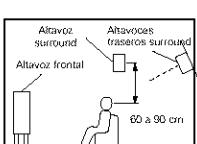

Visto desde el lateral

### 2. Al no utilizar altavoces traseros surround

- Ajuste los altavoces delanteros con sus superficies frontales tan parejo con el TV o la pantalla monitor como sea posible. Ajuste el altavoz central entre los altavoces delanteros izquierdo y derecho y no más lejos de la posición de escucha que de los altavoces delanteros.
- Consulte el manual del usuario de su subwoofer en busca de consejo sobre la colocación del subwoofer en la habitación de escucha.
- Si los altavoces surround radian directamente (monopolar) colóquelos ligeramente detrás y a un ángulo de la posición de escucha y paralelo a las paredes a una posición de entre 60 a 90 centímetros por encima del nivel de las orejas de la posición de escucha principal.



Visto desde el lateral

## Sonido envolvente (surround)

El AVR-2803 está equipado con un circuito de procesado de señales digitales que permite programar fuentes en el modo surround para obtener la misma sensación que si estuviera en una sala de cine.

### Dolby Surround

#### (1) Dolby Digital

Dolby Digital es el formato de señales digitales multicanal desarrollado por los Laboratorios Dolby. El formato Dolby Digital consta de hasta 5,1 canales: frontal izquierdo, frontal derecho, central, surround izquierdo, surround derecho y un canal adicional reservado exclusivamente para añadir efectos de sonidos graves profundos (el canal de efectos de baja frecuencia, LFE, también denominado canal ".1", que contiene frecuencias bajas de hasta 120 Hz).

A diferencia del formato analógico Dolby Pro Logic, los canales principales de Dolby Digital pueden contener todas una gama completa de información de sonido, desde los graves más bajos hasta las frecuencias más altas, -22 kHz. Las señales de cada canal son distintas unas de otras, lo que permite modelar un sonido preciso, y Dolby Digital ofrece una tremenda gama dinámica que va desde los efectos sonoros más potentes a los más tranquilos y suaves, sin ruidos ni distorsiones.


## Formato Dolby Digital y Dolby Pro Logic

Formato Dolby Digital y Dolby Pro Logic	Dolby Digital	Dolby Digital Pro Logic
Número de canales grabados (elementos)	5,1 canales	2 canales
Número de canales de reproducción.	5,1 canales.	4 canales
Canales de reproducción (máx.)	L, R, C, SL, SR, SW	L, R, C, S, (recomendado el SW).
Procesado de audio.	Codificación/descodificación Dolby Digital de procesado digital discreto.	Sistema Dolby Surround de procesado de matriz analógica.
Límite de reproducción de alta frecuencia del canal surround.	20 kHz	7 kHz

### (2) Ajustes para ver películas utilizando altavoces tipo difusión como altavoces surround

Para lograr la mayor sensación de sonido envolvente, con los altavoces de radiación difusa, como son los de tipo bipolar o dipolar (THX) se consigue una dispersión más amplia que la que puede obtenerse con altavoces de radiación directa (monopolar). Coloque estos altavoces a ambos lados de la posición de escucha, montándolos por encima de la altura del oído.


#### Camino que sigue el sonido envolvente desde los altavoces a la posición de escucha

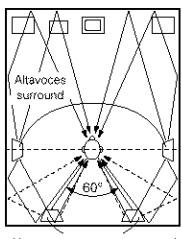

Visto desde arriba

- Coloque los altavoces frontales, el central y los subwoofer en las mismas posiciones que se indican en el ejemplo (1).
- Lo mejor es colocar los altavoces surround directamente a un lado o ligeramente hacia delante de la posición de visión, y de 60 a 90 cm por encima de las orejas.
- Igual que el método de instalación de altavoz trasero surround (1) Es también más efectivo utilizar altavoces dipolares para los altavoces traseros surround.
- Conecte los altavoces surround a las tomas de altavoces surround.
- Las señales procedentes de los canales surround se reflejan en las paredes, como aparece en la ilustración de la izquierda, y crean una atmósfera de sonido envolvente realista.

 Si embargo, para fuentes de música multicanal, la utilización de altavoces bipolares o dipolares montados a los lados de la posición de escucha, puede no resultar satisfactoria para crear un campo sonoro envolvente de 360 grados. Conecte otro par de altavoces de radiación directa, como se indica en el ejemplo (3) y sitúelos en los rincones de la parte de atrás de la habitación, de frente a la posición de escucha.



Visto desde el lateral











**DENON,Ltd.**

16-11, YUSHIMA 3-CHOME, BUNKYOU-KU, TOKYO 113-0034, JAPAN  
Telephone: (03) 3837-5321

Printed in Japan 511 4023 004