



Your Television's Directions for Use

44PL9523

55PL9523

Highlights

- **Liquid-crystal-on-silicon (LCOS) High-definition Imaging**
- **High-resolution Display—1280 x 720 pixels**

Features

- Digital Natural Motion™
- Digital Crystal Clear™
- Active Control™—analyzes and adjusts incoming signal
- Two-tuner, Double-window PIP (Picture-in-Picture)
- Dolby® Virtual Surround, 40-watt RMS
- 3D Y/C Comb Filter
- HD Component and DVI Input
- Center Channel Audio Input
- Side AV Convenience Jacks
- Matching stand and swivel available



Refer to the **Quick Use and Setup Guide** (supplied with your TV) for information on basic connections, remote control button descriptions, on-screen menu language, and Autoprogram.

PHILIPS

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Congratulations on your purchase, and welcome to the "family!"

PHILIPS



Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come. As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly, you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome—and thanks for investing in a PHILIPS product.

Sincerely,

Lawrence J. Blanford
President and Chief Executive Officer

P.S. Remember, to get the most from your PHILIPS product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!

Know these safety symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.


CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

PHILIPS Visit our World Wide Web Site at <http://www.philips.com>

IMPORTANT SAFETY INSTRUCTIONS


Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org
16. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
17. **Tilt/Stability** - All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinet design.
 - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet which could ultimately overturn the product.
 - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
18. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
19. **Power Lines** - An outdoor antenna should be located away from power lines.
20. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.

Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure below.
21. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

Note to the CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Example of Antenna Grounding as per NEC - National Electric Code

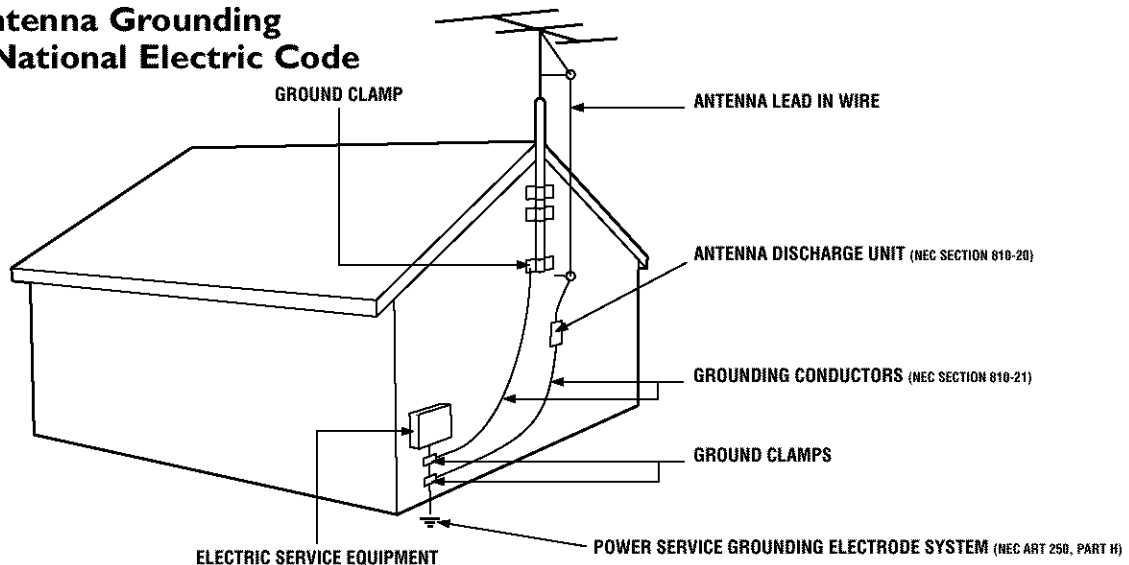

Contents

INTRODUCTION


Welcome/Registration of Your TV	2
Safety/Precautions	2-3
Features	5



CONNECTING ACCESSORY DEVICES TO YOUR TV


Information about TV Signals	6
Descriptions of Jacks, Cables, and Connectors	7
Panel Jack Compatibility Information	8
Pre-connection Recommendations	9
Connecting a VCR	10
Connecting a VCR and Cable Box	11
Connecting an S-Video Device	12
Connecting a Standard DVD Player	13
Connecting a Progressive-scan DVD Player	14
Connecting an HD Satellite Receiver to YPbPr	15
Connecting an HD Satellite Receiver to DVI	16
Connecting Surround Sound Equipment	17
Connecting to the Side Inputs: Video Game System	18
Labeling the Audio/Video Input Sources	19

USING THE REMOTE CONTROL


Programming the Remote Control	20-21
 Setup Codes for Accessory Devices	22-23
Using the TV Remote's VCR-specific Buttons	24
Using Active Control™ Plus	25
Using the Zoom Control	26

USING THE ON-SCREEN MENUS

PICTURE


Adjusting/Setting the Picture Controls	27
 Selecting a Digital Processing Option	28
Selecting a Dynamic Contrast Option	29
Selecting a DNR (Dynamic Noise Reduction) Option	30
Turning on Color Enhancement	31
Selecting an AutoPicture™ Option	32
Selecting a Picture Format Option	33-34

SOUND


Adjusting the TV and Headphone Volume	35
 Selecting a TV Equalizer Option	36
Adjusting TV Speaker Balance	37
Turning Loudness on or off	38
Selecting a Sound Mode Option	39
Using Alternate Audio (SAP)	40

Setting the TV for Stereo Programming	41
Turning the AVL (Audio Volume Leveler) on or off	42
Adjusting the Delta Volume	43
Selecting an AutoSound™ Option	44


FEATURES

Using Closed Captioning	45
 Setting the Sleep timer	46
Setting the On Timer	47


CHANNELS

Using the Channel List	48
 Removing Channels from the Channel List	49
Using Lock Channel	50
Using Lock After	51
Blocking Programming Based on TV Ratings	52
Blocking Programming Based on Movie Ratings	53
Turning the Antenna Attenuator on or off	54

GENERAL

Turning the Menu Background on or off	55
 Using Surf	56
Using Dual Screen and PIP	57
Changing Channels or Input Sources in Dual Screen/PIP	58
Selecting a Picture Freeze Option	59
Resetting the Audio/Video Settings to Factory Default Values	60
Selecting an On-screen Display Option	61
Selecting a Time Zone and Setting the Daylight Savings Control	62
Setting up or Changing a PIN (Personal Identification Number)	63
Setting the Subwoofer Control	64

ADDITIONAL INFORMATION

Cleaning the TV	65
 Cleaning or Replacing the Filters	66-67
Replacing the Lamp	68-69
Resetting the Lamp's Lifetime Counter	70
Troubleshooting	71-72
Product Specifications	73
Index	74
Factory Service Locations	75-76
Limited Warranty	78

Features

Compact design with low weight

The unique Philips single-panel liquid-crystal-on-silicon (LCOS) technology allows for a large screen TV with a very low depth and low weight. This TV will find a place in any living room without occupying a large area, and it can be easily handled by two persons.

Philips Single-panel, LCOS Imaging System

The Philips single-panel LCOS technology produces unmatched high-resolution and flicker-free video with superb brightness. This technology enables a large-screen-size TV with low weight and shallow depth without any concerns for convergence or image retention.

Digital Natural Motion™

Digital Natural Motion™ offers razor-sharp reproduction of movement and motion. Its unique and highly advanced processing calculates motion trajectories of moving picture elements. It corrects jerky movement from both studio programs or movie material.

Digital CrystalClear™

Digital CrystalClear™—with Dynamic Contrast, comb filter, 9-bit processing, luminance enhancements, and color enhancements—offers a crisp and natural picture from any type or quality of source. The comb filter supports the picture demands of DVD players and other advanced high-resolution video sources.

Active Control™ Plus+

Active Control™ Plus+ automatically analyzes the incoming signals from the Tuner, AV1, AV2, and Side video inputs 50 times per second and adjusts key picture settings. In addition to measuring picture noise, this feature uses an ambient light sensor to adjust the picture settings according to viewing conditions in the room.

Dolby® Virtual Surround

Dolby processing circuitry provides an enhanced cinema surround sound effect without the need for rear speakers.

Double-window, Two-Tuner PIP

Your TV features double-window, two-tuner PIP with second tuner double window. The TV also has single PIP (free positioning), as well as threefold and sixfold side PIPs. In addition, you get photo finish, freeze Main, and freeze PIP. Replay lets you play back the previous few seconds in a PIP screen—if you missed the action, replay it as much as you want.

Audio/Video (A/V) Jack Panel

The A/V jack panel allows direct connections with VCRs, DVDs, high-definition receivers, or other devices, providing quality TV picture and sound playback.

Audio Volume Leveler (AVL) Control

AVL keeps the TV sound at an even level. Peaks and valleys that occur at commercial breaks or during program changes are reduced, providing a more consistent, comfortable sound.

V-Chip (with Channel Lock)

The V-Chip feature (with Channel Lock) will allow you to block the viewing of channels or programs with certain ratings, and thus prevent your children from watching inappropriate materials.

Autoprogramming

The TV's Autoprogram feature scans (when activated) for all available channels from regular antenna or cable signals and stores active broadcast stations in the TV's memory.

Surf Button

Philips Auto Surf™ allows you to easily switch between only the channels that are of interest to you. Surf allows two-channel surfing or nine-channel surfing.

Items Included with This TV

As you unpack your TV, please note the included items:

- *Quick Use and Setup Guide* to help you set up your new TV.
- *Directions for Use* manual—contains information on safety, set maintenance, Factory Service Center locations, and product warranty
- Warranty Registration Card
- Remote Control (with supplied batteries).

Please take a few minutes to complete your registration card. The serial number for the TV is on the rear of the set. For your future reference, please write down the serial and model number of this television in the space provided on the warranty page at the back of this manual. (In the unlikely event you should need to place a service call, these numbers will be needed.)

End-of-Life Disposal

Your new television and its packing contain materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and minimize the amounts that need to be properly disposed of. Your product also uses batteries that should not be thrown away when depleted, but should be handed in and disposed of as small chemical waste.

When you replace your existing equipment, please find out about the local regulations regarding disposal of your old television, batteries, and packing materials.



As an Energy Star® Partner, Philips Consumer Electronics has determined this product meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark. Using products with the Energy Star® label can save energy. Saving energy reduces air pollution and lowers utility bills.


*Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Active Control, AutoPicture, AutoSound, AutoSurf, Cineos, Digital Crystal Clear, Digital Natural Motion, and Pixel Plus are trademarks of Philips Consumer Electronics. Copyright 2003 Philips Consumer Electronics. All rights reserved.




Information about TV Signals


Over the Air

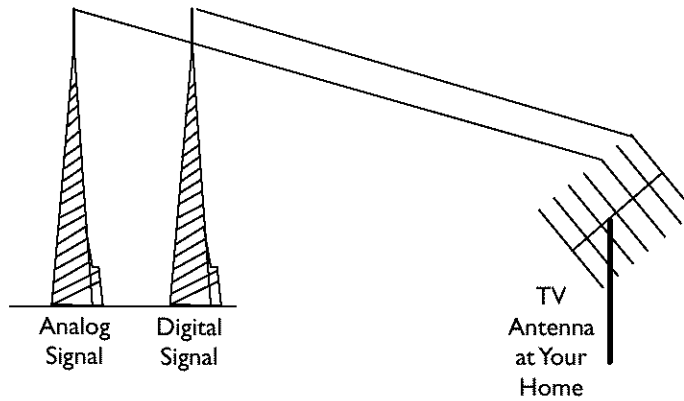


Satellite

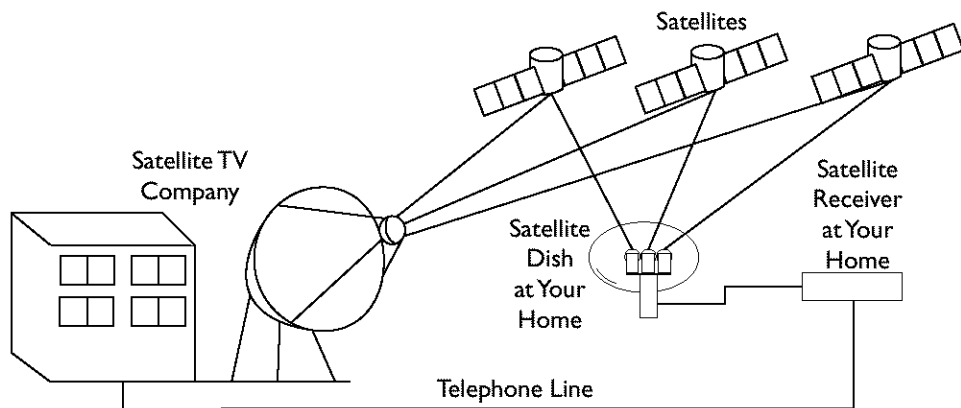

Cable

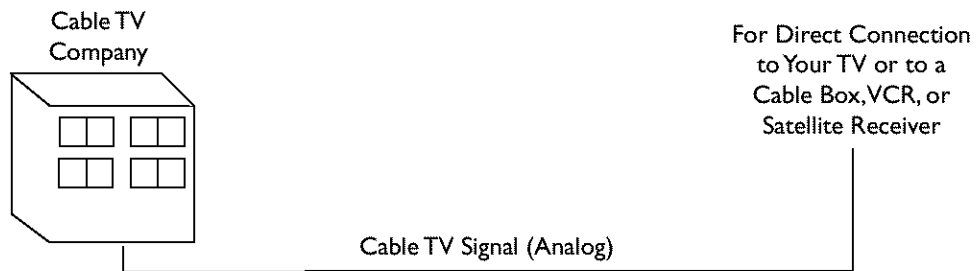

Your High-definition-ready Set

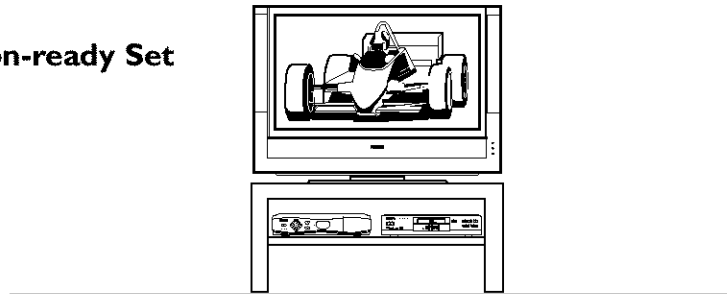

High-definition television offers a picture with unprecedented crispness and clarity. The TV broadcast industry is moving toward high definition as the signal standard. Currently, the number of programs being broadcast in high definition is limited, but this is changing. To view high-definition programs on your TV, you will need to connect a satellite receiver, cable box, or set-top box that can decode HD signals.




This page contains descriptions and illustrations of jacks, cables, and connectors you might use in making connections. The cables and connectors are not supplied with your TV, but you can purchase at your electronics dealer. Or you can order them by calling our Customer Care Center at 1-800-531-0039.

DVI-D Input Connector

Cable used: DVI-D

This jack works only with DVI TMDS (Transition Minimized Differential Signaling) digital video. Allows encrypted transmissions of uncompressed digital content. The DVI-D jack used in this product is not for computer connections.

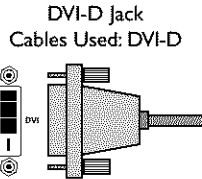


Component Video Input Jacks

Cables used: component video with RCA-type phono plugs

Allow you to connect accessory devices such as DVD players. Separating the video into three signals, these inputs provide excellent quality. Be sure to connect the left and right audio cables, because the Y, Pb, Pr jacks receive only the picture signal.

NOTE: See the "Helpful Hint" on page 13 for more information.

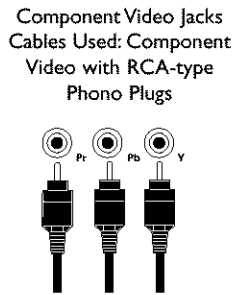

S-Video Input Jacks

Cable used: S-Video


Provide a higher quality picture than the Video (composite) jacks because the color part of the picture is separated from the black and white portion. Be sure to connect the left and right audio cables, because the S-Video jacks receive only the picture signal.



RGB+HV Input Connector

Cable used: HD DB15

Allows you to connect equipment with RGB.

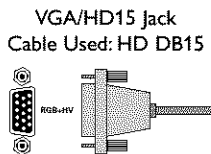


Video (called "CVBS" or "composite") Input Jack

Cable used: Video with RCA-type phono plugs


Provide better picture performance than the antenna RF input. Be sure to connect the audio cables, because the video jacks receive only the picture signal.

Your TV also has a monitor output ("MON OUT") video ("V") jack. Use a video cable with RCA-type phono plug to make connections.

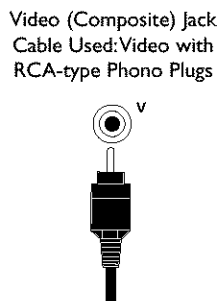


Tuner (RF) Input Jack

Cables used: RF coaxial cable (75Ω)
Allows you to connect an antenna, cable TV, or components having RF outputs to the antenna input on the TV. RF coaxial cables are available in push-on or screw-on type.

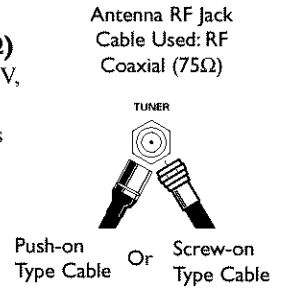


Signal Splitter

Allows you to route an antenna or cable TV signal to two inputs.

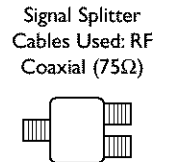

300- to 75-ohm Twin-lead Adapter

Accepts twin-lead wires from an antenna and allows connection to the antenna input on the TV. If your antenna is already equipped with an RF coaxial cable you will not need this adapter.

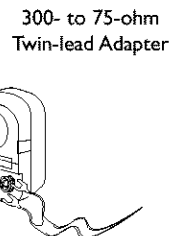


Audio Input Jacks

Cables used: Audio with RCA-type phono plugs

Provide sound for the video inputs. If your accessory device has only one output for audio, connect it to the left (color coded white) audio jack on the TV.

Your TV also has monitor output ("MON OUT") audio ("L" and "R") jacks and a subwoofer output jack. Use Audio cables with RCA-type phono plugs to make connections.

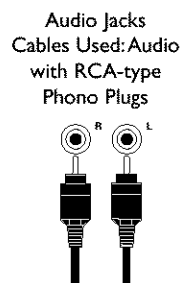


3.5mm Stereo Mini Phone Plug to RCA Jack Adapter

Allows a connection between the 3.5mm stereo audio out jack on a computer and the left and right audio inputs on the television. Connect A/V cables with RCA-type phono plugs to the adapter, then to the TV.



Center Channel Amp Speaker Terminals (+ and -)

Allow a connection from a surround sound receiver. Set the EXT/INT switch to EXT to use the TV speakers as the center speakers in a surround sound arrangement.

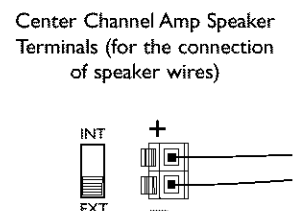



Panel Jack Compatibility Information

1 AV 1 Input Jacks
Signals accepted: NTSC (480i).
Inputs available: YPbPr, S-Video (Y/C), and CVBS, plus audio left and right.
Use only one of the video signal inputs at a time. If you should forget and have more than one type of signal connected, the set will automatically show the one of better quality: CVBS—good, S-Video—better, and YPbPr—best. For sound, connections must be made to the AV1 audio inputs.

2 MON OUT Output Jacks
 Provide video and audio output signals from all TV when those sources are being viewed on the main screen. Output from the audio L/R jacks is at a fixed volume level; changing the TV volume does not affect them. Adjust the volume at your external home cinema system.

3 AV 2 Input Jacks
Signals accepted: NTSC (480i).
Inputs available: S-Video (Y/C) and CVBS, plus audio left and right.
Use only one of the video signal inputs at a time. If you should forget and have both types of signal connected, the set will automatically show the S-Video, since it is of better quality than CVBS. For sound, connections must be made to the AV2 audio inputs.

4 SUB OUT Output Jack
 Provides a signal to an external powered subwoofer.


5 AV3 Input Jacks
Signals accepted: NTSC (480i), 480p, 720p, and 1080i, plus audio left and right.
Inputs available: YPbPr, plus audio. For sound, connections must be made to the AV3 audio inputs.

6 AV4 Input Jacks
Signals accepted: NTSC (480i), 480p, 720p, and 1080i, plus audio left and right.
Inputs available: YPbPr, plus audio. For sound, connections must be made to the AV4 audio inputs.

7 TUNER Input Jack
Signals accepted: RF modulated NTSC.
Inputs available: 75Ω RF coaxial.

8 AV5 Input Connector
Signals accepted: NTSC (480i), 480p, 720p, 1080i, plus audio left and right.
Inputs available: RGB+HV. For sound, connections must be made to the AV5 audio inputs.

9 AV6 Input Connector
Signals accepted: Digital only (TMDS [Transition Minimized Differential Signaling] encoded, uncompressed); DVI 480i, 480p, 720p, and 1080i, plus audio left and right.
Inputs available: DVI TMDS, plus audio. For sound, connections must be made to the AV6 audio inputs.
Intended use of the input: digital set-top boxes and inputs from other digital video devices.
NOTE: This DVI jack is not for computer connections. VGA cannot be connected.

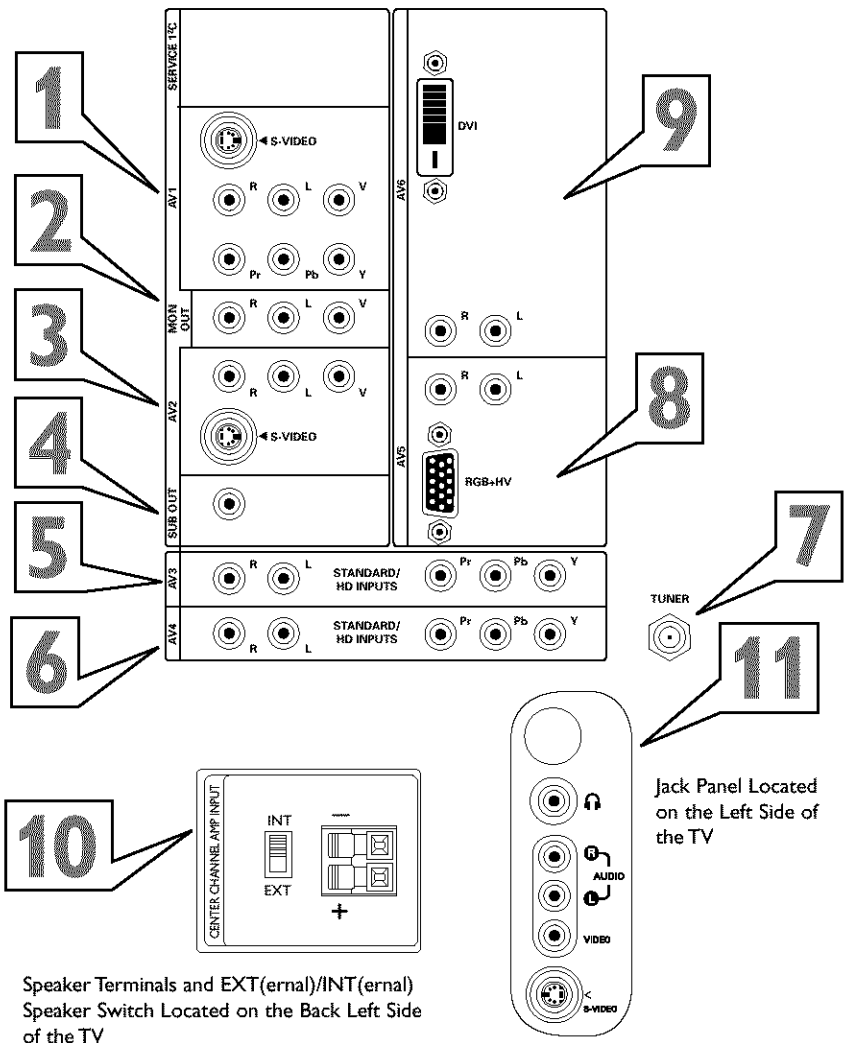

10 Speaker Terminals and EXT(ernal)/INT(ernal) Speaker Switch Located on the Back Left Side of the TV

11 Jack Panel Located on the Left Side of the TV

Definitions:
NTSC—National Television System Committee.
CVBS—labeled “V,” provides a small step up in quality from the Tuner (RF) input. Called Composite Video.
S-Video (Y/C)—provides better picture quality than CVBS. Separates the signal into color and brightness.
YPbPr—provides the best quality video signal. Called Component Video Input, the signal is split into three parts, two color and one brightness.

10 CENTER CHANNEL AMP INPUT Click-fit Terminals
 Provides speaker-wire input terminals for connection of an external home-cinema surround-sound system amplifier. For this use, set the switch to “EXT,” and the TV speakers become the center speakers for the home-cinema surround-sound system.
NOTE: If no audio is heard from the set, check to make sure the Center Channel Amp switch is in the INT position. This switch should be in the EXT position only when an external center channel input is connected to the Click-fit Terminals.

11 SIDE JACK PANEL
Signals accepted: Analog NTSC (480i).
Inputs available: S-Video (Y/C) and CVBS, plus audio left and right.
Output available: Headphone. Only one of the inputs can be used at a time. Select the Side source, and the TV detects the input to which you have connected. Connections must be made to the audio inputs for sound.



Positioning the TV

Before connecting accessory devices—VCR, DVD player, or HD satellite receiver, for example—please keep the following in mind:


- Place the TV on a flat surface. An unlevel surface may adversely affect picture performance.
- Do not place the TV on shag carpet or any surface that will block the ventilation openings at the bottom of the set. Blockage will cause the TV to overheat and shut down.
- Allow 4 to 6 inches of space behind the TV for ventilation.
- An optional swivel and an optional stand are available for use with your TV. See your electronics dealer.
- Test various locations in the room to find the optimal spot to locate the set for best viewing.
- Do not place the TV in direct sunlight or near a heating appliance.
- Do not expose the TV to rain or moisture.
- To prevent any unsafe situations, do not place objects on top of the TV.

For safety, do not set objects on top of the TV.

Situate the TV where it will not be exposed to heat or moisture.

Place the TV on a flat surface.

Allow 4 to 6 inches behind the TV for ventilation.

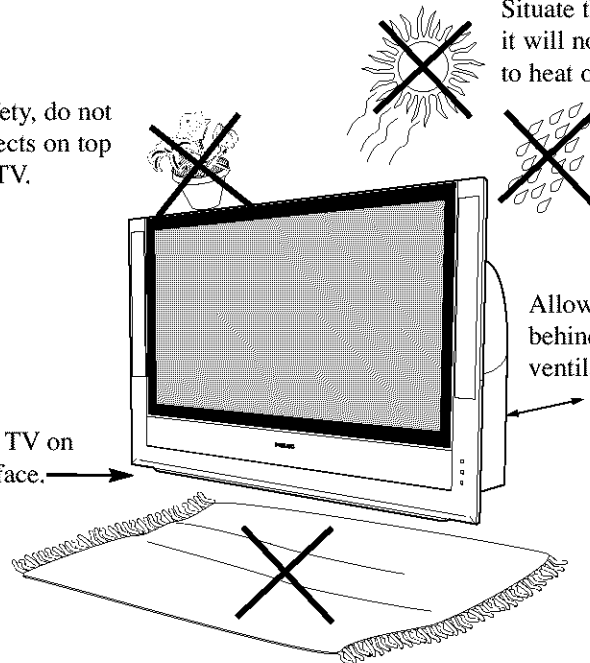

Do not place the TV on a surface that will block the air filters located underneath the set.

Providing Protection Against Power Surges

- Connect all accessory devices before you plug any of their power cords into the wall outlet or power strip. NEVER plug your TV into an outlet that is controlled by a wall switch.
- Turn off the TV and/or accessory devices before you connect or disconnect any cables.
- Ensure that all antennas and cables are properly grounded. See page 3, "Important Safety Instructions."

Protecting Accessory Devices from Overheating


- Arrange accessory devices so that air can circulate freely around them.
- Don't stack the accessory devices. Arrange them to allow for good ventilation. The optional Philips stand provides enough room for two accessory devices, side by side.
- If you connect an audio receiver or amplifier, place it on the top shelf so the heated air from it will not flow around other components.

Connecting Cables

Be sure to insert each cable firmly into the correct jack.

Using the Connection Examples in This Manual




The accessory device jack panels shown are for example purpose only. The jack panels on your accessory devices may look different. Also, note that connections can be made in various ways. The examples are presented only as guides.

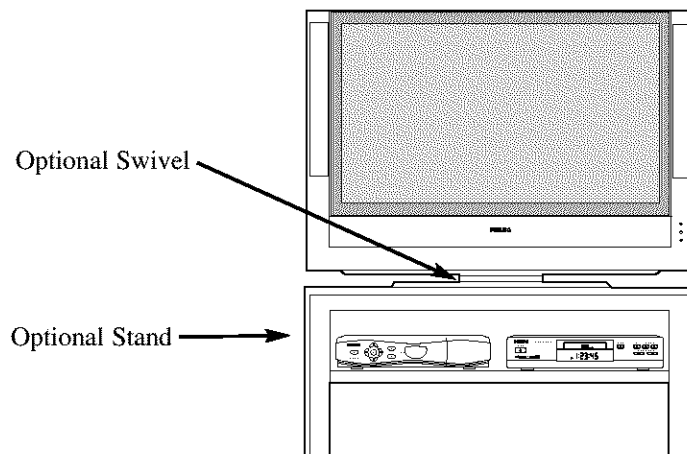



Connecting a VCR

- 1** Connect the incoming antenna or cable TV signal to the ANT IN jack on the back of the VCR.
- 2** Using a coaxial cable, connect to the OUT jack on the back of the VCR and to the TUNER jack on the back of the TV.
- 3** Using A/V cables, connect from the AUDIO and VIDEO OUT jacks on the back of the VCR to the corresponding AV2 audio (L and R) and video (V) jacks on the back of the TV.
- 4** Press the Source Select button on the remote control to access the Source list.
- 5** Press the Cursor Up or Down button to select the AV2 input source.
- 6** Press the OK button to confirm your choice. The set is now switched to the AV2 input source for the viewing of programs from the VCR.

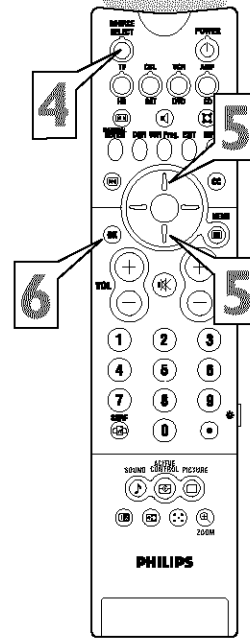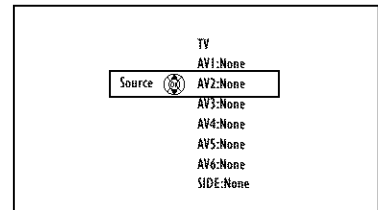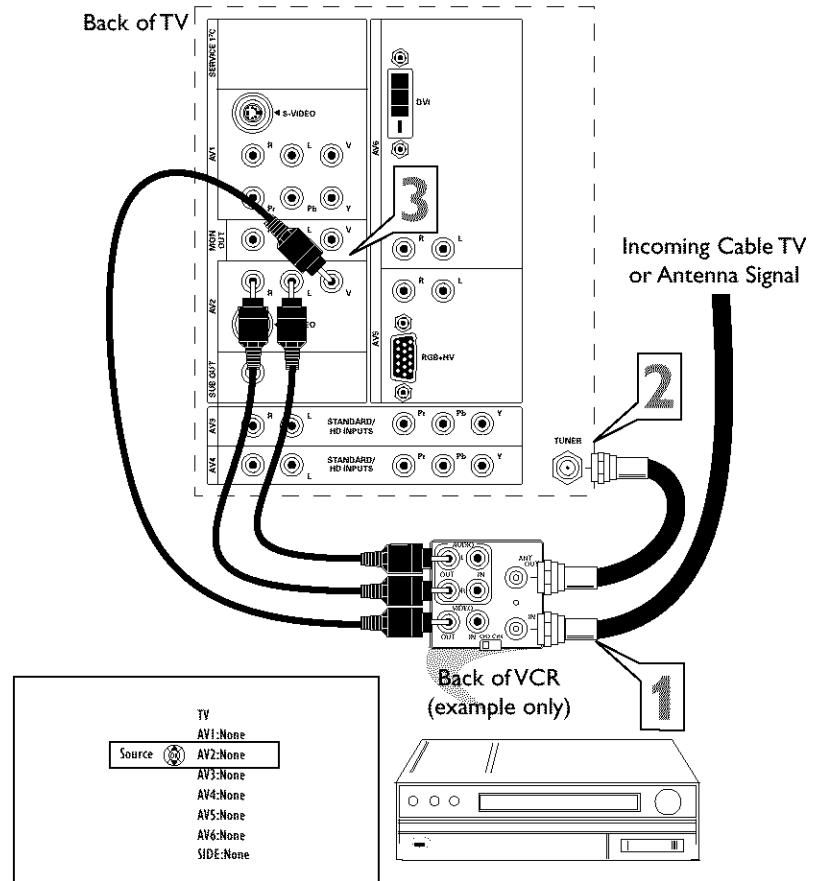

NOTE: Since you've connected the cable TV signal directly to the TV's tuner (step 2 above), you can watch the unscrambled programs by simply tuning to the desired channel. To store channels in the TV's memory, you must use Autoprogram, which you can access through "Install" in the TV's on-screen menu. See the Autoprogram section in the *Quick Use and Setup Guide* that came with the TV. If you use Autoprogram, you can select channels by pressing the CH + or - buttons on the TV remote control (in TV mode). Otherwise, you must press the digit (number) buttons to tune directly to the channel you desire.

HELPFUL HINT

Color Coding Used on Jacks and Plugs to simplify connections:


- Yellow:** Video (Composite Video)
- Red:** Right Audio
- White:** Left Audio.

Connecting a VCR and Cable Box



NOTE: A cable box with AUDIO OUT jacks such as the one used in the example on this page might pass stereo sound to the TV. Check with your cable TV company. The RF jack output jack on a cable box (commonly labeled “OUT TO TV,” “OUTPUT,” or “OUT”) will not pass stereo sound to your TV.

- 1** Connect the incoming cable TV signal to a two-way signal splitter. The signal splitter enables you to route the cable signal to the TV without using the OUT TO TV jack on the cable box, which will not pass stereo sound to the TV.
- 2** Using a coaxial cable, connect to one of the connectors on the signal splitter and to the TUNER jack on the back of the TV.
- 3** Using a coaxial cable, connect to the other connector on the signal splitter and to the CABLE IN jack on the back of the cable box.
- 4** Using Audio/Video cables, connect to the AUDIO and VIDEO OUT jacks on the back of the cable box and to the corresponding AUDIO and VIDEO IN jacks on the back of the VCR.
- 5** Using Audio/Video cables, connect to the AUDIO and VIDEO OUT jacks on the back of the VCR and to the corresponding AV2 audio (L and R) and video (V) input jacks on the back of the TV.
- 6** Press the Source Select button on the remote control to access the Source list.
- 7** Press the Cursor Up or Down button to select the AV2 input source.
- 8** Press the OK button to confirm your choice. The set is now switched to the AV2 input source for the viewing of programs from the cable box or the VCR.

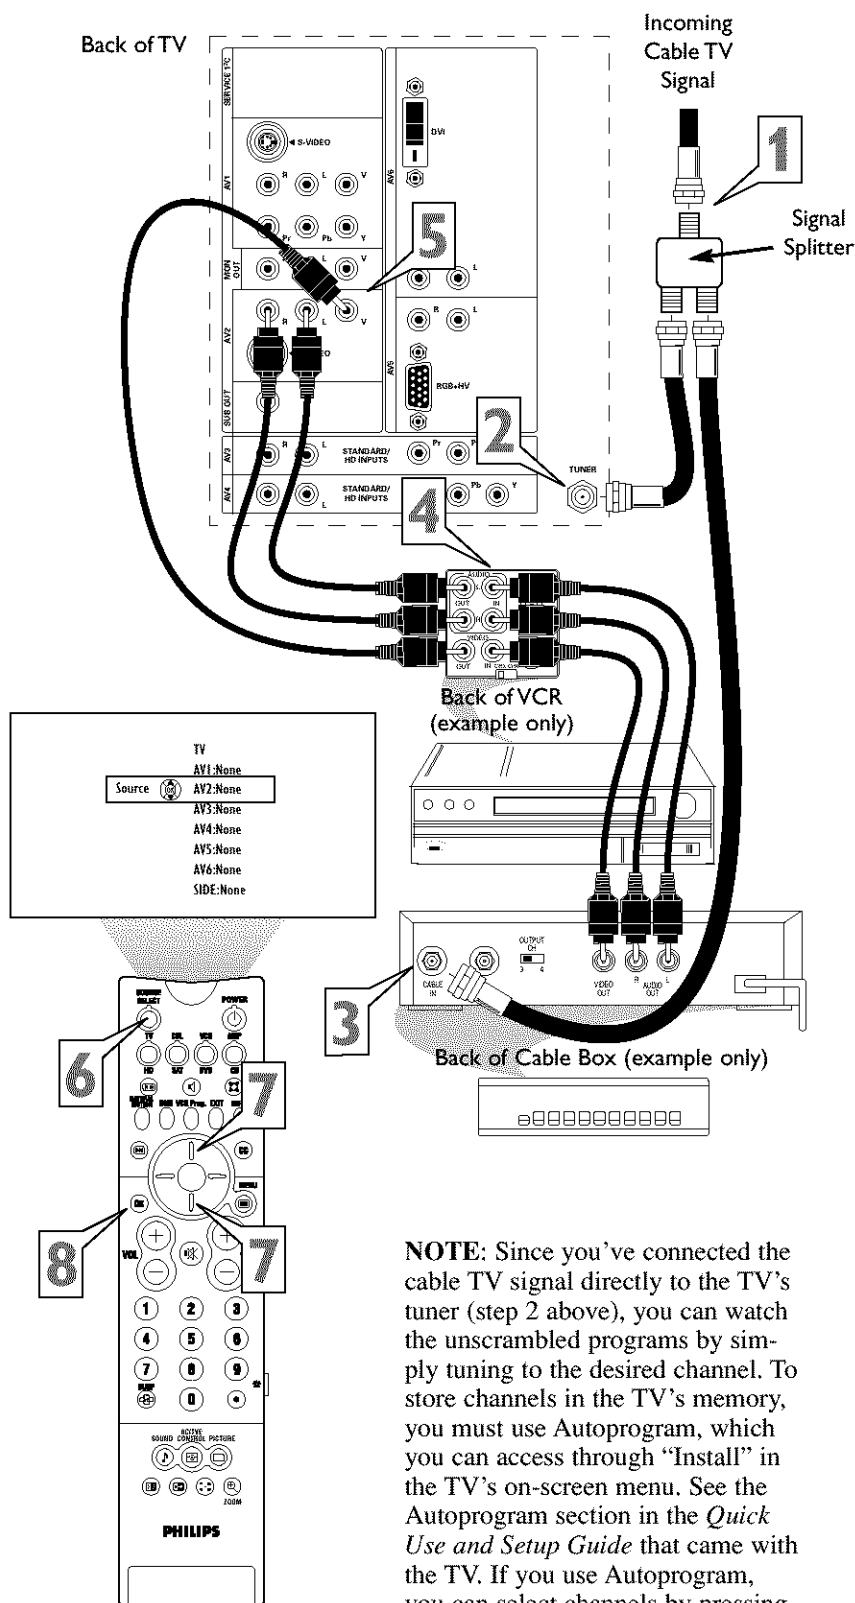

NOTE: Since you've connected the cable TV signal directly to the TV's tuner (step 2 above), you can watch the unscrambled programs by simply tuning to the desired channel. To store channels in the TV's memory, you must use Autoprogram, which you can access through "Install" in the TV's on-screen menu. See the Autoprogram section in the *Quick Use and Setup Guide* that came with the TV. If you use Autoprogram, you can select channels by pressing the CH + or – buttons on the TV remote control (in TV mode). Otherwise, you must press the digit (number) buttons to tune directly to the channel you desire.

HELPFUL HINT

Color Coding Used on Jacks and Plugs to simplify connections:

Yellow: Video (Composite Video)



Red: Right Audio

White: Left Audio.




Connecting an S-Video Device


- 1 Using an S-Video cable, connect to the S-Video output on the back of the S-Video device and to the AV2 S-VIDEO input.
- 2 Using Stereo Audio cables, connect to the AUDIO OUT jacks on the back of the S-Video device and to the corresponding AV2 audio inputs (L and R).
- 3 Press the Source Select button on the remote control to access the Source list.
- 4 Press the Cursor Up or Down button to select the AV2 input source.
- 5 Press the OK button to confirm your choice. The set is now switched to the AV2 input source for the viewing of programs from the S-Video device.

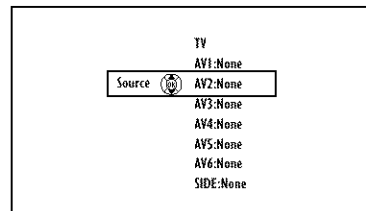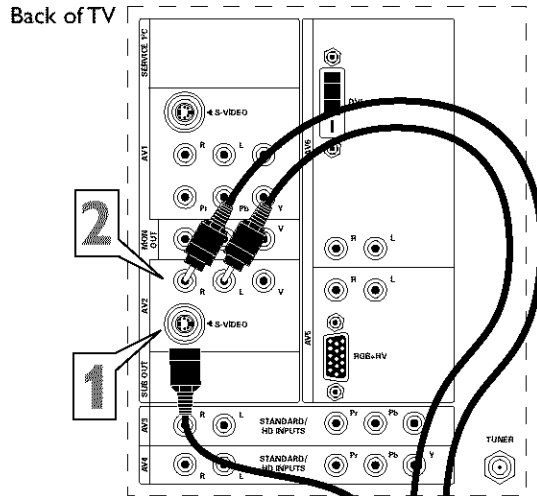

Back of Standard S-Video Device (example only)

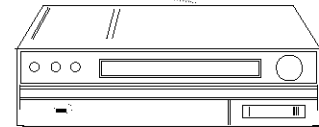




HELPFUL HINT
To simplify making connections, the connectors on audio and video cables are often color coded to match the colors on TV jacks, red for right, and white for left.

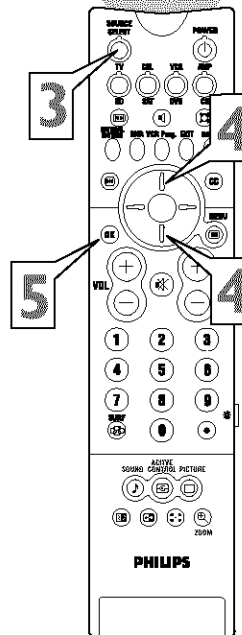

Connecting a Standard DVD Player



- 1** Using Component Video cables, connect to the YPbPr jacks on the back of the standard DVD player and to the AV1 YPbPr jacks on the back of the TV.
- 2** Using Stereo Audio cables, connect to the AUDIO OUT jacks on the back of the DVD player and to the corresponding AV1 audio (L and R) jacks on the back of the TV.
- 3** Press the Source Select button on the remote control to access the Source list.
- 4** Press the Cursor Up or Down button to select the AV1 input source.
- 5** Press the OK button to confirm your choice. The set is now switched to the AV1 input source for the viewing of programs from the DVD player.

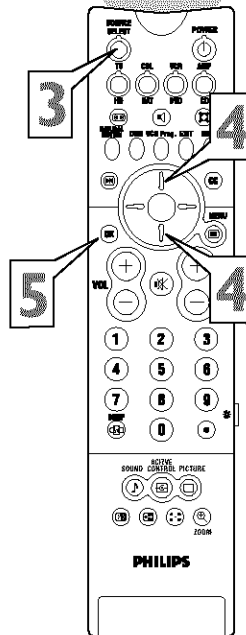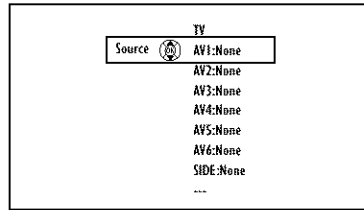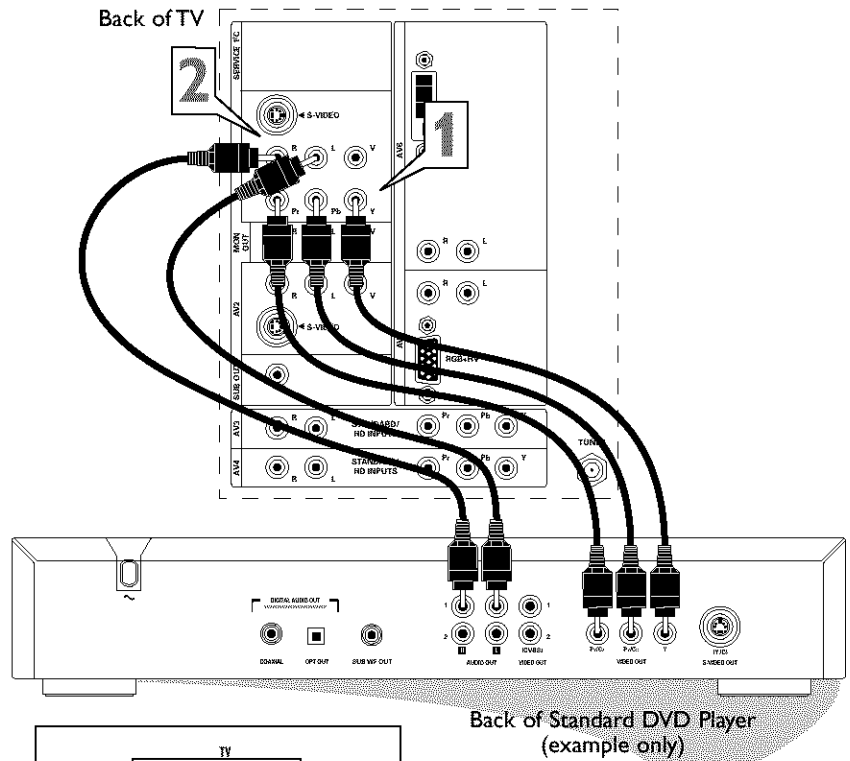


HELPFUL HINTS

- If you do not know whether your DVD player is standard or progressive scan, you can connect it to either AV3 or AV4, and the TV will automatically determine the type of output.
- To simplify making connections, the connectors on audio and video cables are often color coded to match the colors on TV jacks: green for Y, blue for Pb, and red for Pr; also red for right audio, and white for left audio.
- The names for the component video jacks may differ depending on the DVD player or accessory digital source equipment used. For example, besides YPbPr, you may see R-Y/B-Y/Y; or CrCbY. Although abbreviations and terms may vary, the letters *B* and *R* stand for the blue and red color component signal connectors, respectively, and *Y* indicates the luminance signal. If necessary, refer to the user manual for your DVD or digital accessory for more information.
- If you experience difficulties receiving sound with a DVD disc, check the sound settings through the DVD disc's menu.






Connecting a Progressive-scan DVD Player

- 1** Using Component Video cables, connect to the YPbPr jacks on the back of the progressive-scan DVD player and to the AV3 YPbPr jacks on the back of the TV.
- 2** Using Stereo Audio cables, connect to the AUDIO OUT jacks on the back of the DVD player and to the corresponding AV3 audio (L and R) jacks on the back of the TV.
- 3** If your DVD player has an I/P switch on the back, be sure it is set to the "P" position for progressive-scan mode.
NOTE: Some DVD players have an I/P switch on the back, while others may allow the user to change the mode by pressing a button on the DVD player's remote control or by using the DVD player's on-screen menu. Also, some DVD players have dedicated progressive-scan output jacks that are labeled as such and require no switching by the user. See the user manual for your DVD player for more information on placing the player in progressive-scan mode.

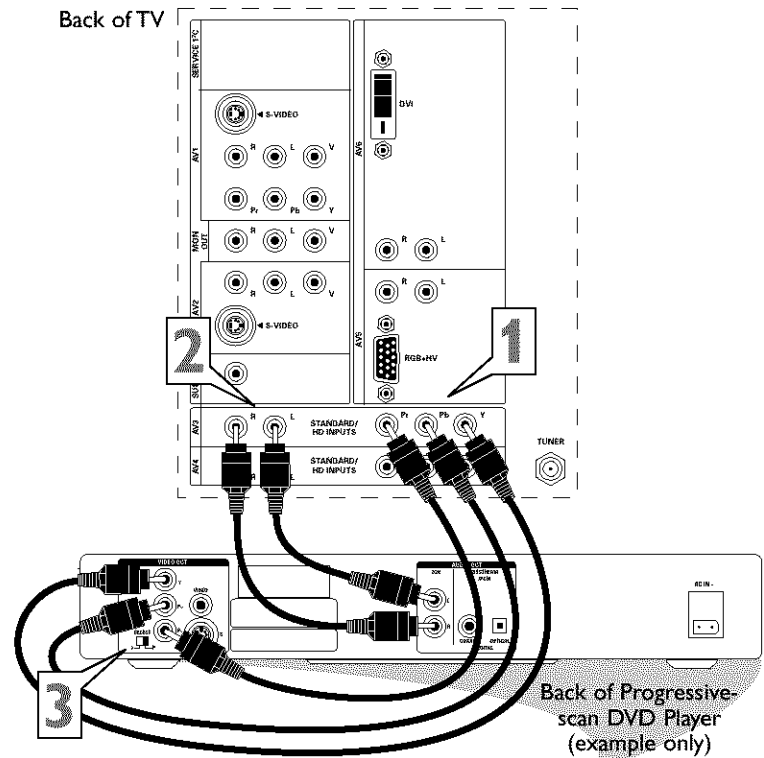

 - 4** Press the Source Select button on the remote control to access the Source list.
- 5** Press the Cursor Up or Down button to select the AV3 input source.
- 6** Press the OK button to confirm your choice. The set is now switched to the AV3 input source for the viewing of programs from the DVD player.

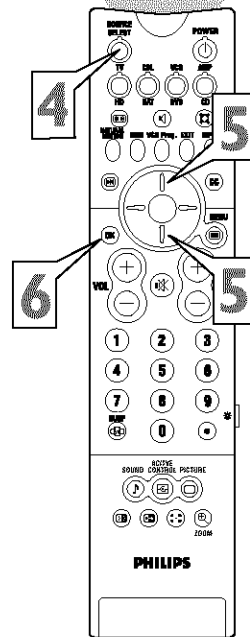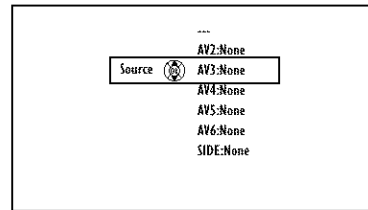

HELPFUL HINT

Inputs AV3–AV6 allow horizontal and vertical picture panning using the Cursor Left, Right, Up, and Down buttons. The Side input allows vertical picture panning; left and right panning with the Side input is possible when the input has been labeled "Game." See pages 20 and 21 for details on side panel connections and source labeling.

 


HELPFUL HINTS

- To simplify making connections, the connectors on audio and video cables are often color coded to match the colors on TV jacks: green for Y, blue for Pb, and red for Pr; also red for right audio, and white for left audio.
- The names for the component video jacks may differ depending on the DVD player or accessory digital source equipment used. For example, besides YPbPr, you may see R-Y/B-Y/Y; or CrCbY. Although abbreviations and terms may vary, the letters *B* and *R* stand for the blue and red color component signal connectors, respectively, and *Y* indicates the luminance signal. If necessary, refer to the user manual for your DVD or digital accessory for more information.
- If you experience difficulties receiving sound with a DVD disc, check the sound settings through the DVD disc's menu.

Connecting an HD Satellite Receiver to YPbPr





- 1** Using Component Video cables, connect to the YPbPr jacks on the back of the HD satellite receiver and to the corresponding AV4 YPbPr jacks on the back of the TV.
- 2** Using Stereo Audio cables, connect to the AUDIO OUT jacks on the back of the HD satellite receiver and to the corresponding AV4 audio (L and R) jacks on the back of the TV.
- 3** Refer to the user manual for the HD satellite receiver to complete the connections to the HD satellite receiver and to use the HD satellite receiver's on-screen setup menus.
- 4** After completing HD satellite receiver connections and setup through the on-screen setup menus, press the Source Select button on the TV remote to access the Source list.
- 5** Press the Cursor Up or Down button to select the AV4 input source.
- 6** Press the OK button to confirm your choice. The set is now switched to the AV4 input source for the viewing of programs from the HD satellite receiver.

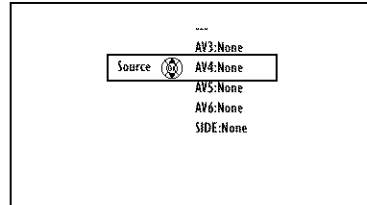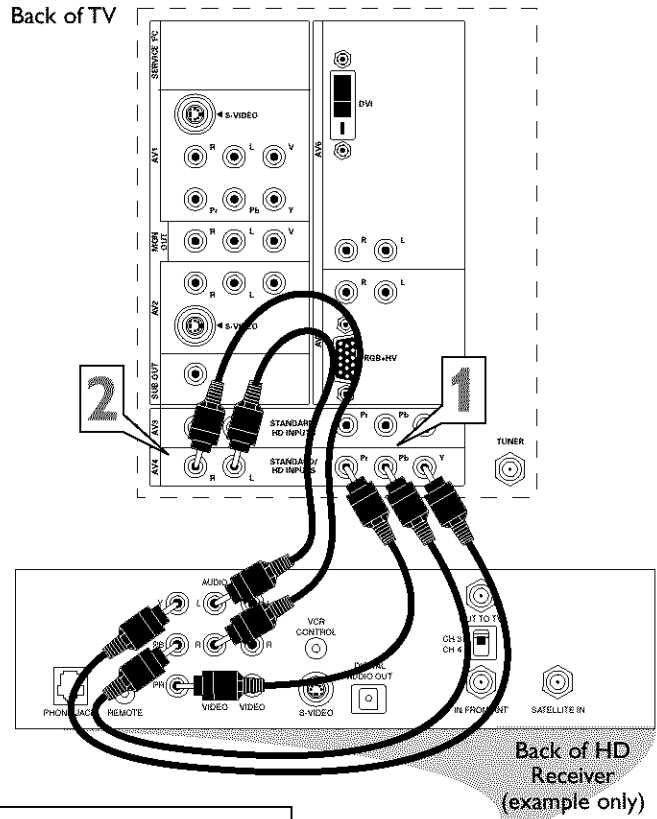

Back of HD Receiver (example only)

HELPFUL HINTS



- To simplify making connections, the connectors on audio and video cables are often color coded to match the colors on TV jacks: green for Y, blue for Pb, and red for Pr; also red for right audio, and white for left audio.
- The names for the component video jacks may differ depending on the DVD player or accessory digital source equipment used. For example, besides YPbPr, you may see R-Y/B-Y/Y; or CrCbY. Although abbreviations and terms may vary, the letters *B* and *R* stand for the blue and red color component signal connectors, respectively, and *Y* indicates the luminance signal. If necessary, refer to the user manual for your DVD or digital accessory for more information.
- Inputs AV3–AV6 allow horizontal and vertical picture panning using the Cursor Left, Right, Up, and Down buttons. The Side input allows vertical picture panning; left and right panning with the Side input is possible when the input has been labeled “Game.” See pages 20 and 21 for details on side panel connections and source labeling.

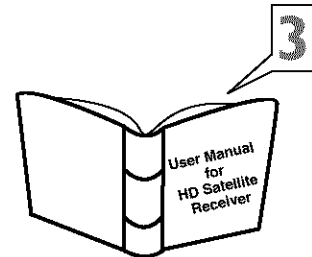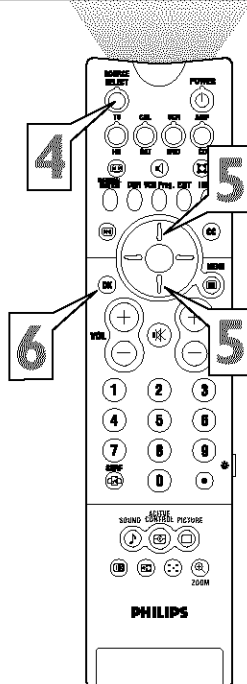





Connecting an HD Satellite Receiver to DVI

- 1** Using a DVI cable, connect to the DVI jack on the back of the HD satellite receiver and to the corresponding AV6 DVI jack on the back of the TV.
- 2** Using Stereo Audio cables, connect to the AUDIO OUT jacks on the back of the HD satellite receiver and to the corresponding AV6 audio (L and R) jacks on the back of the TV.
- 3** Refer to the user manual for the HD satellite receiver to complete the connections to the HD satellite receiver and to use the HD satellite receiver's on-screen setup menus.
- 4** After completing HD satellite receiver connections and setup through the on-screen setup menus, press the Source Select button on the TV remote to access the Source list.
- 5** Press the Cursor Up or Down button to select the AV6 input source.
- 6** Press the OK button to confirm your choice. The set is now switched to the AV6 input source for the viewing of programs from the HD satellite receiver.

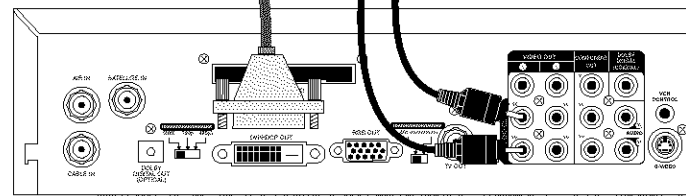
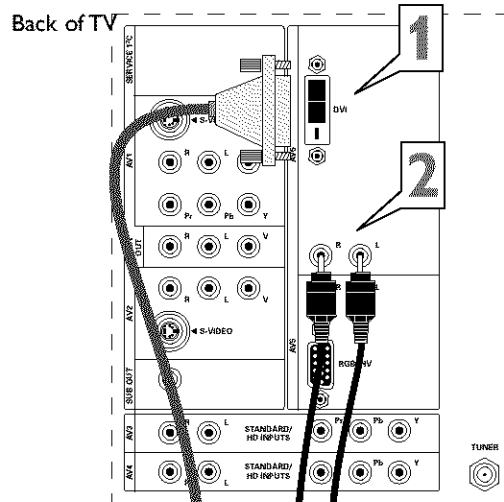


 Back of HD satellite receiver (example only)

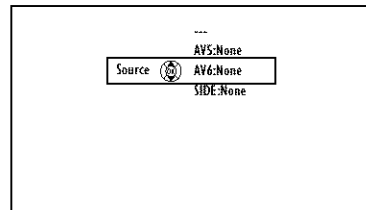

HELPFUL HINTS



- To simplify making connections, the connectors on audio cables are often color coded to match the colors on TV jacks: red for right audio, and white for left audio.
- Because DVI is such new technology, the electronics industry is still working toward a decision on one standard. Philips testing has determined that compatibility issues exist with respect to a limited number of high-definition receivers when they are connected to the DVI input on this television. If you should experience difficulties, please contact our Customer Care Center at 1-800-531-0039.
- Inputs AV3–AV6 allow horizontal and vertical picture panning using the Cursor Left, Right, Up, and Down buttons. The Side input allows vertical picture panning; left and right panning with the Side input is possible when the input has been labeled “Game.” See pages 20 and 21 for details on side panel connections and source labeling.

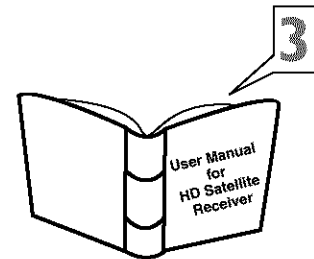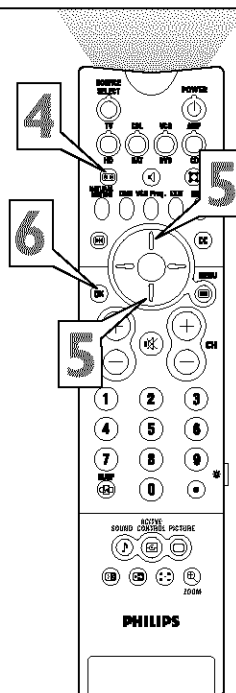



Connecting Surround Sound Equipment



- 1** Using speaker wires, connect to the Center Speaker output terminals (+, -) on the back of the surround sound receiver and to the corresponding (+, -) CENTER CHANNEL AMP terminals on the back of the TV.
- 2** Set the CENTER CHANNEL AMP INPUT switch to EXT. This allows the TV cabinet speakers to be used as the center speakers in a surround sound arrangement.
- 3** Using Stereo Audio cables, connect to the MON OUT L and R jacks on the back of the TV and to the corresponding TV IN jacks on the back of the receiver.
- 4** Using an Audio cable, connect to the SUB OUT jack on the back of the TV and to the Audio Input jack on the back of a powered subwoofer.
- 5** Using speaker wires, connect to the R and L Front Speakers terminals and to the corresponding terminals on the backs of the front speakers.
- 6** Using speaker wires, connect to the Surround Speakers terminals (+, -) on the back of the receiver and to the corresponding terminals (+, -) on the back of the surround speakers.
- 7** Press the Menu button on the remote control to display the on-screen menu.
- 8** Press the Cursor Down button to select "Settings."
- 9** Press the Cursor Right button to select "General."
- 10** Press the Cursor Down button repeatedly until "Subwoofer" is selected.
- 11** Press the Cursor Right or Left button to select "Yes."

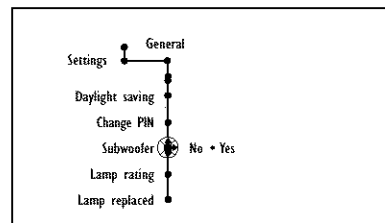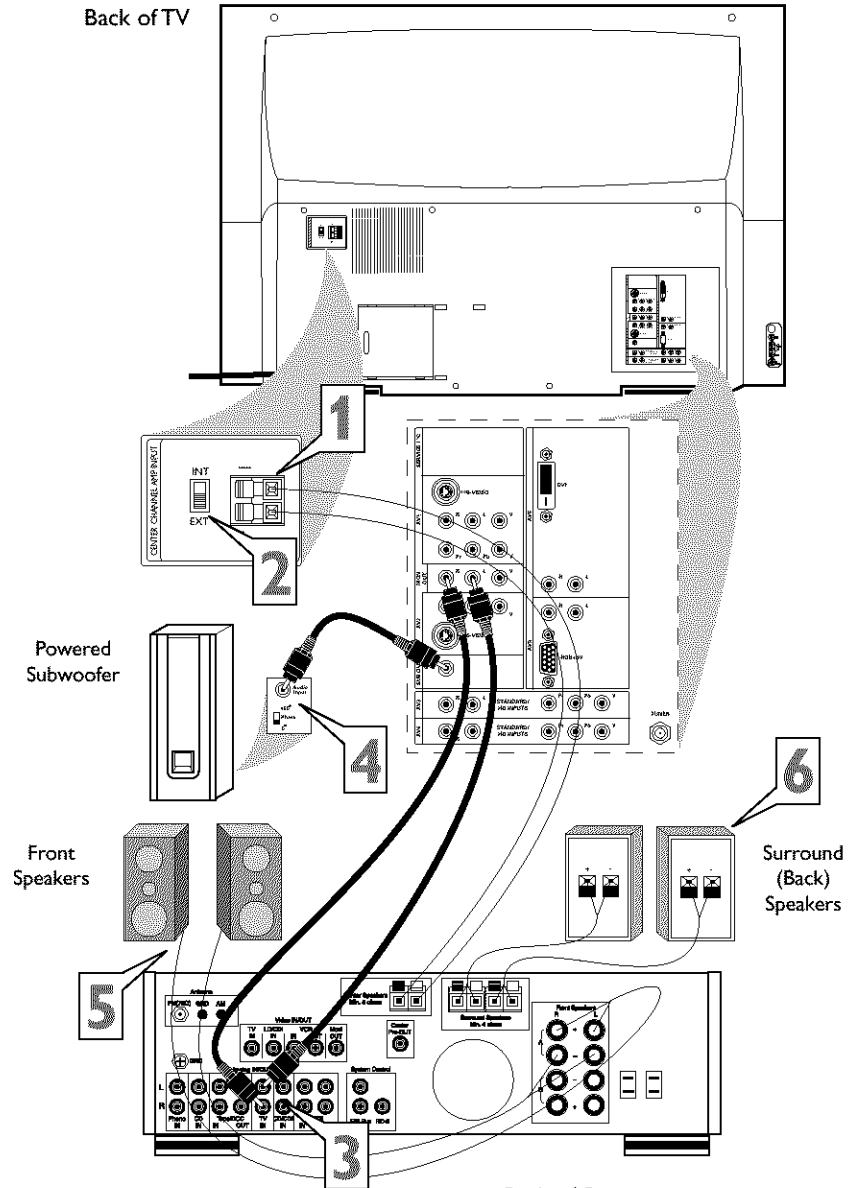

Back of Receiver (example only)

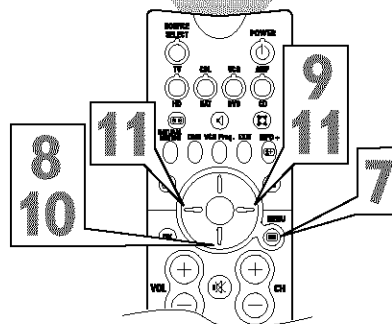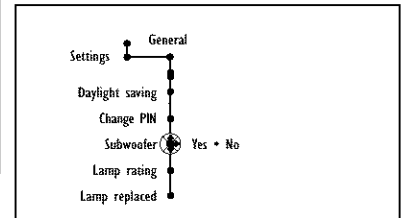

HELPFUL HINT

"Yes" must be activated for the Subwoofer menu selection before the SUB OUT jack will supply output. This is because the subwoofer's low frequencies are redirected to the main TV speakers when "No" is selected.

HELPFUL HINT

To simplify making connections, the connectors on audio cables are often color coded to match the colors on TV jacks: red for right audio, and white for left audio.



Connecting to the Side Inputs: Video Game System


1 Using the Audio/Video cable supplied with your video game system, connect to the back of the game system and to the corresponding S-VIDEO and AUDIO (L and R) jacks in the Side panel of the TV.

NOTE: If your game system cable does not have an S-Video plug, you can instead make a regular Video connection.




2 Press the Source button on the TV remote control to access the Source list.

3 Press the Cursor Up or Down button to select the Side input source.

4 Press the OK button to confirm your choice. The set is now switched to the Side input source for the viewing of your video game system.

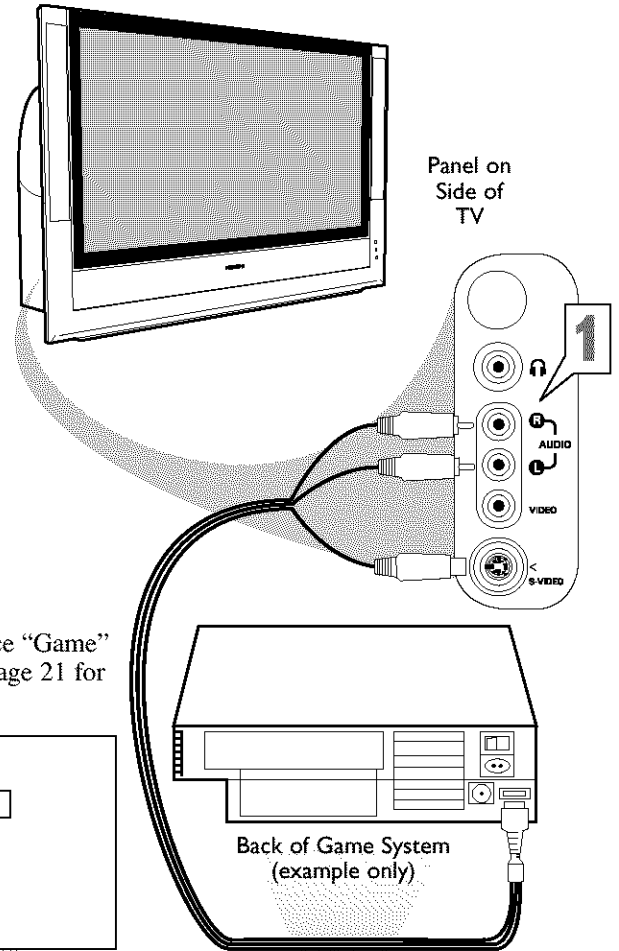


You can label the Side Audio/Video input source "Game" if you would like. See page 21 for details on labeling.

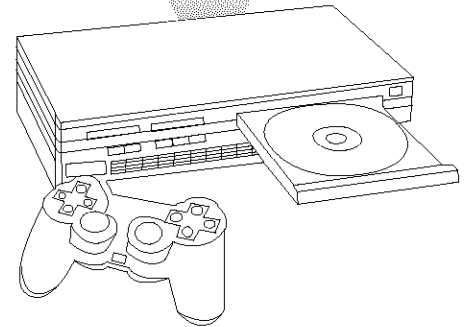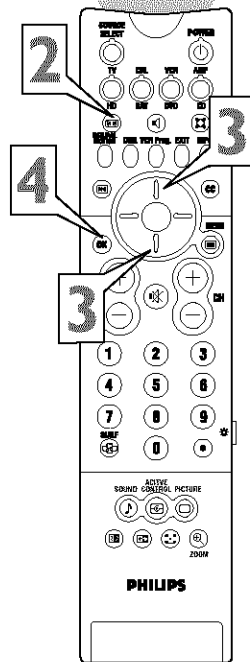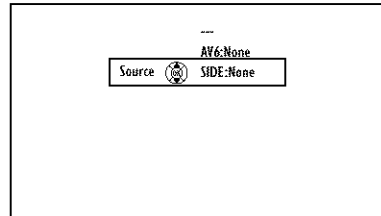

HELPFUL HINTS

- To simplify making connections, the connectors on audio and video cables are often color coded to match the colors on TV jacks: yellow for video (composite), red for right audio, and white for left audio.
- Inputs AV3–AV6 allow horizontal and vertical picture panning using the Cursor Left, Right, Up, and Down buttons. The Side input allows vertical picture panning; left and right panning with the Side input is possible when the input has been labeled "Game." See page 21 for details on source labeling.

The side panel is also convenient for connecting equipment such as camcorders or cameras. If the equipment has an S-Video output jack, it is the suggested one to use for your connection to receive the best picture. Otherwise, you can make a regular Video connection. You must also make an audio connection (L and R for stereo or L for mono) to receive sound. Neither an S-Video or Video cable carries a sound signal.

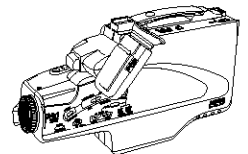

Camcorder









Labeling the Audio/Video Input Sources



You can label all the external Audio/Video input sources—AV1, AV2, AV3, AV4, AV5, AV6, and Side—according to the type of accessory device you have connected to each input.

After labeling, you can use the Source Select button to cycle through and select your desired source. The labels will appear alongside the channel indicator when you select the AV input sources.

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Down button to select “Settings.”
- 3** Press the Cursor Right button repeatedly to select the “Source” menu.
- 4** Press the Cursor Down button repeatedly to select any of the AV Inputs—AV1, AV2, AV3, AV4, AV5, AV6, or Side. A list of labels will appear next to the selected AV input.
- 5** Press the Cursor Right button to enter the list.
- 6** Press the Cursor Up or Down button to scroll and select one of the labels in the list.
- 7** Press the Menu button on the remote control to remove the on-screen menu from the TV screen.
- 8** Press the Source Select button on the remote control to display the list of AV inputs and their labels.

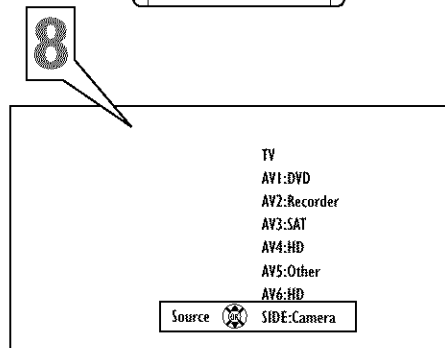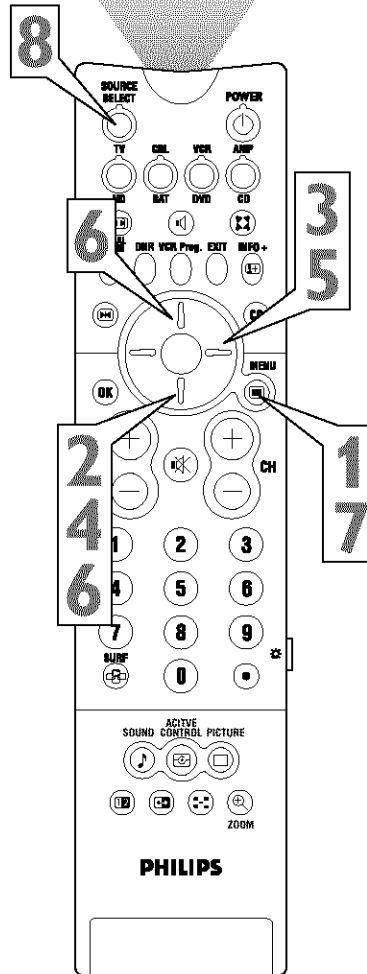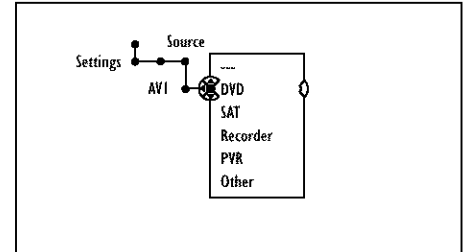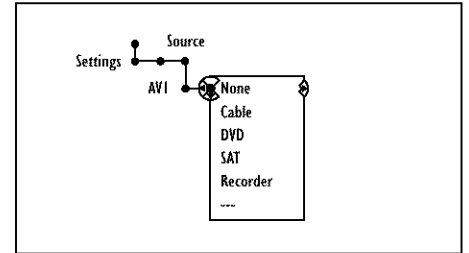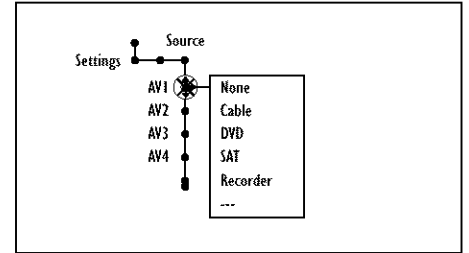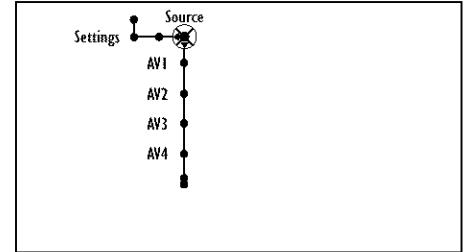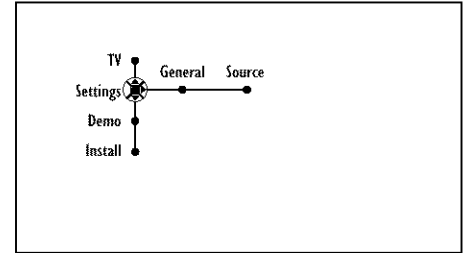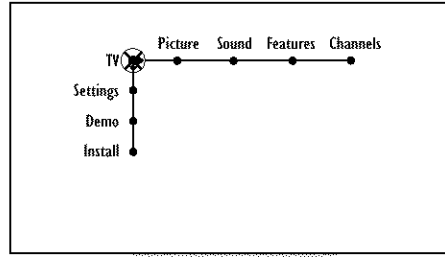

This is just a sample of what the labeling might look like. Your Source Labels will depend on the options you choose to label the AV inputs.



PROGRAMMING THE TV REMOTE TO OPERATE ACCESSORY DEVICES

The remote control supplied with your television may also work with a variety of infrared-controlled accessory devices such as cable boxes, VCRs, amplifiers, HD satellite receivers, satellite receivers, DVD players, and CD players.

- 1 Press the CBL, VCR, AMP, HD, SAT, DVD, or CD Mode button, depending on the type of accessory device you want to operate. If the function buttons—Play, CH + or –, Stop, for example—on the remote control work the device, the remote is ready to use and no further steps are required. If the remote does not work with the accessory device, proceed to step 2.

Using the Code Entry Method

Please look up the code(s) for your brand of accessory device (listed on pages 24–25) before you begin the next few steps.

- 2 Press the desired Mode button that corresponds to the type of device you wish to operate—CBL, VCR, AMP, HD, SAT, DVD, or CD. A green light will indicate the mode labeled on the top of the button, while a red light will indicate the mode labeled on the bottom of the button. If needed, hold the button down and the light will toggle between the green and red settings.
- 3 Press and hold the 1 and 3 Digit (Number) buttons at the same time until the Backlight and selected Mode buttons light up. Then release both buttons.
- 4 Within 30 seconds of completing step 3 and using the Digit (Number) buttons, enter the four-digit code from pages 24–25 for your brand of device. Several codes may be listed for your brand, so you may need to try them all before the remote will operate the device.


If a valid code number has been entered, the Backlight and Mode buttons will turn off and then blink twice. The remote control will assign that code number to the mode selected.

Try the function buttons to see if the remote will operate your accessory device.


If yes, no other steps are required.

If no, try the procedure again with another code number listed by your brand. Several attempts may be needed to complete all code numbers.


If none of the codes work, please refer to page 23 to try the Auto Search Method.

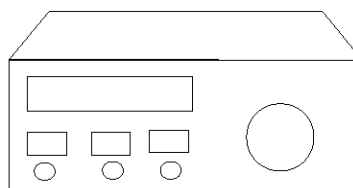


AMP

 


SAT

 


DVD

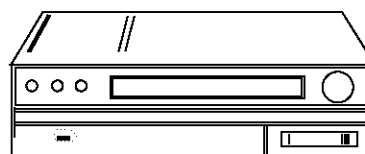

VCR

 

CBL

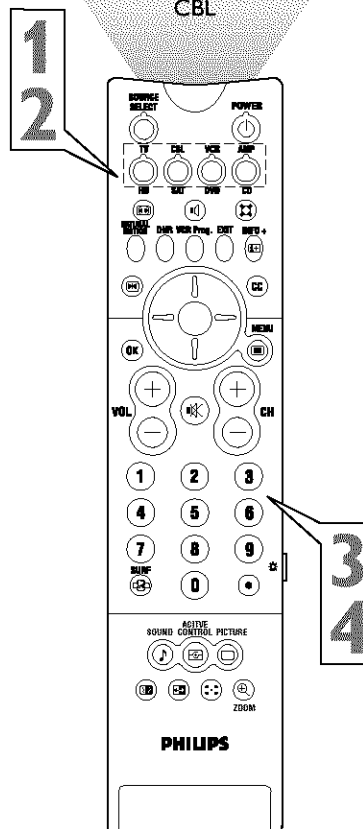

PROGRAMMING THE TV REMOTE TO OPERATE ACCESSORY DEVICES



The Auto Search Method of programming the remote control can take several minutes to complete. So before starting, it is recommended that you sit in a comfortable position at least six feet from the accessory device. You will have to hold the remote so that it is pointed at the front of the device for the entire time the search is taking place.

- 1 Turn the accessory device on using the device's power button.
- 2 Press the desired Mode button that corresponds to the type of device you wish to operate—CBL, VCR, AMP, HD, SAT, DVD, or CD. A green light will indicate the mode labeled on the top of the button, while a red light will indicate the mode labeled on the bottom of the button. If needed, hold the button down and the light will toggle between the green and red settings.
- 3 Press and hold the 1 and 3 Digit (Number) buttons at the same time until the Backlight and selected Mode buttons light up. Then release both buttons.
- 4 Press and release the red POWER button on the remote control. The Backlight buttons and the selected Mode button will turn off.


The remote will start the Auto Search of all available codes, sending a command to channel up. The backlight will blink after each code is tried. For devices such as DVD or CD players, insert a disc and press PLAY on the device. The remote control will send a command to switch to the next track. Switch AV receivers to the tuner function.

IMPORTANT: Watch the channel indicator of your accessory device closely. Once the right code is found, the channels on your device will start to scan up.

- 5 Press and release the red POWER button on the remote control as soon as the channels start to change. The Backlight buttons and selected Mode button will blink twice to indicate the Auto Search code setup is complete.

NOTE: If any other buttons are pressed during the procedure, the Auto Search will end.

Remember, Auto Search can take several minutes to complete, so please be patient.

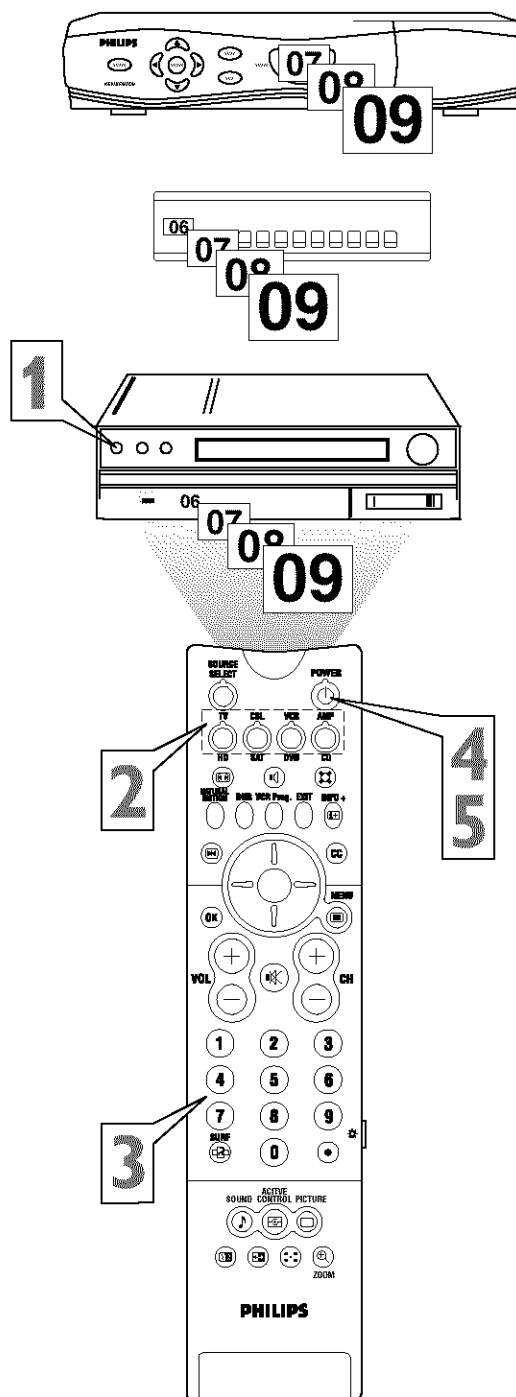



SETUP CODES FOR ACCESSORY DEVICES

Amplifier

Aiwa	.0433
Carver	.0296
Curtis Mathes	.0327
Denon	.0187
GE	.0105
Harman/Kardon	.0919
JVC	.0358
Linn	.0296
Magnavox	.0296
Marantz	.0296, 0348
Nakamichi	.0348
Optimus	.0422
Panasonic	.0335
Philips	.0296, 0919
Pioneer	.0040, 0327
Realistic	.0422
Sansui	.0348
Sony	.0716, 0247
Soundesign	.0105
Technics	.0335
Victor	.0358
Wards	.0040, 0105
Yamaha	.0381

Cable Box

ABC	.0030, 0028, 0034, 0035, 0038, 0040, 0041, 0044
Allegro	.0180, 0342
Americast	.0926
Antronix	.0049
Archer	.0049, 0180, 0824
Belcor	.0083
Bell & Howell	.0041
Cable Star	.0083
Cabletenna	.0049
Cableview	.0049
Century	.0180
Citizen	.0180, 0342
Colour Voice	.0052
Comtronics	.0067
Contec	.0046
Eastern	.0029
Emerson	.0824
Everquest	.0042, 0067
Focus	.0427
GC Electronics	.0083
Garrard	.0180
Gemini	.0042
General Instrument	.0303, 0503, 0038, 0837
GoldStar	.0067, 0171
Goodmind	.0824
Hamlin	.0047, 0036, 0286, 0061
Hitachi	.0038
Hytex	.0034
Jasco	.0042, 0180, 0342
Jerrold	.0030, 0039, 0303, 0041, 0038, 0503, 0042, 0837
Memorex	.0027
Movie Time	.0090
NSC	.0090
Oak	.0046, 0034
Optimus	.0048
Panasonic	.0048, 0134, 0027
Paragon	.0027
Philips	.0052, 0180
Pioneer	.0171, 0560, 0904
Popular Mechanics	.0427
Pulsar	.0027
Quasar	.0027

RCA	.0048
Radio Shack	.0042, 0342, 0910, 0824
Recoton	.0427
Regal	.0047, 0286
Regency	.0029
Rembrandt	.0038
Runco	.0027
SL Marx	.0067
Samsung	.0067, 0171
Scientific Atlanta	.0035, 0044, 0504, 0904
Signal	.0042, 0067
Signature	.0038
Sprucer	.0048
Starcom	.0030, 0042
Stargate	.0067, 0042, 0824
Starquest	.0042
Sylvania	.0028
TV86	.0090
Tandy	.0285
Televue	.0067
Texscan	.0028
Tocom	.0039, 0040
Toshiba	.0027
Tusa	.0042
Unika	.0180, 0049
United Artists	.0034
Universal	.0049, 0083, 0180, 0218
Viewstar	.0285, 0090
Zenith	.0027, 0552, 0926
Zentek	.0427

CD Player

Aiwa	.0184
Burmester	.0447
California Audio Labs	.0056
Carver	.0184, 0206, 0464
DKK	.0027
Denon	.0030, 0900
Emerson	.0332
Fisher	.0201, 0206
Garrard	.0420, 0447
Genexxa	.0059, 0332
Harman/Kardon	.0200, 0184
Hitachi	.0059
JVC	.0099
Kenwood	.0055, 0217, 0853, 0064, 0653, 0708
Krell	.0184
LXI	.0332
Linn	.0184
MCS	.0056
MTC	.0447
Magnavox	.0184, 0332
Marantz	.0184, 0056, 0207
Mission	.0184
NSM	.0184
Nikko	.0201
Onkyo	.0128, 0895
Optimus	.0447, 0059, 0206, 0495, 0464, 0332, 0027, 0064, 0172
Panasonic	.0056, 0330
Parasound	.0447
Philips	.0184, 0653
Pioneer	.0059, 0495, 0271, 0332
Proton	.0184
QED	.0184
Quasar	.0056
RCA	.0080, 0332, 0206, 0791
Realistic	.0206, 0207, 0447
Rotel	.0184, 0447
SAE	.0184

Sansui	.0184, 0332
Sanyo	.0206
Scott	.0332
Sears	.0332
Sharp	.0064, 0207, 0888
Sherwood	.0207
Sony	.0027, 0212, 0517
Soundesign	.0172
Tascam	.0447
Teac	.0420, 0447, 0201, 0207
Technics	.0330, 0056
Victor	.0099
Wards	.0080, 0184
Yamaha	.0214, 0063
Yorx	.0488

Surround Sound Receiver

ADC	.0558
Adcom	.0643
Aiwa	.0148, 0432, 0185, 0216
Akai	.0251, 0103
Capetronic	.0558
Carver	.0035, 0216, 0387, 0069
Casio	.0222
Clarinette	.0222
Curtis Mathes	.0107
Denon	.0031, 0798, 0300
Emerson	.0451
Fisher	.0069, 0246, 0387
Garrard	.0451, 0490
Harman/Kardon	.0137, 0216, 0918
Inkel	.0089
JBL	.0137
JVC	.0101
Kenwood	.0054, 0341, 0104, 0069, 0213, 0340
Koss	.0451
LXI	.0208
Linn	.0216
Lloyd's	.0222
MCS	.0066, 0373
Magnavox	.0216, 0418, 0558, 0155, 0222
Marantz	.0216, 0155, 0066
Modulaire	.0222
NAD	.0347
NEC	.0262
Nakamichi	.0374, 0124
Onkyo	.0162, 0407, 0127
Optimus	.0208, 0204, 0213, 0246, 0558, 0765, 0828, 0069, 0697
Panasonic	.0066, 0336, 0545
Penney	.0222
Philips	.0216, 0418
Pioneer	.0107, 0041, 0177, 0558, 0657
Quasar	.0066
RCA	.0081, 0373, 0558, 0387, 0557
Realistic	.0208, 0222, 0190
Sansui	.0216, 0220, 0373
Sanyo	.0246, 0828
Scott	.0190, 0349
Sharp	.0213
Sherwood	.0529, 0518, 0089
Sony	.0185, 0195, 0501
Soundesign	.0697
Teac	.0490, 0190
Technics	.0336, 0066, 0235, 0545
Victor	.0101
Wards	.0081, 0041, 0107, 0185, 0216
Yamaha	.0203, 0213
Yorx	.0222
Zenith	.0884

SETUP CODES FOR ACCESSORY DEVICES



Satellite

AlphaStar	.0799
Amplica	.0099
Amway	.0102
Astro Industries	.0122
BSR	.0122
Capetronic	.0122
Channel Master	.0045, 0239
Chaparral	.0080, 0236, 0243
Curtis Mathes	.0088, 0099
DX Antenna	.0068
Drake	.0091, 0272, 0045, 0176
Echostar	.0307, 0802, 0175, 0186, 0296
Expressvu	.0802
General Instrument	.0388, 0896, 0654
HTS	.0802
Hitachi	.0846
Homecable	.0265
Hughes Network Systems	.0776
HYTEK	.0122
IQ	.0237
IQ Prism	.0237
JVC	.0802
Janeil	.0179
Jerrold	.0388, 0654
Legend	.0296
Macom	.0088, 0045
Magnavox	.0749, 0751
Memorex	.0296, 0751
Next Level	.0896
Panasonic	.0179, 0728
Philips	.0227, 0749, 0751
Pico	.0102
Primestar	.0654, 0388
RCA	.0593, 0170, 0882
Radio Shack	.0896
Ramsey	.0102
Realistic	.0079
STS	.0237, 0068
Sony	.0666
Star Choice	.0896
Star Trak	.0207
Toshiba	.0109, 0817, 0088
Uniden	.0265, 0079, 0101, 0397, 0751, .0103, 0749
Zenith	.0091, 0883, 0088

VCR

Admiral	.0075, 0236
Adventura	.0027
Aiko	.0305
Aiwa	.0334, 0027, 0064
Akai	.0133, 0068, 0088
America Action	.0305
American High	.0062
Asha	.0267
Audiovox	.0064
Beaumarck	.0267
Bell & Howell	.0131
Brocksonic	.0236
Broksonic	.0148, 0211, 0029, 0236, 0506
CCE	.0099, 0305
Calix	.0064
Canon	.0062
Caphart	.0047
Carver	.0108
Cineral	.0305
Citizen	.0305, 0064
Colt	.0099
Craig	.0064, 0099, 0074, 0267, 0298
Curtis Mathes	.0062, 0068, 0087, 0189
Cybernex	.0267

Daewoo	.0305, 0588, 0047, 0072
Daytron	.0047
Denon	.0069
Dynatech	.0027
Electrohome	.0064
Electrohome	.0064
Emerex	.0059
Emerson	.0211, 0029, 0236, 0305, .0148, 0235, 0506, 0588, .0088, 0239, 0027, 0064, 0070
Fisher	.0074, 0131, 0081
Fuji	.0060, 0062
Funai	.0027
GE	.0062, 0087, 0075, 0229, 0267
Garrard	.0027
Go Video	.0459, 0553
GoldStar	.0064, 0065
Gradiente	.0035, 0027
HI-Q	.0074
Harley Davidson	.0027
Harman/Kardon	.0065, 0108
Harwood	.0099
Headquarter	.0073
Hitachi	.0069, 0132, 0027, 0068
Hughes Network Systems	.0069
JVC	.0094, 0035, 0068
Jensen	.0068
KEC	.0064, 0305
KLH	.0099
Kenwood	.0068, 0094, 0065
Kodak	.0062, 0064
LXI	.0064
Lloyd's	.0027, 0235
Logik	.0099
MEI	.0062
MGA	.0070, 0088, 0267
MGN Technology	.0267
MTC	.0027, 0267
Magnasonic	.0305
Magnavox	.0062, 0108, 0027, 0066, 0176
Magnin	.0267
Marantz	.0108, 0062
Marta	.0064
Matsushita	.0062, 0189, 0481
Memorex	.0131, 0074, 0027, 0064, 0075, .0062, 0073, 0267, 1064, 0334, .0066, 0236, 1189, 1289
Minolta	.0132, 0069
Mitsubishi	.0070, 0088, 0075, 0094
Motorola	.0062, 0075
Multitech	.0027, 0099
NEC	.0065, 0068, 0094, 0131
Nikko	.0064
Nikon	.0061
Noblex	.0267
Olympus	.0062
Optimus	.1089, 1189, 0075, 1289, 0064, .1075, 0131, 0189, 0459, 0481
Optonica	.0089
Orion	.0506, 0029, 0211, 0236
Panasonic	.0062, 1189, 0189, 0252, .0481, 0643
Penney	.0062, 0267, 0064, 0069, 0065, 0081
Pentax	.0069, 0132
Philco	.0062, 0236, 0506
Philips	.0108, 0062, 0089, 0645, 1108, 1208
Pilot	.0064
Pioneer	.0094
Portland	.0047
Profitronic	.0267
Proscan	.0087, 0229
Protec	.0099

Pulsar	.0066
Quarter	.0073
Quartz	.0073
Quasar	.0062, 0189, 0481, 1189
RCA	.0087, 0176, 0229, 0069, 0132, .0062, 0075, 0133, 0267
Radio Shack	.0027, 1064
Radix	.0064
Randex	.0064
Realistic	.0027, 0131, 0074, 0075, 0064, .0062, 0089, 0073
ReplayTV	.0641, 0643
Ricoh	.0061
Runco	.0066
STS	.0069
Samsung	.0072, 0267
Sanky	.0066, 0075
Sansui	.0068, 0506, 0027, 0094, 0236, 0298
Sanyo	.0074, 0073, 0131, 0267
Scott	.0211, 0148, 0070, 0072, 0239
Sears	.0081, 0132, 0064, 0069, 0027, .0062, 0073, 0074, 0131
Semp	.0072
Sharp	.0075, 0089
Shintom	.0099
Shogun	.0267
Singer	.0099
Sony	.0060, 0061, 0059, 0027, 0062
Sylvania	.0062, 0108, 0027, 0070
Symphonic	.0027
TMK	.0235, 0267
Tatung	.0068
Teac	.0027, 0068
Technics	.0062, 0189
Teknika	.0027, 0062, 0064
Thomas	.0027
Tivo	.0645
Toshiba	.0072, 0239, 0070
Totevision	.0064, 0267
Unitech	.0267
Vector	.0072
Vector Research	.0065
Video Concepts	.0072, 0088
Videosonic	.0267
Wards	.0062, 0087, 0089, 0027, 0074, 0239, .0267, 0069, 0075, 0099, 0108, 0176
White Westinghouse	.0305, 0236
XR-1000	.0099, 0027, 0062
Yamaha	.0065
Zenith	.0066, 0027, 0060, 0061, 0236, 0506

DVD Player

Harman/Kardon	.0609
JVC	.0650, 0585
Kenwood	.0561
Magnavox	.0530
Mitsubishi	.0548
Onkyo	.0654, 0530
Panasonic	.0517, 0659
Philips	.0530, 0566
Pioneer	.0598, 0552, 0659
Proscan	.0549
RCA	.0549
Samsung	.0600
Sharp	.0657
Sony	.0560
Technics	.0517
Theta Digita	.0598
Toshiba	.0530
Yamaha	.0517, 0572
Zenith	.0618, 0530



USING THE TV REMOTE'S VCR-SPECIFIC BUTTONS

To use the TV remote control with a VCR, first make certain it is set to control your VCR using one of the programming methods explained on pages 22 and 23.

- 1 Press the VCR mode button. Be sure the button light that appears is green.
- 2 Point the top of the remote toward the front of the VCR (remote sensor window) when pressing the buttons.

VCR Mode

Press to place the remote in a mode to control a VCR.

VCR Prog.

Many VCRs have an automatic programming function. If your VCR has this function, the universal code set will assign it to this function.

VCR Timer

Press to set up a timer recording in the VCR on-screen menu.

• (Record)


Hold the • (Record) and Play ► buttons down to begin a VCR recording.

Stop ■

Press to stop the motion of a tape in playback, rewind, and fast forward.

Rewind ◀◀

Press to rewind tapes. For some VCRs, the Stop button may have to be pressed first, then Rewind. In playback mode, hold down the button to view the picture moving rapidly in reverse.

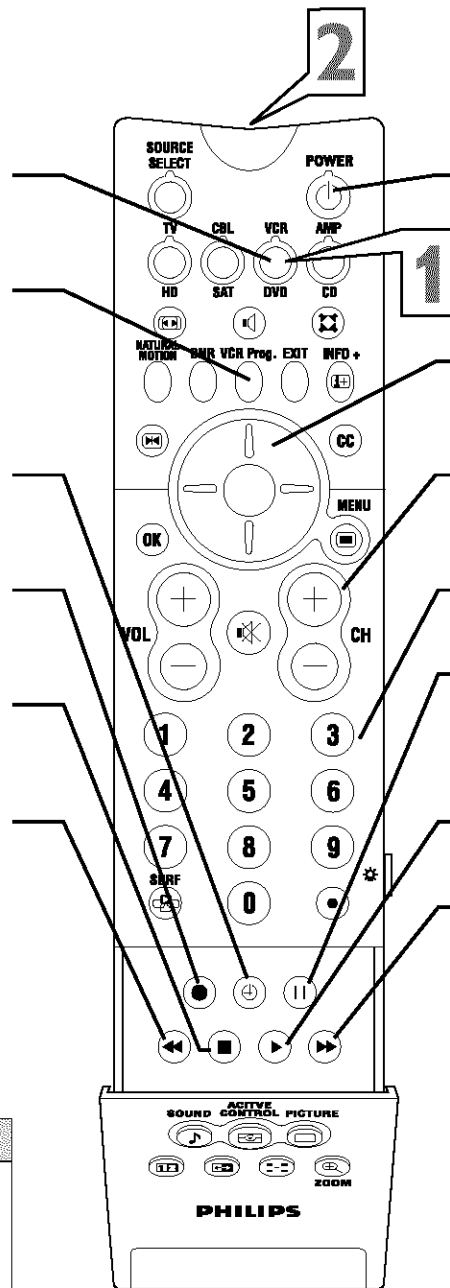

Power

Press to turn the VCR on and off.

Cursor Up/Down/Left/Right

Press to navigate the VCR on-screen customer controls.

CH (Channel Selection)

Press to scan up or down through the VCR channel numbers.

Digits (Numbers)

Press to directly select VCR channels.

Pause ||

Press to temporarily stop the tape during playback or recording. Press again to release Pause.

Play ►

Press to begin playback of a videotape.

Fast Forward ►►

Press to rapidly advance the tape. For some VCRs, you may need to press the Stop button first, then the Fast Forward button. In playback mode, hold the button down to view the picture moving rapidly in the forward direction.

HELPFUL HINT

Remember, the VCR buttons on the remote will not operate your VCR if those features are not found on your VCR remote control.

NOTE: All VCR functions (particularly Search, Rewind, and Fast Forward) will operate the same as with the remote control provided with the VCR.







Active Control™ Plus+ monitors incoming video signals from the Tuner, AV1, AV2, and Side inputs and adjusts key picture settings for best picture quality. In addition to measuring picture noise, this feature uses an ambient light sensor (located on the front of the TV) to adjust the picture settings according to viewing conditions in the room. When you choose to turn Active Control™ Plus+ on, you have the options Minimum, Medium, or Maximum. Maximum is the recommended option.

NOTE: Active Control™ Plus is not available for use with the AV3–AV6 input sources.

- 1** Press the Active Control™ button on the remote control to display the “Active Control” menu.
- 2** Press the Cursor Up or Down button to select one of the options: “Minimum,” “Medium,” “Maximum,” or “Off.”
- 3** Press the Cursor Right button to display the Active Control™ information window. You will notice how the values constantly change while Active Control™ is working.
- 4** Press the Menu button to remove the on-screen menu from the TV screen.

NOTE: The Active Control™ values shown in the information window will be based on the current AutoPicture™ setting: Personal, Rich, Natural, Soft, Multimedia, or Eco.

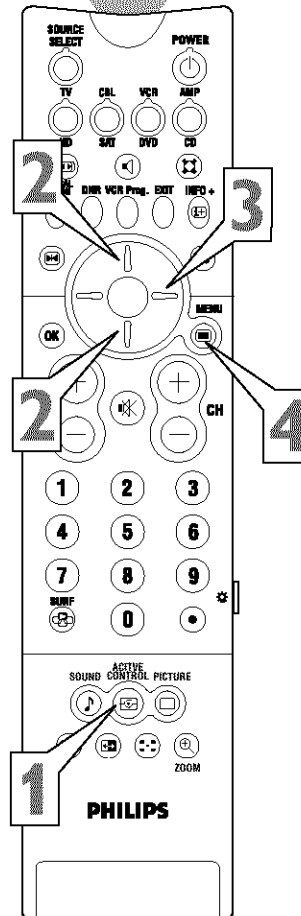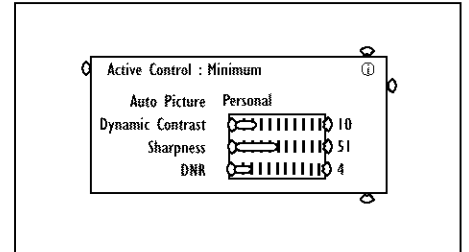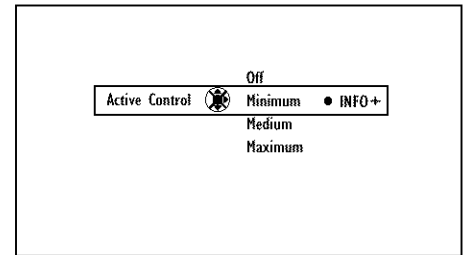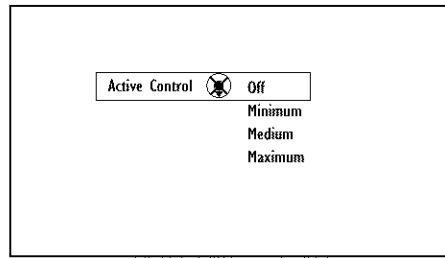

HELPFUL HINTS

Active Control™ Plus+ Settings

Minimum—Sharpness, Dynamic Contrast, and Noise Reduction are controlled automatically.

Medium—Sharpness, Color, Dynamic Contrast, and Noise Reduction are controlled automatically.





Maximum—Sharpness, Color, Dynamic Contrast, Noise Reduction, and Contrast are controlled automatically.



USING THE ZOOM CONTROL

This television offers a unique feature called Zoom. The Zoom Controls allows you to magnify the on-screen picture by 4, 9, or 16 times. The magnified picture can also be panned with the cursor buttons.

- 1** Press the ZOOM button on the remote control to display the Zoom menu.
- 2** Press the OK button repeatedly to select one of the zoom options (4x, 9x, or 16x).
- 3** Press and hold any of the Cursor buttons to pan the picture up, down, left or right.
- 4** Press the Zoom button to remove the Zoom menu from the TV screen and return the picture to its normal size.

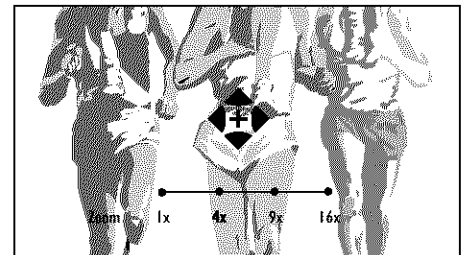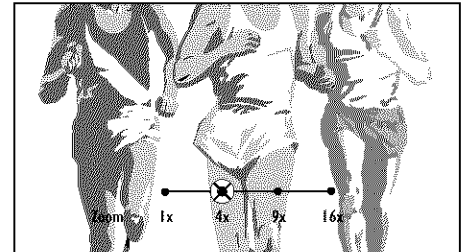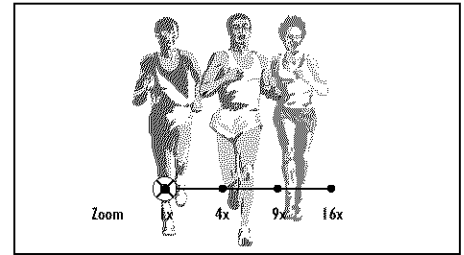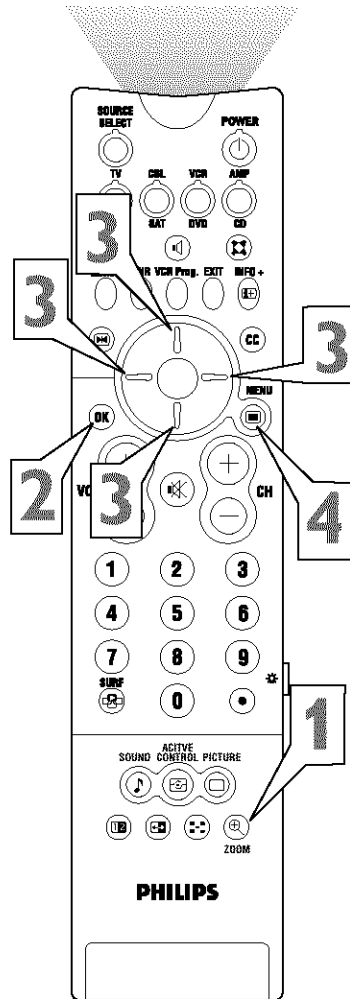

Adjusting/Setting the Picture Controls









To adjust your TV picture controls, select a channel and follow these steps.

- 1** Press the Menu button on the remote control to show the on-screen menu.
- 2** Press the Cursor Right button to select "Picture."
- 3** Press the Cursor Down button to select one of the picture adjustments: "Contrast," "Brightness," "Color," "Sharpness," "Color temperature," or "Tint."

NOTE: The menu will show only four items at a time, so you will need to continue scrolling with the Cursor Down button to adjust the color temperature and tint.

- 4** Press the Cursor Left or Cursor Right button to adjust the selected control. Or, if color temperature is chosen, press the Cursor Right button to choose from the options "Normal," "Warm," or "Cool."

- 5** Press the Menu button to remove the on-screen menu from the TV screen.

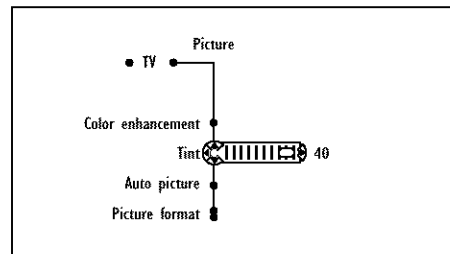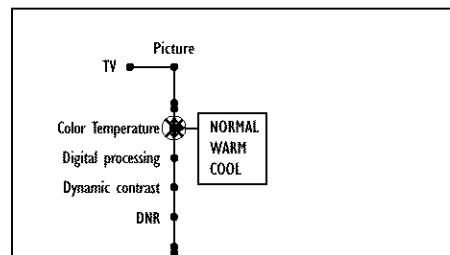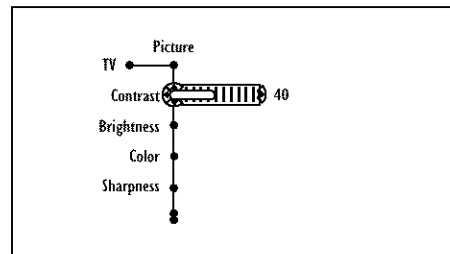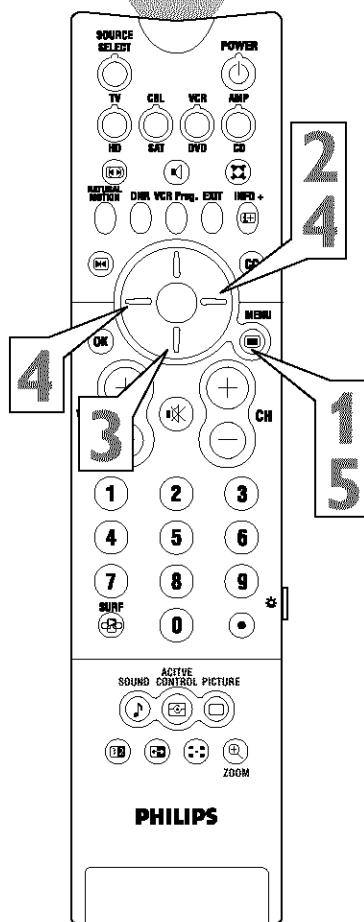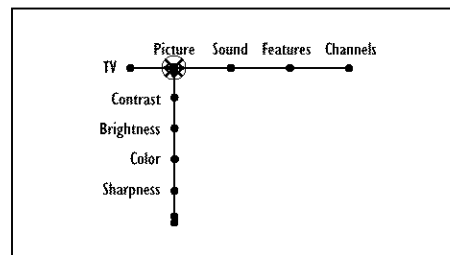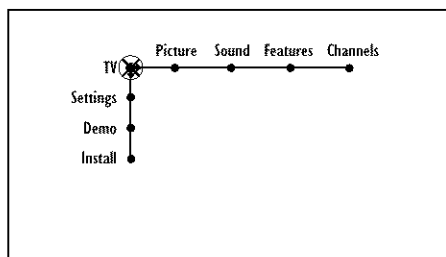

HELPFUL HINTS

- Remember, when the bar scale is centered, the control settings are at normal, mid-range levels.
- The tint control is not available with the AV5 and AV6 input sources.

Picture Control Settings

- **Brightness** adds or subtracts light from the darkest part of the picture.
- **Color** adds or eliminates color.
- **Sharpness** improves the detail in the picture.
- **Tint** adjusts the picture to obtain natural skin tones.
- **Color temperature** offers "Normal," "Cool," or "Warm" picture preferences.
- **Normal** keeps whites, white.
- **Cool** makes whites, bluish.
- **Warm** makes whites, reddish.



Selecting a Digital Processing Option

The Digital Processing control gives you a choice of different picture scanning modes.

Progressive Scan doubles the number of picture lines, eliminating line flicker and providing a jitter-free picture.







Movie Plus provides motion compensation to prevent bands of light (a halo effect) that may occur around moving images in the picture.

Digital Natural Motion offers a razor-sharp reproduction of movement and motion. Its unique and highly advanced processing calculates motion trajectories of moving picture elements. It corrects jerky movement from both studio programs or movie material.


- 1** Press the Menu button on the remote to display the on-screen menu.
- 2** Press the Cursor Right button to select "Picture."
- 3** Press the Cursor Down button repeatedly until the "Digital processing" control is selected.
- 4** Press the Cursor Right button to enter the digital processing submenu.
- 5** Press the Cursor Up or Down button to select Progressive Scan, Movie Plus, or Digital Natural Motion.
- 6** Press the Menu button to remove the on-screen menu from the TV screen.

HELPFUL HINT


The Digital Processing control is not available for use with the AV3, AV4, AV5, or AV6 input sources.

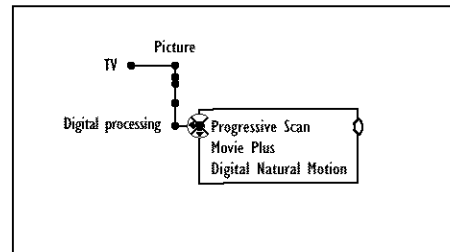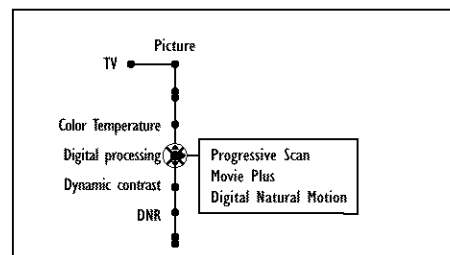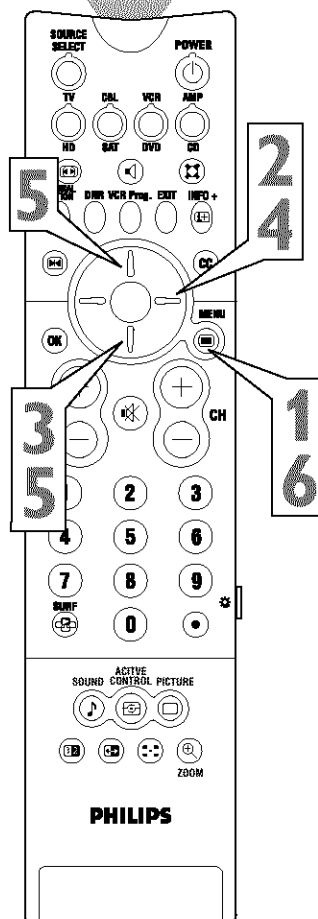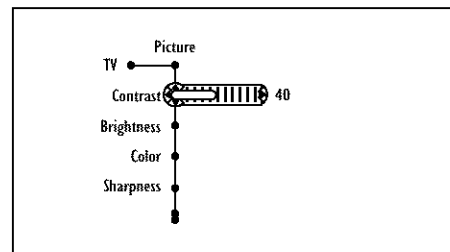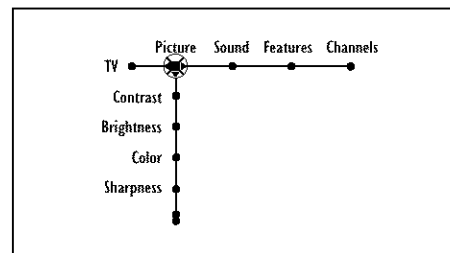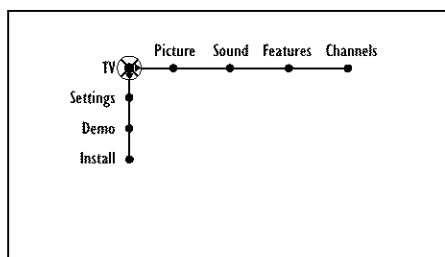

OR

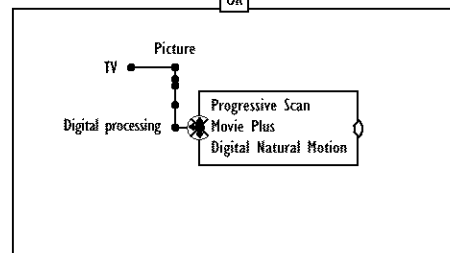

OR

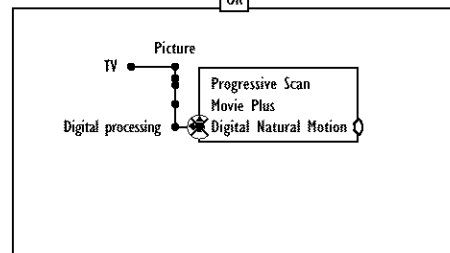

Selecting a Dynamic Contrast Option









The Dynamic Contrast control allows you to sharpen the picture quality by making dark portions of the picture darker and light portions of the picture more noticeable. Normally, you will probably want to select Medium. In certain circumstances, however, you may prefer Minimum or Maximum.

- 1 Press the Menu button on the remote to display the on-screen menu.
- 2 Press the Cursor Right button to select Picture.
- 3 Press the Cursor Down button repeatedly until the "Dynamic contrast" control is selected.
- 4 Press the Cursor Right button to enter the Dynamic Contrast submenu.
- 5 Press the Cursor Up or Down button to select one of the Dynamic Contrast options: "Off," "Minimum," "Medium," or "Maximum."
- 6 Press the Menu button to remove the on-screen menu from the TV screen.

HELPFUL HINT

The Dynamic Contrast control is not available for use with input sources AV3–AV6.


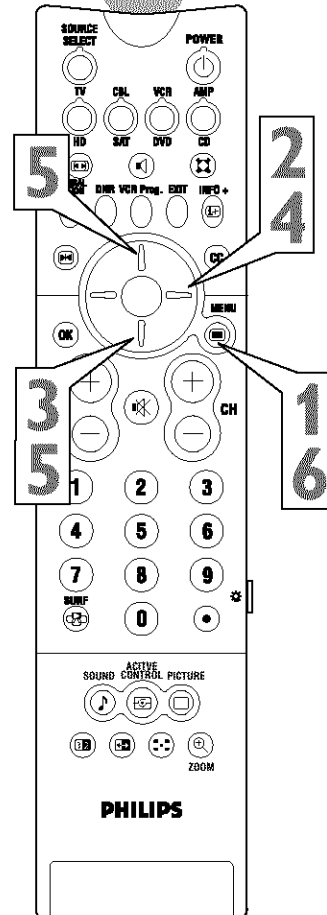
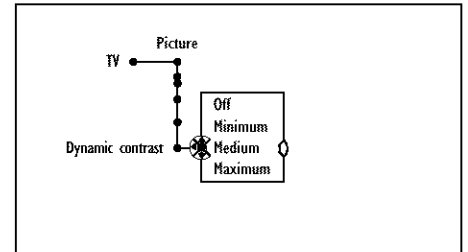
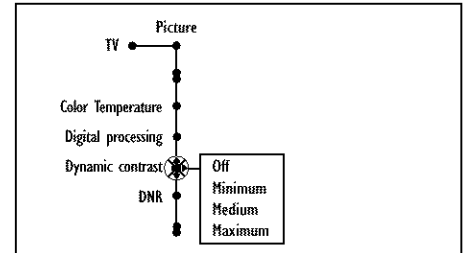
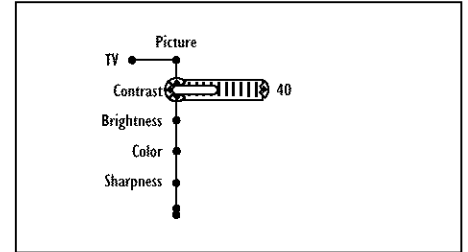
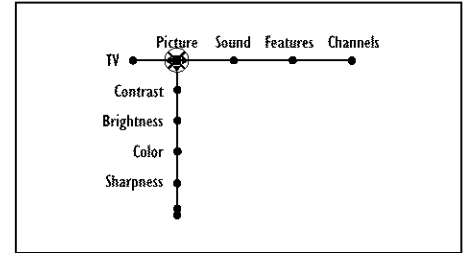
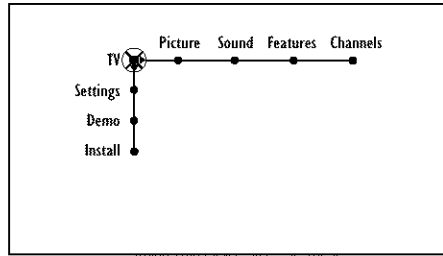




Selecting a DNR (Dynamic Noise Reduction) Option

For many reasons, one of which is poor cable reception, the picture can sometimes appear slightly speckled (an indication of signal noise in the picture). The DNR (Dynamic Noise Reduction) control can help eliminate this type of interference and improve the quality of the picture.

- 1** Press the Menu button on the remote to display the on-screen menu.
- 2** Press the Cursor Right button to select "Picture."
- 3** Press the Cursor Down button repeatedly until the DNR control is selected.
- 4** Press the Cursor Right button to enter the DNR submenu.
- 5** Press the Cursor Up or Down button to select one of the DNR options: Off, Minimum, Medium, or Maximum.
- 6** Press the Menu button to remove the on-screen menu from the TV screen.
- 7** You can also access the DNR control by simply pressing the DNR button on the remote control.

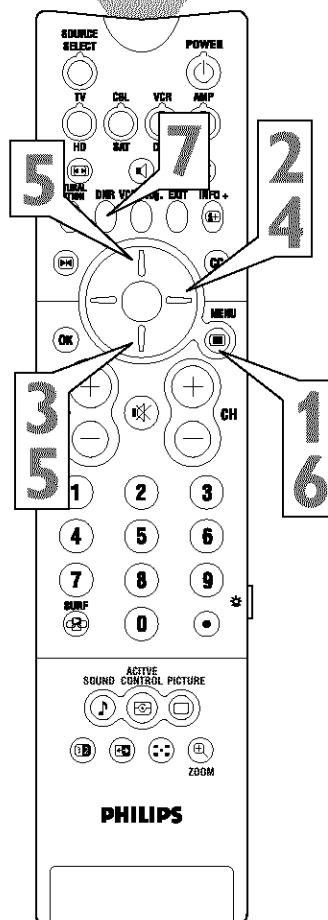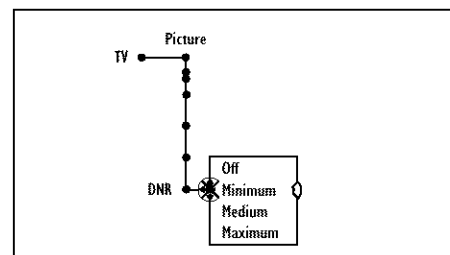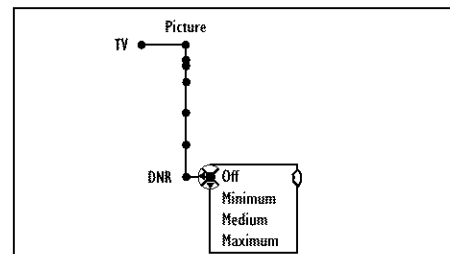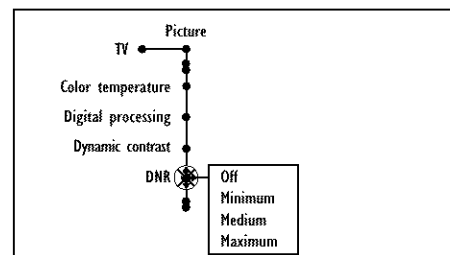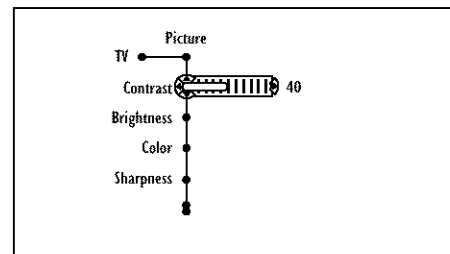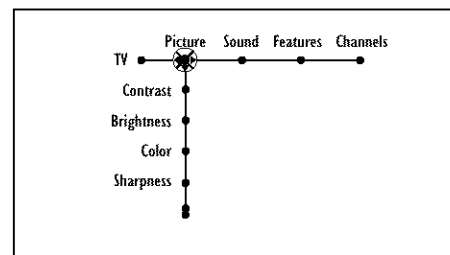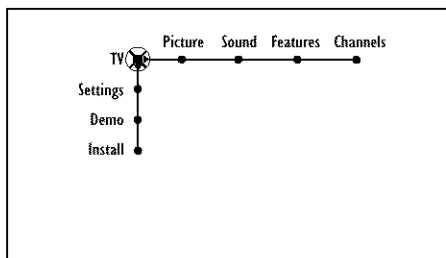

HELPFUL HINT

DNR is not available for use with input sources AV3–AV6.

Turning on Color Enhancement



The Color Enhancement control can dramatically improve the picture quality of pictures with a high saturation of color. This control works in four ways:







Dynamic Blue Stretch corrects the white colors toward a more bluish-colored white without changing the other colors. Improves the sharpness of the picture.

Green Enhancement offers a more saturated green color in case of low green broadcasts, giving landscapes a fresher and brighter look.

Color-dependent Sharpness improves the sharpness of the picture through the color information. Gives the picture more details, especially in red colors.

Skin-tone Correction adjusts for over saturation of red that often appears in skin tones.

- 1** Press the Menu button on the remote to display the on-screen menu.
- 2** Press the Cursor Right button to select "Picture."
- 3** Press the Cursor Down button repeatedly until the "Color enhancement" control is selected.
- 4** Press the Cursor Right button to turn the color enhancement control on or off.
- 5** Press the Menu button to remove the on-screen menu from the TV screen.

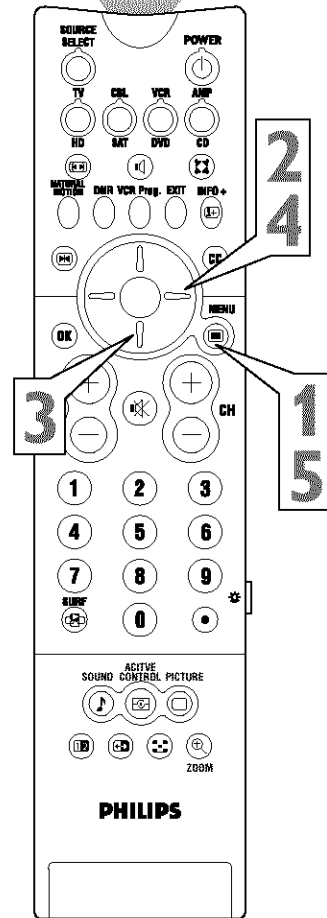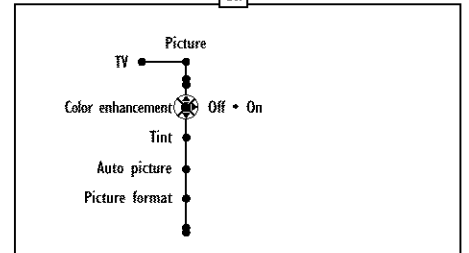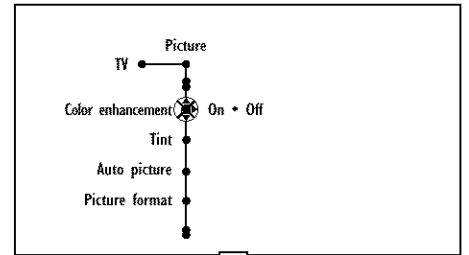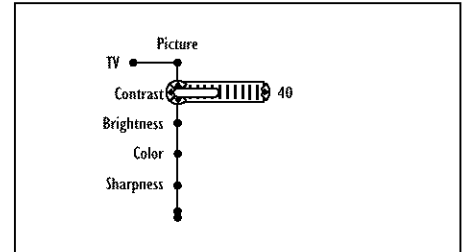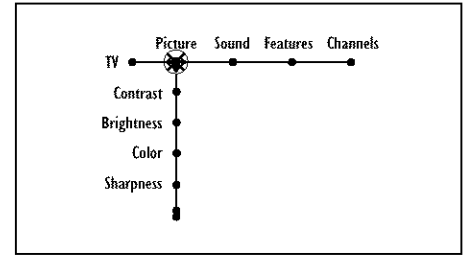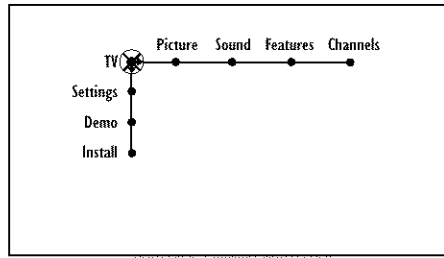

HELPFUL HINT








The color enhancement control is not available for use with inputs AV3–AV6.



Selecting an AutoPicture™ Option

Whether you're watching a movie or playing a video game, your TV has automatic video control settings to match your current program source or content. AutoPicture™ quickly resets your TV's video controls for a number of different types of programs and viewing conditions that you may have in your home. The Personal AutoPicture™ settings are the same as the Picture control adjustments made within the on-screen menu.

- 1** Press the Menu button on the remote to display the on-screen menu.
- 2** Press the Cursor Right button to select "Picture."
- 3** Press the Cursor Down button repeatedly until the "Auto picture" control is selected.
- 4** Press the Cursor Right button to enter the AutoPicture™ submenu.
- 5** Press the Cursor Down or Up button to select one of the AutoPicture™ options: "Personal," "Rich," "Natural," "Soft," "Multimedia," or "Eco."
- 6** Press the Menu button to remove the on-screen menu from the TV screen.
- 7** You can also select AutoPicture™ settings by simply pressing the Picture button on the remote control.

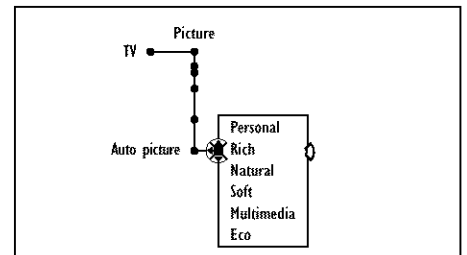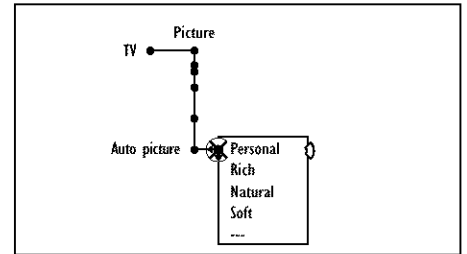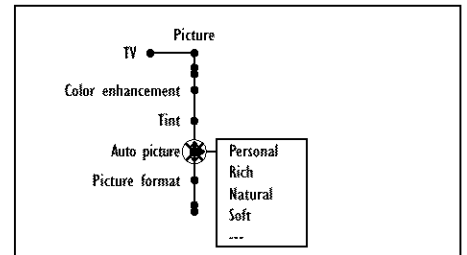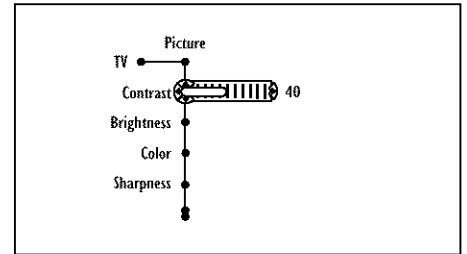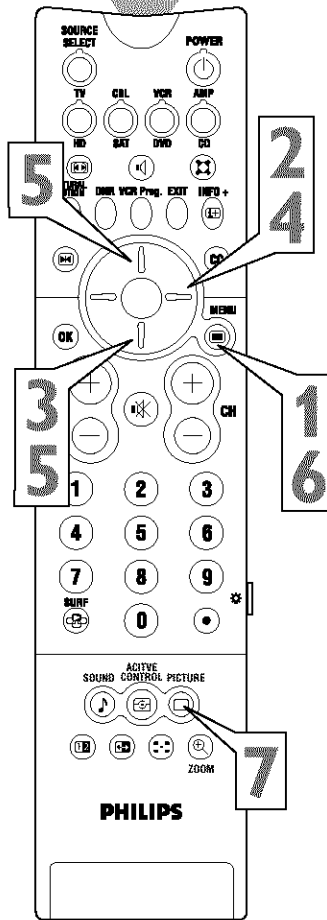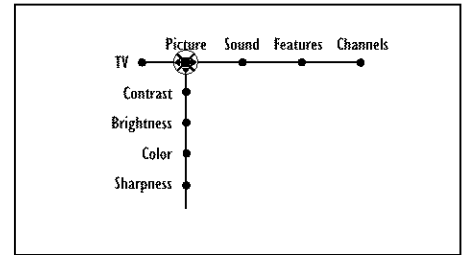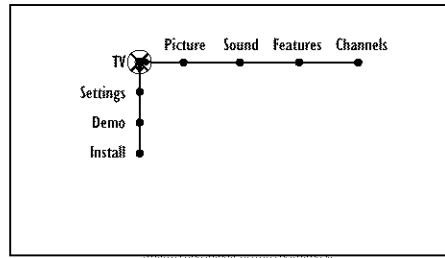

HELPFUL HINTS

AutoPicture™ Options

Personal settings are based on your personal choice or viewer control preferences.

Rich emphasizes very vibrant colors. (This is a good choice when AV mode is used in a brightly lighted room.)

Natural sets picture controls at midlevel settings for consistent viewing conditions.

Soft emphasizes warm colors. (This is a good choice for dimly lighted room. It gives a cinema-like effect when the light is switched off.)

Multimedia emphasizes soft colors. (This is a good choice for playing computer games, for example.)

ECO reduces brightness and contrast settings to low levels as a power consumption saving measure.

NOTE: The Personal option shows the personal settings made in the Picture submenu. When you select one of the preset AutoPicture™ options, those settings become the Personal settings.

Selecting a Picture Format Option



Your TV's wide screen (16:9 aspect ratio) delivers a home-cinema experience that isn't possible with a conventional (4:3 aspect ratio) set. The 16:9 format of high-definition (HD) programs and other widescreen-format video sources appear more lifelike, dramatic, and theatrical. Black or gray bars are diminished or eliminated. As the television industry moves toward the high-definition format standard and more HD broadcasts become available, you will be able to see the broadcasts as they were intended—in 16:9 format.

For flexibility in viewing conventional 4:3-format video sources on your TV's wide screen, you have the options Automatic, "Super zoom," "Panoramic," "4:3," "Movie expand 14:9," "Movie expand 16:9," "16:9 subtitle," or "Wide screen."

NOTE: The Automatic option is disabled for AV3–AV6.


Page 36 explains how to select a picture format option.

✓ CHECK IT OUT

Inputs AV3–AV6 allow horizontal and vertical picture panning using the Cursor Left, Right, Up, and Down buttons. The Side input allows vertical picture panning; left and right panning with the Side input is possible when the input has been labeled "Game." See pages 20 and 21 for details on side panel connections and source labeling.

HELPFUL HINT

The term *aspect ratio* refers to the relationship between the width and height of a TV screen. Historically, TV screen width has been 33 percent greater than its height, amounting to a 4:3 aspect ratio. The width of your widescreen TV, however, is nearly 80 percent greater than its height, which means its aspect ratio is 16:9. This screen corresponds well with the tendency of the eyes to feel more comfortable with fields of view and action planes that are horizontally oriented. The wide screen is also proportionally truer to the formats in which movies are filmed and presented in theaters.

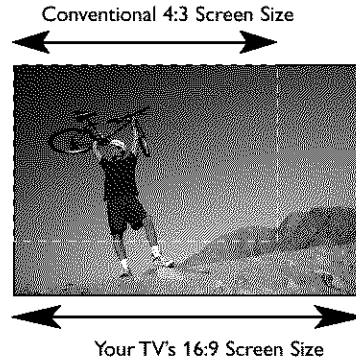


Your TV's Picture Format Options

Automatic (not depicted)
Makes the picture fill the screen as much as possible when the presence of black or gray bars is detected.



Panoramic
Evenly stretches the edges of the picture to fill the TV's wide screen.

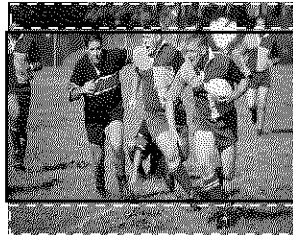

Super zoom
Removes the black or gray bars on the sides of a 4:3-format picture with minimal distortion. Part of the top and bottom portions of the picture are excluded from the screen.



Movie expand 14:9
Expands the picture to 14:9 movie aspect ratio. Part of the top and bottom portions of the picture are excluded from the screen. Black or gray bars are shown at the left and right sides.



4:3
Displays a conventional 4:3 picture without change. Black or gray bars will show at the left and right sides.



16:9 subtitle
Zooms the picture for a full view of subtitles or other information displayed at the bottom of the picture. Part of the top portion of the picture is excluded from the screen.



Movie expand 16:9
Alters the image both horizontally (stretched) and vertically (cropped) to fill the TV's wide screen. Part of the top and bottom portions of the picture will be excluded from the screen.



Wide screen
Evenly stretches the width of the picture to fill the screen.









Selecting a Picture Format Option

Choose a picture format size to match the type of program you're watching. Select the normal 4:3 aspect ratio or a variety of widescreen formats.

- 1** Press the Menu button on the remote to display the on-screen menu.
- 2** Press the Cursor Right button to select "Picture."
- 3** Press the Cursor Down button repeatedly until the "Picture format" control is selected.
- 4** Press the Cursor Right button to enter the picture-format submenu.
- 5** Press the Cursor Down button to select one of the seven screen formats: "Automatic," "Super zoom," "Panoramic," "4:3," "Movie expand 14:9," "Movie expand 16:9," "16:9 subtitle," or "Wide screen."

The Automatic option senses the presence of black or gray bars around the picture and zooms the picture to reduce or eliminate the bars.

NOTE: The Automatic option is not available with AV5 (computer) connections.
- 6** Press the Menu button to remove the on-screen menu from the TV screen.
- 7** You can also select a picture format simply by pressing the Picture Format button on the remote control.

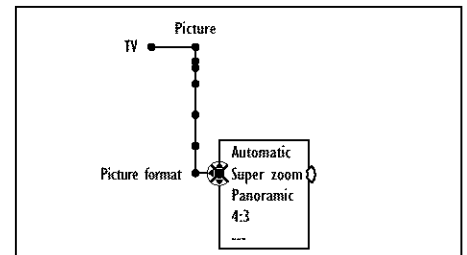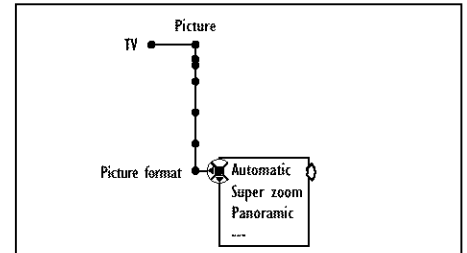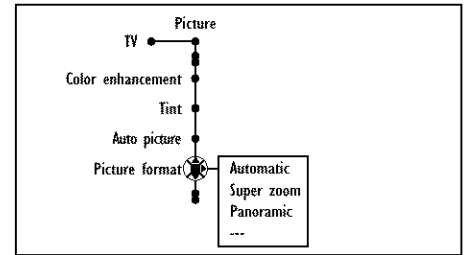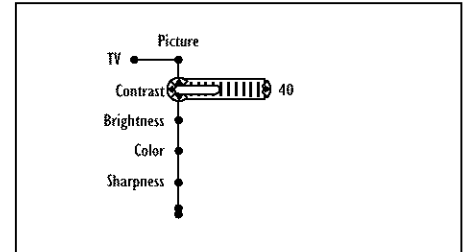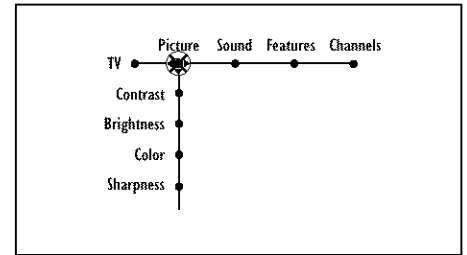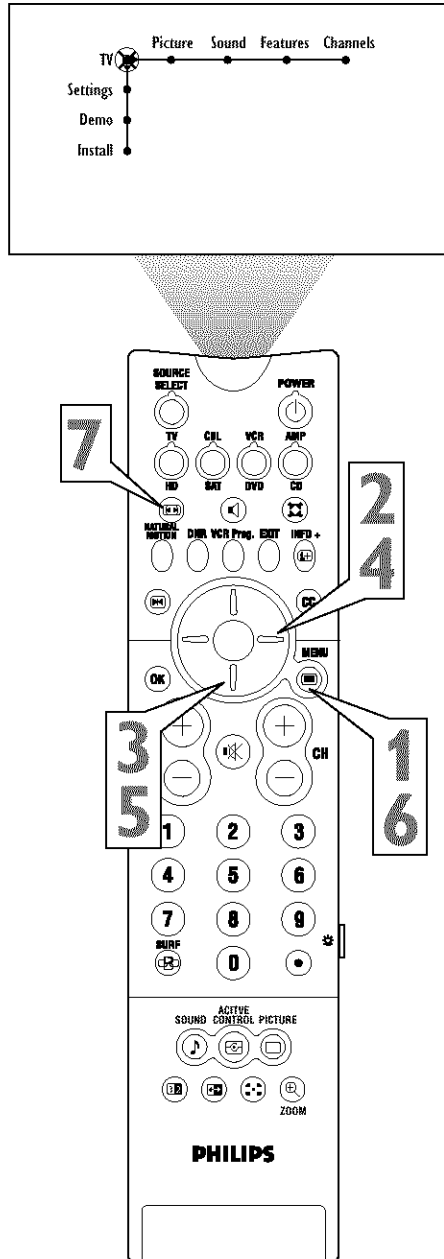

Adjusting the TV and Headphone Volume



Besides the normal volume level control, your TV also has a headphone volume control. This control can be adjusted when using headphones without having to adjust the main volume control for the TV cabinet speakers.

To control the television volume:

- 1** Press the Volume + button on the remote control to increase the television volume level.
- 2** Press the Volume – button on the remote control to decrease the television volume level.


NOTES:

- The Volume scroll will not appear on screen if the on-screen display is set to “Minimum.” See page 63 for details.
- The Volume level can also be adjusted within the on-screen menu. Select the Sound menu and cursor down to the Volume control. Use the Cursor Left and Right buttons to adjust.





To control the Headphone volume:

- 3** Press the Menu button on the remote control to display the on-screen menu.
- 4** Press the Cursor Right button to select “Sound.”
- 5** Press the Cursor Down button repeatedly until the “Headphone volume” control is selected.
- 6** Press the Cursor Right button to increase the headphone volume level.
- 7** Press the Cursor Left button to decrease the headphone volume level.
- 8** Press the Menu button on the remote control to remove the on-screen menu from the TV screen.


Television Volume

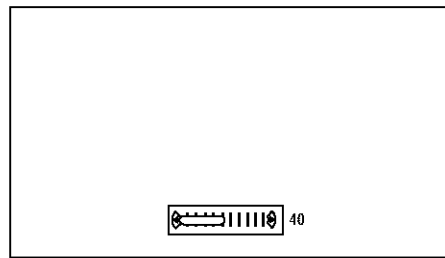

Headphone Volume

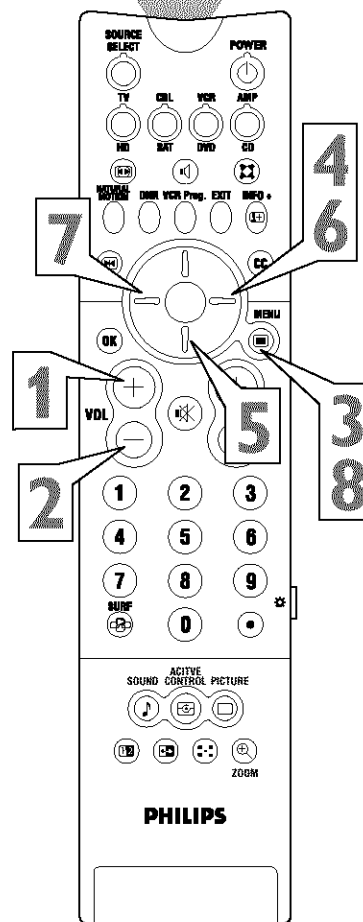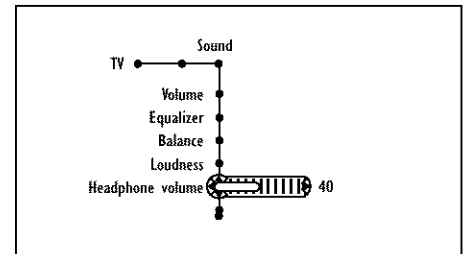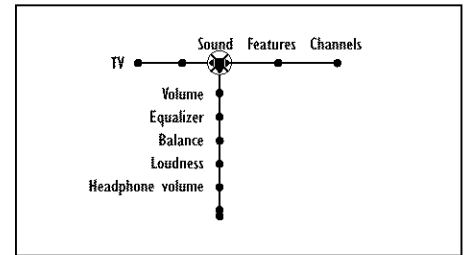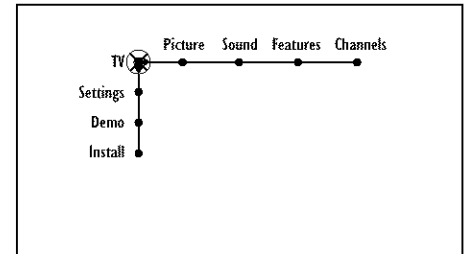

Plug your headphones into the headphone (3.5mm) output jack in the TV's Side panel.

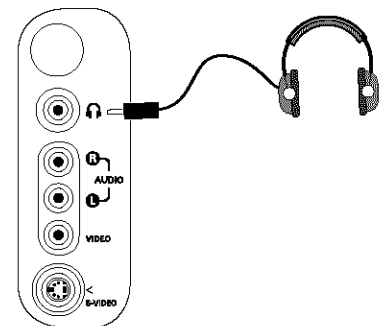











Selecting a TV Equalizer Option

The Equalizer control will change the dynamics of the sound being heard through the TV. You can adjust the settings for the Personal Equalizer option. The other options have been preset at the factory and cannot be changed.

- 1** Press the Menu button on the remote to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly to select "Sound."
- 3** Press the Cursor Down button repeatedly until the "Equalizer" control is selected.
- 4** Press the Cursor Right button to enter the equalizer submenu. Continue to press the Cursor Right button to select one of the options: "Speech," "Music," "Movie," "Multimedia," or "Personal."
- 5** If you select the Personal option and want to make adjustments, press the Cursor Down button to select an adjustment, then press the Cursor Left or Right button to adjust the slider control to the desired position.

NOTE: If you attempt to change the settings for the factory preset options Speech, Music, Movie, or Multimedia, the Equalizer control will default to the Personal option.

- 6** Press the Menu button to remove the on-screen menu from the TV screen.

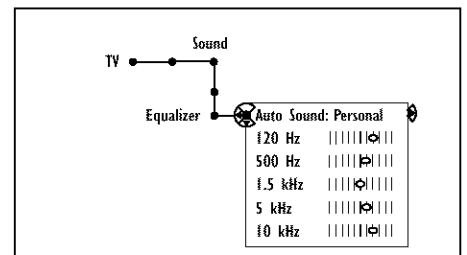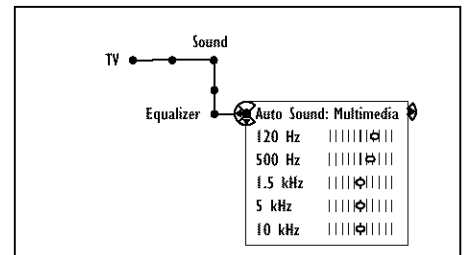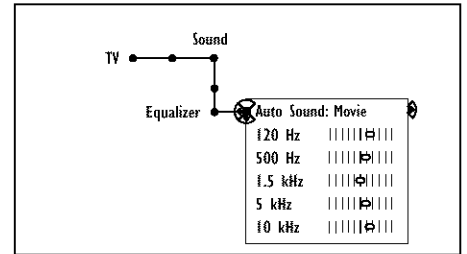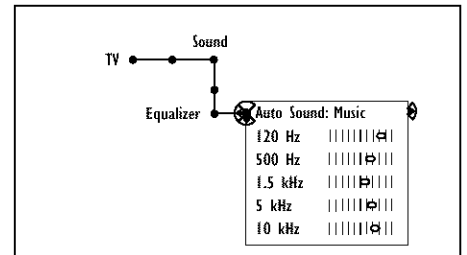
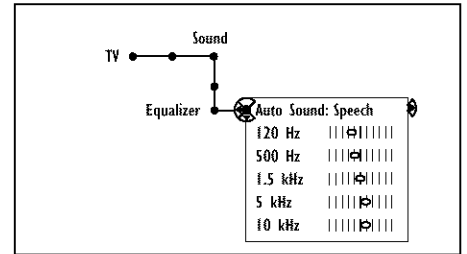
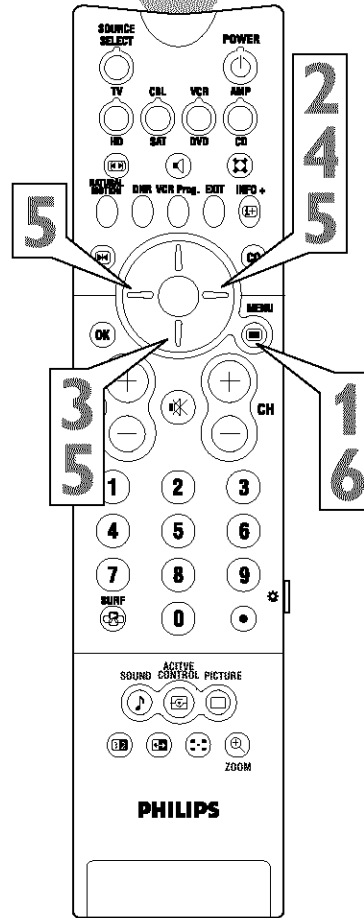
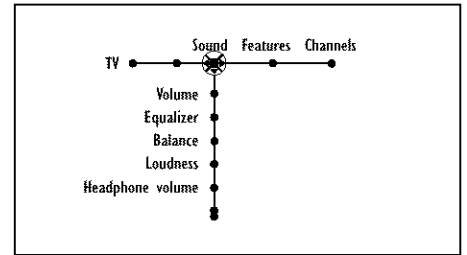
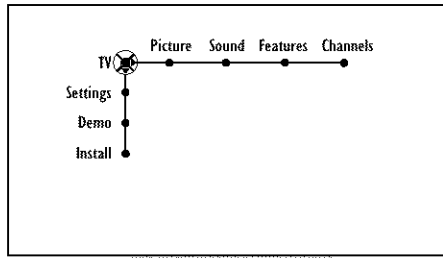


Adjusting TV Speaker Balance



You can adjust the balance of the TV speaker sound.

- 1 Press the Menu button on the remote to display the on-screen menu.
- 2 Press the Cursor Right button repeatedly to select "Sound."
- 3 Press the Cursor Down button repeatedly until the "Balance" control is selected.
- 4 Press the Cursor Right or Left button to adjust speaker balance.
- 5 Press the Menu button to remove the on-screen menu from the TV screen.

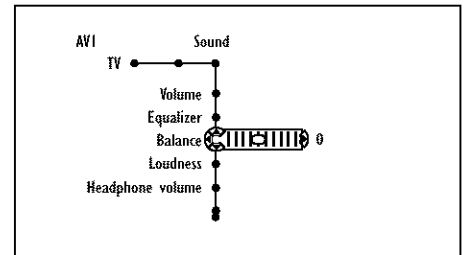
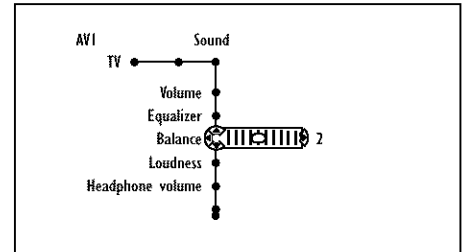
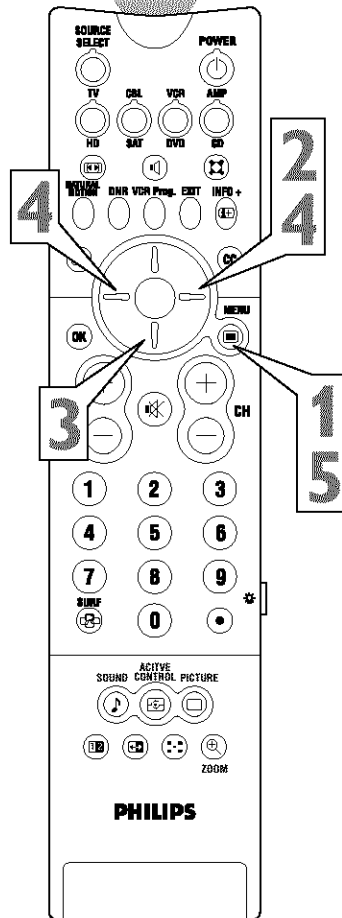
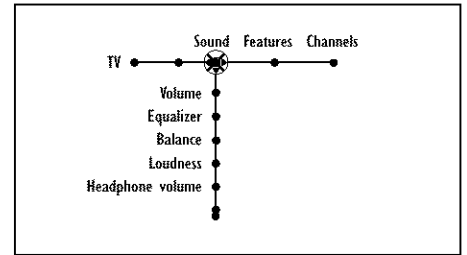
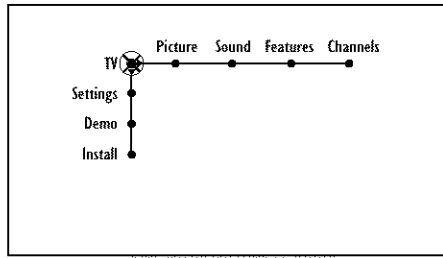




Turning Loudness on or off

Turning the Loudness control on provides a volume-dependent bass-boost effect to the speakers. Follow the steps here to turn the Loudness control on.

- 1** Press the Menu button on the remote to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly to select "Sound."
- 3** Press the Cursor Down button repeatedly until the "Loudness" control is selected.
- 4** Press the Cursor Right to toggle loudness on or off.
- 5** Press the Menu button to remove the on-screen menu from the TV screen.



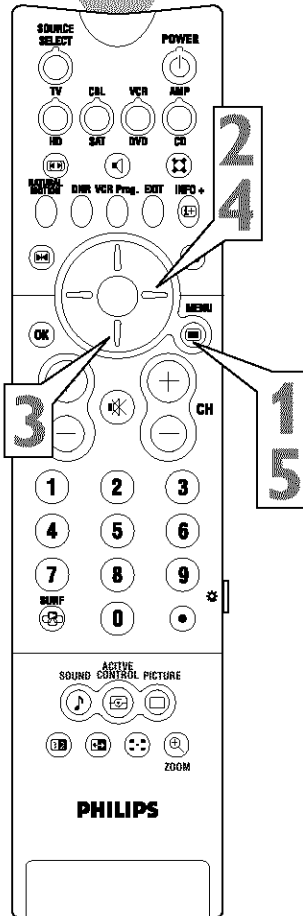
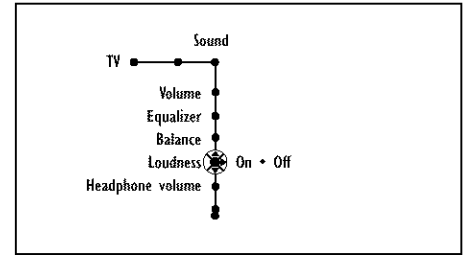
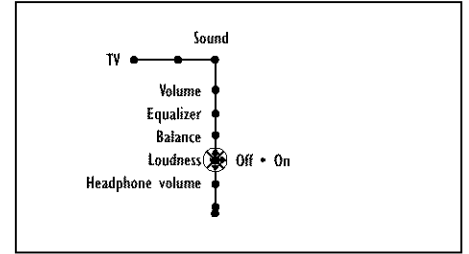
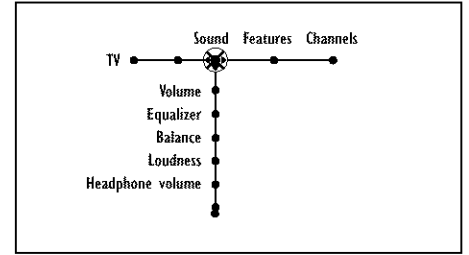
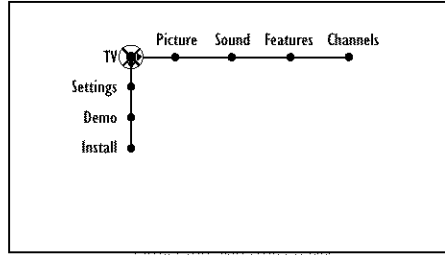


Selecting a Sound Mode Option



The Sound Mode control allows you to place the TV sound into either Incredible Surround™ or Dolby* Virtual mode. The steps below explain how to select one of those options.

- 1** Press the Menu button on the remote to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly to select "Sound."
- 3** Press the Cursor Down button repeatedly until the "Sound mode" control is selected.
- 4** Press the Cursor Right button to enter the sound mode submenu.
- 5** Press the Cursor Up or Down button to select one of modes, either "Incr. Surround" or "Dolby Virtual."
Incredible Surround enhances stereo programs by making the sound broader and fuller.
Dolby Virtual creates a virtualized surround-sound experience from two speakers using Dolby Pro Logic*. Dolby Virtual retains all the original multichannel audio information and provides the listener with the sensation of being surrounded by additional speakers.
- 6** When finished, press the Menu button to remove the on-screen menu from the TV screen.
- 7** You can also select a sound mode option simply by pressing the Surround button on the remote control.

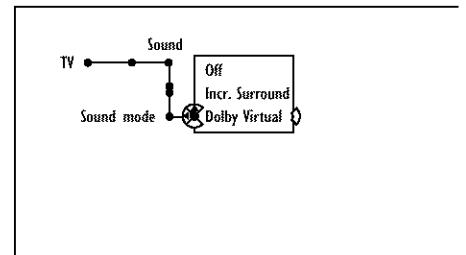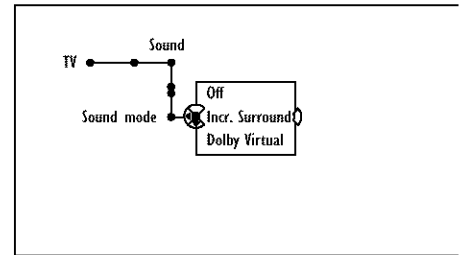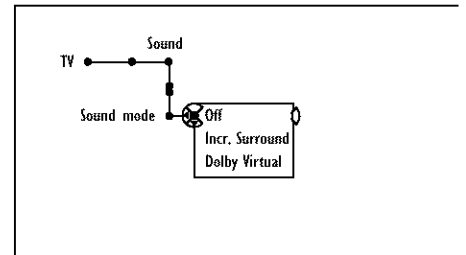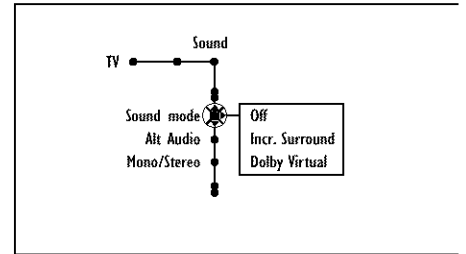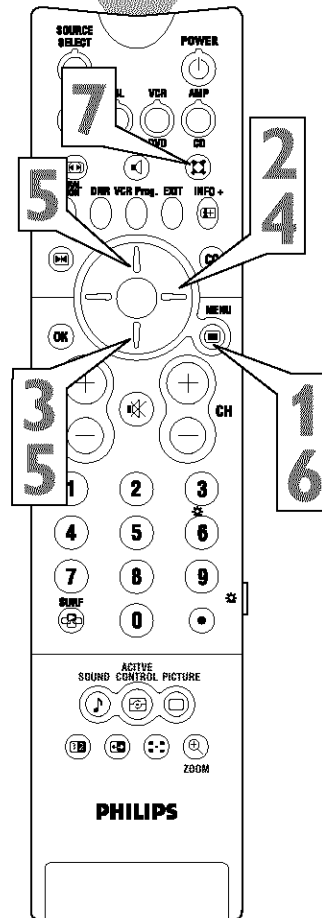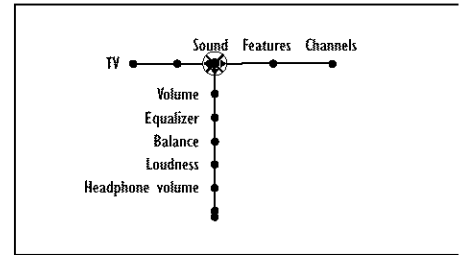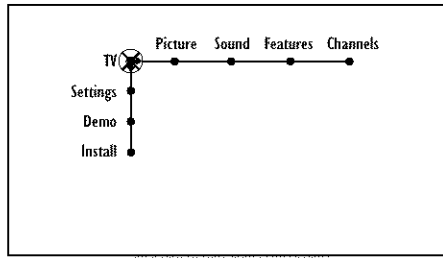

*Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.

Incredible Surround is a trademark of Philips Consumer Electronics. Copyright 2003 Philips Consumer Electronics. All rights reserved.








Using Alternate Audio (SAP)

For broadcasts that contain SAP (Secondary Audio Program) information, the Alt Audio Control can be set to SAP. Sent as a third audio channel, SAP is an additional part of the stereo broadcast system that can be heard apart from the current TV program sound. TV stations are free to use SAP for any number of purposes.

If an SAP signal is not present with a selected program, the “Alt Audio” option in the TV’s on-screen menu cannot be selected and will appear grayed out.

If SAP is available on the tuned channel:

- 1** Press the Menu button on the remote to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly to select “Sound.”
- 3** Press the Cursor Down button repeatedly until the Alt Audio control is selected.
- 4** Press the Cursor Right button to toggle and select either “Main” or “SAP.”
- 5** Press the Menu button to remove the on-screen menu from the TV screen.
- 6** You can also select SAP by simply pressing the Alternate Audio button on the remote control.

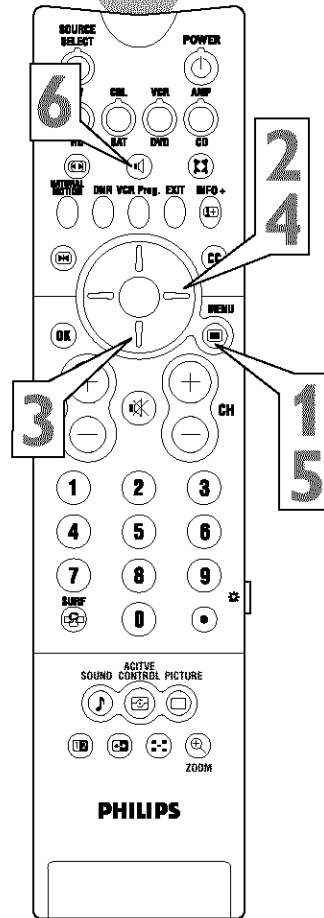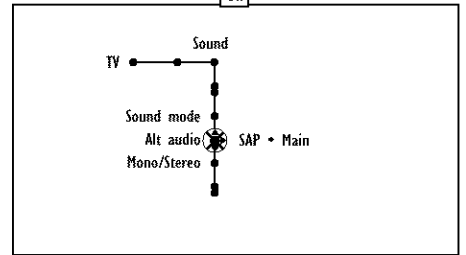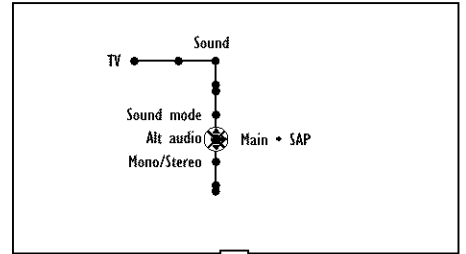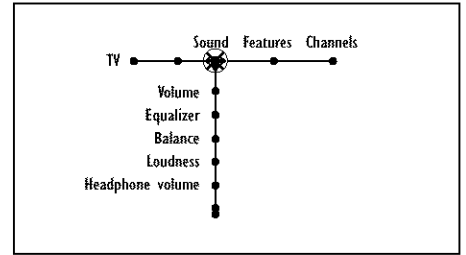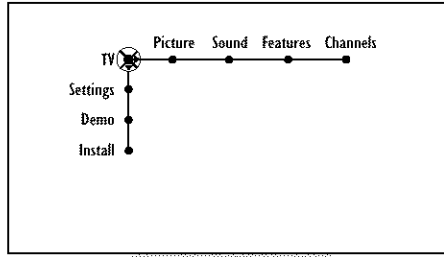

Setting the TV for Stereo Programming






Your TV can output stereo sound. It has both an amplifier and twin speakers through which the stereo sound can be heard.



- 1 Press the Menu button on the remote to display the on-screen menu.
- 2 Press the Cursor Right button repeatedly to select "Sound."
- 3 Press the Cursor Down button repeatedly until the "Mono/Stereo" control is selected.
- 4 Press the Cursor Right button to toggle and select either Mono or Stereo.

NOTE: If the signal being received is in mono, it cannot be set to Stereo. If, however, the signal is being received in Stereo, the TV can be placed in the Mono mode. (If you select the Mono option, remember to return the Mono/Stereo control back to Stereo when using the TV with stereo programming.)

- 5 Press the Menu button to remove the on-screen menu from the TV screen.

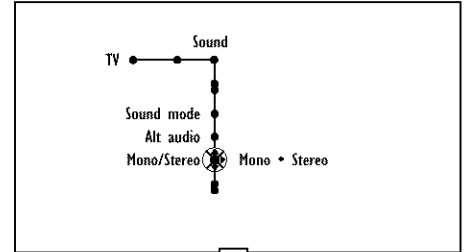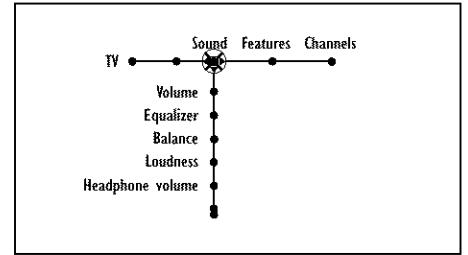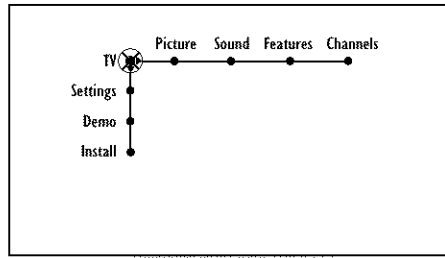

OR




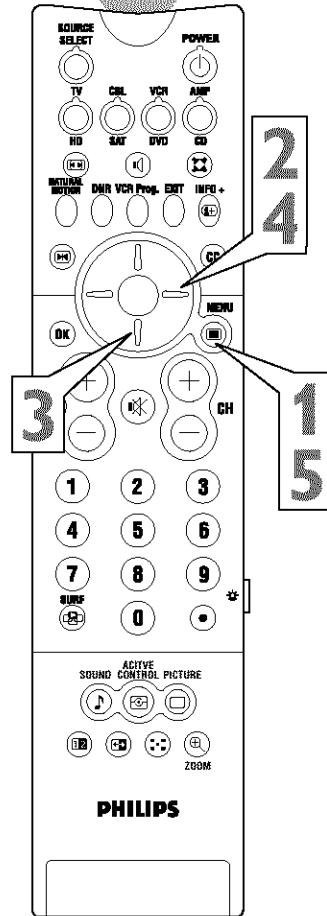
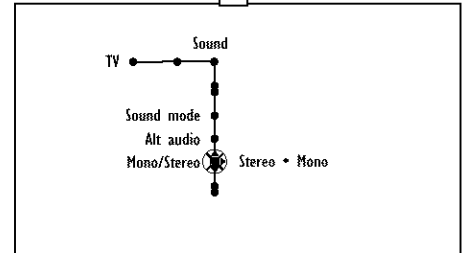




Turning the AVL (Audio Volume Leveler) on or off

You may have noticed the peaks and valleys of sound that occur between program changes or at commercial breaks. The volume levels often vary considerably. By turning on the AVL (Audio Volume Leveler) control, you can make your TV produce a more consistent volume level. Follow the steps below to turn AVL on.

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly to select "Sound."
- 3** Press the Cursor Down button repeatedly until AVL is highlighted.
- 4** Press the Cursor Right button to toggle the control on or off.
- 5** Press the Menu button to remove the menu from the TV screen.

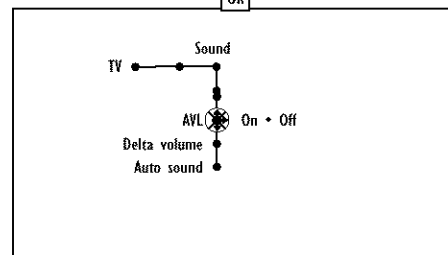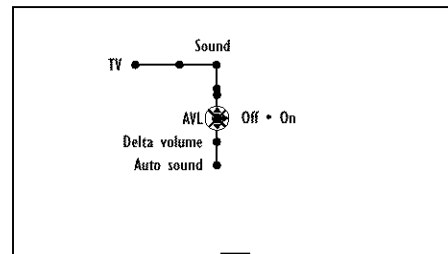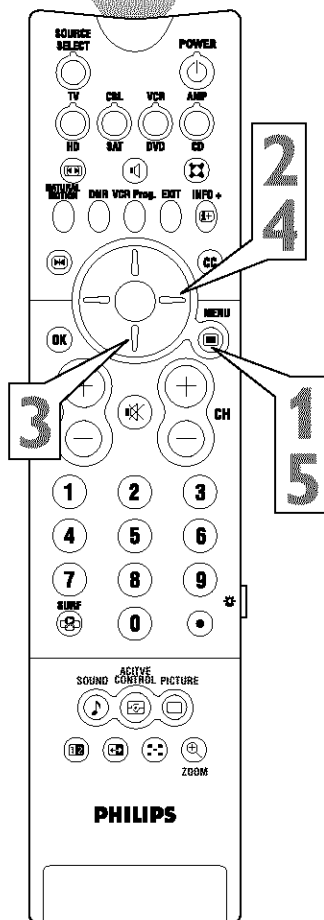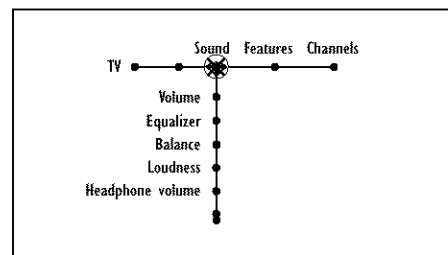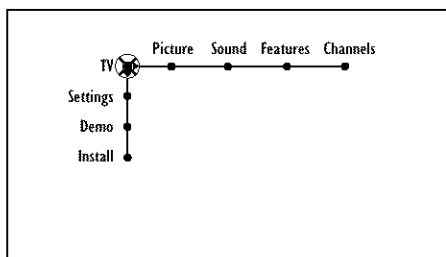

Adjusting the Delta Volume







The volume level coming from channel to channel and broadcast to broadcast can vary widely. The Delta Volume control will allow the volume to be increased for channels with weaker audio signals while allowing other channels with stronger signals to be reduced. When the Delta Volume control is adjusted or changed, it will affect only the currently tuned channel. The TV will store the setting for that channel in its memory and remember it when the channel is tuned again.

NOTE: The Delta Volume control does not work with the headphones.

- 1 Press the CH + or – button on the remote control to tune to a specific channel.
- 2 Press the Menu button on the remote control to show the on-screen menu.
- 3 Press the Cursor Right button repeatedly to select “Sound.”
- 4 Press the Cursor Down button repeatedly until “Delta volume” is highlighted.
- 5 Press the Cursor Left button to decrease the overall volume, or press the Cursor Right button to increase the overall volume for the tuned channel.

Repeat the steps above to adjust the delta volume for additional channels.

- 6 Press the Menu button to remove the on-screen menu from the TV screen.


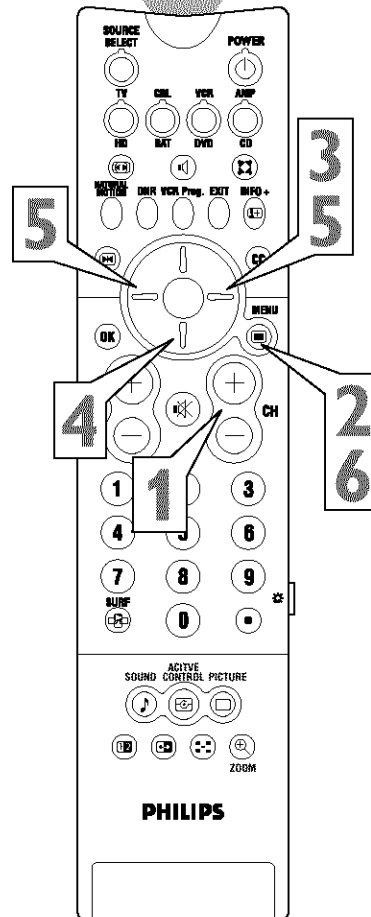
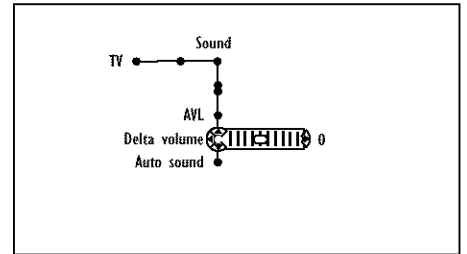
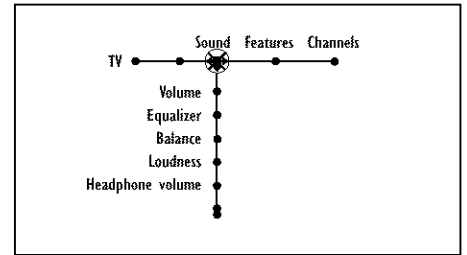
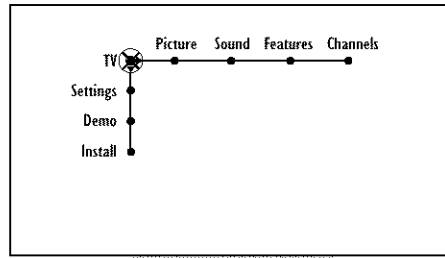




Selecting an AutoSound™ Option

AutoSound™ allows you to select from four factory-set controls and a personal control. The personal control consists of settings you adjust through the on-screen Sound menu. The four factory-set controls—Speech, Music, Movie, or Multimedia—enable you to tailor the TV sound to enhance the particular program you are watching. Follow these steps to select any of the options.

- 1** Press the Menu button on the remote to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly to select “Sound.”
- 3** Press the Cursor Down button repeatedly until the “Auto sound” control is selected.
- 4** Press the Cursor Right button to enter the AutoSound™ submenu.
- 5** Press the Cursor Up or Down button to select an option: “Speech,” “Music,” “Movies,” “Multimedia,” or “Personal.”
- 6** Press the Menu button to remove the on-screen menu from the TV screen.
- 7** You can also select AutoSound™ settings by simply pressing the Sound button on the remote control.

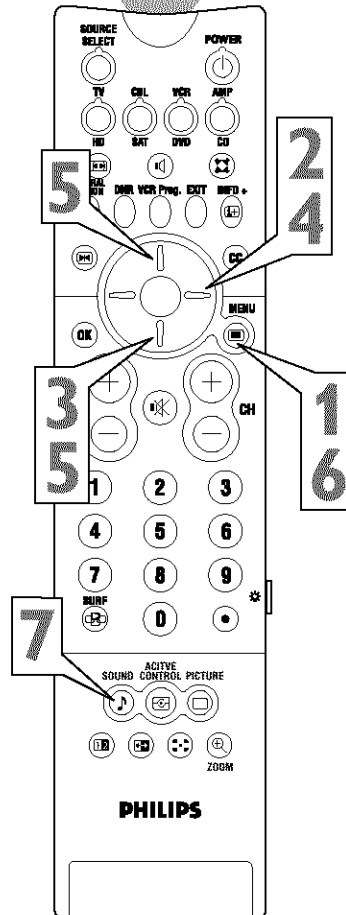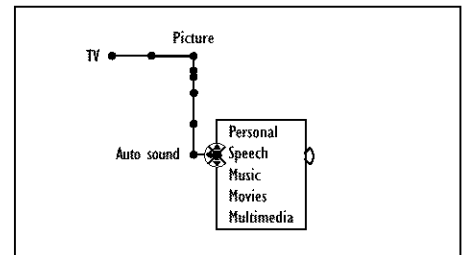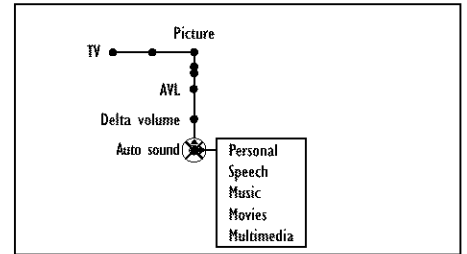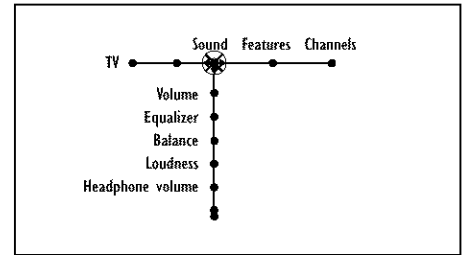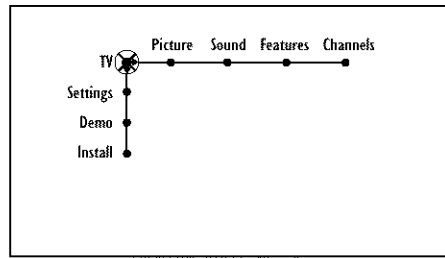

HELPFUL HINTS

AutoSound™ Options

Speech brings voices to the forefront and emphasizes them. Moves music to the background.

Music emphasizes music over voices.

Movies provides a balance between voices and music.

Multimedia provides sound balance best suited for gaming consoles or interactive media.

Personal presents the TV’s sound according to the settings you make within the sound menu.

NOTE: The Personal option shows the personal settings made in the Sound submenu. When you select one of the preset AutoSound™ options, those settings become the Personal settings.

Using Closed Captioning



Closed Captioning (CC) allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, this feature uses on-screen text boxes to show dialogue and conversations while the TV program is in progress. Captions will appear on screen during captioned broadcasts.

Follow steps 1 through 7 to select a Closed Captioning option:

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Down button repeatedly to select "Settings."
- 3** Press the Cursor Right button to select "General."
- 4** Press the Cursor Down button repeatedly to select "Caption service."
- 5** Press the Cursor Right button to enter the caption service submenu.
- 6** Press the Cursor Up or Down button to select one of the caption modes: **CC-1, CC-2, CC-3, or CC-4**—Dialogue (and descriptions) for the action on the captioned TV program shows on screen. CC-1 is used most frequently. CC-2 may be used for alternate languages if they are being transmitted. **T-1, T-2, T-3, or T-4**—Often used for a channel guide, schedules, bulletin board information for captioned programs, news, weather information, or stock market reports.

NOTES







- Text Modes (T-1 through T-4) appear on screen as boxes and may block portions of the TV screen.
- Not all caption services are necessarily being used by a TV channel during the transmission of a captioned program.

- 7** Press the Menu button to remove the on-screen menu from the TV screen.




To turn Closed Captioning on or off:

- 8** Press the CC button on the remote control.
- 9** Press the Cursor Up or Down button repeatedly to select "Off," "On," or "On during mute."
Off—Closed captioning service will not be displayed on the TV screen.
On—Closed captioning information (if available) will display on the TV screen.
On during mute—Closed Captioning information will turn on only when the Mute button is pressed. Turns the Closed Captioning information off when the TV volume is restored.

- 10** Press the Menu button on the remote to remove the on-screen display from the TV screen.

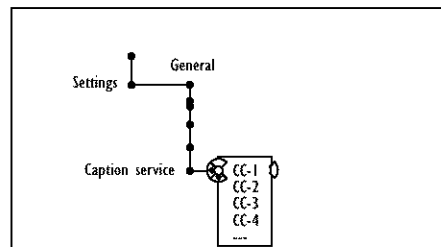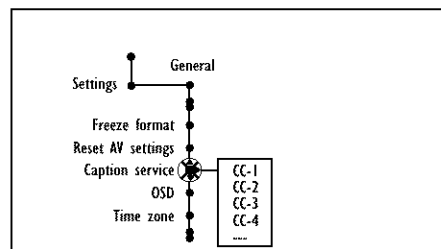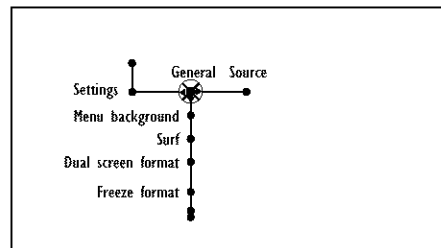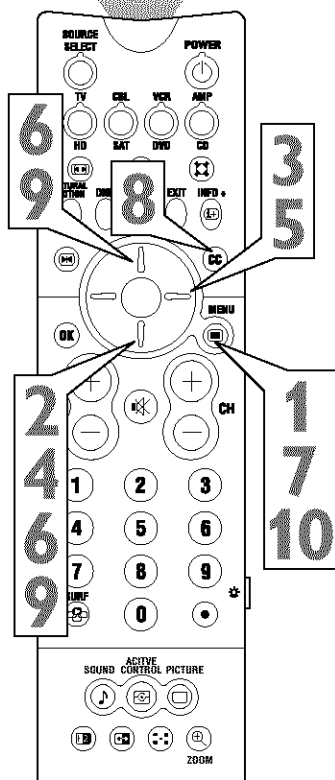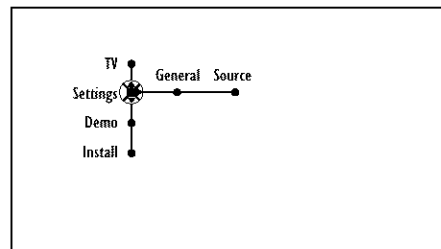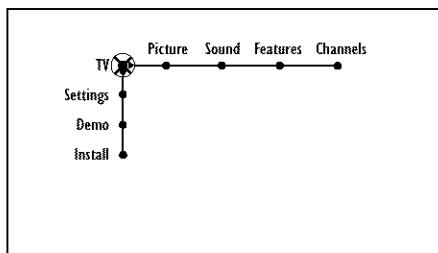

Access the CC "Off/On/On during mute control," using the CC button on the remote control or the "Features" on-screen menu.

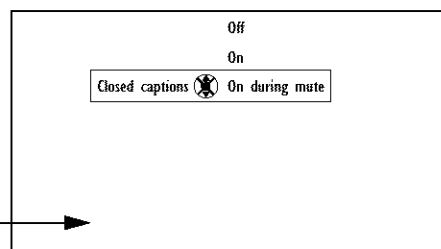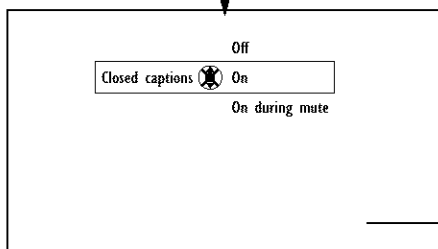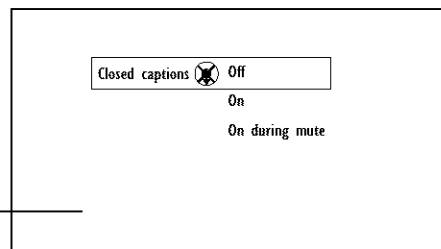

NOTES: • The captions do not always use correct spelling and grammar. • Not all TV programs and product commercials made for broadcast include Closed Captioning information. Refer to your area's TV program listings for the TV channels and times of shows with Closed Captioning. The captioned programs are usually noted in the TV listings with service marks such as "CC."








Setting the Sleptimer

NOTE: If you have not selected your time zone and set the Daylight Savings control, do so before making a Sleptimer setting. Details are on page 64.

If you have ever fallen asleep while watching TV, you may have wished you could have programmed your TV to turn off automatically. The Sleptimer feature allows you to set your TV to do that. With the Sleptimer control, you can set a timer to automatically switch the TV off after a period of time you choose—5 minutes up to 180 minutes in 5-minute increments.


- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly until "Features" is selected.
- 3** Press the Cursor Down button repeatedly to select "Sleptimer."
- 4** Press the Cursor Right button to set the sleptimer in 5-minute increments, from 5 minutes to 180 minutes.
- 5** Press the Menu button to remove the on-screen menu from the TV screen.

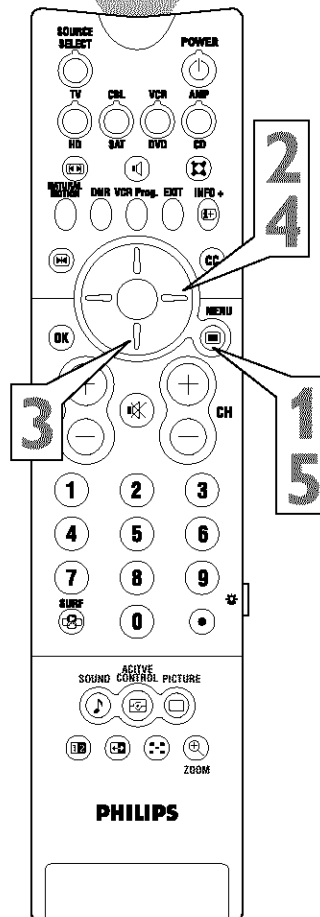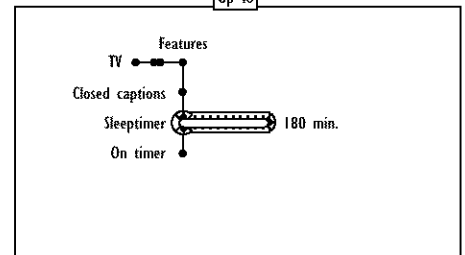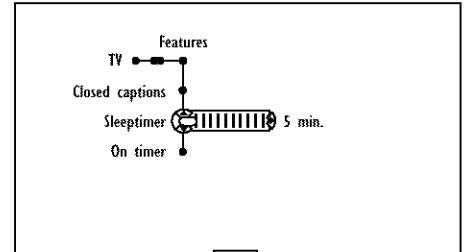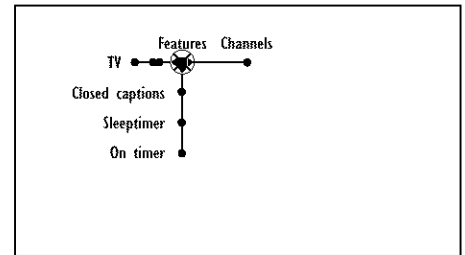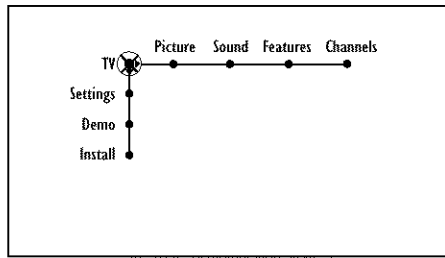

HELPFUL HINTS

- To see how many minutes remain before the TV shuts itself off, press the INFO+ button.
- An on-screen countdown will appear during the last minute before the TV shuts itself off. At this time, you may cancel the Sleptimer setting by pressing the OK button on the remote control.

During the last minute of a sleptimer setting, the TV will display a countdown screen that will allow you to cancel the setting.

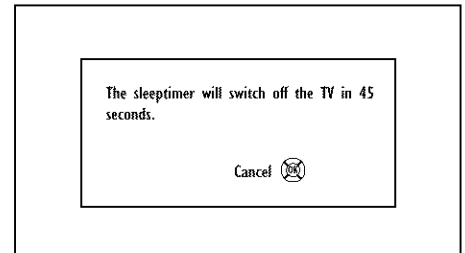








Setting the On Timer



NOTE: If you have not selected your time zone and set the Daylight Savings control, do so before making an On Timer setting. Details are on page 64.

The On Timer control allows you to set a time for the TV to come on automatically at a certain time of day. The on timer can be set to work once or daily at a time you specify.






- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly to select "Features."
- 3** Press the Cursor Down button repeatedly to select the "On timer" control.
- 4** Press the Cursor Right button to enter the On Timer submenu.
- 5** Press the Cursor Up or Down button to select "On."
- 6** Press the Cursor Right button to shift the menu to the start-channel submenu.
- 7** Press the Cursor Up or Cursor Down button to select the channel you would like the TV to tune to when it turns on.
- 8** Press the Cursor Right button to shift the menu to the day/daily submenu.
- 9** Press the Cursor Up or Down button to select the day to turn on or select "Daily."
- 10** Press the Cursor Right button to enter the AM/PM submenu.
- 11** Press the Cursor Up or Down button to select "AM" or "PM."
- 12** Press the Cursor Right button to enter the start time.
- 13** Press the Number buttons to enter the time. Use "0" first if entering a single digit (for example, input "0, 1, 3, 0" for 1:30).
- 14** Press the OK button to confirm.
- 15** Press the Menu button to remove the on-screen menu from the TV screen.

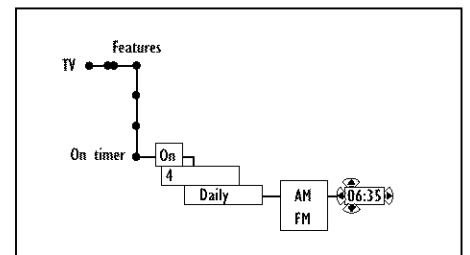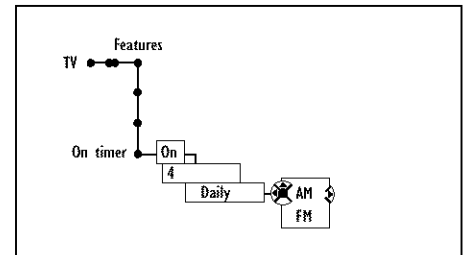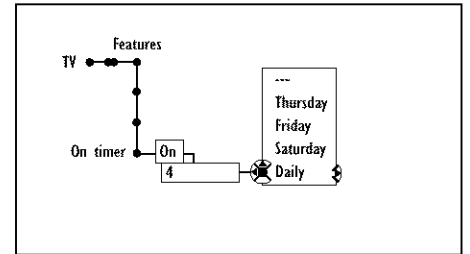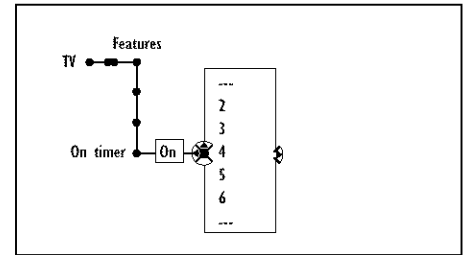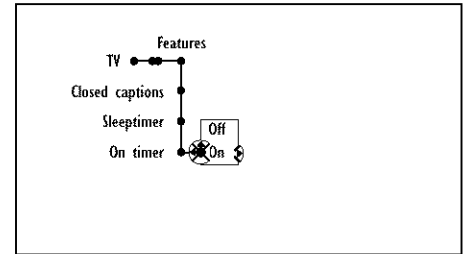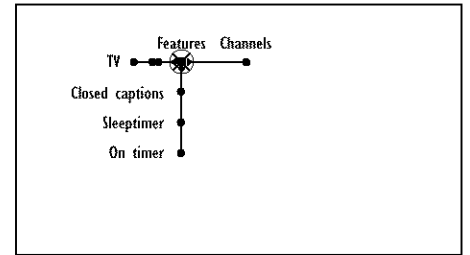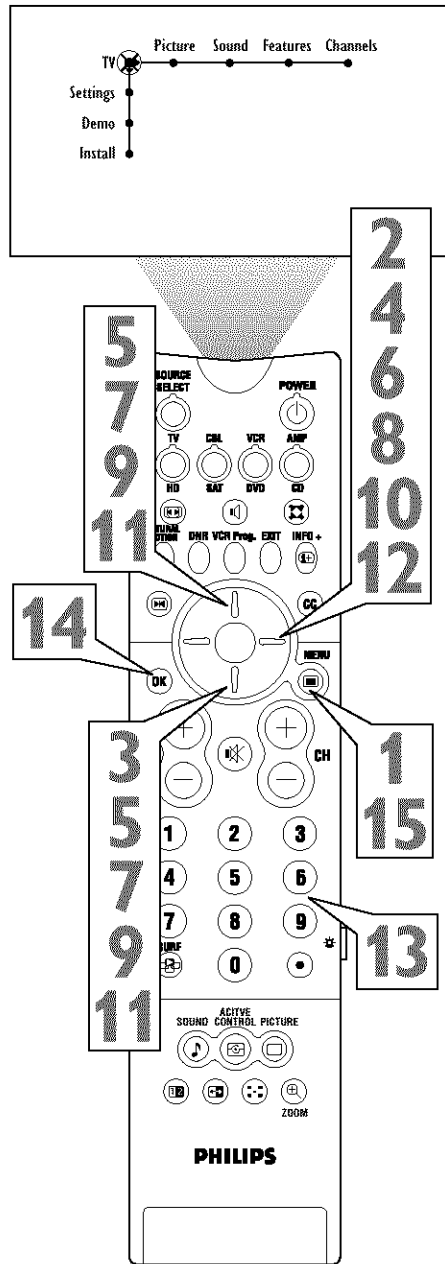

Using the Channel List








The Channel List control shows all the available channels that Auto Programming placed in the TV memory. The channels can be selected from this list.

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly to select "Channels."
- 3** Press the Cursor Down button to select the "Channel list" control.
- 4** Press the Cursor Right button to enter the Channel List submenu.
- 5** Press the Cursor Up or Down button to select a specific channel from the list.
- 6** Press the OK button. The television will tune to the selected channel.
- 7** Press the Menu button to remove the on-screen menu from the TV screen.

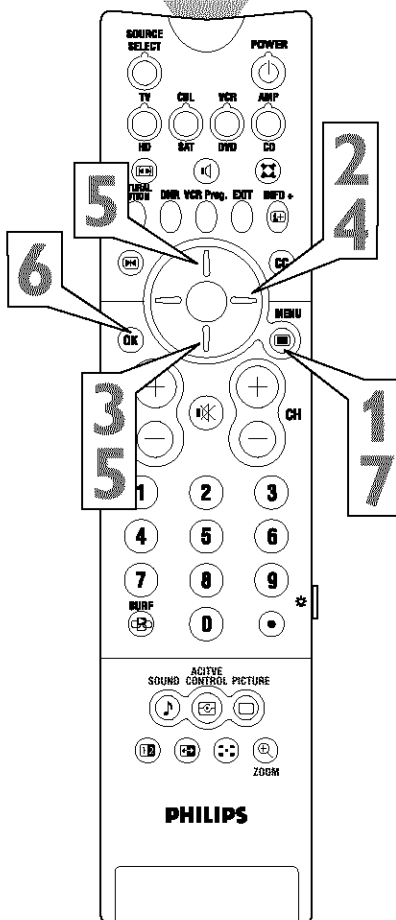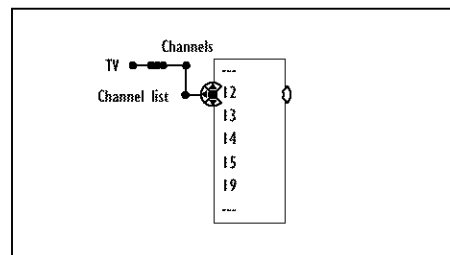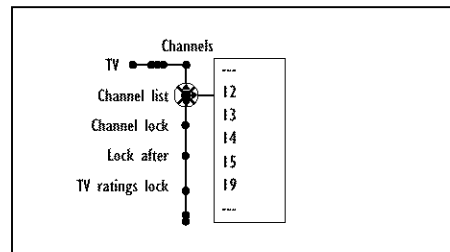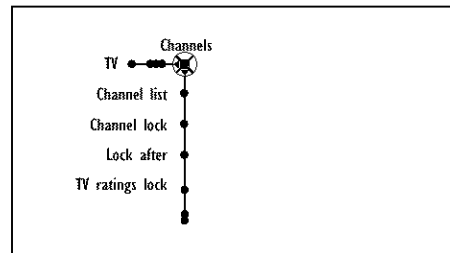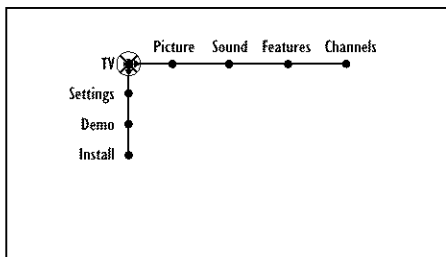

You can remove specific channels from the television's memory by using the Channel Remove control.

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly to select "Channels."
- 3** Press the Cursor Down button repeatedly to select the "Channel remove" control.
- 4** Press the Cursor Right button to enter the list of channels in the television's memory.
- 5** Press the Cursor Up or Down button to select a channel you want to remove.
- 6** Press the OK button to activate your choice. After you activate the Channel Remove control, the channel(s) highlighted will no longer be tuned when you press the CH(annel) + or - buttons.
- 7** Press the Menu button to remove the on-screen menu from the TV screen.

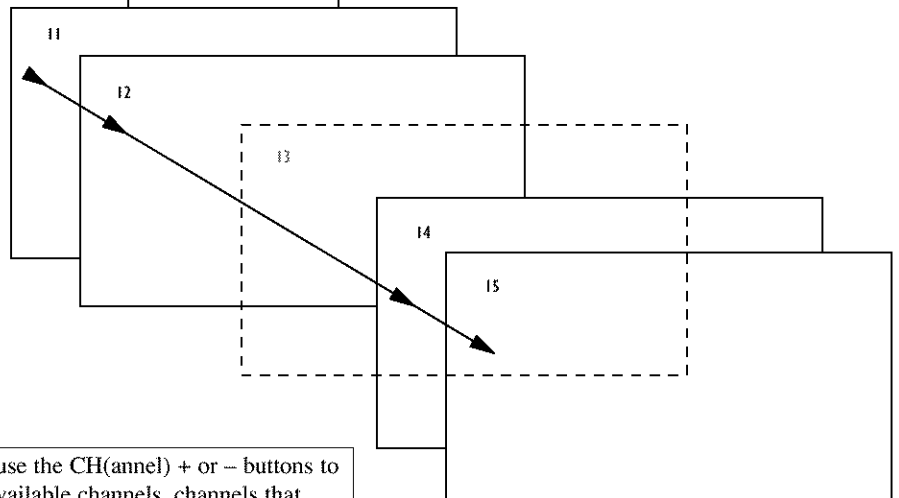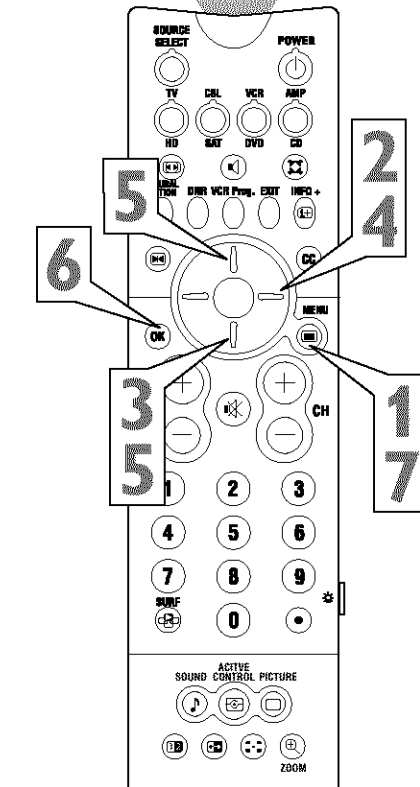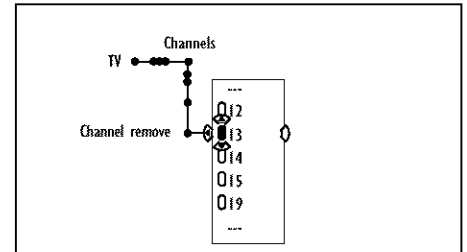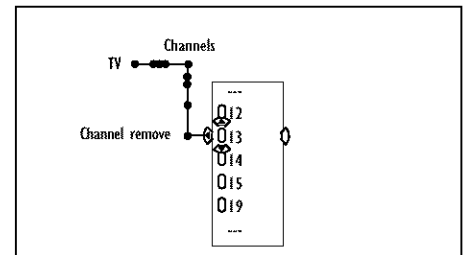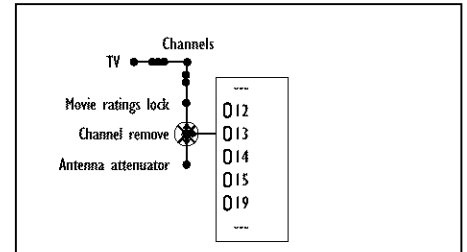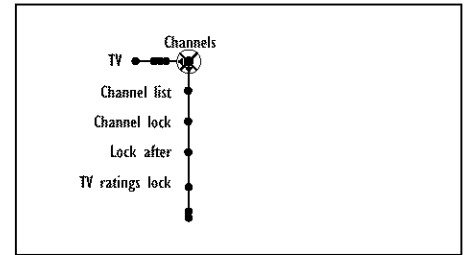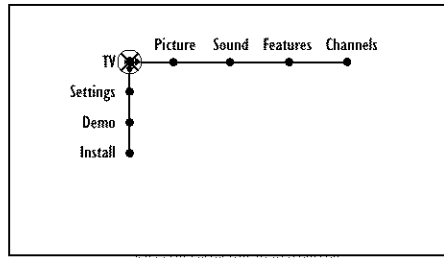

When you use the CH(annel) + or - buttons to scroll the available channels, channels that have been removed using the channel remove control will not appear.

For various reasons, you may want to block the viewing of materials on a specific channel or channels or through the audio/video (AV) inputs. Lock Channel provides this capability.

Before using the Lock Channel feature for the first time, you will be asked to enter the PIN number. Use the digit buttons on the remote control to enter the PIN you choose. All number combinations from 0000 to 9999 are valid. After you enter the number once, you will be asked to confirm the number, and then the number is stored.

To set or change your PIN number, see page 65.

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly to select "Channels."
- 3** Press the Cursor Down button repeatedly to highlight the "Channel lock" control.
- 4** Press the Cursor Right button to enter the channel lock submenu.
- 5** Press the Cursor Up or Down button to select a specific channel from the list.
- 6** Press the OK button. The oval in front of the channel number will change to yellow to show that the channel is locked.






Repeat steps 5 and 6 for other channels you want to lock.

- 7** Press the MENU button to remove the on-screen menu from the TV screen.


NOTE: To unlock a locked channel, enter your personal PIN number.

HELPFUL HINT

If you tune to a channel or input source that is locked and you enter your PIN, all locked channels or input sources will be unlocked until the television is shut off. When the television is turned back on again, previously locked channels or input sources will be locked again.

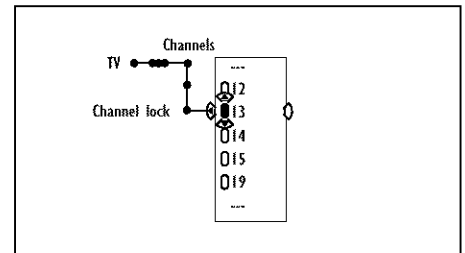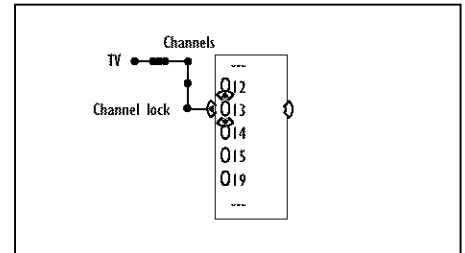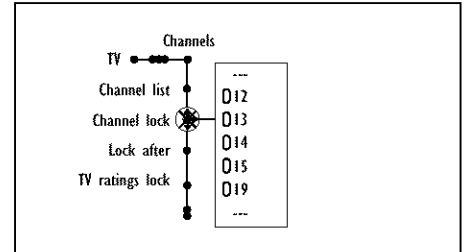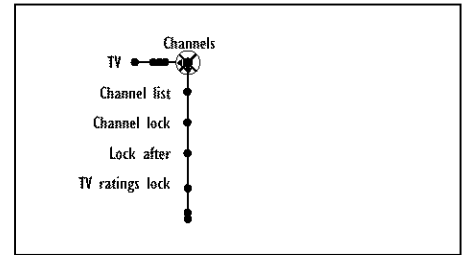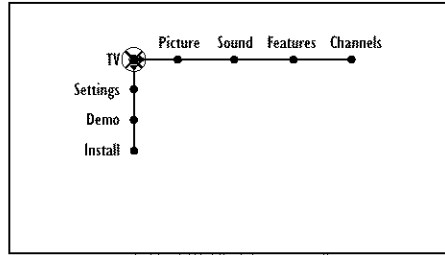








This screen will appear when tuned to a locked channel. To view the channel, enter your PIN.

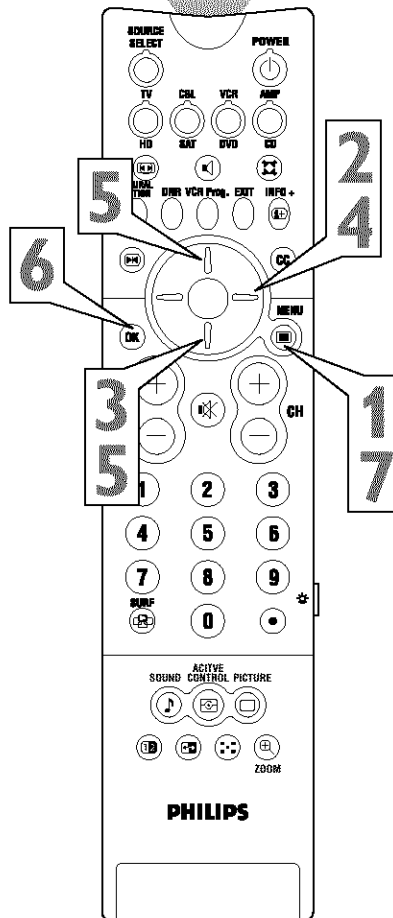

You may want to block programming after a certain time of day. This feature is excellent for limiting the amount of time your children watch TV or for preventing them watching unsuitable programs that are often shown at night.

NOTE: The set automatically unlocks after 3 a.m.

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly to select "Channels."
- 3** Press the Cursor Down button repeatedly to select the "Lock after" control.
- 4** Press the Cursor Right button to enter the Lock After submenu (with the options "Off" or "On").
- 5** Press the Cursor Up or Down button to select "On" from the submenu. A submenu with the options of "AM" or "PM" will appear.
- 6** Press the Cursor Right button to enter the AM/PM submenu. A box with the time (or area where the time can be entered) will appear.
- 7** Press the Cursor Up or Down button to select AM or PM.
- 8** Press the Cursor Right button to enter the Lock After time.
- 9** Press the Number buttons to enter the time you want the television to lock all channels.
- 10** Press the Menu button to remove the on-screen menu from the TV screen.

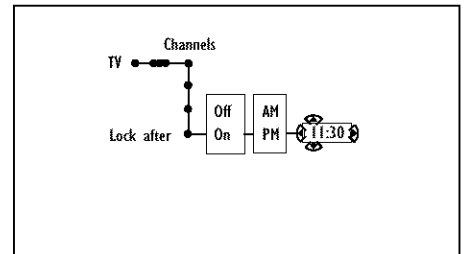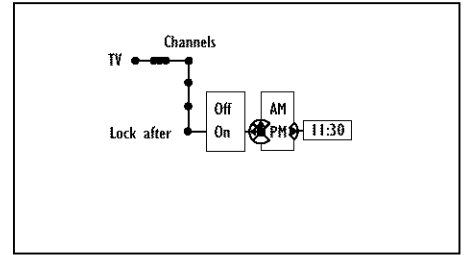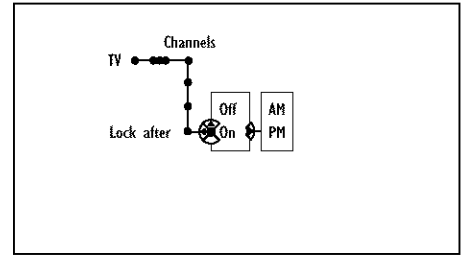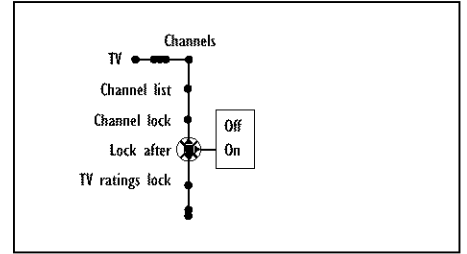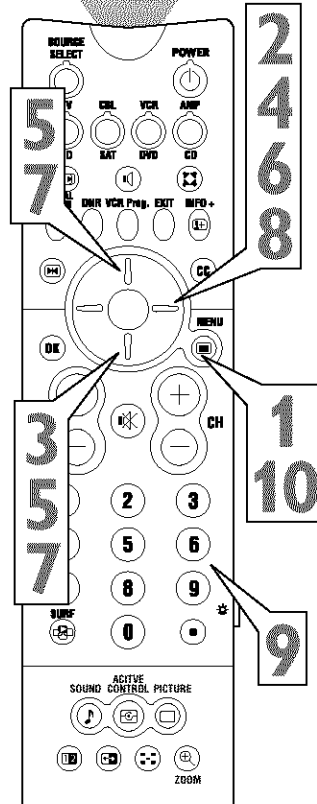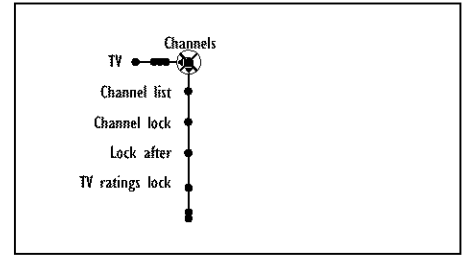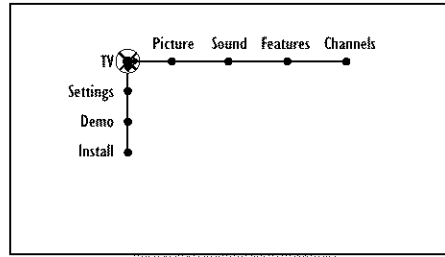

Once the time has expired, all channels will display this screen. To view the channels, enter your PIN.







HELPFUL HINT

If you tune to a channel or input source that is locked and you enter your PIN, all locked channels or input sources will be unlocked until the television is shut off. When the television is turned back on again, previously locked channels or input sources will be locked again.

Blocking Programming Based on TV Ratings

You can select specific TV Ratings to block broadcast signals that have unsuitable content.

- 1** Press the Menu button on the remote control to display the on-screen menu.
 - 2** Press the Cursor Right button repeatedly to select "Channels."
 - 3** Press the Cursor Down button repeatedly to select the "TV ratings lock" control.
 - 4** Press the Cursor Right button to enter the TV Ratings Lock list of options.
 - 5** Press the Cursor Up or Down button to select one of the ratings.
 - 6** Press the OK button to activate your choice.
- NOTE:** Some of the TV Rating options contain specific subratings. "TV-Y7" contains the "(FV) Fantasy Violence" subrating; "TV-PG" and "TV-14" contain "(D) Dialogue," "(L) Language," "(S) Sex," and "(V) Violence" subratings; "TV-MA" contains "(L) Language," "(S) Sex," and "(V) Violence" subratings.
- 7** If the PIN message is displayed, enter your PIN.
 - 8** Press the Menu button to remove the on-screen menu from the TV screen.

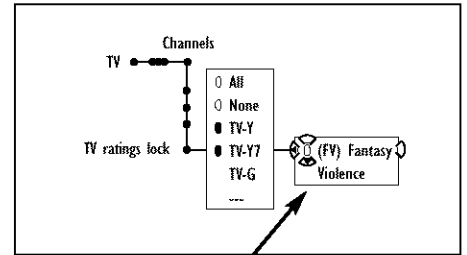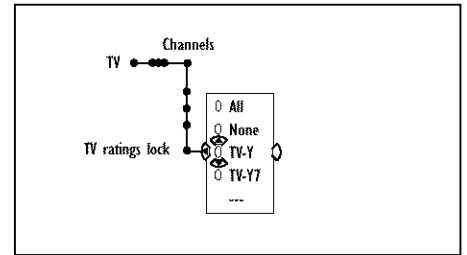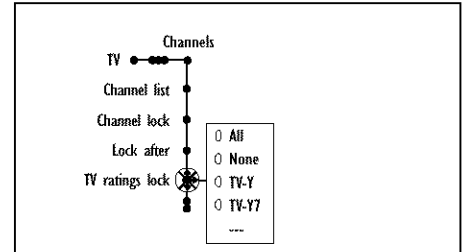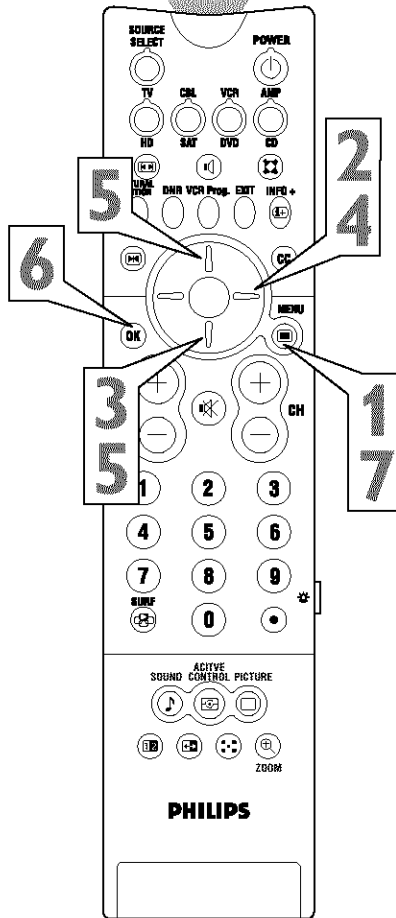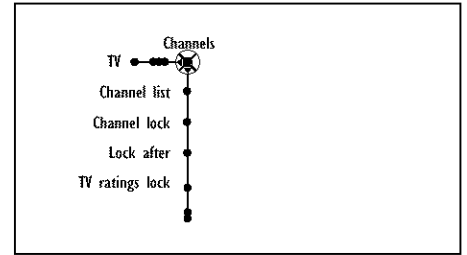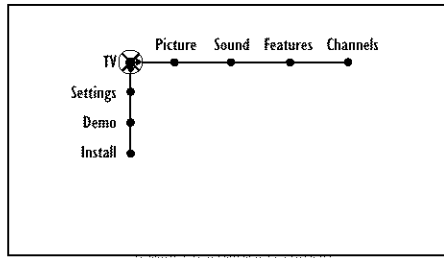

Some TV Ratings have subrating options.

TV Ratings (from TV Broadcasters)

None—programs that are either rated "None" or have no content advisory. Selecting this option will block all such programs.



TV-Y (All Children)—programs designed to be appropriate for all children, especially ones ages 2–6. These programs are not expected to frighten younger children.



TV-Y7 (Directed to Older Children)—programs designed for children ages 7 and older. These programs may be more appropriate for children who have acquired the development skills needed to distinguish between make-believe and reality. Such programs may include mild fantasy and comic violence (FV).



TV-G (General Audience)—most parents will consider programs that are rated TV-G to be suitable for children of all ages. Such programs have little or no violence, no strong language, and little or no sexual dialogue or sexual situations.



TV-PG (Parental Guidance Suggested)—programs contain material that parents may find unsuitable for younger children. This type of programming has one or more of the following: moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D).









TV-14 (Parents Strongly Cautioned)—programs contain material that many parents will find unsuitable for children under 14 years of age. These programs have one or more of the following: intense violence (V); intense sexual situations (S); strong, coarse language (L); or intensely suggestive dialogue (D).



TV-MA (Mature Audience Only)—specifically designed to be viewed by adults and therefore may be unsuitable for children under 17. Such programs have one or more of the following: graphic violence (V); explicit sexual situations (S); or crude, indecent language (L).

You can prevent the viewing of unsuitable programming based on movie ratings.

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly to select "Channels."
- 3** Press the Cursor Down button repeatedly to select the "Movie ratings lock" control.
- 4** Press the Cursor Right button to enter the Movie Ratings Lock list of options.
- 5** Press the Cursor Up or Down button to select the rating you want to lock.
- 6** Press the OK button to activate your choice.
NOTE: When a rating is turned on, all higher ratings (and subratings) will be turned on. (for example, if "R" is selected, "NC-17" and "X" will automatically turn on also.)
- 7** If the PIN message is displayed, enter your PIN.
- 8** Press the MENU button to remove the on-screen menu from the TV screen.

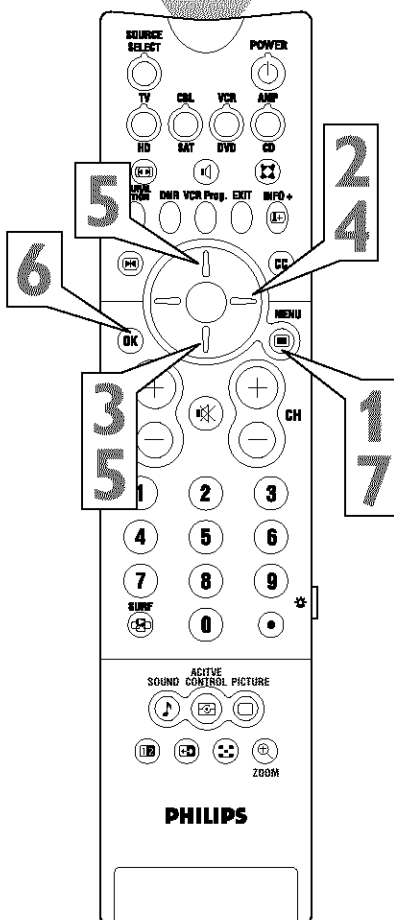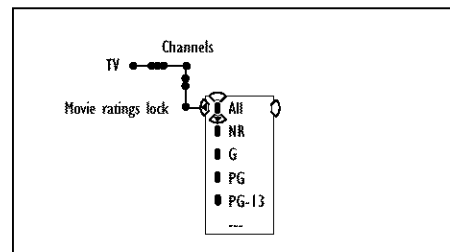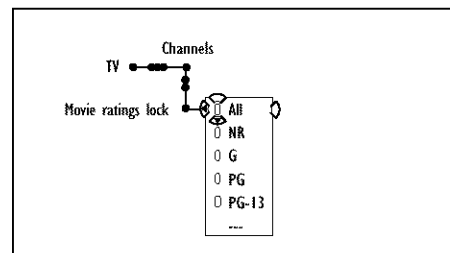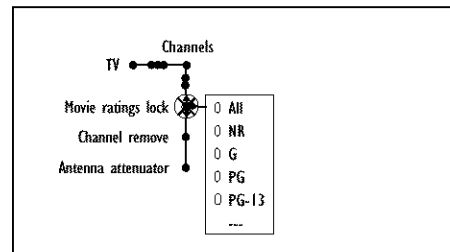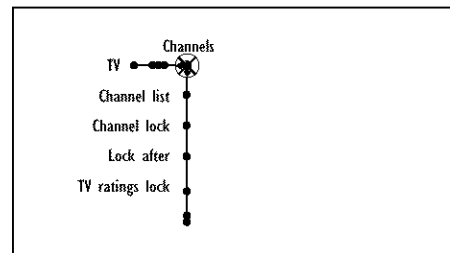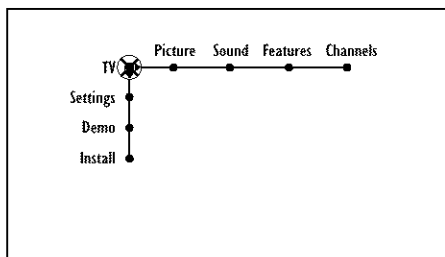

Movie Ratings (from the Motion Picture Association of America)

NR (Not Rated)—programs that the Motion Picture Association of America has chosen not to rate.

G (General Audience)—all ages admitted. Most parents will find programs that are rated G to be suitable for children of all ages. Such programs have little or no violence, no strong language, and little or no sexual dialogue or sexual situations.

PG (Parental Guidance Suggested)—contain material that parents may find unsuitable for younger children. These programs have one or more of the following: moderate violence, some sexual situations, infrequent coarse language, or some suggestive dialogue.

PG-13 (Parents Strongly Cautioned)—contain material that parents may find unsuitable for children under the age of 13. Programs that are rated PG-13 have one or more of the following: violence, sexual situations, coarse language, or suggestive dialogue.

R (Restricted)—specifically designed for adults. Anyone under the age of 17 should view programs that are rated R only with an accompanying parent or adult guardian. Such programs have one or more of the following: intense violence; intense sexual situations; strong, coarse language; or intensely suggestive dialogue.






NC-17 (No one under the age of 17 will be admitted)—should be viewed by adults only. These programs have graphic violence; explicit sex; or crude, indecent language.

X (Adults Only)—contain one or more of the following: very graphic violence, very graphic and explicit or indecent sexual acts, or very coarse and intensely suggestive language.

Turning the Antenna Attenuator on or off

If you live near a television station's transmitter tower, you may receive an interfering signal from the station while watching other TV channels. Your television's Antenna Attenuator control is designed to reduce the strength of such a signal in the presence of a strong main signal. The default setting for the Antenna Attenuator is "Off." If you need to use the feature, simply toggle it "On" in the on-screen menu. The setting you make applies to the channel you are currently watching and will remain in place until you change the setting.








- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Right button repeatedly to select "Channels."
- 3** Press the Cursor Down button repeatedly to select the "Antenna attenuator" control.
- 4** Press the Cursor Right button to toggle the control "On" or "Off."
- 5** Press the Menu button to remove the on-screen menu from the TV screen.

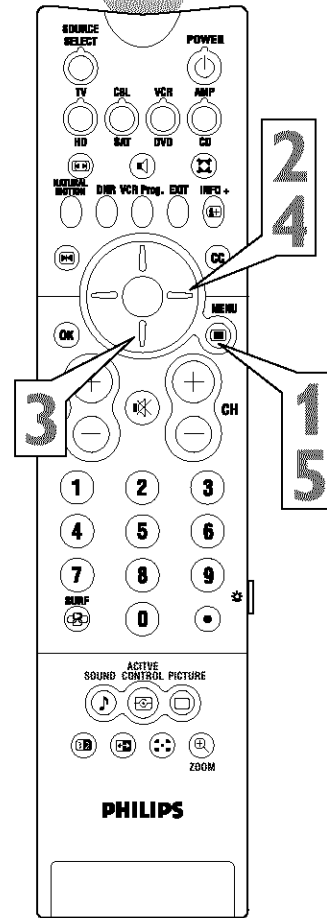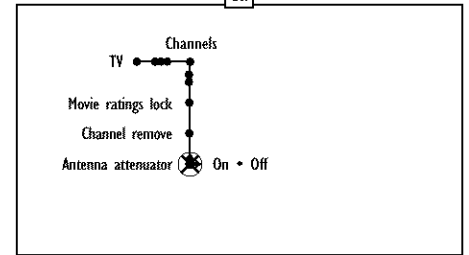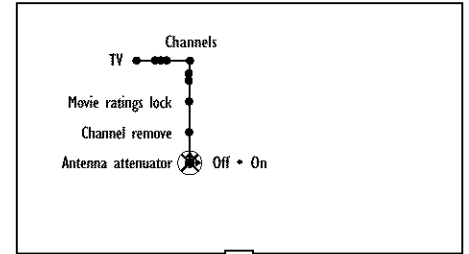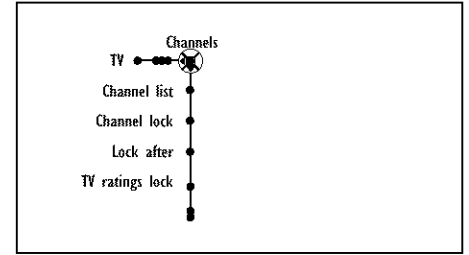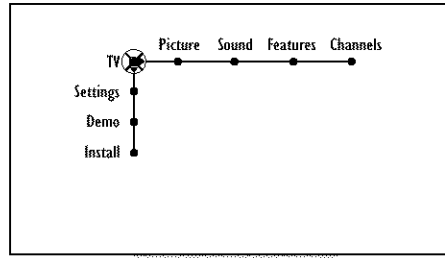


Turning the Menu Background on or off

You have the option of turning on a background that will make reading the on-screen menu easier. The Menu Background control places a light, transparent green field behind the on-screen menu that reduces the contrast posed by the picture. When turned on, the menu background appears only while the on-screen menu is displayed on the TV screen.

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Down button to select "Settings."
- 3** Press the Cursor Right button to select the "General" menu.
- 4** Press the Cursor Down button to select the "Menu background" control.
- 5** Press the Cursor Right button to toggle the menu background control "On" or "Off."
- 6** Press the Menu button to remove the on-screen menu from the TV screen.

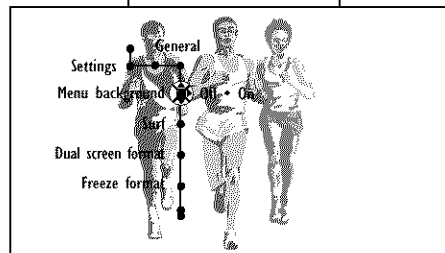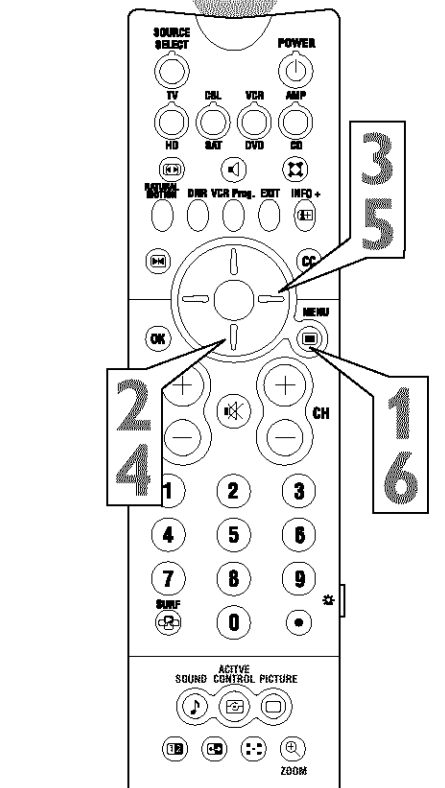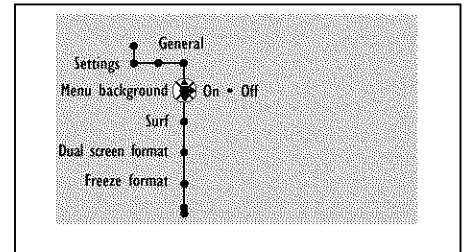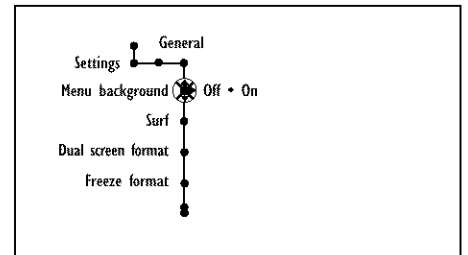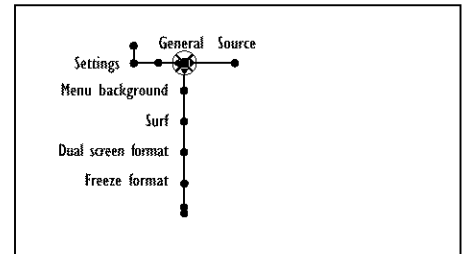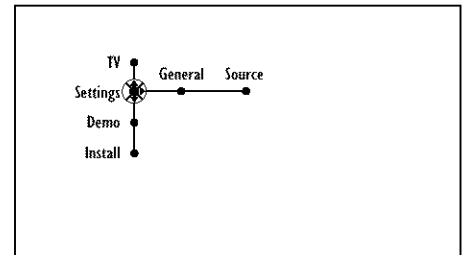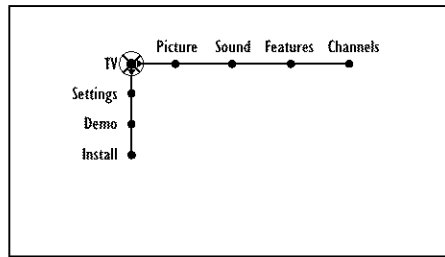

With Menu Background off

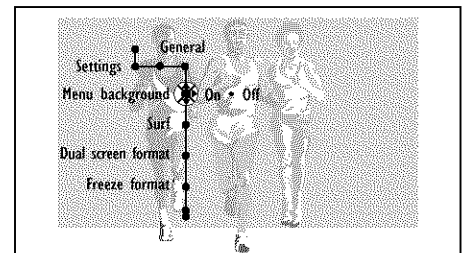

With Menu Background on

You can access a list of previously viewed channels with the Surf on the remote control. With Surf you can easily switch between different TV channels that currently interest you. Surf allows you to set up the television to cycle through two or nine channels by pressing the Surf button.

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Down button to select "Settings."
- 3** Press the Cursor Right button to select the "General" menu.
- 4** Press the Cursor Down button repeatedly to select the "Surf" control.
- 5** Press the Cursor Right button to toggle the Surf control to "2 channels" or "9 channels."
- 6** Press the Menu button to remove the on-screen menu from the TV screen.

If you selected the "2 channels" Surf option, pressing the Surf button allows you to alternate between the currently viewed channel and the previously viewed channel.







If you selected the "9 channels" Surf option, pressing the Surf button displays a Surf list in which you can place up to 9 favorite channels. A/V sources also can be included in the list.

To add a channel to the list, tune to the channel, press the Surf button, then press the Cursor Right button.


If you attempt to add more than 9 channels to the list, the last channel will be automatically removed to make room for the newly added channel.

After you have placed your favorite channels in the list, press the Surf button as many times as necessary to tune to the desired favorite channel. Or, with the Surf list displayed, press the Cursor Down or Up buttons to tune to a channel.


To remove a channel from the list, press the Surf button to display the list, press the Cursor Down or Up buttons until you select the channel you want to remove, then press the Cursor Right button.

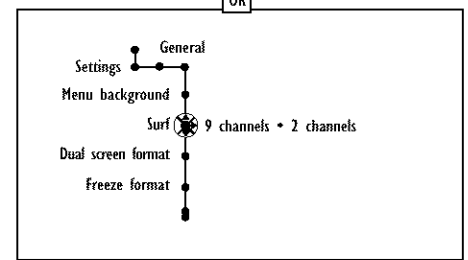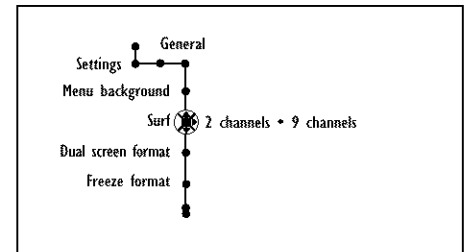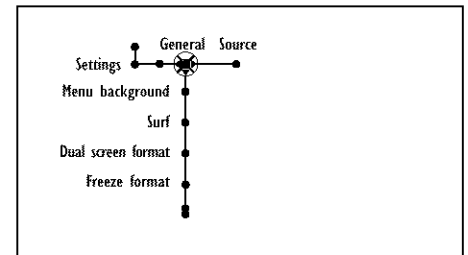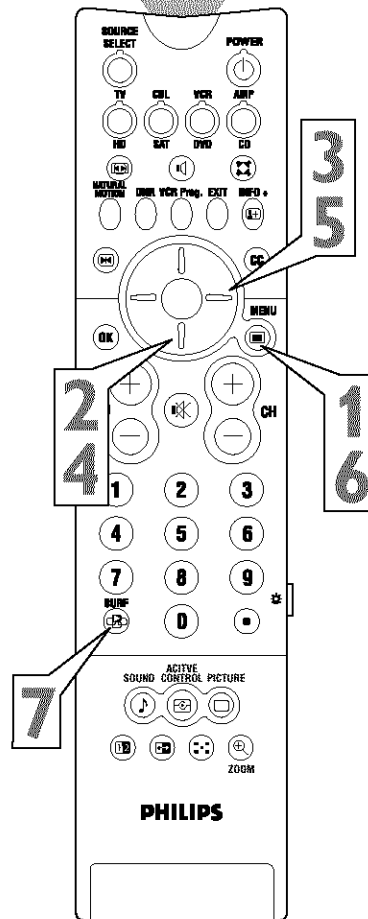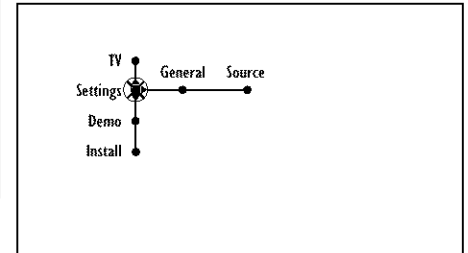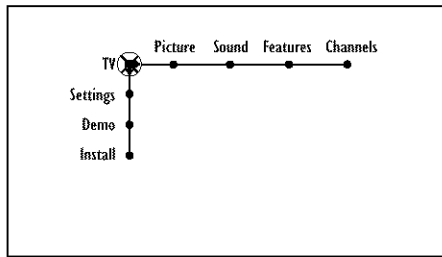


Using 9 Channels Surf, place up to 9 favorite channels in the Surf list.

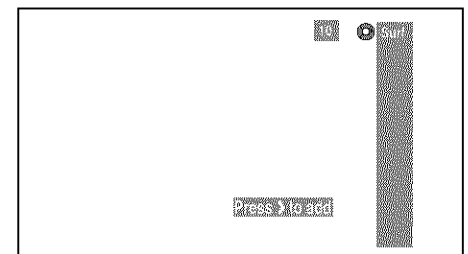


If you decide you don't want a channel in the list, you can remove it.

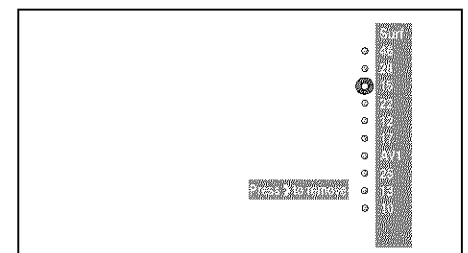

2 Channels Surf

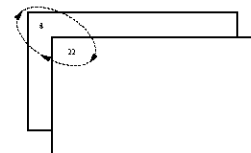







9 Channels Surf

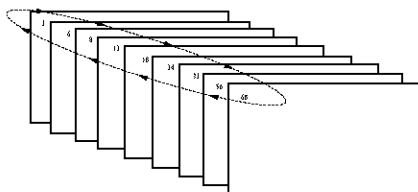

The Dual Screen feature, also referred to as Picture In Picture (PIP), will allow you to choose the size of the dual screen window to be displayed when the Dual Screen (or PIP) button is pressed on the remote control. The window can be set to Dual Screen, Large PIP, or Small PIP. The MultiPIP button allows you to display either 3 or 6 PIP windows.

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Down button to select "Settings."
- 3** Press the Cursor Right button to select the "General" menu.
- 4** Press the Cursor Down button repeatedly to select the "Dual screen format" control. A submenu or list of options will appear.
- 5** Press the Cursor Right button to enter the list of options.
- 6** Press the Cursor Up or Down button to select the desired dual screen format. Choose from "Dual screen," "Large PIP," or "Small PIP."
- 7** Press the Menu button to remove the on-screen menu from the TV screen.
- 8** Press the Dual Screen/PIP button on the remote control to display the second video window in the format you have chosen.
Continuing to hold the Dual Screen/PIP button will cycle through the Dual Screen PIP options.
Press the Dual Screen button again to return the television to the main video screen.
- 9** To display 3 PIP screens, press the MultiPIP button. To display 6 PIP screens, press the MultiPIP button again and briefly hold it until the screens appear.
- 10** Press the MultiPIP button again to turn PIP off.


See the next page for information on changing channels or input sources in the Dual or PIP screens.

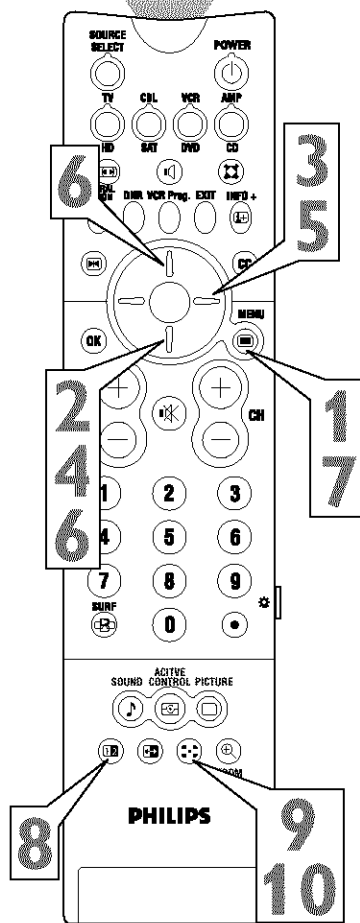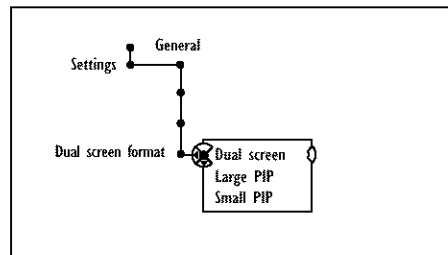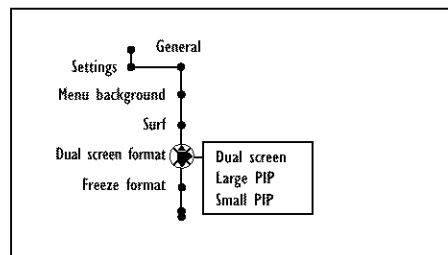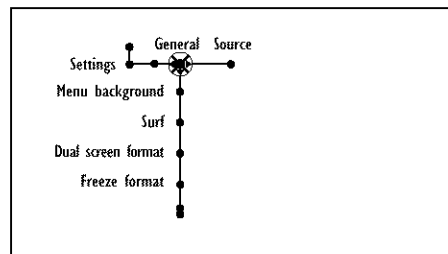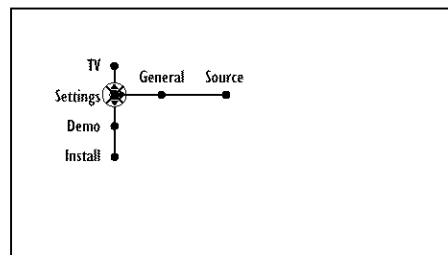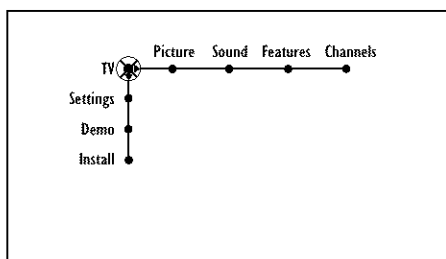

Dual Screen

Large PIP

Small PIP

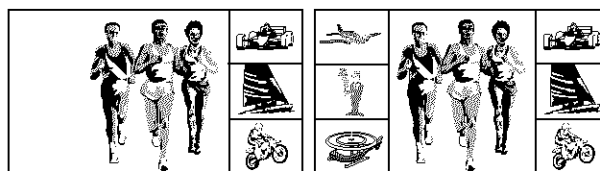






PIP 3

PIP 6

G Changing Channels or Input Sources in Dual Screen/PIP







When using Dual Screen:

- 1** A light-colored border indicates the selected screen. If the screen whose channel or input source you want to change is not selected, press the Cursor Right or Left button to select the desired screen.
 - 2** To change channels in the selected screen, press the CH (Channel Selection) + or – buttons.
 - 3** To change the input source, first press the Source Select button. Then, within 6 seconds, press the Cursor Up or Down until your desired input source is highlighted. Press the OK button to confirm. The desired input source appears in the selected screen.
- NOTE:** If the list of input sources “times out” (leaves the screen) before you can make your selection, press the Source Select button again to display the list again.

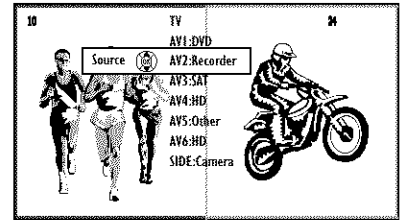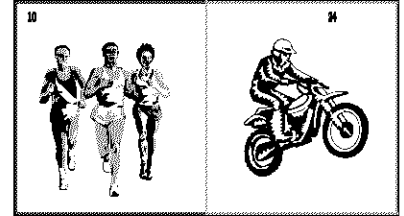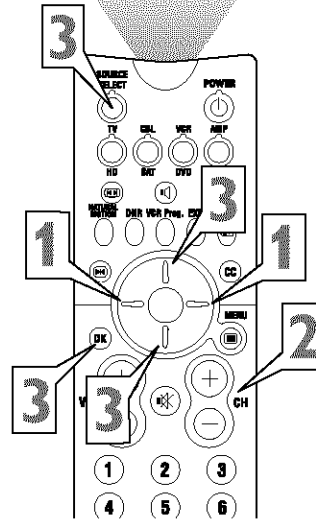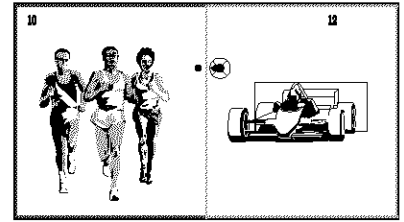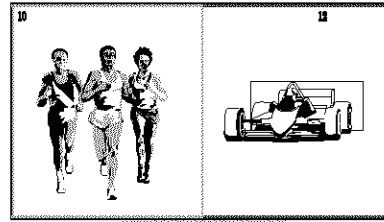

When using Large or Small PIP:

- 1** When the PIP window is on screen, press the Cursor Up or Down button to select either the main or PIP screen. A light-colored border surrounds the PIP screen when it is selected. The PIP screen must be selected before its channel or input source can be changed.
 - 2** To change channels in the PIP screen, press the CH (Channel Selection) + or – buttons.
 - 3** To select a different input source, first press the Source Select button. Then, within 6 seconds, press the Cursor Up or Down until your desired input source is highlighted. Press the OK button to confirm. The desired input source appears in the PIP screen.
- NOTE:** If the list of input sources “times out” (leaves the screen) before you can make your selection, press the Source Select button again to display the list again.

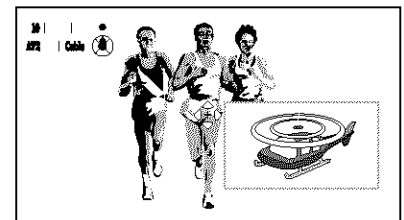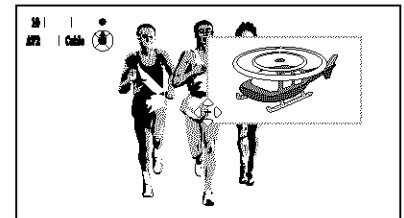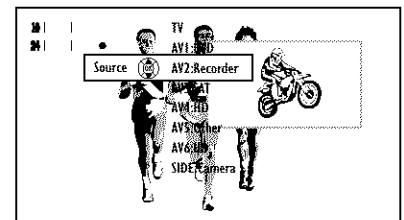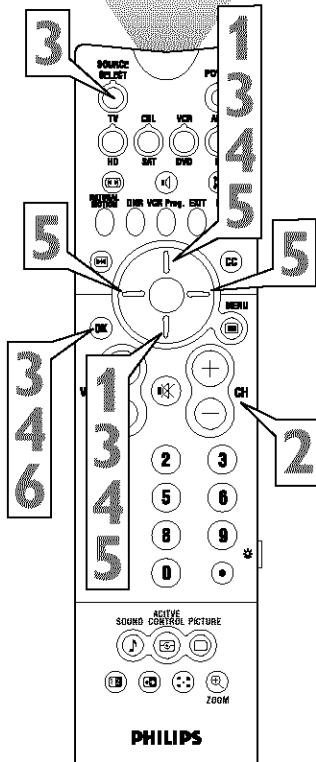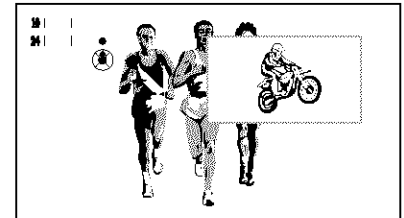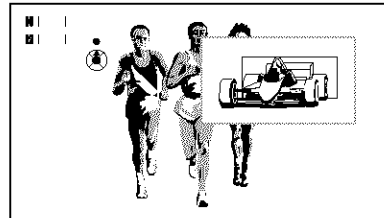

To reposition the PIP screen:

- 4** Press the Cursor Up or Down button. The ball and direction indicator appear on screen. Within 6 seconds, press the OK button. A multidirectional symbol appears on screen.
- 5** Press the Cursor Up, Down, Left, or Right buttons to move the PIP window to the desired location.
- 6** Press the OK button. The ball and direction indicator reappear and “time out” (leave the screen) in about 6 seconds.






When using PIP3 or PIP6:

To change channels when in PIP3 or PIP6 modes, press the Cursor Right, Left, Up, or Down buttons to select the screen whose channel or source you want to change. Then follow step 2 or 3 in either section above to change channels or input sources.

Selecting a Picture Freeze Option

The Freeze control provides three ways for you to stop the action of programs. The Freeze control options allow you to get a better look at exciting sports plays or copy down broadcasted addresses or phone numbers. The steps below explain how to select an option.

- 1** Press the Menu button on the remote control to display the on-screen menu.
 - 2** Press the Cursor Down button to select "Settings."
 - 3** Press the Cursor Right button to highlight the "General" menu.
 - 4** Press the Cursor Down button repeatedly to highlight the "Freeze format" control. A submenu will appear.
 - 5** Press the Cursor Right button to enter the submenu.
 - 6** Press the Cursor Up or Down button to select the desired freeze format. Choose from "Freeze," "Replay," or "Photo finish."
 - 7** Press the Menu button to remove the on-screen menu from the TV screen.
 - 8** Press the Freeze Format button on the remote control to display the format you have chosen.
- NOTE:** Continuing to hold the Freeze Format button will cycle the TV through the Freeze modes.
- To return the television to the main video screen, press the Freeze button again.

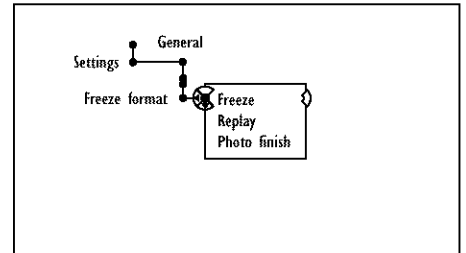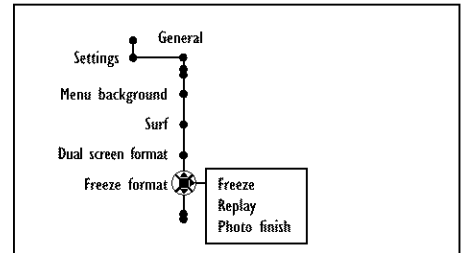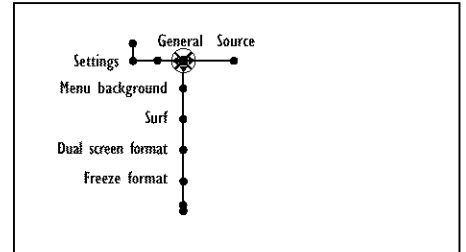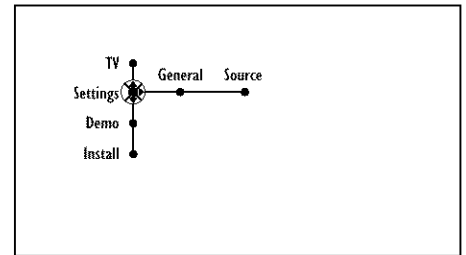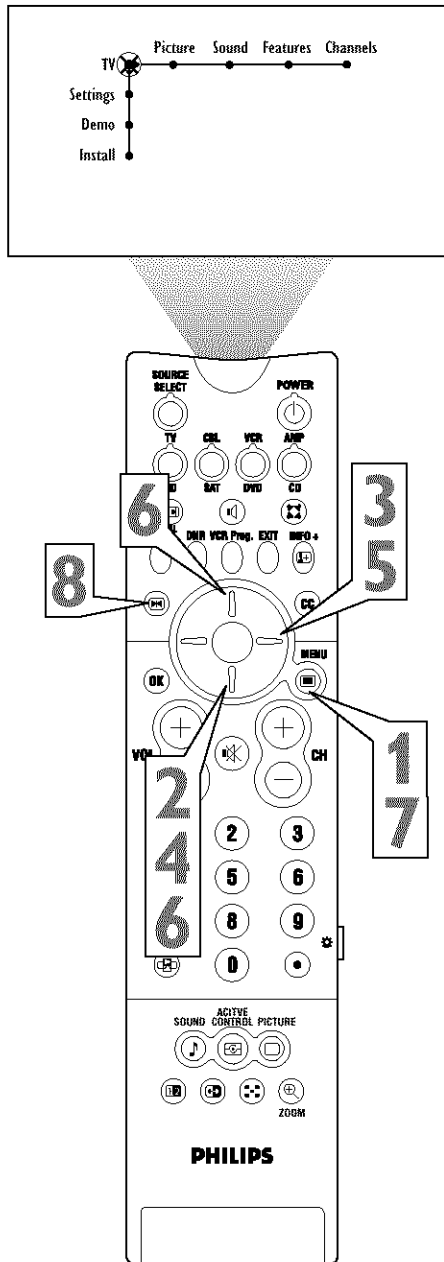

HELPFUL HINT
 Replay and Photo Finish are not available with inputs AV3–AV6.



Freeze

Stops motion on the main screen.



Replay

Replays a few seconds of stored video.








Photo finish

Displays six still frames from a TV picture while the current program continues to play on the main (center) screen.
NOTE: Frame order will vary.

G Resetting the Audio/Video Settings to Factory Default Values








You can reset the TV's Sound and Picture settings to the factory default values.

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Down button to select "Settings."
- 3** Press the Cursor Right button to select the "General" menu.
- 4** Press the Cursor Down button repeatedly to select the "Reset AV settings" control.
- 5** Press the OK button to reset the AV settings to factory values.
- 6** Press the Menu button to remove the on-screen menu from the TV screen.

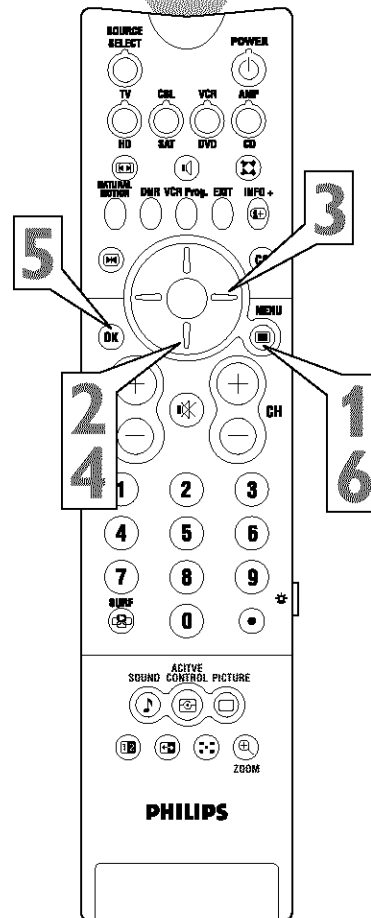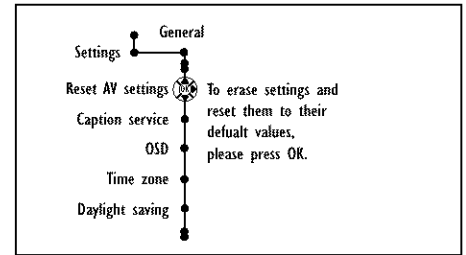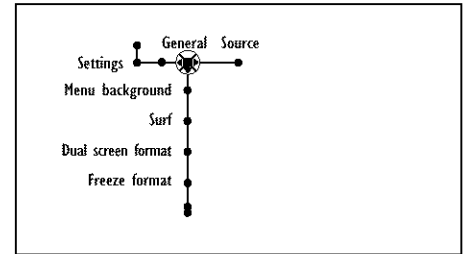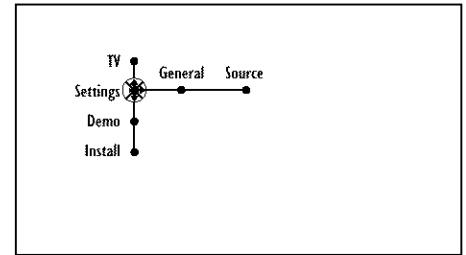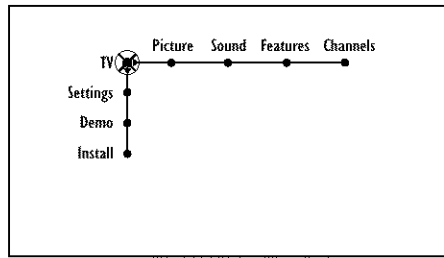

The television's on-screen display (OSD) can be set to show only the current channel number or the channel number with additional TV operating modes and status-screen information.








- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Down button to select "Settings."
- 3** Press the Cursor Right button to select the "General" menu.
- 4** Press the Cursor Down button repeatedly to select the "OSD" control.
- 5** Press the Cursor Right button to toggle between "Minimum" and "Normal."
- 6** Press the Menu button to remove the on-screen menu from the TV screen.

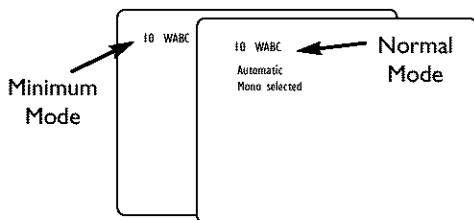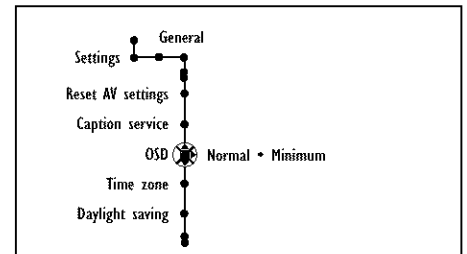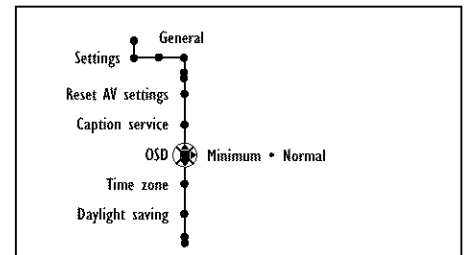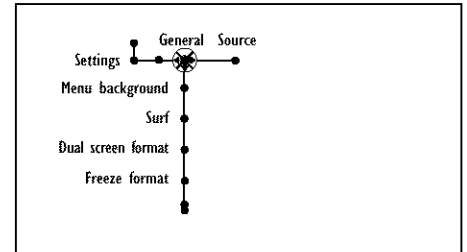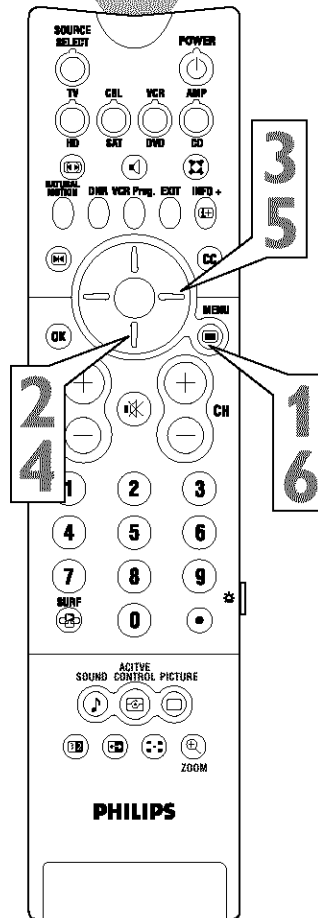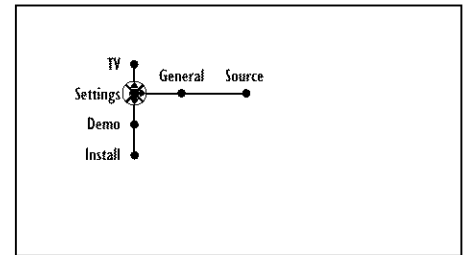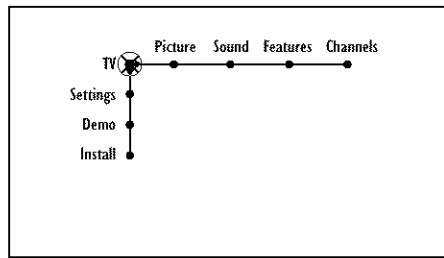

Selecting a Time Zone and Setting the Daylight Savings Control

Your television can acquire the current time from the signal being received. It needs to know your Time Zone, however, and whether or not you use Daylight Savings.


- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Down button to highlight "Settings."
- 3** Press the Cursor Right button repeatedly to select the "General" menu.
- 4** Press the Cursor Down button repeatedly to select the "Time Zone" control.
- 5** Press the Cursor Right button to enter the list of available time zones.
- 6** Press the Cursor Up or Down button to select your time zone.
- 7** Press the Cursor Left button, then press the Cursor Down button to select the "Daylight Savings" control.
- 8** Press the Cursor Right button to toggle "Daylight Savings" to "Automatic" for the TV to change to Daylight Savings Time automatically. Or select "Off."
- 9** Press the Menu button to remove the on-screen menu from the TV screen.

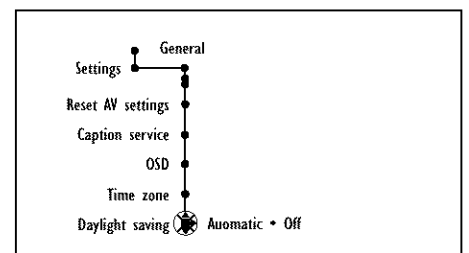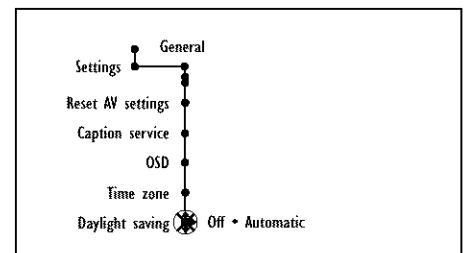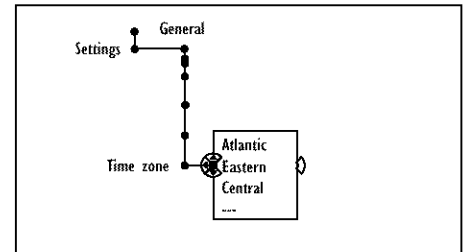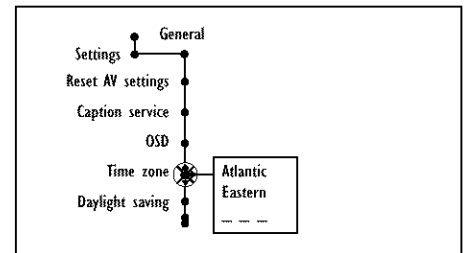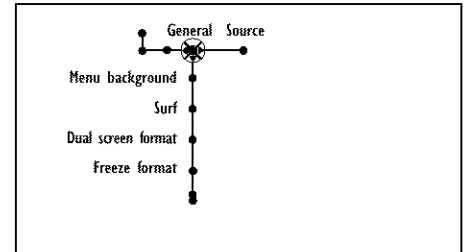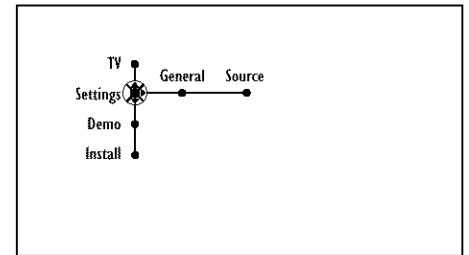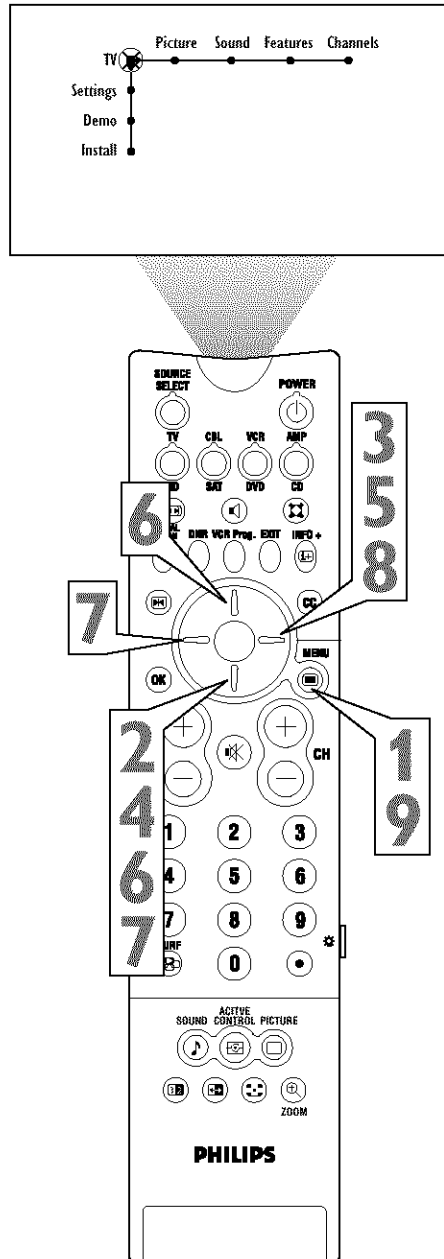

Setting up or Changing a PIN (Personal Identification Number)

In the General menu, you can set up a new PIN number or change an existing one for the Lock Channel feature.

- 1** Press the Menu button on the remote control to display the on-screen menu.
 - 2** Press the Cursor Down button to select "Settings."
 - 3** Press the Cursor Right button to select the "General" menu.
 - 4** Press the Cursor Down button repeatedly to select either "Set PIN" or "Change PIN."
- NOTES:**
- If no PIN exists yet, the menu will show "Set PIN." Simply follow the on-screen instructions to set your PIN.
 - If a PIN has previously been entered, the menu will show "Change PIN."
 - All number combinations from 0000 to 9999 are valid numbers.
- 5** Press the OK or Cursor Right button to begin the process.
 - 6** Enter your current PIN using the Digit buttons on the remote control.
If you have forgotten your PIN, you can enter the overriding/default PIN 0-7-1-1.
 - 7** Enter a new four-digit PIN.
 - 8** Re-enter your new PIN using the Digit buttons to confirm the code. Your PIN is now changed.
 - 9** Press the Menu button on the remote control to remove the on-screen menu from the TV screen.

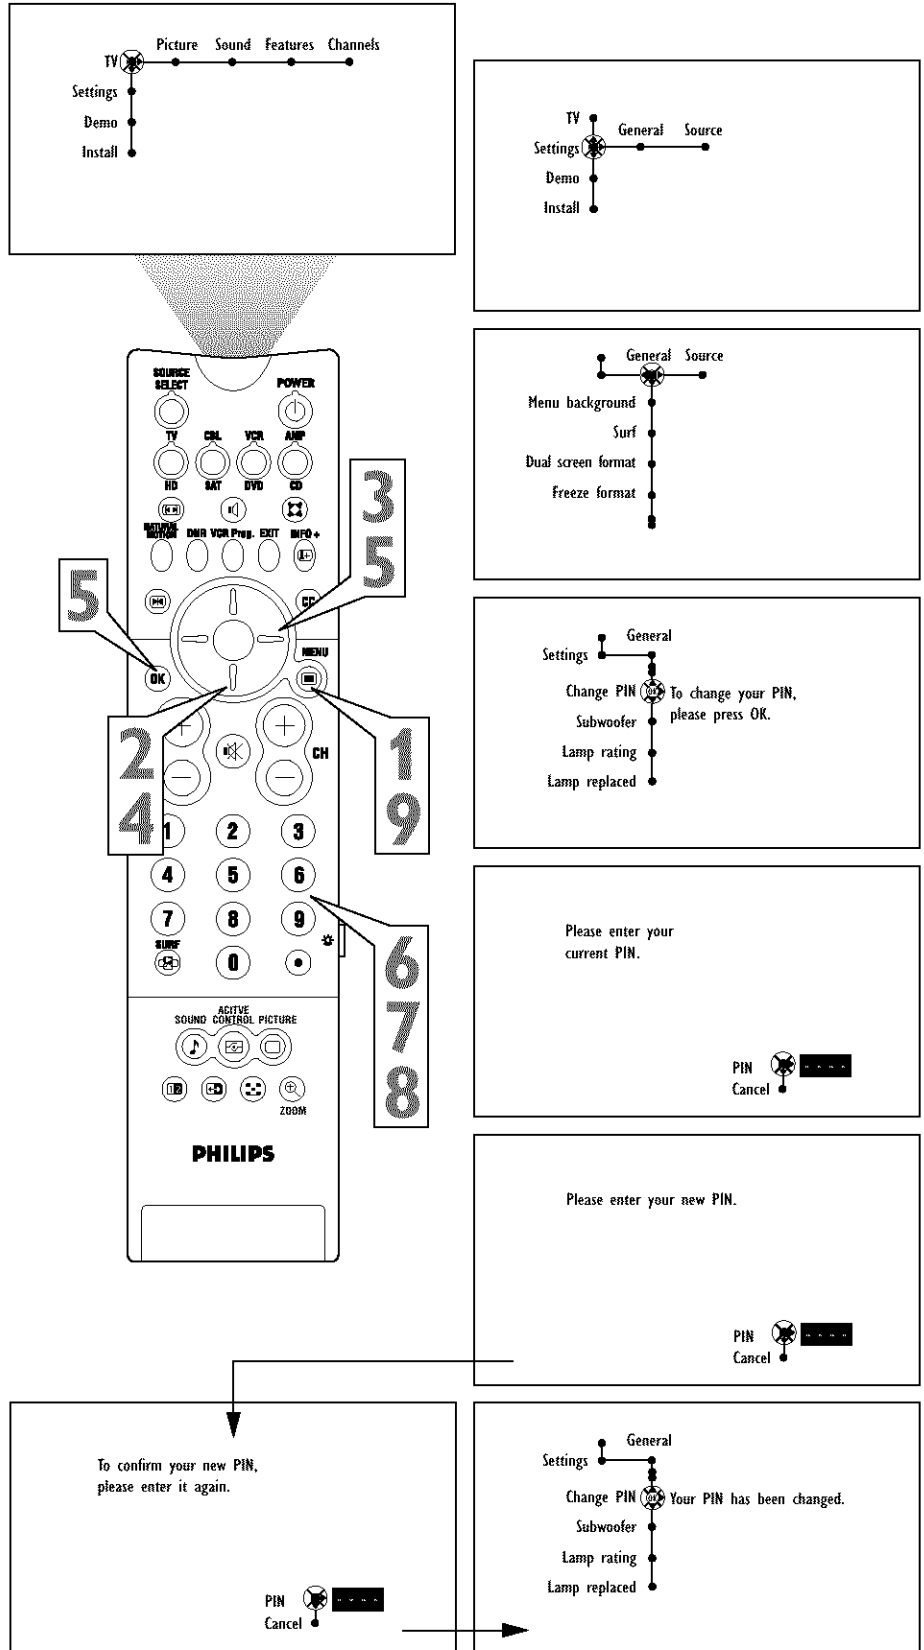







Setting the Subwoofer Control

If you connect a home-cinema surround-sound system with subwoofer to your TV (see page 19), you will need to select the Subwoofer "Yes" option in the TV's on-screen menu. These steps explain how.

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Down button to select "Settings."
- 3** Press the Cursor Right button to select the "General" menu.
- 4** Press the Cursor Down button repeatedly to select the "Subwoofer" control.
- 5** Press the Cursor Right button to toggle the Subwoofer control to "Yes" or "No." Select Yes if you have connected an external subwoofer to the SUB OUT jack on the back of the TV.
- 6** Press the Menu button on the remote control to remove the on-screen menu from the TV screen.

HELPFUL HINT


"Yes" must be activated for the Subwoofer menu selection before the SUB OUT jack will supply output. This is because the subwoofer's low frequencies are redirected to the main TV speakers when "No" is selected.

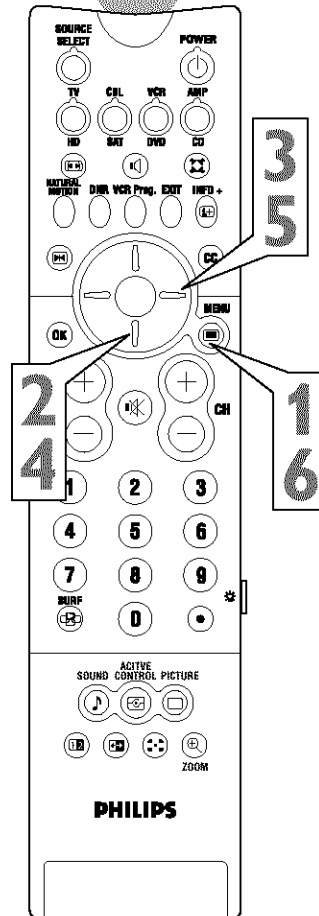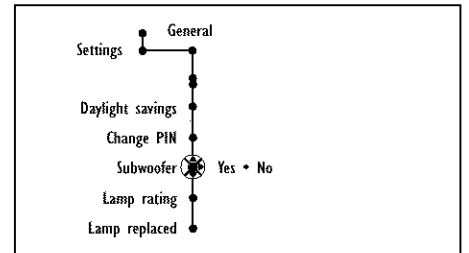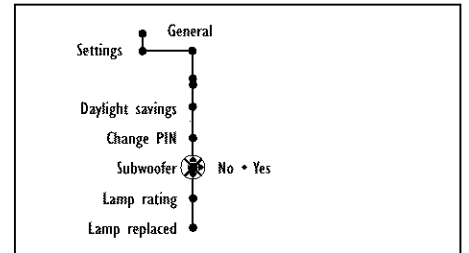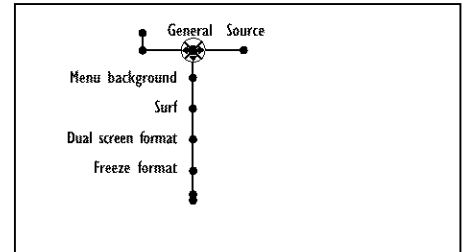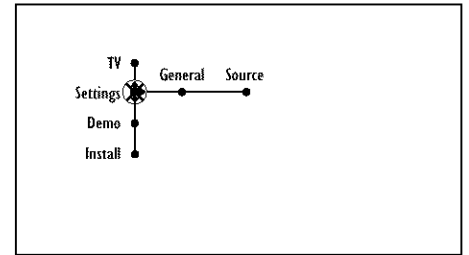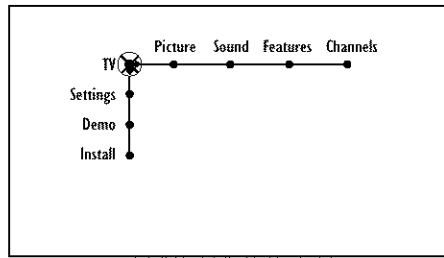



WARNING


To avoid possible shock hazard, be sure the TV is unplugged from the electrical outlet before cleaning.

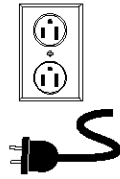

Be sure the TV is unplugged before cleaning it.

Cleaning the Cabinet


- Regularly dust the TV cabinet with a dry, nonscratching duster.
- Gently wipe the cabinet surfaces with a soft, clean cloth. Even if the surfaces are very dirty, do not apply cleaner to them directly. Soak the cloth in a solution of cool, clean water and mild soap or detergent. Wring out the cloth and wipe the cabinet surfaces clean. Then use a clean, dry cloth to dry the wiped surfaces.
- Occasionally vacuum the ventilation slots on the back cover of the set. See the next section on “Cleaning or Replacing the Filters.”
- Never use thinners, insecticide sprays, or other chemicals on or near the cabinet, as they might cause permanent marring of the cabinet finish.
- The television contains plastic parts. DO NOT use benzine, thinners, or other chemicals to clean. DO NOT use insecticide or other volatile substances nearby. DO NOT allow the TV to come into contact for extended periods of time with rubber or vinyl products.

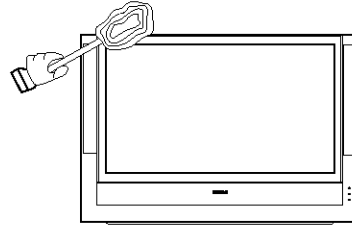

Use a nonscratching duster.




Soak the wiping cloth in cool, clean water and mild detergent. Then ring the cloth out before using.

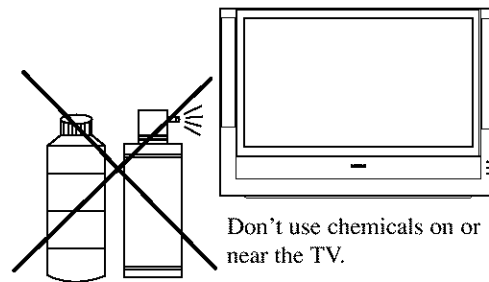

Don't use chemicals on or near the TV.

Cleaning the Screen

- Use a dry soft cloth to wipe the screen. Use even, easy, vertical strokes. Take care not to scratch or damage the screen surface. Avoid wearing jewelry or using anything abrasive.

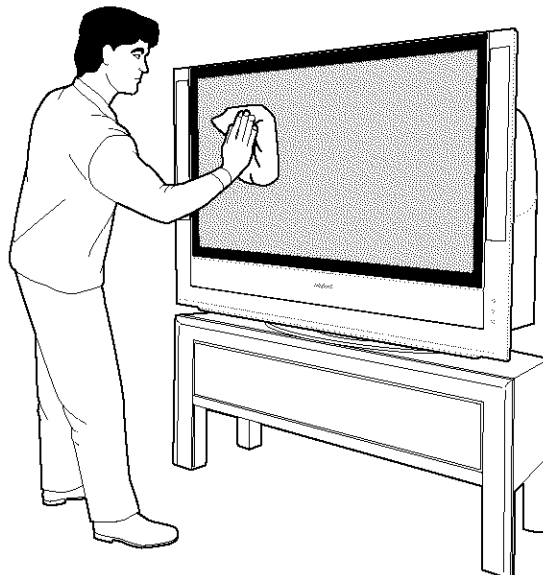



Cleaning or Replacing the Filters

The Cineos TV has two filters that cover air inlets on the bottom of the set. Maintaining a free flow of air through the inlets is very important. If the air filters are allowed to become dirty, clogged, or blocked, the temperature in the set will rise.

Should the heat level be allowed to become too high due to blockage, a sensor will detect this, and a warning message will appear on screen to alert you to check the air inlets for blockage. The message will be displayed for 6 seconds. It will reappear every 15 minutes as long as the temperature remains too high.


If the internal temperature of the TV is allowed to rise to a level that if prolonged could damage the TV, a warning message alerting you that the TV is shutting down will appear. Then, if the temperature remains at this high level for 1 minute, the TV will enter Standby mode. In Standby mode, the TV is off.

Be sure the TV is not placed on a surface (such as a shag carpet) that will prevent the free flow of air through the inlets, and periodically clean or replace the filters as detailed in the following instructions.



WARNING: Do not tip the TV when removing or installing the filters. This may result in instability of the TV.

- 1** Place your fingers under one of the filter slots located at either bottom left or right in back of the TV cabinet.
- 2** Grasp the filter and gently pull it straight out.

Continued on the next page.

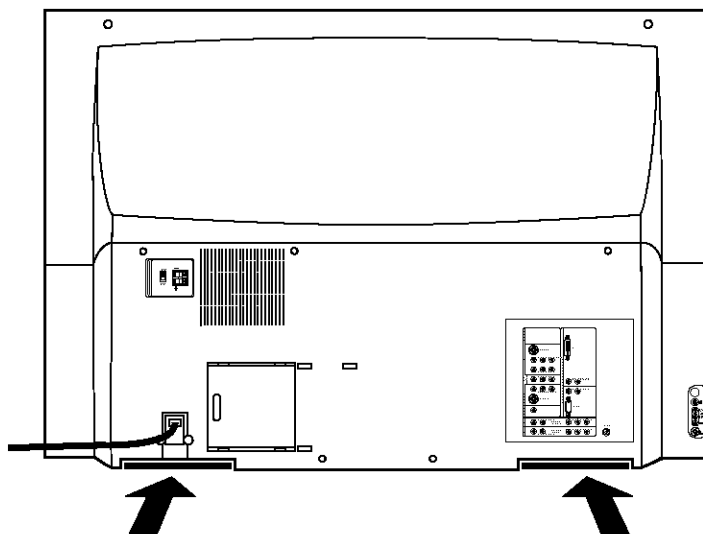

Locations of Air Filters

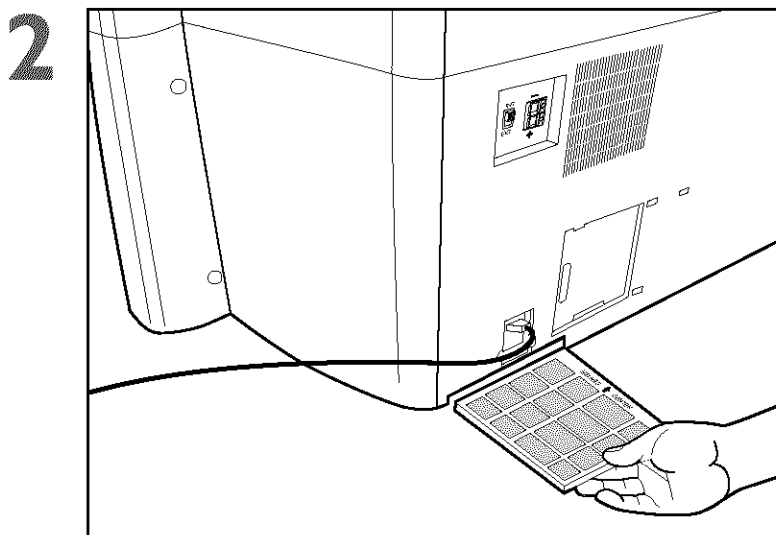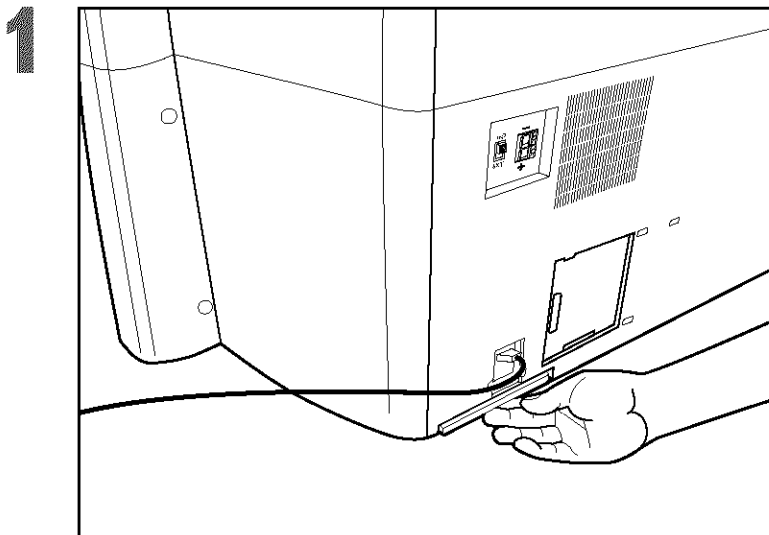



Continued from page 68.

- 3** Examine the filter for dust or other contamination. If it is dirty, clean it with a vacuum cleaner. **DO NOT WASH** it. Replace the filter if vacuuming does not sufficiently clean it.


To order replacement filters, call the Philips Customer Care Center at 1-800-531-0039. A Philips associate will be happy to assist you. The part number for the Philips TV inlet filter assembly is 3135 037 51810.

WARNING:


DO NOT operate the TV without filters. This will cause serious damage to the TV.

- 4** Turn the filter so that the arrow is pointing toward the center of the TV. Align the edges of the filter with the slot track, then gently slide it all the way back into the slot. A click sound can be heard as the filter reaches the correct position.

3

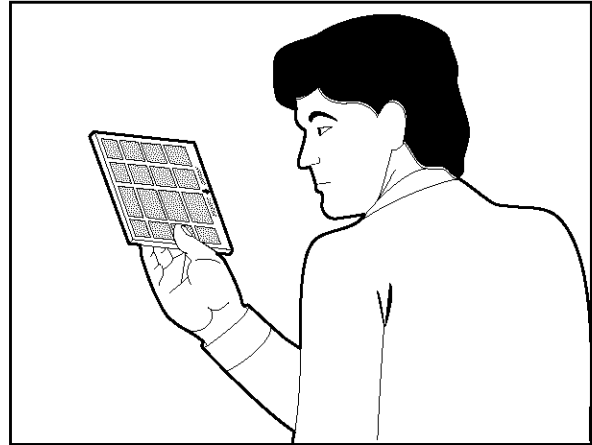

4

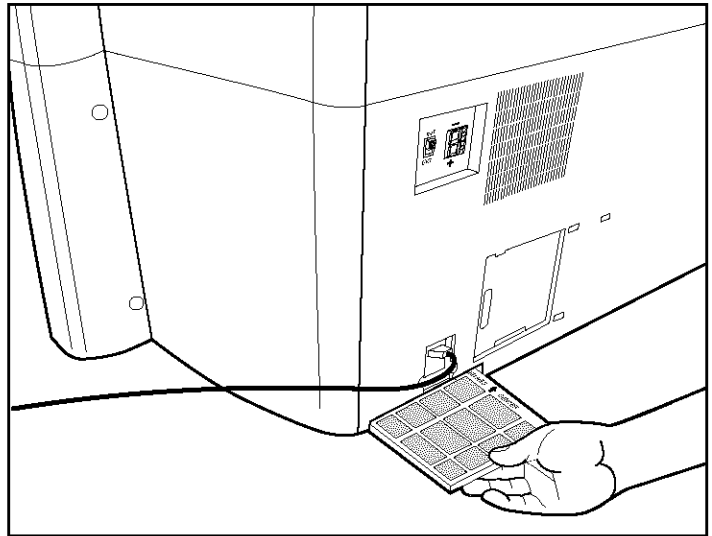



Replacing the Lamp

The Cineos TV uses a lamp with a limited lifetime to illuminate the picture. A Lifetime counter in the TV records the operating time of the lamp. One hundred hours before the lamp reaches the end of its life, a warning message will appear on screen. This will allow you to prepare to replace the lamp or take action right away. The message will disappear within 6 seconds. It will reappear each time the TV is turned on until the lamp is replaced.






To order a replacement lamp, call the Philips Customer Care Center at 1-800-531-0039. A Philips associate will be happy to assist you. The part number for the Philips TV replacement lamp is 3122 438 71310.

Here are the steps for replacing the lamp:

- 1** Power off the TV. Unplug the TV.
- 2** The lamp door is located on the back of the TV next to the power cord. Gently slide the door completely to the right to open.
CAUTION: The lamp gets extremely hot. Allow a cool-down time before removing the lamp.
- 3** Unscrew the thumb screws until they are dangling.
- 4** Lift the handle out.

Continued on page 71.

NOTE: A blinking orange light in the Active Standby Window means that the lamp is worn out, dead, or has expired and needs to be replaced.

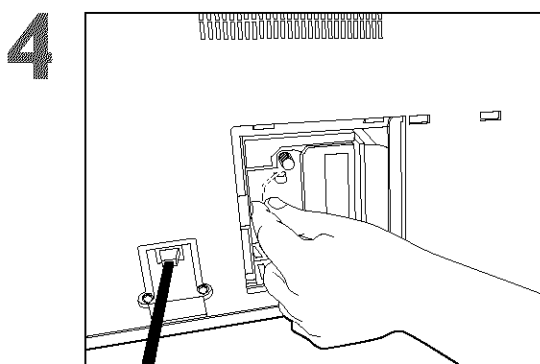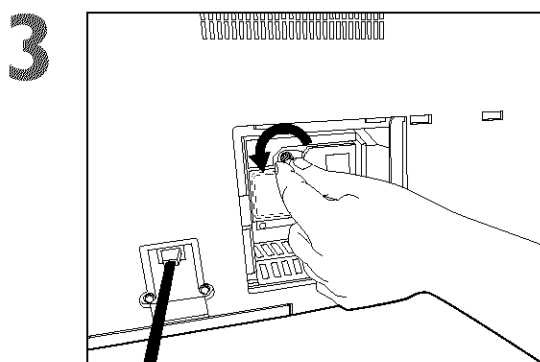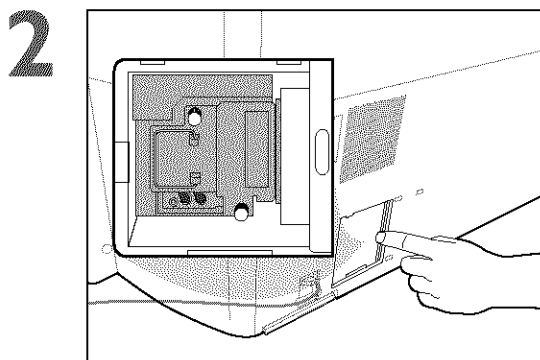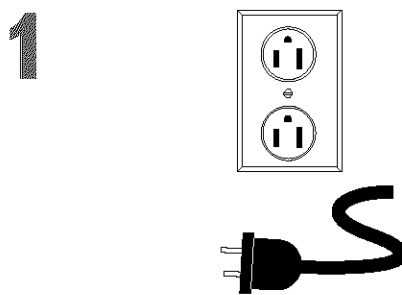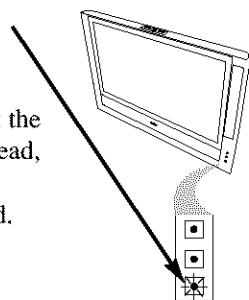



Continued from page 70.

5 CAUTION: When removing the lamp, do not touch the glass envelope. It may still be hot.

Grasp the handle, then pull out and slightly down to remove.

WARNING: The lamp contains mercury. Dispose of the lamp in accordance with local, state, and federal regulations.

6 CAUTION: When installing the new lamp, do not touch the glass envelope. Oil from skin can reduce lamp life.

Align the groove on top of the new lamp's housing with the corresponding groove pocket inside the TV, then slide the new lamp into place.


7 Tighten the thumb screws clockwise until finger tight only. Do not over-tighten.

8 Slide the lamp door closed.


IMPORTANT: The door must be closed completely to the left. Otherwise, the TV will not operate.

9 Go to page 72 for instructions for setting the Lamp Rating and resetting the Lamp Lifetime Counter.


5

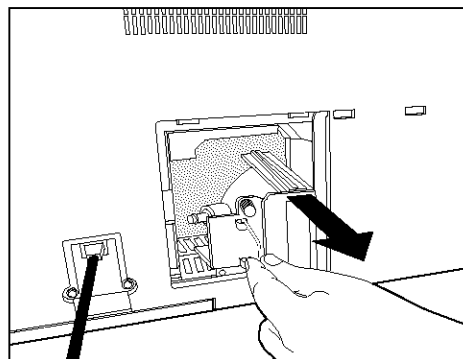


6

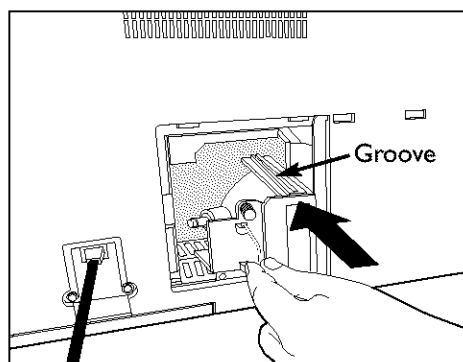

7

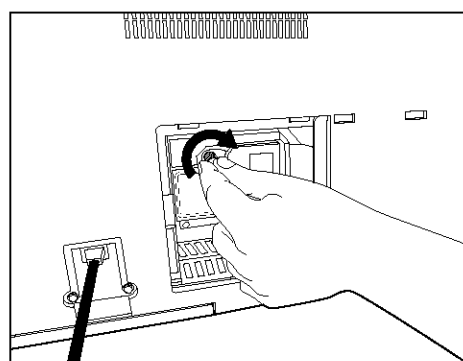

8

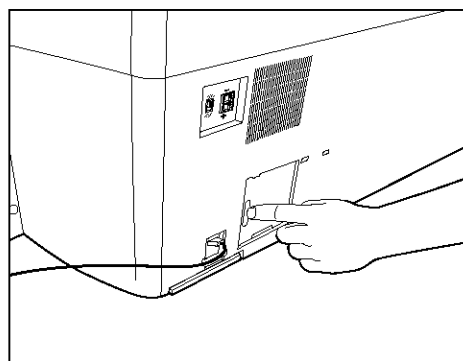

9

Go to page 72 for instructions for resetting the Lamp Lifetime counter through the TV's on-screen menu.











Resetting the Lamp's Lifetime Counter

After installing a new lamp in the TV, you need to enter the "Lamp rating" list in the on-screen menu and select the alphabetical code that is provided with the lamp. This will be a letter from A–Z. The letter represents the lifetime of the lamp. By inputting the code, you are telling the TV's Lamp Lifetime Counter the lifetime of the new lamp.

The next step is to use the "Lamp replaced control" to tell the TV that you have installed a new lamp. This control resets the Lifetime Counter to 0 for the new lamp and begins keeping track of the lifetime of the new lamp.

- 1** Press the Menu button on the remote control to display the on-screen menu.
- 2** Press the Cursor Down button to select "Settings."
- 3** Press the Cursor Right button to select the "General" menu.
- 4** Press the Cursor Down button repeatedly until "Lamp rating" is selected.
- 5** Press the Cursor Right button to enter the rating list.
- 6** If necessary, press the Cursor Down button as many times as necessary to select the letter for your replacement lamp.
- 7** Press the Cursor Left button to return to the "General" menu.
- 8** Press the Cursor Down button to select "Lamp replaced."
- 9** Press the OK button to confirm that you have changed the lamp.
- 10** Press the Menu button to remove the on-screen menu from the TV screen.

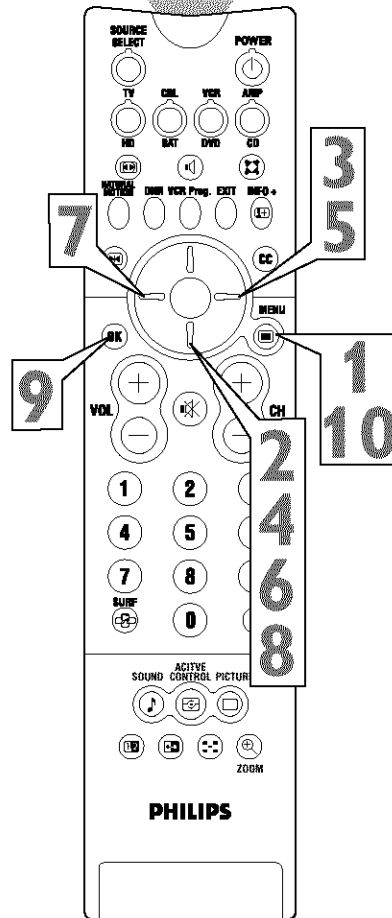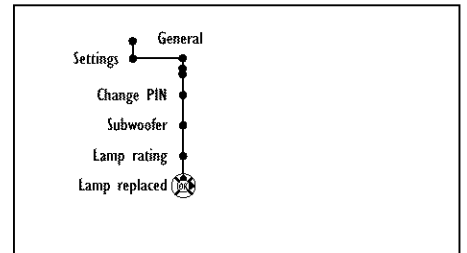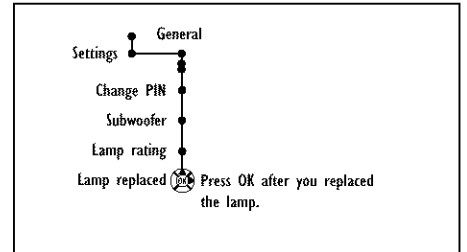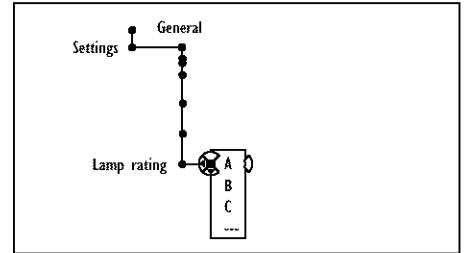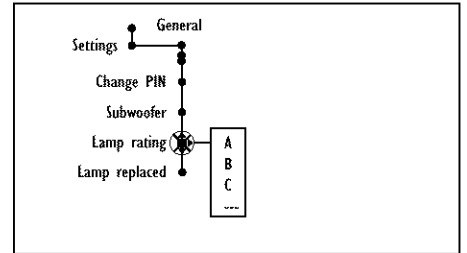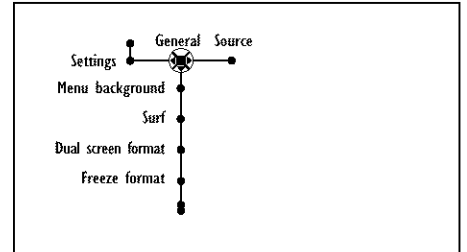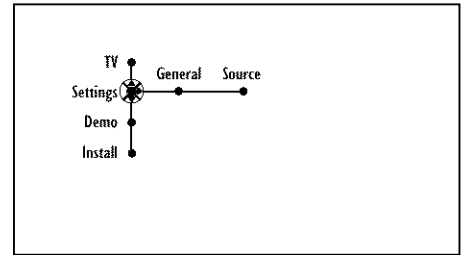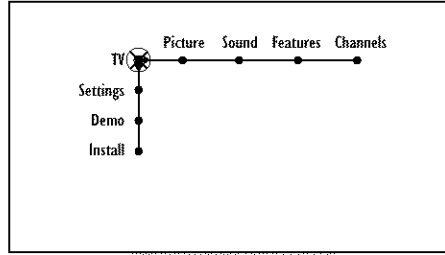

HELPFUL HINTS

- One hundred hours before the lamp reaches the end of its life, a warning message will appear on screen to alert you. Changing the lamp at this point is recommended for optimal performance.
- A blinking orange light on the front of the set means that the lamp is not working anymore and needs to be replaced.



Review This List of Symptoms and Checks Before Requesting Service

You may be able to solve the problem yourself. Charges for TV installation and adjustment of customer controls are not covered under your warranty.

If you need to call a customer service representative, please know the model number and serial number of your product before you call. This information is displayed on the back of the product. Also, please take a moment to identify the problem you are having, and be prepared to explain this to the representative. If you believe the representative will need to help you with operations, please stay near the product. Our representative will be happy to assist you. **To reach our Customer Care Center, call 1-800-531-0039.**

TV-related Checks

The TV won't switch on.

- Make sure the power plug is plugged in.
- If you're using the TV remote control to turn the TV on, be sure the remote is in TV mode. (page *Q6)
- Plug something else in to be sure the wall outlet (or extension cord) is receiving power.
- The remote control could have a problem. See the troubleshooting section "Remote-related Checks" on page 74.
- Make sure the lamp door is not ajar. The TV is designed not to operate with the lamp door open. (pages *Q1, 71)
- If a red light is blinking on the front of the TV, the set has entered protection mode. Unplug and plug the set back in a couple of times and try to switch it on. If the problem persists, contact the Customer Care Center at 1-800-531-0039.

The TV switches off unexpectedly.

- If the lamp door is open, the TV will shut down. The TV is designed not to operate when the lamp door is ajar.
- If a red light is blinking on the front of the TV, the set has entered protection mode. Unplug and plug the set back in a couple of times and try to switch it on. If the problem persists, contact the Customer Care Center at 1-800-531-0039.
- The Sleep timer may have been set to turn the TV off. Turn the TV back on if desired. (page 48)

The TV switches on unexpectedly.

- The On Timer may have been set. (page 49)

An on-screen message tells you that it is time to replace the lamp.

- The message appears on screen when the lamp has 100 hours of life left, and will reappear each time the TV is turned on until the lamp is replaced. Prepare to replace the lamp or take action right away. (pages 70–72)

An on-screen message instructs you to check the air inlets for blockage.

- Check the air inlets and filters for blockage and clean or replace the air filters as necessary. (pages 68–69)

You have a picture but no sound.

- Make sure Mute is not on. (page *Q6)
- The TV speakers may be turned off. Make sure the Center Channel Amp Switch on the back of the TV is in the INT position. (page 7)

You have no picture.

- If you have made a connection to the TV's Tuner jack be sure to use Autoprogram. (page *Q8).
- If you want to view materials from an accessory device (DVD player, VCR, or satellite receiver, for example) be sure you have selected the input source to which you have connected the device—AV1, AV2, AV3, AV4, AV5, AV6, or Side. (pages *Q4, *Q6, 10–16, 18, 20)
- Make sure you have made connections correctly. (pages *Q3–5, 10–16, 18, 20)

You have no picture and no sound.

- If you see a blinking orange light on the front of the set, this means that the lamp is worn out, dead, or has expired and needs to be replaced. (pages 70–72)

You see scrolling images.

- Make sure you have made connections correctly. (pages *Q3–5, 10–16, 18, 20)

*Q refers to the *Quick Use and Setup Guide* that came with your TV.



TV-related Checks (continued from page 73)

The picture appears doubled or tripled.

- If you are using an antenna, be sure it is facing in the correct direction. Also, check to see if it may be receiving signals that are being reflected off of mountains or buildings.

The picture shakes or is not clear.

- If you are using an antenna, make sure it is not broken or shorted, and make sure the antenna cable is connected properly and securely.
- If you are using a VCR and selecting channels on the TV, make sure the TV/VCR mode on the VCR is set to TV.

The picture has no colors or colors are not correct.

- Make sure you have made connections correctly. (pages *Q3–5, 10–16, 18, 20)
- If you have connected accessory equipment, such as an HD satellite receiver, make sure the color setting on the accessory equipment is correct. See the user manual for the HD satellite receiver.

The TV sound has an unusual quality.

- Check the TV's Equalizer control to be sure it is set to the option you want. (page 39)

Remote-related Checks

The remote control does not work.

- Make sure nothing is blocking the path between the remote control and the TV or accessory device you want to operate.
- Make sure you point the remote directly at the TV or accessory device you want to operate.
- If you want to operate the TV, make sure the remote is in TV mode. If you want to operate an accessory device, program the remote for the device if necessary and make sure the remote is in the appropriate mode for the device. (pages *Q6, 22–26)
- Make sure you have installed the batteries correctly. (page *Q6)
- The batteries could be dead. When the batteries in the remote run low, the remote will send a "Battery Low" command to the TV. The TV will then display a message on the screen reminding you to replace the batteries as soon as possible.
- You may want to try taking the remote batteries out and putting them back in. **NOTE:** After taking the batteries out, you may need to reprogram the remote for use with accessory devices.

*Q refers to the *Quick Use and Setup Guide* that came with your TV.



Picture

- Screen Size
44PL9523: 44" measured diagonally
55PL9523: 55" measured diagonally
- Visible Screen Size
44PL9523: 44" measured diagonally
55PL9523: 55" measured diagonally
- Aspect ratio: 16:9
- Display technology: Philips single-panel liquid crystal on silicon (LCOS)
- Flicker free; perfect convergence
- Resolution: 1280 x 720
- 1080i HD performance and line doubling
- Brightness: 450 Nits
- Contrast ratio: 400:1
- Screen protector with anti-glare coating
- Digital Natural Motion™
- Digital Crystal Clear™
- Active Control™
- Widescreen Plus
- Picture Freeze

Sound

- Sound system: Hi-fi Stereo
- Virtual Dolby* Surround processing
- Output: 2 x 20W RMS at 2% distortion
- Frequency response: 20Hz–15kHz, +1/-3dB (ampl.)
- Loudspeaker configuration: two 2"/two 5"
- Control: Volume, 5-band Audio Equalizer Controls (with adjustments at 120Hz, 500Hz, 1.5KHz, 5KHz, and 10KHz), Balance, AVL (on/off), and Headphone (volume, balance)
- Center channel input
- Subwoofer out

Operation

- Easy, menu-driven installation and operation; direct-access menus and cursor control
- Selection of three menu languages: English, French, and Spanish
- On-screen status display on programs and functions (on-screen display)
- Sleep timer
- Favorite channel listing

- AutoLock™ to protect children from objectionable programming with V-chip technology
- Closed Captioning
- AutoPicture™ control: Soft, Natural, Rich, Multimedia, Personal
- AutoSound™ control: Movie, Speech, Music, Personal
- Eight widescreen modes: Automatic, Super Zoom, Panoramic, 4:3, Movie Expand 14:9, Movie Expand 16:9, 16:9 Subtitle, and Wide Screen
- Subtitle and heading shift (scroll the screen with the cursor buttons)
- Auto Format/Auto Screen Fit
- Smart Clock

Miscellaneous

- Mains: AC 110V ± 10%
- Power consumption: Normal operation: 233W
Standby: <1W
- Input and output jacks (see page 7)
- Product dimensions (d x w x h)
44PL9523: 14.6" x 46.7" x 31.7"
55PL9523: 17.4" x 56.6" x 38.1"
- Product weight (excluding packaging)
44PL9523: 73.1 lbs
55PL9523: 95.5 lbs
- Universal remote control: RC2043, universal RC managing TV and accessory devices

Supporting Features

- Digital Color Transient Improvement (CTI)
- Picture Freeze
- Auto Aspect Ratio Adaptation
- Incredible Surround™
- Automatic Volume Leveler (AVL)
- Independent headphone volume control
- Easy Tune™ (auto search, auto tune, auto install)
- Alternate channel
- AutoSurf™
- Low-power standby (<1W)

Supplied Accessories

- Remote control with two "AA" size batteries

Design and specifications are subject to change without notice.

Parts that will need to be replaced at some point during the life of the product:

- Philips TV inlet filter assembly: part number 3135 037 51810
- Philips TV lamp: part number 3122 438 71310.

To order the parts, contact the Philips Customer Care Center at 1-800-531-0039.

*Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

AutoLock and Easy Tune are trademarks of Philips Consumer Electronics. Copyright 2003 Philips Consumer Electronics. All rights reserved.



A

Active Control™ Plus+, 27
Active Control™ Plus+ Window, *Q5
Active Standby Window, *Q5, 70, 72
Alternate Audio (SAP) Control, 42
Antenna Attenuator, 56
Audio/Video Input Sources, Labeling, 21
AutoPicture™ Options, 34
AutoSound™ Options, 46
AVL (Auto Volume Leveler), 44
AV5 Clock Frequency and Phase, Adjusting, 17

B

Blocking Programs
Based on TV Ratings, 54
Based on Movie Ratings, 55

C

Cabinet
Buttons, *Q5
Windows, *Q5
Channel List, 50–51
Channels, Programming into the TV's
Memory, *Q8
Cleaning the TV, 68
Closed Captioning, 47
Color Enhancement, 33
Connections
Camcorder, 20
Computer, 16
HD Satellite Receiver to DVI, 18
HD Satellite Receiver to YPbPr, 15
Progressive-scan DVD Player, 14
Standard DVD Player, 13
Surround Sound, 19
S-Video, 12
VCR, 10
VCR and Cable Box, 11
Video Game System, 20

D

Daylight Savings, Setting, 64
Delta Volume, 45
Digital Processing Options, 30
Dolby** Virtual (See Sound Mode Options)
Dual Screen/PIP Format
Changing Channels or Input Sources, 60
Selecting, 59
DVI Input Jack, 7–8, 18
Dynamic Contrast Options, 31
Dynamic Noise Reduction Options, 32

F

Factory Service Locations, 77–78
Features, List of, 5
Filters, Cleaning or Replacing, 68–69

H

Headphone Volume, Adjusting, 37

I

Incredible Surround™ (See Sound Mode Options)

J

Jacks/Cables/Connectors, Descriptions, 7

L

Lamp
Replacing, 71–72
Resetting the Lifetime Counter, 73
Lamp Lifetime Counter, 72
Lamp Rating Control, 72
Language, Setting for the On-screen
Menu, *Q8
Lock After, 53
Lock Channel, 52
Loudness Control, 40

M

Menu Background, 57
MultiPIP Options, 61

O

On-screen Display Options, 63
On Timer, 49
Overheating, Preventing *Q1-2, 9, 68–69

P

Panel Jacks, Compatibility Information, 7–8
Panning the Screen, *Q6, 20, 35
Picture Controls, 29
Picture Format Options, 35–36
Picture Freeze Options, 61
PIN, Setting up or Changing, 65
Power Surges, Protecting Against, 9
Pre-connection Recommendations, 9
Product End of Life Disposal, 5

R

Remote Control
Programming, 22–23
Using with the TV, *Q6
Using with VCR, 26

Remote Sensor Window, *Q5
RGB+HV Input Jack, 7–8, 16

S

Safety Instructions, *Q1, 2–3, 9, 68–69, 70–71
SAP (See Alternate Audio [SAP] Control)
Service (See Factory Service Locations)
Signal Splitter, *Q4, 8, 11
Sleeptimer, 48
Sound Mode Options, 41
Specifications, Product, 75
Stand (Optional), Mounting, *Q3
Stereo, Setting the TV for, 43
Subwoofer
Output Jack, 7–8, 19
Control (in on-screen menu), 19
Surf Options, 58
Surround Sound (See Connections and Sound Mode Options)
S-Video Input Jacks, 7–8, 12
Swivel (Optional), Mounting, *Q2

T

Time Zone, Selecting, 64
Troubleshooting, 73–74
Tuner (RF) Input Jack, *Q3–5, 7–8, 10–11
TV Equalizer Options, 38
TV Signals
Information on, 6
Ways of Receiving, 6
TV Speaker Balance, 39
TV Volume, 37
Twin-lead Adapter, 8

V

Video Game Systems (See Connections)
Volume, Adjusting
Headphone, 37
TV, 37

W

Warranty, 80
Welcome, 2


Y

YPbPr Input Input Jacks, 7–8, 13–15

*Q refers to the *Quick Use and Setup Guide* that came with your TV.

**Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

Factory Service Locations

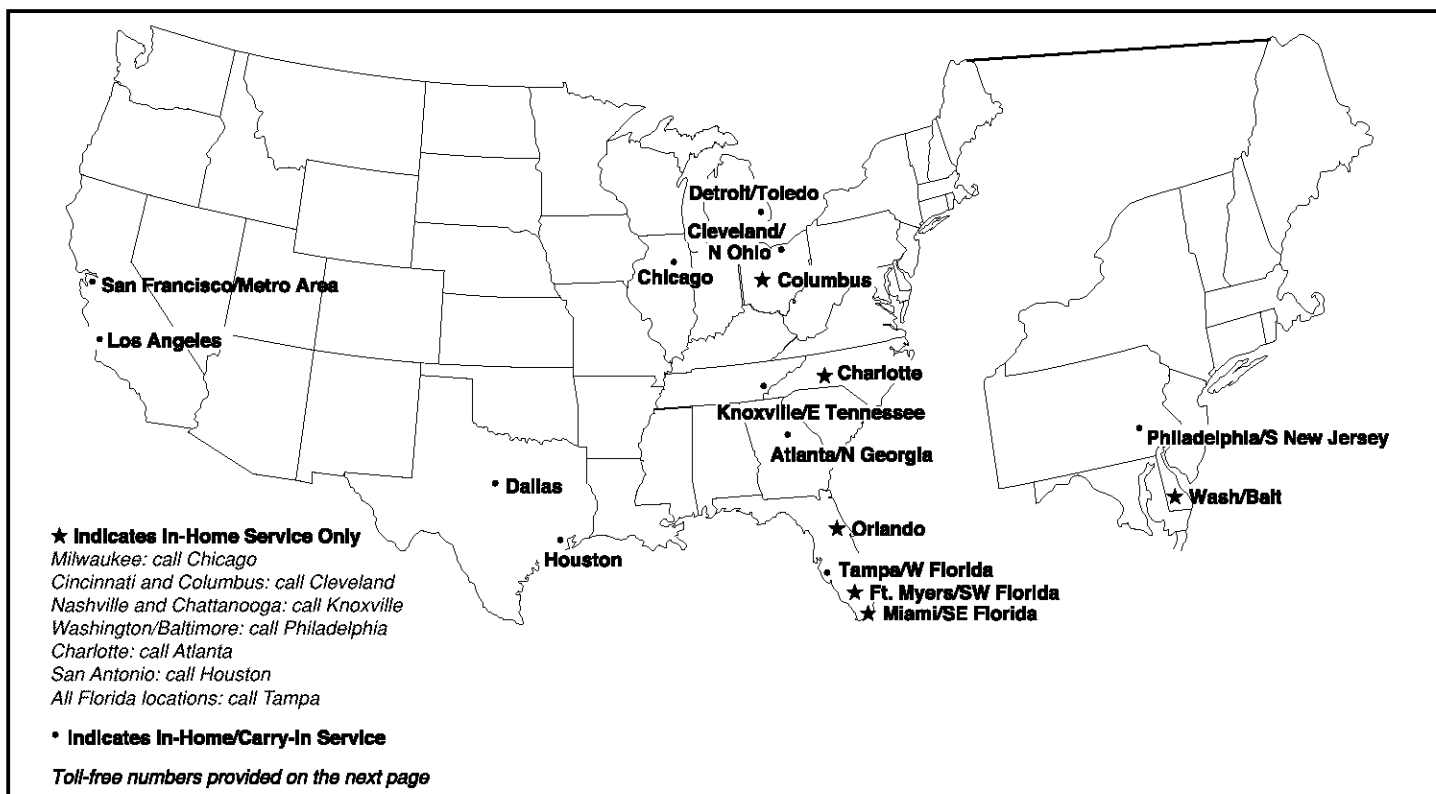

NOTE: If you reside in one of our Philips Factory Service Branch areas (see the directory on the next page), you can contact the nearest Service Branch to obtain efficient and expedient repair for your product. If your product is In-Warranty, you should have proof-of-purchase to ensure No Charge Service. For Out-of-Warranty service, call the location nearest you.

NOTA: Si vous résidez dans une des régions desservies par une succursale de service après vente du fabricant Philips (voir liste ci-dessous), vous pourrez contacter la branche de service après vente la plus près de chez vous pour obtenir un service après vente rapide et efficace. Si le produit est sous garantie, il suffira de présenter une preuve d'achat pour bénéficier d'un service sans frais. Pour les produits non couverts par la garantie, contactez le centre le plus près de chez vous.

NOTA: Si Ud. reside en una de nuestras zonas para sucursales Philips de servicio al de fábrica (ver directorio más abajo), Ud. puede comunicarse con la sucursal de servicio más cercana para obtener una reparación oportuna y eficaz de su producto. Si su producto está todavía bajo garantía, Ud. debe presentar comprobante de compra para no ocasionar ningunos cargos por servicio. Para servicio después del vencimiento de la garantía, llame al lugar más cercano de los abajo indicados.

In Canada

How you can obtain efficient and expedient carry-in, mail-in, or in-home service for your product

Please contact Philips at
 1-800-661-6162 (French speaking)
 1-800-531-0039 (English or Spanish speaking)

Au Canada

Comment obtenir le service après-vente pour les produits apportés ou envoyés par la poste à notre centre de service ou le service à domicile

Veillez contacter philips à:
 1-800-661-6162 (Francophone)
 1-800-531-0039 (Anglais ou Espagnol)

En el Canadá

Cómo recibir servicio eficiente para su producto, en persona, por correo o a domicilio

Favor de comunicarse con Philips al:
 1-800-661-6162 (francófono)
 1-800-531-0039 (Inglés o Español))



Factory Service Locations

QUALITY SERVICE IS AS CLOSE AS YOUR TELEPHONE! SIMPLY LOOK OVER THE LIST BELOW FOR THE NUMBER OF A FACTORY SERVICE CENTER NEAR YOU. YOUR PRODUCT WILL RECEIVE EFFICIENT AND EXPEDIENT CARRY-IN, MAIL-IN, OR IN-HOME SERVICE, AND YOU WILL RECEIVE PEACE OF MIND, KNOWING YOUR PRODUCT IS BEING GIVEN THE EXPERT ATTENTION OF PHILIPS' FACTORY SERVICE.

COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SOIT PAR COURRIER, À DOMICILE, OU EN SE PRÉSENTANT À UN CENTRE DE SERVICE PHILIPS. PLUS DE 600 CENTRES DE RÉCEPTION DE PRODUITS À RÉPARER À TRAVERS LE PAYS: CONTACTER LE CENTRE DE SERVICE AUX CONSOMMATEURS LE PLUS PROCHE POUR SAVOIR L'EMPLACEMENT DE CES DÉPÔTS DANS UN RAYON DE 50 À 75 MILES (80 KM À 120 KM) DU CENTRE DE SERVICE LOCAL.

CÓMO OBTENER UN SERVICIO OPORTUNO Y EFICIENTE POR CORREO, EN CASA O EN PERSONA PARA SU PRODUCTO A TRAVÉS DE UN CENTRO PHILIPS DE SERVICIO. MAS DE 600 SITIOS POR TODO EL PAIS PARA LA RECEPCION DE PRODUCTOS NECESITADOS DE REPARACIONES: COMUNICARSE CON EL CENTRO DE SERVICIO DE FABRICA MAS CERCANO PARA ESTOS LUGARES DENTRO DE UN RADIO DE 80 A 120 KM (50 A 75 MILLAS) DEL CENTRO DE SERVICIO LOCAL.

ATLANTA

Philips Factory Service
550 Franklin Road., Suite F
Marietta, GA 30067
800-273-1501

TAMPA

Philips Factory Service
1911 US Highway 301 North, Suite 100
Tampa, FL 33619
800-442-2027

SAN FRANCISCO

Philips Factory Service
681 East Brokaw Rd.
San Jose, CA 95112
800-300-9013

HOUSTON

Philips Factory Service
1110 N. Post Oak Rd., Suite 100
Houston, TX 77055
800-952-3254

CLEVELAND

Philips Factory Service
950 Keynote Circle
Brooklyn Heights, OH 44131
800-331-7037

DETROIT

Philips Factory Service
25173 Dequindre
Madison Heights, MI 48071
800-438-1398

DALLAS

Philips Factory Service
415 N. Main Street, #107
Euless, TX 76040
800-952-3254

LOS ANGELES

Philips Factory Service
20930 Bonita, Ste. V
Carson, CA 90746
800-300-9013

CHICAGO

Philips Factory Service
1279 W. Hamilton Pkwy.
Itasca, IL 60143
800-531-2922

KNOXVILLE

Philips Factory Service
One Philips Drive
Building 2
Knoxville, TN 37914
800-821-1767

PHILADELPHIA

Philips Factory Service
354 Dunks Ferry Rd.
Bensalem, PA 19020
800-847-9320

This page is intentionally left blank.



Limited Warranty

PHILIPS TELEVISION

One Year Free Labor

One Year Free Service on Parts

30 days Free Service on Television Screen

This product can be repaired in-home.

WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For one year thereafter (30 days for the TV screen), all parts will be repaired or replaced, and labor and transportation are free. After one year from the day of purchase, you pay for the replacement or repair of all parts and for all labor and transportation charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes.

WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

TO GET WARRANTY SERVICE...

Repair must be performed by an authorized service center or a factory service center. *If you do not live near a factory service center, contact your dealer.* If your dealer is an authorized service center, he will arrange repair. If your dealer is not an authorized service center, he will direct you to the authorized service center engaged by him to service the products he sells.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

IF YOU HAVE QUESTIONS...

Please contact Philips at:

- 1-800-531-0039**, if calling from the USA (English or Spanish Speaking)
- 1-800-661-6162**, if calling from Canada (French Speaking)
- 1-800-531-0039**, if calling from Canada (English or Spanish Speaking).

REMEMBER...

Please record below the model and serial numbers found on the product. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # _____
 SERIAL # _____

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips Consumer Electronics, P.O. Box 520890, Miami, FL 33152, (402) 536-4171

EL6551E001 / 3-03

Quick Use and Setup Guide



Contents

Warning	1
See the User Manual	1
Positioning the TV	2
Mounting the Swivel to the TV	2
Mounting the Swivel and TV to the Stand	3
Making Basic Connections to the TV	3-5
Operating the TV	5
Using the Remote Control	6
Using the On-screen Menu	7
Using the Demo Mode	7
Using the Installation Features	8

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR EXCESSIVE MOISTURE.



As an Energy Star® Partner, Philips Consumer Electronics has determined this product meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark. Using products with the Energy Star® label can save energy. Saving energy reduces air pollution and lowers utility bills.

See the User Manual for Important Maintenance Information

In addition to providing information about safety, connecting accessory devices, and using the TV's features, the *Directions for Use* manual explains how to care for and maintain your Cineos television. The TV contains air filters that must be maintained and eventually replaced, and a lamp that eventually will need to be replaced.

Air Filters

The air filters (located at the bottom of the TV) must be kept clean and free of blockage.


NOTE: DO NOT operate the TV without the filters. Damage to the TV will occur. Allow four to six inches of space behind the TV for air flow through the back slots.

IMPORTANT: Excessive heat inside the TV resulting from inadequate ventilation will cause the TV to shut down or not to operate.

Lamp


An on-screen message will alert you when the lamp is nearing the end of its expected lifetime so that you can change it before it wears out.

IMPORTANT: The TV will not operate if the lamp door is left open, and the TV will shut down if the door is opened during operation.

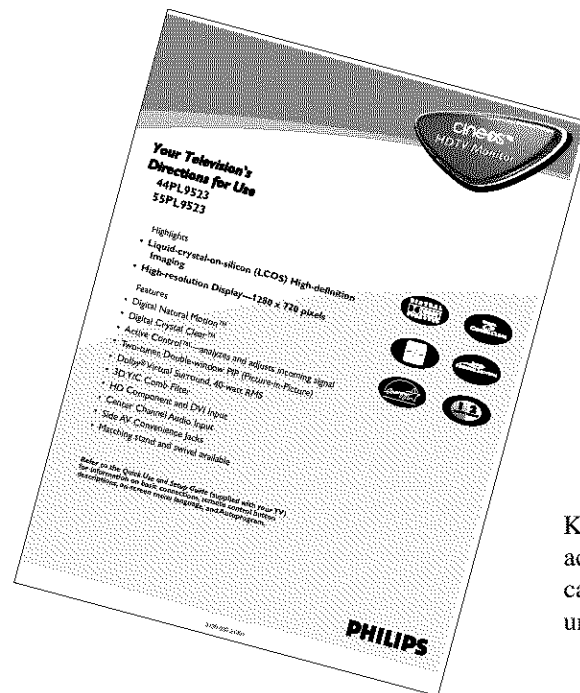


Keep the *Directions for Use* manual accessible to correctly maintain and care for your TV, as well as to understand and use its features.

Back of TV

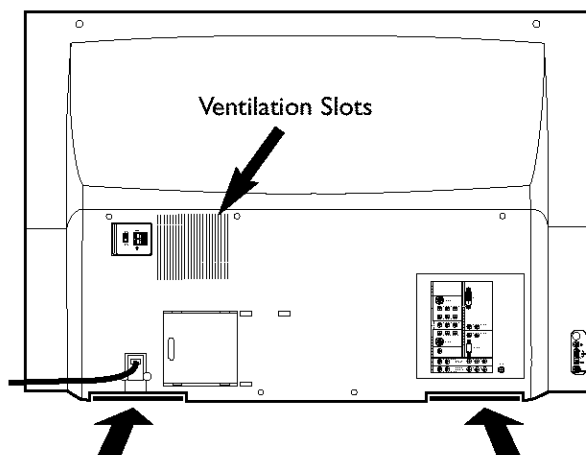

Locations of Air Filters


Back of TV

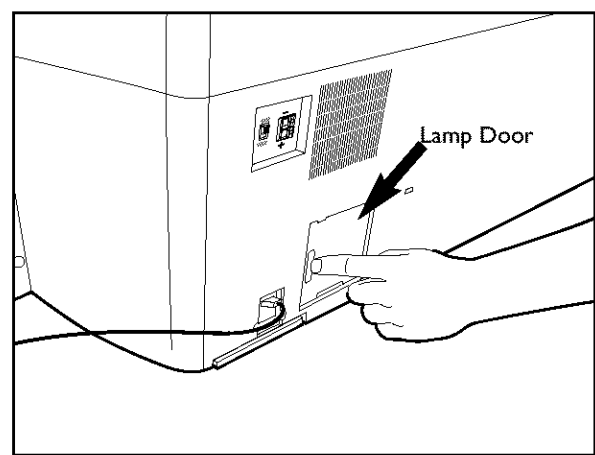

The lamp door must be closed for the TV to operate.

IMPORTANT! Initial TV Setup


When you turn on your TV for the first time it will prompt you to enter some setup information about Language preference and Channel programming. See page 8 in this Quick Use and Setup Guide for more information about these menus.

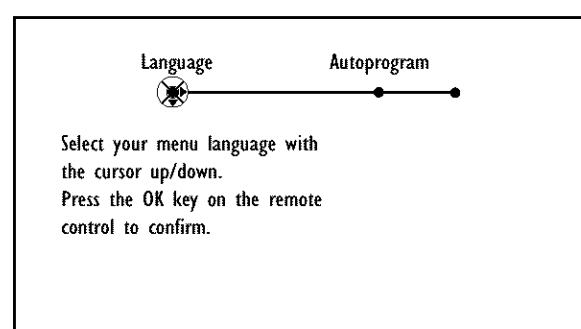

Positioning the TV

Before connecting accessory devices—VCR, DVD player, or HD receiver, for example—please keep the following in mind:

- Place the TV on a flat surface. An unlevel surface may adversely affect picture performance.
- Do not place the TV on shag carpet or any surface that will block the air inlets at the bottom of the set. Blockage will cause the TV to overheat and shut down.
- Allow 4 to 6 inches of space behind the TV for ventilation.
- To purchase an optional swivel and/or stand to go with your Philips Cineos TV, see the electronics dealer where you bought your TV.
- Test various locations in the room to find the optimal spot to locate the set for best viewing.
- Do not place the TV in direct sunlight or near a heating appliance.
- Do not expose the TV to rain or moisture.
- To prevent any unsafe situations, do not place objects on top of the TV.






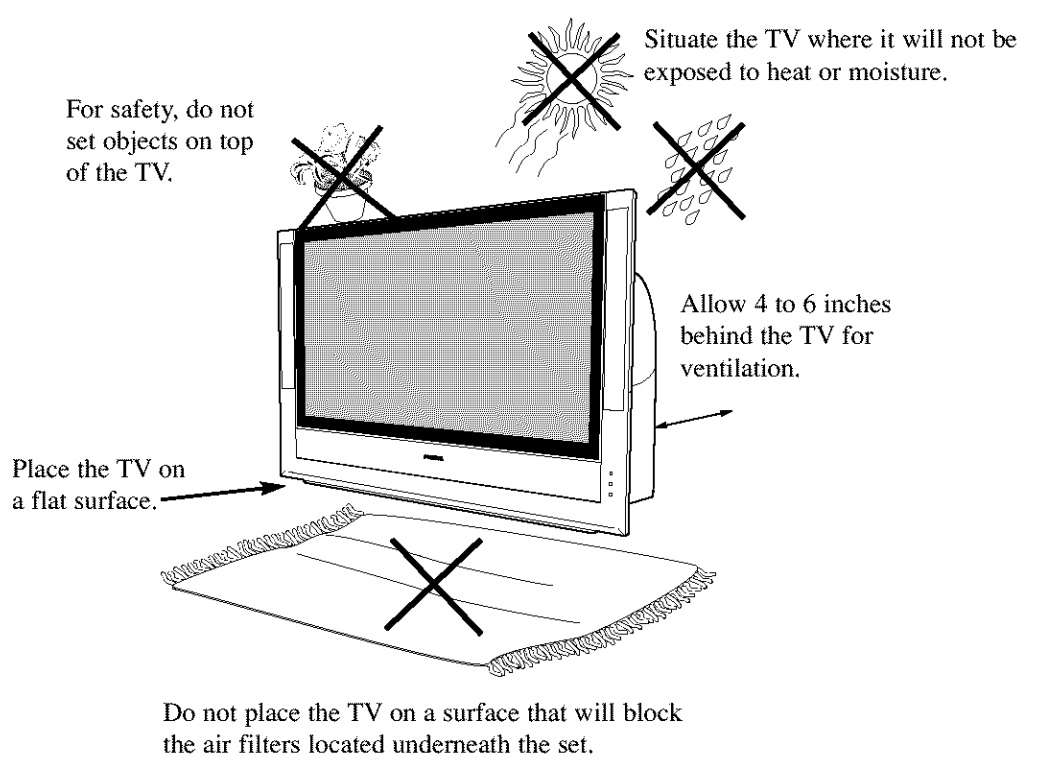


Mounting the Swivel to the TV

Following are instructions for mounting the optional swivel.






NOTE: Attach the swivel before hooking up the TV.

- 1** Remove the foam cushion polybag from around your TV and place it on the floor.
- 2** **NOTE:** At least two people are required to perform this task. Carefully lay the TV back flat on the foam cushion polybag.
- 3** Guide the two rubber bumpers on the swivel into the corresponding holes on the bottom of the TV.
- 4** Use the supplied screws (4) to fasten the swivel to the TV. Tighten the screws until hand tight. Do not overtighten.
- 5** Be sure the swivel is in center position.
- 6** Place the TV and mounted swivel upright on a level surface, preferably a TV stand. An unlevel surface may adversely affect picture performance.

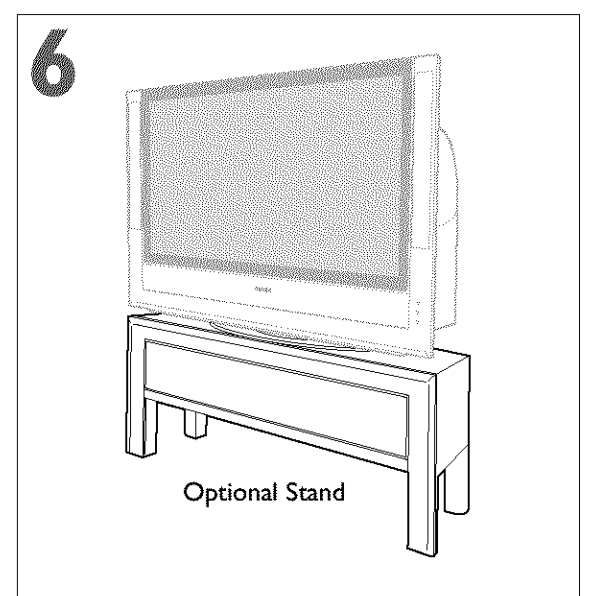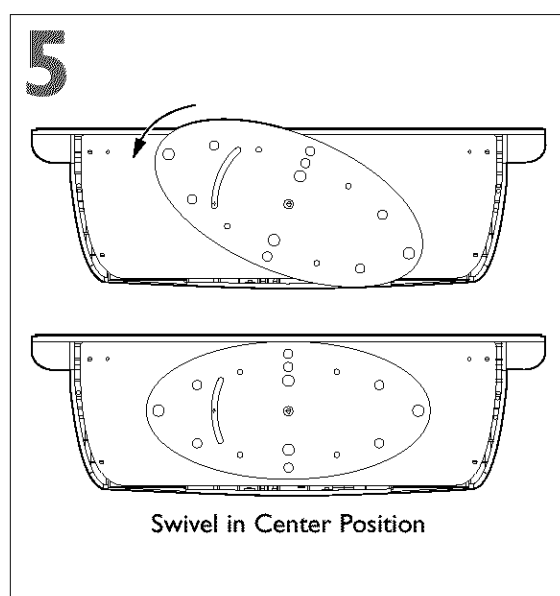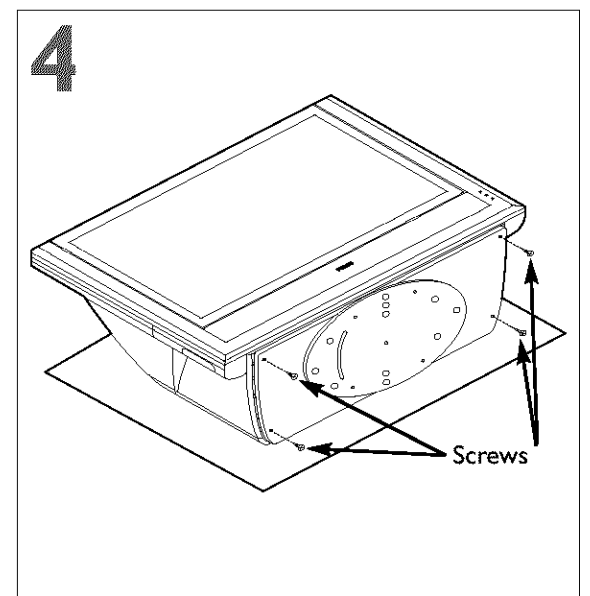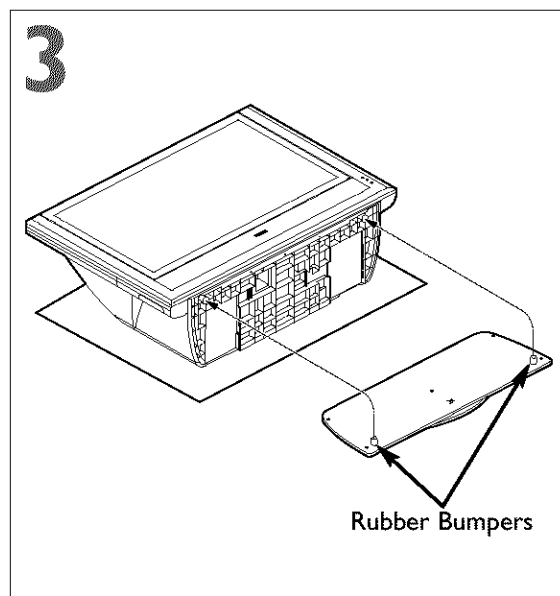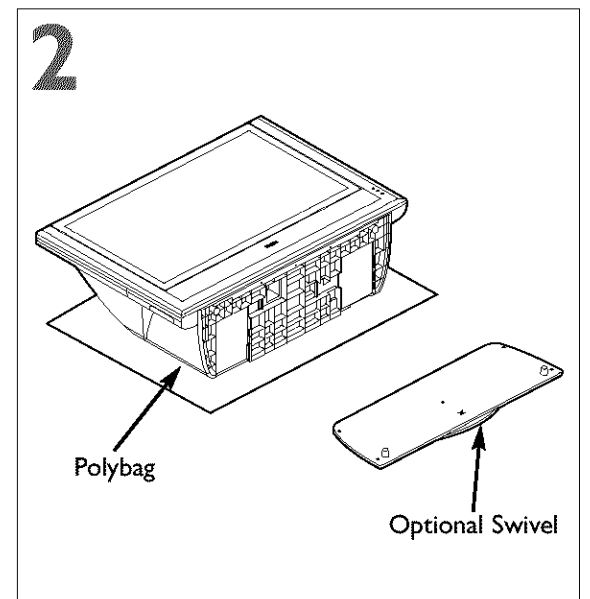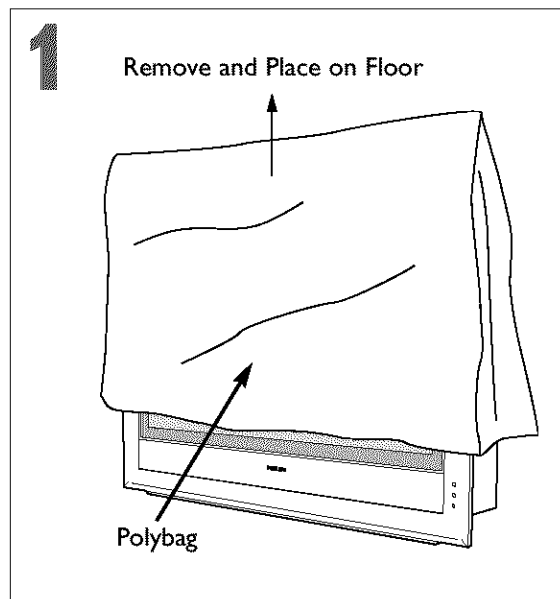

Mounting the Swivel and TV to the Stand



- 1 Install the positioning dowels in the stand.
- 2 Place the TV and mounted swivel on the stand, aligning the front and sides of the TV with the front and sides of the stand. This will help properly seat the TV on the positioning dowels and align the pre-drilled holes on the stand and swivel.
- 3 Use the supplied screws (2) and screw key to fasten the swivel to the stand.
- 4 Place accessory devices—HD satellite receiver, cable box, DVD player, or VCR, for example—inside the stand. (See the TV *Quick Use and Setup Guide* and *Directions for Use* manual for connection information.) Route the power cords through the opening in the bottom of the stand shelf, and route the connection cables through the openings in the back of the stand.
- 5 Before swiveling the TV, make sure you have left enough slack in the cords of any connected accessory devices. This will prevent damage to the cords.

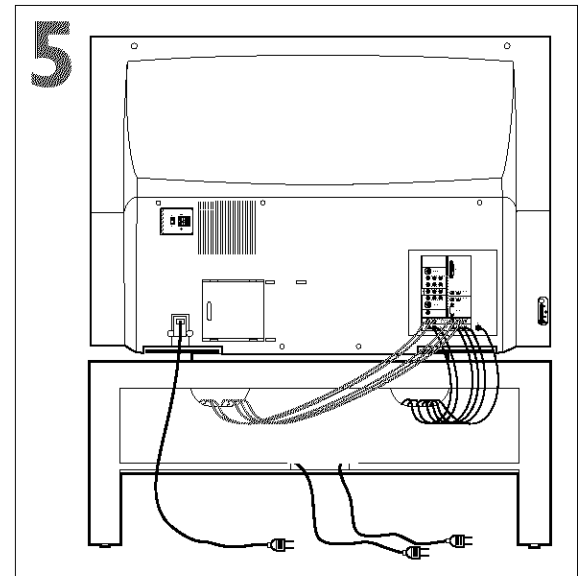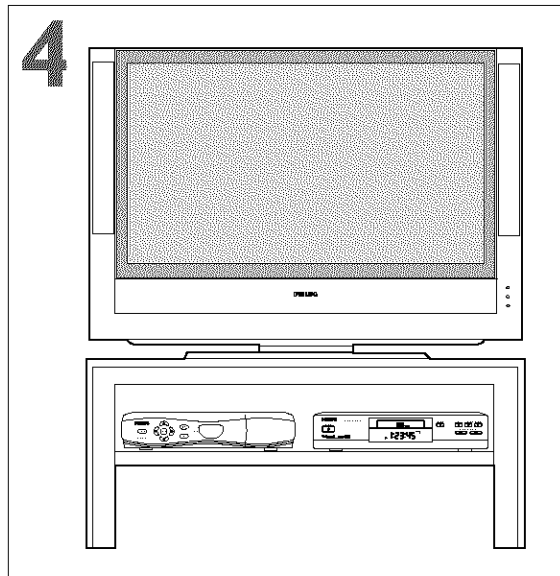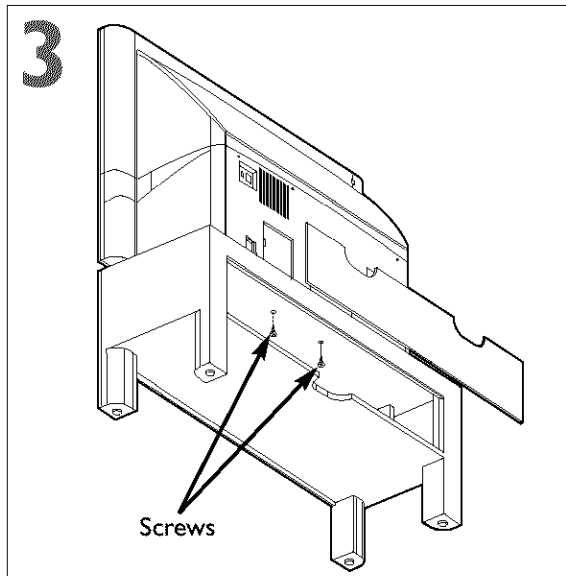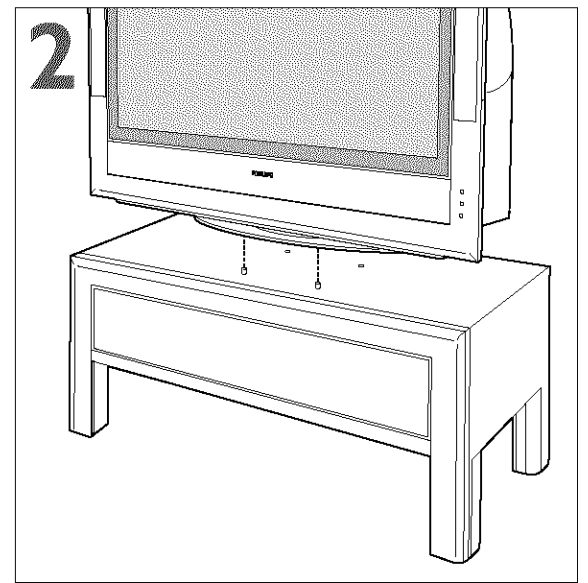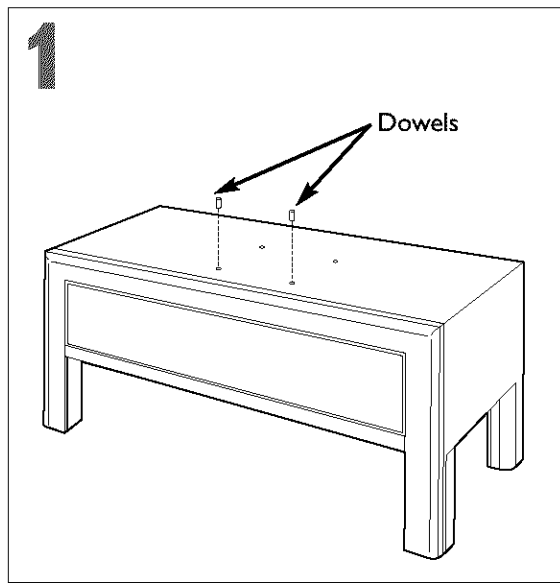

Placing the TV on the Stand without the Swivel

If you should decide not to purchase the optional swivel, you can place the TV directly on the stand.

- First remove the nut and washer from each supplied rubber locator (2).
- Place the rubber locators in the pre-drilled holes in the stand.
- Replace the washer and nut on each rubber locator.
- Tighten each nut.
- While aligning the corresponding holes in the bottom of the TV with the rubber locators, set the TV on the stand. The rubber locators will prevent the TV from sliding.

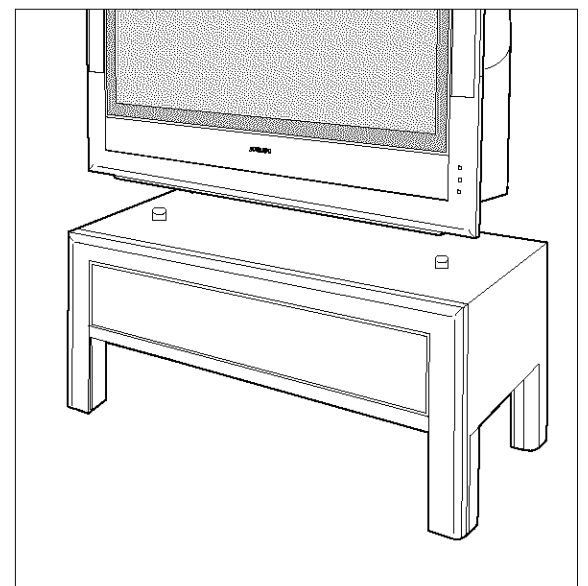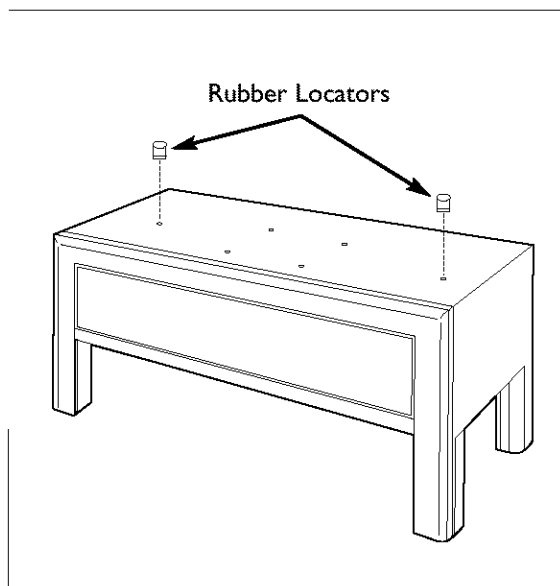


Making Basic Connections to the TV

Cable TV

Connect the cable TV signal to the TUNER jack on the back of the TV. See page 8 for details on using Autoprogram to store channels in the TV's memory.

NOTE: This connection will supply stereo sound to the TV if it is being broadcast by the station you are watching.

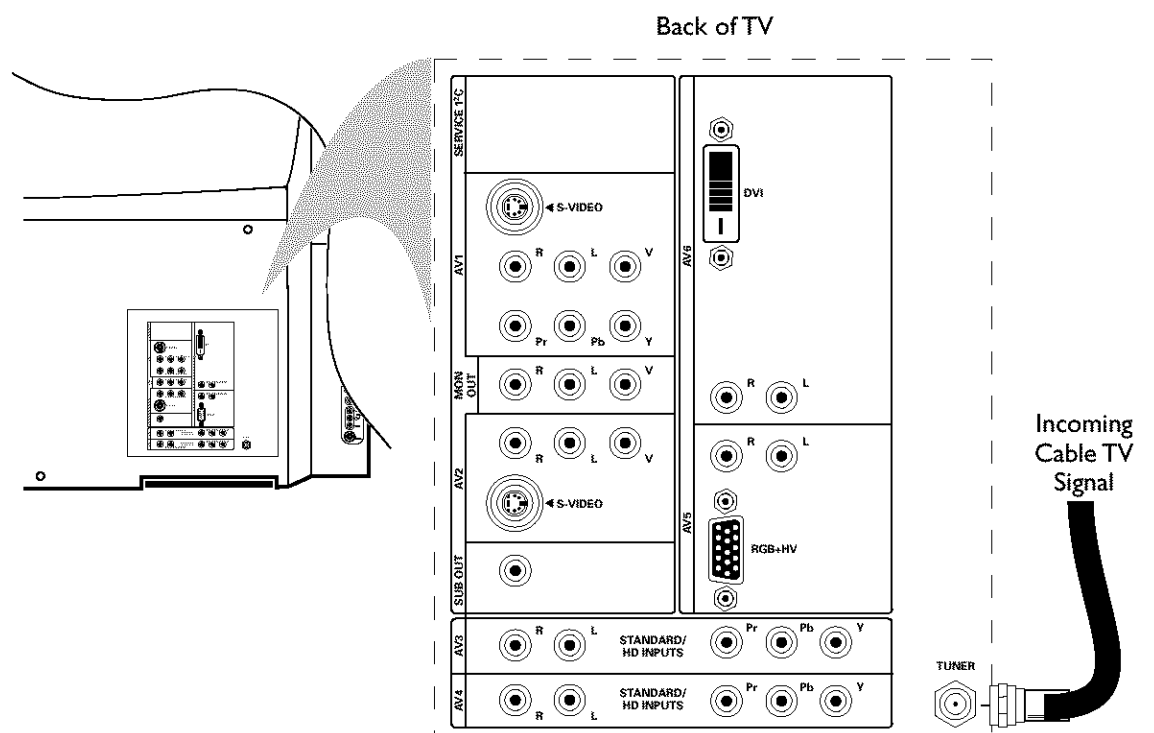


Connect the incoming cable TV signal to the TUNER jack on the back of the TV.

Making Basic Connections to the TV

Cable Box with RF IN/OUT

- 1 Connect the incoming cable TV signal to the CABLE IN jack on the back of the cable box.
- 2 Connect a coaxial cable (not supplied) to the TO TV jack on the back of the cable box and to the TUNER jack on the back of the TV.
- 3 Set the Output Channel switch on the back of the cable box to CH 3 or 4 (whichever is correct for your cable box), then tune the TV to the corresponding channel. Once tuned, change channels at the cable box, not the TV.

NOTE: This connection will not supply stereo sound to the TV. The reason is that the RF output on a cable box—labeled “TO TV,” “OUT,” or “OUTPUT,” for example—will not send a stereo signal to the tuner (VHF/UHF) input on a TV.

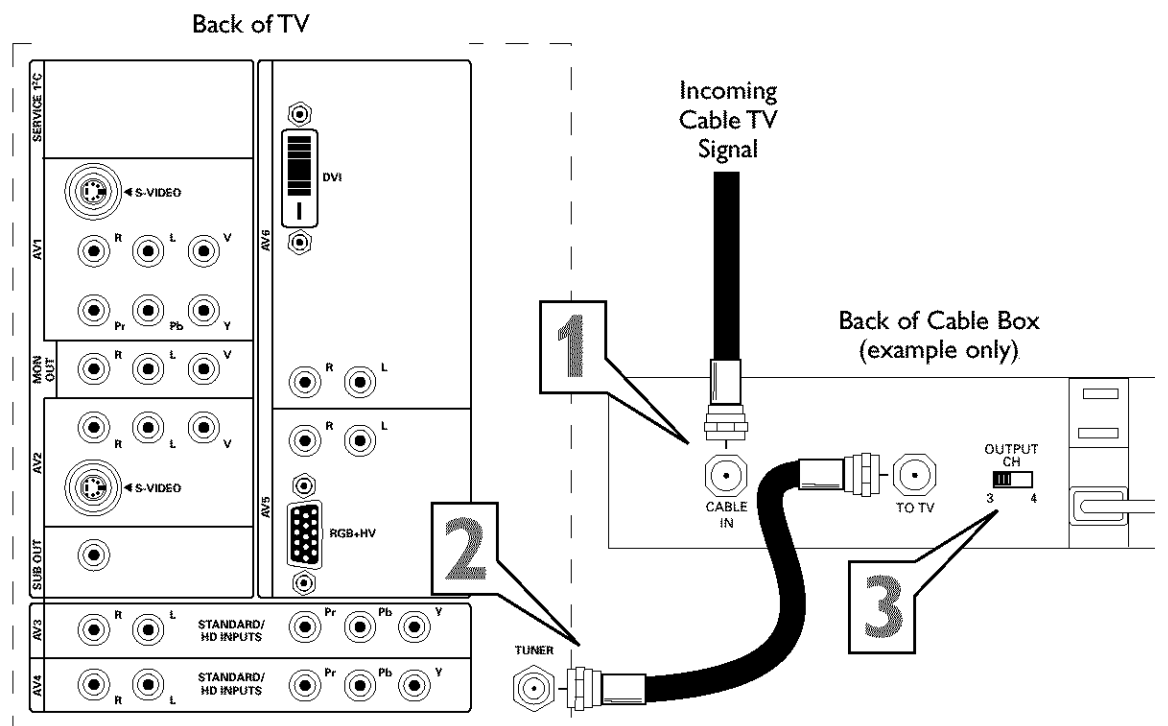

Cable Box with A/V Outputs




- 1 Connect the incoming cable TV signal to a signal splitter (not supplied).
The signal splitter enables you to avoid having to use the TO TV jack on the back of the cable box. This jack will not supply stereo sound to the TV.
NOTE: Your cable box may have a different label for the TO TV jack, such as OUTPUT or OUT.
- 2 Connect a coaxial cable (not supplied) to a connector on the signal splitter and to the TUNER jack on the TV.
- 3 Connect a coaxial cable (not supplied) to a connector on the signal splitter and to the CABLE IN jack on the back of the cable box.
- 4 Connect A/V cables (not supplied) to the VIDEO and AUDIO L and R outputs on the back of the cable box and to the AV2 video (labeled V) and audio (labeled L and R) jacks on the back of the TV.
- 5 To view programs from your cable box, first press the Source button on the remote control.
- 6 Press the Cursor Down or Up buttons until the AV2 signal source is selected.
- 7 Press the OK button to confirm your selection. The AV2 input source becomes current for the viewing of cable TV programs through your cable box.

NOTE: If your cable box Audio/Video outputs will not supply video and stereo audio to the TV, you will need to make the connection shown above in the example “Cable Box with RF IN/OUT.”

Watching Cable TV Programs That Don't Require the Cable Box

Since you've connected the cable TV signal directly to the TV's tuner (step 2 above), you can also watch the unscrambled programs by simply tuning to the desired channel. You must first use Autoprogram, however, to store channels in the TV's memory. See page 8.

NOTE: This connection will supply stereo sound to the TV if it is being broadcast by the station you are watching.

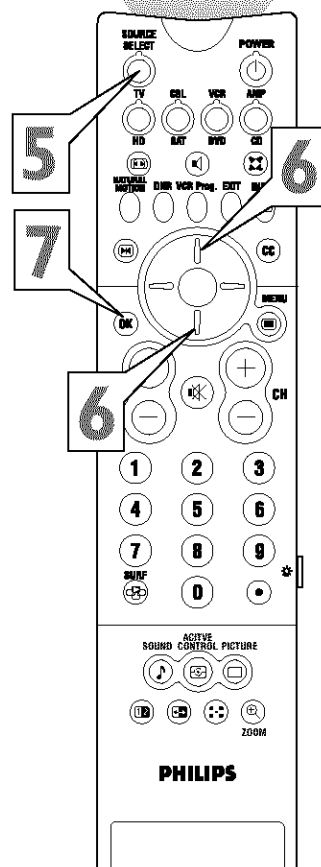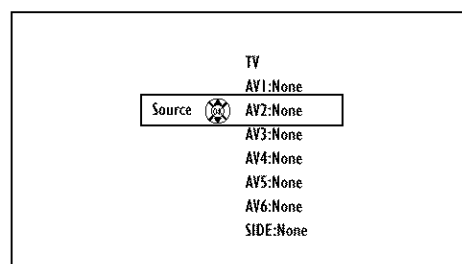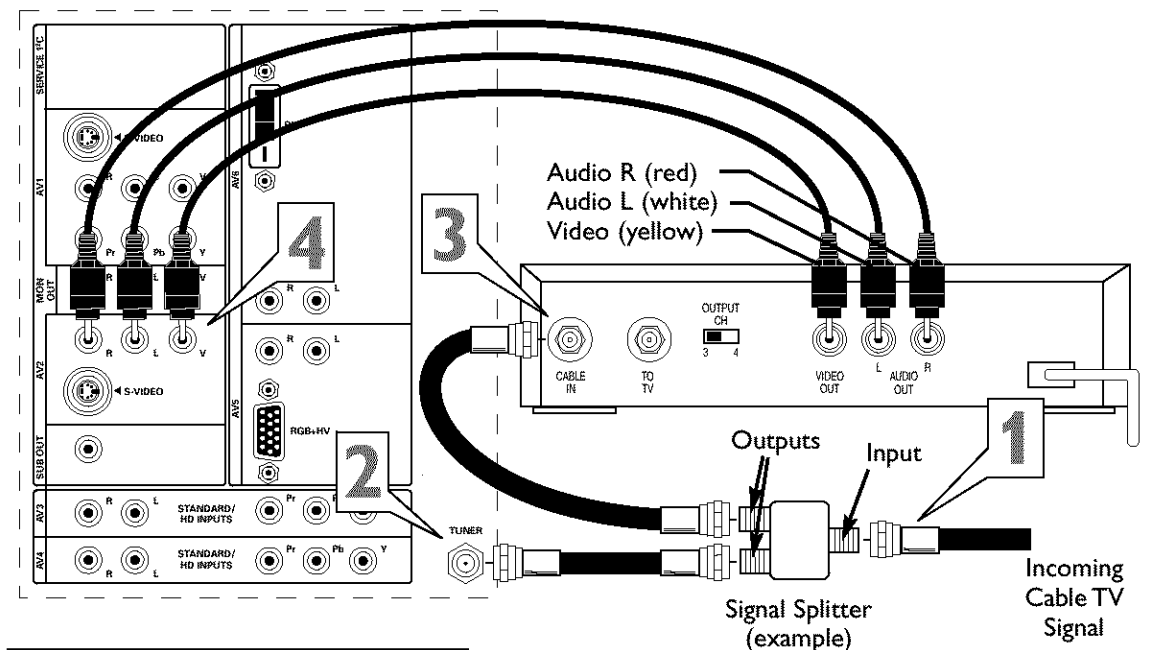


Making Basic Connections to the TV

Antenna

Connect the incoming antenna signal to the TUNER jack on the back of the TV. See page 8 for details on using Autoprogram to store channels in the TV's memory.

NOTE: This connection will supply stereo sound to the TV if it is being broadcast by the station you are watching.

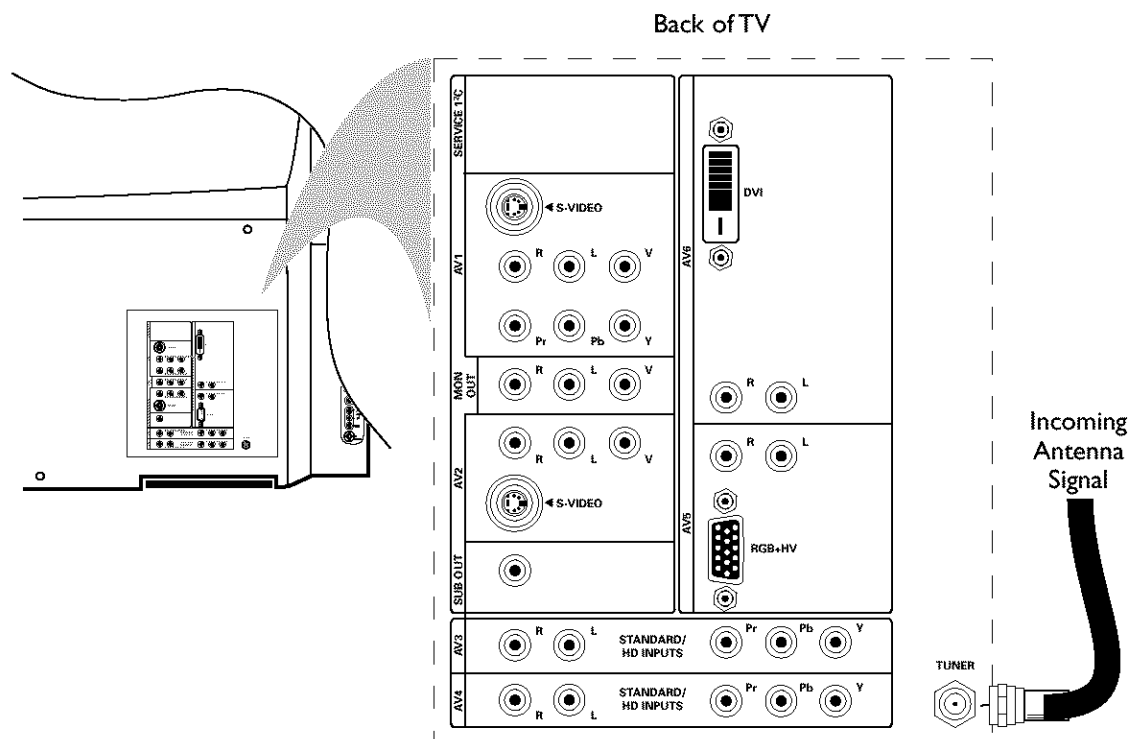

Connect the incoming Antenna signal to the TUNER jack on the back of the TV.

Operating the TV

Your television has a set of buttons located on the top of the cabinet for use when the remote control is not needed or unavailable.

1 Press the Standby-On button to turn the TV on.

NOTES:


Due to the complexity and advanced design of the Cineos product, a turn-on time of 20 to 30 seconds should be expected.

When you turn the TV off, it remains in Active Standby mode (orange light on) for 30 seconds and will not respond to any presses of the remote control or cabinet buttons during that time. This is to protect the lamp.

2 Press the VOLUME + (up) button to increase the sound level or the VOLUME - (down) button to lower the sound level. Or use the buttons to navigate right or left when the on-screen menu is displayed.

3 Press the CHANNEL ▲ (up) or ▼ (down) button to select TV channels. Or use the buttons to navigate up and down when the on-screen menu is displayed.

4 To access the on-screen menu, press the MENU button. To navigate the menu, use the VOLUME + (up)/- (down) and CHANNEL ▲ (up)/▼ (down) buttons to navigate the menu as described in the previous steps.

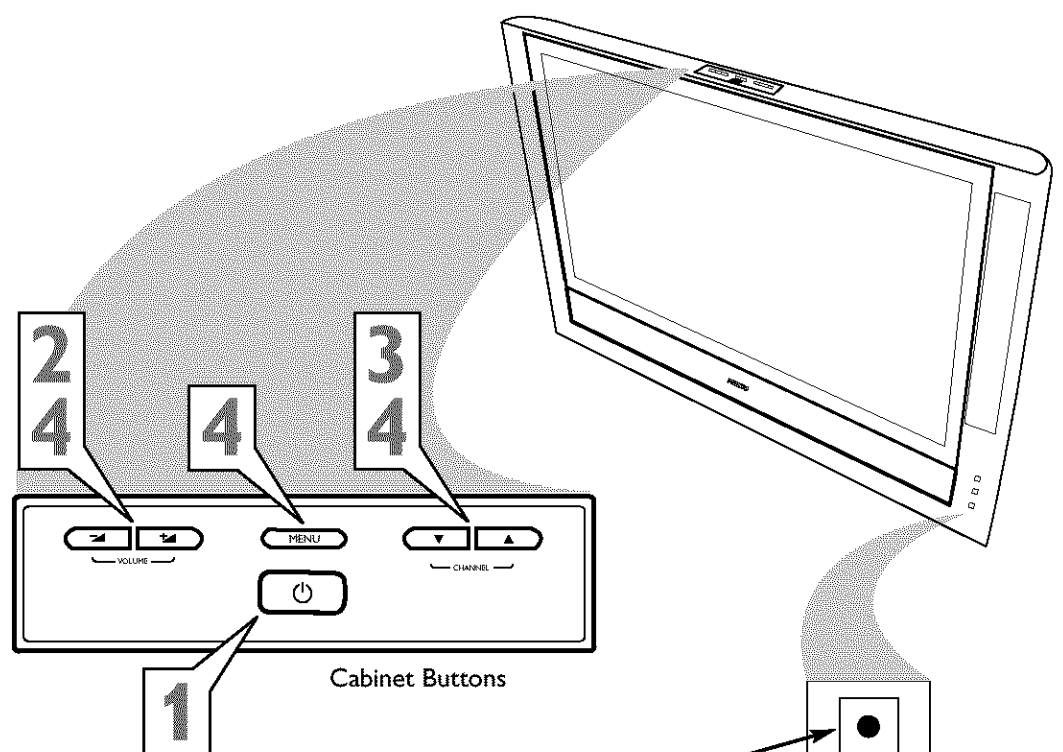

Active Control™ Plus+ Window

This window contains a sensor that monitors the ambient light conditions in the room and adjusts key picture settings for best viewing.

Remote Sensor Window

Receives commands from the remote control.

Active Standby Window

Active Standby—the condition in which the TV is either in the process of turning on or off. Active Standby is entered by pressing the Standby-On button on the TV or remote control. An orange light appears in the window. Active Standby mode occurs when the TV is turned on—to allow for the automatic calibration of the clock—and for 30 seconds after the TV has been powered off. The 30-second Active Standby period at power off is to protect the lamp. During this time, the TV will not respond to presses of cabinet or remote control buttons.

On—the TV has picture and sound. A green light shows in the window.

Standby—the condition in which the TV is plugged into the AC outlet and is in the off state. No light is on in the window. The TV's microprocessors and their standby supplies are the only active components in this state, and the power consumption is less than 1 watt.


Using the Remote Control

REMOTE CONTROL BATTERIES

To load the supplied batteries into the remote:

- 1** Remove the battery compartment door on the back of the remote.
- 2** Place the batteries (2-AA) in the remote. Be sure the (+) and (-) ends of the batteries line up correctly (the inside of the case is marked).
- 3** Reattach the battery compartment door.

Be sure to point the remote at the Remote Sensor window on the front of the television when using the remote control to operate the television.

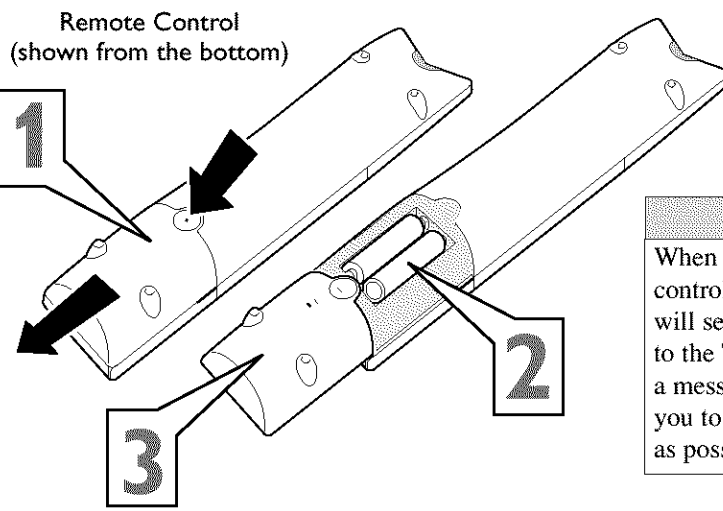

HELPFUL HINT

When the batteries in your remote control run low, the remote control will send a "Battery low" command to the TV. The TV will then display a message on the screen reminding you to replace the batteries as soon as possible.

REMOTE CONTROL BUTTONS

Source Select

Press to display a list of input source options—TV, AV1, AV2, AV3–AV6, or Side. If you have labeled the source you desire, press the Source Select button to select the next item in the list. (See page 21 in the *Directions for Use*.) If you have not labeled the source, use the Cursor Up/Down buttons to select the next item, then press the OK button to confirm. The source becomes active on the TV screen.

Mode (TV, CBL, VCR, AMP, HD, SAT, DVD, or CD)

Press one of these buttons to use the remote control in the TV, CBL, VCR, or AMP mode as indicated above the button. A green indicator lights up. Press the same button again more than 1 second to use the remote control in the mode indicated below the button (HD, SAT, DVD, or CD). A red indicator lights up. Press the button again more than 1 second to return to the function named above the button. (See pages 22–23 in the *Directions for Use*.)

Picture Format

Press to display a list of available picture formats for showing video images in the traditional 4:3 proportions. Press this button repeatedly to select another picture format. Choose from Automatic, Super zoom, Panoramic, 4:3, Movie expand 14:9, Movie expand 16:9, 16:9 subtitle, and Wide screen. (See pages 35–36 in the *Directions for Use*.)

NOTES:

- With AV3–AV6 connections, the Automatic picture format option is not available.
- In Dual-screen mode, press the Picture Format button to switch between a full or 4:3 letterbox picture format.

Natural Motion™

This button is not applicable to the Cineos Television. Select the Digital Natural Motion™ option through the on-screen menu. (See page 30 in the *Directions for Use*.)

Freeze Format

Pressing will apply one of the Freeze modes.

NOTE: The Freeze mode must be set using the TV's on-screen menu.

Freeze mode stops action in the main screen. Sound will continue to be heard. Press again to resume normal viewing.

Replay mode displays a few seconds of stored video in the PIP window.

Photo Finish mode displays six stored frames from the picture.

Continuing to hold the Freeze Format button down will cycle the TV through the Freeze modes: Freeze, Replay, and Photo Finish. (See page 61 in the *Directions for Use*.)

DNR (Dynamic Noise Reduction)

Press this button repeatedly to select Off, Minimum, Medium, or Maximum. (See page 32 in the *Directions for Use*.)

OK

Press to activate your choice or to confirm settings when in the menus.

Volume (VOL)

Press + or – to adjust the volume.

Mute

Press to interrupt or restore sound.

Surf (AutoSurf™)

If you set the Surf control in the TV's on-screen menu to two channels, this button will allow you to toggle between the current channel and the last viewed channel. If you choose the nine-channel Surf, pressing this button allows you to add and scroll up to nine of your favorite channels. (See page 58 in the *Directions for Use*.)

VCR

When the remote is in the VCR mode, these buttons will allow you start a recording (●), rewind a tape (◀◀), stop the playback of a tape (■), play a videotape (▶▶), fastforward a videotape (▶▶▶), use the VCR timer (⌚), or pause the playback of a videotape (||). (See page 26 in the *Directions for Use*.)

Sound (AutoSound™)

Press to select the next item in the AutoSound™ menu. The factory-set options are Speech, Music, Movies, and Multimedia, each corresponding with specific settings of treble and bass. You can also select the Personal option, which is based on the adjustments you make through the Sound menu. (See page 46 in the *Directions for Use*.)

Dual Screen/PIP (Picture-in-Picture)


Press to turn the PIP dual screen on or off. Continuing to hold the Dual Screen/PIP button down will cycle through the Dual Screen/PIP options. (See pages 59–60 in the *Directions for Use*.)

PIP Swap

Press to swap the main picture with the PIP window picture, or to swap the left and right screens when in Dual Screen PIP mode. Press again to restore pictures to their original position.

MultiPIP

The first press of this button displays PIP3 (the default option). A long press of the button cycles through PIP3 and PIP6. Another press turns PIP off.

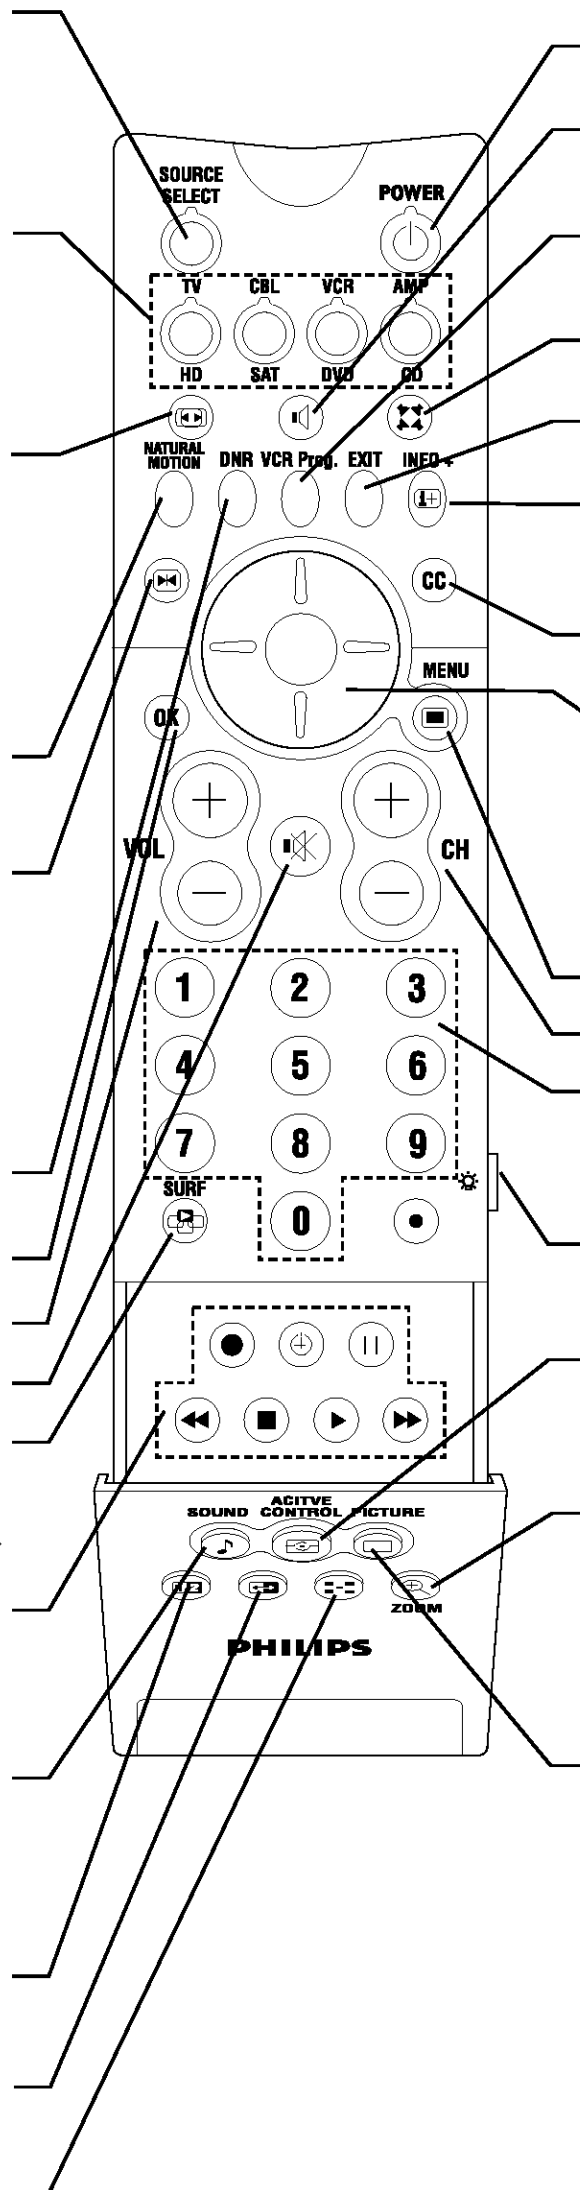

Power-Standby

Press to turn the TV on or off. **NOTE:** The TV is never powered off completely unless it is unplugged.

Alternate Audio

When you tune to a channel where SAP (Second Audio Program) is available, you can toggle between Main and SAP. If not available, only Main can be selected. (See page 42 in the *Directions for Use*.)

VCR Prog (functional only in VCR mode)

Many VCRs have an automatic programming function. If your VCR has this function, the universal code set will assign it to this function. (See page 26 in the *Directions for Use*.)

Surround Sound

Press to toggle the sound modes Incredible Surround™ and Dolby* Virtual. (See page 41 in the *Directions for Use*.)

EXIT

Press this button to exit the menus provided by universal devices such as VCRs, satellite receivers, DVD players, and so forth.

INFO +

Press to display (when available) information about the current channel, program, source, number or name, local time, CC availability, SAP availability, program ratings, display format, sound mode, and remaining length of a Sleptimer setting.

CC (Closed Captioning)

Press to select On, Off, or On with Mute. (See page 47 in the *Directions for Use*.)

Cursor Up, Down, Right, and Left

Use to navigate the on-screen menu and make control adjustments or settings.

Additionally, use these buttons to pan the screen up or down to show any excluded parts of the picture. Left or right panning is possible with the Side input source when "Game" is selected as the type of source for the Side input. (See page 21 in the *Directions for Use* manual.)

Also use with the Dual Screen/PIP feature to select a screen or reposition a PIP screen.

Menu

Press to display the TV's on-screen menu or to turn it off.

CH (Channel Selection)

Press to browse through the TV channels.

Digit (Number Buttons)

Press to directly access a specific TV channel. For a two- or three-digit channel, enter all numbers. Press a single-digit button and hold for 1 second to directly access a single-digit channel. These buttons can also be used to enter values in certain on-screen menu controls.

Backlight

Press this button on the right side of the remote control. The back-lighting of the buttons VOL, CH, MUTE, and the digit buttons stays on for 5 seconds after pressing the button.

Active Control™ Plus

NOTE: Active Control™ Plus is not available for use with the AV3, AV4, AV5, and AV6 input sources. Press to toggle the options Off, Minimum, Medium, and Maximum. Maximum is the recommended option. (See page 27 in the *Directions for Use*.)

Zoom

NOTE: Zooming is disabled in Dual Screen mode. Press the Zoom button to activate the zoom function. Press the OK button repeatedly to select one of the zoom magnifications (1x, 4x, 9x, or 16x). Additionally, you can shift the selected zoom window over the screen with the Cursor Up, Down, Left, or Right buttons. The zoom window is reset after selecting another TV channel, another picture format, or when another display format is selected automatically. Press the Zoom button again to turn off the zoom function. (See page 28 in the *Directions for Use*.)

Picture AutoPicture™

Press to select the next item in the AutoPicture™ menu. The factory-set options are Rich, Natural, Soft, Multimedia, and Eco, each corresponding with specific factory settings of Contrast, Color, Sharpness, DNR, Dynamic Contrast, and Color enhancements. You can also select the Personal option, which is based on the adjustments or settings you make through the Picture menu. (See page 34 in the *Directions for Use*.)

Active Control, AutoPicture, AutoSound, AutoSurf, Incredible Surround, and Natural Motion are trademarks of Philips Consumer Electronics. Copyright 2003 Philips Consumer Electronics. All rights reserved.

*Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Using the On-screen Menu

The TV's on-screen menu controls are viewed within a mobile map or pipe system. This system allows you to move along linked paths tied to specific Feature Title categories ("TV," "Picture," "Sound," "Features," and "Channels"). Each press of a Cursor button on the remote moves the cursor control to balls indicating specific controls. Each specific control may have multiple features that can be adjusted or set. The animated on-screen menu structure will expand to show all available on-screen controls. As it expands, it will display a series of balls grouped together to reveal more controls.





The first time you turn on the TV after purchasing it, it will be in a special mode designed to inform you that you can change the menu language and on-screen displays to English, French, or Spanish. Also included in this mode is Autoprogram to encourage you to have the set program channels into the TV's memory. For more details on the Language and Autoprogram features, see page 8.

- 1** Pipes represent the structure of the on-screen menu. They tie all the controls together and show the path you can follow to access the available controls.
- 2** Balls indicate the titles of features or controls available on this television. When highlighted, some of these controls may show more Pipes and Balls, indicating subcategories or lists of controls within the highlighted control. These subcontrols will also have Pipes and Balls.
- 3** The Puck tells you which way movement may take place within the on-screen menu. The arrows on the Direction Indicator simulate the Cursor buttons on the remote control (Up, Down, Left, or Right).
- 4** The Slider controls will be displayed on some features, allowing adjustments to the values of the controls. Some may show a box containing a list of multiple options settings. Others may have only an "On" or "Off" option.
- 5** To navigate the on-screen menu, start by pressing the Menu button on the remote control. This will display the on-screen menu in its starting position.
- 6** Press the Cursor Down button to select any of the Setting, Demo, or Install controls. Starting from the TV item, press the Cursor Right button on the remote control to select any of the Picture, Sound, Features, or Channel controls.

See the "Using the Demo Mode" and "Using the Installation Features" on this page and the next. Refer to the *Directions for Use* manual for all other control descriptions (Picture, Sound, Features, Channels, or Settings).

HELPFUL HINT

Pressing the Menu button once will display the on-screen menu. Pressing the Menu button any time the on-screen menu is displayed will remove the on-screen menu from the TV screen.

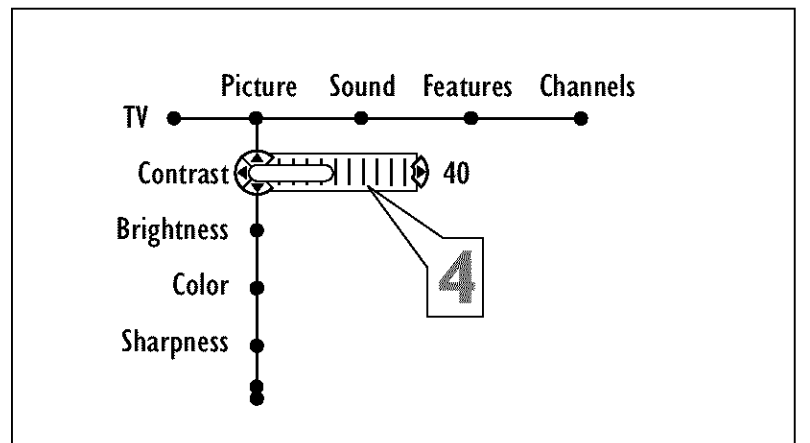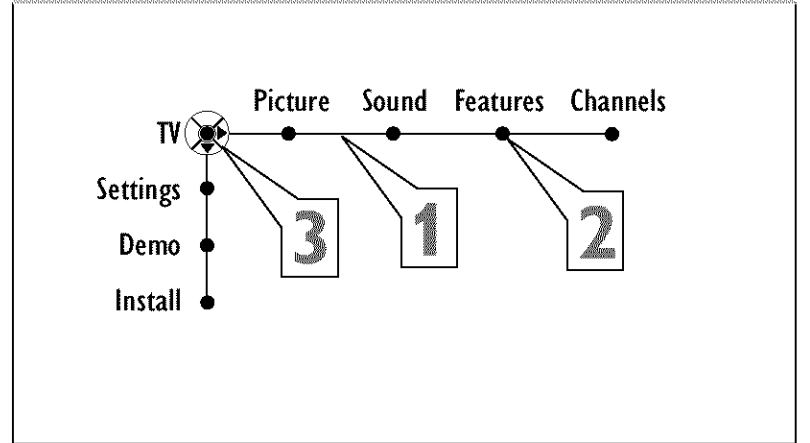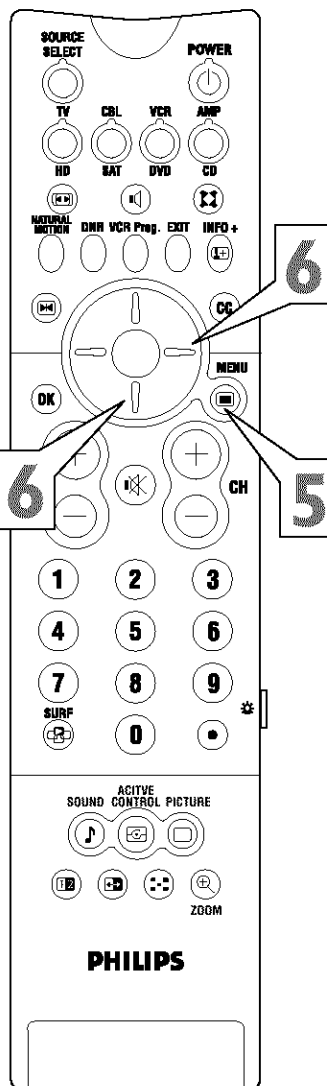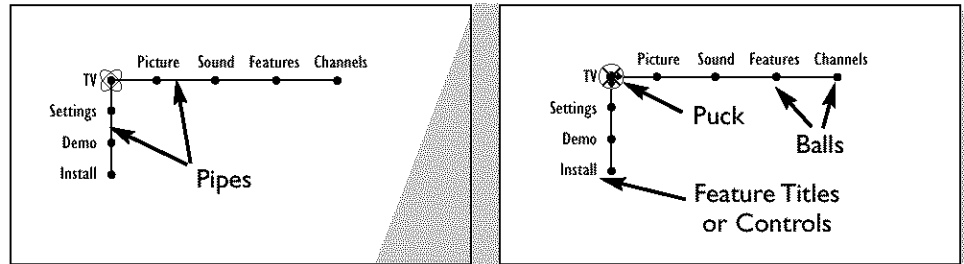


Using the Demo Mode

Several features of this television can be placed in a demo mode, which will show you how the feature works. Auto Demo will automatically show all the feature demos one after another except for the Dealer Demo mode. Specific demo modes can be selected from the list of options within the Demo control (Auto demo, Dual screen, PIP, and Install, for example).

The Dealer Demo also has a sublist of the following options: Digital options, Lightsensor, and 3D Y/C Comb filter.

- 1** Press the Menu button on the remote control to show the on-screen menu.
- 2** Press the Cursor Down button repeatedly until "Demo" is selected.
- 3** Press the Cursor Right button to shift the menu to display the list of Demo mode options.
- 4** Press the Cursor Down or Up button to select a Demo mode option.
- 5** Press the Cursor Right button to activate the Demo.

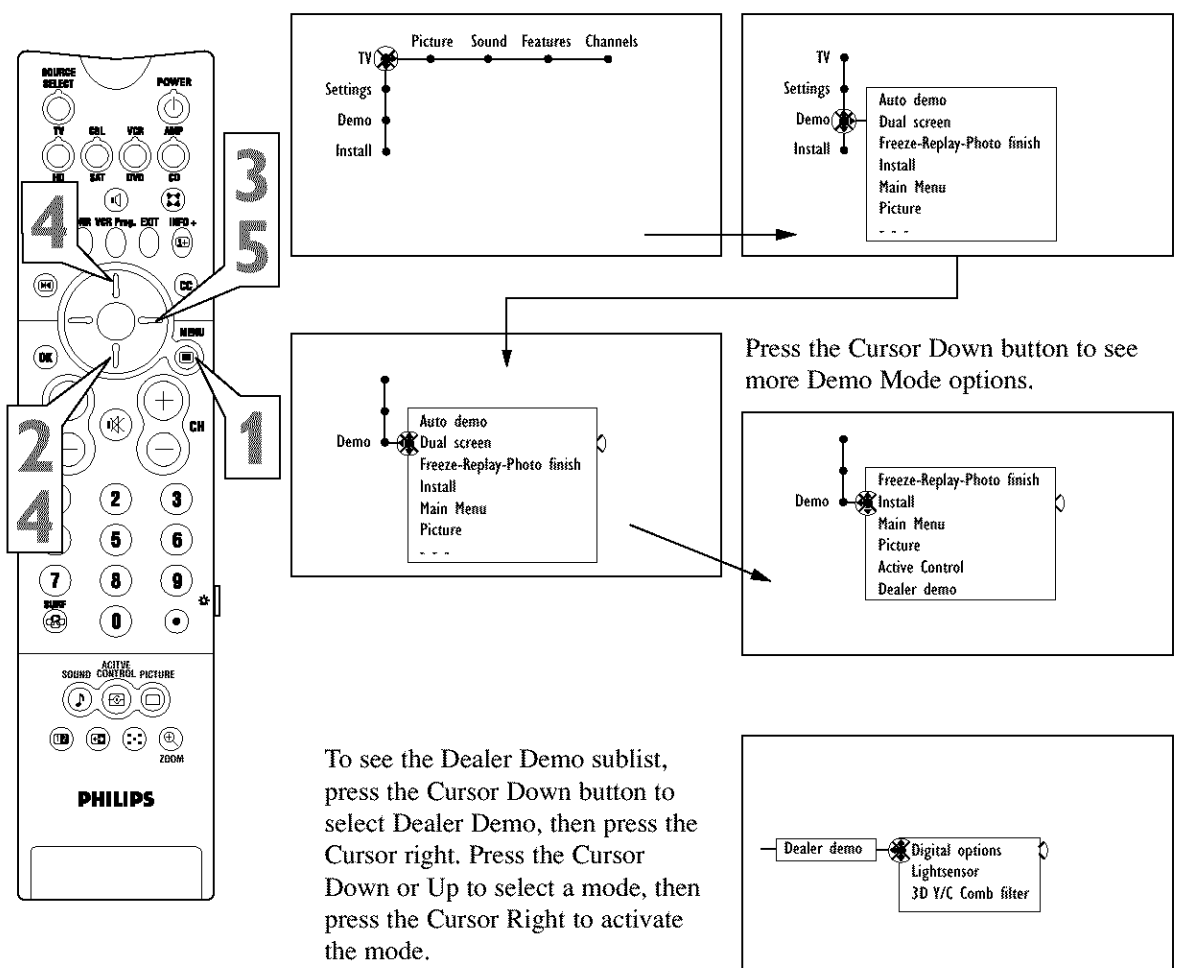

Using the Installation Features

When you plug in your TV for the first time it will prompt you to set the Language and Autoprogram the channels. If you are setting up the TV after turning it on for the first time, skip steps 1-3. If you are returning to the Language and Autoprogram features, use steps 1-3 below.

- 1** Press the MENU button on the remote control to show the on-screen menu.
- 2** Press the Cursor Down button repeatedly until "Install" is selected.
- 3** Press the Cursor Right button to shift the menu to the left and select "Language" or "Autoprogram."


Language

For Spanish- and French-speaking TV owners, an on-screen Language option is present. The Language control enables you to set the TV's on-screen menu to be shown in either English, Spanish, or French.

- 4** Press the Cursor Down button to select English, Español (Spanish), or Français (French).
- 5** After you have made your language selection, press the OK button to confirm your selection.
- 6** Press the MENU button to remove the on-screen menu from the TV screen.

HELPFUL HINT

Remember, the Language control makes only the TV's on-screen Menu items appear in English, Spanish, or French text. It does not change the other on-screen text features, such as Closed Captioning (CC), with TV shows.

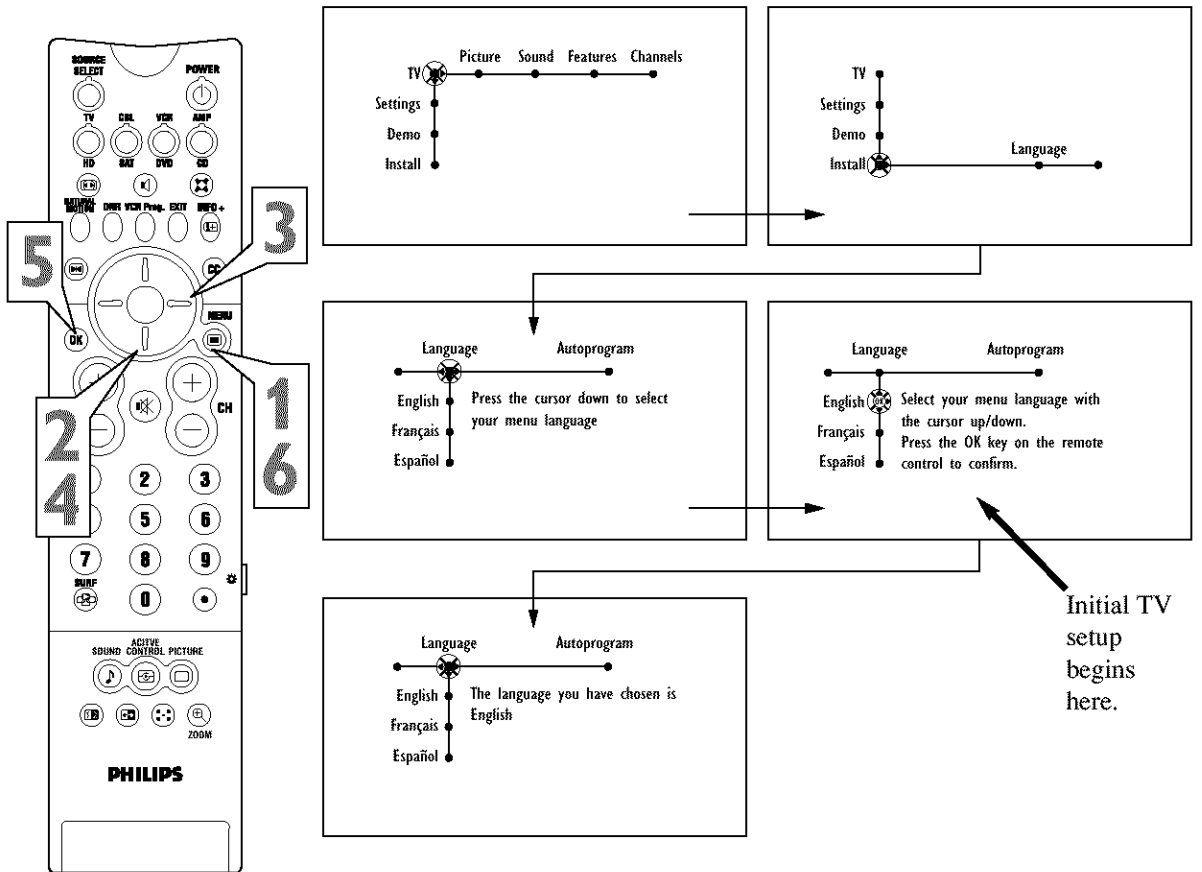


Initial TV setup begins here.

Autoprogram

Your TV can automatically set itself for local area (or cable TV) channels. This makes it easy for you to select only the TV stations in your area by pressing the CH + or - button on the remote control.

If you are setting up the TV after turning it on for the first time, continue with steps 4-10. If you are returning to the Language and Autoprogram features, begin with steps 1-3 above.

- 4** Press the Cursor Down button to select "Install" mode control.
- 5** Press the Cursor Right button to display a list of Install mode options: "Antenna," "Automatic," "Cable."
- 6** Press the Cursor Up or Down button to select one of the options. Select "Antenna" for normal outside- or inside-type antenna. Select "Cable" for a cable company supplied signal. When "Automatic" is selected, the TV will automatically set the mode based on the type of signal it detects coming into the TV. The programming process may be faster if you choose the specific type of connection you have made, either Antenna or Cable.
- 7** Press the Cursor Left button after making your "Install" mode selection.
- 8** Press the Cursor Down button to select "Install."
- 9** Press the Cursor Right button to start the programming process.
- 10** Press the Menu button to remove the on-screen menu from the TV screen when the Autoprogramming process has finished.

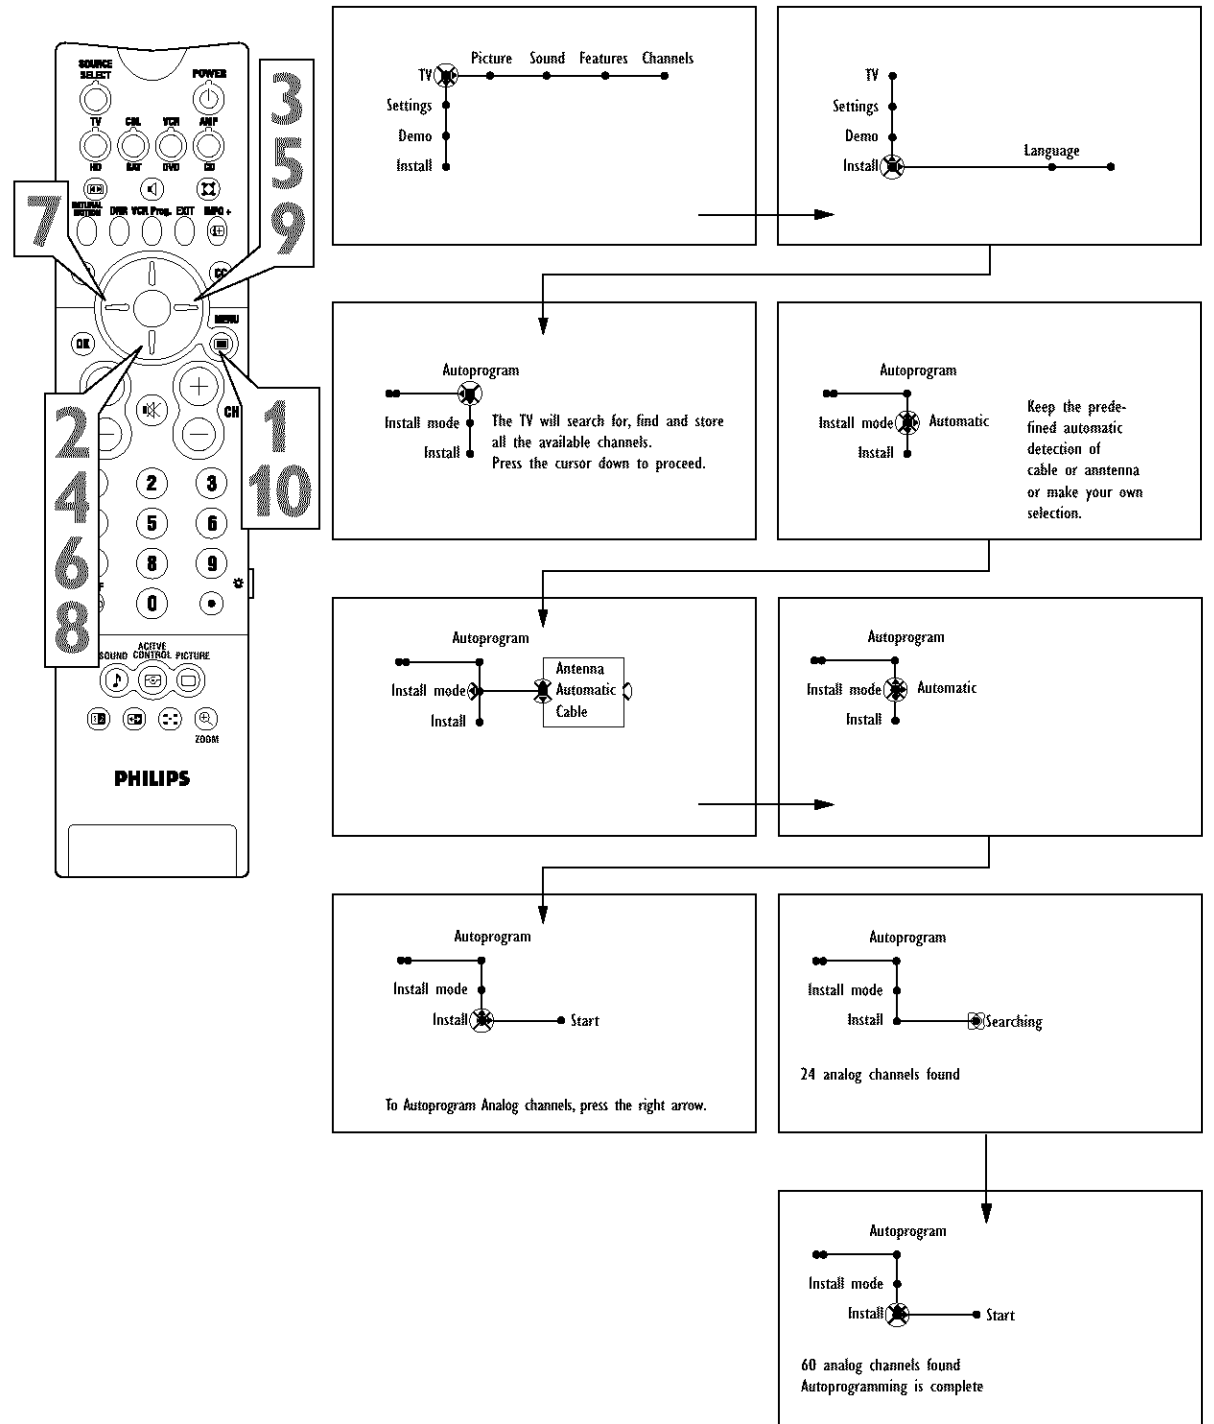


HELPFUL HINT

After Autoprogram is finished, check the results. Press the CH (+) or (-) button on the remote control to see which channels you can select. See page 51 in the *Directions for Use* manual for instructions on removing channels.

44" Cineos™ Widescreen HDTV Monitor

- Philips Single Panel LCOS technology
- Super slim design; only 14.6" deep
- Digital Natural Motion™
- Flexible inputs for Data or HDTV: DVI with HDCP, 15 Pin DSUB, 2 sets HD Component
- Protective screen filter
- Active Control™ plus
- 3D Y/C comb filter
- Virtual Dolby® Surround - 40 Watt RMS
- Double Window / two tuner PIP

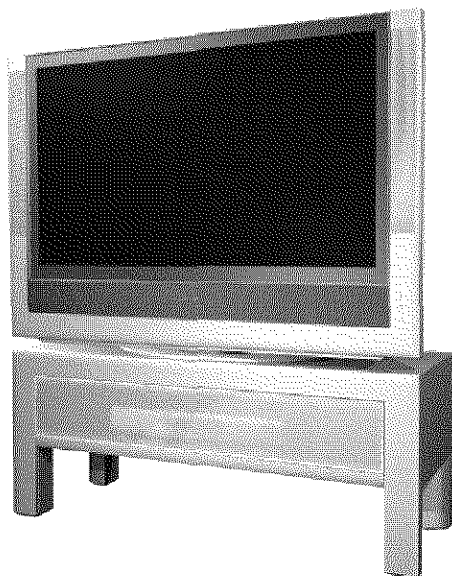

cineos™
The new face of HDTV

44" Cineos Widescreen HDTV Monitor



Picture Quality

Philips Single Panel LCOS technology

Philips single panel LCOS technology produces high resolution, flicker free video without a visible pixelgrid. This Philips patented reflective technology enables a large screen size TV with low weight and small footprint without any concerns for convergence or burn-in.

Digital Natural Motion™

Eliminates motion judder from film based sources such as DVD's for distortion free, natural viewing.

Active Control Plus™

 
By continually adjusting picture settings over 60 times per second, Active Control Plus ensures that the viewing experience is always optimal. Changes in ambient light are even automatically compensated for!

- Screen size: 44"
- Visible screen size: 44"
- Aspect ration: 16 : 9
- Resolution: 1280 x 720
- 720P HD performance and line doubling
- Brightness: 450 Nits
- Contrast ratio: >400 : 1
- Screen protector

Ease of use

- Ergonomic universal remote control
- Easy menu driven installation and operation. Direct access menus and cursor control.
- Selection of three menu languages: English, French, Spanish.
- Onscreen status display on programs and functions (OSD)
- Sleep timer
- Favorite channel listing
- AutoLock™ to protect young children from objectionable programming with V-chip technology.
- Closed Captioning
- Smart Picture control: Soft, Natural, Rich, Multimedia, Personal
- Smart Sound Control: Movie, Speech, Music, Personal
- 6 wide screen modes: 4:3, Zoom 14:9, Zoom 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Subtitle and heading shift
- Autoformat / Auto Screen Fit (incl.WSSB)
- Smart Clock

Remote



Sound quality

Virtual Dolby® Surround processing

Dolby® processing circuitry for enhanced surround sound effect creates the sensation of Dolby® Pro Logic without the hassle of additional rear speakers.

Sound system: Hi-Fi Stereo


Receives stereo broadcasts. Produces sound for performance through 4 speakers with an output of 2 x 20W RMS. The loudspeaker configuration consists of two 2" tweeters and two 5" woofers. Full user controllable equalizer via the OSD menu with 4 presets "Movie, Speech, Music and Multimedia".

Connectivity


Broad input standard support

- AV1: S-Video, CVBS, Y Pb Pr and stereo sound
- AV2: S-Video, CVBS and stereo sound
- AV3: Standard or composite Y Pb Pr supporting 480i, 480p, 720p and 1080i inputs and stereo sound.
- AV4: Standard or composite Y Pb Pr supporting 480i, 480p, 720p and 1080i inputs and stereo sound.
- AV5: 15-pins D-SUB input supporting standard resolutions up to 1280 x 1024 with stereo sound.
- AV6: DVI-D input with stereo sound
- Side: S-Video and CVBS with stereo sound.
- Monitor out; subwoofer out and center channel input.
- Headphone output

Center Channel Input

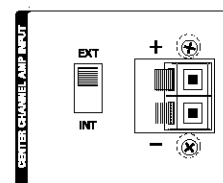

Jack Panel

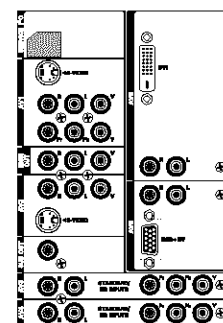

Side Panel



Miscellaneous

- Mains: AC 110V ± 10%
- Power consumption: Normal operation: 270 Watts
Stand by: <1W
- Product dimension (d x w x h): 14.6 x 46.7 x 31.7"
- Product weight: 73.1 lbs.
- Carton dimensions (d x w x h): 19.5 x 52.5 x 36.5"
- Shipping weight: 89.5 lbs.
- UPC: 0 37849 93418 0

Universal remote control – RC2043/01B

Universal RC managing TV and peripherals.

Digital Natural Motion, Digital Crystal Clear, Active Control, Auto Surf, Incredible Surround, Cineos™ and Easytune are trademarks of Philips Consumer Electronics Company.

Virtual Dolby is a trademark of Dolby Laboratories.

As an ENERGY STAR® Partner, Philips has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Specifications subject to change without notice.

Printed in USA 108207

©2003 Philips Consumer Electronics Co.

A Division of Philips Electronics North America Corp.

www.philips.com or AOL keyword: philips



- Optional ST449523/ZA stand (shown on front) provides the ideal solution to table top placement with an emphasis on high design, storage, and safety.
- Optional SW449523ZA swivel provides greater viewing flexibility by allowing safe easy rotation of the set.