



Directions for Use



Important!
Return your
Warranty
Registration Card
within 10 days.
See why inside.

Need help? Call us!

Philips representatives are ready to help you with any questions about your new product. We can guide you through Connections, First-time Setup, or any of the Features. We want you to start enjoying your new product right away!

**CALL US BEFORE YOU CONSIDER
RETUNING THE PRODUCT.**

1-800-531-0039

or

Visit us on the web at
www.philips.com

Model No.: _____
Serial No.: _____

Let's make things better.

PHILIPS

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Congratulations on your purchase, and welcome to the "family!"

PHILIPS



Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome—and thanks for investing in a PHILIPS product.

Sincerely,

Lawrence J. Blanford
President and Chief Executive Officer

P.S. Remember, to get the most from your PHILIPS product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!

Know these safety symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.


CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

PHILIPS Visit our World Wide Web Site at <http://www.philips.com>

IMPORTANT SAFETY INSTRUCTIONS

 
Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org
16. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
17. **Tilt/Stability** - All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinet design.
 - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet which could ultimately overturn the product.
 - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
18. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
19. **Power Lines** - An outdoor antenna should be located away from power lines.
20. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.

Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure below.
21. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
22. **Battery Usage CAUTION** - To prevent battery leakage that may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, with + and - aligned as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.

Note to the CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Example of Antenna Grounding as per NEC - National Electric Code

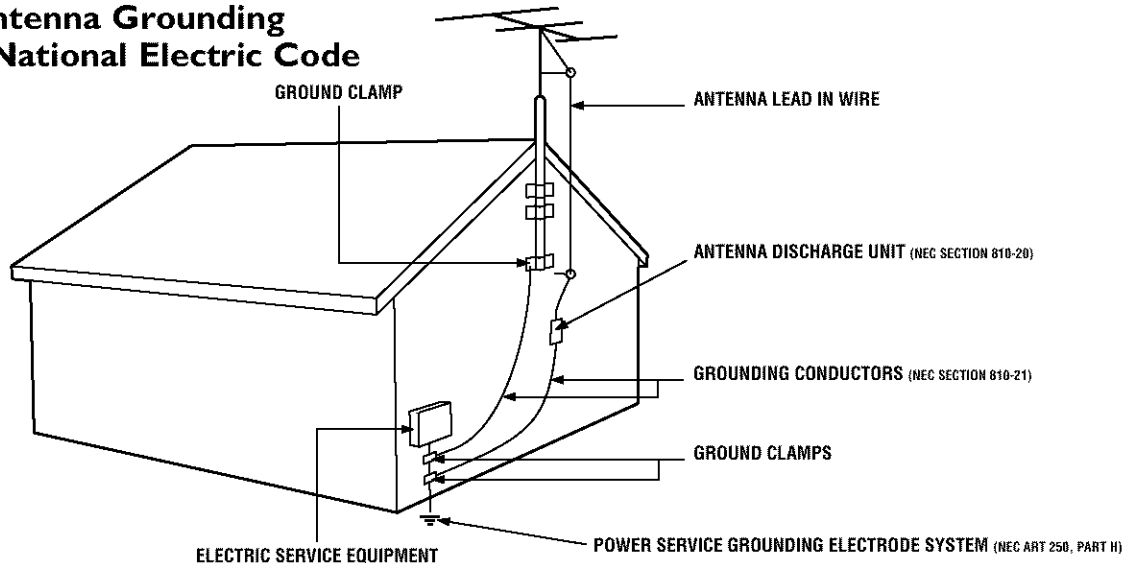

CONTENTS

INTRODUCTION

Welcome/Registration of Your TV	2
Safety/Precautions	2-3
Features	5

INSTALL MENU CONTROLS

How to use the Language Control	6
How to use the Tuner Mode Control	7
How to use the AutoProgram Control	8
How to Add or Delete Channels (Channel Edit)	9
How to use the Name Control (Channel Label)	10
How to use the TV Clock using the AutoChron™ Control ..	11

PICTURE MENU CONTROLS

Adjusting the Brightness Control	12
Adjusting the Color Control	12
Adjusting the Picture Control	12
Adjusting the Sharpness Control	12
Adjusting the Tint Control	12
How to set the Color Temp Control	12
How to use the Digital Options Control	13
How to set the Dyn(amic) Contrast Control	14

SOUND MENU CONTROLS

Adjusting the Treble Control	15
Adjusting the Bass Control	15
Adjusting the Balance Control	15
How to use the AVL control	16
How to use the Incr(editable) Surround Control	17
How to set the Stereo Control	18
How to set the TV to receive Secondary Audio Programming, also known as the SAP Control	18
How to set the Audio Out Control	19
How to turn the TV speakers on or off using the Speaker Control	20

FEATURE MENU CONTROLS

How to use the Timer controls:	
Setting the TV Clock using the Time Control	21
Setting a time for the TV to turn itself on using the Start Time Control	22
Setting a time for the TV to turn itself off using the Stop Time Control	23
Setting the TV to start on a specific channel using the Channel Control	24
How to activate the controls using the Activate Control ..	25
How to view the time using the Display Control	26
How to activate the Active Control™	27

How to use the AutoLock™ Controls:

Understanding the AutoLock™ Feature	28
Setting up an AutoLock™ Access Code	29
How to Block Channels	30
How to Clear All blocked channels at the same time ...	31
Blocking programming based on Movie Ratings	32
Blocking programming based on TV Ratings	33
AutoLock™ Blocking Options - Blocking Control	34
AutoLock™ Blocking Options - No Rating Control	35
How to review the AutoLock™ Control Status	36
How to use the Closed Captioning Control	37
How to change the screen (size) format using the Format Control	38
How to use the Rotation Control	39
How to activate the Blue Mute Control	40

REMOTE CONTROL RELATED FEATURES

How to set the Sleep Timer Control	41
How to Use the Freeze Control	42
Using the AutoPicture™ Control	43
Using the AutoSound™ Control	44
Using the Surf Control (and Alternate Channel)	45
Using the Remote Control with accessory devices	
Direct Access Method	46
Code-Entry Method	47
Search Method	48
Direct-Entry Code list for accessory devices	49-50
Remote Control VCR Specific Button	51


GENERAL INFORMATION

Troubleshooting	52
Care and Cleaning	52
Glossary of terms	53
Index	53
Factory Service Locations	54-55
Limited Warranty	56

QUICK USE AND HOOKUP GUIDE

Refer to the simple *Quick Use and Setup Guide* (supplied with your TV) for details on the following:

 - Basic TV connections
- Advanced TV connections
- Basic TV operation
- Basic Remote Control operation
- Remote Control Button Descriptions

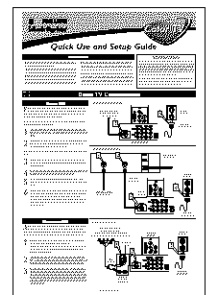

FEATURES

Active Control™ continuously measures and corrects all incoming signals to help provide the best picture quality. This feature monitors and corrects both the sharpness control and noise reduction control.

Audio/Video Jack Panel allows direct connections with VCRs, DVDs, or other devices, providing quality TV picture and sound playback.

Audio Volume Leveler (AVL) Control keeps the TV sound at an even level. Peaks and valleys that occur during program changes or commercial breaks are reduced, making for a more consistent, comfortable sound.

AutoChron™ automatically sets the right time of day and maintains it with digital precision through brownouts, power failures, and even Daylight Savings Time adjustments.

AutoLock™ allows you to block the viewing of certain channels or programs with certain ratings if you do not want your children to view inappropriate materials.

Auto Programming scans (when activated) for all available channels from regular antenna or cable signals and stores only active broadcast stations in the TV's memory.

AutoPicture™ allows you to change the picture settings (color, tint, contrast, etc.) for various types of programming, such as sports, movies, multimedia (games), or weak signals with the push of one button.

AutoSound™ allows you to select from three factory-set controls and a personal control that you set according to your own preferences through the onscreen Sound menu. The three factory-set controls (Voice, Music, and Theatre) enable you to tailor the TV sound so as to enhance the particular programming you are watching.

Channel Edit allows you to add or delete channels from the list stored in the TV's memory. Channel Edit makes it easy to limit or expand the number of channels that are available to you when you press the Channel (+) or (-) buttons on your remote control.

Closed Captioning allows the viewer to read TV program dialogue or voice conversations as onscreen text.

Dynamic Contrast helps to sharpen the picture quality by improving the contrast between the darkest and brightest parts of the picture.

Eye Fidelity (also known as Digital Options) give a choice of two different scanning technics – Progressive Scan or Interlaced. Progressive Scan doubles the number of visible lines per field by displaying all picture frame lines at once, eliminating any picture flicker. The Interlaced mode provides a double vertical display scan, which reduces annoying motion sweeps. The Interlaced mode will also smooth out the jagged lines sometimes seen on the edges of curved or angled surfaces.

Infrared Remote Control works your TV and other remote-controlled devices, such as VCRs, DVD players, cable converters, and satellite receivers.

Onscreen Menu shows helpful messages and instructions for setting TV feature controls (can be viewed in English, French, or Spanish).

Sleep Timer automatically turns the TV OFF after a set amount of time that you choose.

Standard Broadcast (VHF/UHF) or Cable TV (CATV) channel capability allows for viewing by antenna or cable.

Stereo capability, including a built-in audio amplifier and twin-speaker system, allows for the reception of TV programs broadcast in stereo sound.

Surf Button allows you to easily switch among only the channels that are of interest to you (the ones that you have programmed into the TV's Surf control through the onscreen menu).

Timer allows you to set your TV to turn itself ON and OFF once or daily like an alarm clock.

Items Included with This TV

As you unpack your TV, please note that this *Directions for Use* manual contains safety-tip information and **Factory Service Center locations, as well as a Warranty Registration Card, remote control, and batteries for use with the remote control.**

Please take a few minutes to complete your registration card. The serial number for the TV is on the rear of the set. Refer to the back of this manual for instructions in the cleaning and care of the TV.

END-OF-LIFE DISPOSAL

Your new television and its packing contain materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and minimize the amounts that need to be properly disposed.

Your product also uses batteries that should not be thrown away when depleted, but should be handed in and disposed of as small chemical waste.

When you replace your existing equipment, please find out about the local regulations regarding disposal of your old television, batteries, and packing materials.



As an Energy Star® Partner, Philips Consumer Electronics has determined this product meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark. Using products with the Energy Star® label can save energy. Saving energy reduces air pollution and lowers utility bills.

Active Control, APAC, AutoPicture, AutoSound, AutoChron, and Incredible Surround are trademarks of Philips Consumer Electronics Company. Copyright 2001 Philips Consumer Electronics.



 
HOW TO USE THE LANGUAGE CONTROL

For or Spanish and French-speaking TV owners, an onscreen LANGUAGE option is present. The LANGUAGE control enables you to set the TV's onscreen menu to be shown in either English, Spanish, or French.

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button repeatedly until **INSTALL** is highlighted.
- 3 Press the **CURSOR RIGHT** button to shift the menu to the left and highlight **LANGUAGE**.
- 4 Press the **CURSOR RIGHT** button to highlight the LANGUAGE control options.
- 5 Press the **CURSOR UP** or **CURSOR DOWN** button to select **ENGLISH**, **ESPAÑOL** (Spanish), or **FRANCAIS** (French).
- 6 Press the **STATUS/EXIT** button to clear the menu from the screen.

HELPFUL HINT

Remember, the LANGUAGE control makes only the TV's onscreen MENU items appear in English, Spanish, or French text. It does not change the other onscreen text features, such as Closed Captioning (CC), with TV shows.

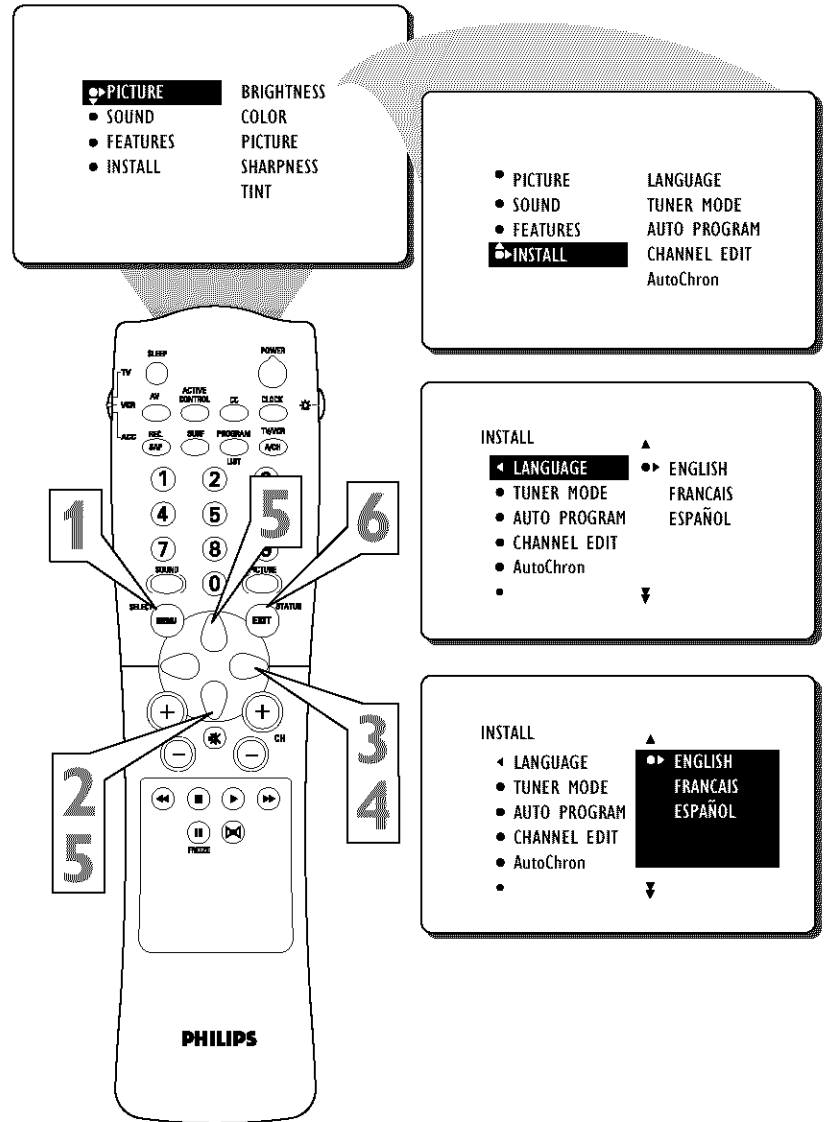


HOW TO USE THE TUNER MODE CONTROL



The **TUNER MODE** feature allows you to change the TV's signal input to **CABLE**, **ANTENNA**, or **AUTO** mode. It's important for the TV to know if you want to receive channels from a cable TV signal or a normal antenna signal.

NOTE: The **AUTO** mode setting helps the TV determine the type of signal or channels being received when **AUTO PROGRAM** is activated.

 - 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button repeatedly until **INSTALL** is highlighted.
- 3** Press the **CURSOR RIGHT** button to shift the menu to the left.
- 4** Press the **CURSOR DOWN** button once to highlight **TUNER**.
- 5** Press the **CURSOR RIGHT** button to highlight the **TUNER MODE** options.
- 6** With the **TUNER MODE** control set to **AUTO**, the Auto Program control will detect whether or not cable input is present. (See the Auto Program section on the next page.)
If, however, you want to set the **TUNER MODE** to **CABLE** or **ANTENNA**, press the **CURSOR UP** or **CURSOR DOWN** button until either **CABLE** or **ANTENNA** is highlighted.
- 7** Press the **STATUS/EXIT** button to clear the menu from the screen.

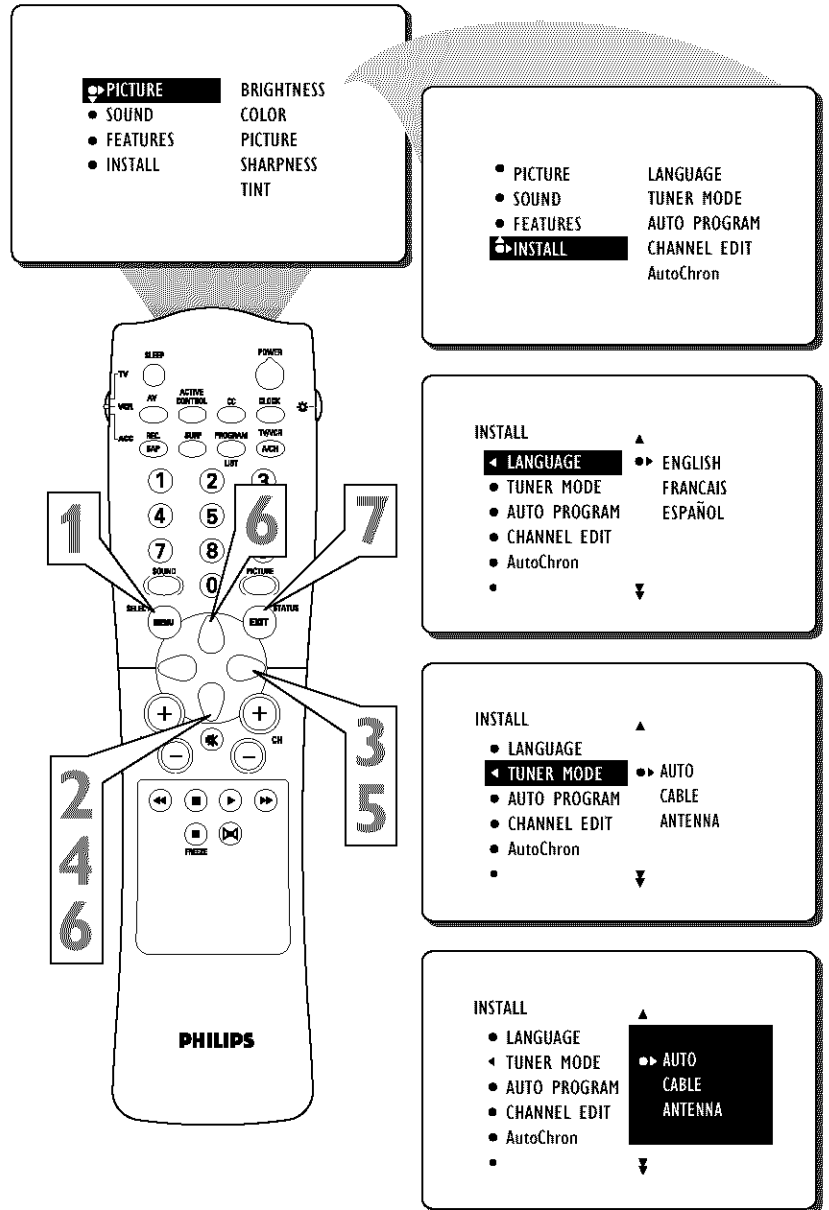

HELPFUL HINT

When **CABLE** is selected, channels 1–125 are available.

When **ANTENNA** is selected, channels 2–69 are available.



 
HOW TO AUTOMATICALLY PROGRAM CHANNELS

Your TV can automatically set itself for local area (or cable TV) channels. This makes it easy for you to select only the TV stations in your area by pressing the CHANNEL (+) or (-) button.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button repeatedly until **INSTALL** is highlighted.
- 3** Press the **CURSOR RIGHT** button to shift the menu to the left. **LANGUAGE** will be highlighted.
- 4** Press the **CURSOR DOWN** button repeatedly until the **AUTO PROGRAM** control is highlighted.
- 5** Press the **CURSOR RIGHT** button to start the Auto Program scanning of channels.
- 6** Press the **STATUS/EXIT** button to clear the menu from the screen.

HELPFUL HINT

After you've run Auto Program, check out the results. Press the CHANNEL (+) or (-) button and see which channels you can select. Remember, an antenna or cable TV signal must first be connected to your TV.

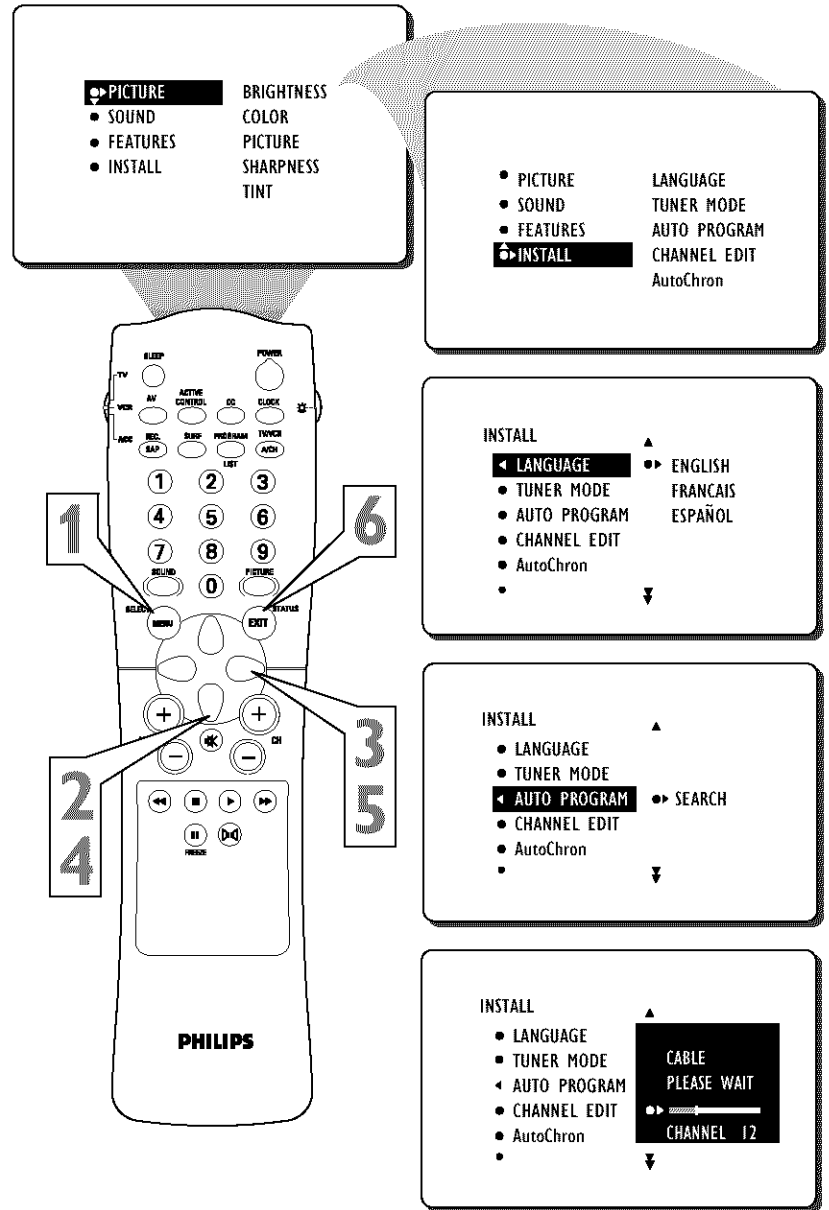

HOW TO ADD OR DELETE CHANNELS



 
CHANNEL EDIT makes it easy for you to add or delete channels from the list of channels stored in the TV's memory.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button repeatedly until **INSTALL** is highlighted.
- 3** Press the **CURSOR RIGHT** button to shift the menu to the left. **LANGUAGE** will be highlighted.
- 4** Press the **CURSOR DOWN** button repeatedly until the **CHANNEL EDIT** control is highlighted.
- 5** Press the **CURSOR RIGHT** button to access the **CHANNEL EDIT** menu.
- 6** Press the **CURSOR UP** or **CURSOR DOWN** button to scroll through the list of available channels. Or press the number buttons on your remote control to select a specific channel (for example, press 0 and then 2 to select channel 2).
- 7** With the channel you want to edit selected, press the **CURSOR RIGHT** button to mark the channel as **SKIPPED**. The channel you've marked **SKIPPED** will not appear when you are changing from channel to channel while watching TV.

NOTE: When you want to add a channel that has been marked **SKIPPED**, press the **CURSOR UP** or **CURSOR DOWN** button to highlight the channel; then press the **CURSOR RIGHT** button to remove the word **SKIPPED**.

HELPFUL HINT

The channels available for you to edit are the ones that the **AUTO PROGRAM** feature found while performing a search of your TV antenna or cable TV signals. Channels not found during the search are marked **SKIPPED**.

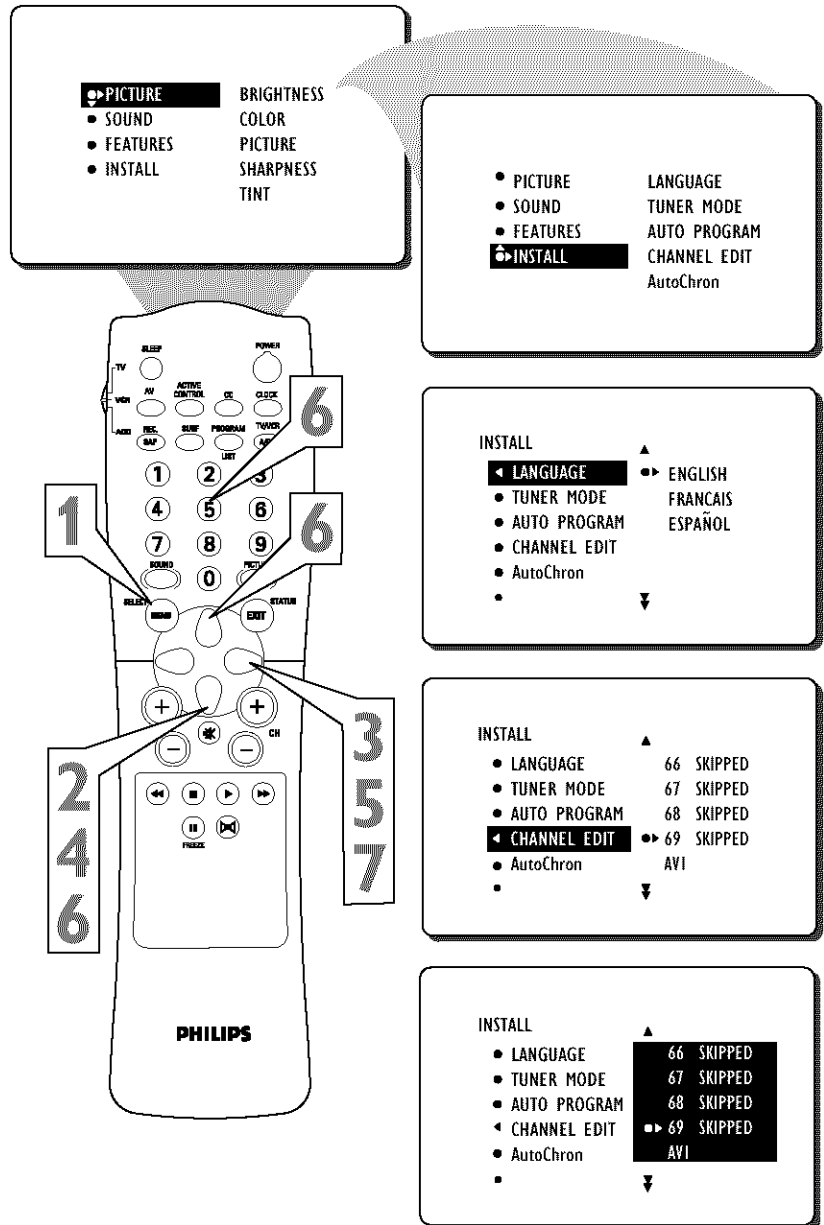




HOW TO USE THE NAME CONTROL (CHANNEL LABEL)

The channel NAME feature allows you to list the "call" letters of your favorite stations beside their channel numbers when they appear on the screen. The TV has in memory a list of the 50 most popular channel names (for example, ABC, NBC, FOX, etc.). You also can enter a custom name (up to five characters).

 - 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button repeatedly until **INSTALL** in highlighted.
- 3 Press the **CURSOR RIGHT** button to shift the menu to the left. **LANGUAGE** will be highlighted.
- 4 Press the **CURSOR DOWN** button repeatedly until the **NAME** control is highlighted.
- 5 Press the **CURSOR RIGHT** button to highlight the **NAME** options area.
- 6 Press the **CURSOR UP** or **DOWN** button to scroll the list of names, or press the **CURSOR RIGHT** button to enter a personal name. Press the **CURSOR UP** or **CURSOR DOWN** button to scroll through a list of options for the first character (A through Z, 0 through 9). Press the **CURSOR RIGHT** button and repeat for the second, third, fourth, and fifth characters.
- 7 After you have selected a name for the channel, press the **MENU** button to save the name in the TV's memory.
- 8 Press the **STATUS/EXIT** button to clear the menu from the screen.

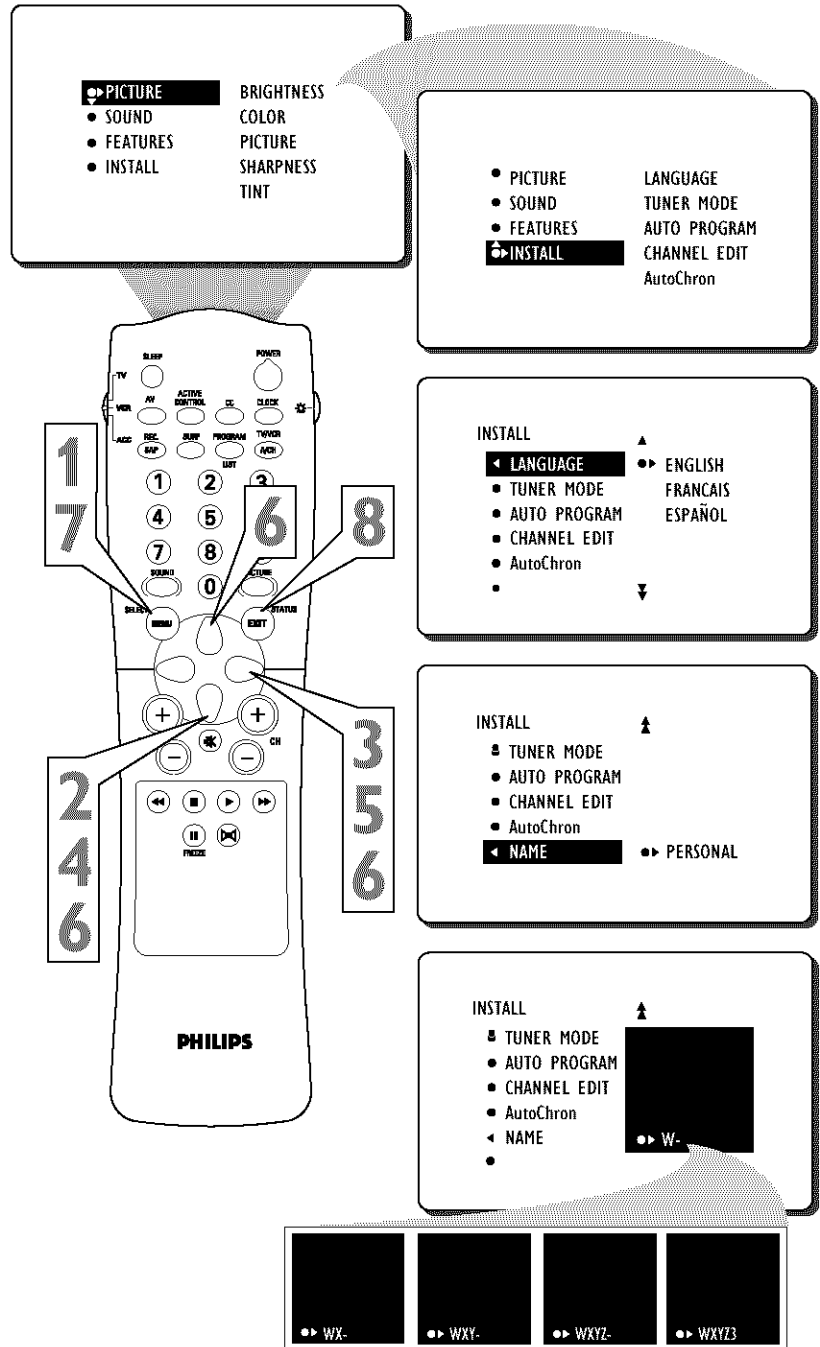


HELPFUL HINT

The five characters that the channel NAME feature allows you to input can be letters, a dash character, or the numbers 0 through 9.



AutoChron™ can automatically set the TV's onscreen clock. Because the time is received from a broadcast signal, you must be sure that a cable TV or antenna signal is present before you attempt to use the AutoChron™ feature.

 - 1** Press the **MENU** button on the remote to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button repeatedly until **INSTALL** is highlighted.
- 3** Press the **CURSOR RIGHT** button to shift the menu to the left. **LANGUAGE** will be highlighted.
- 4** Press the **CURSOR DOWN** button until the AutoChron control is highlighted.
- 5** Press the **CURSOR RIGHT** button to start the AutoChron™ feature. Then just follow the onscreen instructions to set the clock.
- 6** Press the **CURSOR RIGHT** button to select **AUTO**. Within a few seconds, a menu for choosing your time zone will appear.
- 7** Press the **CURSOR UP** or **CURSOR DOWN** button to highlight your correct time zone.
- 8** With your correct time zone highlighted, press the **CURSOR RIGHT** button. Within a few seconds, you will be given the option to choose whether you want to select Daylight Savings Time.
- 9** Press the **CURSOR UP** or **CURSOR DOWN** button to navigate through the **YES** and **NO** selection list; then with the item you want to select highlighted, press the **CURSOR RIGHT** button. Follow the onscreen instructions (shown below) to set the AutoChron™ time either automatically or manually.

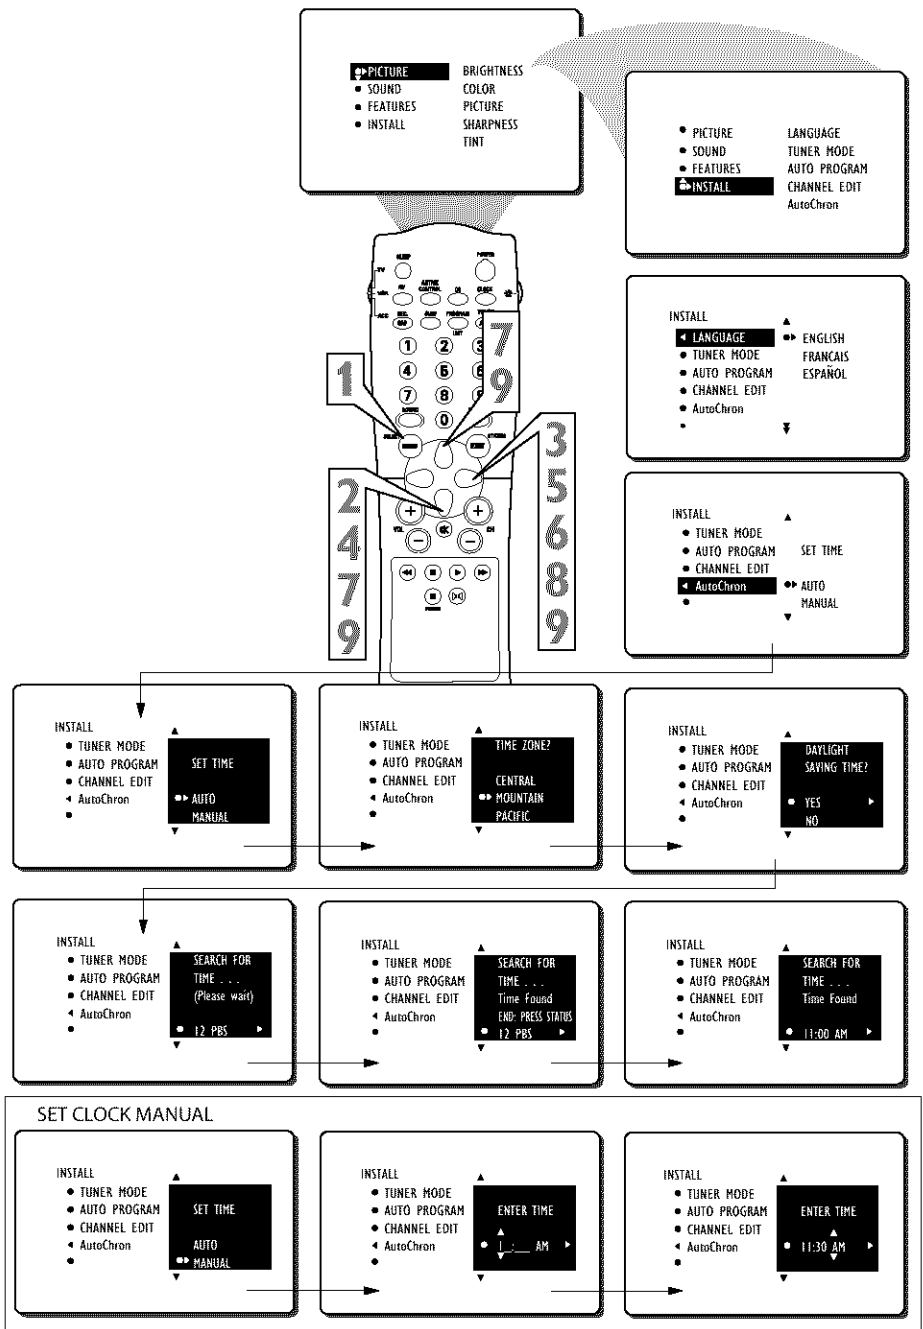

Note: When turned ON, the AutoChron™ feature can affect the start up of your television. When the power button is pressed and the AutoChron™ feature is set to the **AUTO** position, the TV will scan the channels for a PBS channel to set the clock automatically. It may take **SEVERAL** seconds before the TV powers itself ON.



ADJUSTING THE PICTURE CONTROLS


To adjust your TV picture controls, select a channel and follow these steps.

- 1** Press the **MENU** button on the remote control to show the onscreen menu. PICTURE will be highlighted.
- 2** Press the **CURSOR RIGHT** button and the menu will shift to the left. BRIGHTNESS will be highlighted and an adjustment bar will be shown to the right.
- 3** Use the **CURSOR LEFT** or **CURSOR RIGHT** button to adjust the BRIGHTNESS level of the picture.
- 4** After adjusting the BRIGHTNESS control, press the **CURSOR DOWN** button to select another picture adjustment: COLOR, PICTURE, SHARPNESS, TINT, OR COLOR TEMP. Press the **CURSOR LEFT** or **CURSOR RIGHT** button to adjust the selected control.

NOTE: The menu will show only five items at a time, so you will need to continue scrolling with the CURSOR DOWN button to adjust the TINT and COLOR TEMP.

- 5** Press the **STATUS/EXIT** button to remove the menu from the screen.

HELPFUL HINT

Remember, when the bar scale is centered , the control settings are at normal, mid-range levels. Picture adjustments are described here.

NOTE: The SHARPNESS and TINT Controls will not be available for adjustments when tuned to the AV4 Inputs (AV4 Channel) and CVI Inputs (CVI Channel).

BRIGHTNESS – adds or subtracts light from the darkest part of the picture.

COLOR – adds or eliminates color.

PICTURE – improves the detail of the lightest parts of the picture.

SHARPNESS – improves the detail in the picture.

 
 
TINT – adjusts the picture to obtain natural skin tones.

COLOR TEMP offers NORMAL, COOL, or WARM picture preferences.

NORMAL – keeps whites, white.

COOL – makes whites, bluish.

WARM – makes whites, reddish.

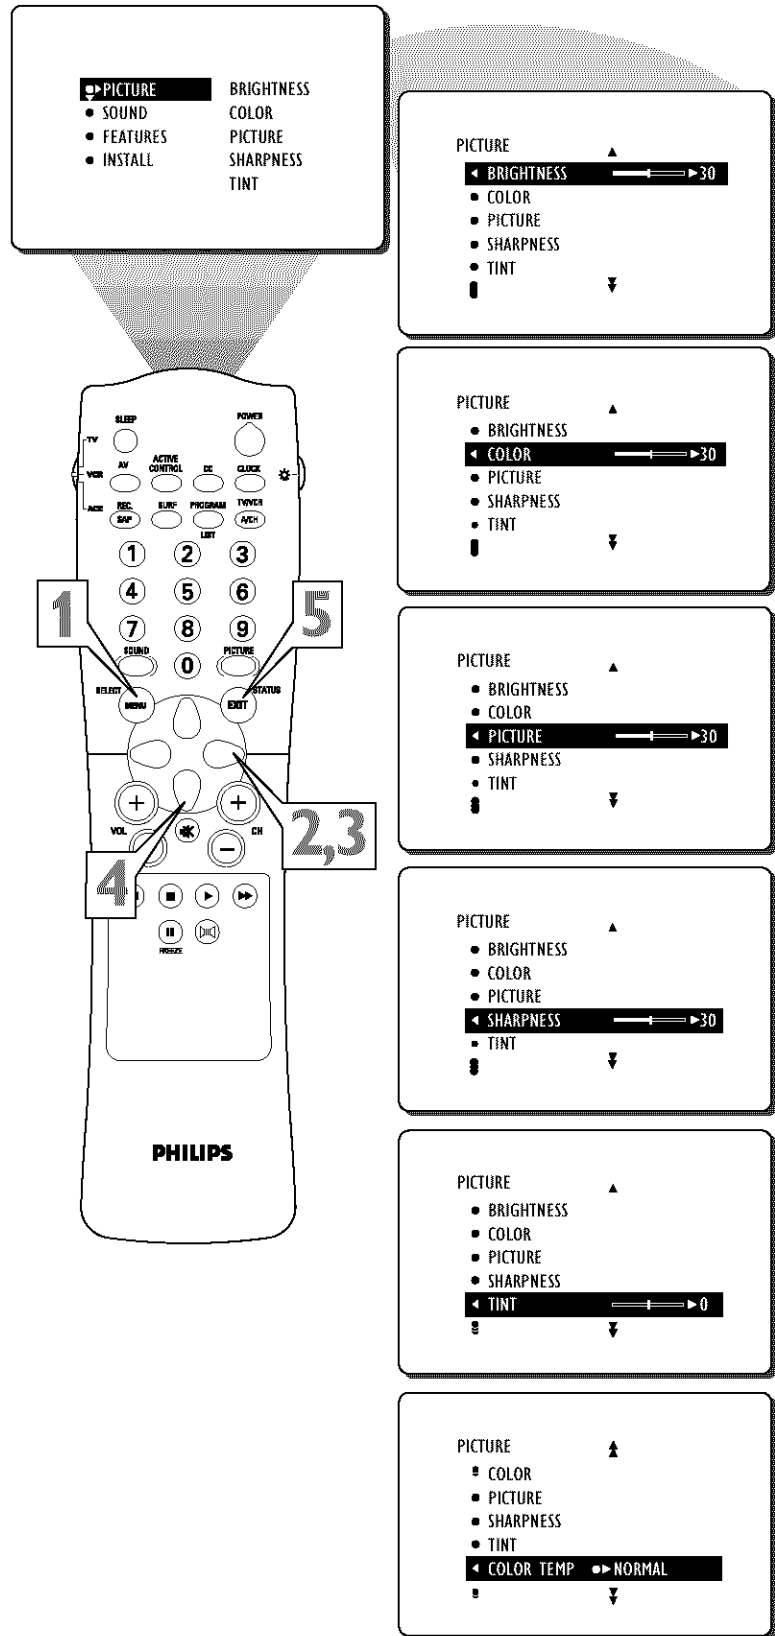

HOW TO USE THE DIGITAL OPTIONS CONTROL

 


The Digital Options (Eye Fidelity) control gives you a choice between two different picture scanning modes: Progressive Scan and Interlaced (1050i).

Progressive Scan doubles the number of picture lines, eliminating line flicker and providing a jitter-free picture.

Interlaced (1050i mode) improves the appearance of onscreen motion. All 'Picture Adjustment Controls' stay controllable, including the Active Control. It also helps smooth out jagged lines that are sometimes seen on curved and angled surfaces in the picture.

- 1** Press the **MENU** button on the remote to show the onscreen menu. PICTURE will be highlighted.
- 2** Press the **CURSOR RIGHT** button and the menu will shift to the left. BRIGHTNESS will be highlighted and an adjustment bar will be shown to the right.
- 3** Press the **CURSOR DOWN** button repeatedly until the Digital Options control is highlighted.
- 4** Press the **CURSOR RIGHT** or **LEFT** button until you select the option you want, either PROGRESSIVE or 1050i.
- 5** Press the **STATUS/EXIT** button to remove the menu from the screen.

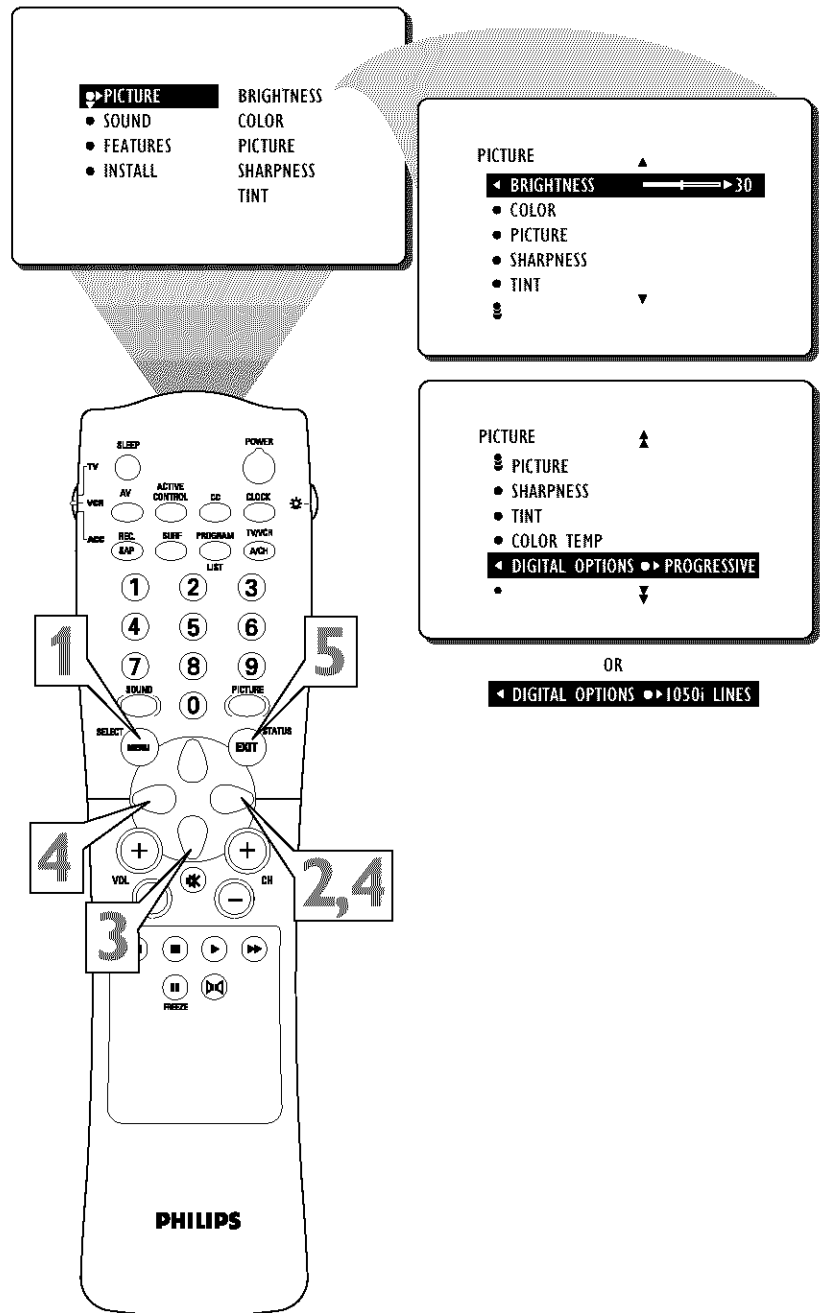

HELPFUL HINT

The Digital Options (Eye Fidelity) Control is not available for use with the AV 4 input jacks.



 
HOW TO SET THE DYNAMIC CONTRAST CONTROL

The Dynamic Contrast control allows you to sharpen the picture quality by making dark portions of the picture darker and light portions of the picture more noticeable. Normally, you will probably want to select MED. In certain circumstances, however, you may prefer MIN or MAX.

- 1** Press the **MENU** button on the remote to show the onscreen menu. PICTURE will be highlighted.
- 2** Press the **CURSOR RIGHT** button and the menu will shift to the left. BRIGHTNESS will be highlighted and an adjustment bar will be shown to the right.
- 3** Press the **CURSOR DOWN** button repeatedly until the DYN. CONTRAST control is highlighted.
- 4** Press the **CURSOR RIGHT** or **LEFT** button until you select the option you want, either OFF, MIN, MED, or MAX.
- 5** Press the **STATUS/EXIT** button to remove the menu from the screen.

HELPFUL HINT

The Dynamic Contrast control is not available for use with the AV 4 Inputs (AV4 Channel).

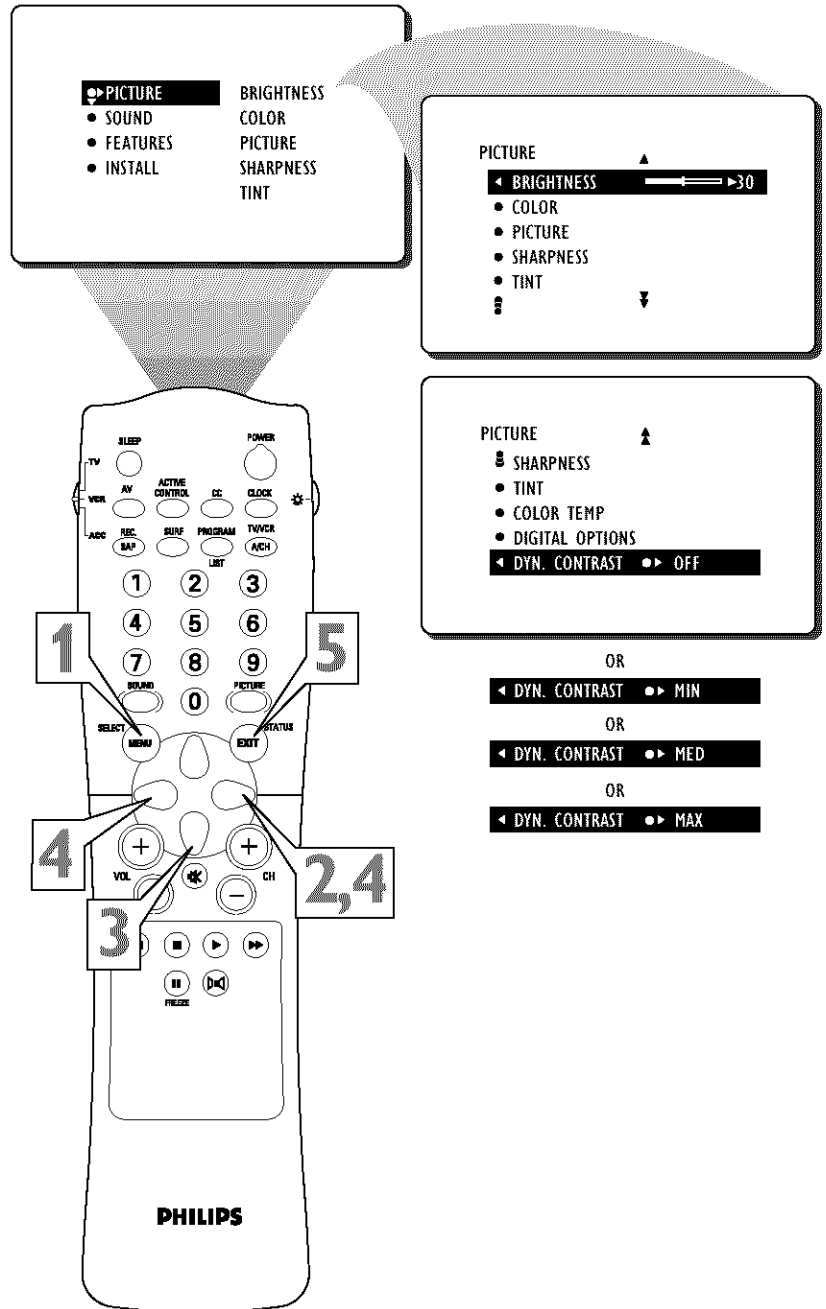


ADJUSTING THE TREBLE, BASS, AND BALANCE CONTROLS



Besides the normal volume level control, your TV also has individual sound-adjustment controls. The **TREBLE** (high frequency), **BASS** (low frequency), and **Speaker BALANCE** may all be used to adjust the sound playback of TV programs.

 - 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button once to highlight **SOUND**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TREBLE** will be highlighted and an adjustment bar will be shown to the right.
- 4** Use the **CURSOR RIGHT** or **CURSOR LEFT** button to adjust the **TREBLE** (high frequency) level of the television's sound.
- 5** After adjusting the **TREBLE** control, press the **CURSOR DOWN** button to select another sound adjustment: **BASS** or **BALANCE**.
- 6** Press the **CURSOR RIGHT** or **CURSOR LEFT** button to adjust the selected control.
- 7** Press the **STATUS/EXIT** button to remove the menu from the screen.

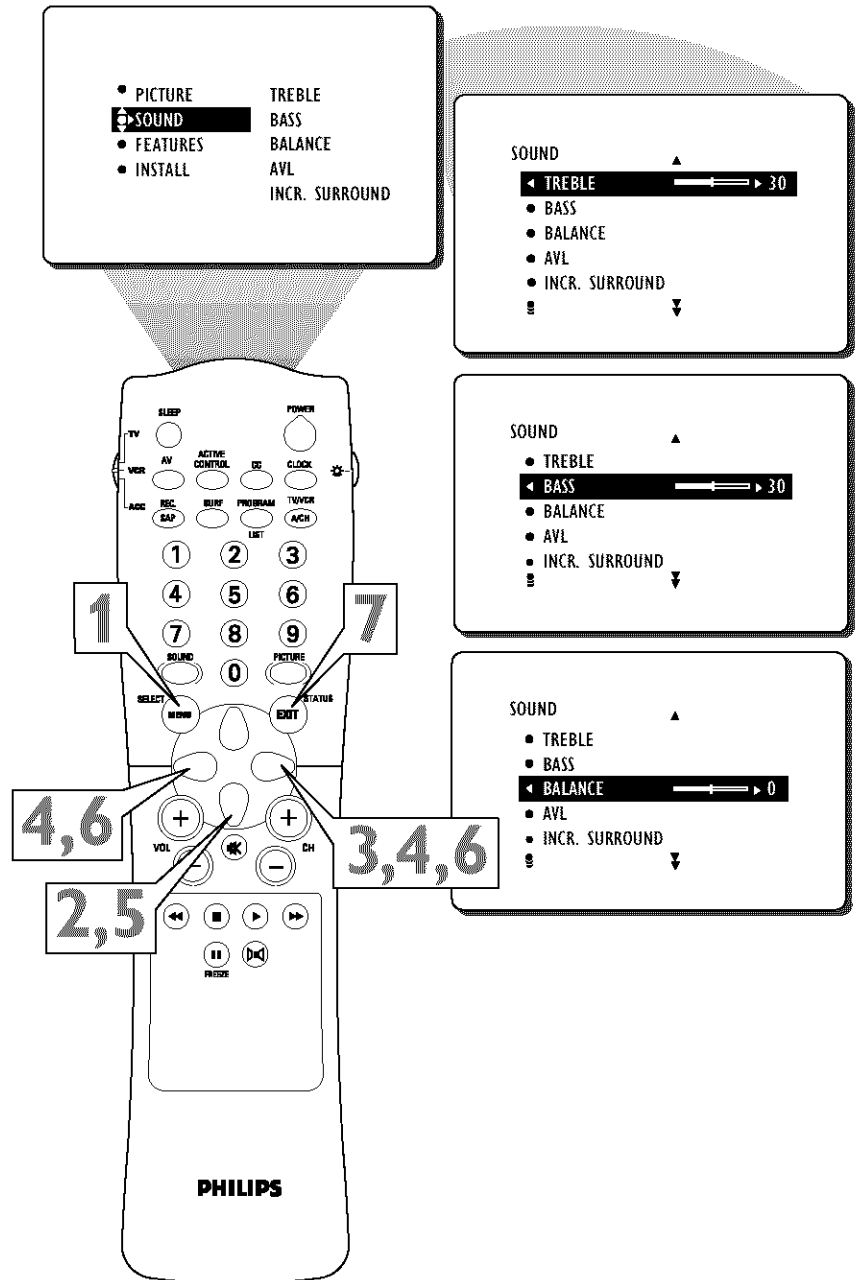

HELPFUL HINT

 
Remember, when the bar scale is centered, speaker **BALANCE** is centered between the TV's left and right side speakers.



HOW TO USE THE AVL CONTROL

In most cases, the volume levels coming from broadcast programming or commercials are never the same. With the AVL (Audio Volume Leveler) control turned ON, you can have the TV level out sound that is being heard. This makes for a more consistent sound by reducing the peaks and valleys that occur during program changes or commercial breaks. To turn the AVL ON, follow these steps.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button once to highlight **SOUND**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TREBLE** will be highlighted and an adjustment bar will be shown to the right.
- 4** Press the **CURSOR DOWN** button repeatedly until **AVL** is highlighted.
- 5** Press the **CURSOR RIGHT** or **CURSOR LEFT** button to toggle **AVL ON** or **OFF**.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.

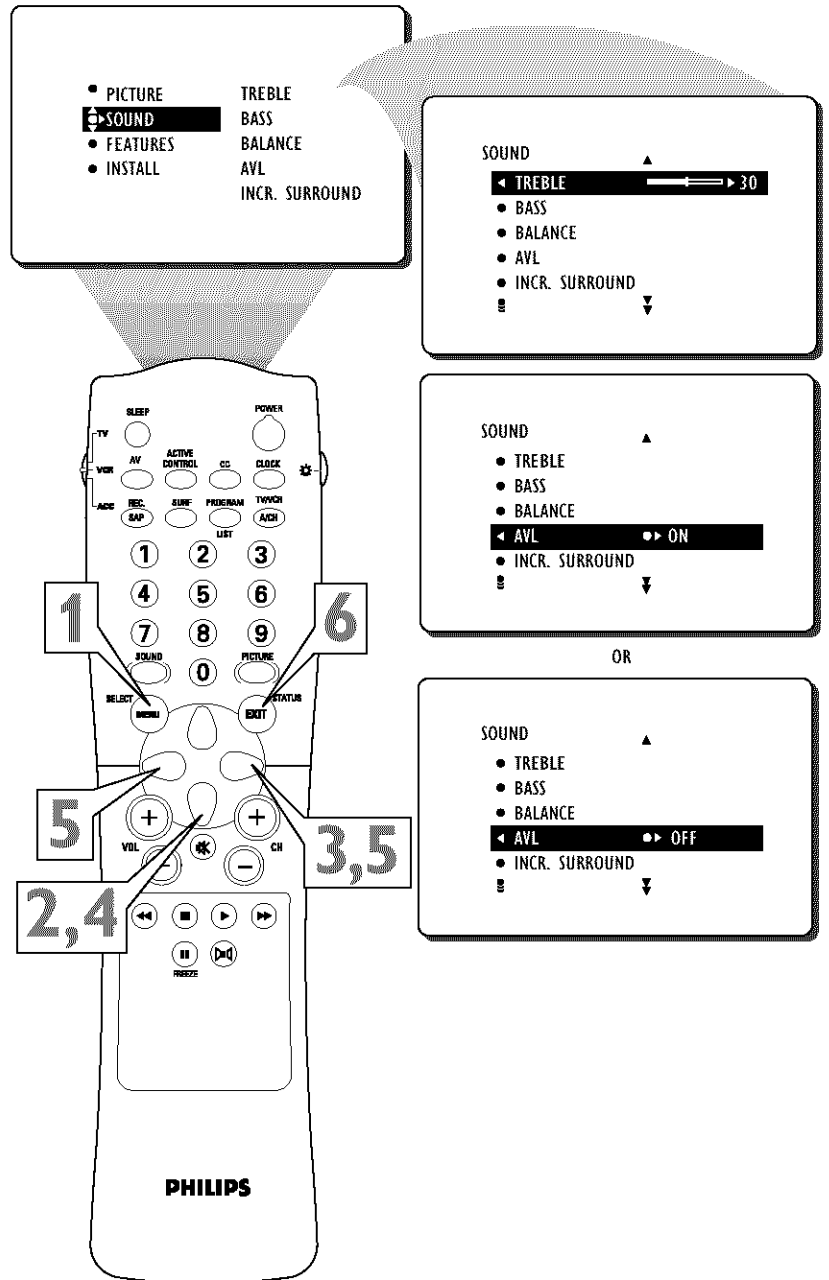


HOW TO USE THE INCREDIBLE SURROUND CONTROL



The Incredible Surround feature adds greater depth and dimension to both mono-aural (MONO) and stereo TV sound. With the control set to INCR. SURROUND (Incredible Surround), the TV's speakers can add even wider sound separation to normal broadcasts.

 - 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button once to highlight **SOUND**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TREBLE** will be highlighted and an adjustment bar will be shown to the right.
- 4** Press the **CURSOR DOWN** button repeatedly until **INCR. SURROUND** is highlighted.
- 5** Press the **CURSOR RIGHT** or **CURSOR LEFT** button to toggle the **INCR. SURROUND** control settings.
 - If signal is **Stereo**: Select **STEREO**, or **INCR. SURROUND**.
 - If signal is **MONO**: Select **MONO**, or **SPATIAL**.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.
- 7** You can also change the **INCR. SURROUND** onscreen menu control settings by pressing the **INCREDIBLE SURROUND** button on the remote control.

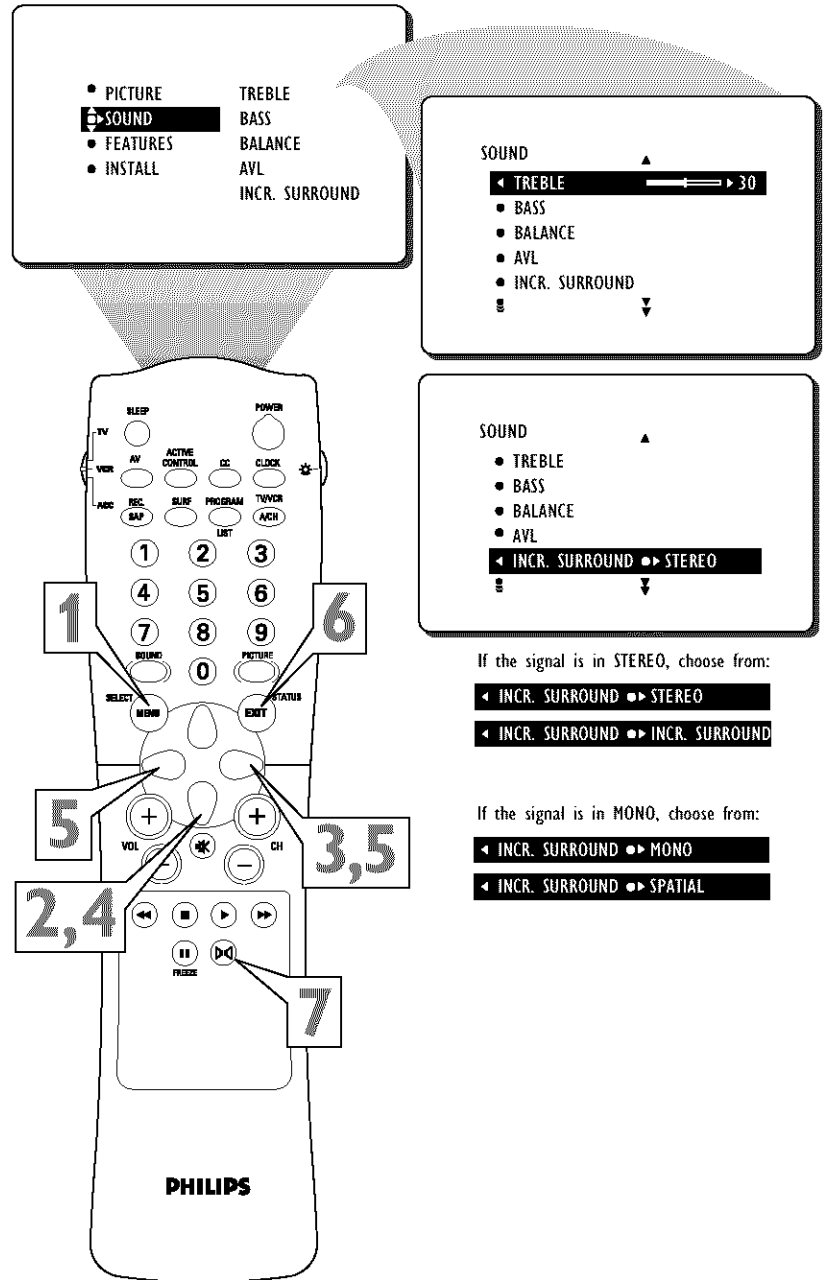

If the signal is in **STEREO**, choose from:

- ◀ INCR. SURROUND ▶ STEREO
- ◀ INCR. SURROUND ▶ INCR. SURROUND

If the signal is in **MONO**, choose from:

- ◀ INCR. SURROUND ▶ MONO
- ◀ INCR. SURROUND ▶ SPATIAL

HELPFUL HINT

SPATIAL – widens the Mono sound, simulating a broader, fuller sound.

 
INCR. SURROUND – widens the Stereo sound, simulating a broader, fuller sound.



HOW TO SET THE STEREO CONTROL

You can receive broadcast stereo TV programs. The TV has both an amplifier and twin speakers through which the stereo sound can be heard.

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button once to highlight **SOUND**.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left. **TREBLE** will be highlighted and an adjustment bar will be shown to the right.
- 4 Press the **CURSOR DOWN** button repeatedly until **STEREO** is highlighted.
- 5 Press the **CURSOR RIGHT** or **CURSOR LEFT** button to select **STEREO** or **MONO**.
- 6 Press the **STATUS/EXIT** button to remove the menu from the screen.

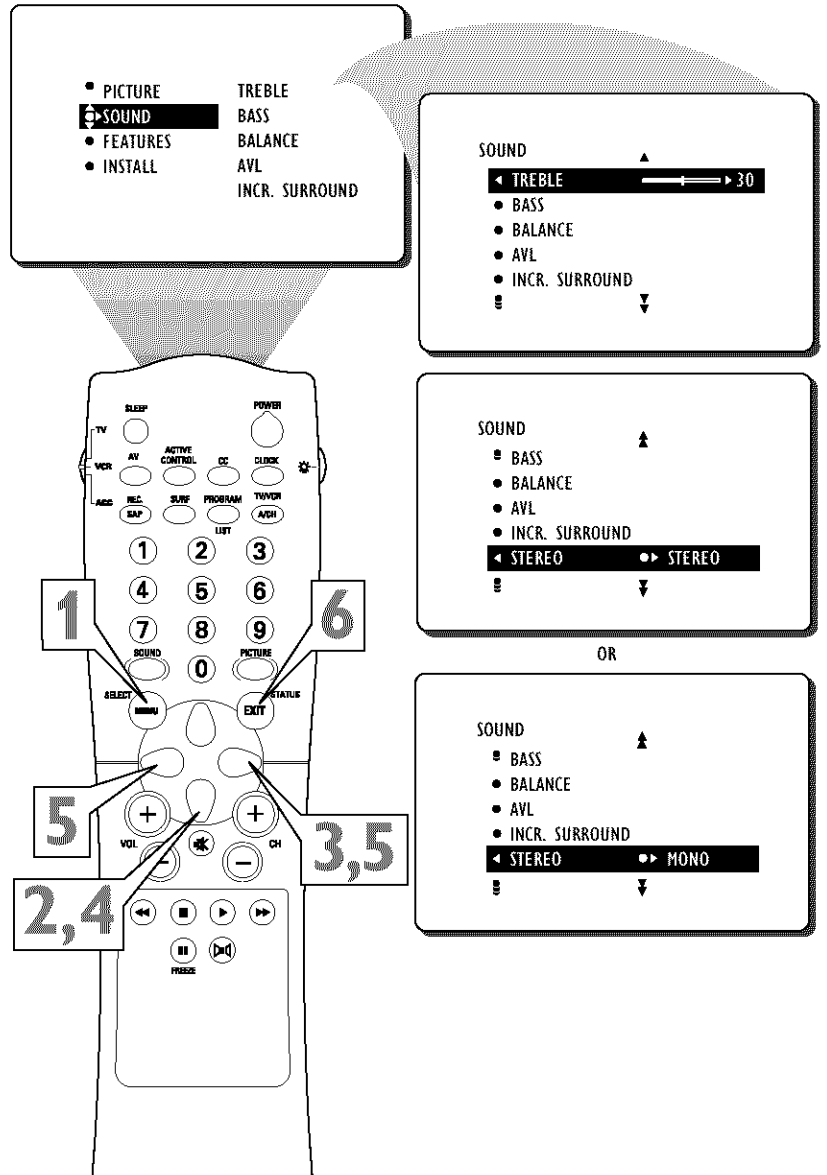





HELPFUL HINT

Remember, if stereo is not present on a selected show and the TV is placed in the **STEREO** mode, the sound coming from the set will remain monaural.

SAP-SECONDARY AUDIO PROGRAM

An SAP is an additional part of the stereo broadcast system. Sent as a third audio channel, an SAP can be heard separate from the current TV program sound. TV stations are free to use SAP for any number of purposes.

    If an SAP signal is not present with a selected program, the SAP option cannot be selected. Also, if SAP is selected on a channel (with SAP) and you select another channel, when you return to the original channel, SAP will be OFF. You will have to reselect the SAP feature.

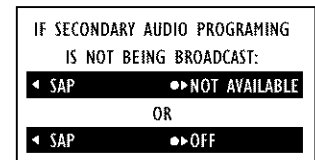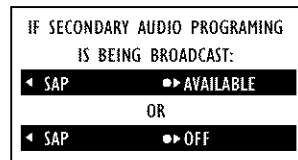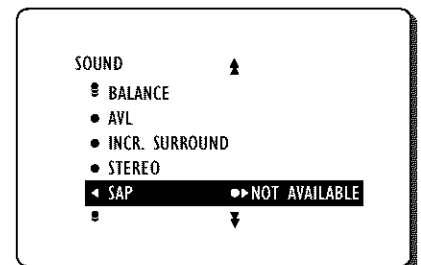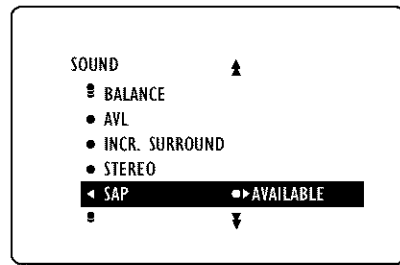


HOW TO USE THE AUDIO OUT CONTROL



If you have connected the TV's AUDIO OUTPUT jacks to the AUDIO INPUT jacks on a stereo receiver, set AUDIO OUT to either VARIABLE or FIXED to determine whether you adjust the volume at the stereo or at the TV. If you select VARIABLE, change the volume at the TV using the TV's remote control. If you select FIXED, adjust the volume at the stereo using the stereo's controls. To select FIXED or VARIABLE, follow these steps.

 - 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button once to highlight **SOUND**.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left. **TREBLE** will be highlighted and an adjustment bar will be shown to the right.
- 4 Press the **CURSOR DOWN** button repeatedly until **AUDIO OUT** is highlighted.
- 5 Press the **CURSOR RIGHT** or **CURSOR LEFT** button to select **FIXED** or **VARIABLE**.
- 6 Press the **STATUS/EXIT** button to remove the menu from the screen.

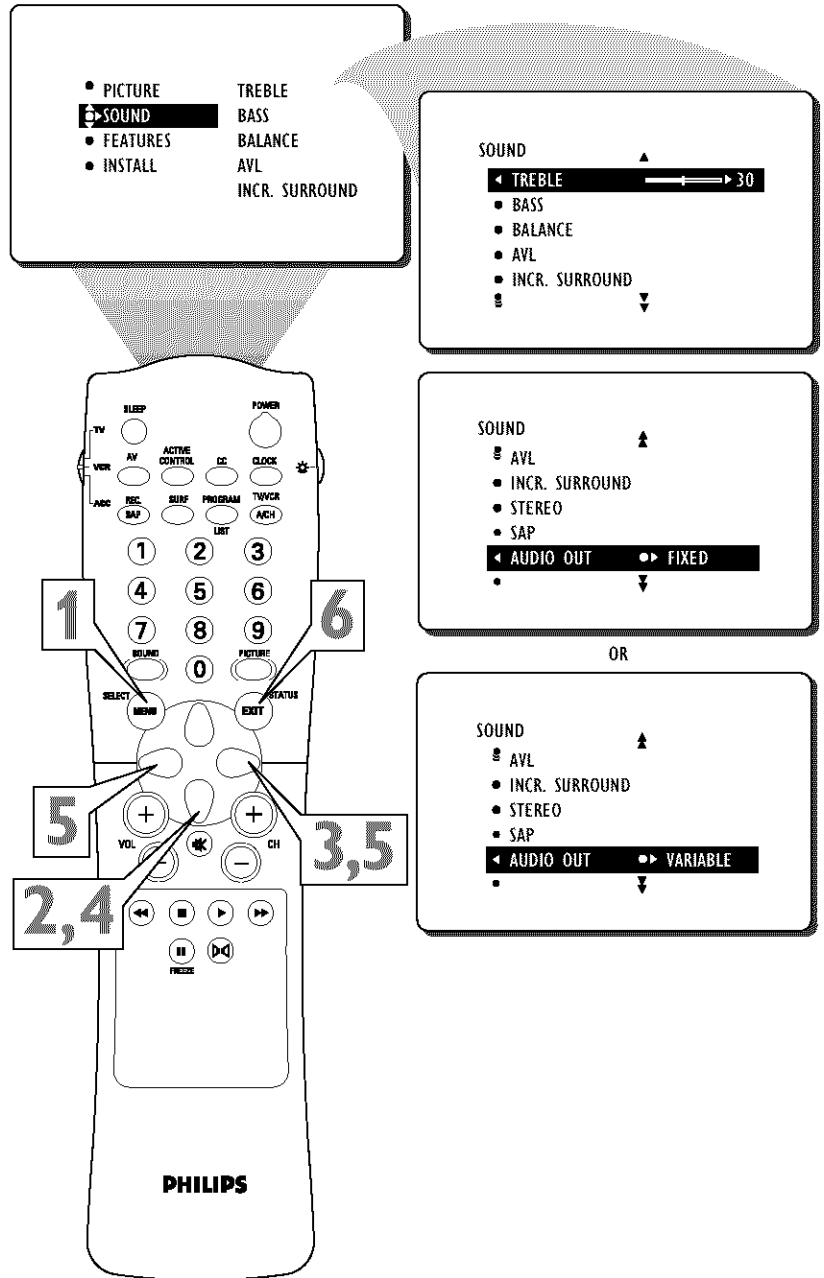

HELPFUL HINT

FIXED – If **FIXED** is selected, the sound coming from the TV and being heard through an external audio system is not adjustable with the television's volume controls. The volume would have to be adjusted at the audio system.

 
VARIABLE – If **VARIABLE** is selected, the sound coming from the TV and being heard through an external audio system can be adjusted at the TV using the Volume + or – buttons on the television or remote control.



HOW TO TURN THE TV SPEAKERS ON OR OFF

Using the TV's Audio (Monitor) Output jacks and TV Speaker ON/OFF control an external audio system can be used to hear the sound coming from the TV. The Speaker Control will allow you to turn the television's speakers off so the TV sound would only be heard through the audio system. Please refer to the Quick Use and Hookup Guide for the proper connections needed to hookup an external audio system.


- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button once to highlight **SOUND**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TREBLE** will be highlighted and an adjustment bar will be shown to the right.
- 4** Press the **CURSOR DOWN** button repeatedly until **SPEAKERS** is highlighted.
- 5** Press the **CURSOR RIGHT** or **CURSOR LEFT** button to turn the television's speakers ON or OFF.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.

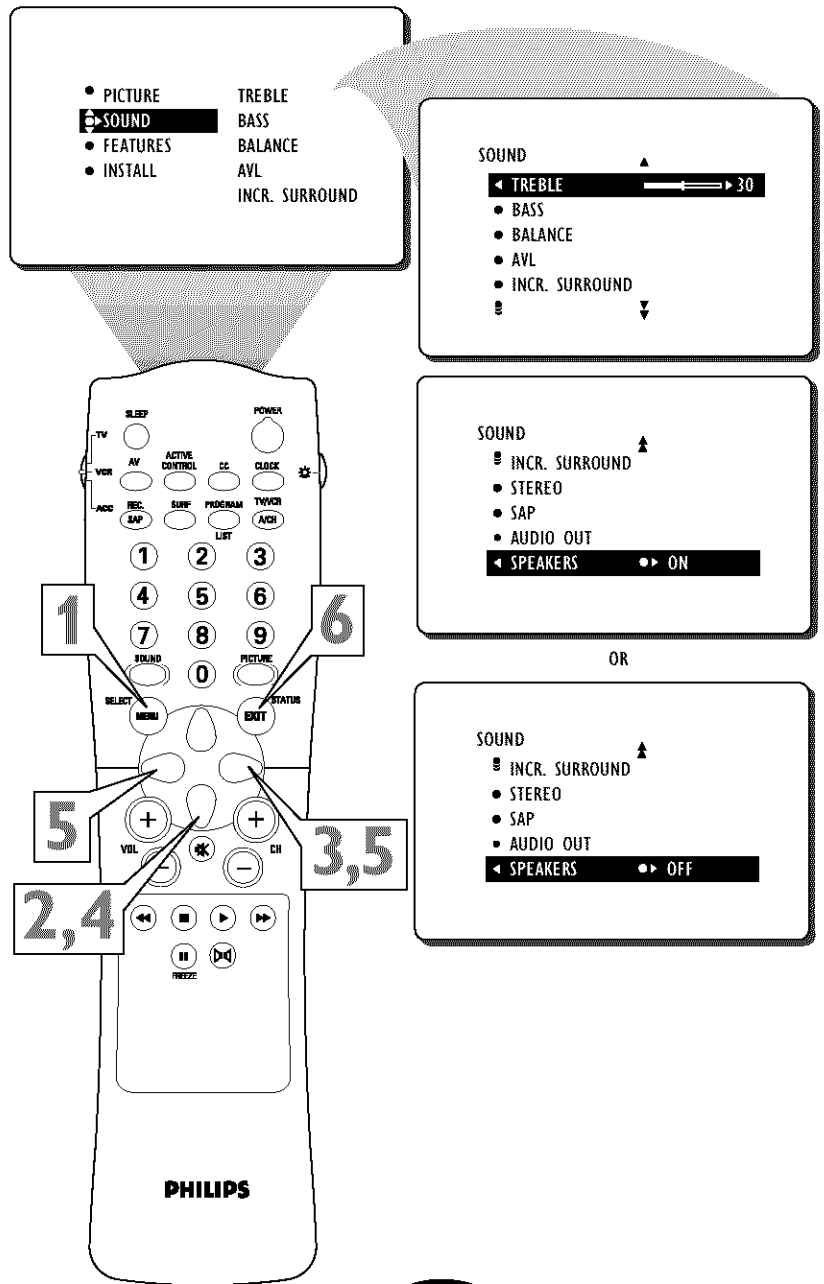

HELPFUL HINT

Be sure to first connect an external audio system to the television's Monitor Output (audio) jacks.

 If the **SPEAKERS** Control is turned OFF and no external audio system is connected, there will be no sound heard at the TV.

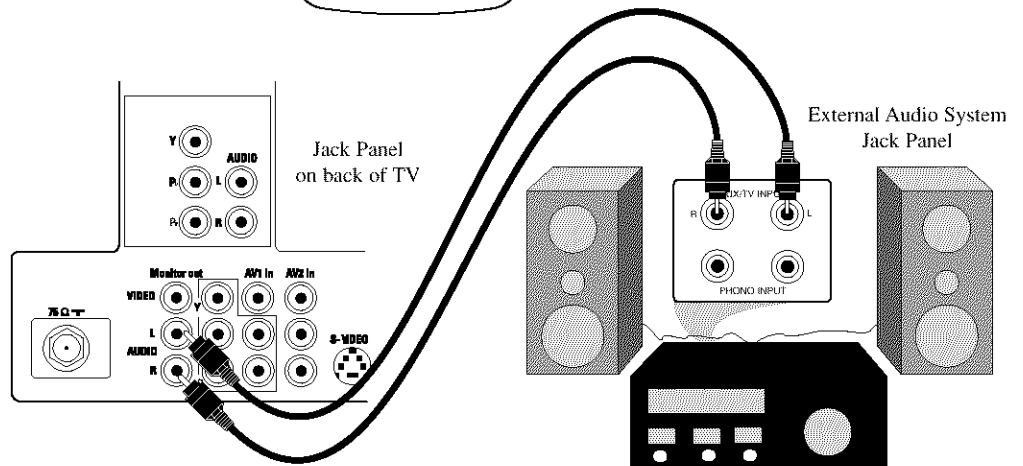


SETTING THE TV CLOCK USING THE TIMER CONTROL



Your television comes with an on-screen clock. During normal operation, the clock appears on the screen when the STATUS/EXIT button is pressed or if the TIMER DISPLAY control is turned ON.

 - 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button twice to highlight FEATURES.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left. **TIMER** will be highlighted.
- 4 With **TIMER** selected, press the **CURSOR RIGHT** button again to shift the display left and highlight the **TIME** control.
- 5 Press the **CURSOR RIGHT** button again to highlight the time indicator area.
- 6 Press the **CURSOR LEFT** or **CURSOR RIGHT** button to select the position or digit you wish to enter.
- 7 Press the **CURSOR UP** or **CURSOR DOWN** button to select the digits for the time. Or press the **NUMBERED** buttons to enter the correct time.
- 8 Press the **CURSOR RIGHT** button to move to the AM or PM position.
- 9 Press the **CURSOR UP** or **DOWN** button to set AM or PM.
- 10 Press the **STATUS/EXIT** button to remove the menu from the screen.

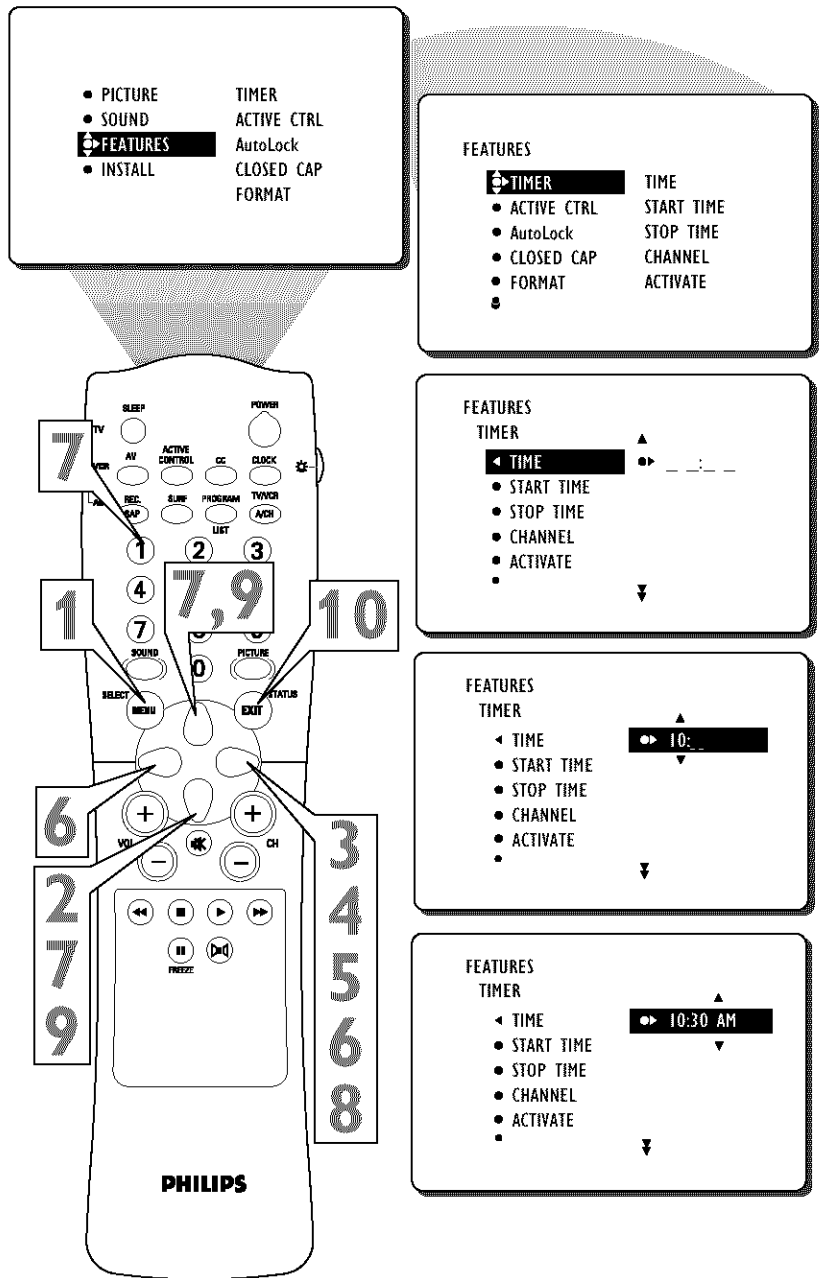


NOTE: The **TIMER** Controls can also be accessed by pressing the **CLOCK** button on the remote control. See lower diagram on this page.

HELPFUL HINT

Remember, be sure to press 0 first and then the hour number for single-digit entries.

The Clock also can be set automatically using the AutoChron™ feature found on page 4 of the *Quick Use and Installation Guide* that came with your television.

 The TV's clock settings may be lost when the TV is unplugged (or when AC power to the set is interrupted).

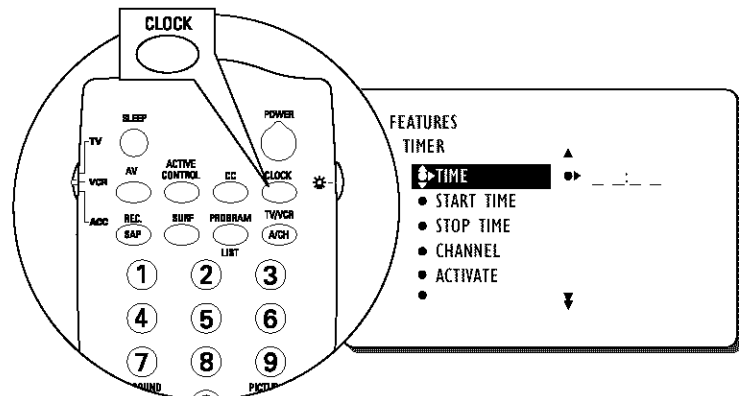



SETTING THE TV TO TURN ITSELF ON USING THE START TIME CONTROL

Just as you would an alarm clock, you can set the TV to turn itself ON once or at the same time every day. Follow these steps to set the Start Time.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TIMER** will be highlighted.
- 4** With **TIMER** selected, press the **CURSOR RIGHT** button again to shift the display left.
- 5** Press the **CURSOR DOWN** button to highlight the **START TIME** control.
- 6** Press the **CURSOR RIGHT** button again to highlight the time indicator area.
- 7** Press the **CURSOR RIGHT** or **CURSOR LEFT** button to move among the positions where the time is input.
- 8** Press the **CURSOR UP** or **CURSOR DOWN** button to select the digits for the time. Or press the **NUMBERED** buttons to enter the time you want the television to turn itself on.
- 9** Press the **CURSOR RIGHT** button to move to the AM or PM position.
- 10** Press the **CURSOR UP** or **DOWN** button to set AM or PM.

NOTE: The **ACTIVATE** Control (page 25) must be set to **ONCE** or **DAILY** for the **START TIME** Control to take effect.

- 11** Press the **STATUS/EXIT** button to remove the menu from the screen.

The diagram illustrates the steps for setting the TV's start time. It features a central image of a Philips remote control with callouts 1 through 11 pointing to specific buttons. To the right, five screenshots show the onscreen menu at different stages:

- Step 1:** The main menu with **FEATURES** highlighted.
- Step 2:** The **FEATURES** menu with **TIMER** highlighted.
- Step 3:** The **TIMER** menu with **TIME** highlighted.
- Step 4:** The **TIME** menu with **START TIME** highlighted.
- Step 5:** The **START TIME** input screen with the time **10:30AM** displayed.

HELPFUL HINT

Remember, be sure to press **0** first and then the hour number for single-digit entries.

The **ACTIVATE** Control must be set to **ONCE** or **DAILY** for the television to turn itself on at the specified time. See page 25 for more details about the **ACTIVATE** Control.

SETTING THE TV TO TURN ITSELF OFF USING THE STOP TIME CONTROL



The following steps will guide you in setting the TV to turn itself OFF at a specific time.

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left. **TIMER** will be highlighted.
- 4 With **TIMER** selected, press the **CURSOR RIGHT** button again to shift the display left.
- 5 Press the **CURSOR DOWN** button to highlight the **STOP TIME** control.
- 6 Press the **CURSOR RIGHT** button again to highlight the time indicator area.
- 7 Press the **CURSOR RIGHT** or **CURSOR LEFT** button to move among the positions where the time is input.
- 8 Press the **CURSOR UP** or **CURSOR DOWN** button to select the digits for the time. Or press the **NUMBERED** buttons to enter the time you want the television to turn itself off.
- 9 Press the **CURSOR RIGHT** button to move to the AM or PM position.
- 10 Press the **CURSOR UP** or **CURSOR DOWN** button to set AM or PM.

NOTE: The **ACTIVATE** Control (page 25) must be set to **ONCE** or **DAILY** for the **STOP TIME** Control to take effect.

- 11 Press the **STATUS/EXIT** button to remove the menu from the screen.

The diagram shows a Philips remote control with the following callouts:

- 1: MENU button
- 2: CURSOR DOWN button
- 3: CURSOR RIGHT button
- 4: CURSOR RIGHT button
- 5: CURSOR DOWN button
- 6: CURSOR RIGHT button
- 7: CURSOR RIGHT or CURSOR LEFT button
- 8: CURSOR UP or CURSOR DOWN button
- 9: CURSOR RIGHT button
- 10: CURSOR UP or CURSOR DOWN button
- 11: STATUS/EXIT button

The on-screen menu sequence is as follows:

- MAIN MENU: PICTURE, SOUND, **FEATURES**, INSTALL
- FEATURES: ACTIVE CTRL, AutoLock, CLOSED CAP, FORMAT, **TIMER**
- FEATURES TIMER: TIME, START TIME, STOP TIME, CHANNEL, ACTIVATE
- FEATURES TIMER: TIME, START TIME, **STOP TIME**, CHANNEL, ACTIVATE
- FEATURES TIMER: TIME, START TIME, STOP TIME, CHANNEL, ACTIVATE (with time input field highlighted)
- FEATURES TIMER: TIME, START TIME, STOP TIME, CHANNEL, ACTIVATE (with time input field showing 11:30AM)

HELPFUL HINT

Remember, be sure to press 0 first and then the hour number for single-digit entries.

The **ACTIVATE** Control must be set to **ONCE** or **DAILY** for the television to shut itself off at the specified time. See page 25 for more details about the **ACTIVATE** Control.



SETTING THE TV TO STARTUP ON A SPECIFIC CHANNEL

 
You can select a specific channel that the television will tune to when the timer turns the set ON. Follow these steps to select the channel.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TIMER** will be highlighted.
- 4** With **TIMER** selected, press the **CURSOR RIGHT** button again to shift the display left.
- 5** Press the **CURSOR DOWN** button to highlight the **CHANNEL** Control.
- 6** Press the **NUMBERED** buttons to enter the desired start-up channel. Or, press the **CURSOR RIGHT** or **CURSOR LEFT** button repeatedly to enter the start-up channel you want.
- 7** Press the **STATUS/EXIT** button to remove the menu from the screen.

NOTE: The **ACTIVATE** Control (page 25) must be set to **ONCE** or **DAILY** for this Channel Control to take effect.

HELPFUL HINT

The **ACTIVATE** Control must be set to **ONCE** or **DAILY** for the television to tune itself to a specific channel at the specified time. See page 25 for more details about the **ACTIVATE** Control.

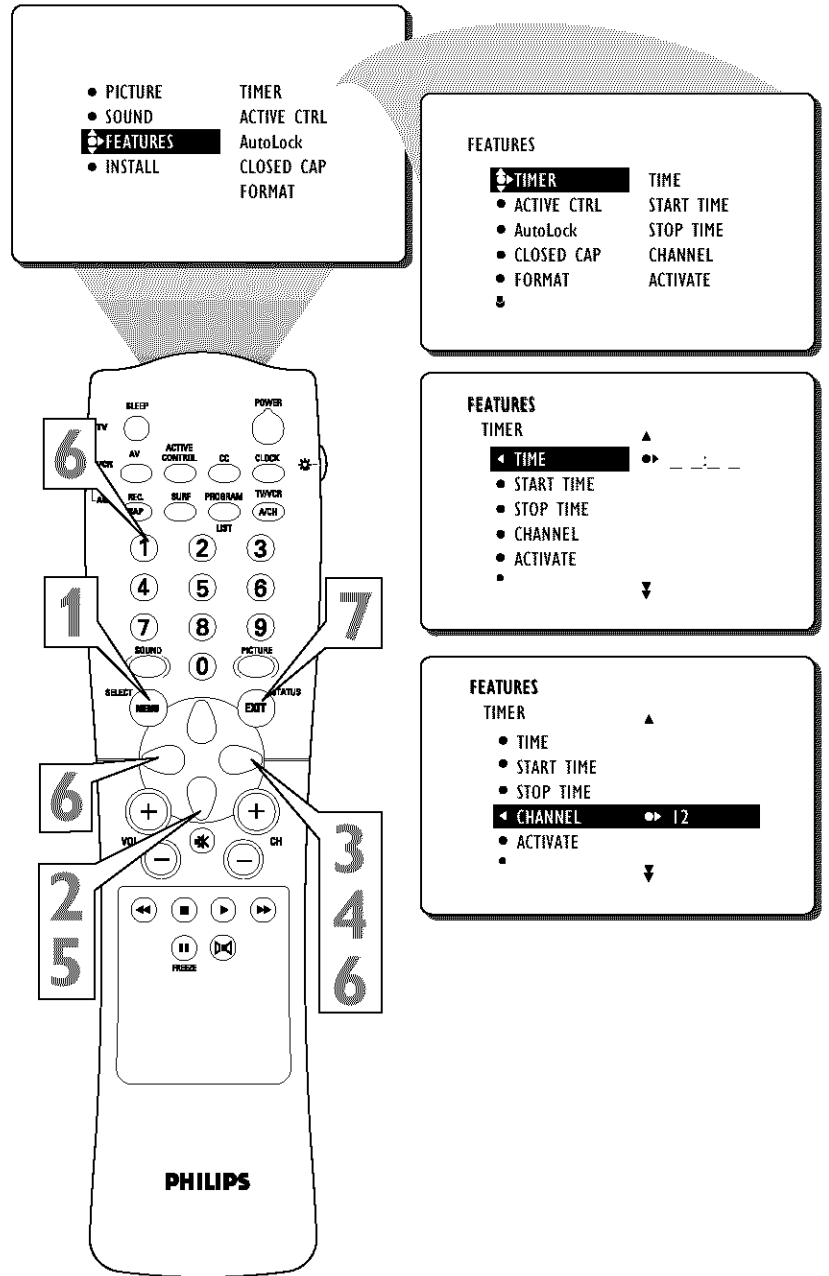

HOW TO ACTIVATE THE TIMER CONTROL USING THE ACTIVATE CONTROL



After you have set the Time, Start Time, Stop Time, and Start Channel, the timer must be set to come on **ONCE** or **DAILY**, or turned **OFF** through the **ACTIVATE** Control.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TIMER** will be highlighted.
- 4** With **TIMER** selected, press the **CURSOR RIGHT** button again to shift the display left.
- 5** Press the **CURSOR DOWN** button to highlight the **ACTIVATE** Control.
- 6** Press the **CURSOR RIGHT** or **CURSOR LEFT** button repeatedly to select **ONCE**, **DAILY** or **OFF**.
- 7** Press the **STATUS/EXIT** button to remove the menu from the screen.

- PICTURE
- SOUND
- **FEATURES**
- INSTALL

- TIMER
- ACTIVE CTRL
- AutoLock
- CLOSED CAP
- FORMAT

FEATURES

- **TIMER**
- ACTIVE CTRL
- AutoLock
- CLOSED CAP
- FORMAT
-

FEATURES

TIMER

- **TIME**
- START TIME
- STOP TIME
- CHANNEL
- ACTIVATE
-

FEATURES

TIMER

- TIME
- START TIME
- STOP TIME
- CHANNEL
- **ACTIVATE**
-

OR

◀ ACTIVATE ▶ ONCE

OR

◀ ACTIVATE ▶ DAILY

✓ CHECK IT OUT

With the **ACTIVATE** Control set to **ONCE**, the **START TIME**, **STOP TIME**, and **START CHANNEL** Controls will only be activated one time.

With the **ACTIVATE** Control set to **DAILY**, the **START TIME**, **STOP TIME**, and **START CHANNEL** Controls will be activated every day of the week until it is turned **OFF** or set to **ONCE**.

HELPFUL HINT

Remember, before setting the **TIMER** controls, the TV's clock must be set to the correct time manually (see page 21) or by using the **AutoChron™** feature described on page 4 of the *Quick Use and Installation Guide*.



 
HOW TO VIEW THE TIME USING THE DISPLAY CONTROL

After the TV's clock has been set, you can use your TV as a clock. The **TIMER DISPLAY** control allows you to permanently display the time in the upper right corner of the screen.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left. **TIMER** will be highlighted.
- 4** With **TIMER** selected, press the **CURSOR RIGHT** button again to shift the display left.
- 5** Press the **CURSOR DOWN** button to highlight the **DISPLAY** Control.
- 6** Press the **CURSOR RIGHT** or **CURSOR LEFT** button repeatedly to select **ON** or **OFF**.
- 7** Press the **STATUS/EXIT** button to remove the menu from the screen.

CHECK IT OUT

If the **TIME** has been set and the **DISPLAY** Control set to **ON**, the current time will appear in the upper right corner of the TV screen while the TV is powered on.

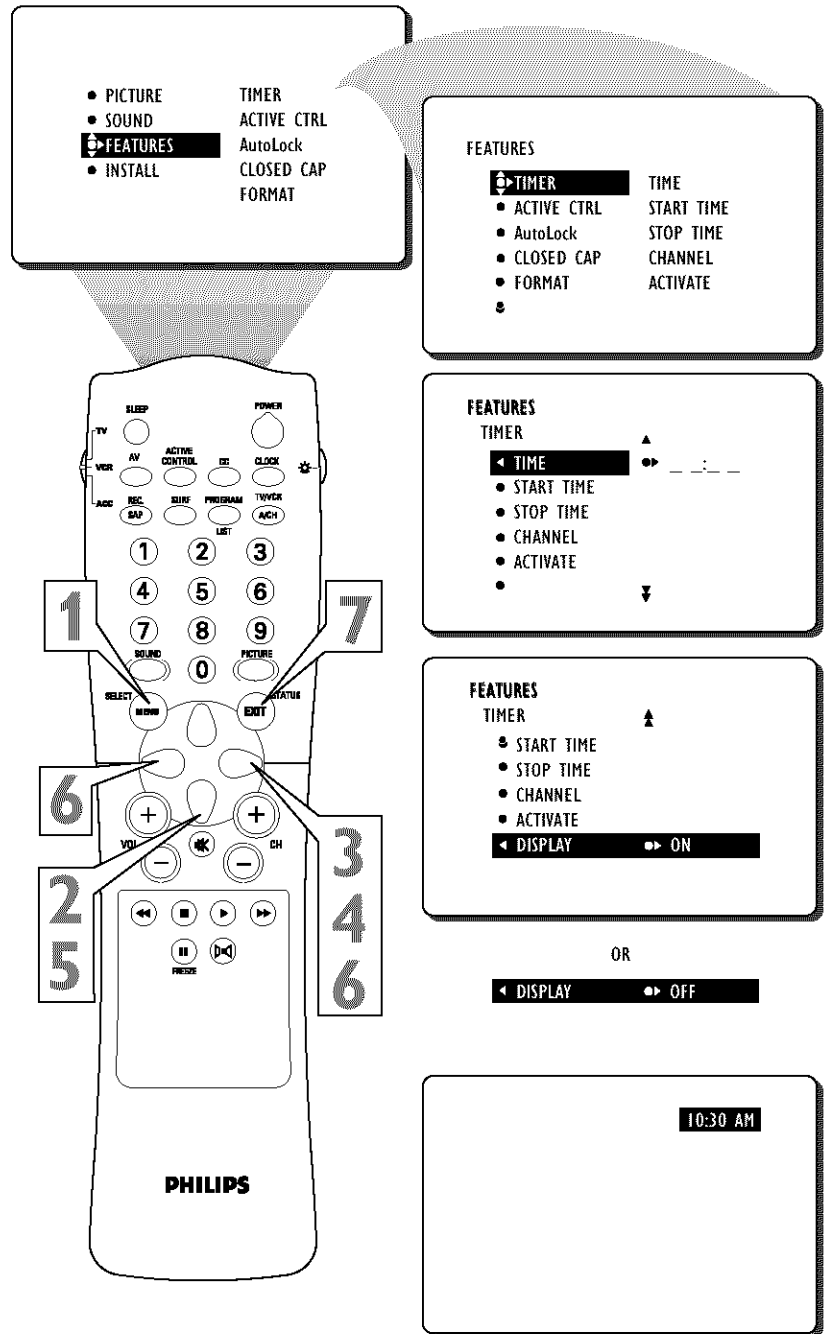

HOW TO USE THE ACTIVE CONTROL

 


The Active Control monitors and adjusts incoming video signals to help provide the best picture quality.

When you choose to turn the Active Control ON, the picture sharpness and noise reduction are controlled automatically. Active Control adjusts these picture settings continuously and automatically.

NOTE: Active Control is not available for signals connected to the AV4 inputs.

- 1** Press the **MENU** button on the remote control to show the on-screen menu.
 - 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
 - 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
 - 4** Press the **CURSOR DOWN** button repeatedly until the **ACTIVE CTRL** (control) is highlighted.
 - 5** Press the **CURSOR RIGHT** or **CURSOR LEFT** button repeatedly to toggle the **ACTIVE CONTROL ON** or **OFF**.
 - 6** Press the **STATUS/EXIT** button to remove the menu from the screen.
- 7** You can also press the **ACTIVE CONTROL** button on the remote control to toggle the **ACTIVE CONTROL ON** or **OFF**.

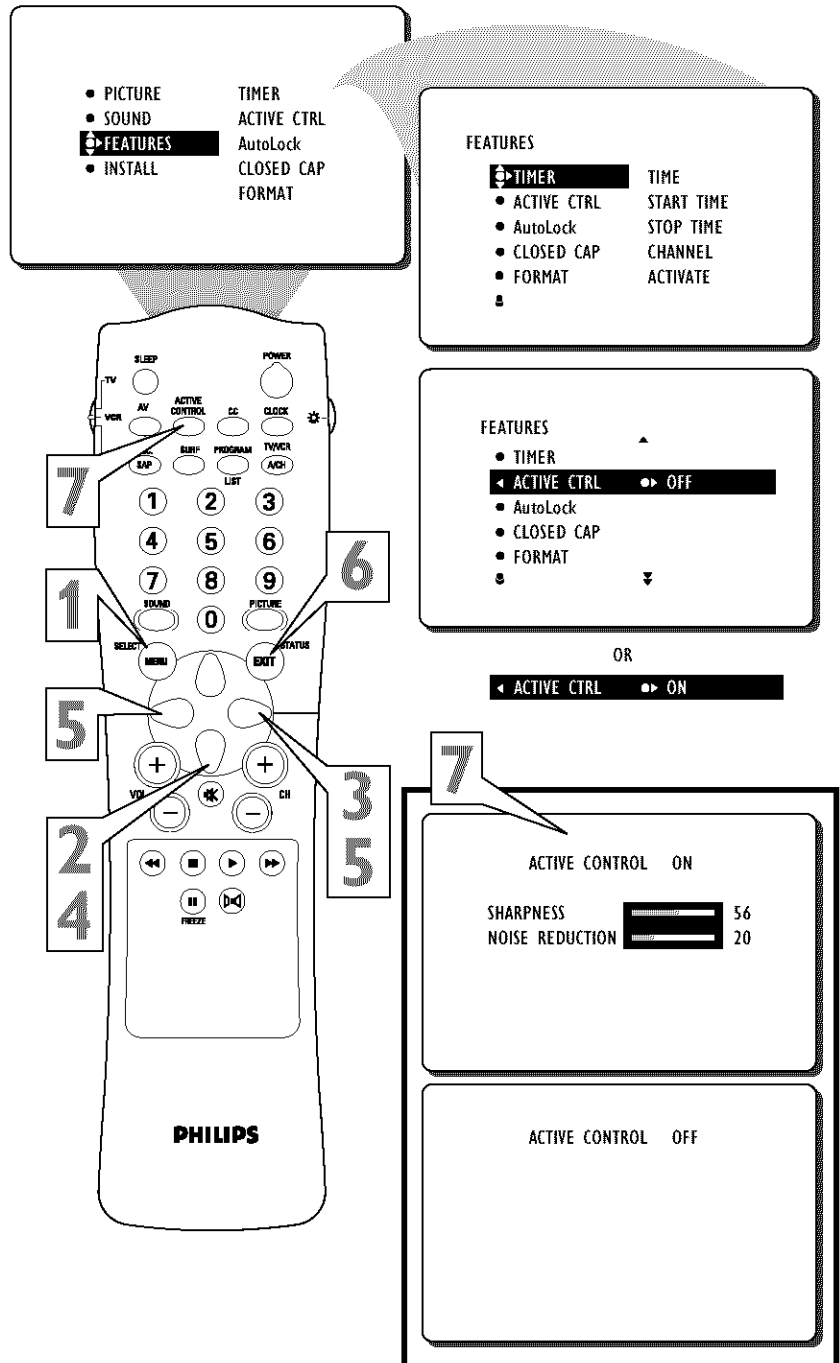

CHECK IT OUT

Toggle the ACTIVE CONTROL ON with the remote control and a screen display will appear showing the Active Control at work. You will see the sharpness and noise reduction settings changing to provide the best possible picture quality.



UNDERSTANDING THE AUTOLOCK™ FEATURE

The AutoLock™ feature receives and processes data sent by broadcasters or other program providers that contain program content advisories. When programmed by the viewer, a TV with AutoLock™ can respond to the content advisories and block program content that may be found objectionable (such as offensive language, violence, sexual situations, etc.). This is a great feature to censor the type of programming children may watch.

In the AutoLock™ section, you'll learn how to block channels and programming that is not rated, is unrated, or has no rating. You will also find out how to turn these blocking features ON or OFF. Following are brief explanations of some terms and ratings related to the AutoLock™ feature.

 
 
AutoLock™ offers various Blocking Options from which to choose:

BLOCKING: The BLOCKING control is what can be thought of as the "master switch" for AutoLock™. This control affects the settings you have chosen for blocking programs according to movie ratings or TV ratings, for blocking programs that have no rating, or are unrated. When the BLOCKING control is OFF, the blocking or censoring of programs is disabled. When the BLOCKING control is ON, blocking will occur according to the settings you have chosen.

NO RATING: ALL programming with no content advisory data can be blocked if NO RATING is set to ON.

Programming that has No Rating is not encoded with any rating information from the MPAA or the Parental Guidelines. Any programming could fall into this category.

You also can block individual channels or block programming based on ratings of the MPAA and TV broadcasters. (See a description of the ratings on this page.)

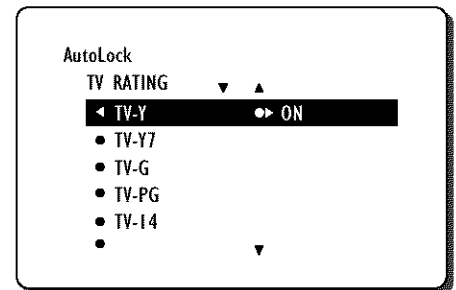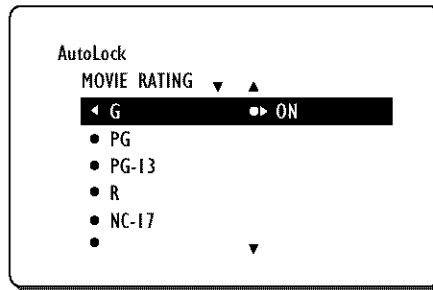

MOVIE RATINGS (MOTION PICTURE ASSOCIATION OF AMERICA)

G: General Audience - All ages admitted. Most parents would find this programming suitable for all ages. This type of programming contains little or no violence, no strong language, and little or no sexual dialogue or sexual situations.

PG: Parental Guidance Suggested - This programming contains material that parents may find unsuitable for younger children. It may contain one or more of the following: Moderate violence, some sexual situations, infrequent coarse language, or some suggestive dialogue.

PG-13: Parents Strongly Cautioned - This programming contains material that parents may find unsuitable for children under the age of 13. It contains one or more of the following: violence, sexual situations, coarse language, or suggestive dialogue.

R: Restricted - This programming is specifically designed for adults. Anyone under the age of 17 should view this programming only with an accompanying parent or adult guardian. It contains one or more of the following: intense violence; intense sexual situations; strong, coarse language; or intensely suggestive dialogue.

NC-17: No one under the age of 17 will be admitted. - This type of programming should be viewed by adults only. It contains graphic violence, explicit sex, or crude, indecent language.

X: Adults Only - This type of programming contains one or more of the following: very graphic violence, very graphic and explicit or indecent sexual acts, or very coarse and intensely suggestive language.

TV PARENTAL GUIDELINES (TV BROADCASTERS)

TV-Y: (All children -- This program is designed to be appropriate for all children.) Designed for a very young audience, including children ages 2-6. This type of programming is not expected to frighten younger children.

TV-Y7: (Directed to Older Children -- This program is designed for children ages 7 and above.) It may be more appropriate for children who have acquired the development skills needed to distinguish between make-believe and reality. This programming may include mild fantasy and comic violence (FV).

TV-G: (General Audience -- Most parents would find this program suitable for all ages.) This type of programming contains little or no violence, no strong language, and little or no sexual dialogue or sexual situations.

TV-PG: (Parental Guidance Suggested -- This program contains material that parents may find unsuitable for younger children.) This type of programming contains one or more of the following: Moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D).

TV-14: (Parents Strongly Cautioned - This program contains some material that many parents would find unsuitable for children under 14 years of age.) This type of programming contains one or more of the following: intense violence (V) intense sexual situations (S) strong, coarse language (L) or intensely suggestive dialogue (D).

TV-MA: (Mature Audience Only -- This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.) This type of programming contains one or more of the following: graphic violence (V) explicit sexual situations (S) or crude, indecent language (L).



 
AutoLock™ allows parents to block out or “censor” any channels they think children should not watch. A channel blocked by the AutoLock™ control cannot be viewed until a correct access code is used to unlock the channel for viewing. First, let’s set your AutoLock access code.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button once to highlight the AutoLock control.
- 5** Press the **CURSOR RIGHT** button to highlight **ACCESS CODE**.
- 6** Press **0,7,1,1** on the remote control. **INCORRECT** will appear on the screen.
- 7** Press **0,7,1,1** on the remote control again. **ENTER NEW CODE** will appear on the screen.
- 8** Enter a new four-digit code using the number buttons. **CONFIRM CODE** will appear on the screen.
- 9** Enter your new four-digit code again. **CORRECT** will flash on the screen briefly and the highlight bar goes back to AutoLock.
- 10** Press the **STATUS/EXIT** button to remove the menu from the screen.

HELPFUL HINT

Remember that 0711 is the default AutoLock™ code. If your access code has been changed by someone other than you (a child, for example) or you have forgotten the code, you can always get in by inputting the default code.

NOTE TO PARENTS: It isn’t possible for your child to unblock a channel without knowing your access code or changing it to a new one. If your code has been changed without your knowledge, then you will become aware that blocked channels may have been viewed.


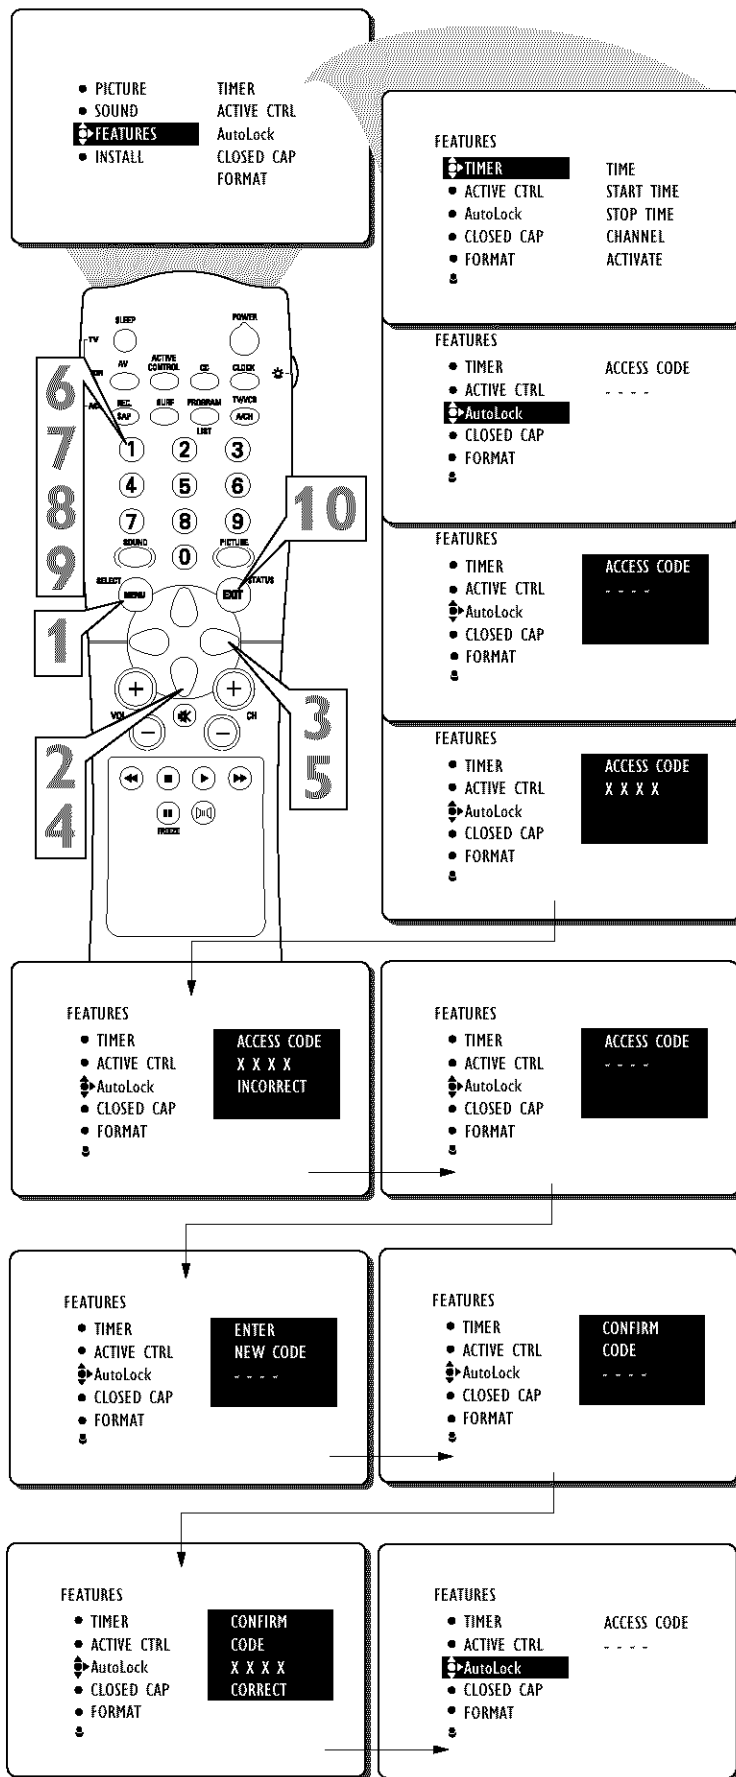




HOW TO BLOCK CHANNEL USING AUTOLOCK™

After your personal access code has been set (see the previous page), you are ready to select the channels or inputs you want to block out or censor.

  
- 1** Press the **MENU** button on the remote control to show the onscreen menu.
 - 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
 - 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
 - 4** Press the **CURSOR DOWN** button once to highlight the **AutoLock™** control.
 - 5** Press the **CURSOR RIGHT** button again to highlight **ACCESS CODE**.
 - 6** Enter your four-digit **ACCESS CODE**. *CORRECT* will flash very briefly and the menu will move to the left with **BLOCK CHANNEL** highlighted.
 - 7** Press the **CURSOR RIGHT** button to highlight the TV's available channels.
 - 8** Press the **CURSOR UP** or **CURSOR DOWN** button to highlight the channel you want to block.
 - 9** Press the **CURSOR RIGHT** button to block the channel. A padlock image appears to the right of the channel number.
- Repeat steps 7 and 8 for any channels you want to block from viewing.
- 10** Press the **STATUS/EXIT** button to remove the menu from the screen.

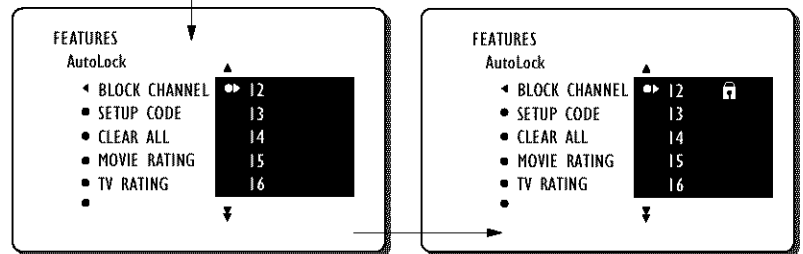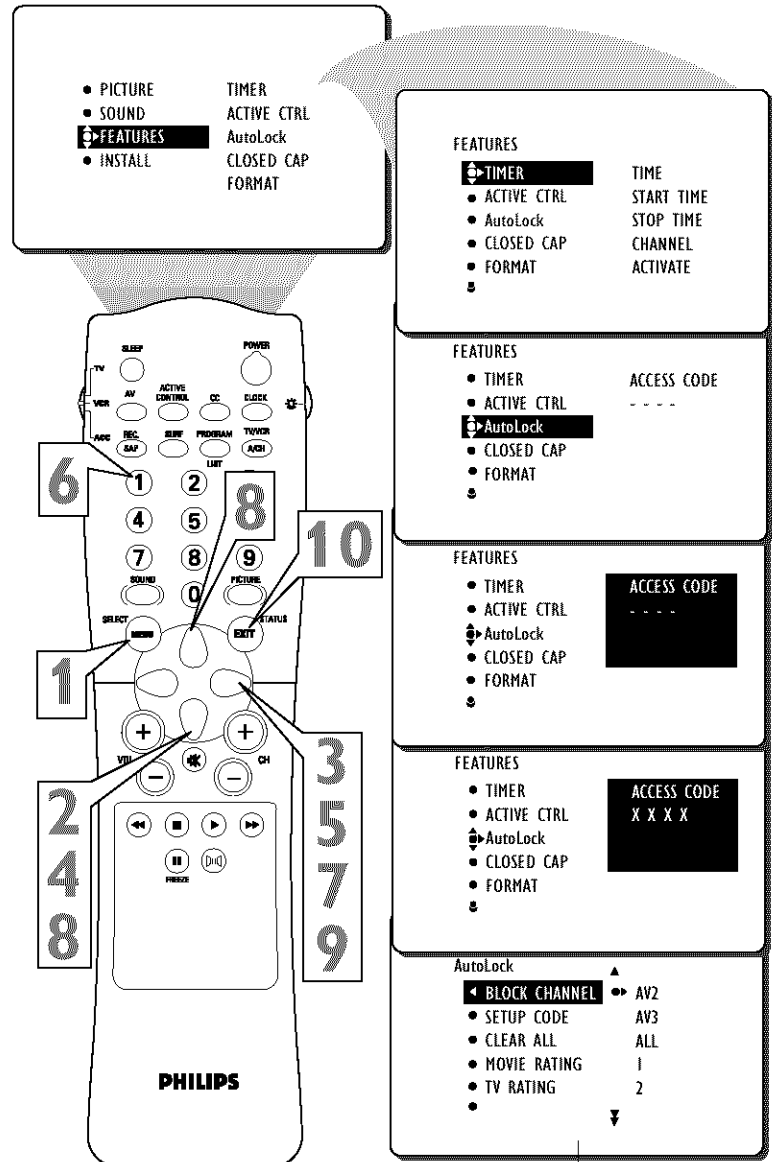

HELPFUL HINT

Remember that 0711 is the default AutoLock™ code. If your access code has been changed by someone other than you (a child, for example) or you have forgotten the code, you can always get in by inputting the default code.

 NOTE: You also can block out the use of the A/V external inputs on the rear of the TV. This stops the viewing of VCR, DVD, and other sources that can be shown through the A/V input jacks. Select AV1, CVI, AV2, SIDE (AV3), or AV4; and then select **BLOCK**.

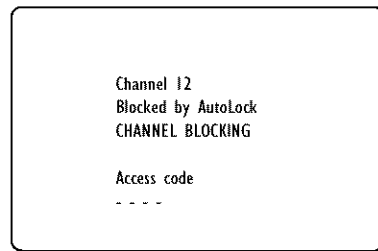


If a channel is blocked by the **BLOCK CHANNEL** option, the TV will display the screen shown to the right. To watch the channel, enter your access code or change the **BLOCK CHANNEL** option back to off.



Various onscreen messages will appear when someone tries to view blocked programming. The message is determined by how the current programming is blocked. You may view the blocked programming and turn OFF the AutoLock™ feature by using the Clear All control or by entering your access code.

 - 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button once to highlight the **AutoLock™** control.
- 5** Press the **CURSOR RIGHT** button again to highlight **ACCESS CODE**.
- 6** Enter your four-digit **ACCESS CODE** and the menu will move to the left with **BLOCK CHANNEL** highlighted.
- 7** Press the **CURSOR DOWN** button twice to highlight **CLEAR ALL**.
- 8** Press the **CURSOR RIGHT** button twice. The **CLEAR ALL** option will display the word **CLEARED**. All blocked channels and programming are now viewable.
- 9** Press the **STATUS/EXIT** button to remove the menu from the screen.

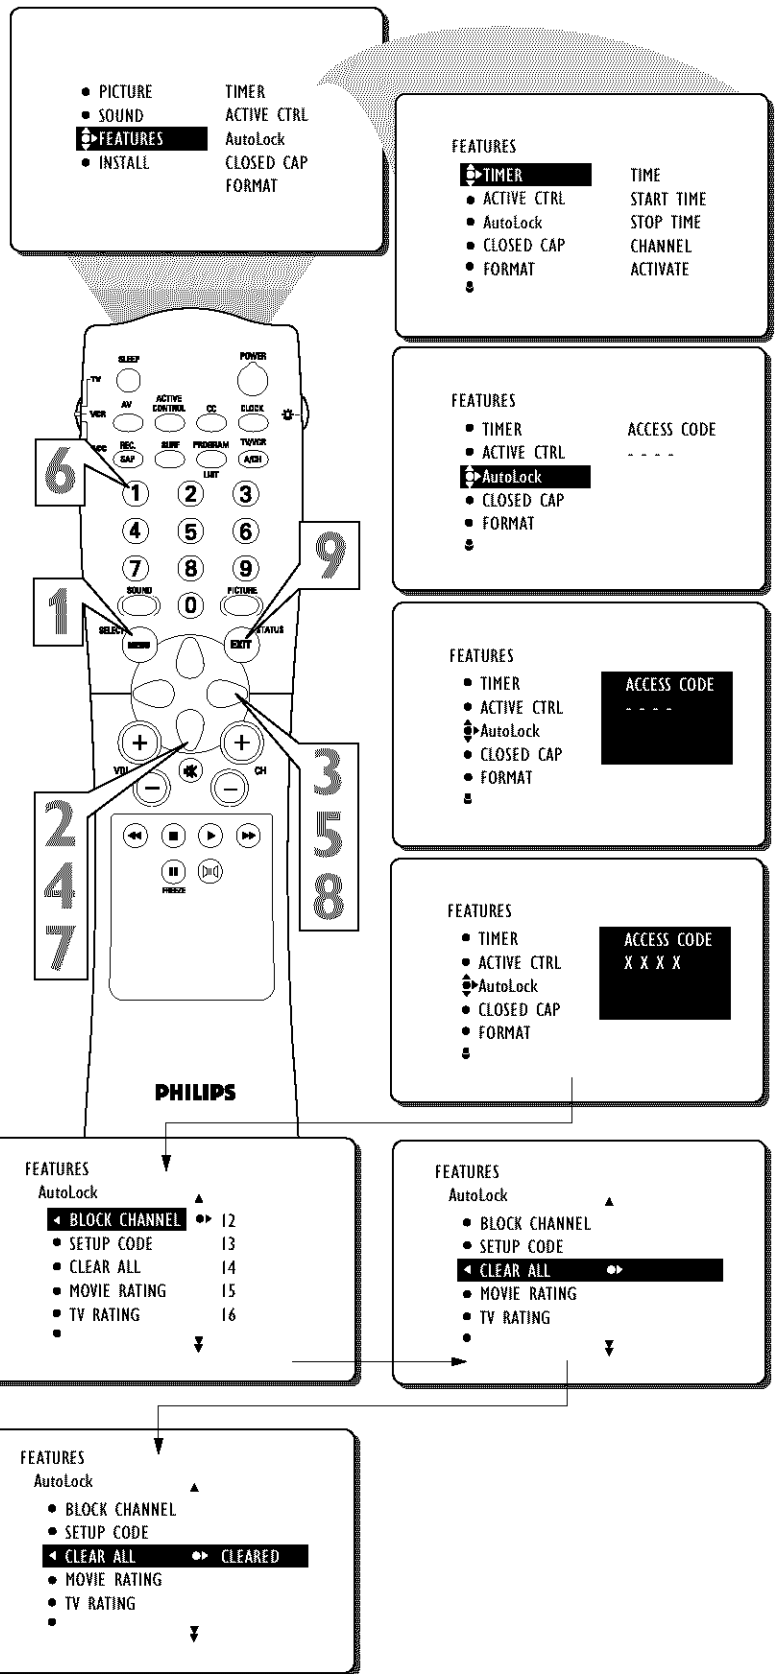

HELPFUL HINT

If you tune to a specific channel that has been blocked by **BLOCK CHANNEL** or any of the AutoLock™ **RATING** options, simply enter your four-digit access code to view the channel.

 
NOTE: this will unblock ALL channels until the TV is shut OFF. When powered back ON, all previously blocked channels will be blocked again.



HOW TO BLOCK PROGRAMMING BASED ON MOVIE RATINGS

After your personal access code has been set, you can select specific movie ratings that you want to censor.

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4 Press the **CURSOR DOWN** button once to highlight the **AutoLock™** control.
- 5 Press the **CURSOR RIGHT** button again to highlight **ACCESS CODE**.
- 6 Enter your four-digit **ACCESS CODE**. *CORRECT* will flash very briefly and the menu will move to the left with **BLOCK CHANNEL** highlighted.
- 7 Press the **CURSOR DOWN** button repeatedly until **MOVIE RATING** is highlighted.
- 8 Press the **CURSOR RIGHT** button and the Rating menu shifts to the left with **G** highlighted.
- 9 Press the **CURSOR UP** or **CURSOR DOWN** button to highlight each rating you want.
- 10 Press the **CURSOR RIGHT** button to turn the rating **ON** or **OFF**. Turning the rating **ON** will block programs with that rating from being seen.
- 11 Press the **STATUS/EXIT** button to remove the menu from the screen.

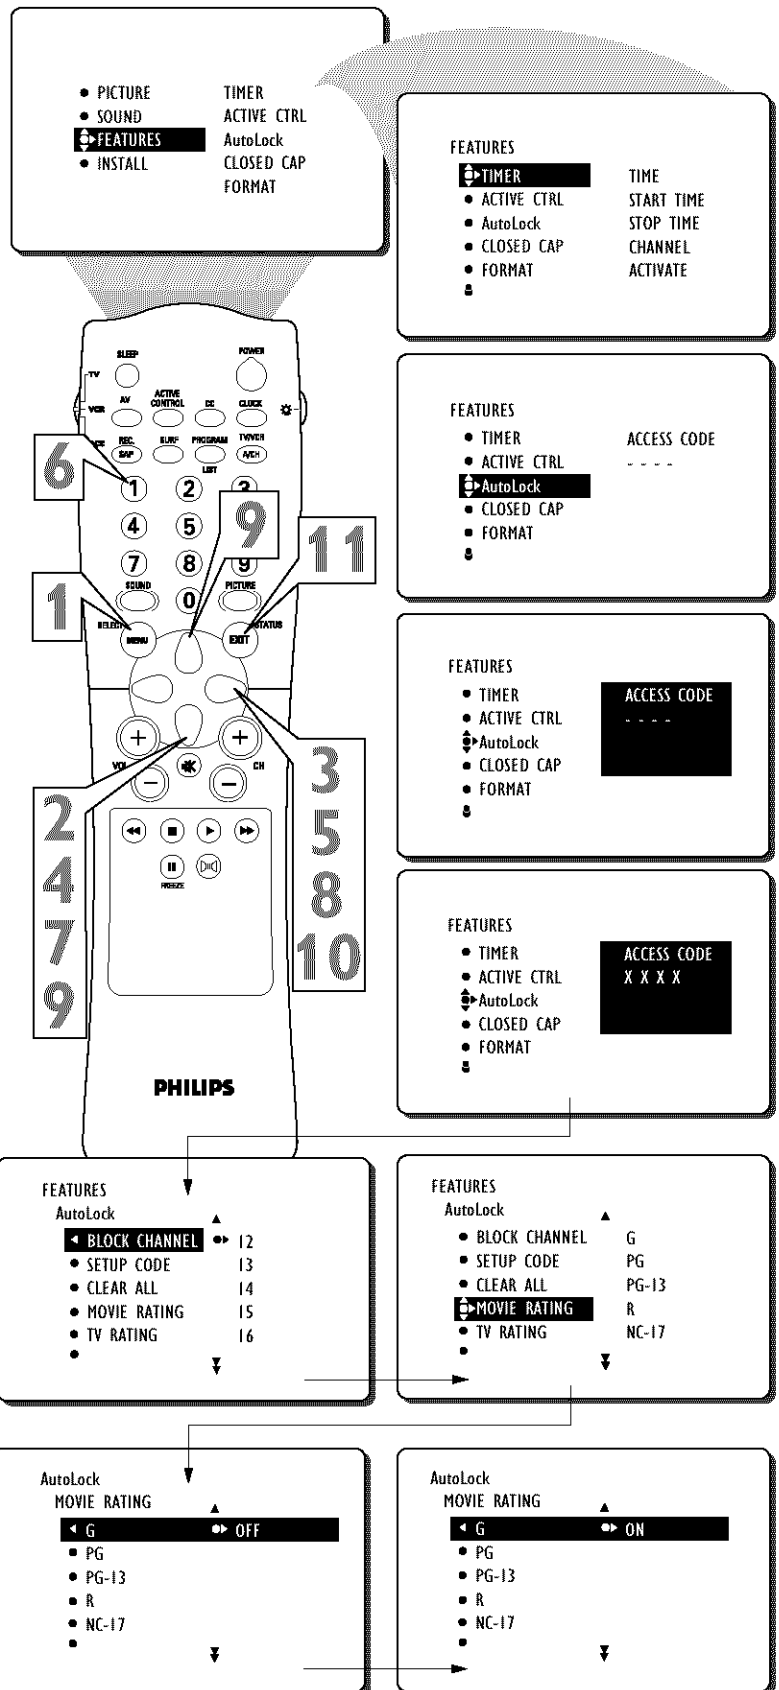

HELPFUL HINT

When a rating is turned ON, all higher ratings also will be turned on automatically. For example, if the *R* rating is turned on, the *NC-17* and *X* ratings also will be turned on.

All Movie Ratings can be turned ON or OFF.

 
Refer to page 28 for Movie Rating definitions.



OTHER AUTOLOCK BLOCKING OPTIONS - BLOCKING CONTROL

The **BLOCKING** control is what can be thought of as the “master switch” for AutoLock™. This control affects the settings you have chosen for blocking programs according to movie ratings or TV ratings, or for blocking programs that have no rating or are unrated. When the **BLOCKING** control is OFF, the blocking or censoring of programs is disabled. When the **BLOCKING** control is ON, blocking will occur according to the settings you have chosen. Follow these steps to toggle **BLOCKING** OFF or ON.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button once to highlight the AutoLock control.
- 5** Press the **CURSOR RIGHT** button again to highlight **ACCESS CODE**.
- 6** Enter your four-digit **ACCESS CODE** and the menu will move to the left with **BLOCK CHANNEL** highlighted.
- 7** Press the **CURSOR DOWN** button repeatedly until **BLOCK OPTIONS** is highlighted.
- 8** Press the **CURSOR RIGHT** button to enter the **BLOCK OPTIONS** menu. **BLOCKING** will be highlighted.
- 9** Press the **CURSOR RIGHT** or **LEFT** button to toggle **BLOCKING** ON or OFF.
- 10** Press the **STATUS/EXIT** button to remove the menu from the screen.

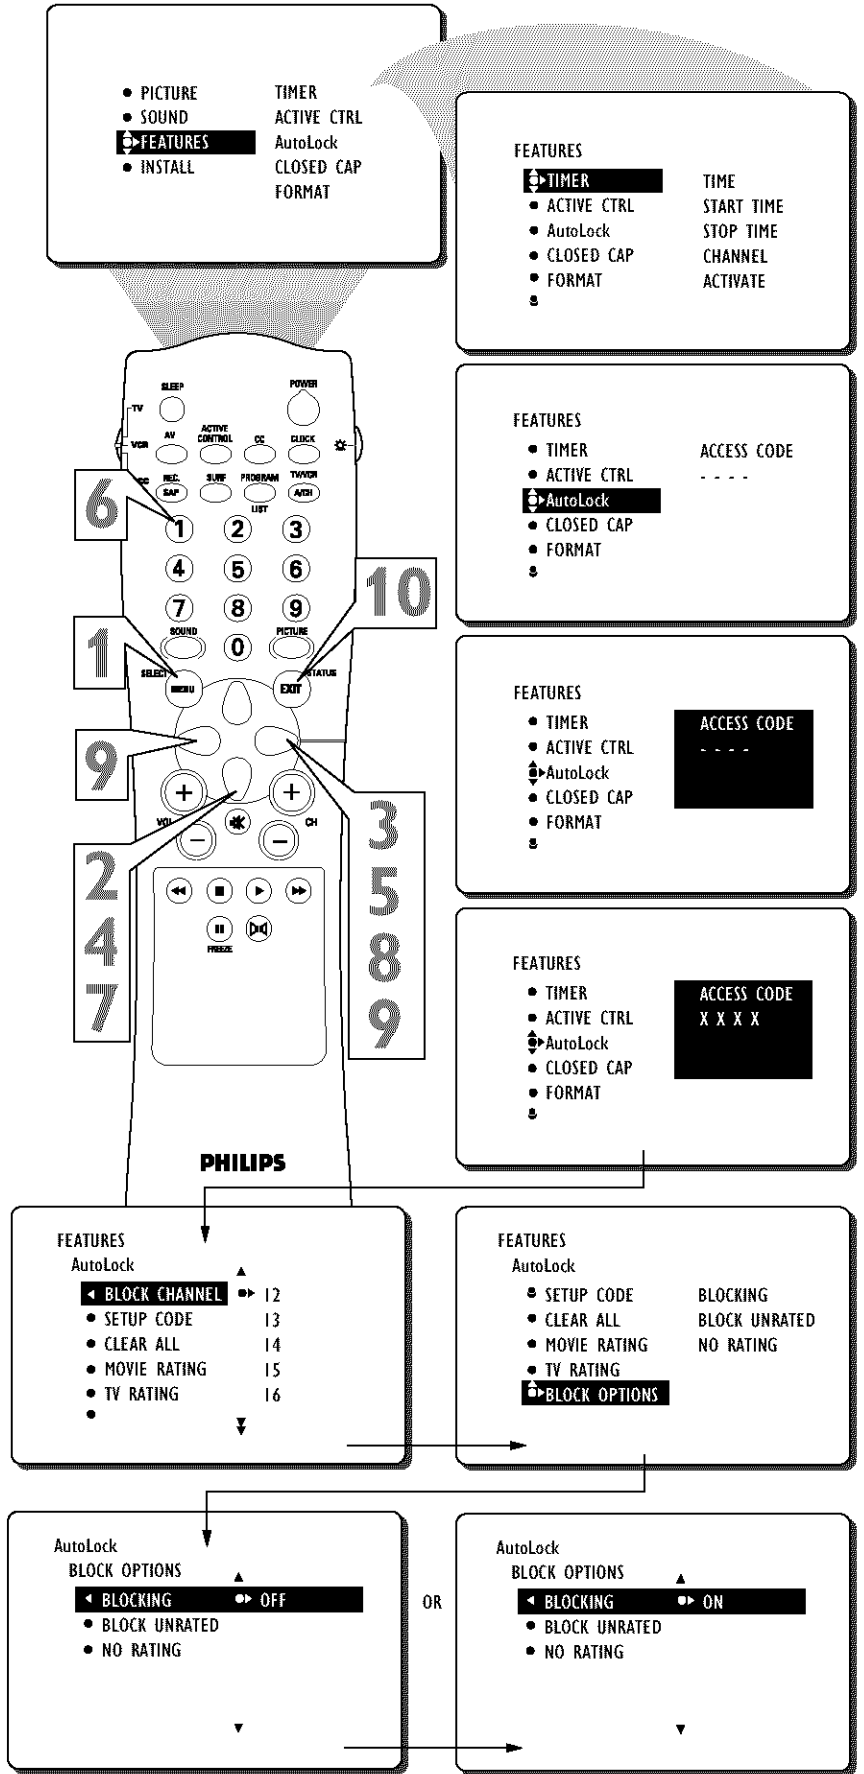

HELPFUL HINT

 
Remember, when the **BLOCKING** control is OFF, the blocking or censoring of programs is disabled. When the **BLOCKING** control is ON, blocking will occur according to the settings you have chosen.

OTHER AUTOLOCK BLOCKING OPTIONS - UNRATED AND NO RATING



Some programming is not encoded with content advisory data by the MPAA (Motion Picture Association of America) or the television broadcasters (see the explanation on page 28). To block such programming, follow these steps.

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4 Press the **CURSOR DOWN** button once to highlight the **AutoLock** control.
- 5 Press the **CURSOR RIGHT** button again to highlight **ACCESS CODE**.
- 6 Enter your four-digit **ACCESS CODE** and the menu will move to the left with **BLOCK CHANNEL** highlighted.
- 7 Press the **CURSOR DOWN** button repeatedly until **BLOCK OPTIONS** is highlighted.
- 8 Press the **CURSOR RIGHT** button to enter the **BLOCK OPTIONS** menu. **BLOCKING** will be highlighted.
- 9 Press the **CURSOR DOWN** button to highlight either the **BLOCK UNRATED** or **NO RATING** option.
- 10 Press the **CURSOR RIGHT** or **LEFT** button to toggle the control **ON** or **OFF**.
- 11 Press the **STATUS/EXIT** button to remove the menu from the screen.

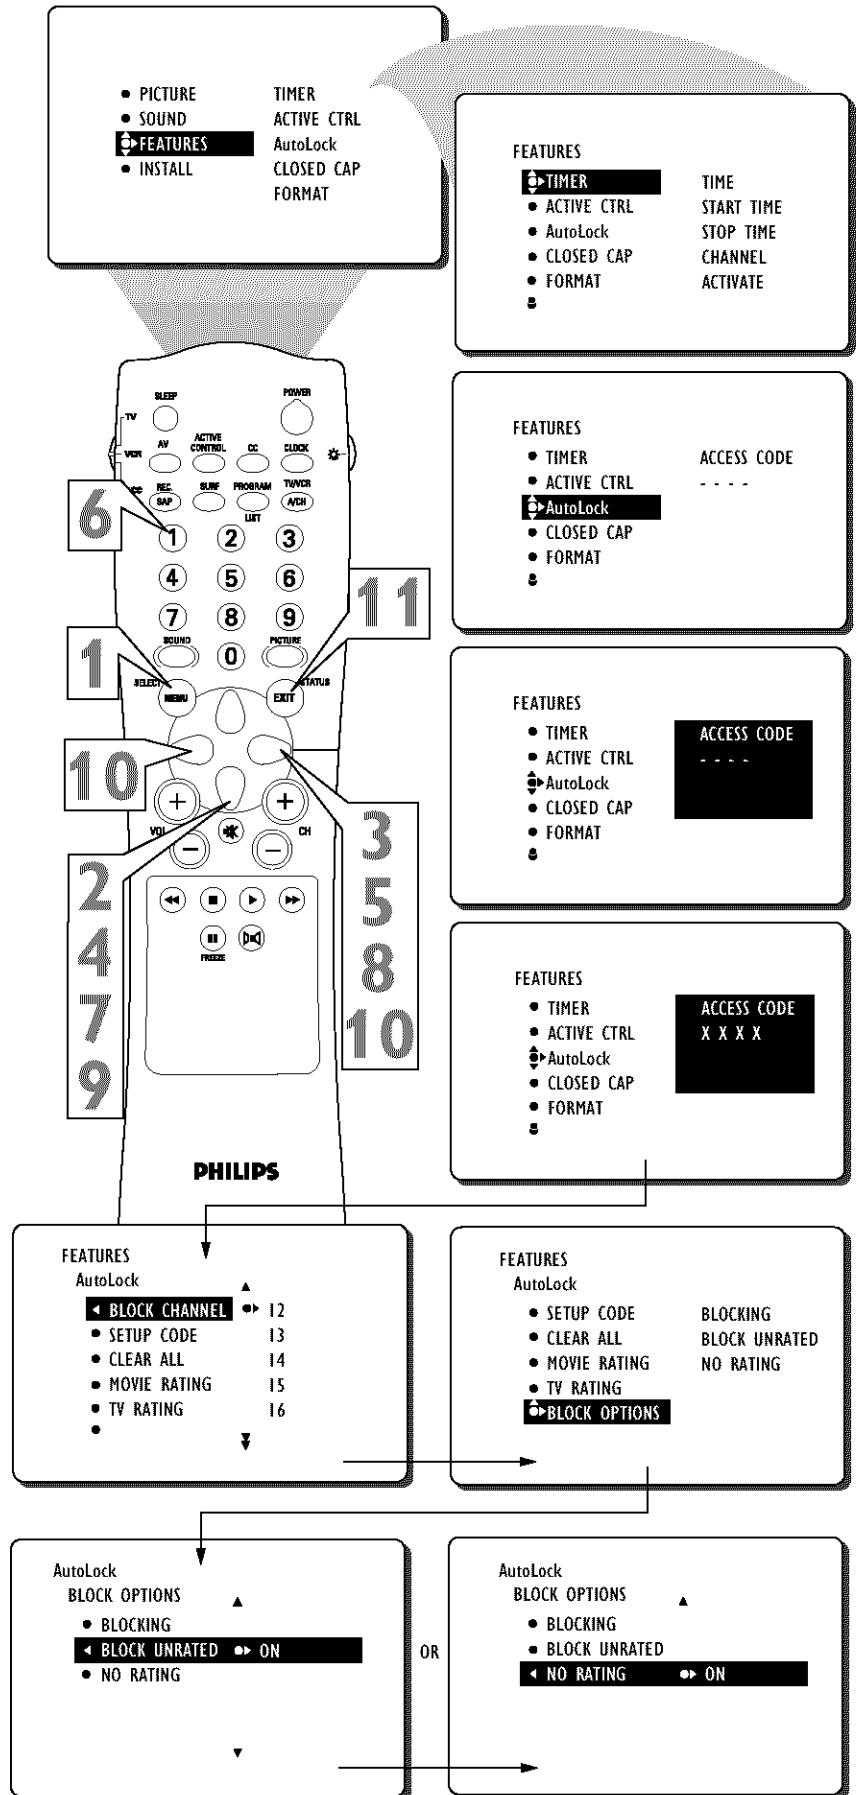



HOW TO REVIEW THE AUTOLOCK™ STATUS SCREEN

To remind you which ratings you have blocked and which Block Options you have selected, a review screen is available to review your AutoLock™ settings. To access this screen follow the steps below.

 
 
1 Press the STATUS/EXIT button on your remote control TWICE. Your AutoLock™ settings will appear on the screen.

NOTE: If you have blocked specific subratings, such as V for Violence in the TV-PG category, these blocked subratings will not appear in the review. The subratings however, are still blocked according to your selections.


2 After a few seconds, the settings will leave the screen automatically, or you can press the STATUS/EXIT button a third time to remove them from the screen.

HELPFUL HINT


The AutoLock™ Status screen will only appear if the BLOCKING option is set to ON. For details, see page 34.

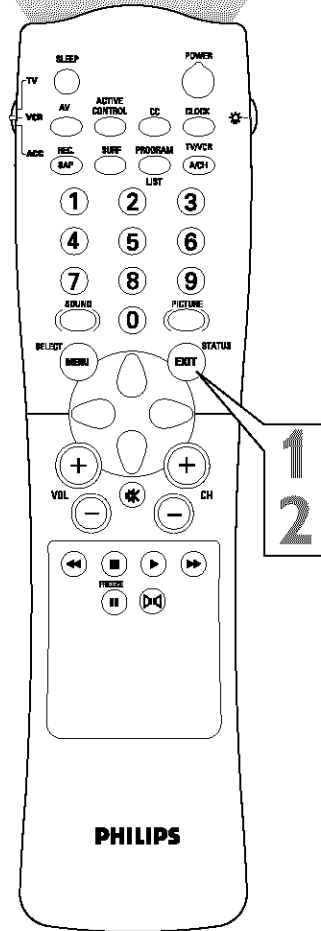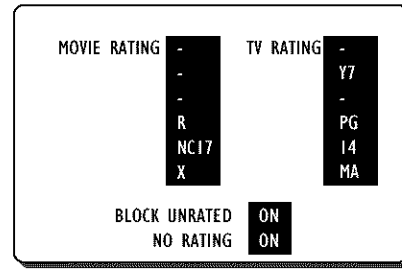

 This display will appear after the step 1 above is completed if the AutoLock™ BLOCKING option is set to ON.

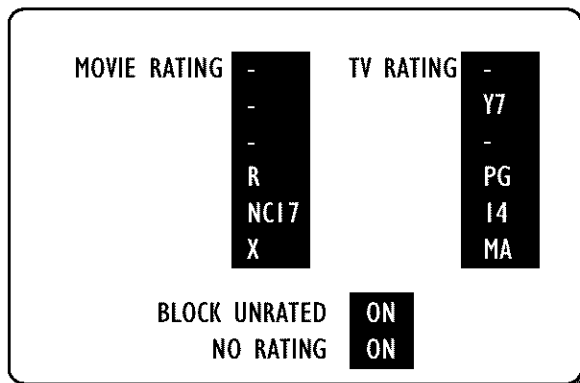

 This display will appear after the step 1 above is completed if the AutoLock™ BLOCKING option is set to OFF.

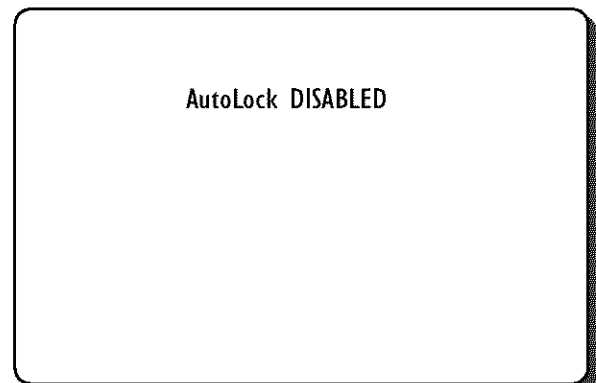


HOW TO USE THE CLOSED CAPTIONING CONTROL



Closed Captioning (CC) allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, this feature uses onscreen "text boxes" to show dialogue and conversations while the TV program is in progress.

NOTE: Not all TV programs and product commercials are broadcast with Closed Captioning (CC). Nor are all Closed Captioning Modes (CAPTION 1-4 or TEXT 1-4) necessarily being used by broadcast stations during the transmission of a program offering Closed Captioning. Refer to your area's TV program listings for the stations and times of shows being broadcast with Closed Captioning.

 
- 1** Press the **MENU** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button repeatedly until the **CLOSED CAP** control is highlighted.
- 5** Press the **CURSOR RIGHT** button again. The menu will shift to the left and **CAPTION MODE** will be highlighted.
- 6** Press the **CURSOR RIGHT** button to highlight **CAPTION MODES**.
- 7** Press the **CURSOR UP** or **CURSOR DOWN** button to select a **CAPTION MODE**: CC1, CC2, CC3, CC4, CC MUTE, TXT1, TXT2, TXT3, or TXT4. CC DISPLAY turns text OFF or ON if the TV station broadcasting on the channel is making **CLOSED CAPTIONING** available. With **CC DISPLAY** highlighted, press the **CURSOR RIGHT** button to toggle Closed Captioning ON or OFF.
- 8** Press the **STATUS/EXIT** button to remove the menu from the screen.

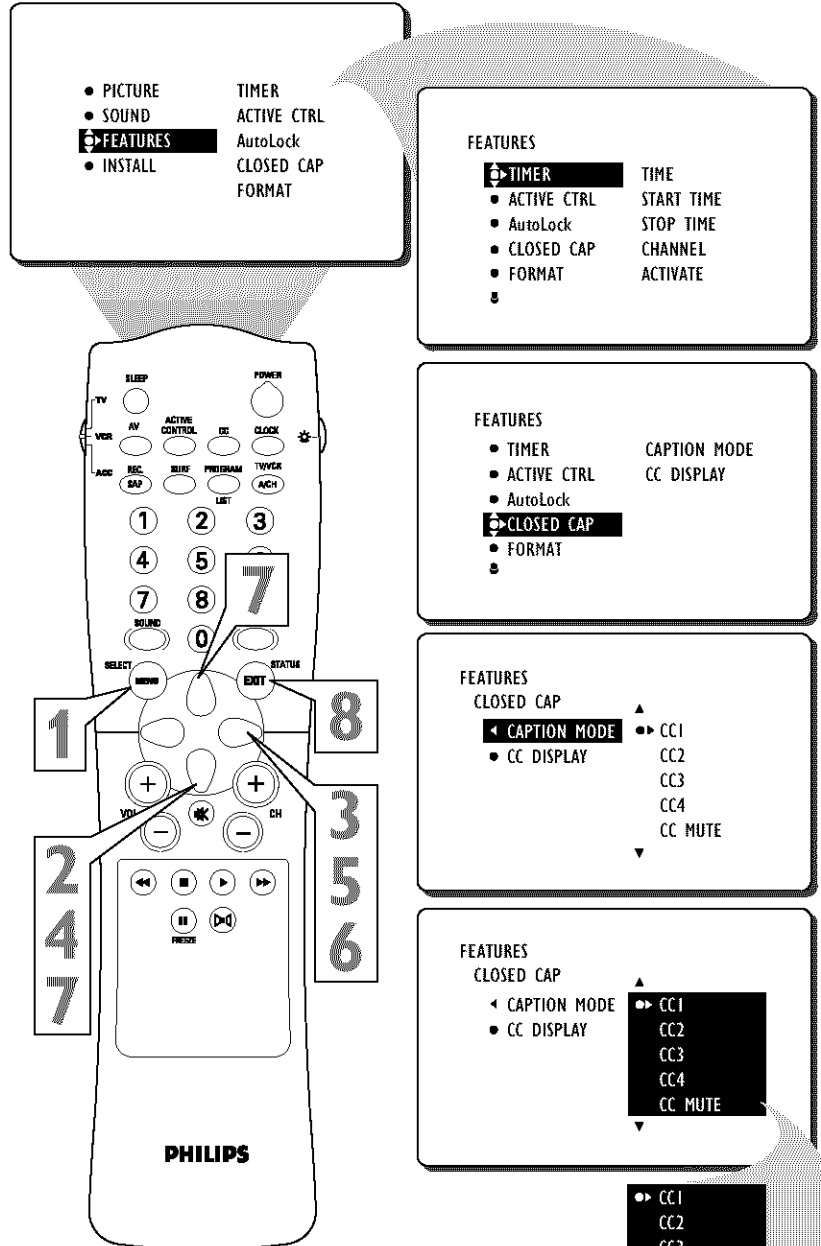

CAPTION Mode Example Display



 TEXT Mode Example Display -
The TV screen will be blocked from viewing.

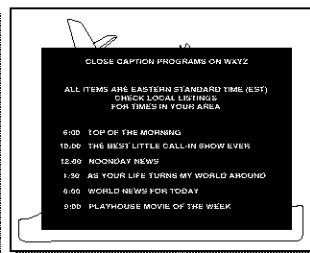



HOW TO USE THE SCREEN FORMAT CONTROL

You can change the screen format size to match the type of program you're watching. Select the normal 4:3 aspect ratio or any of the zoom or wide screen aspect ratios.

- 1 Press the **MENU** button on the remote control to show the on-screen menu.
- 2 Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3 Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4 Press the **CURSOR DOWN** button repeatedly until the **FORMAT** control is highlighted.
- 5 Press the **CURSOR RIGHT** button repeatedly to toggle among the six screen format sizes – **AUTO**, **4:3**, **ZOOM 14:9**, **ZOOM 16:9**, **SUBTITLE ZOOM**, **SUPER WIDE** or **WIDE SCREEN**.
- 6 Press the **STATUS/EXIT** button to remove the menu from the screen.

- PICTURE
- SOUND
- **FEATURES**
- INSTALL

- TIMER
- ACTIVE CTRL
- AutoLock
- CLOSED CAP
- FORMAT

FEATURES

- **TIMER**
- ACTIVE CTRL
- AutoLock
- CLOSED CAP
- FORMAT
-

- TIME
- START TIME
- STOP TIME
- CHANNEL
- ACTIVATE

FEATURES

- TIMER
- ACTIVE CTRL
- AutoLock
- CLOSED CAP
- **FORMAT**

OR

◀ FORMAT ▶ 4:3

OR

◀ FORMAT ▶ ZOOM 14:9

OR

◀ FORMAT ▶ ZOOM 16:9

OR

◀ FORMAT ▶ SUBTITLE ZOOM

OR

◀ FORMAT ▶ SUPERWIDE

OR

◀ FORMAT ▶ WIDE SCREEN

PHILIPS

HELPFUL HINT

 
When the onscreen menu is not displayed, pressing the **CURSOR RIGHT** or **LEFT** buttons will toggle the screen **FORMAT** options.

The **FORMAT** control is not available for use with the AV 4 Inputs (AV4 Channel) if 1080i signal is detected.


IMPORTANT NOTE:

Some DVD Discs are encoded with as much as 30% more video information to give the viewer the best possible picture quality. With the DVD Player in the 16:9 picture format, the playback of this type of disc (containing extra video information), can produce a number of small white lines in the upper portion of the black letterbox area. With some of these discs, this situation is unavoidable and it does not require a service call.


Use the **CURSOR UP** or **DOWN** buttons to move (pan) the picture up or down in short movements when needed. This will work in all formats except 4:3, and **WIDE SCREEN**.

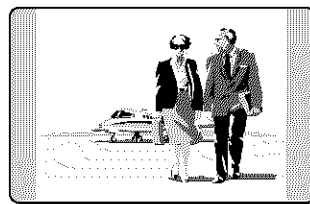


◀ FORMAT ▶ 4:3

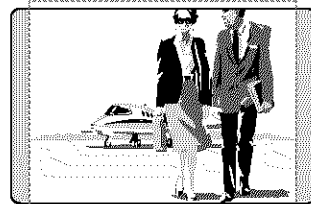 


◀ FORMAT ▶ ZOOM 14:9

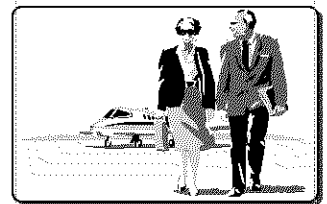 


◀ FORMAT ▶ ZOOM 16:9

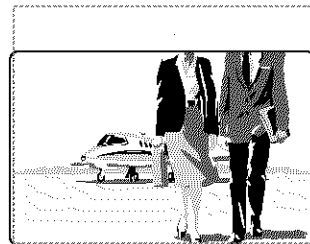 

◀ FORMAT ▶ SUBTITLE ZOOM

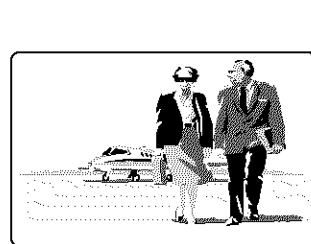 

◀ FORMAT ▶ SUPERWIDE

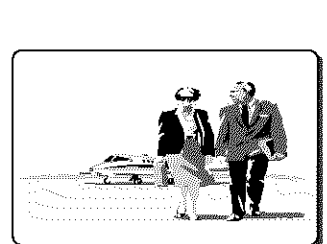 


◀ FORMAT ▶ WIDE SCREEN

HOW TO USE THE ROTATION CONTROL



In rare cases the video supplied to the TV screen might show slightly tilted one way or another. The Tilt Adjust control will allow you to correct the problem by adjusting the screen in a clockwise or counterclockwise direction.

 - 1** Press the **MENU** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR DOWN** button until **FEATURES** is highlighted.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button repeatedly until the **ROTATION** control is highlighted.
- 5** Press the **CURSOR RIGHT** or **LEFT** button to rotate the picture on the screen clockwise or counter clockwise. Please note that the amount of rotation will be very minimal.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.


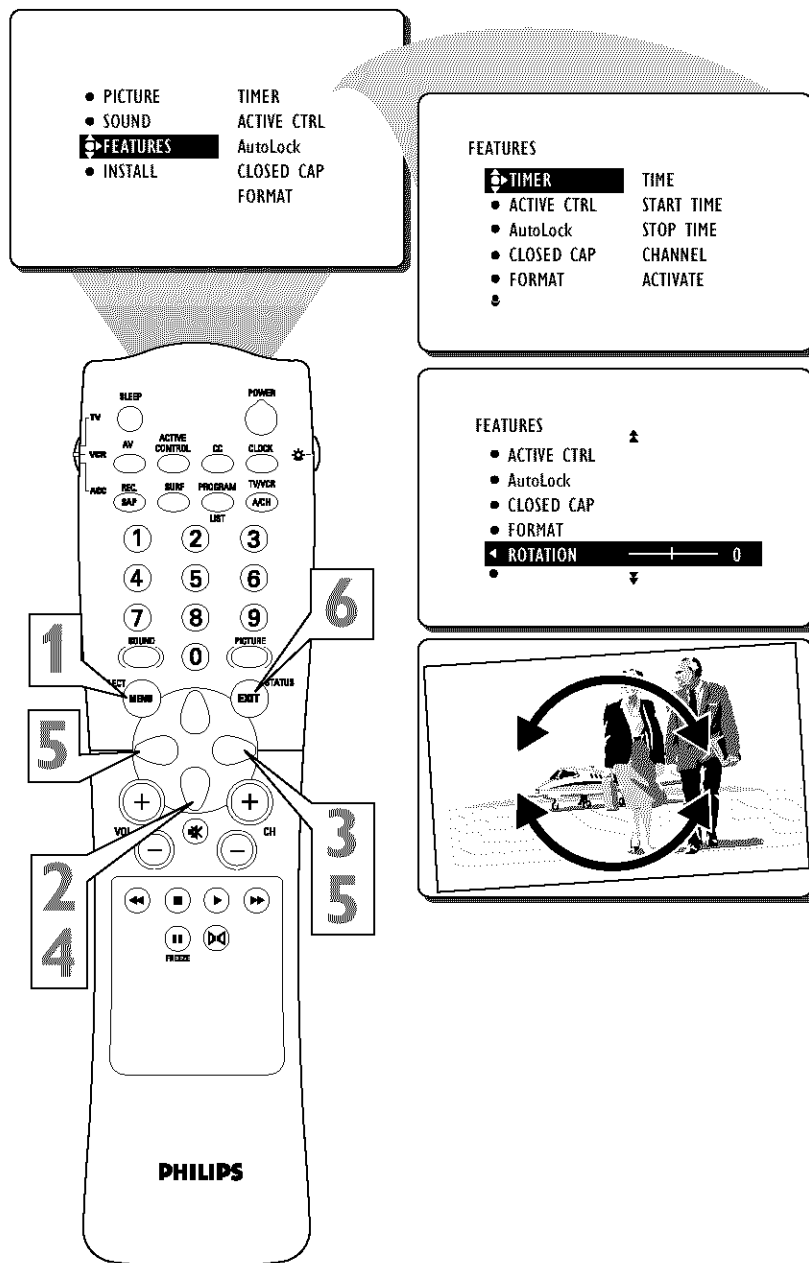





HOW TO SET THE BLUE MUTE CONTROL

Normally, the television would display a “snowy” looking screen with a lot of static sounds when the signal is lost. The Blue Mute control will automatically set the screen to a pleasant blue background when it detects no signal available if turned on.

  - 1** Press the **MENU/SELECT** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR DOWN** button twice to highlight **FEATURES**.
- 3** Press the **CURSOR RIGHT** button and the menu will shift to the left.
- 4** Press the **CURSOR DOWN** button repeatedly until the **BLUE MUTE** control is highlighted.
- 5** Press the **CURSOR RIGHT** or **LEFT** button to toggle the control ON or OFF.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.

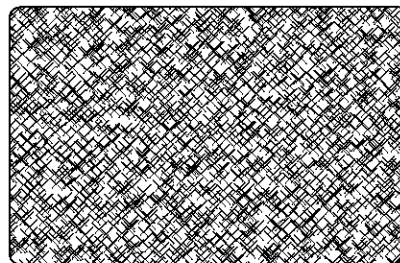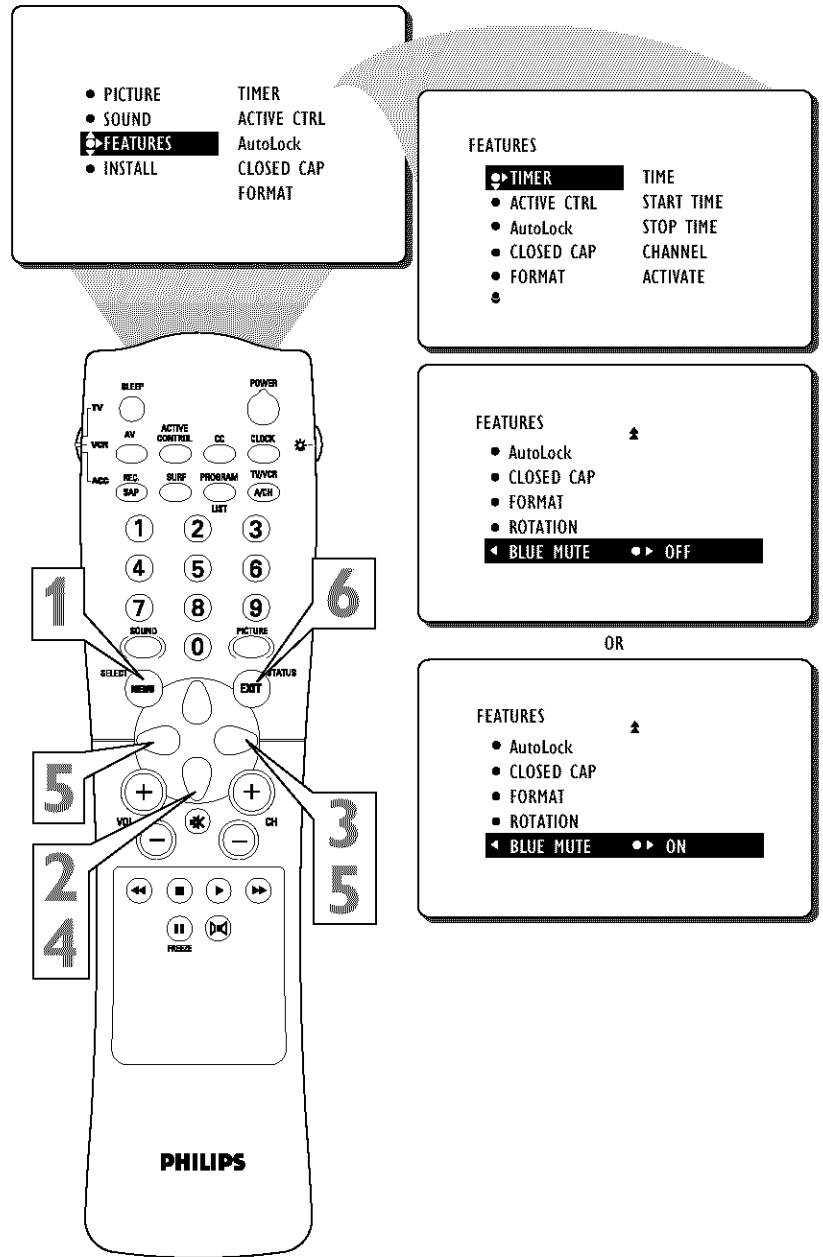

BLUE MUTE OFF
“Snowy” Picture

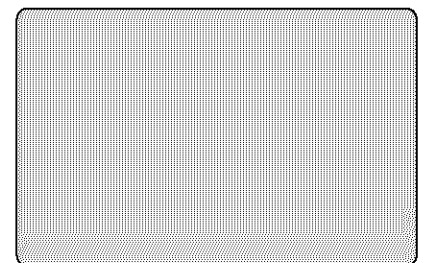 

BLUE MUTE ON
Pleasant Blue Screen

HOW TO SET THE SLEEP TIMER CONTROL



Have you ever fallen asleep in front of the TV, only to have it wake you up at two in the morning with a test pattern sound screeching in your ears? Well, your TV can enable you to avoid that discomfort by automatically turning itself off. With the Sleep Timer feature, you can set a timer to automatically switch the TV OFF after a period of time you choose (15-minute increments up to 60 minutes, then 30-minute increments up to 90 minutes, then 60-minute increments up to 240 minutes).

1 Press the **SLEEP** button on the remote control. The **SLEEP** timer onscreen display will appear in the upper part of the screen.

 
2 Within five seconds, press the **SLEEP** button repeatedly to pick the amount of time (15-minute increments up to 60 minutes, then 30-minute increments up to 90 minutes, then 60-minute increments up to 240 minutes) before the TV will turn itself off.

An onscreen countdown will appear during the last minute before the TV shuts itself off.

HELPFUL HINT

To see how many minutes remain before the TV shuts itself off, press the **STATUS/EXIT** button.

A Sleep Timer setting can be cancelled by pressing any button during the last minute of the operation.

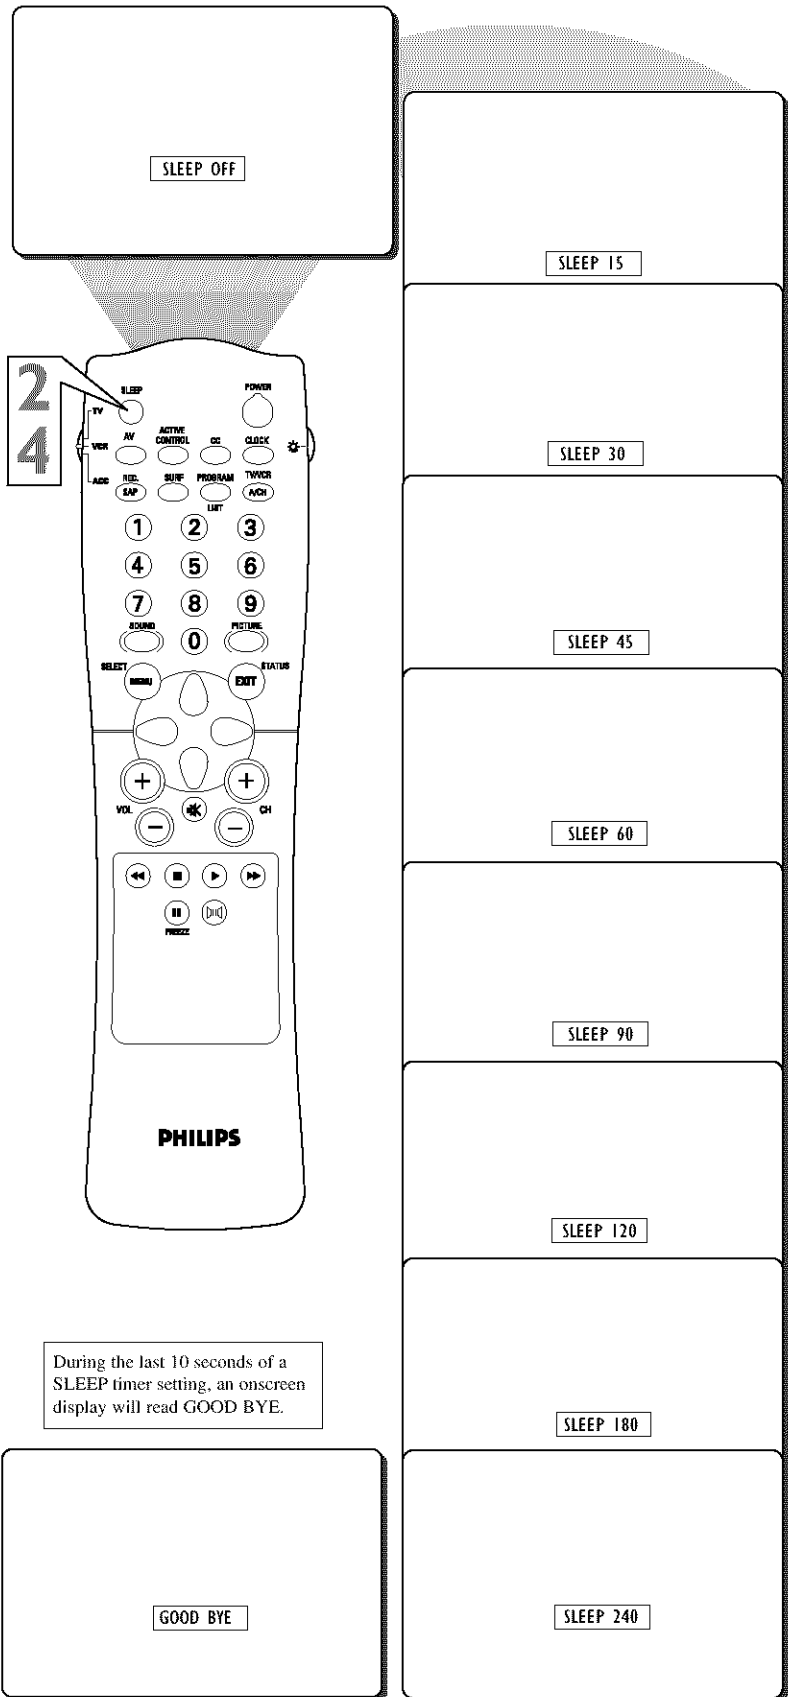



HOW TO USE THE FREEZE CONTROL

 
Have you ever wished you could freeze the picture on the television broadcast to write down a special telephone number or to capture a needed address? Your television will allow you to do just that with the press of just one button on the remote control.

1 With a signal on the television screen, simply **press the FREEZE button** on the remote control to stop the picture at any given moment.

The screen will read **"FREEZE ON"** momentarily and the picture frozen on the screen.

2 Press the **FREEZE button** on the remote control again to resume normal viewing.

The screen will read **"FREEZE OFF"** momentarily while the television displays a normal moving picture again.

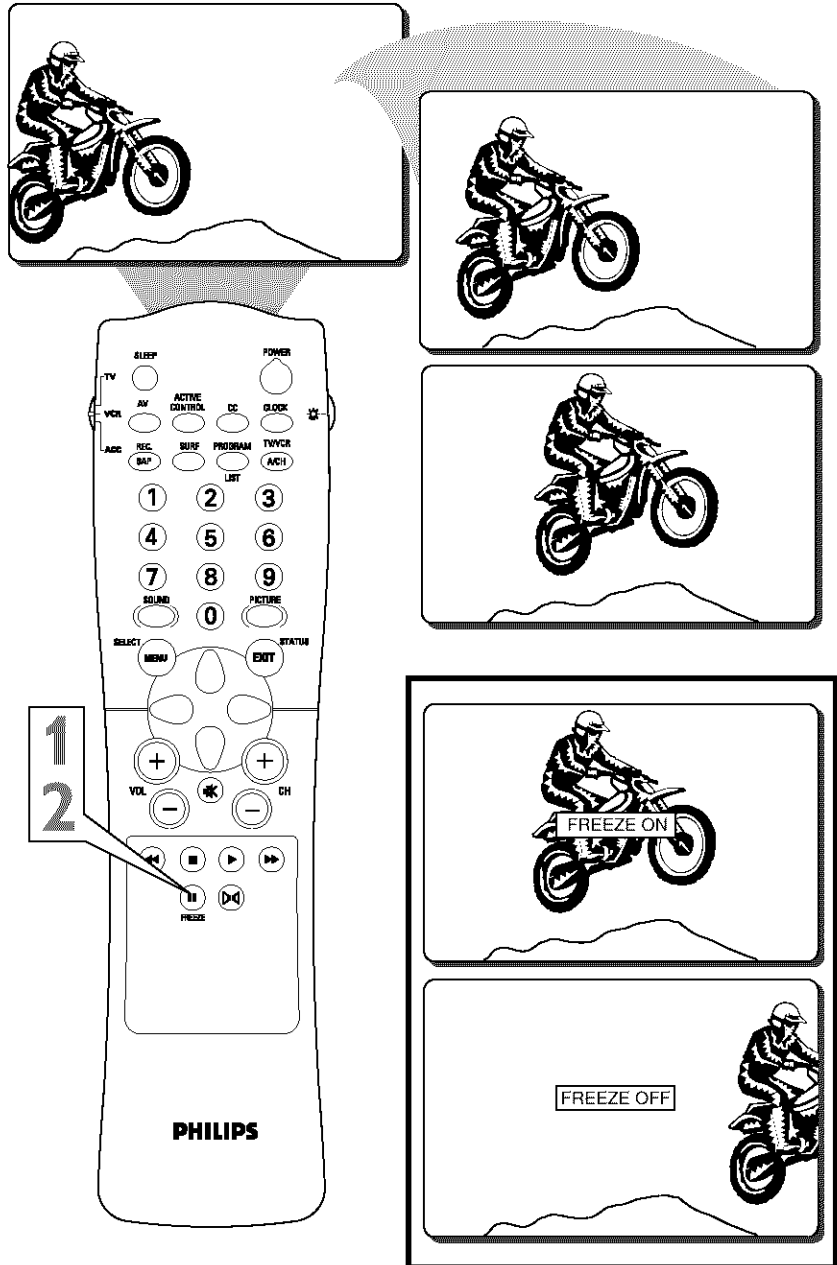

HELPFUL HINT

After freezing a picture on the screen, when the FREEZE control is turned OFF, the normal signal programming will be shown at it's present time. The signal that was being shown while the picture was frozen will not be viewable.

If the FREEZE button is pressed when the AV4 Inputs (AV4 Channel) is tuned, the screen will read "FREEZE NOT AVAIL."

 


Whether you're watching a movie or a video game, your TV has automatic video control settings that will match with your current program source or content. AutoPicture™ quickly resets your TV's video controls for a number of different types of programs and viewing conditions that you may have in your home. The Movies, Sports, Weak Signal, and Multimedia AutoPicture™ controls have been preset at the factory to automatically adjust the TV's brightness, color, picture, sharpness, tint, and color temperature levels. The Personal AutoPicture™ settings are the ones that you made through the PICTURE options within the onscreen menu

1 Press the PICTURE button on the remote control. The current AutoPicture™ setting will appear in the middle of the screen.

2 Press the PICTURE button repeatedly to select either PERSONAL, MOVIES, SPORTS, WEAK SIGNAL, or MULTIMEDIA picture settings.

NOTE: The PERSONAL setting and the PICTURE options within the onscreen menu are the same. This is the only option in AutoPicture™ that can be changed. To adjust these settings, use the PICTURE options within the onscreen menu. All other settings are set up at the factory during production and cannot be adjusted.

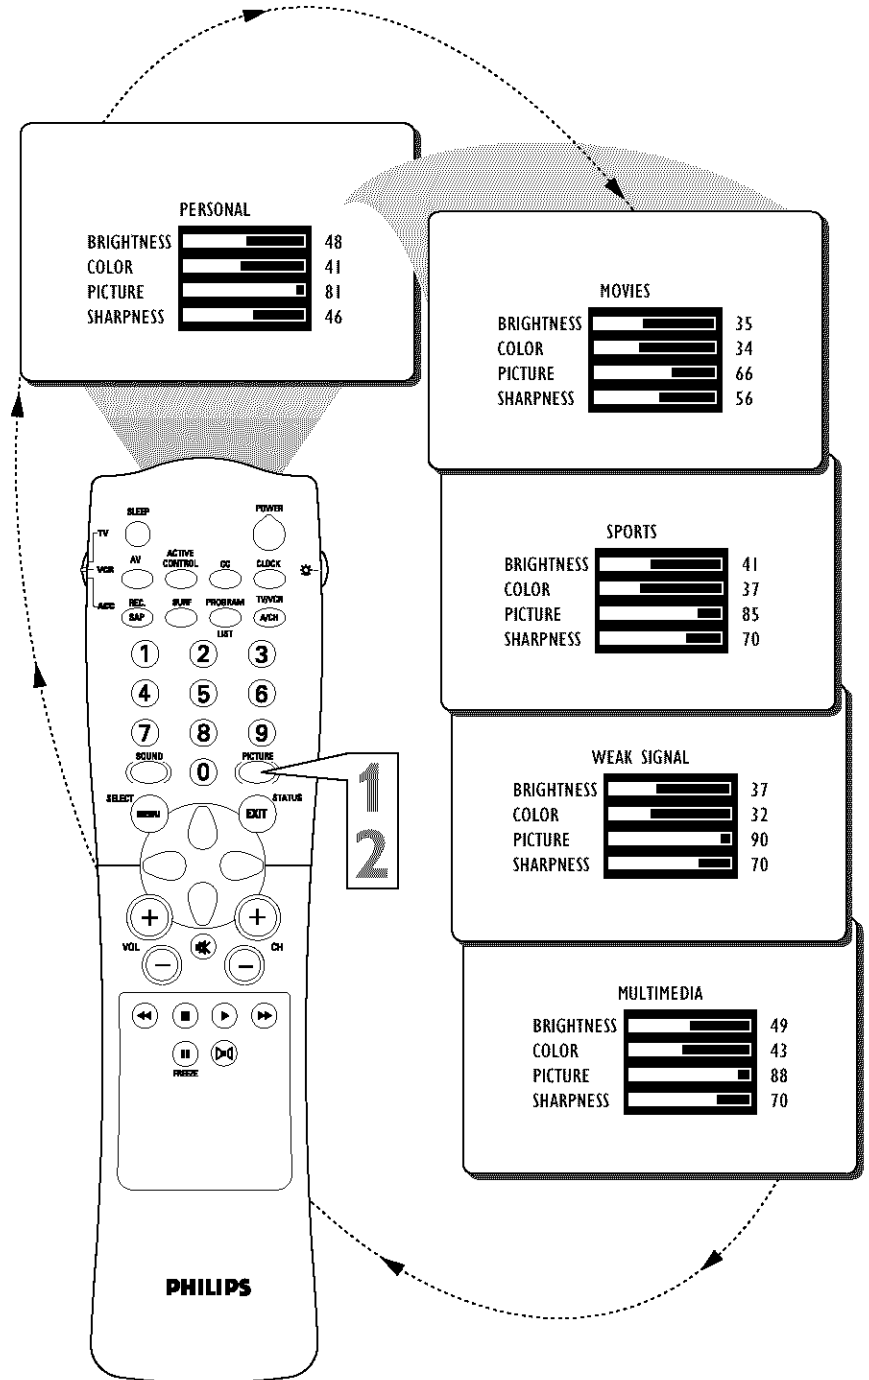

NOTE: The values shown in the diagram above are sample values only. Your television's values may vary and display different numbers.



HOW TO USE THE AUTO SOUND™ CONTROL

AutoSound™ allows you to select from three factory-set controls and a personal control that you set according to your own preferences through the onscreen Sound menu. The three factory-set controls (Voice, Music, and Theatre) enable you to tailor the TV sound so as to enhance the particular program you are watching. Follow these steps to select any of the options.

- 1** Press the **SOUND** button on the remote control. The current AutoSound™ setting will appear in the middle of the screen.
- 2** Press the **SOUND** button repeatedly to toggle among the four settings: PERSONAL, VOICE, MUSIC, or THEATRE.

Remember, only the PERSONAL control can be changed by the viewer. This changes the settings in the main onscreen menu's SOUND controls

HELPFUL HINT

AutoSound™ works only with the programs coming through the ANTENNA/CABLE (ANT) input on the rear of the TV (RF audio). It will not control the sound levels for the external connections.

 
✓ CHECK IT OUT

PERSONAL – presents the TV's sound according to the settings you make within the sound menu.

VOICE – brings voices to the forefront and emphasizes them. Moves music to the background.

MUSIC – emphasizes music over voices.

THEATRE – provides a balance between voices and music.

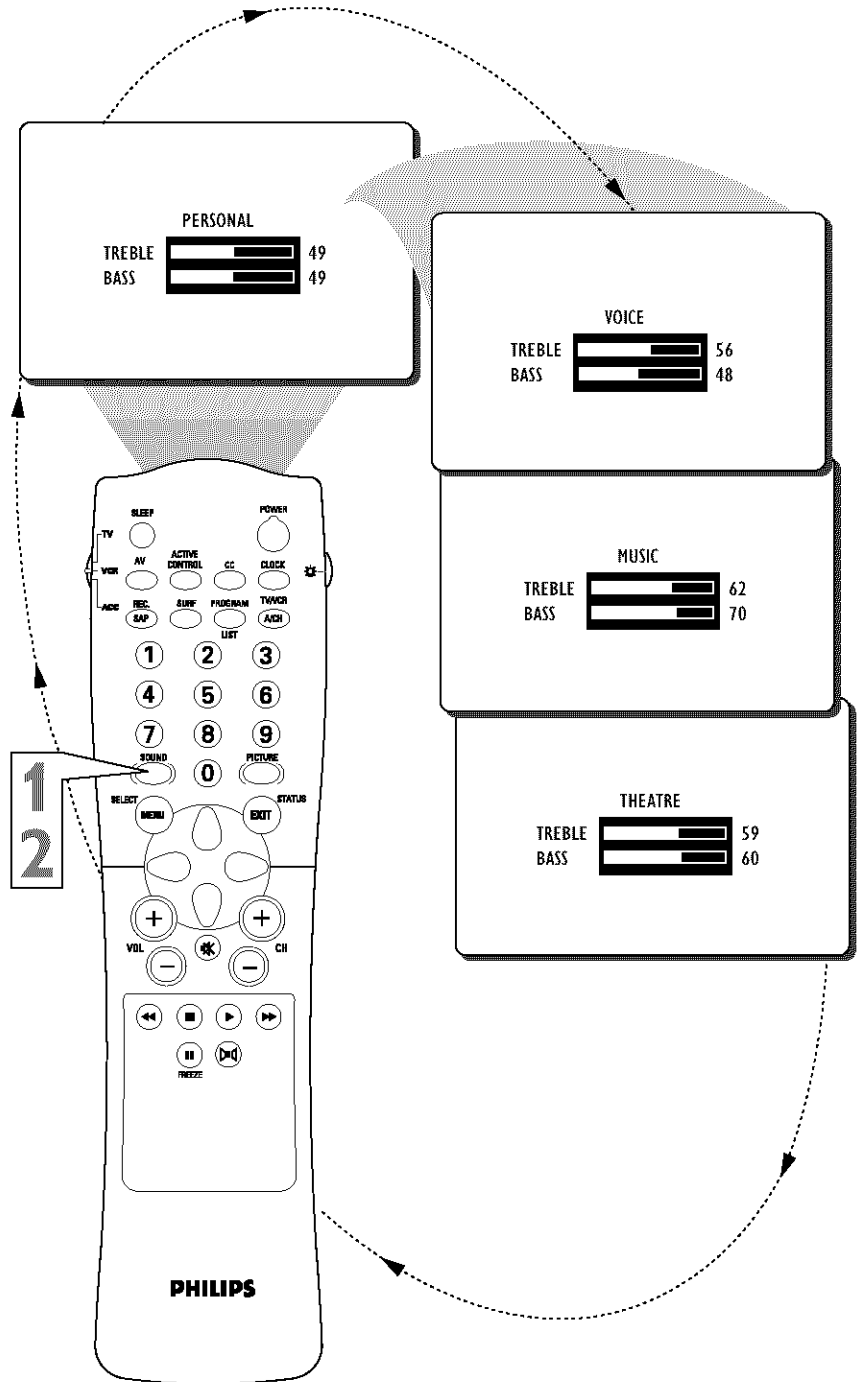

NOTE: The values shown in the diagram above are sample values only. Your television's values may vary and display different numbers.

HOW TO USE SURF CONTROL (AND ALTERNATE CHANNEL)



 
A list or series of previously viewed channels can be selected with the SURF button on your remote control. With this feature, you can easily switch between different TV channels that currently interest you. The SURF control allows you to set up to ten channels in its quick viewing list.

- 1** Press the CHANNEL(+) or (-) button (or the numbered buttons) to select a channel to add to the SURF list.
- 2** Press the SURF button on the remote control. The onscreen display may read, "SURF LIST EMPTY." The number of the current channel will be shown with "ADD?" to the right.
- 3** While the SURF list message or the SURF channel list appears on the screen, press the CURSOR RIGHT button to add the present channel to the SURF list.
- 4** If you want to delete the present channel from the SURF list, press the CURSOR RIGHT button again.

Repeat steps 1 through 3 to add more channels (up to 10) to the SURF list.

HELPFUL HINT


Along with regularly programmed channels, the external video source connections can be added to the SURF list. This means that the AV1, CVI, AV2, AV3, and AV4 channels can be added to your SURF list. Just tune to their channel and use the same procedure described on this page.

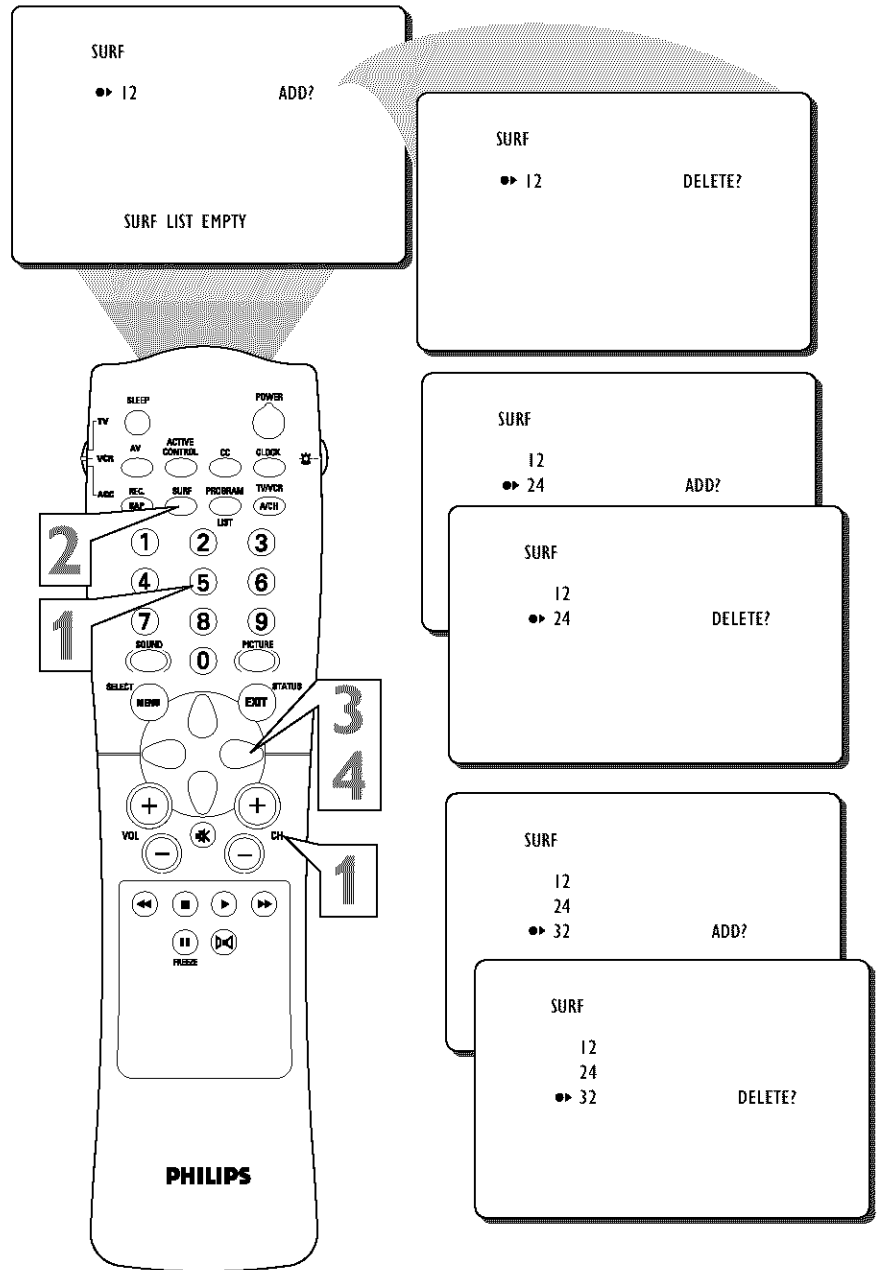

ALTERNATE CHANNEL BUTTON

Your remote also has an A/CH (Alternate Channel) button. Pressing this button will toggle between the current and one previous channel.

 - 1** Press the A/CH button toggle between the present channel and the last previously viewed channel.

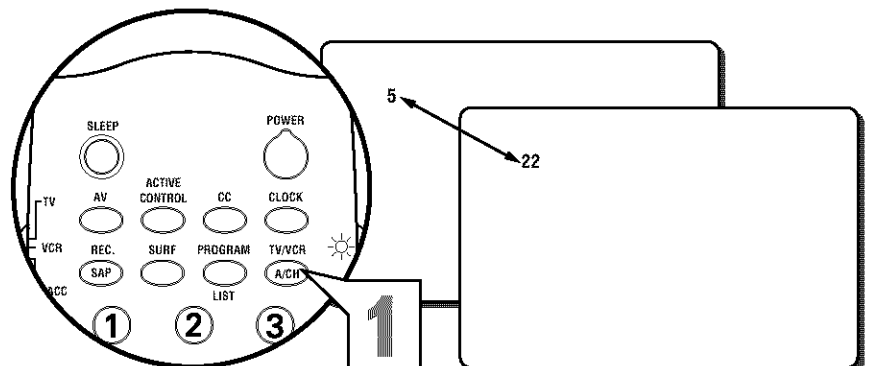



USING THE REMOTE WITH ACCESSORY DEVICES - DIRECT ACCESS

 
 
Your remote control is capable of working your TV and many other devices that respond to infrared remote control commands, such as VCRs, cable boxes, satellite systems, and DBS. Your remote may be already, as is, to work an accessory device, or you may need to use one of the methods (“Code Entry” or “Search”) explained on pages 47 and 48.

First, try this simple test to see if your TV remote control will give you direct access to the accessory device’s functions, or if you will need to try another method in order to set up your TV remote control for that capability.

- 1** Place the TV/VCR/ACC mode switch in the proper position.
- 2** Point the remote control at the remote sensor window of the accessory device and press the POWER button.
- 3** Does the remote control turn the device ON?

If YES, stop and try other function buttons on the remote. If they also work the device, then the remote is ready and no further steps are needed.

If NO, go to the next page to try the Code-Entry method.

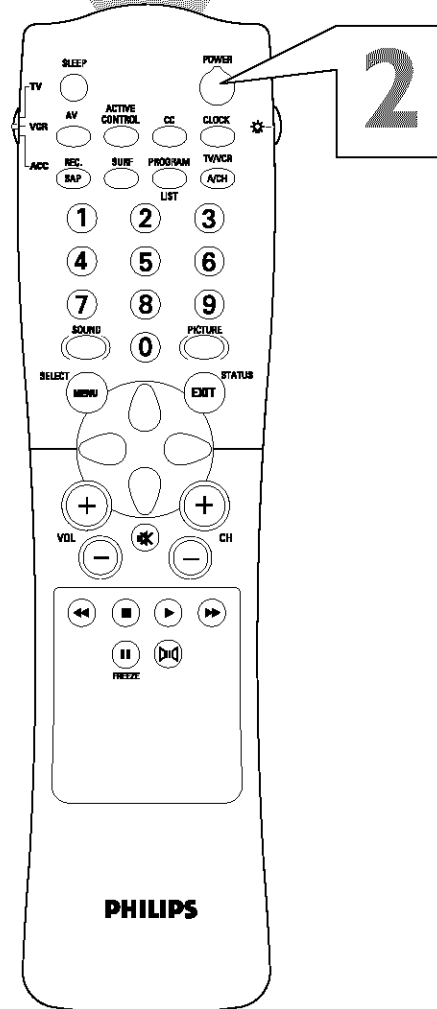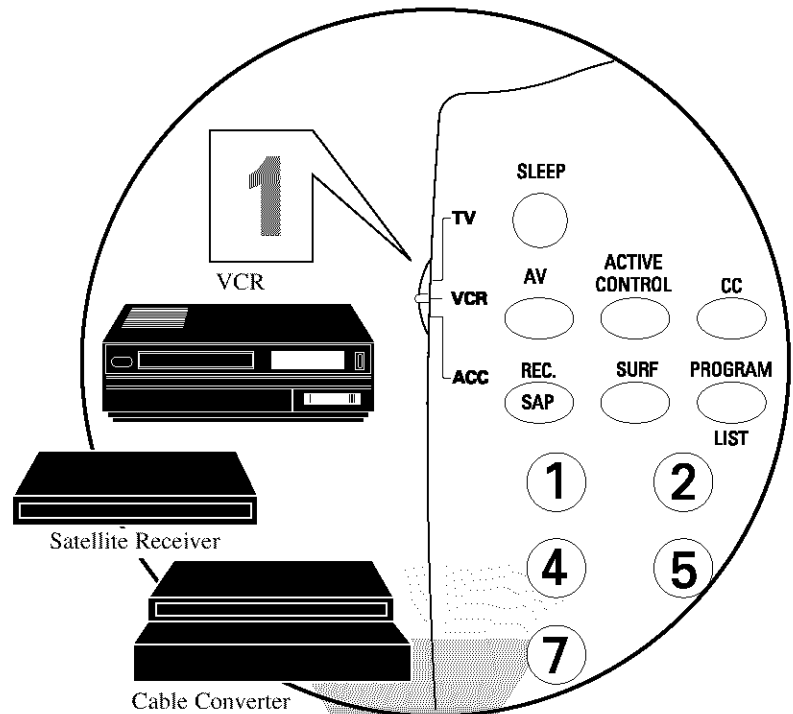

HELPFUL HINT

It is recommended that you use Philips brand external accessory devices with your Philips television to insure proper remote control functions. If you are using Philips brand accessory devices, your remote control should be ready to use with these devices.



Follow these simple steps to enter a three-digit Accessory Device Code Number that will allow you to use your TV remote to work the functions of an accessory device. Please read through the steps once before performing them.

- 1** Place the TV/VCR/ACC switch in the proper position and look up a three-digit Accessory Device Code Number for the accessory device (found on pages 49-50) whose functions you want to work with your TV's remote control.
- 2** Press the REC(ord)/SAP button on the remote control and release.
- 3** Press the SOUND button on the remote within 30 seconds, then release.
- 4** Enter the three-digit Direct-Entry Code Number for your desired device. The remote is now ready to send commands to the unit.
- 5** Point the remote at the remote sensor window of the device. Then press the POWER button on the remote to turn the unit ON.

 
NOTE: If the process just explained doesn't work the first time, repeat the same Accessory Device code number.

If after a second try the TV remote control does not operate your accessory device, see if other three-digit Accessory Device Code Numbers are shown for your device on the list pages 49-50 and repeat the steps above using a new number.

If after repeated attempts this method does not work for you, go to the next page and follow the steps for using the Search method to set up your remote control.

HELPFUL HINT

It is recommended that you use Philips brand external accessory devices with your Philips television to insure proper remote control functions. If you are using Philips brand accessory devices, your remote control should be ready to use with these devices.

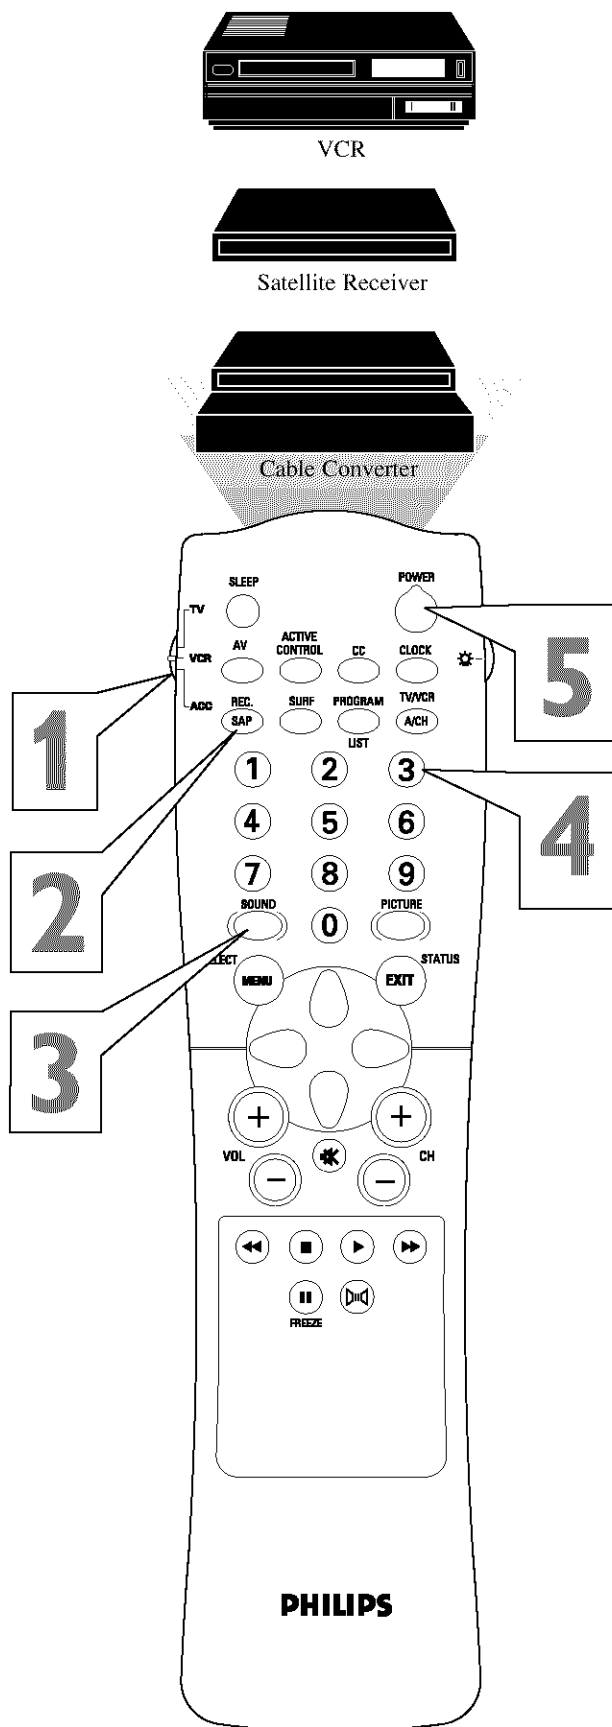



USING THE REMOTE WITH ACCESSORY DEVICES - SEARCH

Follow these simple steps to have your TV remote search for the code it needs to work the functions of your accessory device. Please read through the steps once before performing them.

NOTE: The Search method works only with devices equipped with channel display indicators or channel display capability.

- 1** Press the **POWER** button on the device you are attempting to program to turn it ON.
- 2** Slide the **TV/VCR/ACC** mode switch to the **VCR** position if you're setting up a VCR or to the **ACC** position if you're setting up any other accessory device.
- 3** Press the **REC(ord)/SAP** and **SOUND** buttons **simultaneously** and hold them down. The device will begin to change channels after the remote identifies the correct code.
- 4** When the channels start to change, **release the REC(ord)/SAP and SOUND buttons.**

NOTE: Don't let the device scan up more than five channels. If you do, the remote control may pass up the correct code, and another two-minute search cycle will have to be done.

 
If no channel change happens within two minutes, repeat steps 1–4. Should a channel change still not occur, the remote will not work the desired device.

HELPFUL HINT

Don't let the device scan up more than five channels. If you do, the remote may pass up the right code, and another two-minute search cycle will have to be done.

If no channel change happens within two minutes, repeat steps 1–4. Should a channel change still not occur, the remote control will not work the desired device.

It is recommended that you use Philips brand external accessory devices with your Philips television to insure proper remote control functions. If you are using Philips brand accessory devices, your remote control should be ready to use with these devices.

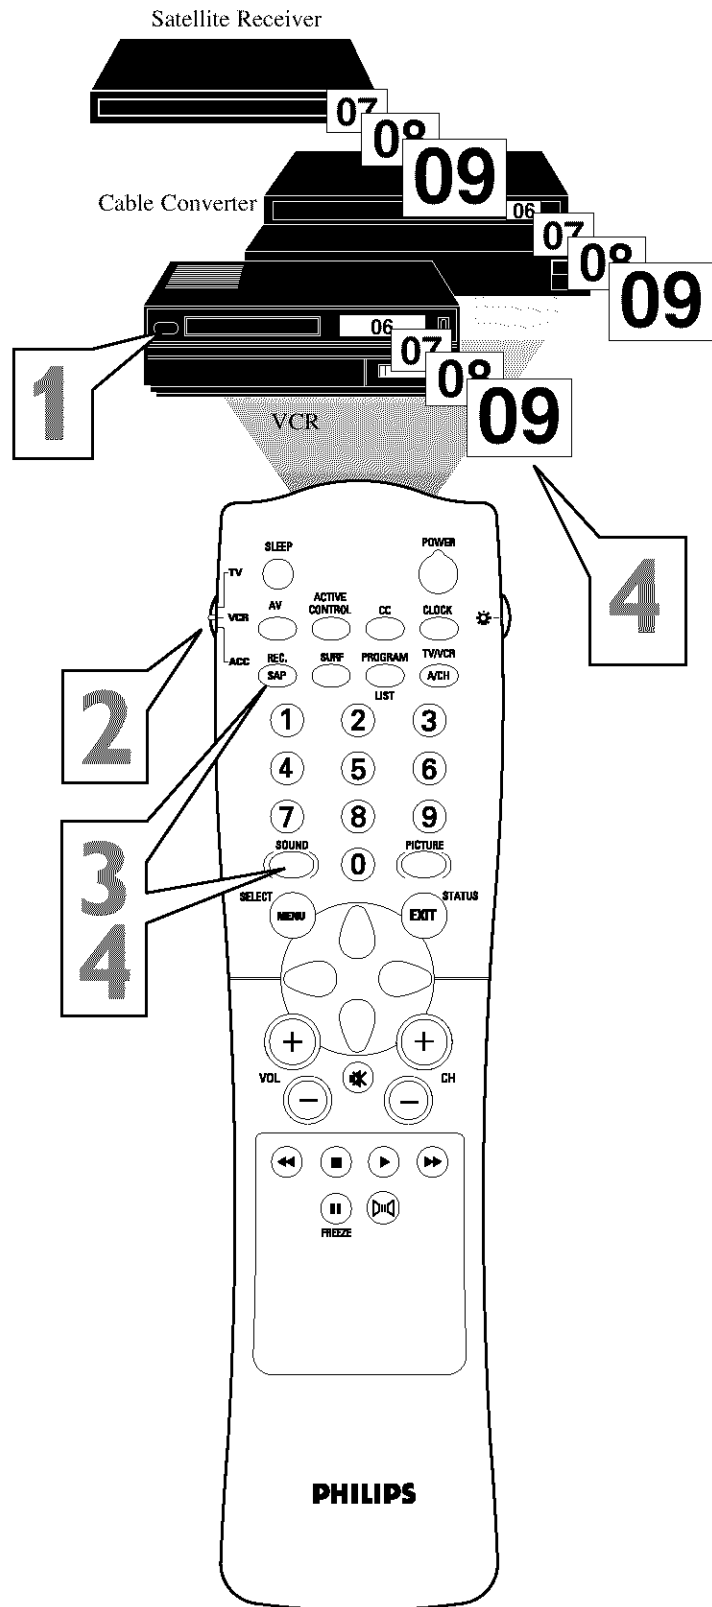

CODE-ENTRY CODE LIST FOR ACCESSORY DEVICES



VCR	REMOTE CODE NO.	VCR	REMOTE CODE NO.	VCR	REMOTE CODE NO.
Admiral	.048	Loewe	.004	Sanyo	.046, 047, 104, 240, 268
Advantz	.358	Logik	.004, 072	Saville	.352
Adventure	.000	MEI	.035	Scott	.043, 045, 121, 164, 211, 212
Aiko	.278	MGA	.043, 061	Sears	.000, 035, 037, 042, 046, .047, 054, 066, 104, 105
Aiwa	.000, 037, 307, 348, 352	MGN Technology	.240	Sharp	.046, 062
Akai	.041, 049, 053, 061, 106, 315	MTC	.000, 240	Shintom	.072
Alba	.352	Magnavox	.000, 035, 081, 146, 181	Shogun	.051, 240
American High	.035	Marta	.037	Shoral	.004
Amstrad	.325, 332	Matsui	.004, 348, 352	Siemens	.003
Asha	.240	Matsushita	.035, 162, 454	Singer	.072
Audiovox	.037	Memorex	.307	Sinudyne	.004
Baird	.107	Memorex	.000, 035, 037, 039, 046, .047, 048, 104, 240, 266, 307	Sony	.000, 011, 022, 032, 033, .034, 035, 253, 275
Beaumark	.240	Metz	.003, 347	Sunkel	.348
Bell & Howell	.104	Minolta	.042, 105	Sunpak	.253
Blaupunkt	.003, 006, 154	Mitsubishi	.043, 061, 067, 075, 173, 443	Sylvania	.000, 035, 043, 081, 103, 110
Brandt	.187, 320, 321	Motorola	.035, 048	Symphonic	.000
Broksonic	.121, 184, 211, 295, 361	Multitech	.000, 072	TMK	.036, 208, 240
Bush	.352	NAD	.058	Tatung	.041
CCE	.072, 278	NEC	.036, 040, 041, 067, 104	Teac	.000, 041
Calix	.037	Nikko	.037	Technics	.035, 162
Canon	.035	Nikon	.034, 253	Teknika	.000, 035, 037
Caphart	.020	Noblex	.240	Telefunken	.187, 320, 321
Carver	.081, 146	Nordmende	.297, 320, 321	Tansal	.322
Citizen	.037, 278	Okano	.346	Thomas	.000
Colt	.072	Olympus	.035, 226	Thomson	.320
Combitach	.352	Optimus	.037, 048, 058, 104, .162, 432, 454	Toshiba	.043, 045, 066, 212, 366
Craig	.037, 047, 072, 240, 271	Optonica	.062	Totavision	.037, 240
Curtis Mathes	.035, 041, 060	Orion	.004, 295, 348, 352, 479	Towada	.322
Cybermax	.051, 240	Panasonic	.035, 077, 162, 225, .226, 378, 454	Unitech	.240
Daewoo	.020, 045, 276	Penney	.035, 037, 038, 040, .042, 065, 105	Universum	.325
Daytron	.020	Pentax	.042, 065, 105	Vactor	.045
Denon	.042	Philco	.035	Vactor Research	.038, 040
Dynatech	.000	Philips	.035, 062, 081, 110, 403	Video Concepts	.040, 045, 061
Electroponic	.037	Pilot	.037	Videosonic	.240
Emerex	.032	Pioneer	.058, 067	Wards	.000, 035, 042, 047, 048, 060, 062, .072, 081, 149, 161, 212, 240
Emerson	.000, 002, 036, 037, 043, 061, .068, 088, 121, 164, 208, 209, .211, 212, 278, 295, 361, 479	Portland	.020	XR-1000	.000, 035, 072
Ferguson	.107, 320, 321	Profax	.322	Yamaha	.038
Fisher	.047, 054, 066, 104	Profitronic	.240	Zenith	.000, 033, 034, 039
Fuji	.033, 035	Protec	.072		
Funai	.000	Pulsar	.039, 051	CABLE CONVERTOR	REMOTE CODE NO.
GE	.035, 060, 065, 202	Quarter	.046	ABC	.001, 003, 007, 008, .011, 013, 014, 017
Garrard	.000	Quartz	.046	Aliegio	.153
Go Video	.232, 279, 432	Quasar	.035, 077, 162, 454	Andover	.544
Gold Star	.037, 038	RCA	.042, 060, 065, 077, .105, 106, 149, 202	Antronix	.022
Gradiente	.000, 406	Radio Shack	.000, 037	Archer	.022, 153
Grundig	.003, 007, 195, 347	Radix	.037	Balcor	.056
HI-Q	.047	Randex	.037	British Telecom	.105
Harley Davidson	.000	Realistic	.000, 035, 037, 045, 047, .048, 062, 066, 104	Cable Star	.056
Harman/Kardon	.038, 075	Ricoh	.034, 253	Cablantenna	.022
Harwood	.068, 072	Runco	.039	Cabletime	.161, 271, 377, 448
Headquarter	.046	SEG	.322	Cableview	.022
Hinari	.004, 352	SEI	.004	Century	.153
Hitachi	.000, 004, 041, 042, .065, 105, 168, 235	STS	.042	Citizen	.153
Ingersol	.004	Saba	.297, 320, 321	Clyde	.086
JVC	.008, 041, 067, 208, 384, 486	Saisho	.004	Colour Voice	.025, 031
Jensen	.041	Salora	.075	Comtec	.274
KEC	.037, 278	Salora	.075	Comtronics	.040
KLH	.072	Samsung	.045, 051, 053, 240	Contec	.019
Kenwood	.038, 041, 067, 384	Sanky	.039, 048	Cryptovision	.600
Kodak	.035, 037	Sansui	.000, 041, 067, 271	Deceat	.423
LXI	.037				
Lloyd's	.000, 206				



CODE-ENTRY CODE LIST FOR ACCESSORY DEVICES

CABLE CONVERTOR	REMOTE CODE NO.
Eastern	.002, 274
Everquest	.015, 040
Filmnet	.443
Focus	.400
France Telecom	.451
GC Electronics	.056
GEC	.086
Ganard	.153
Gemini	.015, 070, 242
General Instrument	.011, 276, 476
Gold Star	.040
Grundig	.529
Hamlin	.009, 020, 034, 259
Hitachi	.011
Hytex	.007
Jasco	.153
Jerrold	.003, 011, 012, 014, .015, 024, 276, 476
M.N.E. T.	.443
MNet	.443
Macon	.033
Magnavox	.027, 032, 334
Memorex	.000
Movie Time	.063
NSC	.063, 070
Oak	.007, 019
Optimus	.021
Panasonic	.000, 021, 107
Paragon	.000
Philips	.025, 027, 031, 153, 242, 290, 334
Pioneer	.533, 753
Popular Mechanics	.400
Pulsar	.000
RCA	.021
Radio Shack	.015
Recoton	.400
Regal	.020, 259
Regency	.002
Rembrandt	.011, 070
Runco	.000
SL Marx	.040
Salora	.382
Samsung	.040
Satbox	.375
Scientific Atlanta	.008, 017, 477
Signal	.015, 040
Signature	.011
Sprucer	.021
Star Sight	.542
Starcom	.003, 015
Stargate	.015, 040
Starquest	.015
Sylvania	.001
TV85	.063
Tandy	.258
Tele+1	.443
Teleservice	.281
Televue	.040
Texscan	.001
Timeless	.274
Tocom	.012, 013, 059
Toshiba	.000
Tudl	.286
Tusa	.015
Unike	.022, 153

CABLE CONVERTOR	REMOTE CODE NO.
United Artists	.007
United Cable	.003
Universal	.022, 056, 153, 191
Videoway	.250
Viewstar	.027, 063, 258
Visi Cable+	.461
Westminster	.105
Wolsey Gaine	.544
Zenith	.000, 054, 525
Zentek	.400

DBS	REMOTE CODE NO.
Alpha Star	.772
Echostar	.775
HTS	.775
Hitachi	.819
Hughes Network System	.749
Jerrold	.627
Magnavox	.722, 724
Memorex	.724
Panasonic	.701
Philips	.722, 724
Primestar	.627
RCA	.566
Sony	.639
Toshiba	.790
Uniden	.724

SATELLITE	REMOTE CODE NO.
AST	.351
Akai	.515
Alba	.352, 515, 613
Aldea	.288
Amstrad	.080, 252, 345, 461, 509, 689
Ankaro	.220, 288, 369
Anitron	.183
Armstrong	.243
Astra	.108
Avalon	.396
Axis	.369
BT	.515, 668
Beko	.189
Best	.369
Boca	.243, 513
Bush	.067
Cambridge	.344, 515
Channel Master	.362
CommLink	.288
Connexions	.396
Conrad	.607
Crown	.243
DDC	.362
DNT	.396
Echostar	.396
Ferguson	.067, 183, 189, 336
Fidelity	.252
Finlux	.108, 397
Fuba	.369, 396
G-Bat	.183
Galaxis	.286
Gooding	.571
Grundig	.173, 189, 571, 750
Hinari	.183

SATELLITE	REMOTE CODE NO.
Hirschmann	.397, 573
Houston	.668
Huth	.220, 243, 268
ITT	.108
Intervision	.592
JVC	.515, 571
Kathrein	.092, 504, 622, 658
La Sat	.513, 607
Lennox	.592
Lupus	.369
Luxor	.108, 573
Manhattan	.592
Maspro	.092, 336, 750
Matsui	.571
Mediamarkt	.248
Minerva	.571
Mintec	.576
Morgan's	.243, 513
Newhaus	.220
Nikko	.360, 713
Nokia	.108, 397, 573
Nordmende	.362
Orbitech	.501
Pace	.067, 183, 336, 455, 791
Paliadium	.571
Palsat	.501
Philips	.200, 292, 571, 750
Phonotrend	.288, 592
Plasmatic	.442
Proset	.288
Quadral	.362, 628
RFT	.220, 288
Radix	.396
SAT	.351, 461
SEG	.369
Saba	.336
Salora	.108
Satec	.183
Schwaiger	.183, 504
Seemann	.396, 578, 626
Skymaster	.288, 626
Sony	.704
Star Trak	.421
Strong	.421
Sunstar	.513
Tantec	.336
Techni Sat	.262, 501
Teleka	.243, 613
Tonna	.668
Triad	.351
Universum	.571
Vtech	.351
Wisi	.351, 396

DVD	REMOTE CODE NO.
Kenwood	.534
Mitsubishi	.521
Panasonic	.490
Philips	.539
Pioneer	.550
RCA	.522
Sony	.552
Toshiba	.503

 
REMOTE CONTROL VCR SPECIFIC BUTTONS



When using the TV remote control with a VCR, first make certain it is set to control your VCR (by the REMOTE CODE or SEARCH method).

1 Set the TV/VCR/ACC mode switch to VCR on the remote control.

2 Point the top of the remote toward the front of the VCR (remote sensor window) when pressing the buttons.

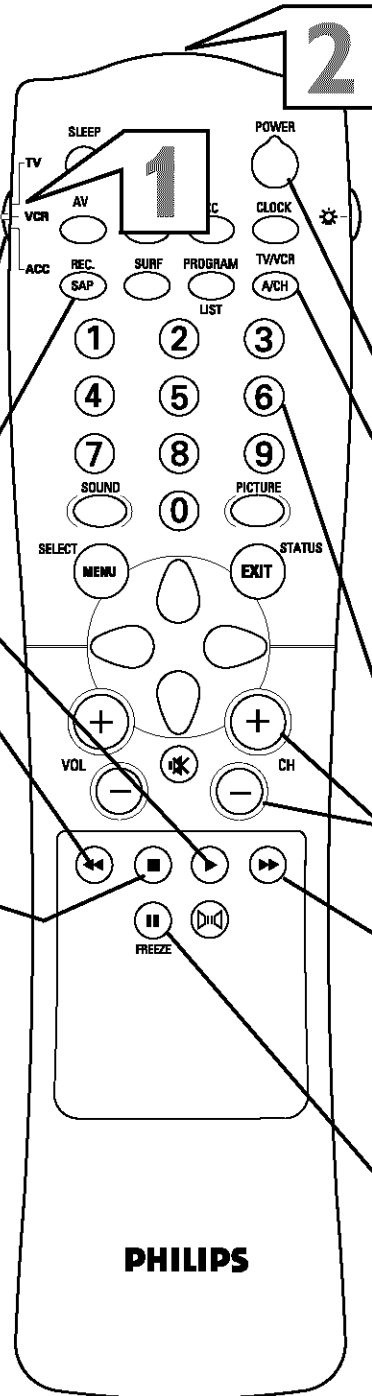

VCR System Switch
Set in the VCR position to send remote commands to the VCR.

Record Button
Hold the REC(ord)/Sap and PLAY ► buttons down to begin a VCR recording.

Play Button ►
Press to begin playback of a videotape.

Rewind Button ◀◀
Press to rewind tapes. For some VCR's, the STOP button may have to be pressed first, then REWIND. In playback mode, hold down the button to view the picture moving rapidly in reverse.

Stop Button ■
Press to stop the motion of a tape in playback, rewind, fast forward, and so on.

Power Button
Press to turn the VCR ON and OFF.

TV/VCR Button
Press while in the VCR mode (the VCR indicator on the front of the unit will light) to view the playback of a tape. Press again to place in the TV position (the VCR indicator light will go off) to view one program while recording another program.

Number Buttons
Press buttons for the direct selection of VCR channels.

Channel + and - Buttons
Press to scan up or down through the VCR channel numbers.

Fast Forward Button ►►
Press to rapidly advance the tape. For some VCRs, you may need to press the STOP button first, then the FAST FORWARD button. In playback mode, hold the button down to view the picture moving rapidly in the forward direction.

Pause Button ||
Press to temporarily stop the tape during a playback or recording. Press again to release Pause.

HELPFUL HINT

Remember, the VCR buttons on the remote will not operate your VCR if those features are not found on your VCR remote control.

NOTE: All VCR functions (particularly Search, Rewind, Fast Forward, etc.) will operate the same as with the original VCR remote control provided with the VCR.



TROUBLESHOOTING

No Power

- Check the TV power cord. Unplug the TV, wait 10 seconds, then reinsert the plug into the outlet and push the POWER button again.
- Check that the outlet is not on a wall switch.
- Be sure the fuse is not blown on the AC power strip, if one is being used.

No Picture

- Check antenna connections. Are they properly secured to the TV's ANT 75Ω plug?
- Check the TUNER MODE control for the correct tuner setting.
- Try running the Auto Program feature to find all available channels.
- Press the AV button on the remote to make sure the correct signal source is selected.

No Sound

- Check the VOLUME buttons.
- Check the MUTE button on the remote control.
- If you're attempting to hook up auxiliary equipment, check the audio jack connections located on the front of the TV.

Remote Does Not Work

- Check the batteries. If necessary, replace them with AA Heavy Duty (Zinc Chloride) or Alkaline batteries.

Remote Does Not Work Continued

- Clean the remote control and the remote control sensor window on the TV.
- Check the TV power cord. Unplug the TV, wait 10 seconds, then reinsert the plug into the outlet and push the POWER button again.
- Be sure the fuse is not blown on the AC power strip, if one is being used.
- Check to be sure the TV outlet is not on a wall switch.

TV Displays Wrong Channel or No Channels Above 13

- Repeat channel selection.
- Add the desired channel numbers (using the CHANNEL EDIT control) into the TV's memory.
- Check to be sure the TUNER MODES are set to the CABLE option and run the Auto Program feature to find all available channels.

TV Displays white lines in letterbox when viewing a DVD disc

- Some DVD Discs are encoded with as much as 30% more video information to give the best possible picture quality. With the DVD Player in the 16:9 picture format, the playback of this type of disc with extra video information, can produce a number of small white lines in the upper portion of the black letterbox area. With some of these discs, this situation is unavoidable and it does not require a service call.



CARE AND CLEANING

WARNING Concerning Stationary Images on the TV Screen:

Do not leave stationary or letterbox images on screen for extended periods of time. This can cause uneven picture-tube aging.

Normal use of the TV should involve the showing of pictures that contain constantly moving and changing images that fill the screen. Be careful not to leave nonmoving images on screen for extended periods of time, or to display the same images on screen too frequently, because subtle ghost images can be left on the picture tubes. Sources of stationary images may be DVD disks, laser disks, video games, CD-i disks, videotapes, digital television boxes, broadcast channels, cable channels, satellite channels, and others. **Here are some examples of stationary images (this is not an all-inclusive list; you may encounter others in your viewing):**

- **DVD menus**—listings of DVD disk content
- **Letterbox black bars**—shown at the top and bottom of the TV screen when a wide screen (16:9) movie is viewed on a TV with standard (4:3) aspect ratio.
- **Video-game images and scoreboards**
- **Television station logos**—present a problem if they are bright and stationary; moving or low-contrast graphics are less likely to cause uneven aging of the picture tube
- **Stock-market tickers**—presented at the bottom of the TV screen
- **Shopping channel logos and pricing displays**—bright and shown constantly or repeatedly in the same location on the TV screen.

PLACEMENT OF THE TV

- To avoid cabinet warping, cabinet color changes, and increased chance of set failure, do not place the TV where temperatures can become excessively hot; for example, in direct sunlight or near a heating appliance.
- Be sure to allow a free flow of air to and from the perforated back cover of the set.

CLEANING

- To avoid possible shock hazard, be sure the TV is unplugged from the electrical outlet before cleaning.
- Regularly dust the TV with a dry, nonscratching duster to keep the TV clean.
- When cleaning the TV, take care not to scratch or damage the screen surface. Avoid wearing jewelry or using anything abrasive. Do not use household cleaners. Wipe the front screen with a clean cloth dampened with water. Use even, easy, vertical strokes when cleaning.
- Gently wipe the cabinet surfaces with a clean cloth or sponge dampened in a solution of cool, clear water and a mild soap or detergent. Use a clean, dry cloth to dry the wiped surfaces.
- Occasionally vacuum the ventilation holes or slots in the back cover of the set.
- Never use thinners, insecticide sprays, or other chemicals on or near the cabinet, as they might cause permanent marring of the cabinet finish.



Active Control • Active Control continuously measures and corrects the incoming signals to provide the best picture possible.

Alternate Channel • Allows you to toggle between the last two channels viewed by pressing the A/CH button on the remote control.

Audio/Video Inputs • Jacks (standard RCA), located on the back of the TV, used for external accessory devices. These jacks are designed to receive higher picture resolution and offer sound-connection options.

Auto Programming • When activated, this feature scans for all available channels from regular antenna or cable signals and stores only active broadcast stations in the TV's memory.

Channel Edit • The feature that allows you to add or delete channels from the list of channels stored in the TV's memory.

Closed Captioning • The broadcast standard feature that allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, Closed Captioning shows dialogue and conversations while a TV program is in progress.

Coaxial Cable • A single solid wire normally matched with a metal plug (F-type) end connector that screws (or pushes) directly onto a 75-ohm input found on the television or VCR.

Component Video Inputs • Inputs that allow the separate reception of blue, red, and luminance signals. These inputs provide the highest possible color and picture resolution in the playback of digital signal-source material, such as the kind available from DVD players.

Composite Video Input • An input in which all the components required for displaying the onscreen image are combined in one signal.

High-definition Television (HDTV) • High-resolution digital television.

Incredible Stereo (or Surround) • False acoustic management of the audio signal that produces a dramatic expansion of the wall of sound that surrounds the listener and heightens overall viewing pleasure.

Menu • An onscreen list of feature controls available for you to adjust or set.

Onscreen Displays (OSD) • The wording or messages generated by the television (or VCR) to help you with specific feature controls (color adjustment or programming, for example).

Remote Control Sensor Window • The window or opening found on the television control panel through which infrared remote control command signals are received.

Second Audio Program (SAP) • An additional audio channel provided for in the Multichannel Television Sound (MTS) broadcast standard. A monaural soundtrack included within the recorded or video signal (usually containing a second language translation for the displayed programming).

Status/Exit Button • The remote control function that allows you to quickly confirm what channel number you are watching. Status/Exit can also be used to clear the television of onscreen displays or information. You can use Status/Exit rather than having to wait for the displays to "time out," or automatically disappear from the screen.

S-Video Input • Signal input that allows direct connection of high-resolution video sources, such as a satellite receiver, DVD player, S (Super)-VHS videocassette recorder, or video games. Provides improved picture resolution, sharpness, and clarity.

Tint • TV function that allows you to change the general color balance between cool and warm. Adjust tint according to your personal preference.

INDEX




Active Control™	27
Alternate Channel Control	45
Audio Out Control	19
AutoChron™ Control	11
AutoLock™ Controls	
Access Code	29
AutoLock™ Status Screen	36
Blocking Programs based on Movie Ratings	32
Blocking Programs based on TV Ratings	33
Blocking Channels	30
Blocking Control (Activating Blocking Controls)	34
Blocking based on No Ratings	35
Clearing All Blocked Channels	31
Understanding the AutoLock™ Features	28
AutoPicture™ Control	43
AutoProgram Control	8
AutoSound™ Control	44
AVL (Automatic Volume Leveler) Control	16
Balance Control	15
Bass Control	15
Blue Mute Control	40
Brightness Control	12
Care and Cleaning Information	52
Channel Edit (Add/Delete Channels) Control	9
Closed Captioning	37
Color Control	12
Color Temperature (Color Temp) Control	12
Digital Options (Eye Fidelity™) Control	13
Dyn(amic) Contrast Control	14
Factory Service Locations	54-55
Feature Highlights	5
Freeze Control	42
Glossary of Terms	53

Incr.(edible) Surround Control	17
Index	53
Language Control	6
Name Control (Channel Label)	10
Picture Control	12
Registration of TV Information	2
Remote Control Use with Accessory Devices	
Code-Entry Method of Identification	47
Direct Access Method of Identification	46
Direct-Entry Code List	49-50
Search Method of Identification	48
VCR Specific Buttons	51
Rotation Control	39
Safety Information	3
SAP (Secondary Audio Programs) Control	18
Screen Format Control	38
Sharpness Control	12
Sleep Timer Control	41
Stereo/Mono Control	18
Surf (Channel Surf) Control	45
Timer Controls	
Activate Control	25
Clock, Time Control	21
Display Control	26
Start Channel Control	24
Start Time Control	22
Stop Time Control	23
Tint Control	12
Treble Control	15
Troubleshooting	52
Tuner Mode Control	7
TV Speaker Control	20
Warranty (Limited)	56



 FACTORY SERVICE LOCATIONS

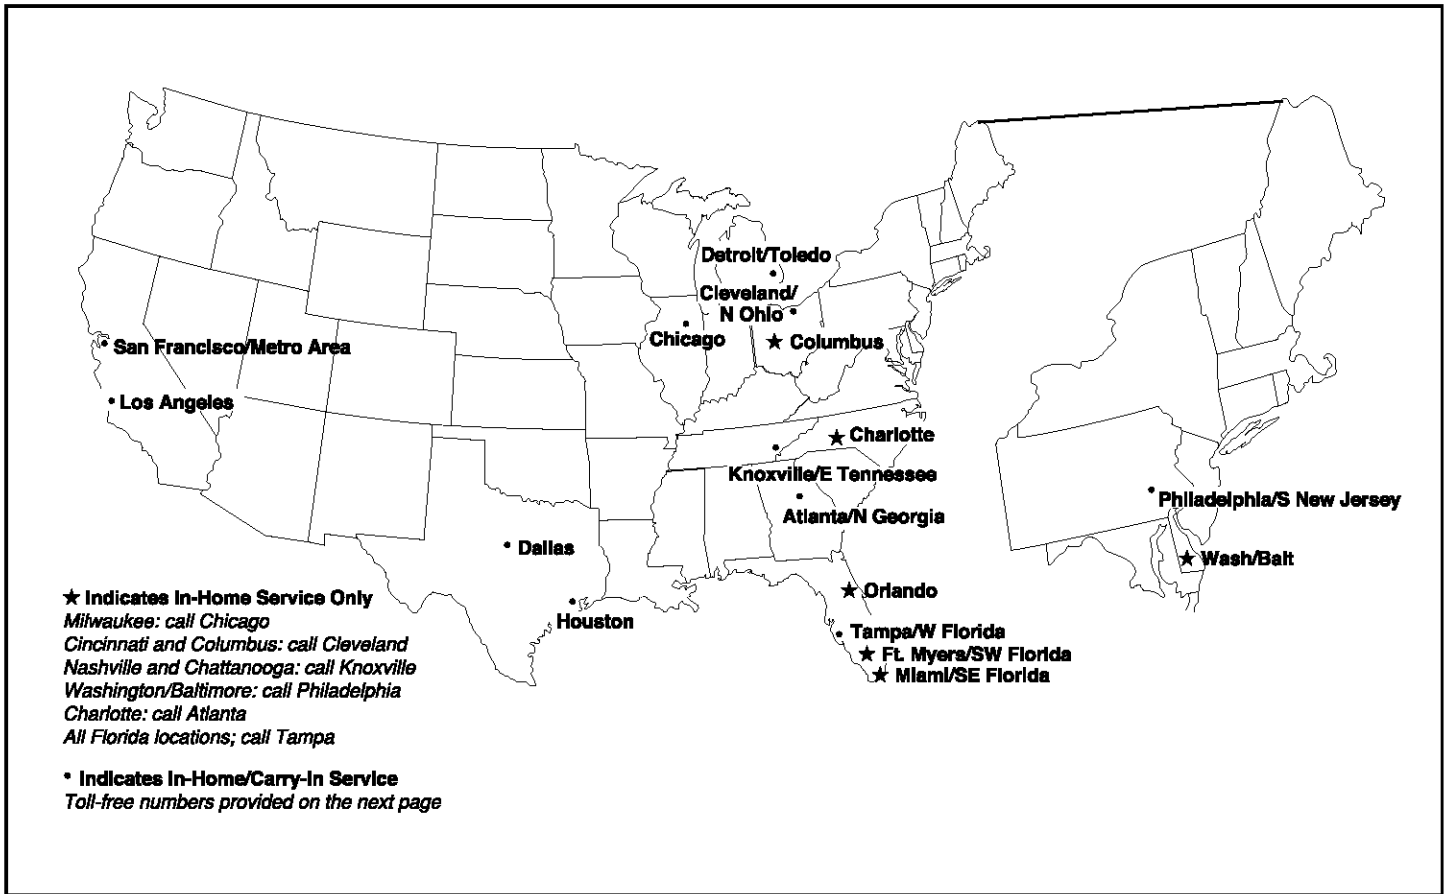

NOTE: If you reside in one of our Philips Factory Service Branch areas (see directory on back), you can contact the nearest Service Branch to obtain efficient and expedient repair for your product. If your product is In-Warranty, you should have proof-of-purchase to ensure No Charge Service. For Out-of-Warranty service, call the location nearest you.

NOTA: Si vous résidez dans une des régions desservies par une succursale de service après vente du fabricant Philips (voir liste ci-dessous), vous pourrez contacter la branche de service après vente la plus près de chez vous pour obtenir un service après vente rapide et efficace. Si le produit est sous garantie, il suffira de présenter une preuve d'achat pour bénéficier d'un service sans frais. Pour les produits non couverts par la garantie, contactez le centre le plus près de chez vous.

NOTA: Si Ud. reside en una de nuestras zonas para sucursales Philips de servicio al de fábrica (ver directorio más abajo), Ud. puede comunicarse con la sucursal de servicio más cercana para obtener una reparación oportuna y eficaz de su producto. Si su producto está todavía bajo garantía, Ud. debe presentar comprobante de compra para no ocasionar ningunos cargos por servicio. Para servicio después del vencimiento de la garantía, llame al lugar más cercano de los abajo indicados.

In Canada

How you can obtain efficient and expedient carry-in, mail-in, or in-home service for your product

Please contact Philips at
 1-800-661-6162 (French speaking)
 1-800-531-0039 (English or Spanish speaking)

Au Canada

Comment obtenir le service après-vente pour les produits apportés ou envoyés par la poste à notre centre de service ou le service à domicile

Veillez contacter philips à:
 1-800-661-6162 (Francophone)
 1-800-531-0039 (Anglais ou Espagnol)

En el Canadá

Cómo recibir servicio eficiente para su producto, en persona, por correo o a domicilio

Favor de comunicarse con Philips al:
 1-800-661-6162 (Francés)
 1-800-531-0039 (Inglés o Español)

FACTORY SERVICE LOCATIONS



QUALITY SERVICE IS AS CLOSE AS YOUR TELEPHONE! SIMPLY LOOK OVER THE LIST BELOW FOR THE NUMBER OF A FACTORY SERVICE CENTER NEAR YOU. YOUR PRODUCT WILL RECEIVE EFFICIENT AND EXPEDIENT CARRY-IN, MAIL-IN, OR IN-HOME SERVICE, AND YOU WILL RECEIVE PEACE OF MIND, KNOWING YOUR PRODUCT IS BEING GIVEN THE EXPERT ATTENTION OF PHILIPS' FACTORY SERVICE.

COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SOIT PAR COURRIER, À DOMICILE, OU EN SE PRÉSENTANT À UN CENTRE DE SERVICE PHILIPS. PLUS DE 600 CENTRES DE RÉCEPTION DE PRODUITS À RÉPARER À TRAVERS LE PAYS: CONTACTER LE CENTRE DE SERVICE AUX CONSOMMATEURS LE PLUS PROCHE POUR SAVOIR L'EMPLACEMENT DE CES DÉPÔTS DANS UN RAYON DE 50 À 75 MILES (80 KM À 120 KM) DU CENTRE DE SERVICE LOCAL.

CÓMO OBTENER UN SERVICIO OPORTUNO Y EFICIENTE POR CORREO, EN CASA O EN PERSONA PARA SU PRODUCTO A TRAVÉS DE UN CENTRO PHILIPS DE SERVICIO. MAS DE 600 SITIOS POR TODO EL PAIS PARA LA RECEPCION DE PRODUCTOS NECESITADOS DE REPARACIONES: COMUNICARSE CON EL CENTRO DE SERVICIO DE FABRICA MAS CERCANO PARA ESTOS LUGARES DENTRO DE UN RADIO DE 80 A 120 KM (50 A 75 MILLAS) DEL CENTRO DE SERVICIO LOCAL.

ATLANTA

Philips Factory Service
550 Franklin Road., Suite F
Marietta, GA 30067
800-273-1501

TAMPA

Philips Factory Service
1911 US Highway 301 North, Suite 100
Tampa, FL 33619
800-442-2027

SAN FRANCISCO

Philips Factory Service
681 East Brokaw Rd.
San Jose, CA 95112
800-300-9013

HOUSTON

Philips Factory Service
1110 N. Post Oak Rd., Suite 100
Houston, TX 77055
800-952-3254

CLEVELAND

Philips Factory Service
950 Keynote Circle
Brooklyn Heights, OH 44131
800-331-7037

DETROIT

Philips Factory Service
25173 Dequindre
Madison Heights, MI 48071
800-438-1398

DALLAS

Philips Factory Service
415 N. Main Street, #107
Euless, TX 76040
800-952-3254

LOS ANGELES

Philips Factory Service
20930 Bonita, Ste. V
Carson, CA 90746
800-300-9013

CHICAGO

Philips Factory Service
1279 W. Hamilton Pkwy.
Itasca, IL 60143
800-531-2922

KNOXVILLE

Philips Factory Service
One Philips Drive
Knoxville, TN 37914
800-821-1767

PHILADELPHIA

Philips Factory Service
352 Dunks Ferry Rd.
Bensalem, PA 19020
800-847-9320

LIMITED WARRANTY

COLOR TELEVISION

90 Days Free Labor

One Year Free Replacement of Parts (Two Years Free Replacement on Color Picture Tube)

This product can be repaired in-home.

WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For 90 days thereafter, all parts will be repaired or replaced free, and labor is free. From 90 days to one year from the day of purchase, all parts will be repaired or replaced free, but you pay for all labor charges. From one to two years from the day of purchase, you pay for the replacement or repair of all parts except the picture tube, and for all labor charges. After two years from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes.

WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Contact a Philips factory service center (see enclosed list) or authorized service center to arrange repair.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

FOR WARRANTY COVERAGE IN CANADA...

Note: Product Warranty coverage may vary between countries where product is distributed by Philips Consumer Electronics Company. In order to receive full and specific warranty details for products sold and serviced in Canada, please contact Philips at:

1-800-661-6162 (from Canada - French Speaking)

1-800-531-0039 (English and Spanish Speaking)

REMEMBER...

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

 
MODEL # _____

SERIAL # _____

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips, P.O. Box 520890, Miami, FL 33152, (402) 536-4171

PHILIPS
Let's make things better

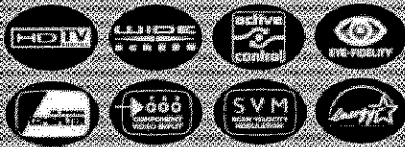

Color TV

Quick Use and Hookup Guide

CONTENTS

Important Notice/Warning1	AV1 Input Connections3
Basic TV Operation1	AV2 Input Connections3
Remote Battery Installation1	S-Video Input Connection3
Remote Control Button Descriptions1	Component Video Input Connections3
Hooking up the Television	AV4 Input Connection4
Basic Cable/Cable Box TV Connections2	Monitor Output Connections4
Basic Antenna TV Connections2	Side (AV3) Audio/Video Input Connection4

IMPORTANT

NOTE: This owner's manual is used with several different television models. Not all features (and drawings) discussed in this manual will necessarily match those found with your television set. This is normal and does not require that you contact your dealer or request service.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS UNIT TO RAIN OR EXCESSIVE MOISTURE.

 
BASIC TV AND REMOTE OPERATION

TELEVISION


Your television has a set of controls located on the front of the cabinet for use when the remote control is not needed.

- 1 Press the **POWER** button to turn the TV ON.
- 2 Press the **Volume** + button to increase the sound level or the **Volume** - button to lower the sound level. Pressing both buttons at the same time will display the onscreen menu. After you are in the menu, use these buttons to make adjustments or selections.
- 3 Press the **CH** - (down) or + (up) button to select TV channels. Use these buttons to make adjustments or selections in the onscreen menu.
- 4 Press the **M** button to display the onscreen menu. When displayed, the onscreen menu can be navigated using the **Volume** + or - and **Channel (CH)** + or - buttons.

There is also a set of Audio and Video Input jacks located on the side of the television cabinet. Refer to the Side AV3 Input section on page 4 of this *Quick Use and Hookup Guide*.

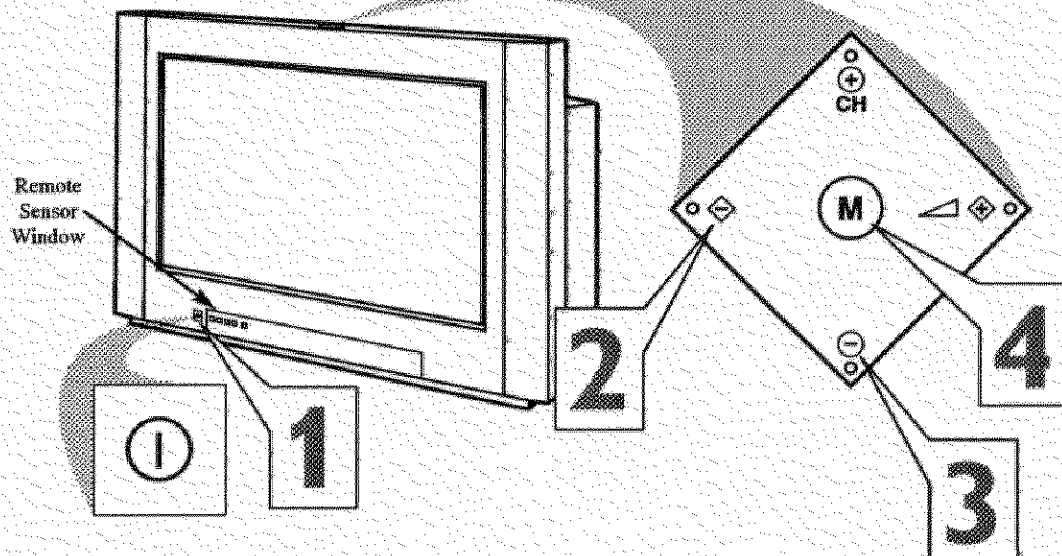

 Be sure to point the remote at the Remote Sensor window on the front of the television when using the remote control to operate the television.

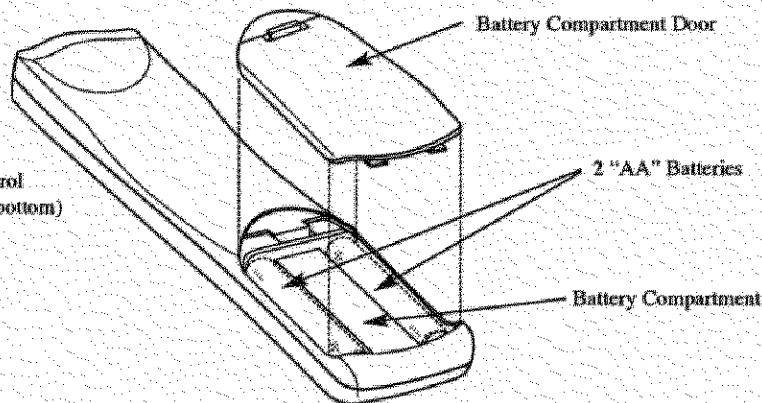


REMOTE CONTROL BATTERIES

To load the supplied batteries into the remote:

- 1 Remove the battery compartment door on the back of the remote.
- 2 Place the batteries (2-AA) in the remote. Be sure the (+) and (-) ends of the batteries line up correctly (the inside of the case is marked).
- 3 Reattach the battery compartment door.

REMOTE CONTROL BUTTONS

 - Sleep Button** - Press to set the TV to automatically turn itself OFF at a given amount of time.
- TV/VCR/ACC Mode Switch** - Slide to the TV position to control TV functions, to the VCR position to control VCR functions, or to the ACC position to control the functions of accessory devices (a cable converter, DBS, or DVD, for example).
- AV Button** - Press repeatedly to select the different signal sources connected to the A/V inputs on the TV.
- Active Control Button** - Press repeatedly to toggle the Active Control to ON or OFF. When ON, the sharpness and noise reduction will be continuously monitored.
- Rec(ord)/SAP Button** - Press to start the recording of a videotape.
- Surf Button** - Press to select previously viewed channels. You can place up to 10 channels in memory. Then by pressing the SURF button you can quickly view the select channels. (See the "Using the Channel Surf Control" section in your *Directions for Use* manual to see how to select a series of channels using the Surf button.)
- Number Buttons** - Press the number buttons to select TV channels. When selecting single-digit channels, press the number of the desired channel. The TV will pause for a few seconds and then tune to the selected channel. (Note: You can press 0, then the number also.) For channels 100 and above, first press 1 then the next two numbers of the desired channel.
- Sound Button** - Press to select an AutoSound™ control. Choose from three factory-set controls (VOICE, MUSIC, and THEATRE) and a PERSONAL to tailor the TV sound to enhance the particular type of program you are watching.
- Menu (Select) Button** - Press for the onscreen menu to appear. Pressing the menu button after menu selections are made will eliminate the menu from the display.
- Cursor Buttons (Left, Right, Up, Down)** - Press these buttons to highlight, select, and adjust items on the TV's onscreen menu.
- Volume (+) or (-) Buttons** - Press to adjust the TV sound level.
- VCR** **Buttons** - Press to rewind, stop, play, fastforward, or pause/freeze a videotape playback.
- FREEZE Button** - Press to freeze the picture on the TV screen. Press a second time to resume normal viewing. The signal being received during the time the picture is frozen will be lost. When the picture is unfrozen, the video will return to real time broadcast.

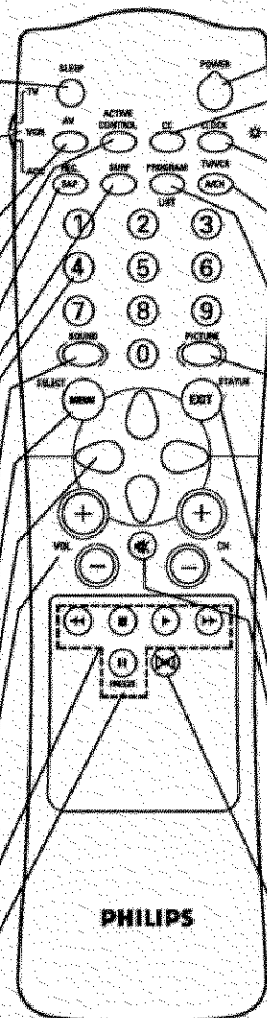

- Power Button** - Press to turn the TV ON and OFF.
- CC Button** - Press to select Closed Captioning options within the menu. (See the *Directions for Use* manual for details.)
- Light Button** - Press to back-light the buttons on the remote control.
- Clock Button** - Press the CLOCK button to access the onscreen Clock menu.
- TV/VCR (A/CH) Button** - TV/VCR - Press while in the VCR mode (the VCR indicator on the front of the VCR will light) to view the playback of a tape. Press again to place in the TV position (the VCR indicator light will go off) to view one program while recording another program. A/CH - Press to toggle between the currently viewed channel and the previously viewed channel.
- Program List Button** - Press to display a list of channel numbers and their names (see the "Tuner," "Auto Program," "Channel Edit," and "Name" sections on pages 3 and 4 for proper setup). Each channel will appear as a selectable menu item. The current channel will be highlighted by default. Only five channels will be shown onscreen at one time; press the CURSOR UP or CURSOR DOWN button to scroll the list and highlight a channel. Press the CURSOR RIGHT button to tune to the highlighted channel. Channels marked "Skipped" in the "Channel Edit" control will not appear in the list. Each channel that is being blocked by AutoLock™ will appear with a padlock icon to indicate that the channel is not viewable.
- Picture Button** - Press to select an AutoPicture™ control. Choose from four factory-set controls (MOVIES, SPORTS, WEAK SIGNAL, and MULTI MEDIA) and a PERSONAL control that you set according to your own preferences through the onscreen PICTURE menu. The four factory-set controls will tailor the TV picture so as to enhance the particular type of program you are watching, or to improve the picture of a program that has a weak signal.
- Status/Exit Button** - Press to see the current channel number on the TV screen. Also press to clear the TV screen after control adjustments.
- Channel (+) or (-) Buttons** - Press to change the tuned channel.
- Mute Button** - Press to turn the TV sound OFF. Press again to return the sound to its previous level.
- Incredible Surround** - Press to set various factory Surround Sound listening modes.



HOOKING UP THE TELEVISION

CABLE/CABLE BOX TV

 
Your Cable TV input into your home may be a single (75 ohm) cable or use a cable box decoder. In either case the connection is very simple. Follow the steps below to connect your cable signal to your new television.

Direct Cable Connections:

This connection will supply Stereo sound to the TV.

- 1 Connect the open end of the round cable that supplies the Cable Company signal to the 75Ω input on the TV. Screw it down finger tight.

Direct Cable Connection:

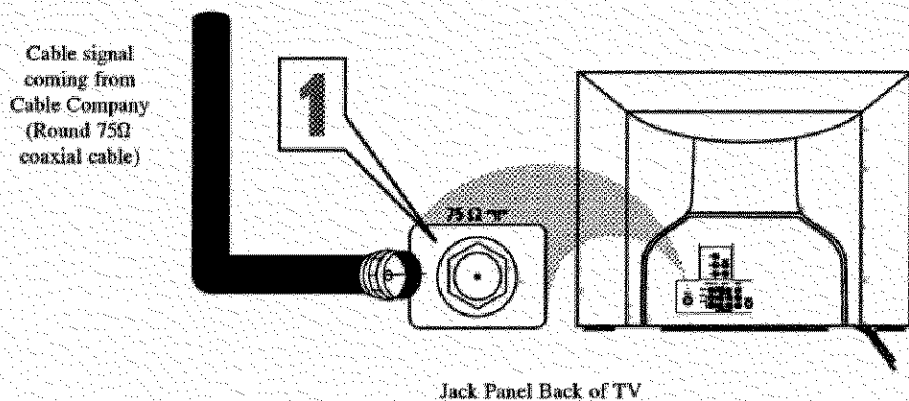


Cable Box (w/RF In/Outputs):

This connection will NOT supply Stereo sound to the TV. The sound from the cable box will be mono.

- 1 Connect the open end of the round cable that supplies the Cable Company signal to the cable signal IN(put) plug on the back of the Cable Box.
- 2 Using a separate round coaxial cable, connect one end to the OUT(put) (TO TV) plug on the back of the Cable Box.
- 3 Connect the other end of the round coaxial cable to the 75Ω input on the back of the television. Screw it down finger tight.

NOTE: Be sure to set the OUTPUT CHANNEL SWITCH on the back of the cable box to CH 3 or 4, then tune the cable box on the TV to the corresponding channel. Once tuned, change channels at the cable box, not the television.

 Cable Box with RF Inputs and Outputs Connection:

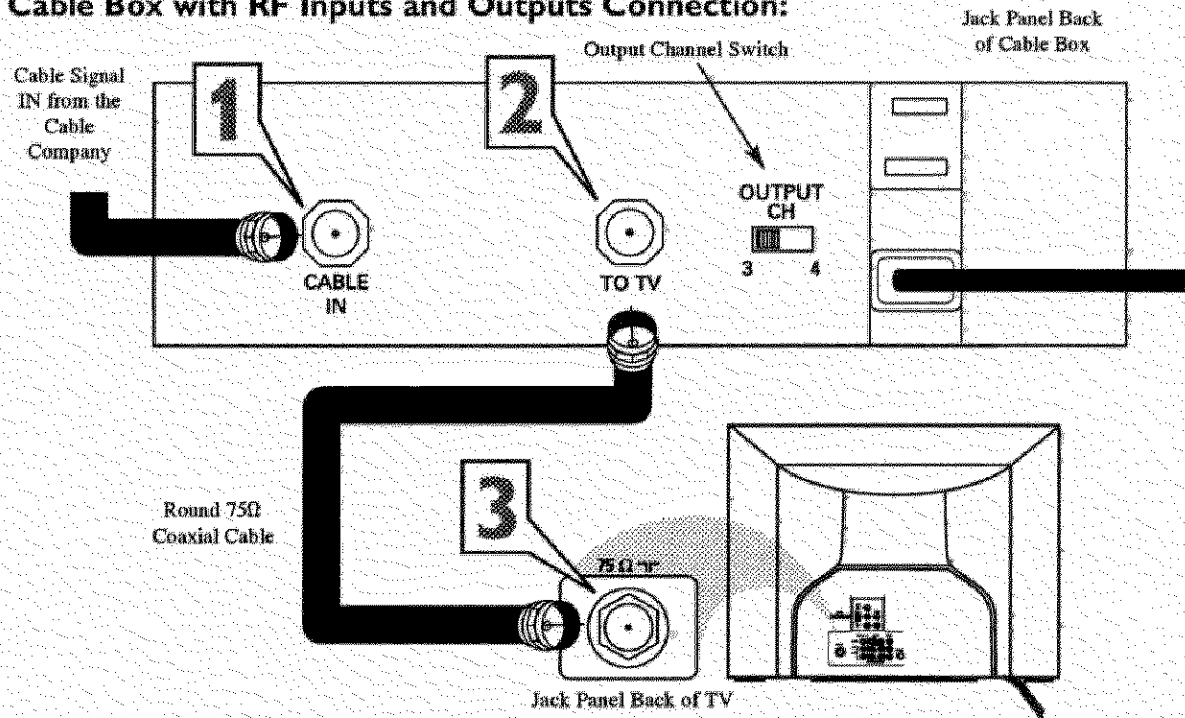


Cable Box (w/Audio/Video Outputs):

This connection will supply Stereo sound to the TV.

- 1 Connect the open end of the round cable that supplies the Cable Company signal to the cable signal IN(put) plug on the back of the Cable Box.
- 2 Using an RCA type Video Cable, connect one end of the cable to the Video (or ANT, your cable box may be labeled differently) Out jack on the cable box and the other end to the AV1 Video Input on the TV.
- 3 Using an RCA type Audio Left and Right Cable, connect one end to the left and right Audio Out L & R jacks on the cable box. Connect the other end to the AV1 Audio L & R Input jacks on the TV.

NOTE: Use the AV button on the TV remote control to tune to the AV1 channel for the cable box signal. Once tuned, change channels at the cable box, not the television. Pressing the AV button repeatedly will scroll all the AV Input channels, including the presently tuned channel.

 Cable Box with Audio/Video Outputs Connection:

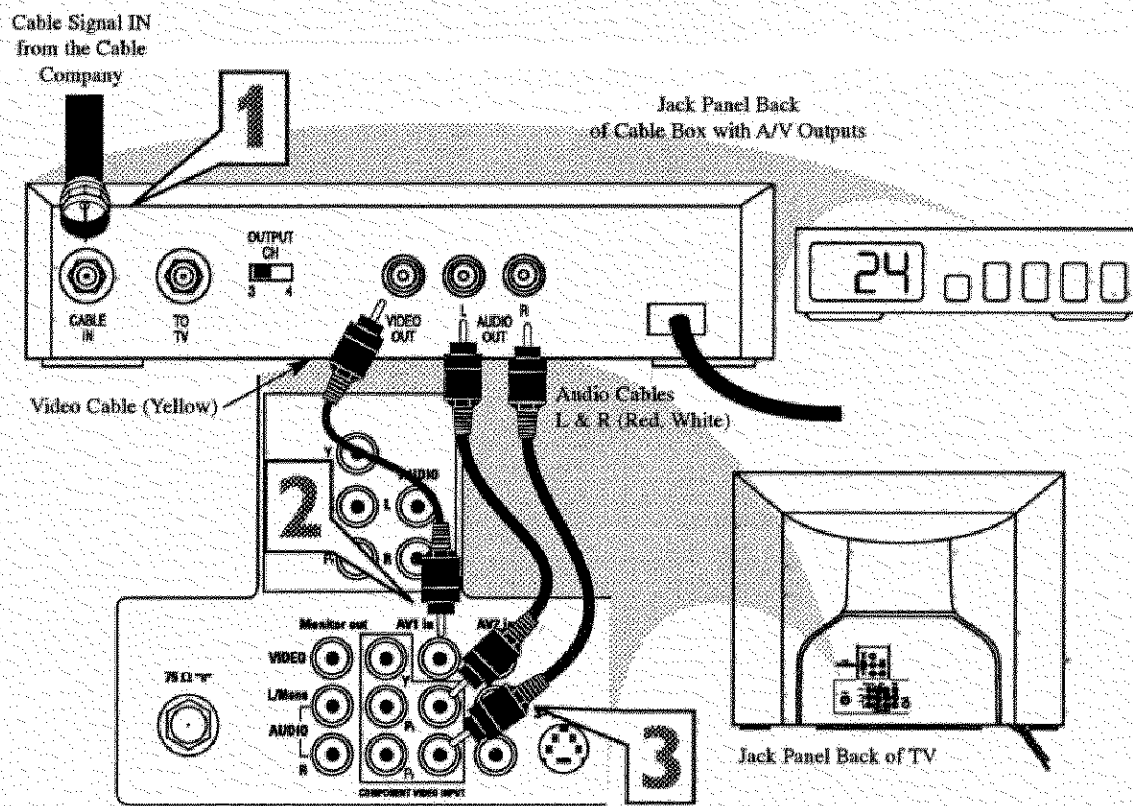


ANTENNA TV

A combination antenna receives normal broadcast channels (VHF 2-13 and UHF 14-69). Your connection is easy because there is only one 75Ω (ohm) antenna plug on the back of your TV, and that's where the antenna goes.

- 1 If your antenna has a round cable (75 ohm) on the end, then you're ready to connect it to the TV. If your antenna has flat, twin-lead wire (300 ohm), you first need to attach the antenna wires to the screws on a 300- to 75-ohm adapter.
- 2 Push the round end of the adapter (or antenna) onto the 75Ω (ohm) plug on the back of the TV. If the round end of the antenna wire is threaded, screw it down finger tight.
- 3 Plug the television in to the wall outlet and turn the TV on. Refer to the TUNER and AUTOPROGRAM features within the Directions for Use. TUNER should be set to the ANTENNA option. AUTOPROGRAM can be set to program all the available channels on your antenna signal into the television's memory.

 Antenna Connection:

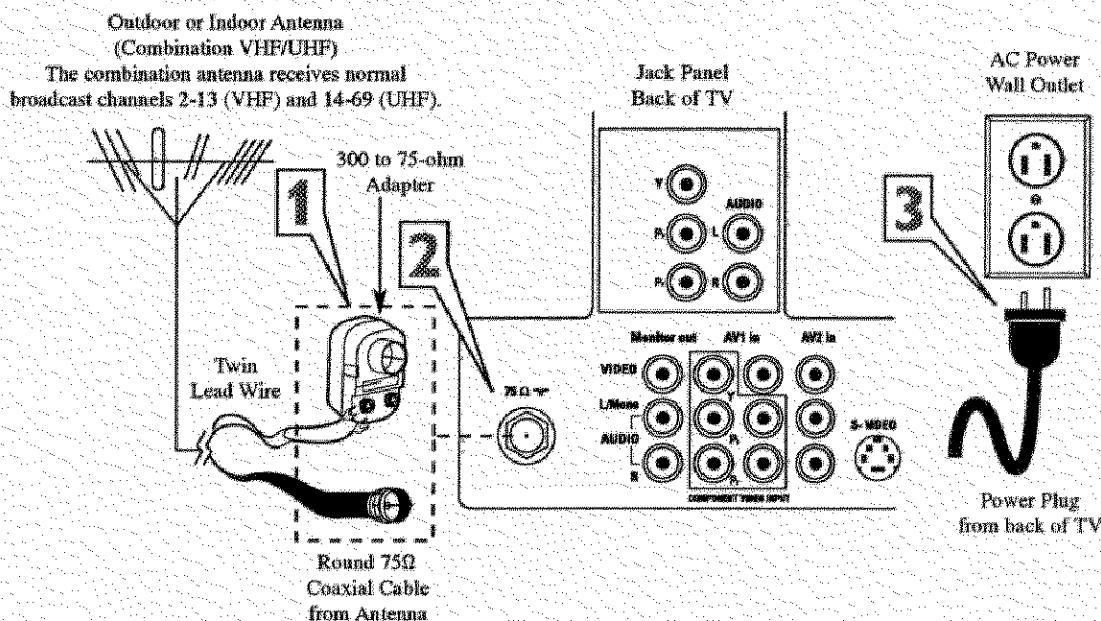


HOOKING UP THE TELEVISION

AVI & AV2 INPUTS

The TV's audio/video input jacks are for direct picture and sound connections between the TV and a VCR (or similar device) that has audio/video output jacks. Both the AV1 and AV2 Input Jack connections are shown to the right, but either one can be connected alone. Follow the easy steps below to connect your accessory device to the AV1 and AV2 in Jacks located on the back of the TV.

 - 1 Connect the VIDEO (yellow) cable to the VIDEO AV1 in (or AV2 in) jack on the back of the TV.
- 2 Connect the AUDIO (red and white) cables to the AUDIO (left and right) AV1 in (or AV2 in) jacks on the rear of the TV.
- 3 Connect the VIDEO (yellow) cable to the VIDEO OUT jack on the back of the VCR (either one or two) or accessory device being used.
- 4 Connect the AUDIO (red and white) cables to the AUDIO (left and right) OUT jacks on the rear of the VCR (either one or two) or accessory device being used.
- 5 Turn the VCR (either one or two) or accessory device and the TV ON.
- 6 Press the AV button on the remote control to select the AV1 channel for accessory device number one, or the AV2 channel for accessory device number two. AV1 or AV2 will appear in the upper left corner on the TV screen depending on the channel chosen.
- 7 With either of the VCRs (or accessory devices) ON and a prerecorded tape (CD, DVD, etc.) inserted, press the PLAY button to view the tape on the television.

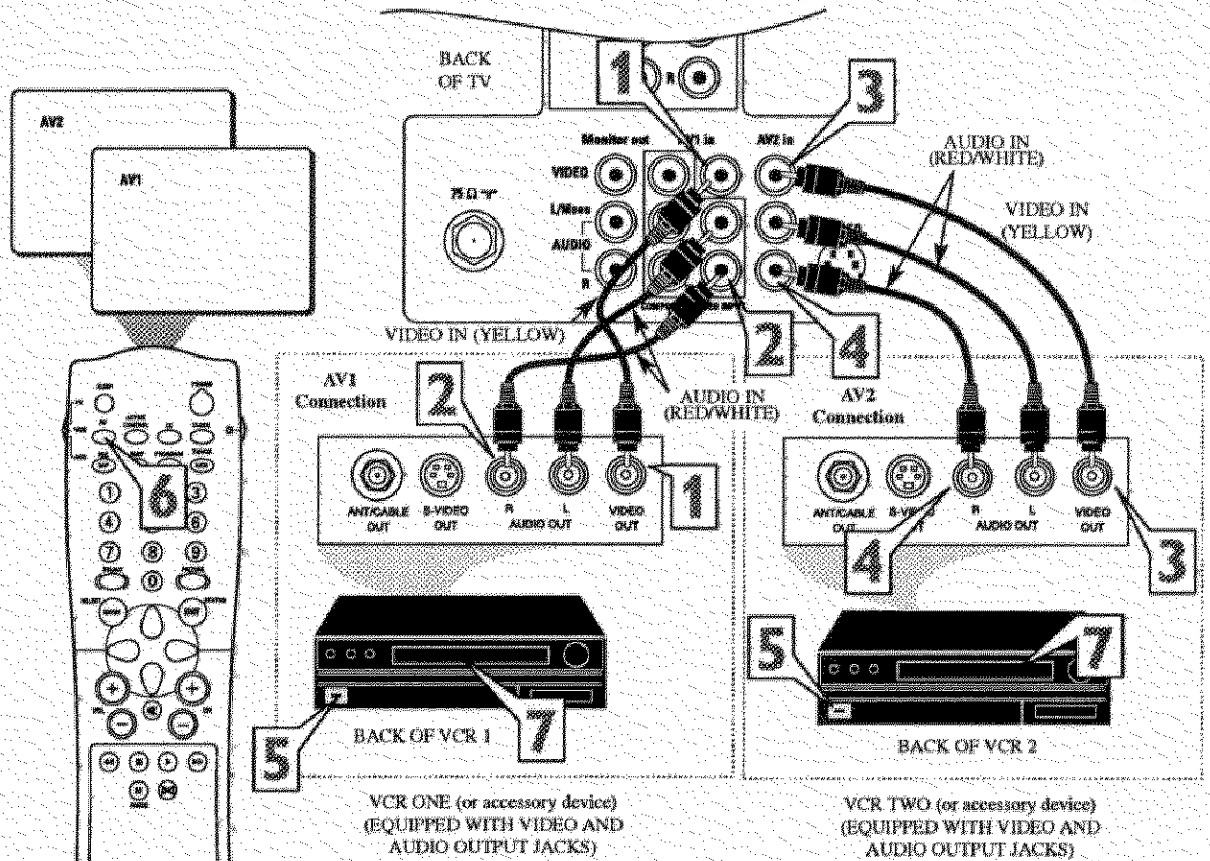

✓ CHECK IT OUT

 
Note: The Audio/Video cables needed for this connection are not supplied with your TV. Please contact your dealer or Philips at 800-531-0039 for information about purchasing the needed cables.

S-VIDEO INPUTS

The S(uper)-Video connection on the rear of the TV can provide you with better picture detail and clarity for the playback of accessory sources than the normal antenna picture connections.

NOTE: The accessory device must have an S-VIDEO OUT(put) jack in order for you to complete the connection on this page.

- 1 Connect one end of the S-VIDEO CABLE to the S-VIDEO jack on the back of the TV. Then connect one end the AUDIO (red and white) CABLES to the AV2 in AUDIO L and R(left and right) jacks on the rear of the TV.
- 2 Connect other end of the S-VIDEO CABLE to the S-VIDEO OUT jack on the back of the VCR. Then connect the other ends of the AUDIO (red and white) CABLES to the AUDIO (left and right) OUT jacks on the rear of the VCR.
- 3 Turn the VCR and the TV ON.
- 4 Press the AV button on the remote to scroll the channels until SVHS appears in the upper left corner of the TV screen.
- 5 Slide the TV/VCR/ACC switch to the VCR position.
- 6 Now your ready to place a prerecorded video tape in the VCR and press the PLAY button.

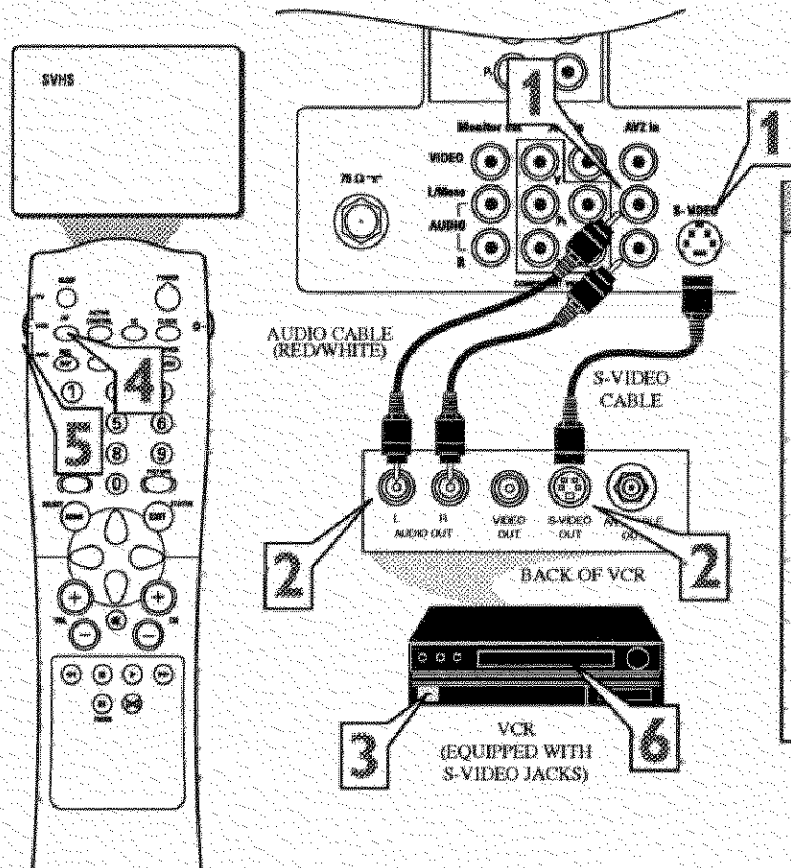

HELPFUL HINT

 
The S-VIDEO and VIDEO AV2 in(puts) are in parallel. The S-VIDEO input is dominant when in use. If separate video signals are connected to the S-VIDEO and VIDEO AV2 in(puts), the signal from the VIDEO AV2 in(put) will not be usable.

Note: The S-Video and Audio cables needed for this connection are not supplied with your TV. Please contact your dealer or Philips at 800-531-0039 for information about purchasing the needed cables.

COMPONENT VIDEO INPUTS

Component Video inputs provide for the highest possible color and picture resolution in the playback of digital signal source material, such as with DVD players. The color difference signals (Pb, Pr) and the luminance (Y) signal are connected and received separately, which allows for improved color bandwidth information (not possible when using composite video or S-Video connections).

- 1 Connect the Component (Y, Pb, Pr) Video OUT jacks from the DVD player (or similar device) to the (Y, Pb, Pr) in(put) jacks on the TV. When using the Component Video Inputs, it is best not to connect a signal to the AV1 in Video Jack.
- 2 Connect the red and white AUDIO CABLES to the Audio (left and right) output jacks on the rear of the accessory device to the Audio (L and R) AV1 in Input Jacks on the TV.
- 3 Turn the TV and the DVD (or digital accessory device) ON.
- 4 Press the AV button to scroll the available channels until CVI appears in the upper left corner of the TV screen.
- 5 Insert a DVD disc into the DVD player and press the PLAY button on the DVD Player.

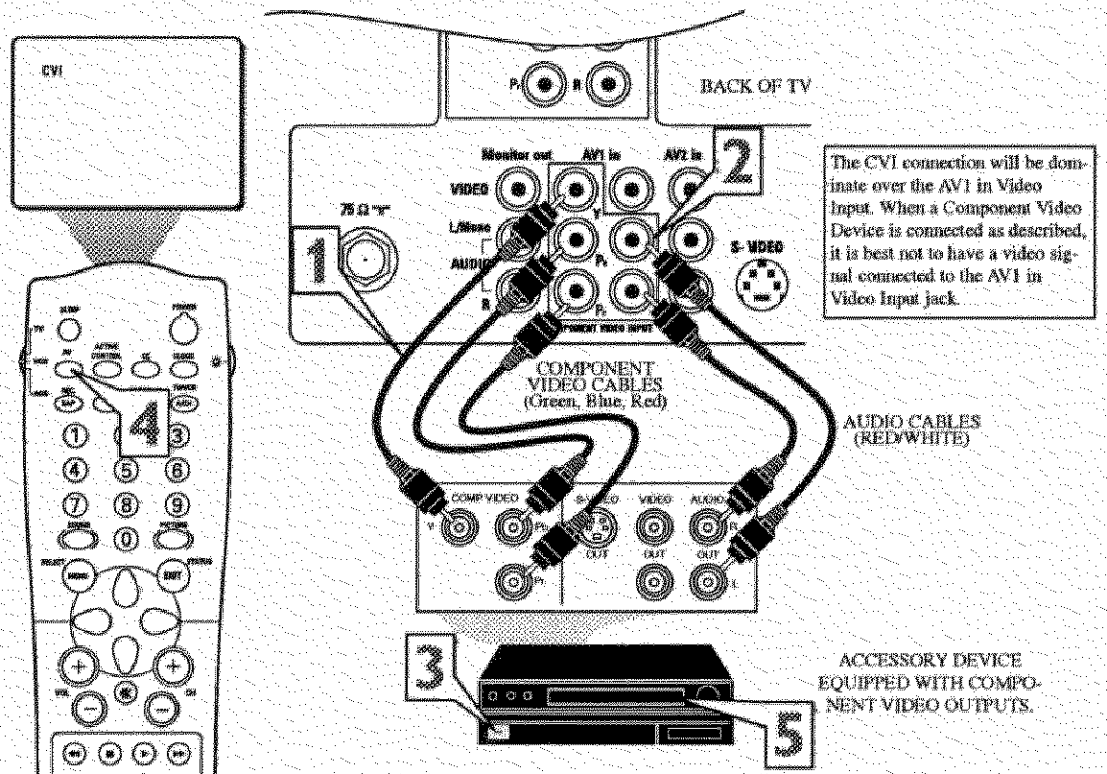

The CVI connection will be dominate over the AV1 in Video Input. When a Component Video Device is connected as described, it is best not to have a video signal connected to the AV1 in Video Input jack.

HELPFUL HINT

The description for the component video connectors may differ depending on the DVD player or accessory digital source equipment used (for example, Y, Pb, Pr; Y, B-Y, R-Y; Y, Cr, Cb). Refer to your DVD or digital accessory owner's manual for definitions and connection details.

HOOKING UP THE TELEVISION

 
AV 4 INPUTS

The AV4 Input Jacks provide Component Video Inputs at 1080i, for accessories like HD Receiver and Digital DVD Players.

Connecting a Digital device using the COMPONENT VIDEO Inputs:

- 1 Connect the Component (Y, Pb, Pr) Video OUT jacks from the DVD player (or similar device) to the (Y, Pb, Pr) AV4 in(put) jacks on the TV.
- 2 Connect the red and white AUDIO CABLES to the Audio (left and right) output jacks on the rear of the accessory device to the Audio (L and R) AV4 in(put) jacks on the TV.
- 3 Turn the TV and the DVD (or digital accessory device) ON.
- 4 Press the AV button on the remote to tune to the AV4 channel.
- 5 Press the PLAY button on the DVD (or digital accessory device) to view the program on the television.

AV4 Component Video Connection

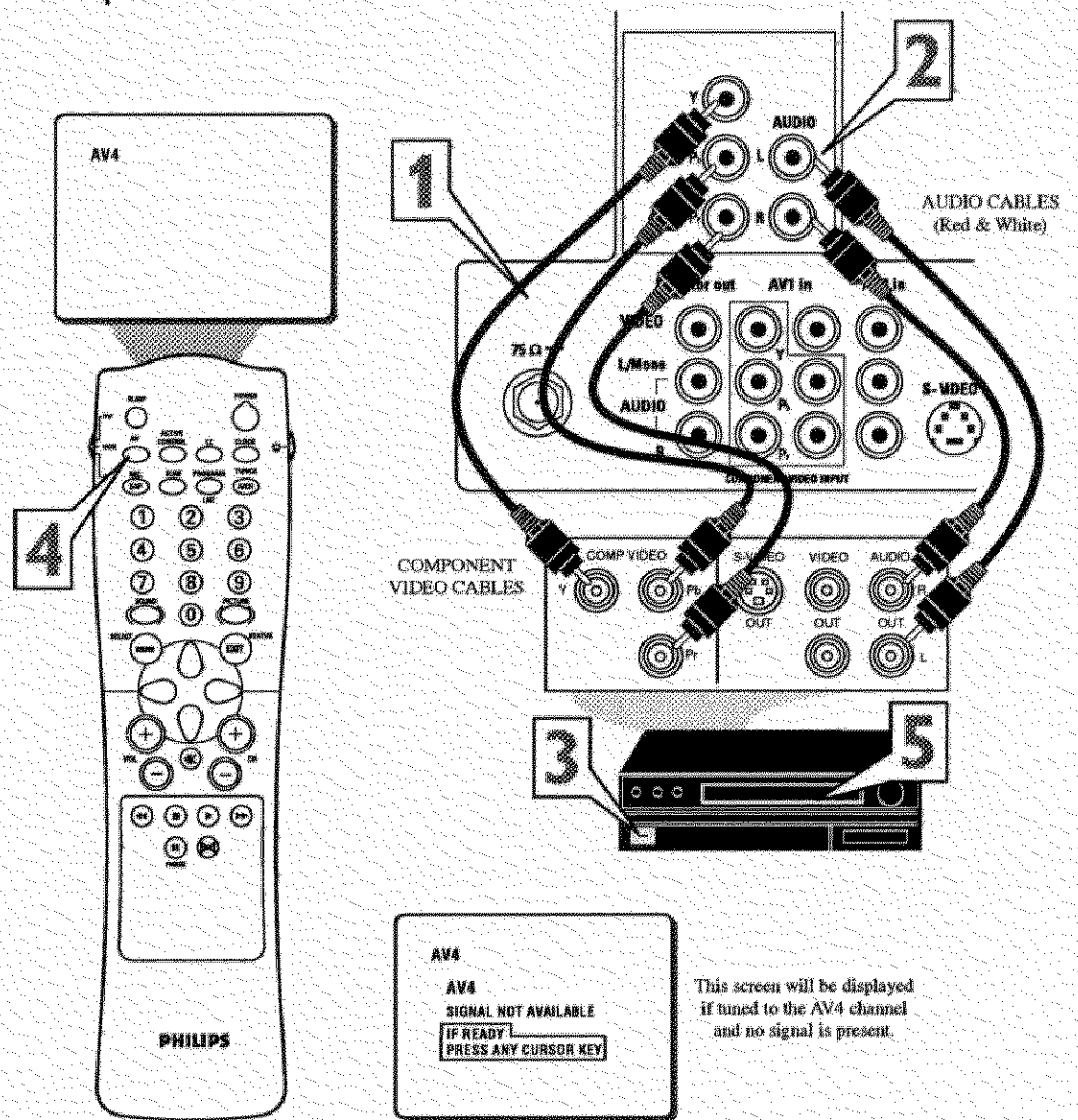

MONITOR OUTPUTS

The Monitor (Audio/Video) out jacks are great for recording with a VCR or used to connect an external audio system for better sound reproduction.

For Audio System Connection:

- 1 Connect one end of the R(ight) and L(ef) AUDIO (Monitor Out) jacks on the TV to the R and L audio input jacks on your amplifier or sound system. Set the audio system's volume to a normal listening level.
- 2 Turn the TV and audio system ON. You can now adjust the sound level coming from the audio system with the VOLUME (+) or (-) button on the TV or remote control.

 
For Second VCR Connection/Recorder:

NOTE: Refer to the previous page for the proper hookup of the first VCR. Follow the instructions on how to tune to the AV 1 channel to view a pre-recorded tape.


The following steps allow you to connect a second VCR to record the program while your watching it.

- 3 Connect one end of the yellow Video Cable to the Monitor out VIDEO plug. Connect the other end to the VIDEO IN plug on the second VCR.
- 4 Connect one end of the red and white Audio cable from the Monitor out AUDIO L and R plugs on the TV to the AUDIO IN plugs on the VCR.
- 5 Turn the Second VCR ON, insert a black VHS tape and it's ready to record what's being viewed on the TV screen.

Audio System Connection

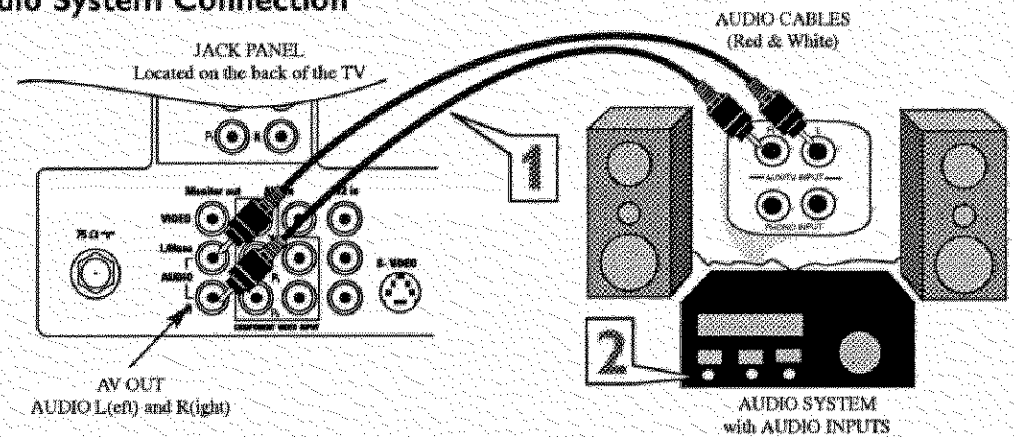


Second VCR Connection/Recorder

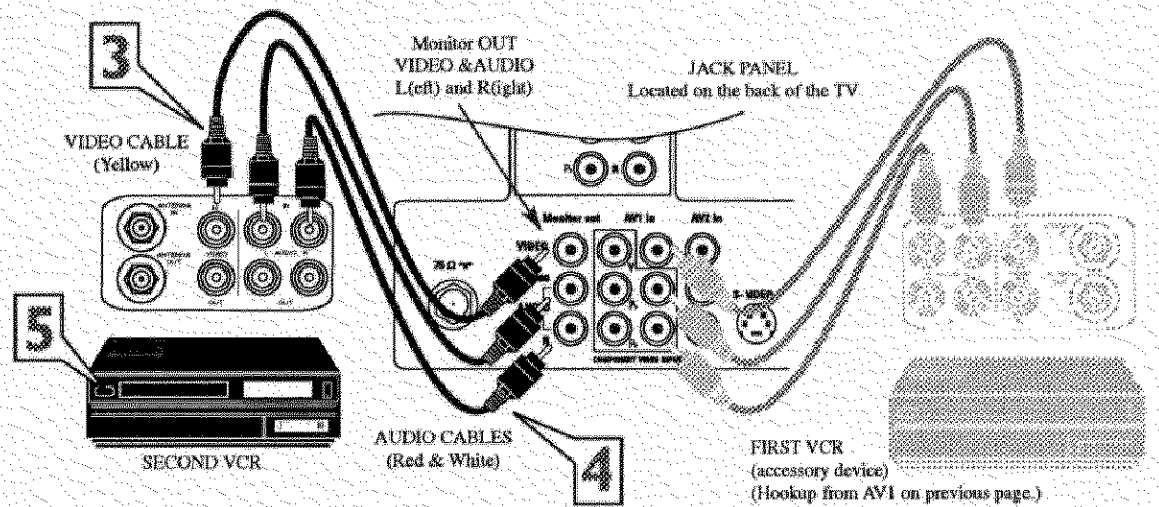 

SIDE (AV3) AUDIO/VIDEO INPUTS

Audio and Video Side Inputs are available for a quick connection of a VCR, to playback video from an accessory device.

 - 1 Connect the video (yellow) cable from the Video output on the accessory device to the Video (yellow) Input located on the SIDE of the TV.
- 2 Connect the audio cable (red and white) from the Audio Left and Right Outputs on the accessory device to the Audio Left and right Inputs on the SIDE of the television.
- 3 Turn the TV and the accessory device ON.
- 4 Press the AV button on the remote control to tune the TV to the side input jacks. "AV3" will appear on the TV screen.
- 5 Press the PLAY button on the accessory device to view playback, or to access the accessory device (camera, gaming unit, etc.).

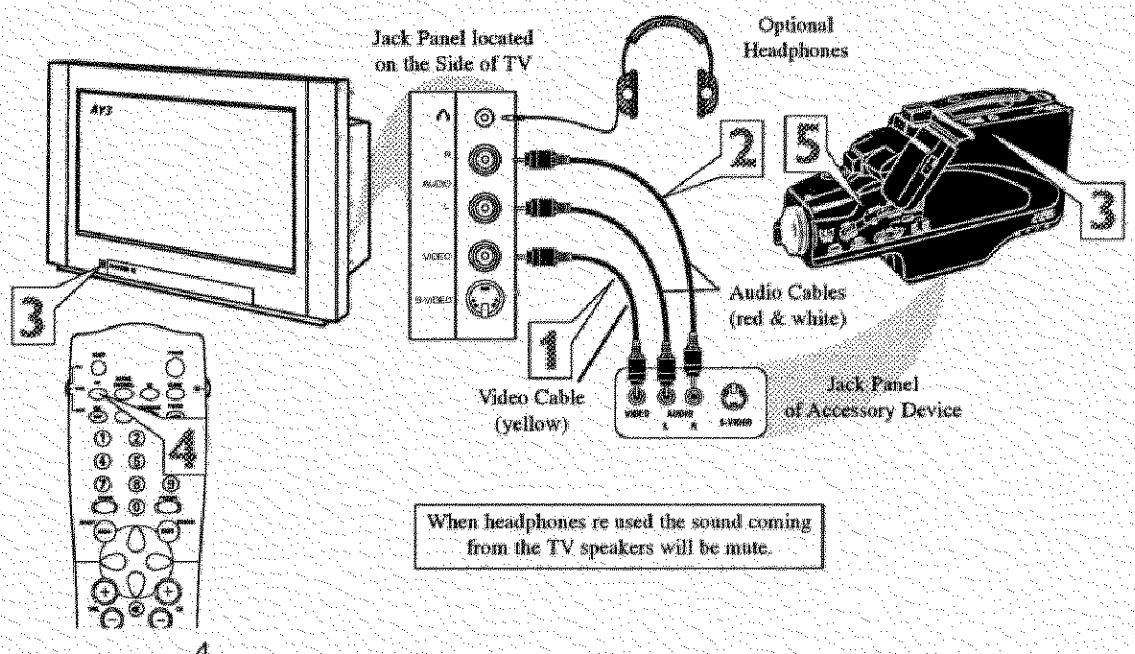

30" Widescreen HDTV Monitor

Highlights

- Two HD Component inputs (1080i/480p)
- 30" Real Flat™ invar picture tube
- Active Control™ continuously optimizes picture
- 6 Widescreen viewing modes plus Auto
- Eye Fidelity™ progressive/interlaced line doubling
- Scan Velocity Modulation

 


Features

- Side stereo AV in with S-Video and headphone jack
- Rear stereo AV inputs/outputs with CVI and S-Video
- 3D digital comb filter for finest picture detail
- 20 watt audio with Incredible Surround™ sound
- Universal remote controller

AutoFeaturePak

- AutoPicture™
- AutoSound™
- AutoMute™
- AutoLock™

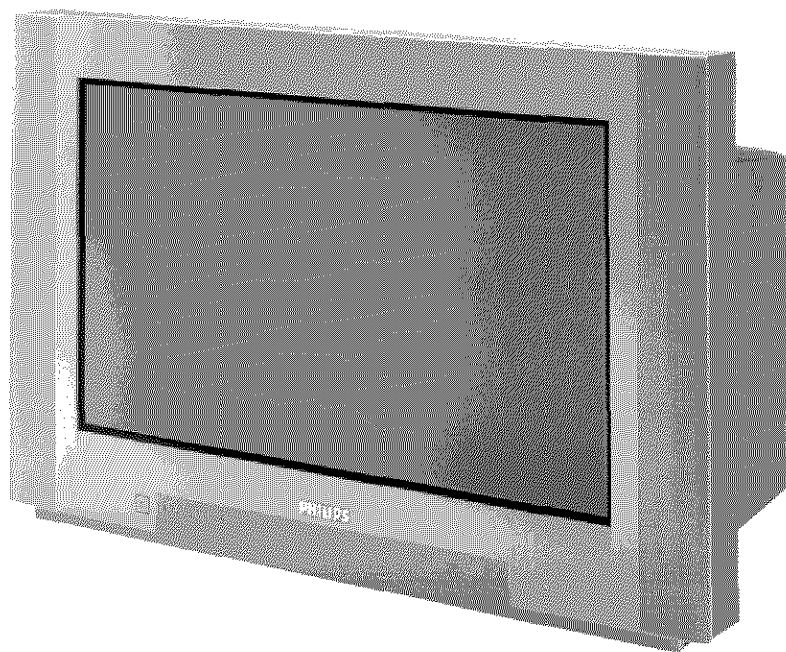

Shown above with optional matching TC309815 stand.

PHILIPS

30" HD Series Television



Technical specifications

Picture Quality

• High Definition picture

True high definition 1080i picture with 6 widescreen plus full-screen (4:3) display modes.

• 30" Real Flat™ invar picture tube

The flatter tube provides a wider viewing angle while minimizing reflections for the best picture possible. The special alloy invar shadow mask helps maintain tighter focus and eliminate "color blooming" as compared to standard tubes.

• Active Control™

Noise and sharpness improvement settings are continuously optimized 60x second.

• Eye Fidelity™

Provides the viewer the choice between progressive scan (480p) or a line doubled (1050i) picture when viewing non-HD programming.

• 3D Y/C digital comb filter

Separates chrominance (color) from luminance (brightness) information for independent processing to improve picture resolution and minimize distortion.

• Scan Velocity Modulation

Varies the electron beam speed for a more finely rendered picture with improved sharpness.



Ease of Use

• Universal Remote controller

Controls all TV features plus virtually all brands of VCR, DVD, Cable TV converters and Digital Broadcast Satellite receivers.

• AutoPicture™

Instantly optimizes brightness, contrast, color, tint and sharpness settings with picture presets for Movies, Sports, Video games and weak signal reception.

• AutoSound™

Audio volume levels are automatically adjusted and optimized with the choice of three presets: Movies, Voice, Music plus an adjustable Personal setting.

• AutoMute™

Automatically activates the closed-captioning when the MUTE button is pressed.

• AutoLock™

Protects young children from objectionable programming with V-chip technology.

Any-Button-On Top Controls

Channel Auto-Programming

English/Spanish/French menu

240-minute Sleep Timer

Closed Caption viewing

This television receiver provides display of television closed captioning in accordance with 15.119 of the FCC rules.

➤ Optional TC309815 television stand

Provides the ideal solution to TV and accessory placement with an emphasis on high design and safety.

Sound Quality

• 20 watt Stereo Sound system

Receives stereo broadcasts for high power performance through dual speakers with exciting and lifelike sound.

• Incredible Surround™ sound

Creates a soundstage in front and around the viewer for more immersing home entertainment experience, utilizing the built-in speakers only.

Connectivity

• Two HD Component inputs (1080i/480p)

Easy connections for HD set-top decoders and Progressive Scan DVD players.

• Component Video inputs

The best possible input for high resolution analog sources such as DVD, STB and game consoles for superb color purity, detail and reduced color noise, surpassing even S-Video.

• S-Video input (Side & Rear)

The ideal way to connect high resolution picture sources like DVD, Digital Satellite & Cable TV and video games consoles for even better detail than standard Video inputs.

• Rear stereo AV inputs and outputs

 
Connect a VCR, DVD, Satellite and video game through S-Video or stereo AV connection. Audio/video output jacks make adding a home theatre surround sound even easier!

• Side stereo AV in + headphone jack

Digital cameras and video games can be connected quickly and easily to S-Video or stereo AV inputs. Connect your headphones (optional) for convenient private listening.



Side AV + Headphone
Inputs/Outputs

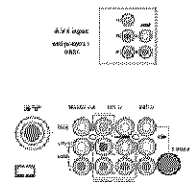

Rear AV

UPC:	0 37849 93574 3
Product Dimensions:	35"W x 23.5"H x 21.5"D
Product Weight:	123 lbs.
Carton Dimensions:	39.5"W x 28.5"H x 28"D
Carton Weight:	140 lbs.
Carton contains:	Universal Remote Control w/ batteries, operating instructions, warranty information

Active Control™, AutoSound™, AutoPicture™, AutoMute™, AutoLock™, Real Flat™, Incredible Surround™ are trademarks of Philips Consumer Electronics Company.

Printed in the U.S.A.

©2003 Philips Consumer Electronics Company

www.philipsusa.com or AOL keyword: Philips

Specifications subject to change without notice.

