



Before Operating Your Washer

Read your washer Owner's Guide. It contains important safety and warranty information. It also contains many suggestions for obtaining the best results from your washer.

Operating Steps

Read and follow **Washing Procedures** in your Owner's Guide. It provides detailed information for preparing the wash load and choosing control settings to ensure best washing results. **Washing Products** in your Owner's Guide provides detailed information for choosing effective products and using them safely.

1. Sort laundry into loads that can be washed together.
2. Prepare items for washing.
3. Pretreat stains and heavy soil.

4. Add the measured amount of detergent to the washer before adding the laundry load.
5. If desired, add liquid bleach to the Bleach Dispenser.
6. Add the laundry load to the wash tub.
7. Set washer controls according to type, size, and soil level of each load:

Water Temperature
Water Level

See **Controls** and the **Control Settings Chart** (reverse side) for more information on suggested water temperatures and water level.

8. Push in the cycle selector knob and turn it clockwise to the desired wash cycle. See **Cycle Selection** for cycle descriptions

and the **Control Settings Chart** for suggested cycle settings.

9. Start the washer by closing the lid and pulling out the cycle selector knob. The washer will operate with the lid open; however, the tub will not spin unless the lid is closed. To stop the washer, push in the cycle selector knob. To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart the washer.
10. If desired, add liquid fabric softener during the final rinse.
11. Remove items when the cycle is completed. As a safety measure, the lid will AUTOMATICALLY LOCK during the spin

portion of each cycle. The lid will automatically unlock approximately 1 minute after the tub stops spinning.

Cycle Selection

For best results, follow the fabric care label directions on items to be washed. Check the **Control Settings Chart** to the right if the care label is not available.

The Regular, Permanent Press and Knits & Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and a final spin.

Regular Cycle

Up to 15 minutes of normal agitation followed by a fast spin for most fabrics.

Permanent Press Cycle

Up to 12 minutes of normal agitation followed by a slow spin for cottons and blends with a no-iron finish.

Knits & Delicates Cycle

Up to 6 minutes of gentle agitation followed by a slow spin for knit and delicate items.

Controls

Select the desired control settings according to load size, fabric type and degree of soiling. See the **Control Settings Chart** to the right or **Washing Procedures** in your Owner's Guide for detailed information on choosing control settings.

WATER TEMPERATURE determines water temperatures for washing and rinsing.

WATER LEVEL determines the amount of wash and rinse water for the wash load. To increase

Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and cycle setting. **This is only a general guide. For best results, follow fabric care label directions on specific items to be washed.**

Fabric Type	Temperature (Wash / Rinse)		Wash Cycle	Cycle Setting
REGULAR Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular	15
Lightly Soiled Colorfast & White Cotton & Linen	Warm	Cold	Regular	8 to 12
Noncolorfast Bright Colors All Fabrics	Cold	Cold	Regular	4 to 8
PERMANENT PRESS White or Heavily Soiled	Hot or Warm	Cold	Permanent Press	8 to 12
Colored or Lightly Soiled	Warm or Cold	Cold	Permanent Press	4 to 8
KNITS/DELICATES Knitted Fabrics Delicates	Cold Cold	Cold Cold	Knits & Delicates Knits & Delicates	3 to 6 3 to 6
Washable Woolens	Warm	Warm	Knits & Delicates	3 to 6