


Operator's Manual

CRAFTSMAN®

POWER PLANER

Double Insulated

Model No.
315.173700

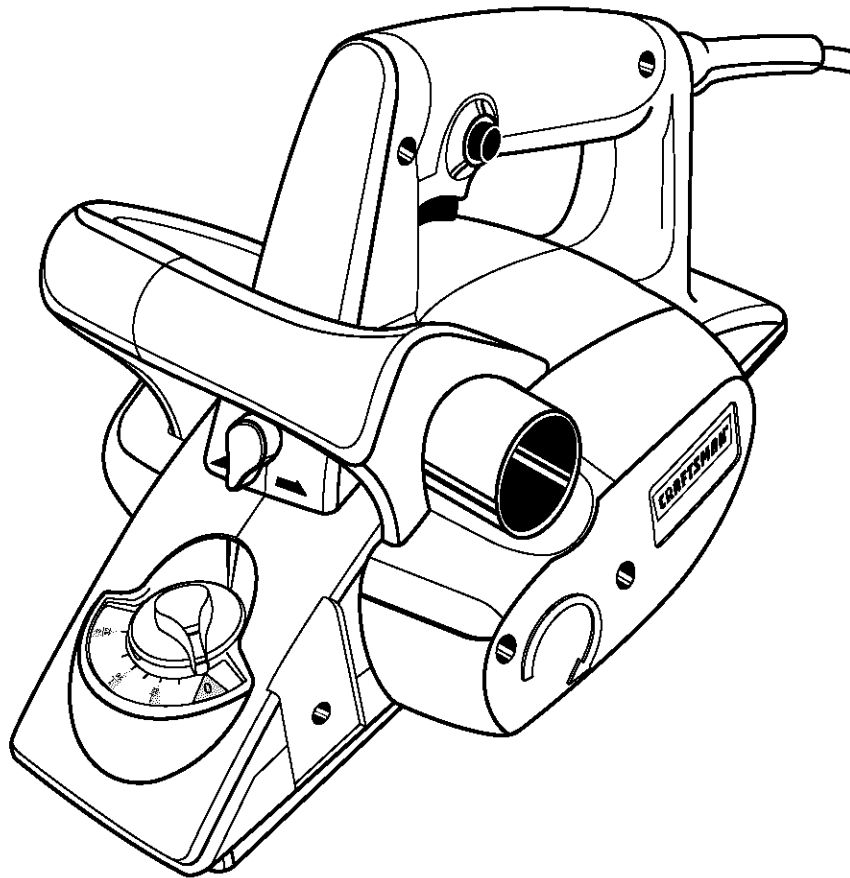

**Save this manual
for future reference.**

⚠ WARNING: To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

Customer Help Line: 1-800-932-3188

Sears, Roebuck and Co., 3333 Beverly Rd., Hoffman Estates, IL 60179 USA

Visit the Craftsman Web page: www.sears.com/craftsman



TABLE OF CONTENTS

■ Warranty	2
■ Introduction	2
■ General Safety Rules.....	3-4
■ Specific Safety Rules.....	4
■ Symbols.....	5-6
■ Electrical.....	7
■ Features.....	7-8
■ Unpacking.....	9
■ Applications	9
■ Adjustments.....	10
■ Operation.....	11-13
■ Maintenance	14-16
■ Exploded View and Repair Parts List.....	18-19
■ Customer Service Information	20

WARRANTY

FULL ONE YEAR WARRANTY ON CRAFTSMAN POWER PLANER

If this **CRAFTSMAN** tool fails to give complete satisfaction within one year from the date of purchase, **RETURN IT TO THE NEAREST SEARS STORE IN THE UNITED STATES**, and Sears will repair it, free of charge.

If this **CRAFTSMAN** tool is used for commercial or rental purposes, this warranty applies for only 90 days from the date of purchase.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., Dept. 817 WA, Hoffman Estates, IL 60179

INTRODUCTION

Your tool has many features for making the use of this product more pleasant and enjoyable. Safety, performance, and dependability have been given top priority in the design of this product making it easy to maintain and operate.

GENERAL SAFETY RULES


⚠ WARNING: Read and understand all instructions. Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS

WORK AREA

- **Keep your work area clean and well lit.** Cluttered benches and dark areas invite accidents.
- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.** Power tools may create sparks which may ignite the dust or fumes.
- **Keep bystanders, children, and visitors away while operating a power tool.** Distractions can cause you to lose control.

ELECTRICAL SAFETY

- **Double insulated tools are equipped with a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a polarized outlet. Do not change the plug in any way.** Double insulation eliminates the need for the three-wire grounded  power cord and grounded power supply system.
- **Avoid body contact with grounded surfaces, such as pipes, radiators, ranges, and refrigerators.** There is an increased risk of electric shock if your body is grounded.
- **Don't expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- **Do not abuse the cord. Never use the cord to carry the tools or pull the plug from an outlet. Keep cord away from heat, oil, sharp edges, or moving parts. Replace damaged cords immediately.** Damaged cords increase the risk of electric shock.
- **When operating a power tool outside, use an outdoor extension cord marked "W-A" or "W".** These cords are rated for outdoor use and reduce the risk of electric shock.

PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- **Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts.** Loose clothes, jewelry, or long hair can be caught in moving parts.

- **Avoid accidental starting. Be sure switch is off before plugging in.** Carrying tools with your finger on the switch or plugging in tools that have the switch on, invites accidents.
- **Remove adjusting keys or wrenches before turning the tool on.** A wrench or a key that is left attached to a rotating part of the tool may result in personal injury.
- **Do not overreach. Keep proper footing and balance at all times.** Proper footing and balance enables better control of the tool in unexpected situations. Do not use on a ladder or unstable support.
- **Use safety equipment. Always wear eye protection.** Dust mask, non-skid safety shoes, hard hat, or hearing protection must be used for appropriate conditions.

TOOL USE AND CARE

- **Use clamps or other practical way to secure and support the workpiece to a stable platform.** Holding the work by hand or against your body is unstable and may lead to loss of control.
- **Do not force tool. Use the correct tool for your application.** The correct tool will do the job better and safer at the rate for which it is designed.
- **Do not use tool if switch does not turn it on or off.** Any tool that cannot be controlled with the switch is dangerous and must be repaired.
- **Disconnect the plug from power source before making any adjustments, changing accessories, or storing the tool.** Such preventive safety measures reduce the risk of starting the tool accidentally.
- **Store idle tools out of the reach of children and other untrained persons.** Tools are dangerous in the hands of untrained users.
- **Maintain tools with care. Keep cutting tools sharp and clean.** Properly maintained tools with sharp cutting edges are less likely to bind and are easier to control.
- **Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the tool's operation. If damaged, have the tool serviced before using.** Many accidents are caused by poorly maintained tools.
- **Use only accessories that are recommended by the manufacturer for your model.** Accessories that may be suitable for one tool, may become hazardous when used on another tool.
- **Use only accessories that are recommended by the manufacturer for your model.** Accessories that may be suitable for one tool may create a risk of injury when used on another tool.
- **Keep the tool and its handle dry, clean and free from oil and grease.** Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any strong solvents to clean your tool. Following this rule will reduce the risk of loss of control and deterioration of the enclosure plastic.

GENERAL SAFETY RULES

SERVICE

- **Tool service must be performed only by qualified repair personnel.** Service or maintenance performed by unqualified personnel could result in a risk of injury.
- **When servicing a tool, use only identical replacement parts. Follow instructions in the Maintenance section of this manual.** Use of unauthorized parts or failure to follow Maintenance Instructions may create a risk of shock or injury.

SPECIFIC SAFETY RULES

- **Hold tool by insulated gripping surfaces when performing an operation where the cutting tool may contact hidden wiring or its own cord.** Contact with a “live” wire will make exposed metal parts of the cutting tool “live” and shock the operator.

ADDITIONAL SAFETY RULES

- **Know your power tool. Read operator’s manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this tool.** Following this rule will reduce the risk of electric shock, fire, or serious injury.
- **Always wear safety glasses. Everyday eyeglasses have only impact-resistant lenses; they are NOT safety glasses.** Following this rule will reduce the risk of serious personal injury.
- **Protect your lungs. Wear a face or dust mask if the operation is dusty.** Following this rule will reduce the risk of serious personal injury.
- **Protect your hearing. Wear hearing protection during extended periods of operation.** Following this rule will reduce the risk of serious personal injury.
- **Inspect tool cords periodically and, if damaged, have repaired at your nearest Authorized Service Center. Constantly stay aware of cord location.** Following this rule will reduce the risk of electric shock or fire.
- **Check damaged parts. Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center.** Following this rule will reduce the risk of shock, fire, or serious injury.
- **Do not abuse cord. Never carry the tool by the cord or yank it to disconnect it from the receptacle. Keep cord away from heat, oil, and sharp edges.** Following this rule will reduce the risk of electric shock or fire.
- **Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. A wire gage size (A.W.G.) of at least 14 is recommended for an extension cord 50 feet or less in length. A cord exceeding 100 feet is not recommended. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.** An undersized cord will cause a drop in line voltage resulting in loss of power and overheating.
- **Inspect for and remove all nails from lumber before using this tool.** Following this rule will reduce the risk of serious personal injury.
- **Drugs, alcohol, medication. Do not operate tool while under the influence of drugs, alcohol, or any medication.** Following this rule will reduce the risk of electric shock, fire, or serious personal injury.
- **Save these instructions.** Refer to them frequently and use them to instruct others who may use this tool. If you loan someone this tool, loan them these instructions also.

WARNING:










Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.




SYMBOLS

Some of the following symbols may be used on this tool. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the tool better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watt	Power
min	Minutes	Time
~	Alternating Current	Type of current
=	Direct Current	Type or a characteristic of current
n_0	No Load Speed	Rotational speed, at no load
	Class II Construction	Double-insulated construction
.../min	Per Minute	Revolutions, strokes, surface speed, orbits etc., per minute
	Wet Conditions Alert	Do not expose to rain or use in damp locations.
	Read The Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye Protection	Always wear safety goggles or safety glasses with side shields and a full face shield when operating this product.
	Safety Alert	Precautions that involve your safety.
	No Hands Symbol	Failure to keep your hands away from the blade will result in serious personal injury.
	No Hands Symbol	Failure to keep your hands away from the blade will result in serious personal injury.
	No Hands Symbol	Failure to keep your hands away from the blade will result in serious personal injury.
	No Hands Symbol	Failure to keep your hands away from the blade will result in serious personal injury.

SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a potentially hazardous situation, which, if not avoided, could result in Death or serious injury.
	CAUTION:	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION:	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

SERVICE

Servicing requires extreme care and knowledge and should be performed only by a qualified service technician. For service we suggest you return the product to your nearest **AUTHORIZED SERVICE CENTER** for repair. When servicing, use only identical replacement parts.

WARNING:

Observe all normal safety precautions related to avoiding electrical shock.

WARNING:

To avoid serious personal injury, do not attempt to use this product until you read thoroughly and understand completely the operator's manual. Save this operator's manual and review frequently for continuing safe operation and instructing others who may use this product.

WARNING:



The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and a full face shield when needed. We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields. Always use eye protection which is marked to comply with ANSI Z87.1.


SAVE THESE INSTRUCTIONS

ELECTRICAL

DOUBLE INSULATION

Double insulation is a concept in safety in electric power tools, which eliminates the need for the usual three-wire grounded power cord. All exposed metal parts are isolated from the internal metal motor components with protecting insulation. Double insulated tools do not need to be grounded.

Important: Servicing of a tool with double insulation requires extreme care and knowledge of the system and should be performed only by a qualified service technician. For service, we suggest you return the tool to your nearest authorized service center for repair. When servicing, use only identical Craftsman replacement parts.

 **WARNING:** The double insulated system is intended to protect the user from shock resulting from a break in the tool's internal wiring. Observe all normal safety precautions to avoid electrical shock.

ELECTRICAL CONNECTION


This tool has a precision built electric motor. **It should be connected to a power supply that is 120 volts, 60 Hz, AC only (normal household current).** Do not operate this tool on direct current (DC). A substantial voltage drop will cause a loss of power and the motor will overheat. If your tool does not operate when plugged into an outlet, double-check the power supply.

EXTENSION CORDS

The use of any extension cord will cause some loss of power. To keep the loss to a minimum and to prevent tool overheating, use an extension cord that is heavy enough to carry the current the tool will draw.

A wire gage size (A.W.G.) of at least **14** is recommended for an extension cord 100 feet or less in length. When working outdoors, use an extension cord that is suitable for outdoor use. This type of cord is designated with "WA" on the cord's jacket.

CAUTION: Keep extension cords clear of the working area. While you are working with a power tool, position the cord so that it will not get caught on lumber, tools, or other obstructions.

 **WARNING:** Check extension cords before each use. If damaged, replace them immediately. Never use a damaged cord with this tool. Touching the damaged area could cause serious injury due to electrical shock.

Extension cords suitable for use with your tool are available at your nearest Sears retail store.

FEATURES

SPECIFICATIONS:

Maximum Planing Width..... 3-1/4 in. (82 mm)
Maximum Planing Depth 3/32 in. (2.4 mm)
Maximum Rabbet Depth..... 7/16 in. (11.1 mm)

Input..... 120 Volts, 60 Hz, AC only, 5 Amps
No Load Speed..... 16,000/min
Power Cord..... 10 ft. (3 m)
Net Weight..... 6 lbs. (2.7 kg.)

FEATURES

Before using this tool, familiarize yourself with all operating features and safety requirements. However, do not let familiarity with the tool make you careless.

⚠ WARNING: Exercise caution when using this tool. Careless actions, for even a fraction of a second, can result in serious personal injury.

Your new tool is equipped with the following features. See Figure 1.

SWITCH

The planer has a conveniently located trigger switch.

LOCK-OFF

The lock-off button locks the switch in the **OFF** position when the switch is released.

DEPTH ADJUSTMENT

Adjust the planing depth from 0 to 3/32 in. (0 to 2.4 mm) in 1/64 in. (0.4 mm) increments.

⚠ WARNING: Do not allow familiarity with your tool to make you careless. Remember that a careless fraction of a second is sufficient to inflict severe injury.

EDGE GUIDE/RABBET GUIDE

The guide included allows you to plane edges and make rabbet cuts.

DUST BAG

The dust bag attaches to the planer and helps keep the work area free of dust and debris.

SURFACE GUARD

The surface guard allows you to set the planer down on a workpiece or clear table area without damaging the workpiece or the blades.

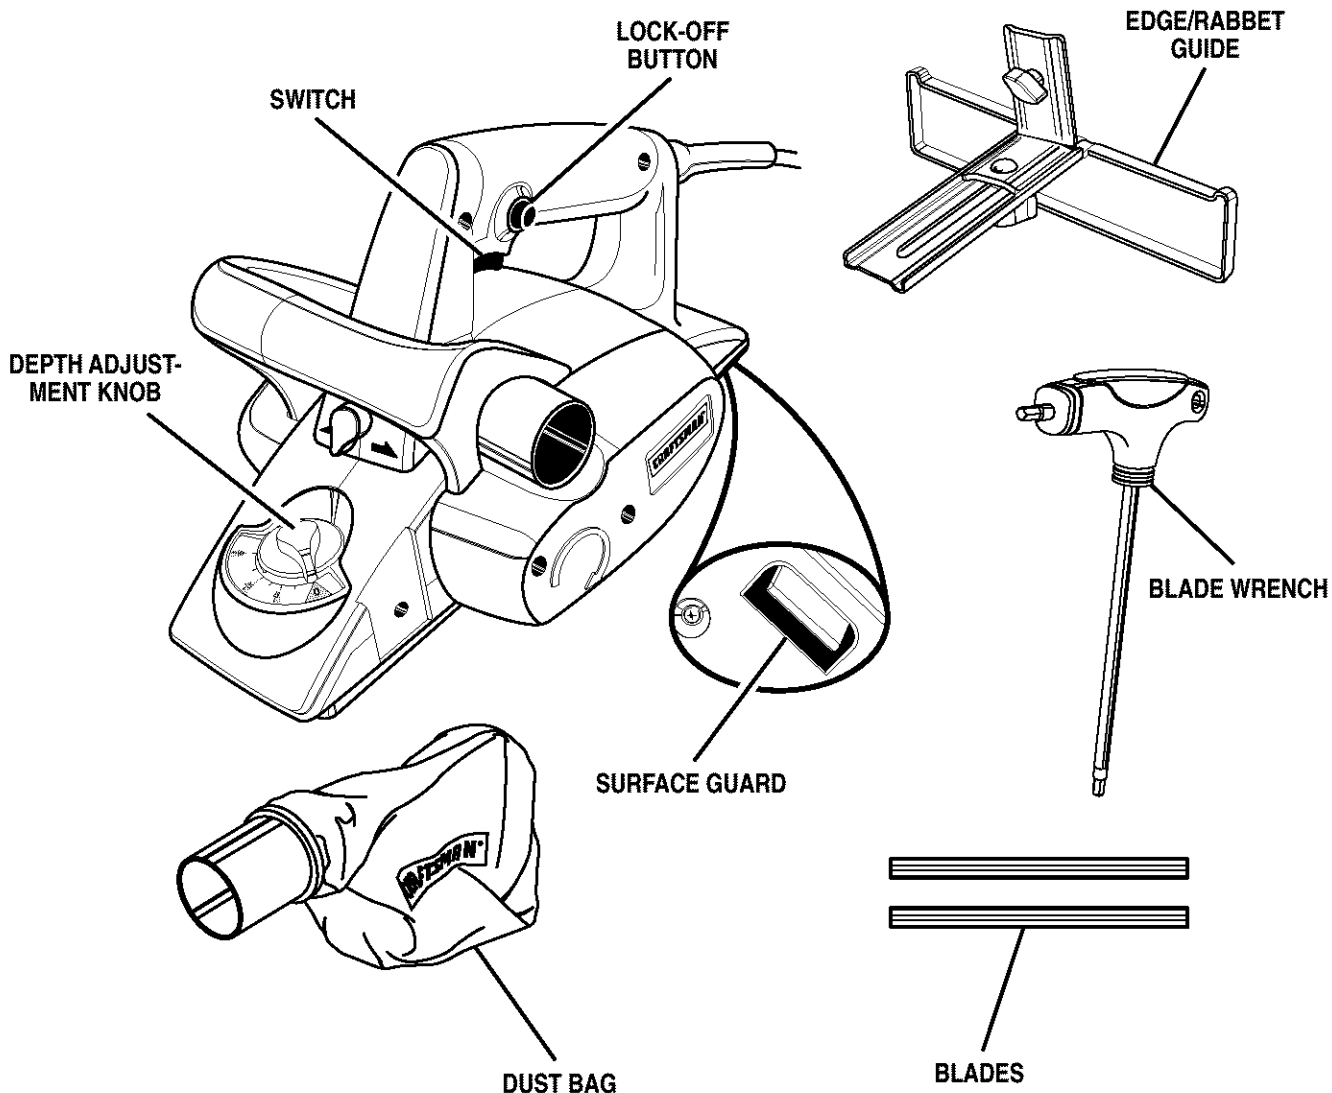


Fig. 1

UNPACKING


INSTRUCTIONS

Your tool has been shipped completely assembled.

- Carefully remove the tool and the accessories from the box.
- Make sure that all items listed in the packing list are included.
- Inspect the tool carefully to be sure no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the tool.
- If any parts are damaged or missing, please call 1-800-932-3188 for assistance.

PACKING LIST

Power Planer
Extra set of Blades
Blade Wrench
Edge/Rabbet Guide Kit
Dust Bag
Case
Operator's Manual

 **WARNING:** If any parts are missing, do not operate your tool until the missing parts are replaced. Failure to do so could result in serious personal injury.

APPLICATIONS

You may use this tool for the purposes listed below:

- Planing the surface of a piece of lumber.
- Planing the edge of a piece of lumber.
- Making rabbet cuts in a piece of lumber.

ADJUSTMENTS

⚠ WARNING: This tool should never be connected to a power supply when you are assembling parts, making adjustments, cleaning, performing maintenance, or when the tool is not in use. Disconnecting the tool prevents accidental starting that could cause serious injury.

ATTACHING THE DUST BAG

See Figure 2.

Follow these steps to attach the dust bag.

- Unplug the planer.
- Slide the collar of the dust bag onto the exhaust port.

Note: To remove the dust bag, pull it straight out of the exhaust port.

CAUTION: The dust bag fills quickly. Empty it often to prevent damage to the product.

ADJUSTING THE EXHAUST DIRECTION

See Figures 2 and 3.

Control the direction of debris when working in confined areas. Change the direction of the exhaust to either the right or left.

Follow these steps to adjust the exhaust direction.

1. Unplug the planer.
2. Adjust the exhaust direction and dust bag:
 - *To adjust exhaust to the right*—Move the exhaust direction knob to the right and install the dust bag on the right exhaust port.
 - *To adjust exhaust to the left*—Move the exhaust direction knob to the left and install the dust bag on the left exhaust port.

ADJUSTING PLANING DEPTH

See Figure 4.

Always work from a rough cut to a finish cut. The approximate setting for rough planing is $1/32$. For finish planing use a setting of approximately $1/64$. Make test cuts in scrap wood after each adjustment to make sure that the planer is removing the desired amount of wood.

Follow these steps to adjust planing depth.

- Unplug the planer.
- Turn the depth adjustment knob to the desired setting.

Note: To protect the blades during storage, transporting, etc., set the depth adjustment to 0.

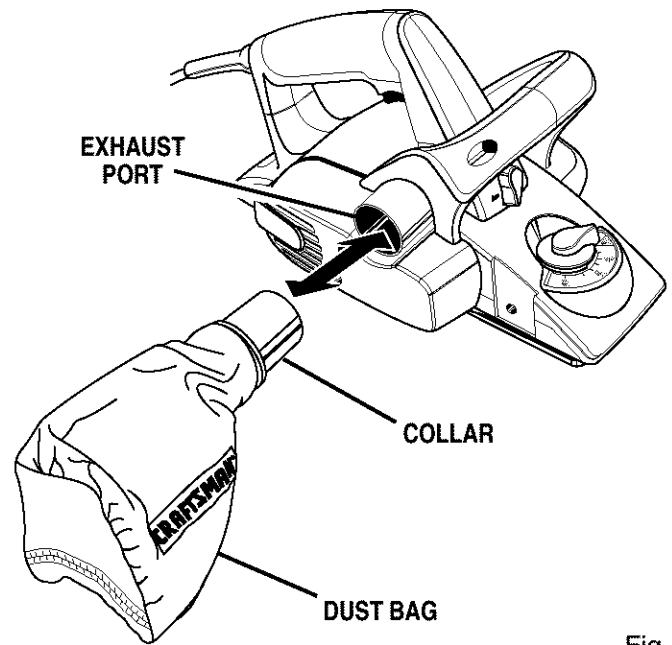


Fig. 2

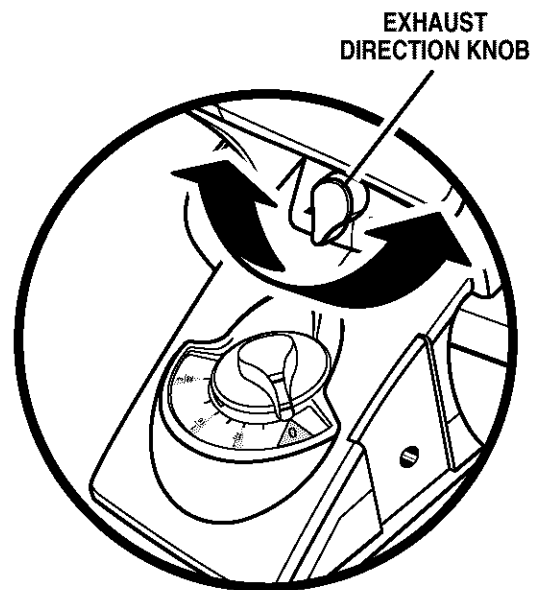


Fig. 3

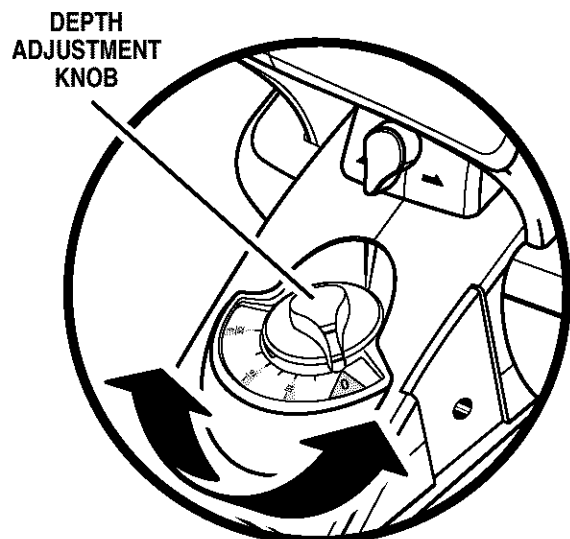


Fig. 4

OPERATION

- ⚠ **WARNING:** Always wear safety goggles or safety glasses with side shields when operating this tool. Failure to do so could result in dust, shavings, chips, loose particles, or foreign objects being thrown in your eyes resulting in possible serious injury. If the operation is dusty, also wear a face or dust mask.

STARTING/STOPPING THE PLANER

See Figure 5.

Follow these steps to start/stop the planer.

- *To start the planer*—Push the lock-off button, and then depress the trigger switch.
- *To stop the planer*—Release the trigger switch.

OPERATING THE PLANER

Follow these guidelines when operating the planer.

- Clamp the work securely.
- Support the work so that the operation is on your right.

- ⚠ **WARNING:** Work moving during a cut could result in loss of control of the planer and cause serious injury.

- Hold the planer with both hands. Hold the front handle with your left hand and the rear handle with your right hand.
- Plane slowly and empty the dust bag often.

CAUTION: Planing too fast results in a poor finish and increases chip build-up in the chip exhaust. Chip build-up restricts air flow and can cause motor overheating.

- ⚠ **WARNING:** Do not attempt to clear a blocked chip exhaust until the blades stop and you have disconnected the product from the power source. Failure to heed this warning can result in serious personal injury.

- Keep the cord away from the work area. Do not allow the cord to hang on the work while planing.

- ⚠ **WARNING:** Using the tool with a damaged cord could cause electrical shock resulting in serious injury.

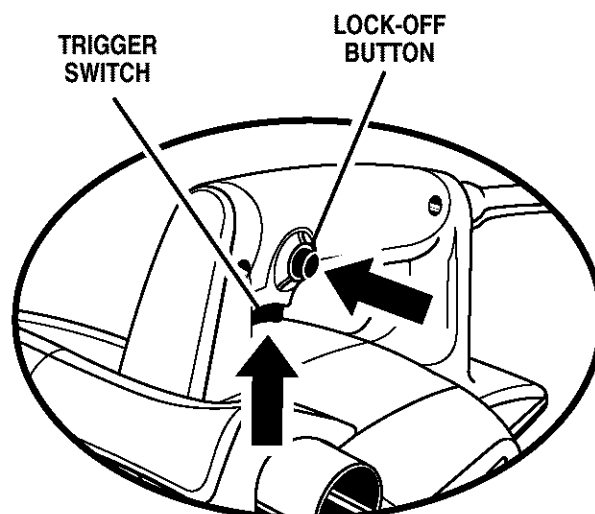


Fig. 5

SURFACE GUARD

See Figure 6.

Your tool has been equipped with an automatic pivoting surface guard that will prevent the blade from contacting the work surface when not in use. As you begin your planing operation, the surface guard will automatically retract as it passes over the edge of your work piece. When setting the planer down on your workbench, the surface guard will automatically pivot down to prevent the blade from making any contact.

- ⚠ **WARNING:** Make sure the surface guard operates freely at all times and that the area surrounding the surface guard is clear of debris. Failure to do so could result in personal injury.

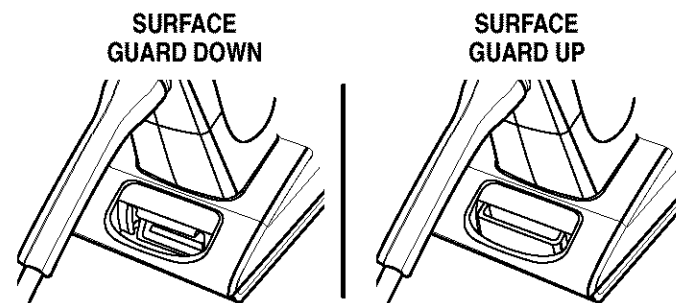


Fig. 6

OPERATION

PLANING

See Figure 7.

Follow these steps to plane.

- Clamp the work securely.
- Adjust the planing depth. Refer to ADJUSTING PLANING DEPTH earlier in this manual.
- Hold the front handle with your left hand and the rear handle with your right hand.

⚠ WARNING: Always use two hands on the tool for any operation; this assures that you maintain control and avoid risk of serious personal injury. Always properly support and clamp the work so that both hands are free to control the planer.

- Place the front shoe on the edge of work to be planed.
Note: Make sure the blades are not touching the work.
- Apply pressure to the front handle so that the front shoe is completely flat on the work.
- Start the planer and let the motor reach maximum speed.
- Hold the planer firmly and push it forward into the work, using a slow, steady motion.
- Apply downward pressure toward the rear handle as you reach the end of the planed cut. This helps keep the rear section of the planer base in contact with the work and prevents the front of the planer from gouging the cut.

CAUTION: Be careful to avoid hitting nails during planing operation; this action could nick, crack, or damage blades.

Note: We suggest that you always keep an extra set of blades on hand. As soon as the blades in your planer show signs of becoming dull, replace them. The blades in your planer are reversible and can be reversed until both sides become dull.

CHAMFERING

See Figure 8.

The planer is designed with a chamfering groove in the front shoe to chamfer edges of boards as shown. Before making a cut on good lumber, practice cutting on scrap lumber to determine the amount to be removed.

Follow these steps to chamfer.

- Clamp the work securely.
- Hold the front handle with your left hand and the rear handle with your right hand.
- Place the chamfering groove on the surface to be cut.
- Start the planer and let the motor reach maximum speed.

- Hold the planer firmly and push it forward into the work, using a slow, steady motion.
- Apply downward pressure to keep your planer flat at the beginning and the end of the work surface.

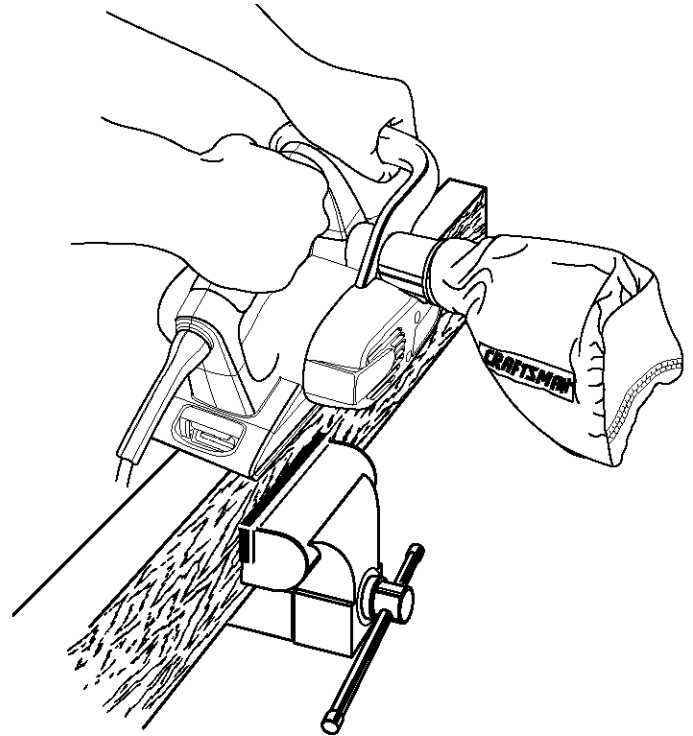


Fig. 7

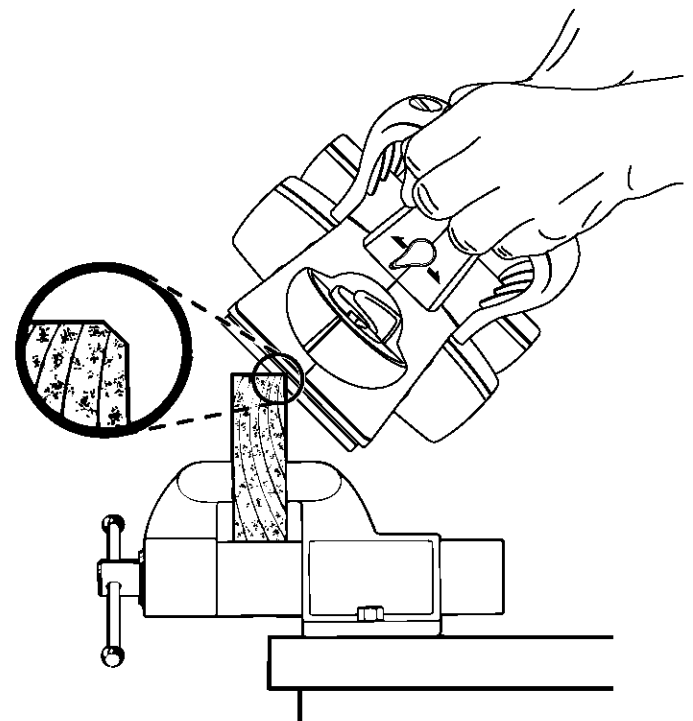


Fig. 8

OPERATION

PLANING EDGES AND MAKING RABBET CUTS

The planer comes with an adjustable guide for precision edge planing and rabbet cutting. Attach the guide to either side of the planer for planing edges and attach the guide to the left side for making rabbet cuts.

TO ATTACH THE GUIDE FOR PLANING EDGES

See Figures 9 and 10.

Follow these steps to attach the guide for planing edges.

- Unplug the planer.
- Attach the bracket to the desired side of the planer using the knob bolt.
- Attach the guide to the bracket using the knob nut and the carriage head bolt.
- Tighten the knob nut securely.

TO PLANE EDGES

See Figure 10.

Follow the directions in PLANING earlier in this manual. Hold the guide firmly against the edge of the work surface.

TO ATTACH THE GUIDE FOR MAKING RABBET CUTS

See Figure 11.

Follow these steps to attach the guide for making rabbet cuts.

- Unplug the planer.
- Attach the bracket to the left side of the planer using the knob bolt.
- Attach the guide loosely to the bracket using the knob nut and the carriage head bolt.
- Adjust the guide to the desired width for the rabbet cut.
- Tighten the knob nut securely.

TO MAKE RABBET CUTS

See Figure 11.

Follow the directions in PLANING earlier in this manual. Hold the guide firmly against the edge of the work surface.

The depth of the rabbet is determined by the depth of the cut and the number of passes made along the work surface. The maximum depth of the rabbet cut is $7/16$ in. (11.1 mm) and has to be cut in $3/32$ in. (2.4 mm) passes, or less, to reach the desired depth. The width of the rabbet cut is adjustable by moving the edge guide.

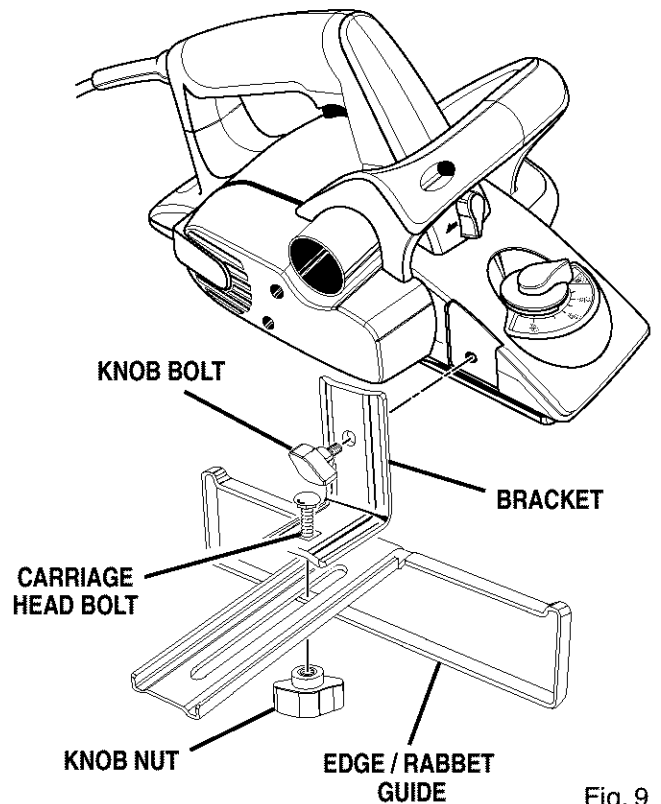


Fig. 9


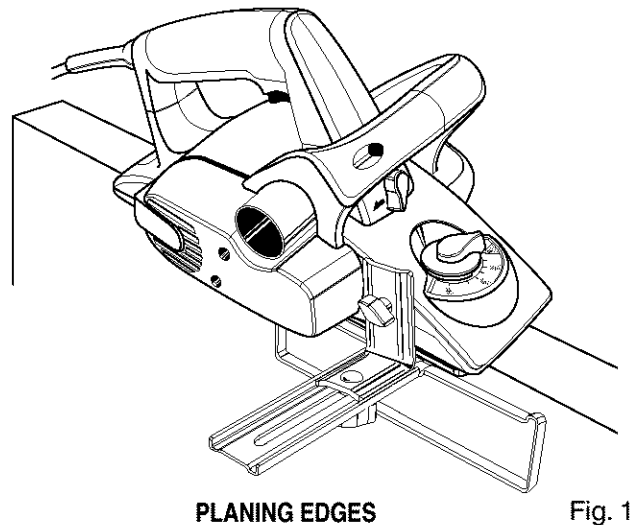


Fig. 10

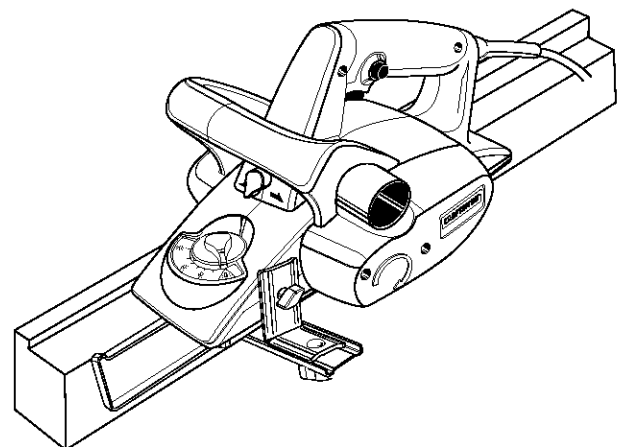

MAKING RABBET CUTS

Fig. 11

MAINTENANCE

⚠ WARNING: When servicing, use only identical Craftsman replacement parts. Use of any other part may create a hazard or cause product damage.

⚠ WARNING: This tool should never be connected to a power supply when you are assembling parts, making adjustments, cleaning, performing maintenance, or when the tool is not in use. Disconnecting the tool prevents accidental starting that could cause serious injury.

GENERAL

Only the parts shown on the parts list are intended to be repaired or replaced by the customer. All other parts are an important part of the double insulation system and should be serviced only by a qualified Sears service technician.

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, carbon dust, etc.

⚠ WARNING: Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc. come in contact with plastic parts. They contain chemicals that can damage, weaken, or destroy plastic.

Electric tools used on fiberglass material, wallboard, spackling compounds, or plaster are subject to accelerated wear and possible premature failure because the fiberglass chips and grindings are highly abrasive to bearings, brushes, commutators, etc. Consequently, we do not recommend using this tool for extended work on these types of materials. However, if you do work with any of these materials, it is extremely important to clean the tool using compressed air.

⚠ WARNING: Always wear safety goggles or safety glasses with side shields during power tool operation or when blowing dust. If operation is dusty, also wear a dust mask. Failure to do so could result in possible serious injury.

LUBRICATION

All the bearings in this tool are lubricated with a sufficient amount of high grade lubricant for the life of the tool under normal operating conditions. Therefore, no further lubrication is required.

CLEANING THE EXHAUST PORT AND EMPTYING THE DUST BAG

See Figure 12.

After using the planer for an extended period of time or when planing wet or green lumber, chips may build-up in the exhaust port. Chip build-up restricts air flow and causes the motor to overheat. Clean the exhaust port and empty the dust bag regularly.

Follow these steps to clean the exhaust port and empty the dust bag.

■ Unplug the planer.

⚠ WARNING: Failure to unplug the tool could result in serious injury due to accidental starting.

■ Remove the dust bag from the exhaust port.

■ Clean the dust build-up from the exhaust port with a small piece of wood. Do not use your hands or fingers.

■ Empty all debris from the dust bag and ensure that the collar is free of debris.

■ Replace the dust bag.

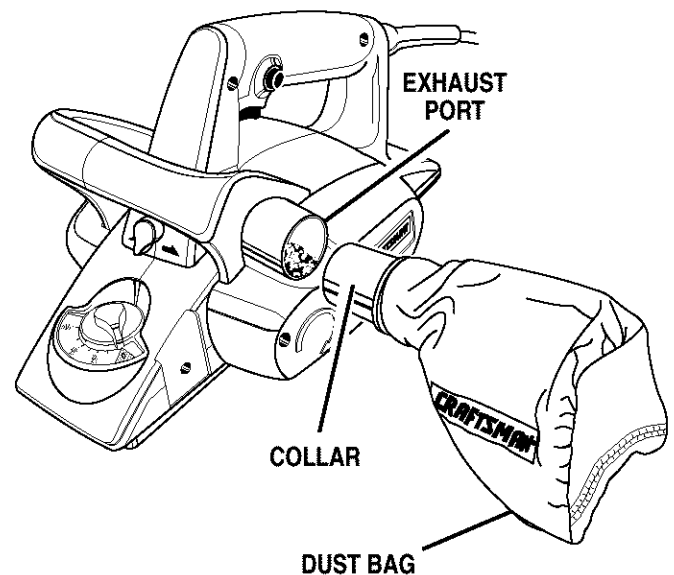


Fig. 12

MAINTENANCE

CHANGING BLADES

See Figures 13, 14, and 15.

The blades in your planer are reversible. Therefore, you can reverse the blades when one edge becomes dull. Always replace or reverse blades in pairs. Do not attempt to sharpen blades. If the blades become dull, replace them.

When changing blades, use the recommended replacement blades only, (Part No. 690861001).

⚠ WARNING: The blades are sharp. Use extreme caution when replacing blades. Failure to heed this warning can result in serious personal injury.

Follow these steps to change blades.

- Unplug the planer.

⚠ WARNING: Failure to unplug the tool could result in serious injury due to accidental starting.

- Secure the planer in an upside down position.
 - Loosen the three screws securing the blade on the blade holder using the blade wrench provided.
- Note:** Do not over-loosen the screws. If screws are too loose, alignment of the new blade will not be accurate.

Note: Before removing old blades, take notice of the direction of cut as well as how the tapered edge of the old blades are oriented. The tapered edge of the new blades must be in the same orientation as the original blades.

- Push the blade (to the right) out of the blade holder using the tip of a screwdriver.
- Remove the old blade from the blade holder.

Note: If you cannot easily push the blade out of the blade holder after loosening the screws, use a block of wood to break the blade loose from the blade holder. Give the blade a short sharp blow, then push it with a screwdriver to remove. If necessary, tap the block of wood sharply with a small hammer to break the blades loose.

- Clean any sawdust or wood chips from around the blade area.
- Slide the new blade into the slot of the blade holder.
- Use a screwdriver to push the blade into the blade holder until it is centered into position.
- Tighten the three screws using the blade wrench.
- Repeat the above procedure to change the other blade.

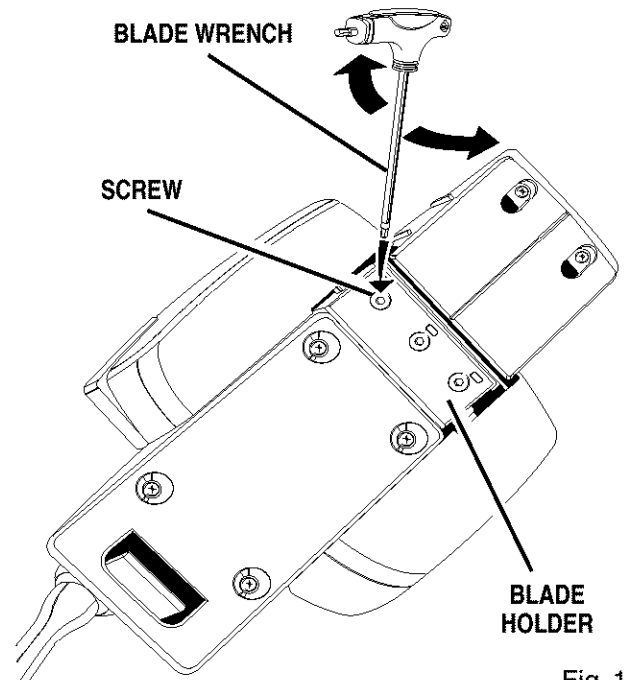


Fig. 13

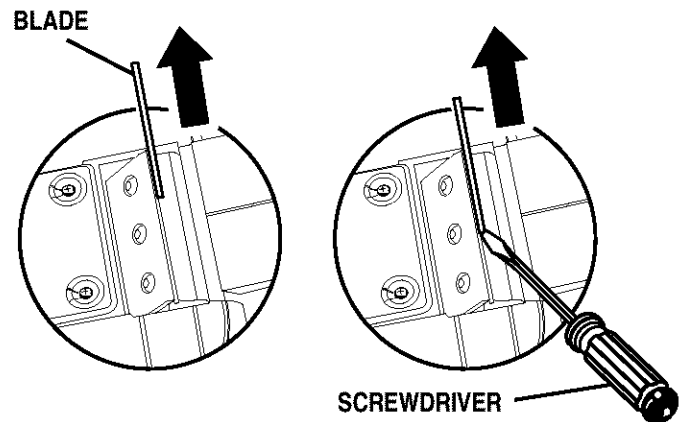


Fig. 14

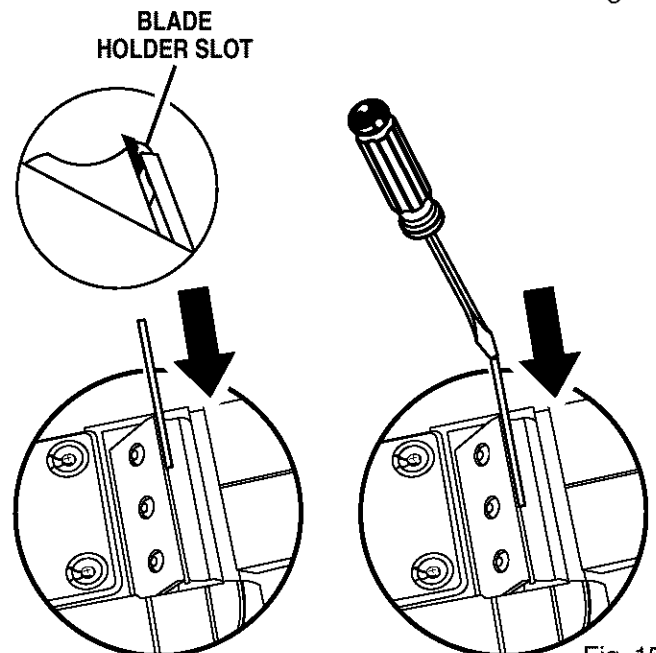


Fig. 15

MAINTENANCE

REPLACING THE BELT

See Figures 16, 17, and 18.

When replacing the belt, use recommended replacement belt only (Part No. 560950001).

- Unplug the planer.

⚠ WARNING: Failure to unplug the tool could result in serious injury due to accidental starting.

- Remove the belt cover screws.
- Remove the belt cover.
- Force the old belt from the large pulley by turning in the direction shown. As you turn the belt, pull and work it off the large pulley until it has been completely removed from both pulleys.
- Install the new belt over the small pulley. As you turn the belt, push and work it onto the large pulley until it is in place.
- Replace the belt cover.
- Make sure the belt is flush with the edge of both pulleys.
- Install the belt cover screws and tighten securely.
Note: Do not overtighten the screws.

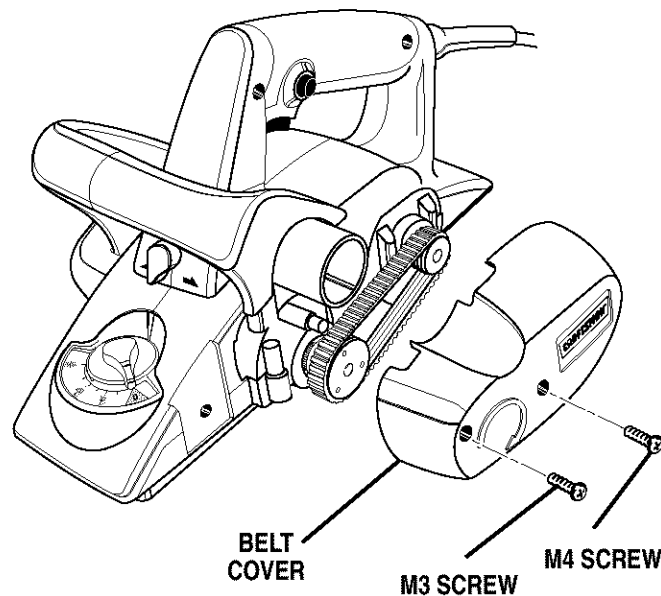


Fig. 16

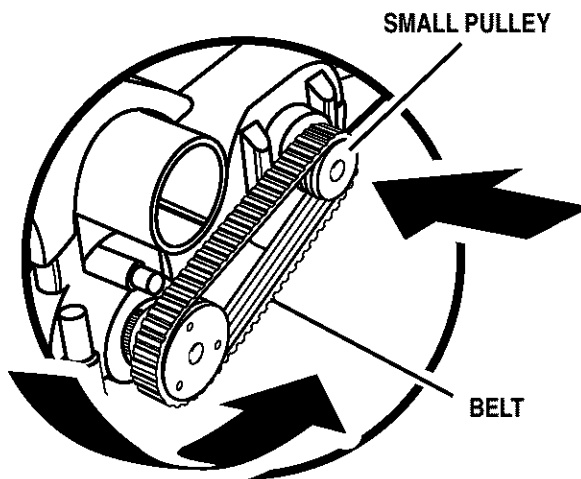


Fig. 17


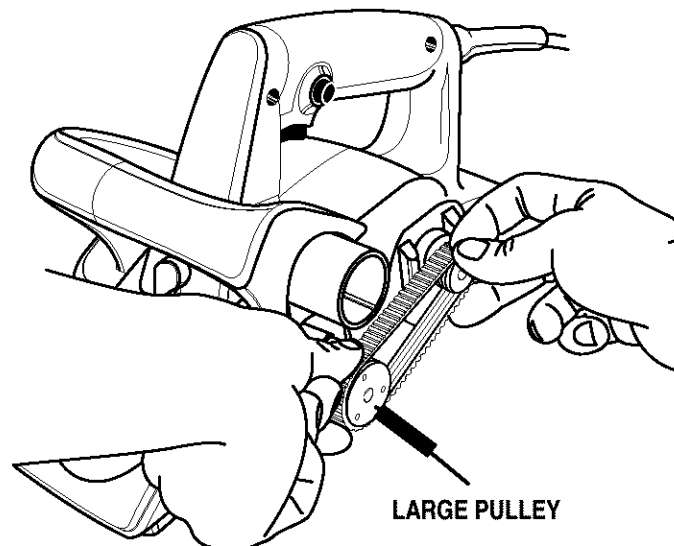


Fig. 18

CRAFTSMAN POWER PLANER – MODEL NUMBER 315.173700

SEE NOTE PAGE 19

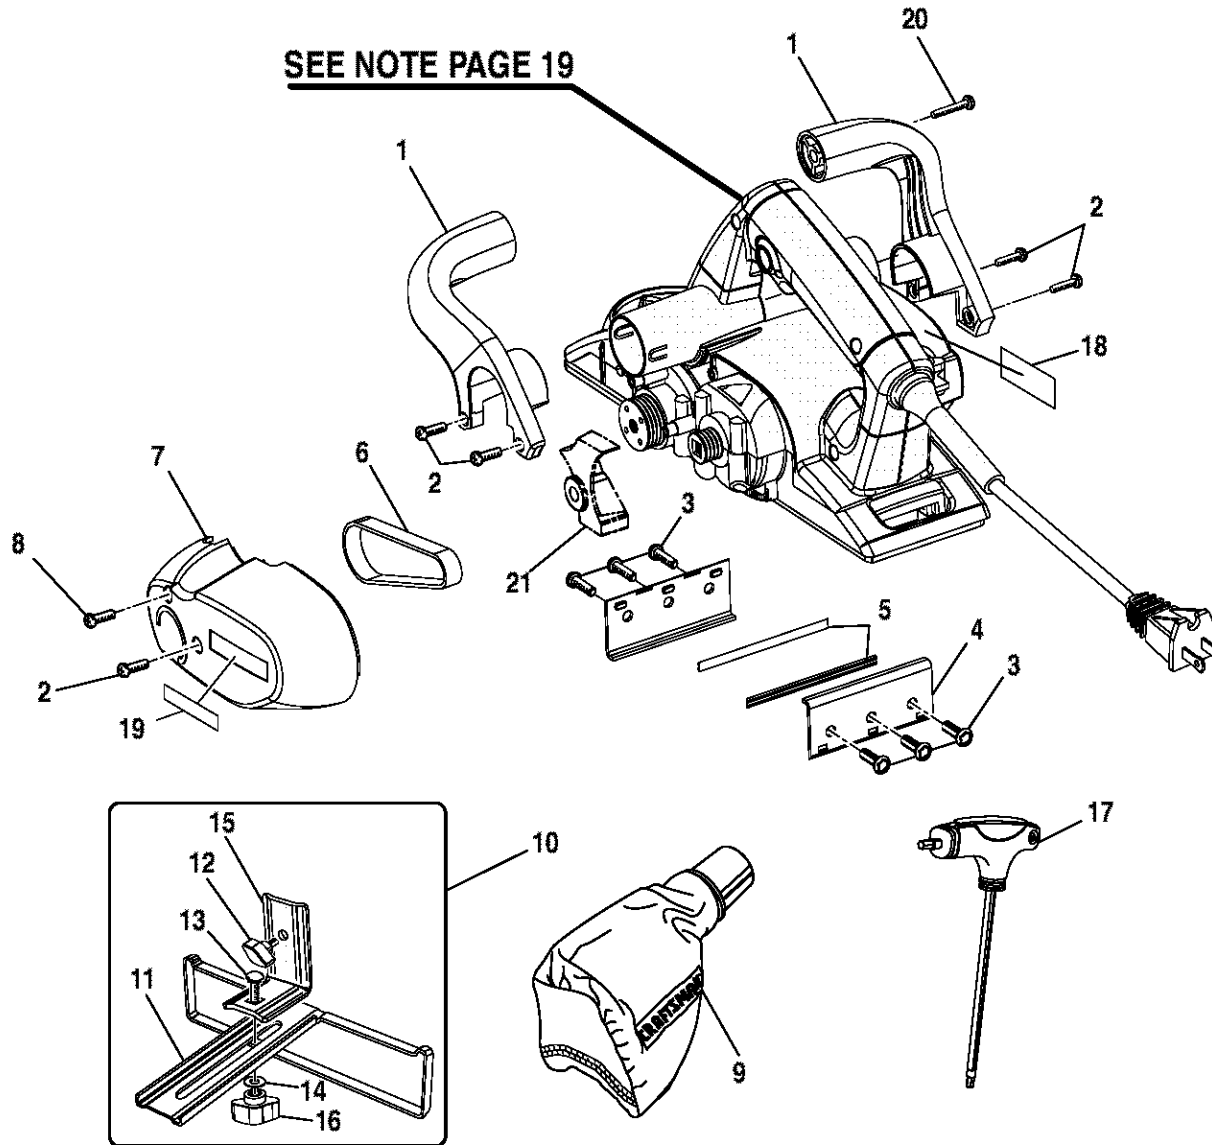

CRAFTSMAN POWER PLANER – MODEL NUMBER 315.173700

The model number will be found on a plate attached to the motor housing. Always mention the model number in all correspondence regarding your **Power Planer** or when ordering repair parts.

SEE BACK PAGE FOR PARTS ORDERING INSTRUCTIONS

PARTS LIST

Key No.	Part Number	Description	Qty.	Key No.	Part Number	Description	Qty.
1	301039001	Handle Assembly	1	11	690865001	Edge/Rabbit Guide	1
2	6620805	* Screw (M4 X 16 mm Pan Hd.)	5	12	540511004	Knob Bolt	1
3	660302004	* Screw (10-24 X 3/4 in. Button Hd.)	6	13	660142001	* Bolt (M6 X 12 mm Carriage Hd.)	1
4	690862002	Blade Clamp	2	14	5228001	Washer.....	1
5	690861001	Cutter Blade (Carbide, 82 mm).....	2	15	690866001	Adjusting Plate.....	1
6	560950001	Belt.....	1	16	540510004	Knob Nut.....	1
7	400836001	Belt Cover	1	17	690214003	Blade Wrench	1
8	6620311	* Screw (M3 X 20 mm Pan Hd.)	1	18	940078031	Data Plate	1
9	300027036	Dust Bag Assembly	1	19	940304010	Logo Plate.....	1
10	300869002	Edge Guide Assembly (Includes Key Nos. 11 Through 16).....	1	20	660208014	* Screw (M4 X 45 mm Pan Hd.)	1
				21	511917001	Air Channel Cover	1
					983000-091	Operator's Manual	

* Standard Hardware Item – May Be Purchased Locally

Note: The assembly shown represents an important part of the double insulated system. To avoid the possibility of alteration or damage to the System, service should be performed by your nearest Sears repair center. Contact your nearest Sears retail store for service center information.

Get it fixed, at your home or ours!

Your Home

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME[®] (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call or go on-line for the location of your nearest **Sears Parts & Repair Center.**

1-800-488-1222

Call anytime, day or night (U.S.A. only)

www.sears.com

To purchase a protection agreement (U.S.A.) or maintenance agreement (Canada) on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGARSM
(1-888-784-6427)

Au Canada pour service en français:

1-800-LE-FOYER^{MC}
(1-800-533-6937)
www.sears.ca

SEARS