


Palmcorder® Camcorder

**Panasonic®**

**VHS®**

Camcorder  
**Operating Instructions**

Models No. **PV-L354**  
**PV-L454**

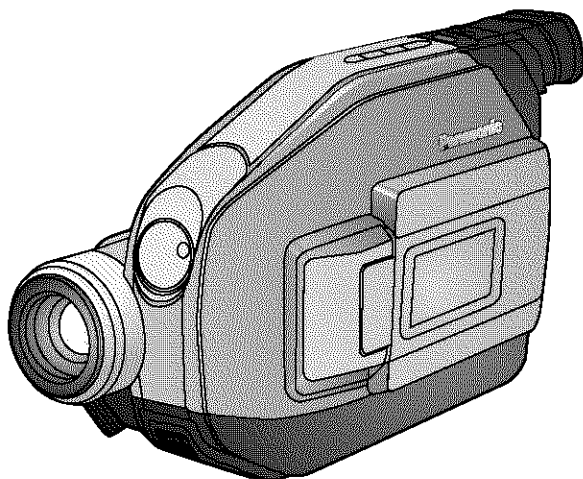

Please read these instructions carefully before attempting to operate this product. Please save this manual.



For assistance, please call : 1-800-211-PANA(7262) or, contact us via the web at:<http://www.panasonic.com/contactinfo>

LSQT0753 A

Getting Started

Basic Operation

Special Features

For Your Information

# Things You Should Know

## Thank you for choosing Panasonic!

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, it will bring you years of enjoyment. Please take time to fill in the information to the right.

The serial number is on the tag located on the underside of your Camcorder. Be sure to **retain this manual** as your convenient Camcorder information source.

Date of Purchase

Dealer Purchased From

Dealer Address

Dealer Phone No.

Model No.

Serial No.

## Unpack your Camcorder

These accessories are provided in order to set up or use your Camcorder.

1 pc. AC Adaptor (PV-A20)  
with DC Power Cable  
(page 11)



1 pc. Audio/Video Cable  
(LSJA0368) (pages 22, 23)



1 pc. Battery Pack  
(LSSB0011/LSSB0014)  
(pages 10, 11)  
(PV-L354 only)



1 pc. Shoulder Strap  
(LSFC0012) (page 13)



1 pc. Lens Cap (LSKM0937)  
with Lens Cap Strap  
(LSGQ0049) (page 13)



(PV-BP18/LSSB0008)  
(pages 10, 11)  
(PV-L454 only)



1 pc. CR2025 Clock Battery  
(installed in Camcorder)  
(page 36)



This operating instruction book is designed for use with models **PV-L354** and **PV-L454**. Features may vary, so please read carefully.

## Differences between models

Model Number	Battery Pack	Digital Zoom maximum	Viewfinder
PV-L354	LSSB0011/LSSB0014 Nickel Metal Hydride Battery /Nickel Cadmium Battery	700x	8.4 mm (0.33 inch) Electronic Viewfinder
PV-L454	PV-BP18/LSSB0008 Nickel Cadmium Battery	750x	8.4 mm (0.33 inch) Liquid Crystal Color Electronic Viewfinder





## Safety Precautions

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.**

Your Compact VHS Camcorder is designed to record and play back in Standard Play (SP) and Super Long Play (SLP) modes. You can also play a Compact VHS Camcorder recording on your VHS VCR using the optional VHS PlayPak.

This Camcorder is equipped with the **HQ** System to provide excellent video pictures, and is compatible with standard VHS equipment.

It is recommended that only cassette tapes that have been tested and inspected for use in VCR machines with the **VHS** and/or **VHS** mark be used.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN			This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.
<b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</b>				This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

The above markings are located on the appliance's bottom cover.

**FCC Warning** : Any unauthorized changes or modifications to this equipment would void the users authority to operate.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


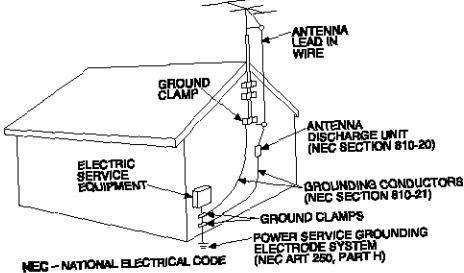
**Note:** This equipment has been tested and found to comply with Part 15 and part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when operated in a residential environment.

If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, use the equipment in another location and/or utilize an electrical outlet different from that used by the receiver.

If necessary, consult the dealer or an experienced radio/TV technician for help. You may find the booklet, 'Something About Interference' available from FCC local regional offices helpful.

This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30 MHz.

# Important Safeguards

- 1. Read Instructions** – All the safety and operating instructions should be read before the unit is operated.
- 2. Retain Instructions** – The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings** – All warnings on the unit and in the operating instructions should be adhered to.
- 4. Follow Instructions** – All operating and maintenance instructions should be followed.
- 5. Cleaning** – Unplug this video unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry cloth for cleaning.
- 6. Attachments** – Do not use attachments not recommended by the video product manufacturer as they may be hazardous.
- 7. Water and Moisture** – Do not use this video unit near water – for example near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
- 8. Accessories** – Do not place this video unit on an unstable cart, stand, tripod, bracket, or table. The video unit may fall, causing serious injury to a child or adult, and serious damage to the unit. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video unit. Any mounting of the unit should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- 9. Ventilation** – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video unit and to protect it from overheating. These openings must not be blocked or covered. Never place the video unit on a bed, sofa, rug, or other similar surface, or near or over a radiator or heat register. This video unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 10. Power Sources** – This video unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video units intended to be operated from battery power, or other sources, refer to the operating instructions.
- 11. Grounding or Polarization** – This video unit may be equipped with either a polarized 2-wire AC (Alternating Current) line plug (a plug having one blade wider than the other) or 3-wire grounding type plug, a plug having a third (grounding) pin.  
The 2-wire polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet.  
Do not defeat the safety purpose of the polarized plug.  
The 3-wire grounding type plug will fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.
- 12. Power-Cord Protection** – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Paying particular attention to cords of plugs, convenience receptacles, and the point where they exit from the unit.
- 13. Outdoor Antenna Grounding** – If an outside antenna or cable system is connected to the video unit, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Part 1 of the Canadian Electrical Code, in USA Section 810 of the National Electrical Code, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
- 14. Lightning** – For added protection of this video unit receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video unit due to lightning and power-line surges.

15. **Power Lines** – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
16. **Overloading** – Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
17. **Objects and Liquids** – Never push objects of any kind into this video unit through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind onto the video unit.
18. **Servicing** – Do not attempt to service this video unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
19. **Damage Requiring Service** – Unplug this video unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the power-supply cord or plug is damaged.
  - b. If any liquid has been spilled into, or objects have fallen onto, the video unit.
  - c. If the video unit has been exposed to rain or water.
  - d. If the video unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video unit to its normal operation.
  - e. If the video unit has been dropped or the cabinet has been damaged.
  - f. When the video unit exhibits a distinct change in performance – this indicates a need for service.
20. **Replacement Parts** – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
21. **Safety Check** – Upon completion of any service or repairs to this video unit, ask the service technician to perform safety checks to determine that the video unit is in safe operating order.

## Precautions

### ⚠ WARNING

#### USE & LOCATION

- **TO AVOID SHOCK HAZARD ...** Your Camcorder and power supply should not be exposed to rain or moisture. Do not connect the power supply or operate your Camcorder if it gets wet. Your Camcorder has been designed for outdoor use, however it is not designed to sustain direct exposure to water, rain, sleet, snow, sand, dust, or a direct splashing from a pool or even a cup of coffee. This action could permanently damage the internal parts of your Camcorder. Do not attempt to disassemble this unit. Unplug your Camcorder from the power supply before cleaning.

### ⚠ CAUTION

- **DO NOT AIM YOUR CAMCORDER AT THE SUN OR OTHER BRIGHT OBJECTS.**
- **DO NOT LEAVE THE CAMCORDER WITH THE EVF AIMED DIRECTLY AT THE SUN AS THIS MAY CAUSE DAMAGE TO THE INTERNAL PARTS OF THE EVF.**
- **DO NOT EXPOSE YOUR CAMCORDER TO EXTENDED HIGH TEMPERATURE ...** Such as, in direct sunlight, inside a closed car, next to a heater, etc... This action could permanently damage the internal parts of your Camcorder.
- **AVOID SUDDEN CHANGES IN TEMPERATURE ...** If the unit is suddenly moved from a cold place to a warm place, moisture may form on the tape and inside the unit.
- **DO NOT LEAVE YOUR CAMCORDER OR THE POWER SUPPLY TURNED ON WHEN NOT IN USE.**
- **STORAGE OF YOUR CAMCORDER ...** Store and handle your Camcorder in a manner that will not subject it to unnecessary movement (avoid shaking and striking). Your Camcorder contains a sensitive pick-up device which could be damaged by improper handling or storage.

#### CARE

- **TO CLEAN YOUR CAMCORDER ...** Do not use strong or abrasive detergents when cleaning your Camcorder body.
- **TO PROTECT THE LENS ...** Do not touch the surface of the lens with your hand. Use a commercial camcorder lens solution and lens paper when cleaning the lens. Improper cleaning can scratch the lens coating.
- **TO PROTECT THE FINISH OF YOUR CAMCORDER ...** Before handling your Camcorder, make sure your hands and face are free from any chemical products, such as suntan lotion, as it may damage the finish.

<b>Things You Should Know</b> .....	2~3
<b>Important Safeguards</b> .....	4~5
<b>Precautions</b> .....	5
<b>Select OSD Language</b> .....	7
<b>Self Demo Mode</b> .....	8
<b>Quick Operation Guide</b> .....	9
<b>Supplying Power</b> (Battery Charge/Use/Refresh/Care, AC Adaptor, Car Battery Cord) ..	10~11
<b>Cassette Information</b> .....	12
<b>Before Using</b> (Using the Shoulder and Hand Straps, Lens Cap) .....	13
<b>Using MENU Mode</b> .....	14
<b>Setting the Clock</b> (Time Zone, Auto Daylight Saving Time) .....	15~16
<b>AccuBrite™ Built-in Light</b> (Using the Light, Replacing the Bulb) .....	17


<b>Camera Recording</b> (Basic, Stand-by, Programmed Recording) .....	18~20
<b>Playing Back Recordings</b> (Basic Playback, Visual Search, Still Picture, Tracking, TV/VCR Playback) .....	21~22
<b>Copying your Tapes (dubbing)</b> .....	23

<b>Four-Speed Power Zoom</b> .....	24
<b>Backlight</b> .....	24
<b>Focus</b> (Auto/Manual Focus) .....	25
<b>High Speed Shutter</b> (Auto/Manual Shutter) .....	26
<b>Auto Fade</b> .....	27
<b>Color Digital Fade</b> .....	28
<b>Digital Zoom</b> .....	29
<b>Digital Electronic Image Stabilization (E.I.S.)</b> .....	30
<b>MotionSensor</b> .....	31

<b>Viewfinder/LCD Monitor Indications</b> .....	32~34
<b>Notes On Operations</b> .....	35
<b>Replacing Clock Battery</b> .....	36
<b>Palmcorder Accessory System</b> .....	37
<b>Palmcorder Accessory Order Form</b> .....	38
<b>Specifications</b> .....	39
<b>Before Requesting Service</b> (Video Head Cleaning) .....	40
<b>Request for Service Notice</b> .....	41
<b>Limited Warranty</b> .....	42
<b>Customer Services Directory</b> .....	43
<b>Index</b> .....	44

The Camcorder is preset to ENGLISH. You can select ENGLISH or SPANISH as the OSD (on screen display) language. If SPANISH language is selected, turn to the Spanish Operating Instructions in this manual.

**Before you begin...**  
• Connect Camcorder to power source.

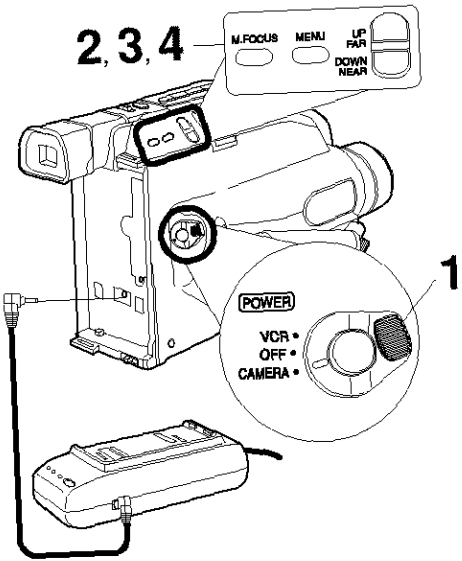

**1** Set **POWER** to **CAMERA** or **VCR**.

**2** Press **MENU** for MENU mode. Press **UP** or **DOWN** to select **LANGUAGE**.

```
--- MENU --- PAGE 1/2
REC MODE : SP
SHUTTER : AUTO
LCD BRIGHT
DIGITAL EFFECTS
PROGRAMED REC
LANGUAGES : ENGLISH
SELECT: PUSH UP/DOWN KEY
SET : PUSH M. FOCUS KEY
END : PUSH MENU KEY
```

```
--- MENU ---
LCD BRIGHT
LANGUAGE : ENGLISH
DISPLAY SET
CLOCK SET
SELECT: PUSH UP/DOWN KEY
SET : PUSH M. FOCUS KEY
END : PUSH MENU KEY
```

[ CAMERA MODE ] [ VCR MODE ]

**3** Press **M.FOCUS** to select **IDIOMA ; ESPAÑOL**.

```
--- MENU --- PAGINA 1/2
MODO DE REC : SP
OBTURADOR : AUTO
BRILLO DEL LCD
EFECTOR DIGITALES
GRABACION PROG.
IDIOMA : ESPAÑOL
ELEGIR : UP/DOWN
FIJAR : M. FOCUS
TERMINAR: MENU
```

```
--- MENU ---
BRILLO DEL LCD
IDIOMA : ESPAÑOL
INFORMACION
AJUSTE DEL RELOJ
ELEGIR : UP/DOWN
FIJAR : M. FOCUS
TERMINAR: MENU
```

[ CAMERA MODE ] [ VCR MODE ]

**4** Press **MENU** to exit. Then, see Spanish Operating Instructions in this manual.

**Note:**

**To select ENGLISH OSD:**

• Set to LANGUAGE ; ENGLISH in MENU screen.

Self Demo mode is on when the screen below appears. To turn it off, follow steps 1-4 below.

## Before you begin...

- Connect Camcorder to power source.

### EVF or LCD Monitor

#### Panasonic

ITS TAPES CAN PLAY  
IN YOUR VCR  
YES, IT'S VHSI

20x LENS / 700x D.ZOOM  
DIGITAL STABILIZATION  
FULL-SIZE HEAD SYSTEM


(PV-L354)

#### Panasonic

ITS TAPES CAN PLAY  
IN YOUR VCR  
YES, IT'S VHSI


20x LENS / 750x D.ZOOM  
DIGITAL STABILIZATION  
FULL-SIZE HEAD SYSTEM

(PV-L454)

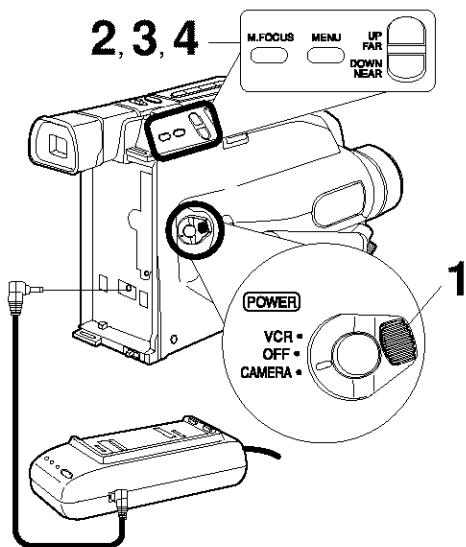

**1** Set POWER to CAMERA.

**2** Press MENU for MENU mode.  
Press UP or DOWN to select **SELF DEMO**.

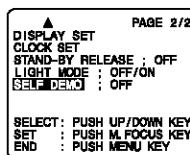

**3** Press M.FOCUS to select OFF.

**4** Press MENU to exit.

### Note:

- Self Demo stops automatically if battery is attached (page 10) and cassette tape is inserted (page 12).
- Inserting a tape alone (or attaching a partially charged battery) only temporarily stops Self Demo.
- Self Demo stops for 30 seconds when the Back Light is pressed.


### To turn Self Demo back on:

- Set to SELF DEMO ; ON in MENU screen.




## Charging the Battery Pack

Charge Battery Pack fully before operation (page 10).

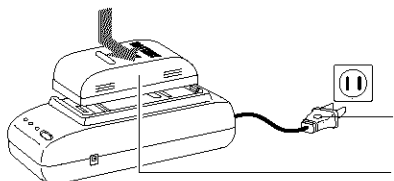

- 1** Plug in **AC Adaptor**.
- 2** Insert **Battery**. CHARGE Lamp flashes, then stays lit when charging is complete.


## Insert Cassette

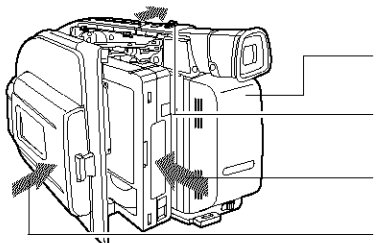

- 1** Attach fully charged **Battery** (page 10).
- 2** Slide **TAPE EJECT** to open door.
- 3** Insert **cassette** (page 12).
- 4** Press here to close door.

## Camera Recording


See page 18.

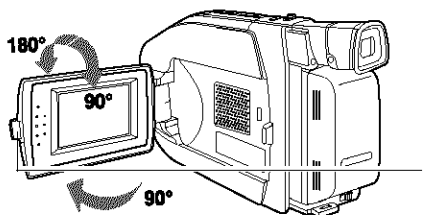

- 1** Press **LCD-OPEN** to unlock the LCD monitor. Swing it fully open and adjust the angle.
- 2** Set **POWER** to **CAMERA**.
- 3** Press **RECORD/PAUSE** to start recording. Press **RECORD/PAUSE** again to pause recording.

## Playback using the LCD Monitor

See page 21.

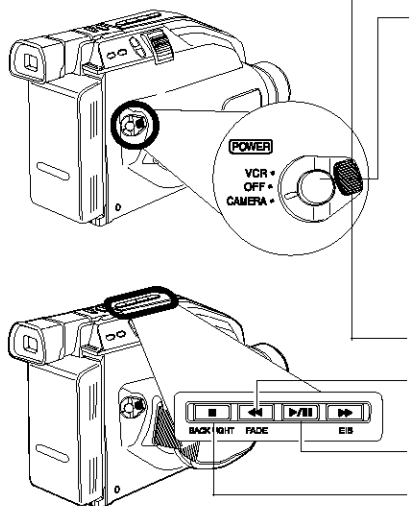


- 1** Press **LCD-OPEN** to unlock the LCD monitor. Swing it fully open and adjust the angle.
- 2** Set **POWER** to **VCR**.
- 3** Press **◀ (REWIND/SEARCH)** to rewind tape.
- 4** Press **▶/III (PLAY/STILL)** to start playback.
- 5** Press **■ (STOP)** to stop playback.

# Supplying Power

- We recommend using Panasonic's Battery.
- We cannot guarantee the quality of this Camcorder when batteries of other companies are used.

## Charging the Battery Pack

Charge Battery Pack fully before use.

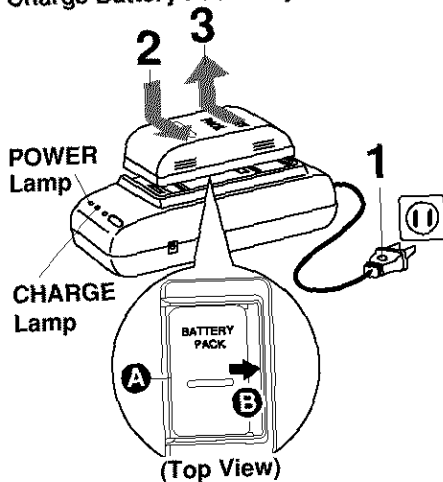

**1** Plug in **AC Adaptor**.  
POWER Lamp lights.

**2** Insert **Battery**.  
**A** Align left side of Battery with left edge of AC Adaptor.  
**B** Press Battery down and slide in direction of arrow.

The CHARGE Lamp flashes, then stays lit when charging is complete.


**3** Remove **Battery**.  
Slide Battery to the left and lift off.

### Note:

- Charging takes about 50 minutes (PV-L354) or 1.5 hours (PV-L454).
- While the DC Power Cable (supplied) is connected to the AC Adaptor, the Battery cannot be charged.
- After charging 5 times, use Battery Refresh feature as explained below.
- Battery life gradually decreases after repeated use and recharging. If operation time becomes very short even after a sufficient charge, discard Battery properly (pages 11, 35).

## Using the Battery Pack

A fully charged Battery provides a maximum of about 1 hour (PV-L354) or 2 hours (PV-L454) of continuous use (LCD monitor off) or about 40 minutes (PV-L354) or 1.5 hours (PV-L454) (LCD monitor on). Actual time may vary due to operating conditions. Using the Built-in Light decreases operating time.

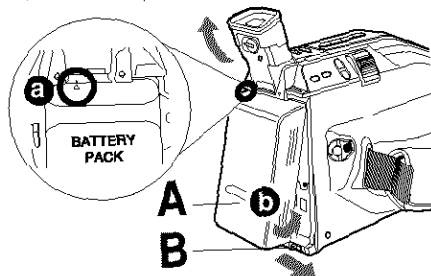


**A** Lift up **EVE** and attach **Battery**.

- a** Insert top of Battery into top of mounting surface.
- b** Press and snap into place.

**B** Remove **Battery**.  
Slide **BATTERY RELEASE** and remove Battery.

## Battery Refresh

This feature completely discharges Battery before recharging begins. Use after every 5 charges for optimum Battery performance.

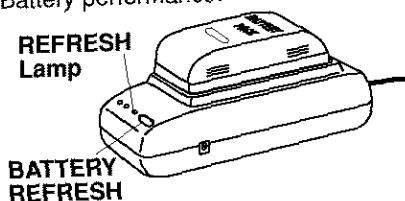

To use battery refresh, insert Battery on AC Adaptor (see steps 1-2 above), then press **BATTERY REFRESH**.

The REFRESH Lamp lights, then goes out when discharge is complete. Battery charging will then start automatically.

If **BATTERY REFRESH** is pressed by mistake, remove Battery from AC Adaptor and reinsert it for normal charging.

### Note:

- Charging takes about 4 hours (PV-L354) or about 7.5 hours (PV-L454) when Battery Refresh is used.
- Battery will not operate in extremely high temperatures.

## Battery Care


### ⚠ CAUTION

- Do not place the Battery near or dispose of in fire.
- Do not connect (short-circuit) the positive (+) and negative (-) terminals.
- Never attempt to disassemble or reassemble the Battery.
- Do not drop or jar Battery.
- Use Battery with specified units only.
- Charge only with specified charger.
- Do not use an insufficiently charged or worn-out Battery.
- Battery can be charged within a temperature range of 10 °C (50 °F) and 35 °C (95 °F).
- Battery is normally warm after charging or just after use.

## Battery Life and Protection

- If Battery is used in extremely high temperatures, a safety device will automatically prevent operation.
- While not in use, remove Battery from the Camcorder and AC Adaptor, and store in a cool, dark, dry place.
- Keep Battery terminals clean.

## AC Adaptor

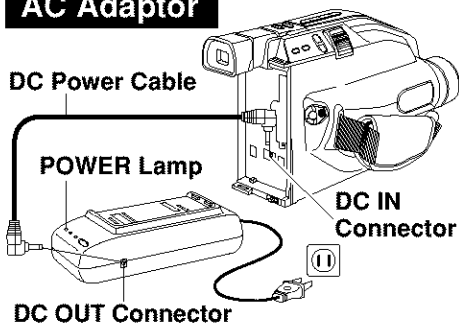

**1**

Connect **AC Adaptor DC OUT** to **Camcorder DC IN** with supplied DC Power Cable.

**2**

Plug in AC Adaptor. POWER Lamp lights.


### Note:

- While the DC Power Cable (supplied) is connected to the AC Adaptor, the Battery cannot be charged.
- When not in use, unplug AC Adaptor from AC outlet. (Adaptor uses 1.2 W of electricity while plugged in.)

### ⚠ CAUTION

This unit will operate on 110/120/220/240 V AC 50/60 Hz. An AC plug adaptor may be required for voltages other than 120 V AC. Please contact either a local or foreign electrical parts distributor for assistance in selecting an alternate AC plug. We recommend using the accessory power plug adaptor (VJSS0070/K2DB42E00001) in an area which has special AC outlets.

## Car Battery Cord (Optional)

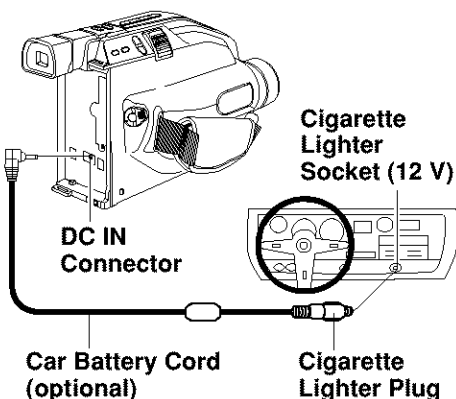

**1**

Connect **PV-C16 Car Battery Cord** (optional) to **Camcorder DC IN**.

**2**


**A** Start engine first.  
**B** Plug Car Battery Cord into Cigarette lighter socket.

- If Car Battery cord fuse needs replacing, use exact current rating (in amps).

### Note:

- This cord only works in vehicles equipped with **DC 12 V (negative ground)** battery. Check with your car/truck dealer. Use only specified car battery cord.
- To avoid blowing the car battery cord fuse, do step 2 in the proper order.
- Running vehicles must be well ventilated.
- When not in use, disconnect cigarette lighter plug.
- For personal safety the driver of the vehicle should not attempt to operate the camcorder while driving.

## Cassette Insertion/Removal

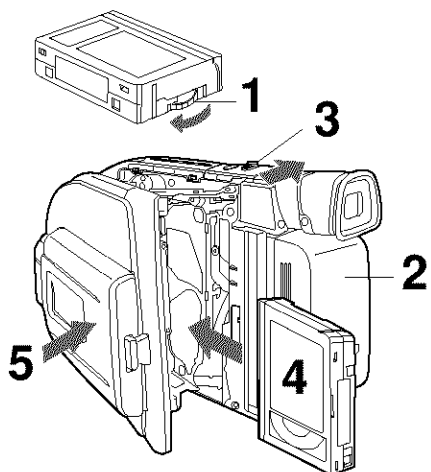

- 1** Turn **Tape Wheel** in direction of arrow until there is no slack.
- 2** Attach **Battery** (page 10).
- 3** Slide **TAPE EJECT** to open door.
- 4** Insert **cassette** as shown.
- 5** Press here to close door.

• To remove the cassette, slide the **TAPE EJECT** switch.

## Record/Playback Time


Use tapes with the **VHS** mark in this unit.

Tape Speed	Cassette type		
	TC-20	TC-30	TC-40
<b>SP</b> (Standard Play)	20 minutes	30 minutes	40 minutes
<b>SLP</b> (Super Long Play)	1 hour	1 hour 30 minutes	2 hours

• SLP playback may contain more picture noise.


## Erase Protection Tab

Protects tapes from being accidentally erased.

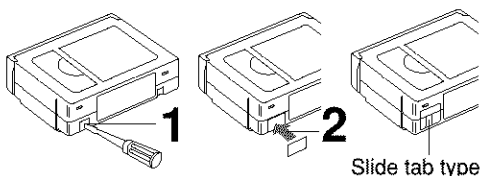

- 1** To prevent accidental erasing, **break off tab** with screwdriver. (Or, slide tab open.)
- 2** To record again, **cover hole** with adhesive tape. (Or, slide tab closed.)


### How to remove the Sensor tag

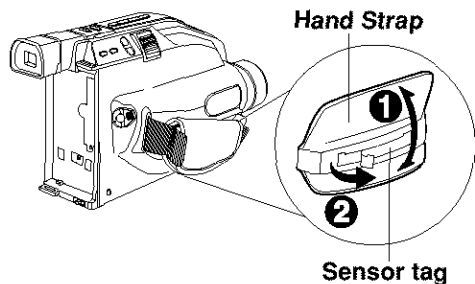


- 1** Open the Hand Strap as illustrated at left.
- 2** Remove the Sensor tag. Then, replace the Hand Strap.


### Attaching Shoulder Strap

Remove Battery Pack before completing the following steps:

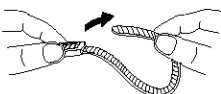- 1** Undo strap ends from buckles. 
- 2** Thread strap ends through Strap Rings on Camcorder.

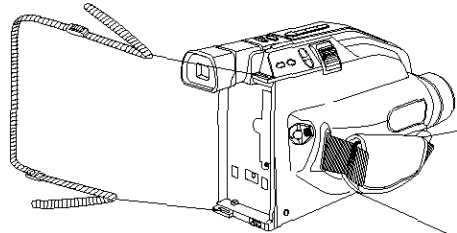



### Adjust the Length of the Shoulder Strap

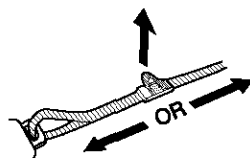

Pull a loop of strap from buckle, then pull strap tight to shorten or lengthen.

### Hand Strap

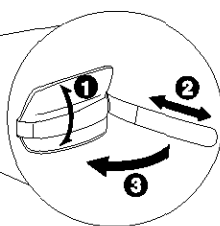

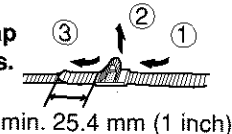
- 3** Re-insert the strap ends into buckles. 

Adjust Hand Strap length to fit your hand as shown.

### Lens Cap

#### Attaching the Lens Cap Strap to the Hand Strap:


Remove the Hand Strap from the front clasp and thread the Strap through the loop in the Lens Cap Strap. Reattach the Hand Strap.

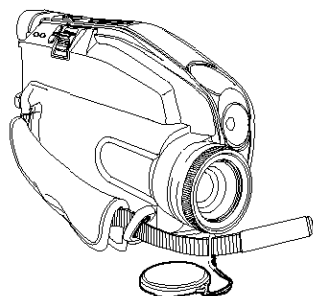

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA or VCR.

1, 2, 3, 4

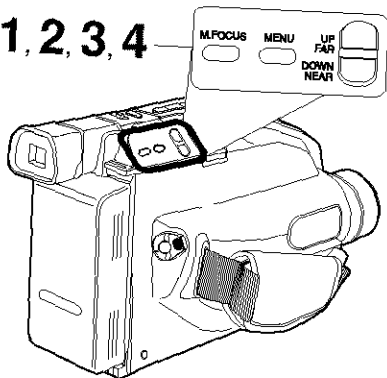


- 1 Press **MENU** for MENU mode.  
The CAMERA or VCR MENU screen (see below left) appears when Menu mode is entered.
- 2 Press **UP** or **DOWN** to highlight the desired menu item.
- 3 Press **M.FOCUS** to set selection.
- 4 Press **MENU** to exit.

### Note:


- The Menu mode is canceled if **UP/DOWN**, **M.FOCUS**, or **MENU** are not pressed within 5 minutes when Self Demo mode is off with no cassette tape and/or battery inserted.
- The Menu mode is canceled if **UP/DOWN**, **M.FOCUS**, or **MENU** are not pressed within 30 seconds when Self Demo mode is on with no cassette tape and/or battery inserted.

## Camera Mode Menu Screen

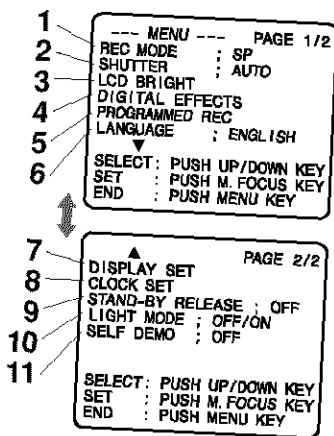

- 1 **REC MODE** (page 18).  
Change to desired tape speed, SP/SLP.
- 2 **SHUTTER** (page 26).  
Select desired shutter speed.
- 3 **LCD BRIGHT** (page 18).  
LCD BRIGHT SETTING sub menu is displayed.  
Adjust LCD monitor brightness level.
- 4 **DIGITAL EFFECTS** (pages 27~29, 31).  
DIGITAL EFFECTS sub menu is displayed.  
To select DIGITAL ZOOM, MOTIONSENSOR, or FADE.
- 5 **PROGRAMMED REC** (page 20).  
Camcorder starts and stops recording at a preset time.
- 6 **LANGUAGE** (page 7).  
Select LANGUAGE : ENGLISH or IDIOMA ; ESPANOL as desire.
- 7 **DISPLAY SET** (pages 32, 33).  
DISPLAY SET sub menu is displayed.  
To select DISPLAY or MODE SELECT.
- 8 **CLOCK SET** (pages 15, 16).  
CLOCK SET sub menu is displayed.  
Set the Date and Time.
- 9 **STAND-BY RELEASE** (page 19).  
ON : Enables quick resumption of recording from Stand-by mode.
- 10 **LIGHT MODE** (page 17).  
OFF/ON : Light can be set ON or OFF.  
OFF/ON/AUTO : Light can be set ON, OFF, or AUTO.
- 11 **SELF DEMO** (page 8).  
ON : SELF DEMO screen is displayed.

## VCR Mode Menu Screen

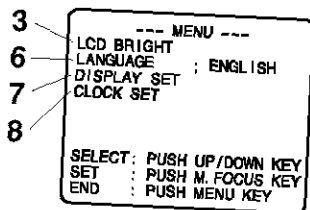


Set the following items in order: Time Zone, Daylight Saving Time, Date, and Time.

### Before you begin...


- Connect Camcorder to power source.
- Set POWER to CAMERA or VCR.

1, 2, 3, 4

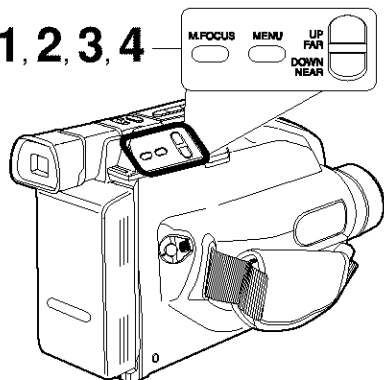


**1** Press **MENU** for MENU mode.

Press **UP** or **DOWN** to select **CLOCK SET**.

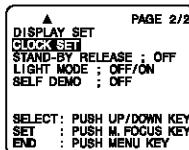


[CAMERA MODE]

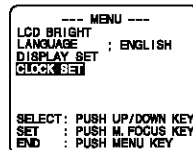

[VCR MODE]

**2** Press **M.FOCUS** for **CLOCK SET** menu.

Press **UP** or **DOWN** to select **TIME ZONE**, **DST**, or **DATE/TIME**.

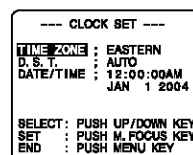

**3** Press **M.FOCUS** for menu of item selected in step 2.

To change the setting:

**TIME ZONE** → Go to step 3a on page 16.

**D.S.T.** → Go to step 3b on page 16.


**DATE/TIME** → Go to step 3c on page 16.

**4** Press **MENU** twice to exit.


## 3a Setting the Time Zone

The Camcorder is preset to Eastern time.

### [ Time Zone chart ]

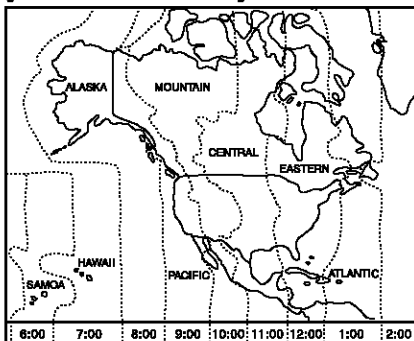

Press **UP** or **DOWN** to select local time zone.  
Press **M.FOCUS** to confirm entry.

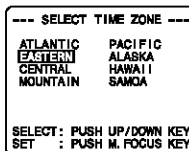

- When traveling, repeat this operation and select one of the 8 listed time zones to set the clock to local time.

#### Note :


- Clock may lose or gain up to 2 minutes per month.
- When traveling outside the listed time zones, set clock to local time manually.
- To adjust or set clock, see "Setting Date and Time" (below).

## 3b Auto Daylight Saving Time


Clock will auto-adjust to daylight saving time (DST).

### DST: AUTO

Spring (First Sunday in April) :  
ahead one hour.

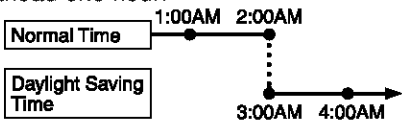


Autumn (Last Sunday in October) :  
back one hour.

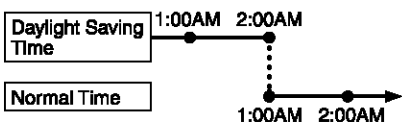

The Camcorder is preset to DST: **AUTO**.  
If DST is not observed in your area, set to **OFF** by doing the following.

Press **UP** or **DOWN** to select OFF or AUTO.  
Press **M.FOCUS** to confirm entry.

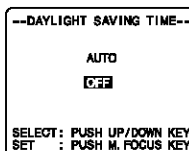



#### Note:

- Auto DST does not function if time zone is set to Hawaii or Samoa (see "Setting the Time Zone" above).

## 3c Setting Date and Time

Date and time including leap years are calculated up to DEC 31, 2099.

### EXAMPLE :

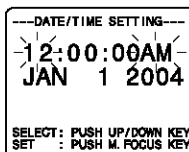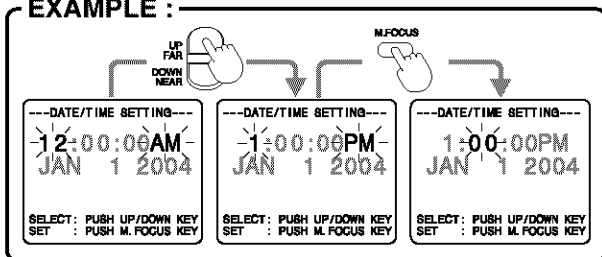

Press or hold down **UP** or **DOWN** to select hour, then press **M.FOCUS** to fix.


Repeat for minute, month, day, and year.

Clock starts when year is entered and **M.FOCUS** is pressed.



## Using the Light

For recording in dim lighting.

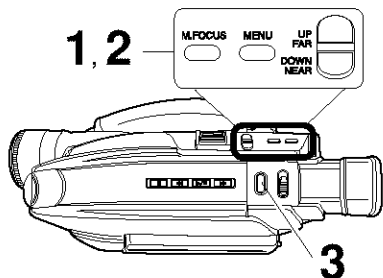


### Note:

- Using Light reduces battery operating time.
- Provide proper ventilation when using Light extensively in a hot environment.
- Using Light when the Camcorder is powered by a car battery may shorten bulb life.
- Set Light to OFF when not in use.
- When Camcorder is in CAMERA Rec mode with LIGHT MODE set to ON or AUTO, changing to VCR Play mode will cause the light to go out and the menu setting will revert to OFF.

When returning to CAMERA Rec mode, the LIGHT MODE must be set again.

## Replacing the Bulb

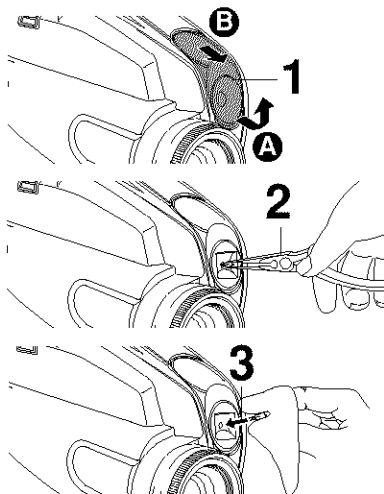


## DANGER:

Use only replacement bulb (PART NO. VLLW0015) supplied by Panasonic to reduce risk of fire. Handle new bulb with cloth or tissue as skin oils will decrease bulb life. Remove lens cover and allow bulb to cool before replacing to avoid possible burn hazard.

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

**1** Press **MENU** for MENU mode. Press **UP** or **DOWN** to select **LIGHT MODE**.

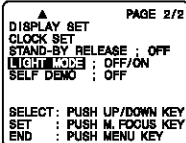


**2** Press **M.FOCUS** to set OFF/ON or OFF/ON/AUTO. Press **MENU** to exit.

**3** Press **LIGHT** repeatedly for Light ON, AUTO, or OFF.

- In AUTO, light turns itself on/off according to lighting conditions.

## EVF or LCD Monitor

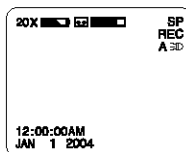

**SP REC A** : Light is on.

**A** : Light mode is auto.

## CAUTION



This mark indicates that light becomes hot. Never cover Light while on.

## Before you begin...

- Order Part No. VLLW0015 for replacement bulb.
- Set POWER to OFF.

**1** Slightly raise portion **A** of lens cover to unhook, and slide portion **B** forward to remove.

**2** Using Tweezers or needle-nose pliers, carefully remove bulb.

- Take unit to service center if you need assistance.

**3** Replace bulb using a clean cloth or tissue. (Do not touch with fingers.)


**4** Replace lens cover.

### Note:

- Handle bulb gently. Excessive force may cause bulb to crack.


## Recording via EVF or LCD Monitor

View recording scene on EVF (Electronic Viewer Finder) or LCD (Liquid Crystal Display) monitor.

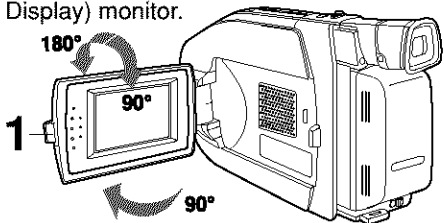


### CAUTION

Rotating partially open LCD monitor may block cassette door and damage Camcorder body.

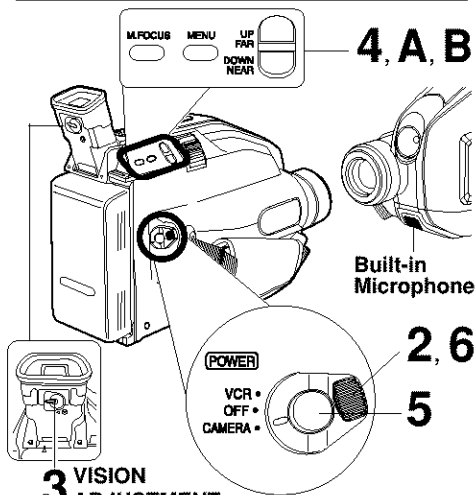


### To adjust LCD BRIGHT

**A** Press **MENU** for MENU mode. Press **UP** or **DOWN** to select **LCD BRIGHT**.

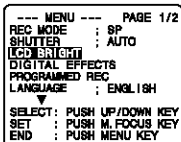

**B** Press **M.FOCUS** for LCD BRIGHT SETTING menu. Press **UP** or **DOWN** to adjust LCD monitor brightness level.

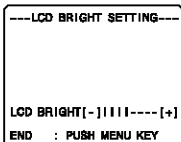


## Before you begin...

- Connect Camcorder to power source.
- Insert cassette with record tab (page 12).

**1** Press **LCD-OPEN** to unlock the LCD monitor. Swing LCD monitor fully open and adjust viewing angle.

**2** Set **POWER** to **CAMERA**.

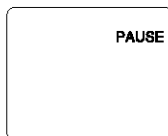

- Be sure **POWER** is fully turned to **EVF or LCD Monitor CAMERA** position. (Record/Pause mode)
- EVF or LCD monitor turns on/off by the **POWER** switch.
- Both EVF and LCD monitor turn on when LCD is at 180° (see above left). This allows both you and the subject to view the recording.

**3** **LCD**: Adjust LCD monitor brightness level. See "To adjust LCD BRIGHT" below.

**EVF**: Look into EVF and adjust **VISION ADJUSTMENT** to your preference.

**4** Set **REC MODE** to "SP" or "SLP" in the **CAMERA MODE** Menu (page 14).

**5** Press **RECORD/PAUSE** to start or pause recording.


**6** Set **POWER** to **OFF** when finished.

• To remove the cassette, slide the **TAPE EJECT** switch (page 12).

### Note:

- When Camcorder is aimed at excessively bright objects, or bright lights, a vertical bar may appear in the picture. This is normal for the CCD pick-up. Try to avoid this when possible.
- Using LCD monitor reduces battery operation time. Return LCD monitor to locked position when not in use.

- Connect Camcorder to power source.
- Insert cassette with record tab (page 12).

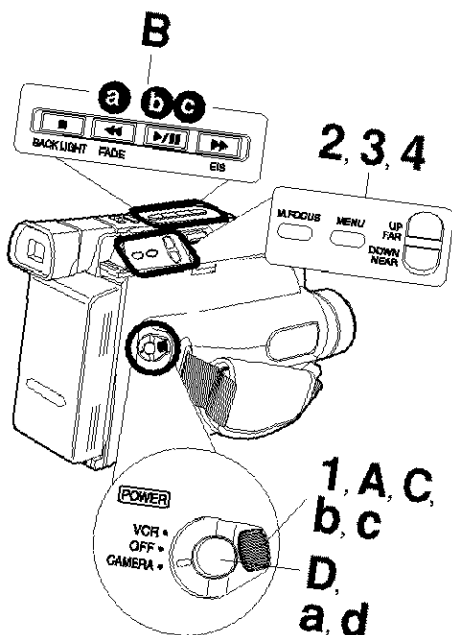

## Stand-by Quick Release

If left in RECORD/PAUSE mode for 5 minutes, Camcorder switches to Stand-by mode to conserve battery. When set to ON, Stand-by Quick Release lets you resume recording by pressing **RECORD/PAUSE** two times. Stand-by Quick Release is set to OFF at the factory.

**1** Set **POWER** to **CAMERA**.

**2** Press **MENU** for MENU mode.


Press **UP** or **DOWN** to select **STANDBY/RELEASE**.

**3** Press **M.FOCUS** to select ON or OFF.

**ON** : From Stand-by mode, press **RECORD/PAUSE** two times to resume recording.

**OFF** : From Stand-by mode, set **POWER** to **OFF**, then to **CAMERA**. Press **RECORD/PAUSE** to record.

**4** Press **MENU** to exit.

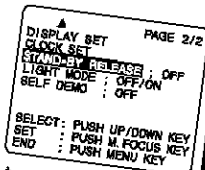

Basic Operation

## Manual Easy Editing

For proper continuity when taping from Stop mode or after attaching a new Battery.

**A** Set **POWER** to **VCR**.

**B** **a** Press **◀** (**REWIND/SEARCH**) to rewind a few seconds of tape.

**b** Press **▶/II** (**PLAY/STILL**) to review recording.

**c** Press **▶/II** (**PLAY/STILL**) where you want to continue recording.

**C** Set **POWER** to **CAMERA**.

**D** Press **RECORD/PAUSE** to resume recording.

## Easy Edit Stand-by

For a smooth transition between scenes if recording is stopped, and then started within 24 hours.

**a** Press **RECORD/PAUSE** to stop recording.

**b** Set **POWER** to **OFF** and leave cassette in Camcorder.

**c** To resume recording, set **POWER** to **CAMERA**.


**d** Press **RECORD/PAUSE** to resume recording.

**Note:**

- Use Manual Easy Edit (left) if more than 24 hours before recording is resumed.

## Programmed Recording

Set a recording start and stop time. Or, set a 5 or 10 second interval recording to be done each minute.

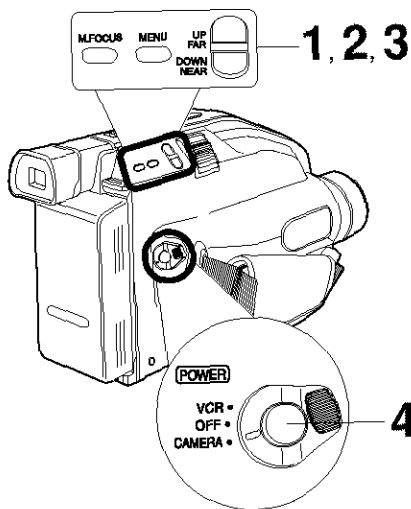

**REC TIME :**

→ 10MIN. → 20MIN. → 30MIN.

INTERVAL\*2    INTERVAL\*1    TO TAPE

10SEC/MIN.    5SEC/MIN.    END

\*1 Record 5 seconds each minute.  
\*2 Record 10 seconds each minute.

## Before you begin...

- Connect Camcorder to power source. Use AC Adaptor for longer recordings.
- Insert cassette with record tab (page 12).
- Set **POWER** to **CAMERA**.

**1** Press **MENU** for MENU mode. Press **UP** or **DOWN** to select **PROGRAMMED REC.**

```

--- MENU --- PAGE 1/2
REC MODE : SP
SHUTTER : AUTO
LCD BRIGHT
DIGITAL EFFECTS
PROGRAMMED REC
LANGUAGE : ENGLISH
SELECT : PUSH UP/DOWN KEY
SET : PUSH M.FOCUS KEY
END : PUSH MENU KEY
    
```

**2** Press **M.FOCUS**. (Current time is displayed.) Each additional press of **M.FOCUS** increases start time by 30 minutes.

```

START : 10:20PM
REC TIME : 10MIN.

SELECT : PUSH UP/DOWN KEY
SET : PUSH M.FOCUS KEY
START : PUSH RECORD KEY
CANCEL : PUSH MENU KEY

10:20:00PM
    
```

**3** Press **DOWN** to select **REC TIME**. Press **M.FOCUS** repeatedly to select one of the options shown at left.

```

START : 10:30PM
REC TIME : 10MIN.

SELECT : PUSH UP/DOWN KEY
SET : PUSH M.FOCUS KEY
START : PUSH RECORD KEY
CANCEL : PUSH MENU KEY

10:20:00PM
    
```

To cancel the setup, press **MENU** twice.

**4** Press **RECORD/PAUSE** to place Camcorder in stand-by mode.

```

STAND-BY
START : 10:30PM
REC TIME : 10MIN.

10:20:00PM
JUN 1 2004
    
```

Recording will be done as scheduled.



### Note:

- Start time may not be set over 24 hours from current time.
- Camcorder shuts off at tape end, or 12 hours after Interval Recording starts.
- To cancel, set **POWER** to **OFF**.


# Playing Back Recordings

## Before you begin...

- Connect Camcorder to power source.
- Insert recorded tape.

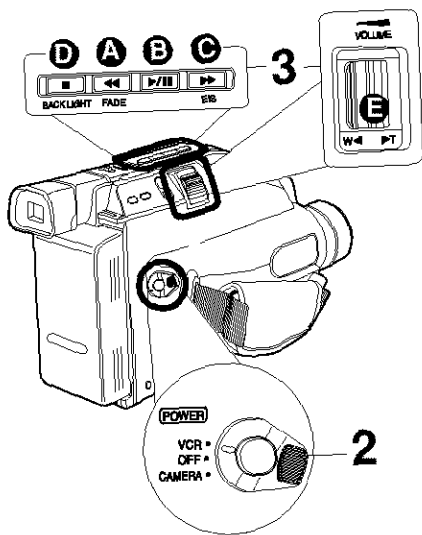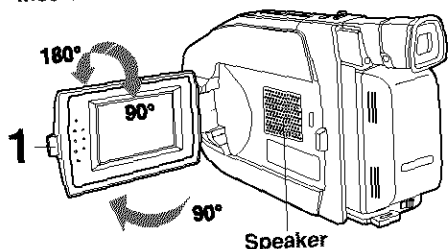

## Tracking Control

 

### Auto Tracking


Continuously analyzes each recording for optimum picture quality.

### Manual Tracking

Some recordings require manual adjustment to reduce noise.  
 Press **UP** or **DOWN** until Playback picture clears up.  
 Press **M.FOCUS** to return to Auto Tracking.

## Playback on EVF or LCD Monitor

- 1 Press **LCD-OPEN** and swing LCD monitor fully open.
- 2 Set **POWER** to **VCR**.
  - If tape has no record tab, auto playback begins.
  - EVF or LCD monitor turns on/off by the **POWER** switch.
- 3 Playback function buttons.
  - A** ◀◀ (**REWIND/SEARCH**) : Rewind tape.
  - B** ▶▶/|| (**PLAY/STILL**) : Play tape.
  - C** ▶▶▶ (**FAST FORWARD/SEARCH**) : Fast Forward tape.
  - D** ■ (**STOP**) : Stop tape.
  - E** **VOLUME** : During playback, adjust volume of speaker.

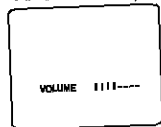

Press "W" : Volume down.      Press "T" : Volume up.

### Note:

- Using LCD monitor reduces battery operating time. Return LCD monitor to locked position when not in use.
- During playback, press **MENU** to adjust LCD monitor brightness (page 18).

## Special Effects

### Quick Visual Search

#### Search Speed

- SP (Standard Play) : 3 times normal.
- SLP (Super Long Play) : 9 times normal.

#### During playback, press:

- ▶▶▶ (**FAST FORWARD/SEARCH**) : fast forward search
  - ◀◀ (**REWIND/SEARCH**) : rewind search
- Press again or press ▶▶/|| (**PLAY/STILL**) for normal play.

### Still Picture

Press ▶▶/|| (**PLAY/STILL**) to freeze picture.  
 Press again for normal play.  
 This feature works best in SLP mode (page 12).

### Note:


- During search, horizontal noise bars will appear. Audio is muted.
- To protect video heads and tape, operating modes will revert as follows after 5 minutes:  
 Still → Stand-by  
 Stand-by → Power off (when Battery Pack is used).
- Tape auto-rewinds if played or fast forwarded to end.

Basic Operation

## TV Playback or Viewing

Connect Camcorder to a TV to view playback or recordings in progress.

### Connections

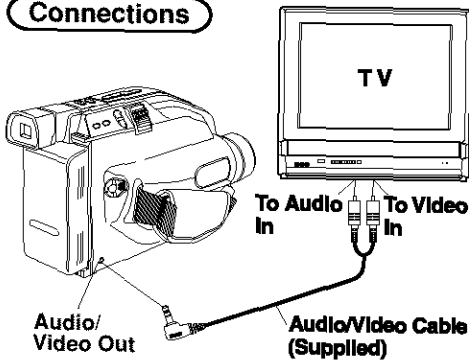


## Before you begin...

- Connect Camcorder to power source.
- Make all TV-Camcorder connections.

- 1** Set **POWER** to:  
**VCR** → view playback.  
**CAMERA** → view picture as it is recorded.
- 2** Turn TV **ON** and set to **LINE INPUT**. See TV owner's manual.
- 3** Begin playback or recording.

## VCR Playback using PlayPak (Optional)


### Load Battery in PlayPak

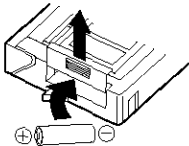

Remove Battery lid and insert AA battery.

- Do not reverse polarity.
- Replace battery when tape loading/unloading takes longer than usual.

### Insert VHS Cassette in PlayPak

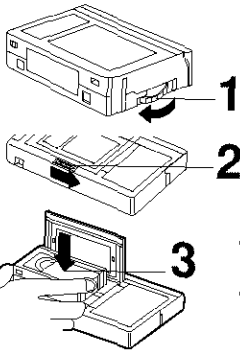


**1** Turn **VHS** cassette **Tape Wheel** in direction of arrow to take up any slack.


**2** Slide **RELEASE** to open cassette lid.

**3** Insert the **VHS** cassette with the window up and on the left, then snap lid shut.

- Do not obstruct cassette reel while loading.
- Allow PlayPak Load Detector to fully retract before using in VHS VCR.

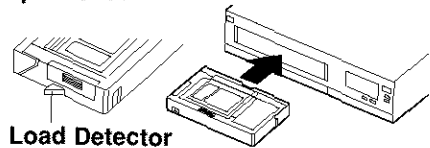


### Remove VHS Cassette

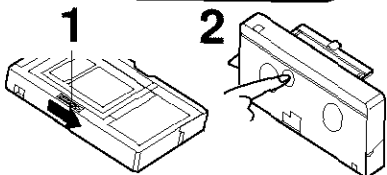

**1** Slide **RELEASE** and wait for lid to open.

**2** Push cassette out through hole in bottom of PlayPak with your finger.

## Connections

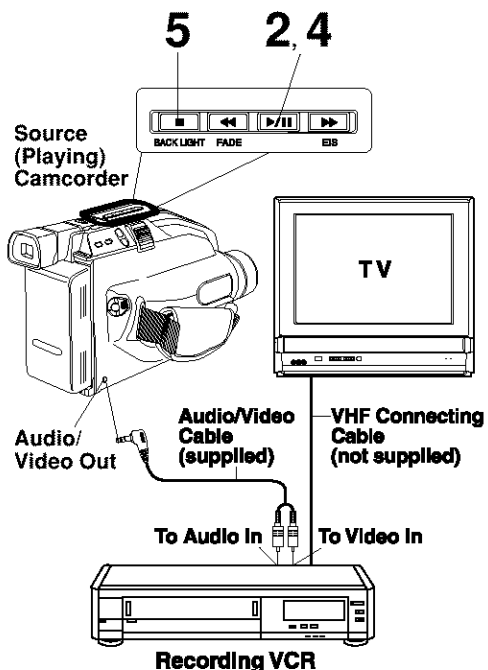

## Monitor with your TV

- Turn TV on and tune to VCR channel (CH3 or CH4).
- Set TV/VCR Selector on VCR to VCR.

## Before you begin...

- Make Camcorder-VCR connections (see left).
- Turn both units on.
- Set VCR input signal to LINE.  
Please see VCR owner's manual.
- Set Camcorder POWER to VCR.

- 1** Insert a pre-recorded tape into Camcorder and a blank tape with record tab into VCR.
- 2** Press **▶/II (PLAY/STILL)** on Camcorder, then **press again** at starting point.
- 3** Press **REC.**, then **STILL/PAUSE** on VCR.
- 4** Press **▶/II (PLAY/STILL)** on Camcorder and **STILL/PAUSE** on VCR to start copying.
- 5** Press **■ (STOP)** on both units to stop copying.

### Note:


- Camcorder will only playback tapes recorded in SP or SLP mode.
- Dubbing may reduce picture quality.

### CAUTION:

Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

# Four-Speed Zoom


Zoom in (close up) and out (wide angle) in one of four speeds ranging from slow (16 seconds) to fast (2 seconds).

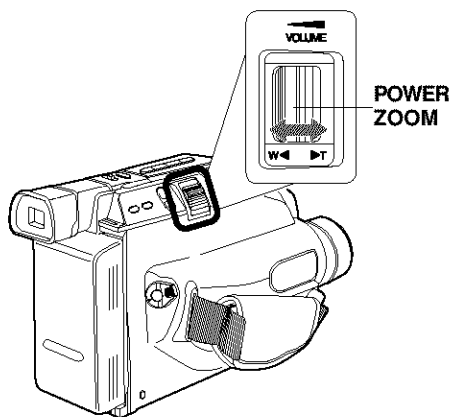

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

### Zoom In ("T")

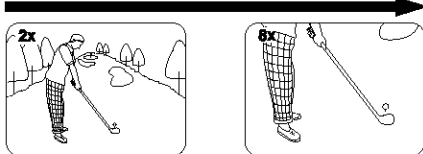

### Zoom Out ("W")

## Zoom slowly:


Lightly press "T" (telephoto) or "W" (wide angle) POWER ZOOM button.

## Zoom quickly:

Apply more pressure to the button.

# Backlight

Use when subject is darker than surroundings, in shadowed area, or in front of the light source.

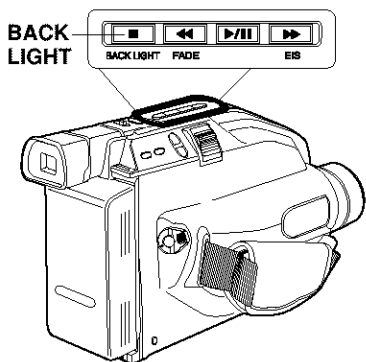


## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

Press ■ (BACK LIGHT) while recording to select the level of backlight compensation.

In normal lighting, press ■ (BACK LIGHT) repeatedly until no indicator is displayed.

### EVF or LCD Monitor

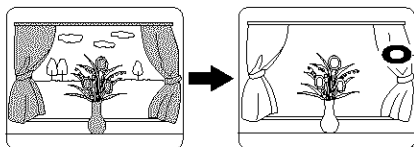

### No Indication (Normal)

- First press (Low)
- Second press (Medium)
- Third press (High)
- Fourth press



## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

## Auto Focus

Camcorder automatically focuses on subject even during zooming.

Auto Focus is on when “MF” is not displayed in EVF or LCD monitor.



Press **M.FOCUS** to remove “MF” in EVF or LCD monitor if necessary.

## Manual Focus

Use Manual Focus (MF) when :

- recording through glass.
- lighting is poor.
- subject is far away with objects in foreground.
- subject has distinct horizontal lines.
- subject is not centered in EVF or LCD monitor.
- subject has a shiny surface.
- subject is slanted.
- subject is bright and flat, like a white wall.
- subject has fast motion, like a golf swing.

EVF or LCD Monitor

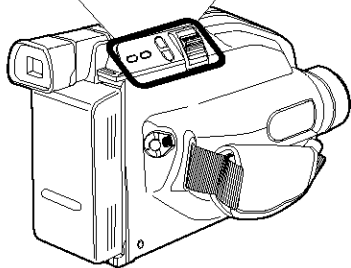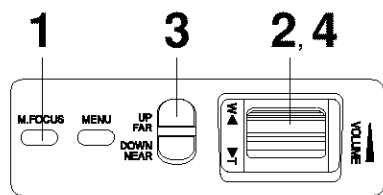

- 1** Press **M.FOCUS** so “MF” (Manual Focus) appears in EVF or LCD monitor.
- 2** Press “**T**” (**telephoto**) on **POWER ZOOM** to maximum zoom in.
- 3** Press **UP (FAR)** or **DOWN (NEAR)** until subject is in focus.
  - Back away from subject if necessary.
- 4** Press “**W**” (**wide angle**) on **POWER ZOOM** as desired.
  - **Refocus as needed** when aiming at new scenes.

Special Features

## Macro Focus (close-ups)

Auto Focus functions up to 12.7 mm (1/2 inch) from subject.

Press “**W**” on **POWER ZOOM** to maximum wide angle.

Bring Camcorder up close to the subject.

# High Speed Shutter

Improves Still or Slow Motion playback picture of high speed subjects (e.g. a tennis stroke), when viewed on Camcorder (Still only) or a 3 or 4 head VCR (Still and Slow Motion).


## Auto Shutter

In AUTO mode (no indication in EVF or LCD Monitor), shutter speed is auto-adjusted from 1/60 to 1/350 according to subject brightness.

- AUTO mode is selected each time POWER is set to CAMERA.

## Manual Selection

The faster the shutter speed, the more light is needed for proper picture and color quality. High Speed Shutter indication flashes if light is inadequate. Provide additional light.

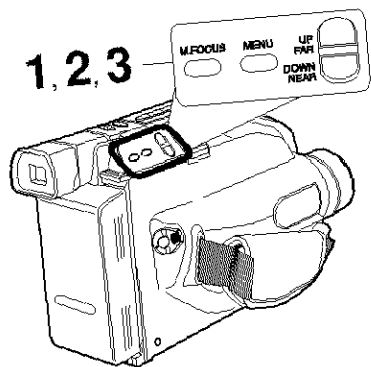


## Before you begin...

- Connect Camcorder to power source.
- Insert cassette with record tab (page 12).
- Set POWER to CAMERA.

**1** Press **MENU** for MENU mode.  
Press **UP** or **DOWN** to select **SHUTTER**.

**2** Press **M.FOCUS** repeatedly to select shutter speed.

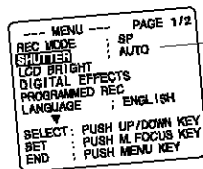



→ AUTO → 1/60 → 1/100 → 1/250 → 1/500  
← 1/10000 ← 1/4000 ← 1/2000 ← 1/1000 ←

**3** Press **MENU** to exit.

## Note:

- Shutter speed cannot be set to 1/60 if Digital E.I.S. feature is set to ON.
- Provide additional halogen or tungsten light for use indoors or in poor light. Fluorescent light degrades picture.
- Auto Focus may not function properly if high speed shutter is used in inadequate light.
- Setting reverts to AUTO each time POWER is set to CAMERA.


An interesting way to open and close scenes.

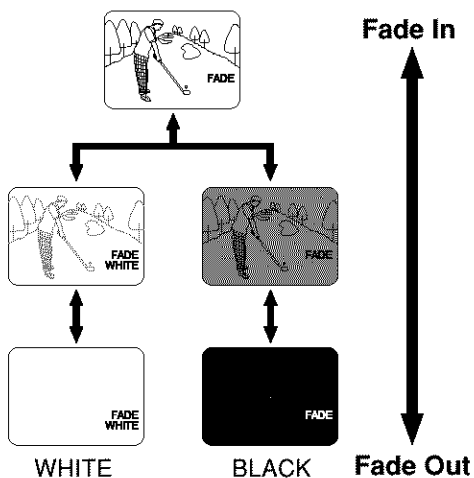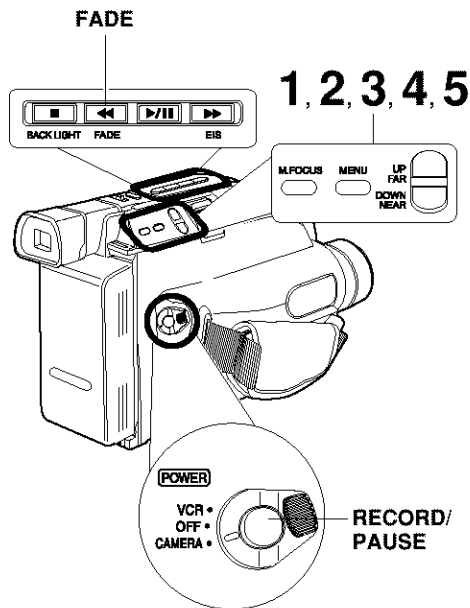


### Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.


**1** Press **MENU** for MENU mode.  
Press **UP** or **DOWN** to select **DIGITAL EFFECTS**.

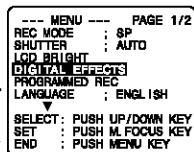


**2** Press **M.FOCUS** for DIGITAL EFFECTS menu. Press **UP** or **DOWN** to select **FADE**.

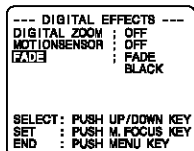

**3** Press **M.FOCUS** for FADE menu. Press **UP** or **DOWN** to select **AUTO FADE**.

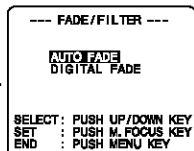

**4** Press **M.FOCUS** for AUTO FADE ; COLOR menu. Press **UP** or **DOWN** to select BLACK or WHITE.

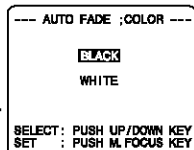

**5** Press **M.FOCUS** to confirm entry. Press **MENU** twice to exit.

#### Fade In:

In RECORD/PAUSE mode, press **FADE** so "FADE" flashes in EVF or LCD monitor.

#### Press RECORD/PAUSE.

Recording starts as picture and sound gradually fade in.

#### Fade Out:

While recording, press **FADE** so "FADE" flashes in EVF or LCD monitor.

#### Press RECORD/PAUSE.



Picture and sound gradually fade out, and recording is paused.

If **FADE** is pressed accidentally, press again so "FADE" disappears in EVF or LCD monitor.

Special Features

# Color Digital Fade

Choose from 7 fade effects in 8 different colors.

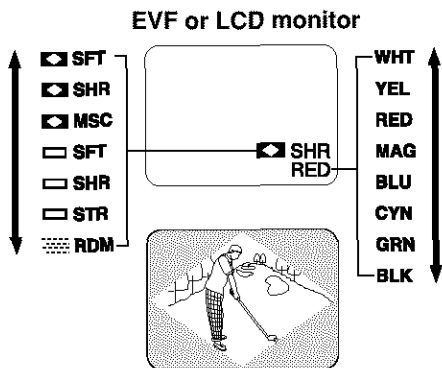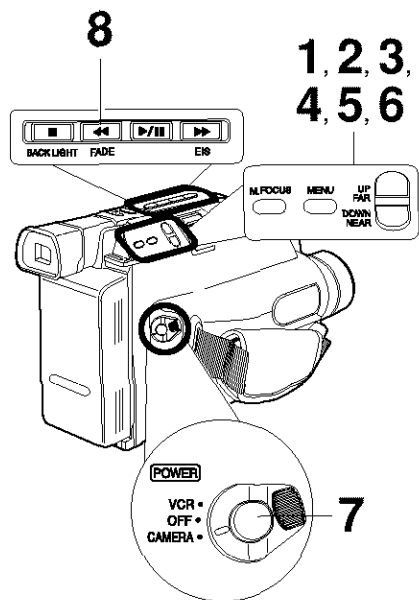

- For more effects, stop fade in or fade out at any time (except RANDOM mode) by pressing **◀ (FADE)**. Then, press **◀ (FADE)** to resume fade.


**Note:**

- Audio is not affected by fade.
- To cancel Digital Fade, do steps 1-3 and 6. In step 3, select AUTO FADE.


## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.


**1** Press **MENU** for MENU mode. Press **UP** or **DOWN** to select **DIGITAL EFFECTS**.

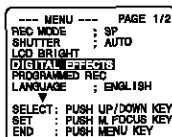


**2** Press **M.FOCUS** for DIGITAL EFFECTS menu. Press **UP** or **DOWN** to select **FADE**.

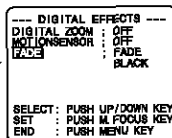


**3** Press **M.FOCUS** for FADE menu. Press **UP** or **DOWN** to select **DIGITAL FADE**.

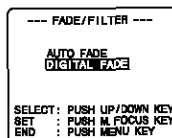

**4** Press **M.FOCUS** for DIGITAL FADE menu. Press **UP** or **DOWN** to select **TYPE**. Press **M.FOCUS** for TYPE menu. Press **UP** or **DOWN** to select from 7 different fade types. • A preview of each fade type is displayed as it is selected.

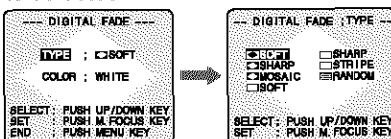

**5** Press **M.FOCUS** for DIGITAL FADE menu. Press **UP** or **DOWN** to select **COLOR**. Press **M.FOCUS** for COLOR menu. Press **UP** or **DOWN** to select from 8 colors. • A preview of each color is displayed as it is selected.

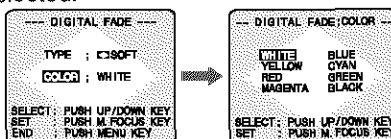




**6** Press **M.FOCUS** to confirm entry. Press **MENU** three times to exit.

**7** Start recording (page 18).

**8** Press **◀ (FADE)** for about 2 seconds to fade out during recording (selected fade type flashes). Press **◀ (FADE)** again to fade in.

Power Zoom magnification is digitally increased.


1, 2, 3, 4, 5

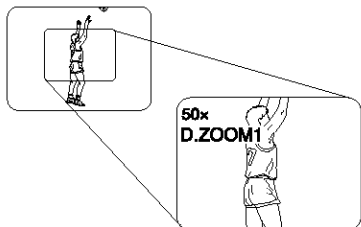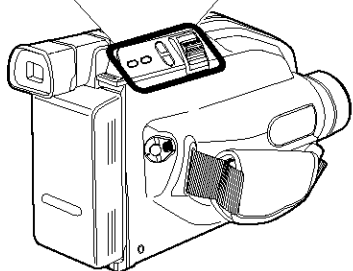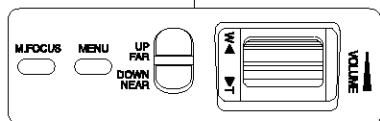


## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

**1** Press **MENU** for MENU mode. Press **UP** or **DOWN** to select **DIGITAL EFFECTS**.

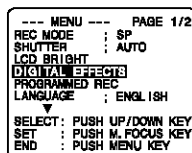

**2** Press **M.FOCUS** for DIGITAL EFFECTS menu. Press **UP** or **DOWN** to select **DIGITAL ZOOM**.

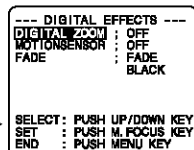

**3** Press **M.FOCUS repeatedly** to select D.ZOOM1, D.ZOOM2, or OFF.  
 D.ZOOM 1 : 150× maximum  
 D.ZOOM 2 : (PV-L354: 700× maximum)  
 (PV-L454: 750× maximum)  
 OFF : Turn off D.ZOOM

The Higher digital magnification levels may cause picture distortion.

**4** Press **MENU** twice to exit.

**5** Press **"T"** on **POWER ZOOM**.

Digital Zoom starts when normal zoom reaches maximum (20×).

- Zoom level appears in EVF or LCD monitor.
- POWER ZOOM switch controls digital zoom level.
- Normal zoom resumes when level falls to 20×.


**6** Repeat steps 2~3 to select OFF to cancel this feature.

# Digital Electronic Image Stabilization (E.I.S.)

Helps compensate for unintentional hand and/or Camcorder movement. Reduces jitter in recordings even if made from a moving car, etc.

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

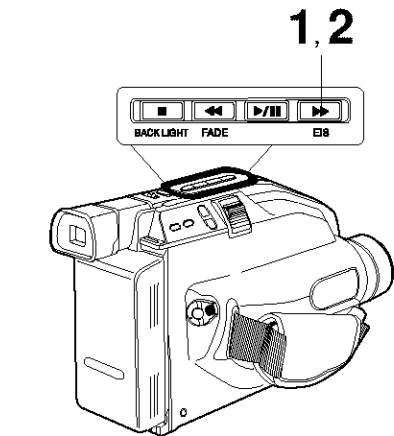


**1** Press **▶▶ (EIS)** to display “EIS” in the EVF or LCD monitor.

- Image becomes slightly enlarged and shutter speed auto-adjusts from 1/80 to 1/350 according to brightness.
- Use High Speed Shutter (page 26) if needed. Shutter speed setting remains after EIS is canceled.


**2** Press **▶▶ (EIS)** again to cancel when not in use.

## E.I.S. may not function during...

- extreme Camcorder movement.
- recording of subjects with distinct horizontal or vertical stripes.
- low light situations (EIS indicator flashes).
- intense fluorescent lighting situations.
- recording of very fast motion.

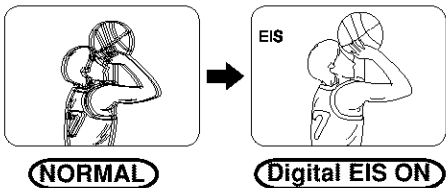

Recording starts automatically if motion is detected.

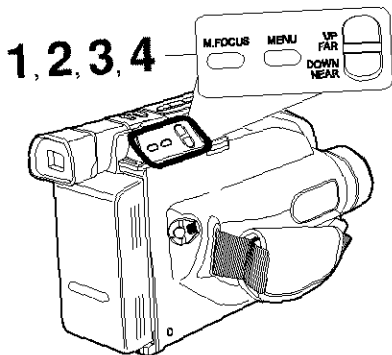

**MotionSensor may mistakenly start when:**

- background is plain, like a white wall, or has distinct vertical, horizontal, or slanted stripes, like a venetian blind.
- brightness suddenly changes.


**MotionSensor may not start when:**

- motion is very slow or fast.
- moving object is very small.
- motion occurs only in 1 corner of viewing area.
- in poor lighting (in this case, MOTIONSENSOR flashes).
- background is plain, like a white wall, or has distinct horizontal or vertical stripes.


## Before you begin...

- Connect Camcorder to power source. Use AC Adaptor for longer recordings.
- Insert cassette with record tab (page 12).
- Set **POWER** to **CAMERA**.
- Securely position and aim Camcorder.

**1** Press **MENU** for MENU mode. Press **UP** or **DOWN** to select **DIGITAL EFFECTS**.

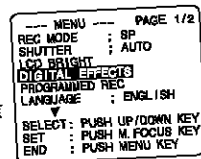


**2** Press **M.FOCUS** for DIGITAL EFFECTS menu. Press **UP** or **DOWN** to select **MOTIONSENSOR**.

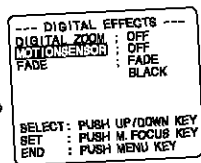

**3** Press **M.FOCUS** to select ON.

**4** Press **MENU** twice for MotionSensor stand-by mode. (If cassette is not inserted, "📺" will flash.)

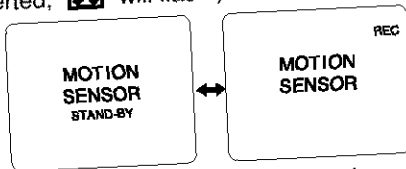

- Recording will start about 3 seconds after motion is detected.
- Date and time are recorded if displayed in EVF or LCD monitor (page 16).
- Recording stops about 30 seconds after motion ceases.

To cancel MotionSensor Mode, set **POWER** to **OFF**.

### Note:

- MotionSensor recording starts if Camcorder is bumped or repositioned.
- This feature is not available during normal recording.
- While in MotionSensor stand-by, the following functions are not available: Record/Pause, Stand-by mode, Digital E.I.S., Video Effects (Auto/Digital Fade).


Special Features

# Viewfinder/LCD Monitor Indications

Tape remaining and battery charge level can be displayed.


## Before you begin...

- Connect Camcorder to power source.

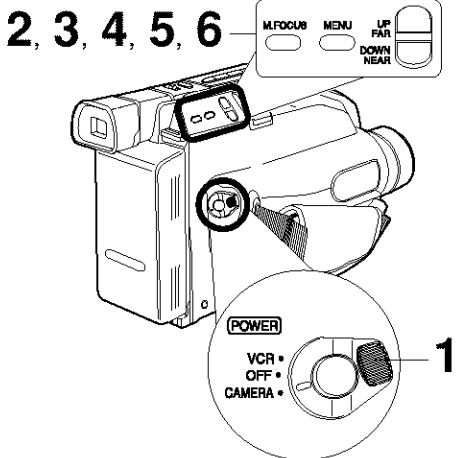


**1** Set POWER to CAMERA.

**2** Press MENU for MENU mode.  
Press UP or DOWN to select  
DISPLAY/SET.

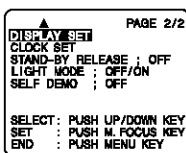



**3** Press M.FOCUS for DISPLAY SET menu.  
Press UP or DOWN to select  
MODE/SEL.

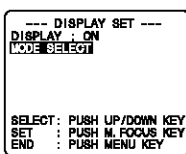

**4** Press M.FOCUS for MODE SELECT menu.

**5** Press M.FOCUS repeatedly to select the following displays.

## Battery Remaining: Tape Remaining:

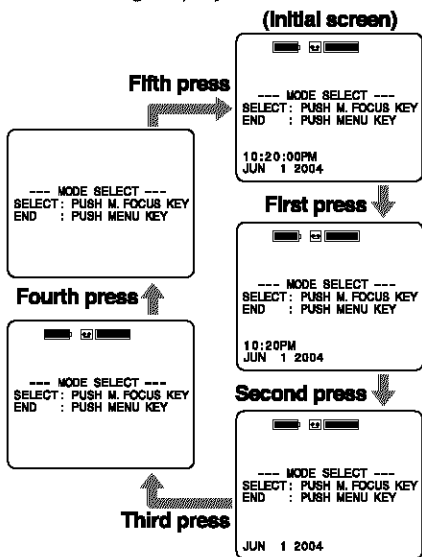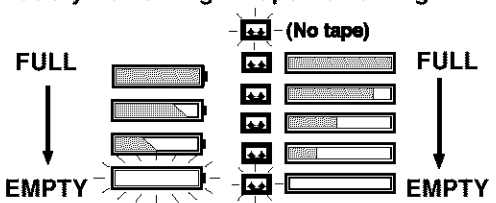



**6** Press MENU three times to exit.

- Tape remaining indicator operates a few seconds after tape starts moving.




## Recording the Date and Time

- 1** Repeat steps 1-5 on page 32 to select time/date, date only, or no display.

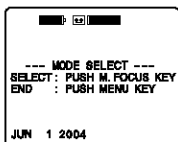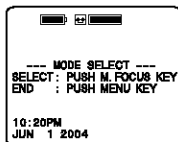


- 2** Start a recording (page 18).  
 • Only the Date and/or Time are recorded.

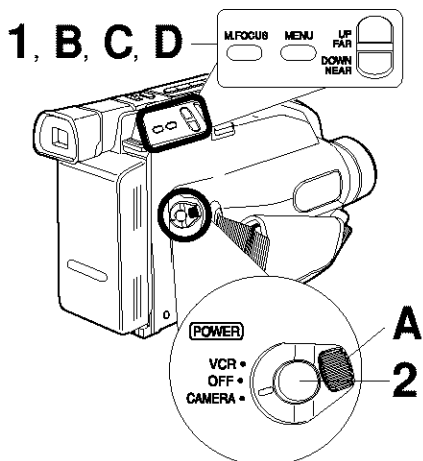


## Display-Off Mode

- A** Set **POWER** to **CAMERA** or **VCR**.

- B** Press **MENU** for MENU mode.  
 Press **UP** or **DOWN** to select **DISPLAY SET**.

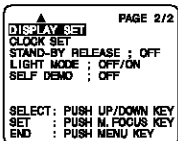


[CAMERA MODE]

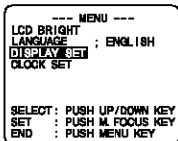


[VCR MODE]

- C** Press **M.FOCUS** for **DISPLAY SET** menu.  
 Press **UP** or **DOWN** to select **DISPLAY**.

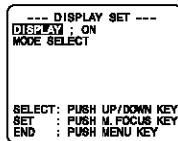





- D** Press **M.FOCUS** to select OFF.  
 Press **MENU** twice to exit.

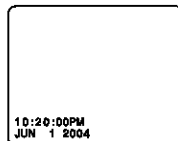Indications are restored the next time Camcorder is turned on.

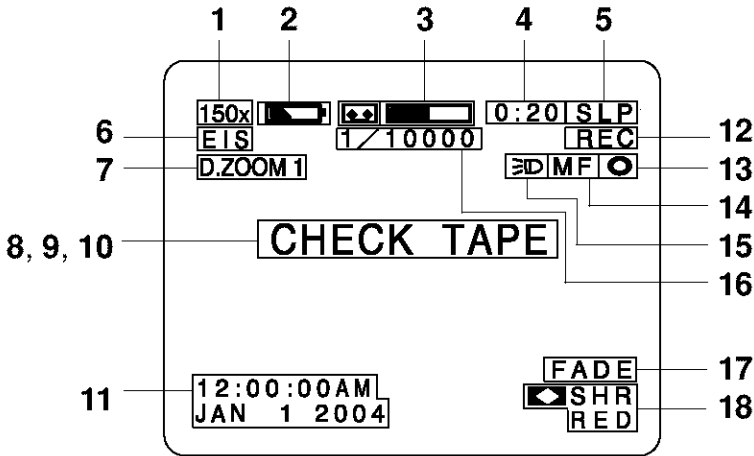

## CAMERA/VCR mode

 

- 1 Zoom Magnification level** (pages 24, 29).
- 2 Battery Remaining**  (page 32).  
“WARNING LOW BATTERY” appears and Camcorder shuts off after 15 seconds.
- 3 Tape Remaining** (page 32).  
**“” flashes and “TAPE END” appears for 5 seconds when:**
  - End of tape is reached.**“” flashes for 1 minute and “CHECK TAPE” appears for 5 seconds when:**
  - RECORD/PAUSE is pressed with no cassette, or cassette has no record tab in Camera (RECORD) mode.
  - PLAY, FF or REW is pressed with no cassette inserted in VCR mode.
- 4 10-Second Reminder**  
Each time a recording is started, a 10 second incremental display (up to 59:50) lets you monitor how long one scene is recorded.  

0:00	0:10	0:20	.....	59:50
↑				
(return to 0:00 and continue)				
- 5 TAPE SPEED** (pages 12, 18).  
(SP=standard play, SLP=super long play).
- 6 Digital E.I.S.** (page 30).
- 7 Digital Zoom** (page 29).
- 8 VCR-MODE**  
“VCR-MODE” appears for 1 minute when POWER is set to VCR or if RECORD/PAUSE is pressed in VCR mode.
- 9 DEW**  
If moisture condensation occurs in unit, “WARNING DEW DETECTED” appears, and Camcorder will shut off in 15 seconds. Wait until “WARNING” no longer indicates when Camcorder is turned on to use.
- 10 MotionSensor** (page 31).
- 11 Date and Time** (pages 15, 16).
- 12 Operating Mode**
  - REC (record)
  - PAUSE
  - FF (fast forward)
  - PLAY
  - REW (rewind)
- 13 Backlight** (page 24).
- 14 Manual Focus** (page 25).
- 15 Light ON/OFF/AUTO** (page 17).
- 16 High Speed Shutter** (page 26).
- 17 Fade** (page 27).
- 18 Color Digital Fade** (page 28).

## Notice

This product has a fluorescent lamp that contains a small amount of mercury. It also contains lead in some components. Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information please contact your local authorities, or the Electronics Industries Alliance: <<http://www.eiae.org>>

### U.S.A. CONSUMERS: ATTENTION :



A nickel cadmium battery that is recyclable powers the product you have purchased. At the end of its useful life, under various state and local laws, it is illegal to dispose of this battery into your municipal waste stream. Please call 1-800-8-BATTERY for information on how to recycle this battery.

OR

### U.S.A. CONSUMERS: ATTENTION :



A nickel metal hydride battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

For Your Information

# Replacing Clock Battery

The clock battery is pre-installed. Follow the steps below if replacement becomes necessary.


## ⚠WARNING

- Replace Battery with Panasonic or LIXING type CR2025 only. Use of another battery may present a risk of fire or explosion.
- Battery may explode if mistreated.
- As with any small object, this type of Battery can be swallowed by young children. Do not allow children to handle this Battery.

## ⚠CAUTION

- Dispose of used battery promptly.
- Do not recharge, disassemble or dispose of in fire.

## Clock Battery

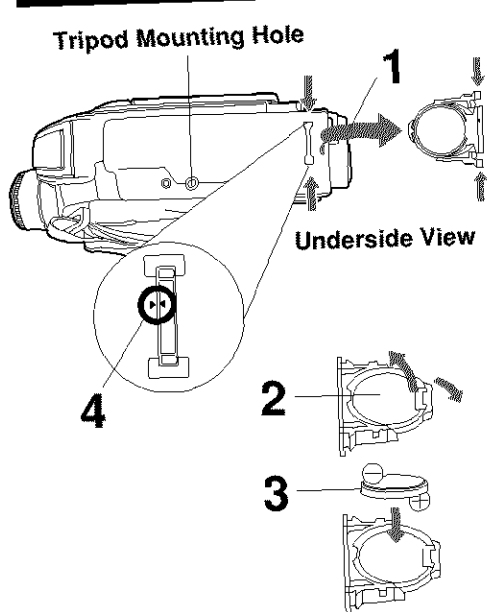

- 1** While pinching the 2 tabs, pull Battery Tray out.
- 2** Bend middle tab out and remove Battery.
- 3** Snap new Battery (⊕ mark down) into Battery Tray.
  - Do not reverse the polarity.
- 4** Insert Battery Tray so the triangle marks meet.

### Note:

- Improper installation, discharge, or missing battery causes "PLEASE CHECK CLOCK BATTERY" to appear.
- Battery life is approximately 5 years.

# Palmcorder Accessory System

To order instructions, see the Accessory Order Form page.

• The listed standard battery use times are based on continuous recording using this Palmcorder.

Accessory #	Figure	Description	Price
PV-A20		AC Adaptor with DC Power Cable (Charging of the Nickel Cadmium Battery or Nickel Metal Hydride Battery)	Call For Pricing
HHR-V60A/1B		Up to 6 hr Battery Pack (Rechargeable Nickel Metal Hydride Battery)	\$119.95
HHR-V40A/1B		Up to 4 hr Battery Pack (Rechargeable Nickel Metal Hydride Battery)	\$69.95
HHR-V20A/1B		Up to 2 hr Battery Pack (Rechargeable Nickel Metal Hydride Battery)	\$59.95
PV-AA6		"AA" Battery Case	\$20.00
PV-C16		Car Battery Cord	\$70.00
PV-P1		VHS PlayPak	\$39.95
PV-H18A		Carrying Case	\$49.95

**Note:**

• Prices subject to change without notice.

For Your Information

# Palmcorder Accessory Order Form

Please photocopy this form when placing an order.

1. Palmcorder Model # \_\_\_\_\_

2. Items Ordered

Accessory #	Description	Price Each	Quantity	Total Price
Subtotal				
Your State & Local Sales Tax				
Shipping & Handling				6.95
Total Enclosed				

3. Method of payment (check one)

- Check or Money Order enclosed (NO C.O.D.SHIPMENTS)
- VISA                      Credit Card # \_\_\_\_\_
- MasterCard              Expiration Date \_\_\_\_\_
- Discover                    Customer Signature \_\_\_\_\_

Make Check or Money Order to: PANASONIC ACCESSORIES

(Please do not send cash)

4. Shipping information (UPS delivery requires complete street address)

Ship To:

Mr.

Mrs.

Ms. \_\_\_\_\_

First \_\_\_\_\_ Last \_\_\_\_\_

Phone #:

Day (    ) \_\_\_\_\_

Street Address \_\_\_\_\_

Night (    ) \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

TO OBTAIN ANY OF OUR PALMCORDER ACCESSORIES YOU CAN DO ANY OF THE FOLLOWING:

VISIT YOUR LOCAL PANASONIC DEALER

OR

CALL PANASONIC'S ACCESSORY ORDER LINE AT 1-800-332-5368

[6 AM-5 PM M-F, PACIFIC TIME]

OR

MAIL THIS ORDER TO: PANASONIC SERVICES COMPANY ACCESSORY  
ORDER OFFICE

20421 84th Avenue South Kent, WA. 98032

<b>Power Source:</b>	Compact VHS Camcorder: DC 6 V AC Adaptor: 110/120/220/240 V AC, 50/60 Hz Battery: Nickel-Metal Hydride Type DC 6 V / Nickel-Cadmium Type DC 6 V (PV-L354) Nickel-Cadmium Type DC 6 V (PV-L454)
<b>Power Consumption:</b>	Compact VHS Camcorder: 6V DC 8.5 W (Max. 11.5 W) AC Adaptor: 19 W 1.2 W (when not in use.)
<b>Video Signal:</b>	EIA Standard (525 lines, 60 fields) NTSC color signal
<b>Video Recording System:</b>	2 rotary heads plus flying erase head Helical scanning system
<b>Audio:</b>	1 track
<b>Pick-Up System:</b>	Sequential color difference field reverse system
<b>Pick-Up Device:</b>	One integral color filter Charge Coupled Device (CCD)
<b>Lens:</b>	20:1 zoom lens, F1:1.7 with auto iris control Focal length: 2.8 mm - 56.0 mm 4 speed power zoom function
<b>Viewfinder:</b>	8.4 mm (0.33 inch) Electronic Viewfinder (PV-L354) 8.4 mm (0.33 inch) Liquid Crystal Color Electronic Viewfinder (PV-L454)
<b>LCD Monitor:</b>	63.5 mm (2.5 inch) Liquid Crystal Display
<b>Minimum Illumination Required:</b>	1.6 lx (F1:1.7) 0.16 footcandles
<b>Operating Temperature:</b>	0 °C~40 °C (32 °F~104 °F)
<b>Operating Humidity:</b>	10 %~75 %
<b>Weight:</b>	Compact VHS Camcorder: 0.874 kg / 1.93 lbs. (PV-L354) 0.89 kg / 1.96 lbs. (PV-L454) AC Adaptor: 0.3 kg 0.66 lbs.
<b>Dimensions:</b>	Compact VHS Camcorder: 87.2 (W) × 123 (H) × 226 (D) mm 3-3/8 (W) × 4-7/8 (H) × 8-7/8 (D) inch AC Adaptor: 68 (W) × 41 (H) × 140 (D) mm 2-11/16 (W) × 1-5/8 (H) × 5-1/2 (D) inch

Weight and dimensions shown are approximate.  
Designs and specifications are subject to change without notice.

# Before Requesting Service

If a problem arises, you may be able to correct it yourself.  
See Symptom and Correction list below.

Symptom	Correction
No picture in EVF or LCD monitor ...	<ul style="list-style-type: none"><li>• Connect Power Source. (pp. 10, 11)</li><li>• Set POWER to VCR or CAMERA. (pp. 18, 21)</li><li>• Check for Dew Indication. (p. 34)</li><li>• Use fully charged Battery. (p. 10)</li><li>• Firmly connect all needed cables. (p. 11)</li></ul>
Video cassette cannot be inserted ...	<ul style="list-style-type: none"><li>• Connect Power Source. (pp. 10, 11)</li><li>• Insert cassette, window side facing out. (p. 12)</li></ul>
Video cassette cannot be removed ...	<ul style="list-style-type: none"><li>• Connect Power Source. (pp. 10, 11)</li></ul>
Operation buttons do not work ...	<ul style="list-style-type: none"><li>• Check for Dew Indication. (p. 34)</li></ul>
Recording cannot be done ...	<ul style="list-style-type: none"><li>• Make sure record tab is intact. (p. 12)</li><li>• Check Battery Indicator. (p. 32)</li><li>• Check for Dew Indication. (p. 34)</li></ul>
Auto Focus does not operate ...	<ul style="list-style-type: none"><li>• Set FOCUS to AUTO. (p. 25)</li><li>• Set POWER to CAMERA. (p. 18)</li></ul>
Sound from microphone can't be monitored ...	<ul style="list-style-type: none"><li>• Set unit to REC or Record/Pause mode.</li></ul>
Camera picture is too dark ...	<ul style="list-style-type: none"><li>• Set HIGH SPEED SHUTTER to AUTO. (p. 26)</li></ul>
No playback picture, or the playback picture is noisy or contains streaks ...	<ul style="list-style-type: none"><li>• Press UP/DOWN button during playback (Tracking Control). (p.21)</li></ul>
"Panasonic ITS TAPES CAN PLAY IN YOUR VCR ..." appears in EVF or LCD Monitor ...	<ul style="list-style-type: none"><li>• Set POWER to CAMERA, then set SELF DEMO : OFF in MENU screen to cancel Demo mode. (p. 8)</li></ul>
Top of playback picture waves back and forth excessively ...	<ul style="list-style-type: none"><li>• A playback signal is not as stable as an off the air TV signal, so the top of your TV screen may appear bent or unstable during playback. This is called, "Horizontal AFC time constant change." To correct, slowly turn the TV horizontal hold control. If your TV does not have this control, or adjusting it does not help, contact your TV service center. (Some nominal service charges may be required.)</li></ul>

## Video Head Cleaning



**Clogged Video Head**

While head cleaning is normally not needed, playing old or damaged tapes may clog the heads. When playback picture resembles example at the left, head cleaning is required.

Ideally, head cleaning should be performed by a qualified service technician. When this is not possible, purchase a *head cleaning cassette*. Be sure to follow cleaning cassette instructions exactly and only use when symptoms occur.



## Request for Service Notice:

Request for service notice.

- In the unlikely event this product needs service.
- Please include your **proof of purchase**.  
(Failure to do so will delay your repair.)
- To further speed your repair please provide an explanation of what is wrong with the unit and any symptom it is exhibiting.

---

---

---

---

Mail this completed form and your Proof of Purchase along with your unit to:  
Panasonic Services Company  
1705 N. Randall Road  
Elgin, IL. 60123-7847  
Attn: Camcorder Repair

**For Your Information**

# Limited Warranty

PANASONIC CONSUMER ELECTRONICS COMPANY,  
DIVISION OF MATSUSHITA ELECTRIC  
CORPORATION OF AMERICA  
One Panasonic Way Secaucus, New Jersey 07094

PANASONIC SALES COMPANY, DIVISION OF MATSUSHITA  
ELECTRIC OF PUERTO RICO, INC.,  
AVE. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park,  
Carolina, Puerto Rico 00985

## Panasonic/Quasar Video Products Limited Warranty

### Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Product	Parts	Labor	Service	Contact Number
Camcorder	One (1) Year (except CCD Image Sensor) CCD Image Sensor - 6 (Six) Months	Ninety (90) Days	Carry-in or Mail-In	1-800-211-PANA(7262)
DVD/VCR Deck, A/V Mixer	One (1) Year	Ninety (90) Days	Carry-in or Mail-In	1-800-211-PANA(7262)
TV/VCR, TV/DVD, TV/DVD/VCR Combination	One (1) Year (except CRT) CRT - Two (2) Years	Ninety (90) Days Ninety (90) Days	Carry-In: 21" CRT and Smaller In-Home or Carry-In: 22" CRT and Larger	1-800-211-PANA(7262)
TV/HDR Combination	One (1) Year (except CRT) CRT - Two (2) Years	Ninety (90) Days Ninety (90) Days	In-Home or Carry-In	1-888-843-9788
Rechargeable Batteries (in exchange for defective item)	Ten (10) Days	Not Applicable	Carry-in or Mail-In	1-800-211-PANA(7262)
Tape (in exchange for defective item)	Five (5) Days	Not Applicable	Carry-in or Mail-In	1-800-211-PANA(7262)
Memory Cards (in exchange for defective item)	Ninety (90) Days	Not Applicable	Carry-in or Mail-In	1-800-211-PANA(7262)

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must carry-in or mail-in your product or arrange for in-home service, as applicable, during the warranty period. If non-rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is". A purchase receipt or other proof of the original purchase date is required for warranty service.

### Carry-In, Mail-in or In-Home Service

For Carry-In, Mail-In or In-Home Service (as applicable) in the United States call toll free contact number listed above or visit Panasonic Web Site: <http://www.panasonic.com>  
For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.  
In-Home service, if applicable, requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain in-home repairs will not be completed in-home, but will require that the product, or parts of the product, be removed for shop diagnosis and/or repair and then returned.

### Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images on the picture tube resulting from viewing and fixed images (including, among other things, letterbox pictures on standard 4:3 screen TV's, or non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.** (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer, loss of media or images, data or other memory or recorded content. The items listed are not exclusive, but are for illustration only.)  
**ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE (INCLUDING COST OF AN IN-HOME SERVICE CALL, WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.**

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicenter; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/support>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:

1-800-211-PANA (7262),

Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

For hearing or speech impaired TTY users, TTY : 1-877-833-8855

## Accessory Purchases

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pasc.panasonic.com>

or, send your request by E-mail to:

[npcparts@panasonic.com](mailto:npcparts@panasonic.com)

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday-Friday 9 am to 8 pm, EST.)

Panasonic Services Company

20421 84th Avenue South,

Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

For hearing or speech impaired TTY users, TTY : 1-866-605-1277

## Product Repairs

## Centralized Factory Servicenter

MAIL TO : Panasonic Services Company  
1705 N. Randall Road,  
Elgin, IL 60123-7847  
Attention: Camcorder Repair

Please carefully pack and ship, prepaid and insured, to the Elgin Centralized Factory Servicenter. Customer's in Puerto Rico, please ship or carry in to location below ("Service in Puerto Rico").

### Service in Puerto Rico

*Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company*

*Factory Servicenter:*

*Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park,*

*Carolina, Puerto Rico 00985*

*Phone (787)750-4300 Fax (787)768-2910*

As of October 2003

<b>A</b>		<b>F</b>		<b>R</b>
AC Adaptor .....	11	Fade .....	27, 28	RECORD/PAUSE Button
Accessories (Optional) ...	37	FADE Button .....	27, 28	..... 18
Accessories (Supplied) ....	2	FAST FORWARD/ SEARCH Button .....	21	Record/Playback Time ...
AccuBrite™ Built-in Light		Focus .....	25	Replacing Clock Battery .
.....	17			Request for Service Notice
Audio/Video Cable ...	22, 23	<b>H</b>		..... 41
Audio/Video Out .....	22, 23	Hand Strap .....	13	REWIND/SEARCH
Auto Daylight Saving Time		High Speed Shutter .....	26	Button .....
.....	16			21
<b>B</b>		<b>L</b>		<b>S</b>
Backlight .....	24	LANGUAGE .....	7	Safety Precautions .....
BACK LIGHT Button .....	24	LCD BRIGHT .....	18	Self Demo Mode .....
Battery Pack .....	10, 11	LCD Monitor .....	18, 21	Shoulder Strap .....
BATTERY RELEASE		LCD-OPEN Button ...	18, 21	Speaker .....
Button .....	10	Lens Cap .....	13	Special Effects .....
Before Requesting Service		LIGHT Switch .....	17	Specifications .....
.....	40	Limited Warranty .....	42	Still Picture .....
Built-in Microphone .....	18			STOP Button .....
		<b>M</b>		21
<b>C</b>		MENU Button .....	14	<b>T</b>
Camera Recording ...	18~20	MENU Mode.....	14	Tab .....
Car Battery Cord .....	11	M.FOCUS Button		TAPE EJECT Switch
Cassette Information .....	12	.....	14, 21, 25	..... 12
Charging Battery .....	10	MotionSensor .....	31	Tracking Control .....
Clock Battery .....	36			Tripod Mounting Hole ....
Clock Set .....	15, 16	<b>P</b>		36
Copying your Tapes .....	23	PLAY/STILL Button .....	21	<b>U</b>
Customer Services		Playback .....	21, 22	UP (FAR) / DOWN (NEAR)
Directory .....	43	PlayPak (Optional) .....	22	Button .....
		Power Supply .....	10, 11	14, 21, 25
<b>D</b>		POWER Switch ...	8, 18, 21	<b>V</b>
DC IN .....	11	POWER ZOOM Button		VHF Connecting Cable ..
DC Power Cable .....	11	.....	24, 25, 29	Video Cassettes (tapes) .
Digital E.I.S. .....	30	Programmed Recording .	20	Video Head Cleaning .....
Digital Zoom .....	29			Viewfinder/LCD Monitor
Display-off Mode .....	33	<b>Q</b>		Indications .....
		Quick Operation Guide ....	9	..... 32~34
<b>E</b>				Viewing (TV/VCR) .....
EIS Button .....	30			VISION ADJUSTMENT ..
				VOLUME .....
				21
				<b>Z</b>
				Zoom .....
				24, 29

**Panasonic Consumer Electronics Company,**  
**Division of Matsushita Electric Corporation of America**  
 One Panasonic Way Secaucus, New Jersey 07094

**Panasonic Sales Company ("PSC"),**  
**Division of Matsushita Electric of Puerto Rico, Inc.**  
 Ave. 65 de Infanteria, Km. 9.5 San Gabriel Industrial Park Carolina,  
 Puerto Rico 00985



Printed in Indonesia  
 LSQT0753 A  
 S1203-0