

! WARNING



Injury Hazard

To prevent tipping, install range anti-tip bracket.

Save these Installation Instructions. If range is moved to a new location, the anti-tip bracket must be removed and reinstalled in the new location.

Failure to follow these instructions could result in serious injury.

Anti-Tip Bracket

Read and follow range Installation Instruction sheet first.

Complete this set of steps to secure the range to the floor before you move the range into final operating position.


Contact a qualified floor covering installer for the best procedure of drilling mounting holes through your type of floor covering.

Before moving, slide range onto cardboard or hardboard.


Tools needed:

hand or electric drill
wood floor - 1/8" drill bit
concrete - 3/16" drill bit


masking tape
hammer
flat-blade screwdriver

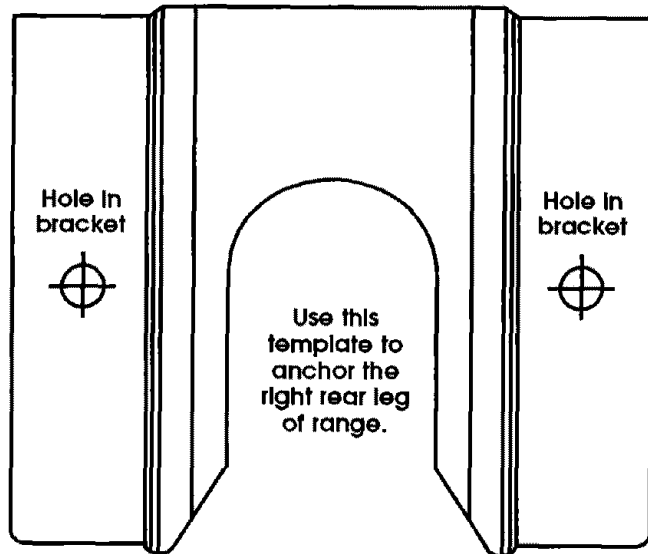

- 1.** The anti-tip bracket can be installed to hold either the right or left rear leg of range. Determine which leg to anchor. Place this sheet on the floor in the range opening so that the top edge is against the rear wall, molding or cabinet and the bracket template you need is in the location where the anti-tip bracket will be installed. Tape the sheet in place.

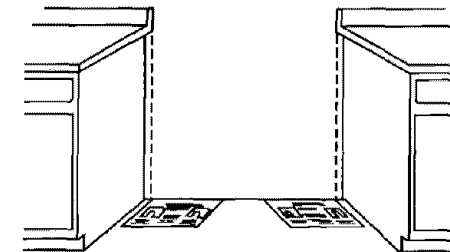


If the countertop is not flush with the cabinet opening edge, align the template to allow for the overhang.

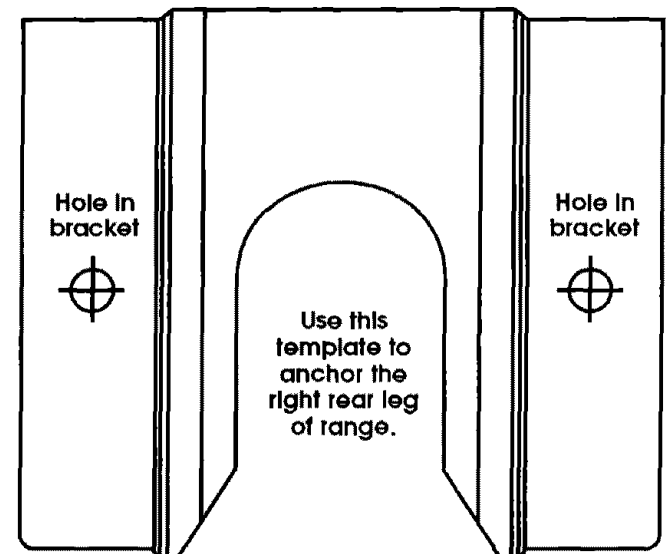

Parts supplied:


Anti-tip bracket

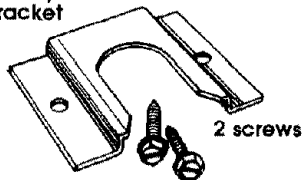

2 plastic anchors

2 screws

- 2.** To mount anti-tip bracket to wood floor, use the bracket template to mark where to drill mounting holes. Use a drill with a 1/8" drill bit to drill the two holes. Remove instruction sheet from floor. Line up holes in anti-tip bracket with holes in floor. Use the two screws provided to fasten anti-tip bracket to floor.

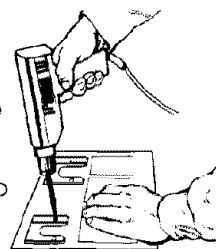


- 3.** To mount anti-tip bracket to concrete or ceramic floor, use the bracket template to mark where to drill mounting holes. Use a drill with a 3/16" drill bit to drill the two holes. Remove instruction sheet from floor.



Tap plastic anchors into mounting holes in floor with hammer. Line up holes in anti-tip bracket with holes in floor. Use the two screws provided to fasten anti-tip bracket to floor.

- 4.** Move range close to opening. Plug the power supply cord into the grounded outlet. Remove cardboard shipping piece from under range. Move range into position making sure rear leveling leg slides into anti-tip bracket.

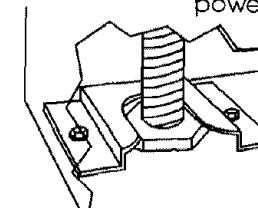

- 5.** Continue installing your range by using the range Installation Instructions. Start at the step that describes how to level the range.