




# DRYER OPERATING INSTRUCTIONS

## Model 84082/94082

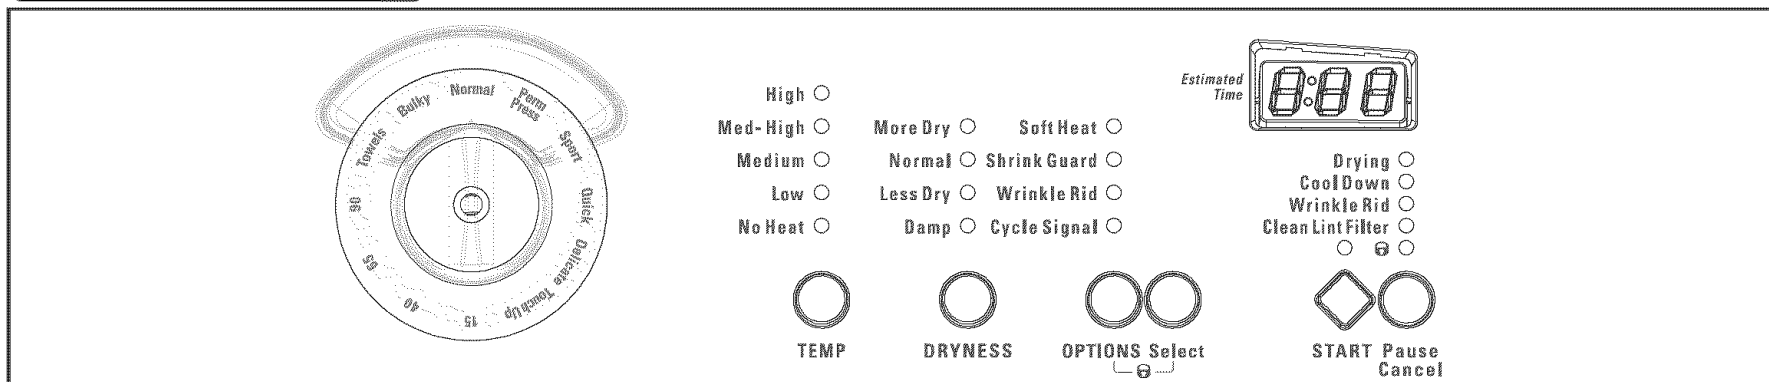

### Before Operating Your Dryer

Read your dryer Owner's Guide. It has important safety and warranty information. It also has many suggestions for best drying results.

**WARNING** To reduce the risk of fire, electric shock or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your dryer Owner's Guide before operating this appliance.

### Operating Steps

Read "Drying Procedures" in your Owner's Guide. It explains these operating steps in detail.

1. Prepare items for drying.
2. Check that lint filter is clean and in place.
3. Load the dryer. If desired, add a dryer fabric softener sheet. Close the door.
4. Select the cycle and settings for each load.
5. A suitable drying temperature, dryness level and options will automatically be displayed for each cycle. To change the temperature and dryness level, press TEMP and DRYNESS until the desired selections are made. To select an option, press OPTIONS until the indicator for a desired option flashes and press SELECT. Follow the same steps to delete an option. If a dryness level or option is not available for a cycle, it will not light.

6. The changes you make will be remembered the next time that cycle is selected. See the "Dryer Settings Chart" for more details.

7. Press START to begin the cycle.
  - To pause the cycle or change settings, press PAUSE/CANCEL **once**. To resume the cycle, press START again.
  - To stop or change the cycle, press PAUSE/CANCEL **twice**.

8. A signal will sound at the end of the cycle and periodically during Wrinkle Rid when the Cycle Signal option is selected. When the cycle ends, remove items immediately and hang or fold.

9. Clean the lint filter after every load.

### Cycle Selection

Turn the Cycle Selector knob to the desired cycle. For best results, follow the fabric care label instructions on items to be dried. To change the selection after the cycle has begun, press PAUSE/CANCEL **twice**.

### Auto Dry

Auto Dry cycles take the guesswork out of drying time. The load will automatically be dried at the selected temperature to the desired dryness level. The dryer senses the moisture level of the load as it tumbles through heated air. Auto Dry cycles save time and energy and protect fabrics. When the load has reached the selected dryness level, it will continue to tumble,

unheated, during a Cool Down period. This helps reduce wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

### Towels

Select this Auto Dry cycle for towel loads.

### Bulky

Select this cycle to dry a comforter, blanket, sleeping bag or similar item.

### Normal

Select this Auto Dry cycle for cotton items.

### Perm Press

Select this Auto Dry cycle to dry cottons and blends with a no-iron finish.

### Sport

Select this Auto Dry cycle to dry small loads of lightweight, synthetic apparel worn for working out, running, swimming, cycling, tennis and similar activities.

### Quick

Select this cycle to quickly dry a small load made up of just a few items. It provides approximately 20 minutes of tumbling followed by a 10-minute cool down period.

## Cycle Selection (Con't)

### Delicate

Select this Auto Dry cycle for knits and delicate items.

### Touch Up

Select Touch Up to help remove wrinkles from clean and dry items that were not taken from the dryer at the end of the cycle, have been stored in crowded closets or drawers, or unpacked from luggage following a trip. It provides approximately 10 minutes of tumbling followed by a 5-minute cool down period.

### Timed Dry

To manually select the drying time for any load, turn the Cycle Selector knob to a numbered setting. Drying times from 15 to 90 minutes are available in 20-minute increments. You will not be able to select a cycle or dryness level. Timed Dry is recommended when using the No Heat option.

---

## Temperature Selection

For best results, follow the fabric care label instructions on items to be dried. Press TEMP to select the drying temperature for each load.

**High** is recommended for sturdy fabrics.

**Medium High** is recommended for regular fabrics.

**Medium** is recommended for wrinkle free, permanent press and lightweight fabrics.

**Low** is recommended for delicate fabrics.

**No Heat** should only be used with a Timed Dry setting to dry items containing feathers, down, foam rubber, plastics or rubber-like materials; to freshen clothing, pillows or blankets; or to dust draperies.

**Note:** Using No Heat in any Auto Dry cycle will result in long drying times and /or wet loads at the end of the cycle.

**⚠ WARNING** To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use the No Heat setting only.

---

## Cycle Adjustments

A suitable dryness level and options will automatically be displayed for each cycle. The settings can be changed before the cycle is started. Those adjustments will automatically be remembered each time that cycle is selected. If a dryness level or option is not recommended for a cycle, the indicator will not light.

If changes are attempted after the cycle starts, the status lights will blink and the signal will beep 3 times. The cycle must be canceled before the settings can be changed. See the "Dryer Settings Chart" for more details.

### Dryness Level

To change the dryness level, press DRYNESS until the desired selection is made. Select **Normal Dry** for most loads.

Occasionally a load may seem too damp or over-dried at the end of the cycle. To increase drying time for similar loads in the future, select **More Dry**. For loads requiring less drying time, select **Less Dry**.

Select **Damp Dry** for items you wish to partially dry before hanging or ironing.

**Note:** To prevent over-drying, not every dryness level is available with every cycle.

### Options

To select or delete Soft Heat, Shrink Guard, Wrinkle Rid or Cycle Signal, press OPTIONS until the blinking light indicates the desired option. Then, while it is blinking, press SELECT. The indicator will light when the option has been selected. It will no longer be lighted when the option has been deleted. To provide the best care for your laundry items, not every option is available with every cycle.

Select **Soft Heat** to protect fabrics from the effects of over-drying. Wrinkling, static build-up, linting, fading and harshness can occur if loads are dried too long at the wrong temperature. As the load tumbles and becomes drier, the temperature is gradually lowered.

Select **Shrink Guard** to lower the initial drying temperature. Add it to the Soft Heat option to further protect fabrics from overdrying.

Select **Wrinkle Rid** if the dried load might not be removed promptly at the end of the cycle. The dry load will continue tumbling without heat for 30 minutes to help reduce wrinkling. When the Cycle Signal is selected, a beep will be heard every 5 minutes as a reminder to remove the load.

The **Cycle Signal** will sound at the end of the cycle and periodically during Wrinkle Rid.

---

## Dryer Features

### 🔒 (Control Lock)

To avoid having someone accidentally start or stop the dryer, press OPTIONS and SELECT at the same time until the 🔒 (Control Lock) indicator is lighted. To remove the control lock, press OPTIONS and SELECT again.

### Estimated Time

The estimated total cycle time will be displayed when the cycle is selected. The approximate time remaining will be displayed during the cycle.

Drying time varies depending on size and dampness of load and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

### Status Lights

The following indicators may be lighted during the cycle:

- Drying
- Cool Down
- Wrinkle Rid
- Clean Lint Filter
- 🔒 (Control Lock)

## ERROR CODE CHART

If the dryer stops, the status lights flash, the signal beeps and a code is displayed, an error has occurred. Press PAUSE/CANCEL twice. Consult the Error Code Chart below or the "Avoid Service Checklist" in the Owner's Guide for the possible cause and solution. Make necessary corrections, then select a cycle and press START. If the dryer stops, status lights flash again, the beeping continues and the code reappears, please contact service for assistance.

Error Code	Error	Possible Causes
4 beeps / E4A	Dryer ran too long	Lint filter blocked. Ventilation system clogged. Dryer overloaded.
6 beeps / E68	Push button does not function	Push button held too long or wedged in the control panel.

## DRYER SETTINGS CHART

AVAILABLE CYCLE SETTINGS - These temperatures, dryness levels and options are available with the following cycles:

	Towel	Bulky	Normal	Perm Press	Sport	Quick	Delicate	Touch Up	Timed Dry
<b>Estimated drying time ***</b>	60 minutes	45 minutes	50 minutes	40 minutes	20 minutes	30 minutes	20 minutes	15 minutes	15 to 90 minutes

### Temperatures

High	* ✓					✓			✓
Medium-High	✓	✓	* ✓	✓		✓			* ✓
Medium		* ✓	✓	* ✓	✓	* ✓	✓		✓
Low	-	✓	✓	✓	* ✓	✓	* ✓	* ✓	✓
No Heat	**		**	**	**		**		✓

### Dryness Level

More Dry	✓		✓						
Normal Dry	* ✓		* ✓	* ✓	* ✓		✓		
Less Dry			✓	✓	✓		* ✓		
Damp Dry			✓	✓	✓		✓		

### Options

Soft Heat			✓	* ✓	* ✓		* ✓		✓
Shrink Guard			✓	✓			✓		✓
Wrinkle Rid		✓	✓	* ✓		✓	* ✓	✓	✓
Cycle Signal	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓

\* Factory setting

✓ Available settings

\*\* Not recommended

\*\*\* Estimated cycle duration is based on normal dryness level and factory settings.