 
## INSTALLATION

## How to install your wine cellar

Select a good location. Place your wine cellar where it is easy to use.



Clean with soft towels dipped in warm water or detergent.

If neutral detergent is used, it must be cleaned with clean towels.

 


 
Connect it to a suitable and properly grounded outlet (115V, 15 Amps outlet).






Wine will reach desired temperature







 For a better performance of your wine cellar, air circulation must be adequate.



Install this wine cellar in an area where the temperature is between 55°F (13°C) and 110°F (43°C). If the temperature around wine cellar is too low or high, cooling ability may be lessened.

