

USER'S MANUAL

37" HD VIDEO MONITOR
Model LVM-37w1



Westinghouse

Contents

Product Safety Instructions	1
Safety Guidelines.....	2
Cleaning the HD Video Monitor.....	3

INSTALLATION

Package Contents.....	4
Front View of the HD Video Monitor.....	5
Rear View of the HD Video Monitor.....	5
Side View of the HD Video Monitor.....	6
Remote Control.....	8
Installation.....	9

OSD Functions

PICTURE PARAMETERS: Brightness / Contrast / Saturation / Hue / Color Temp / Sharpness / Aspect Ratio / Backlight / Reset.....	13
PC PARAMETERS: Auto Adjust / Clock / Phase / Position.....	14
AUDIO SETTINGS: Volume / Bass / Treble / Balance / Mute / Speaker / Reset.....	15
PICTURE-IN-PICTURE: Display Mode / Main Source / PIP Source / Swap / PIP Position / PIP Size / Audio From..	16
GENERAL SETTINGS: Menu Position / Menu Timeout / Language / Sleep Timer / Transparency / DPMS / System Info / Factory Reset.....	17
Specifications.....	18
Troubleshooting	19

PRODUCT SAFETY INSTRUCTIONS

Follow and obey all warnings and instructions marked on the HD Video Monitor. For your safety, please read all the safety and operating instructions before you operate the HD Monitor. Keep this user's manual for future reference.

Overloading

Do not overload wall outlets, extension cords, or power strips. This can result in fire or electronic shock.

Power Cord Protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Periodically inspect the cords and each end of the cords for damage. The HD Monitor shall be installed near a wall socket outlet and the plug on power cord shall be readily accessible.

Ventilation

Slots and openings on the cabinet are provided for ventilation purposes. To ensure reliable operation of the HD Monitor and to protect it from overheating, these openings must not be blocked or covered.

- Do not block the openings by placing the HD Monitor on a bed, sofa, rug or other similar surface.
- Do not place the HD Monitor in a built-in installation such as a bookcase or rack unless proper ventilation is provided and the manufacturer's instruction have been adhered to.

Other Notices

- Avoid exposing the HD Monitor to direct sunlight or high temperatures.
- Avoid exposing the HD Monitor to moisture or high humidity.
- Do not attempt repairs yourself. Your warranty does not cover repairs or attempted repairs by anyone not authorized by Westinghouse Digital.
- If the HD Monitor will not be used for a long period of time, unplug the HD Monitor and remove the batteries from the remote control.

Precautions

- Avoid touching the screen. Skin oils are difficult to remove.
- Never remove the rear cover. The HD Monitor contains high-voltage parts. You may be seriously injured if you touch them.
- Avoid exposing the HD Monitor to direct sunlight or another heat source. Orient the HD Monitor away from direct sunlight to reduce glare.
- Always handle the HD display with care when moving it.
- Place the HD Monitor in a well-ventilated area; don't place the HD Monitor in airtight compartments. Do not place anything on the HD Monitor that prevents heat dissipation.
- Ensure that the area around the HD Monitor is clean and free of moisture.
- Do not place heavy objects on the HD Monitor, audio/video cables, or power cord.
- If the HD Monitor emits smoke, abnormal noise, or a strange odor, immediately turn it off and contact the Westinghouse Service Center.
- **WARNING – To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose The HD Monitor To Rain Or Moisture!** The HD Monitor shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on the Monitor.

Safety Guidelines

CAUTION: The power supply outlet should be located near the HD Monitor and should be easily accessible. Always use the appropriate AC cord that is certified for your specific country. Some examples are listed below:

USA.....UL	Switzerland SEV
Canada.....CSA	Britain BASE/BS
Germany.....VDE	Japan Electric Appliance Control Act

IMPORTANT NOTICE CONCERNING POWER CORD SELECTION

The specific power cord for this HD Monitor is enclosed and has been selected according to the country of destination and must be used to prevent electric shock. Use the following guidelines if it is necessary to replace the original cord set, or if the cord set is not enclosed. The female receptacle of the cord set must meet IEC-60320 requirements and should look like Figure A1 below:


Figure A1 

Figure A2 

For the United States and Canada

In the United States and Canada the male plug is a NEMA5-15 style (Figure A2), UL Listed, and CSA Labeled. For LCD Monitors that are placed on a desk or table, type SVT or SJT cord sets may be used. For LCD Monitors placed directly on the floor, only SJT type cord sets may be used. The cord set must be selected according to the current rating for the LCD Monitor. Please consult the table below for the selection criteria for power cords used in the United States and Canada.

Cord Type	Size of Conductors in Cord	Maximum Current Rating of Unit
SJT	18 AWG	10 Amps
	16 AWG	12 Amps
	14 AWG	12 Amps
SVT	18 AWG	10 Amps
	17 AWG	12 Amps

FCC Compliance Statement

This equipment has been tested and complies with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and may cause harmful interference to radio communications if not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the LCD Monitor and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the Westinghouse Service Center or an experienced radio/Monitor technician for assistance.

FCC Warning

To assure continued FCC compliance, the user must use a grounded power supply cord and the provided shielded video interface cable with bonded ferrite cores. If a BNC cable is used, use only a shielded BNC (5) cable. Also, any unauthorized changes or modifications not expressly approved by Westinghouse Digital will void the user's authority to operate this device.

Cleaning the HD Video Monitor

- **MAKE SURE THE HD Monitor IS TURNED OFF**
- **NEVER SPRAY OR POUR ANY LIQUID DIRECTLY ONTO THE SCREEN OR CASE**

To clean the screen:

1. Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles.
2. If it still is not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner onto a clean, soft, lint-free cloth, and wipe the screen.

To clean the case:

1. Use a soft, dry cloth.
2. If it still is not clean, apply a small amount of non-ammonia, non-alcohol based, mild non-abrasive detergent onto a clean, soft, lint-free cloth, then wipe the surface.

Disclaimer

 
Westinghouse Digital does not recommend the use of any ammonia or alcohol-based cleaners on the HD Monitor screen or case. Some chemical cleaners have been reported to damage the screen and/or HD Monitor case. Westinghouse Digital will not be liable for damage resulting from the use of any ammonia or alcohol-based cleaners.

INSTALLATION

Package Contents


Your product package includes:

- 37" Westinghouse HD Video Monitor
- Remote Control (with batteries)
- Power Cord
- Quick Connect Guide
- User's Manual
- Component Video Cable (Green, Blue, Red)
- Audio Cable (Red, White)

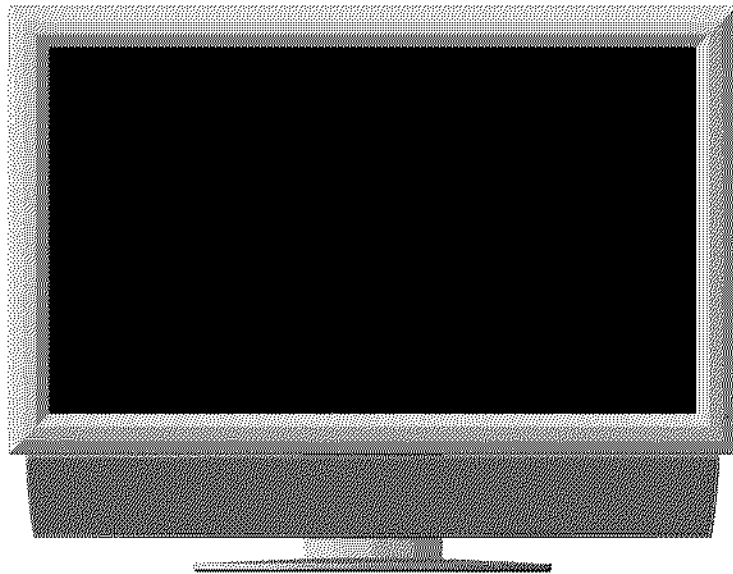


Front View of the HD Video Monitor

 Use the buttons on the right side of the HD Monitor or on the remote control to display the On Screen Display (OSD). The OSD controls are defined in "OSD Functions" on page 12.

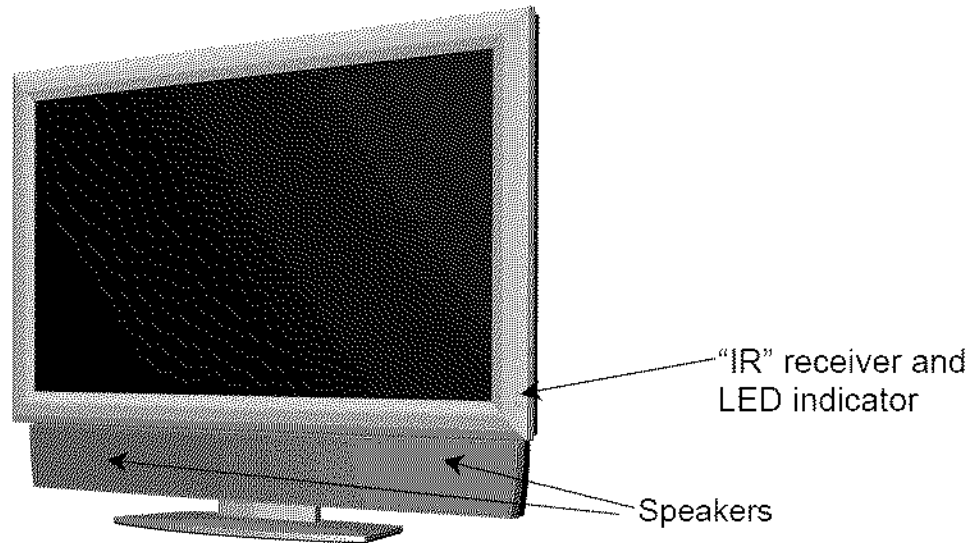


Rear View of the HD Video Monitor

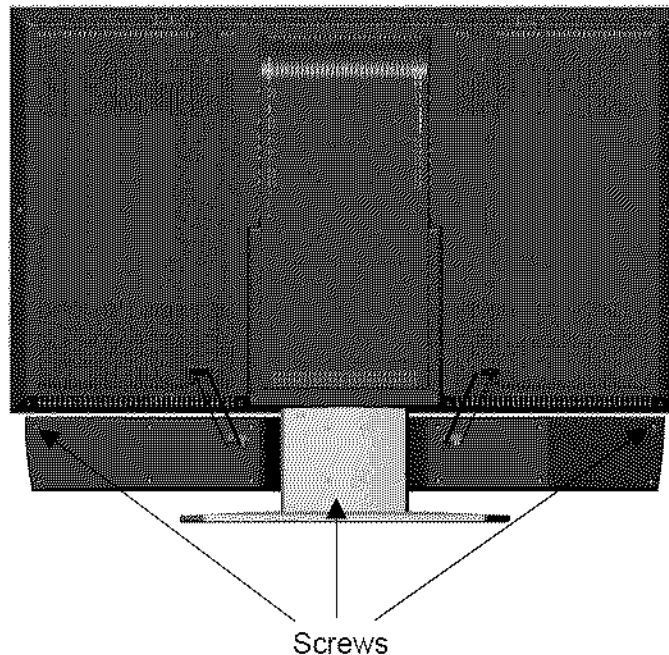 

To Detach the Speaker from the Video Monitor


1. Turn off the monitor and unplug the power supply.
2. Detach red and black speaker wires from the monitor first, then from the speaker.
3. Remove screws from the upper corners of the speaker.
4. Remove 4 screws from the back of the base.
5. Gently remove the speaker from the base.

 Side View of the HD Video Monitor

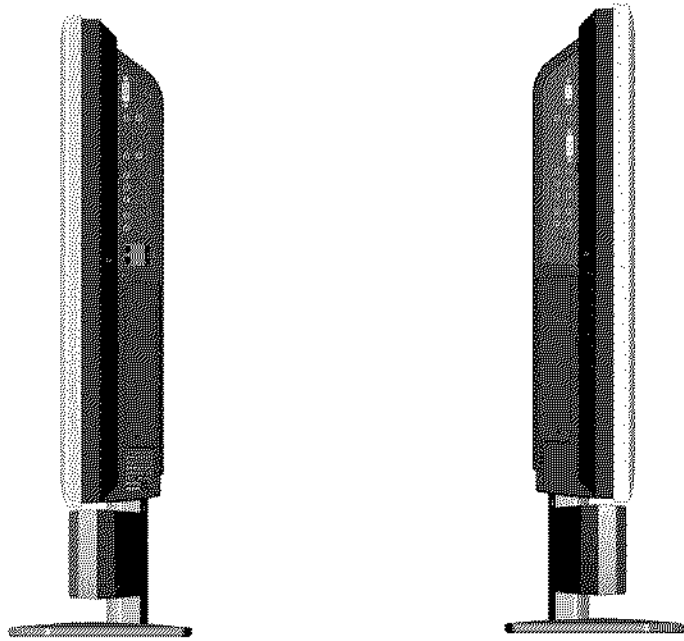

	1. Menu	Turn OSD Menu ON/OFF
	2. Volume +/-	Increase/Decrease sound volume or adjust a highlighted control while in the OSD Menu.
	3. OSD Selection ▼/▲	Highlight a control while in the OSD Menu.
	4. Input	Select Active Video Input or choose a selection while in the OSD MENU.
	5. Power Button	Turn Power ON/OFF

 Side View of the HD Video Monitor

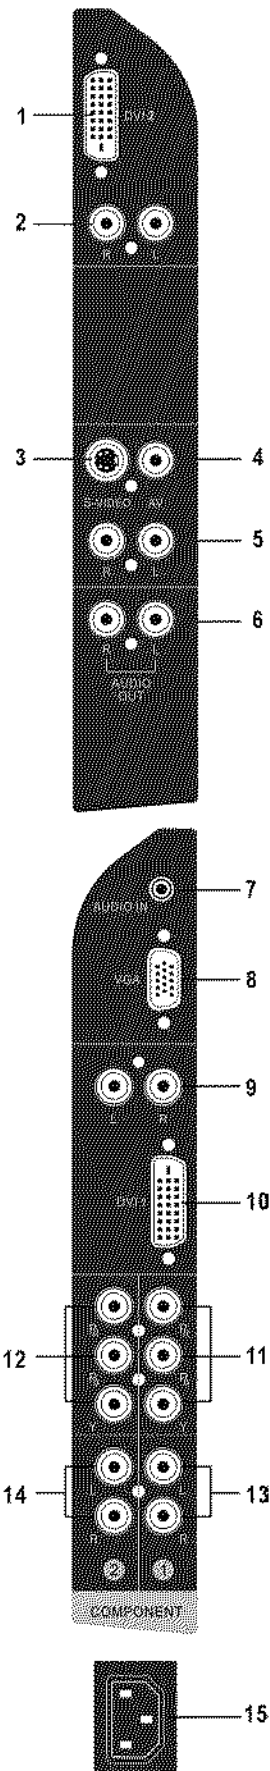

1. DVI2 (Supports up to 1080i)

Using a 20-pin DVI cable, connect to a computer or other device with a DVI output.

2. DVI2 Audio Input (Right / Left)

Connect an external audio source to this jack.

3. S-Video Input

Connect to an external video device such as a HD Digital cable/satellite receiver, VCR, DVD or video game system.

4. AV Video Input

Connect to an external video device such as a VCR, DVD and video game system.

5. AV & S-Video Audio Input (Right / Left)

Connect an external audio source to this jack; (Audio (R/L)). This connection supports either S-Video or AV input.

6. Audio Output (Right / Left)

Connect this output to an external audio receiver.

7. VGA Audio IN

Using the cable provided, connect to the Audio out (Green) from a computer.

8. VGA

Using a 15-pin VGA cable, connect to a computer or other device with a VGA output.

9. DVI1 Audio Input (Right / Left)

Connect an external audio source to this jack.

10. DVI1 (Supports up to 1080p)

Using a 20-pin DVI cable, connect to a computer or other device with a DVI output.

11. YPbPr1 Input

Connect an external video device with component output to these jacks.

12. YPbPr2 Input

Connect an external video device with component output to these jacks.

13. YPbPr1 Audio 1 Input (Left / Right)

Connect an external audio source to this jack.

14. YPbPr2 Audio 2 Input (Left / Right)

Connect an external audio source to this jack.

 
15. AC IN (Power)

Connect the power cord from AC IN to a power source.

Remote Control

The Remote Control will transmit to the HD Monitor up to 10 feet away.


1. **POWER:**
Switch the power On/Off
2. **INPUT**
Select input source
3. **OSD SUB-MENU SELECTION**
Select OSD sub-menu option directly
4. **PREVIOUS OSD MENU**
Select previous OSD menu
5. **MENU/EXIT**
Turn OSD Menu On/Off.
6. **SCALING**
Select Video Display format "STANDARD",
"FILL", or "ZOOM"
7. **▼ / ▲ / ◀ / ▶**
OSD MENU control
8. **Enter**
Execute a command
9. **MUTE**
Turn the Sound On/Off
10. **INFO**
Display the source and channel information
11. **PIP**
Display sub-picture On/Off
12. **FREEZE**
Freeze main screen
13. **VOL - / +**
Volume Up/Down adjustment
14. **SOURCE ▼ / ▲**
Source selection Up/Down adjustment
15. **YPbPr**
Select YPbPr1 / YPbPr2 source input
16. **VGA**
Select VGA source input
17. **DVI**
Select DVI1 / DVI2 source input
18. **S-Video**
Select S-Video source input
19. **AV**
Select AV source input

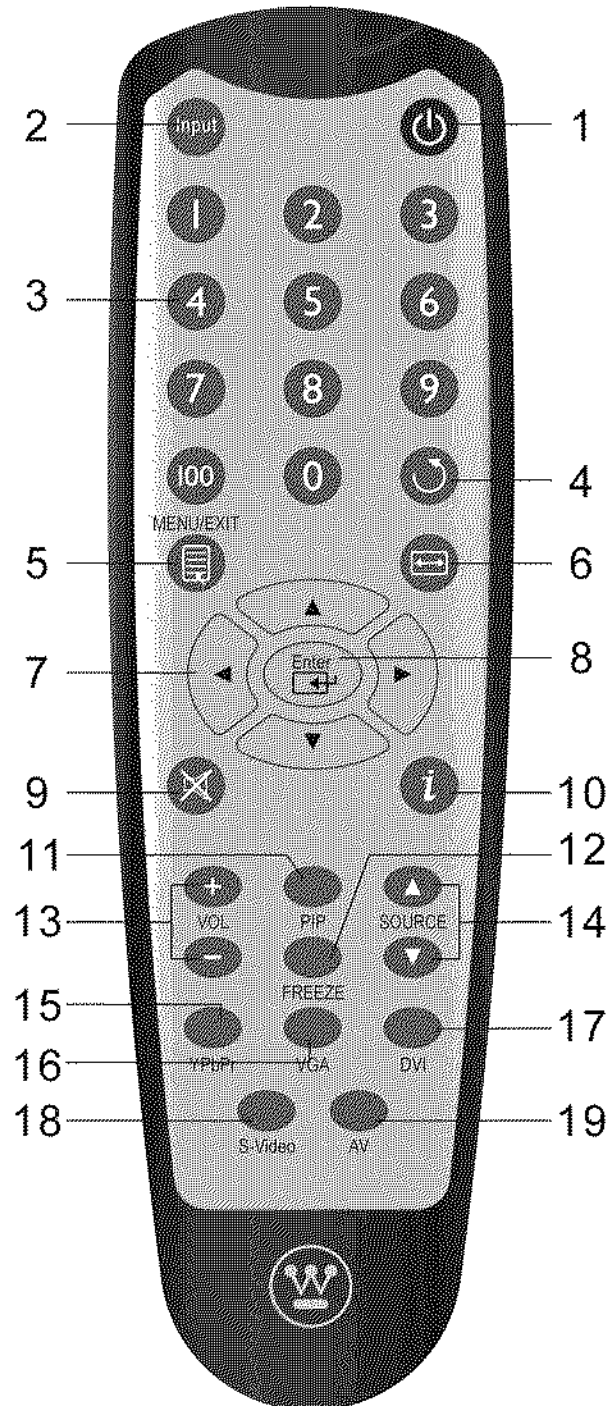

Installation

1. Insert Remote Control Batteries

 - 1) Remove the battery cover.
- 2) Insert the batteries corresponding to the (+) and (-) marks on the battery compartment.

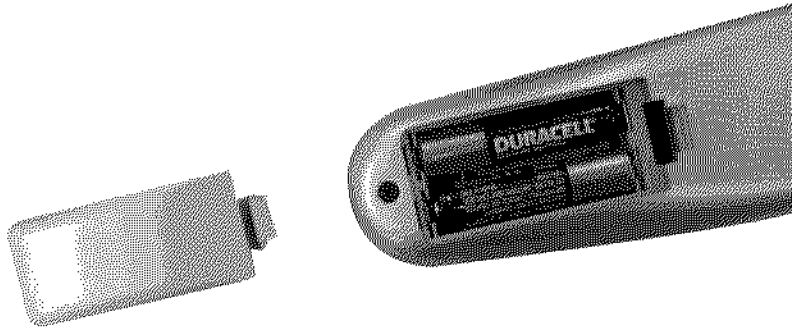

- 3) Re-attach the battery cover.

CAUTION:

- Only use AAA batteries.
- Do not mix new and old batteries. This may result in cracking or leakage, which may pose a fire risk or lead to personal injury.
- Insert batteries according to (+) and (-) markings. Inserting the batteries incorrectly may result in cracking or leakage, which may pose a fire risk or lead to personal injury.
- Dispose of used batteries in accordance with local laws and regulations.
- Keep batteries away from children and pets.
- When the remote control will not to be used for an extended period, remove the batteries.

2. Connect audio and video cables to a PC

Connect one or all of the following into the back of the HD Monitor

IMPORTANT: Before beginning, make sure all devices are turned off.

 
VGA CONNECTION: Connect an analog VGA cable from your PC VGA OUT port to the HD Monitor VGA IN port.

DVI1/DVI2 CONNECTION: Connect a Digital DVI cable from your PC or DVD DVI OUT port to the HD Monitor DVI-HDCP port.

AUDIO CONNECTION: Connect a stereo mini cable from the PC's AUDIO OUT port to the AUDIO IN port on the HD Monitor.


3. Connect AV, Component, S-Video to Video Devices

Connect Video/Audio cables from compatible devices to the back panel of the HD Monitor.

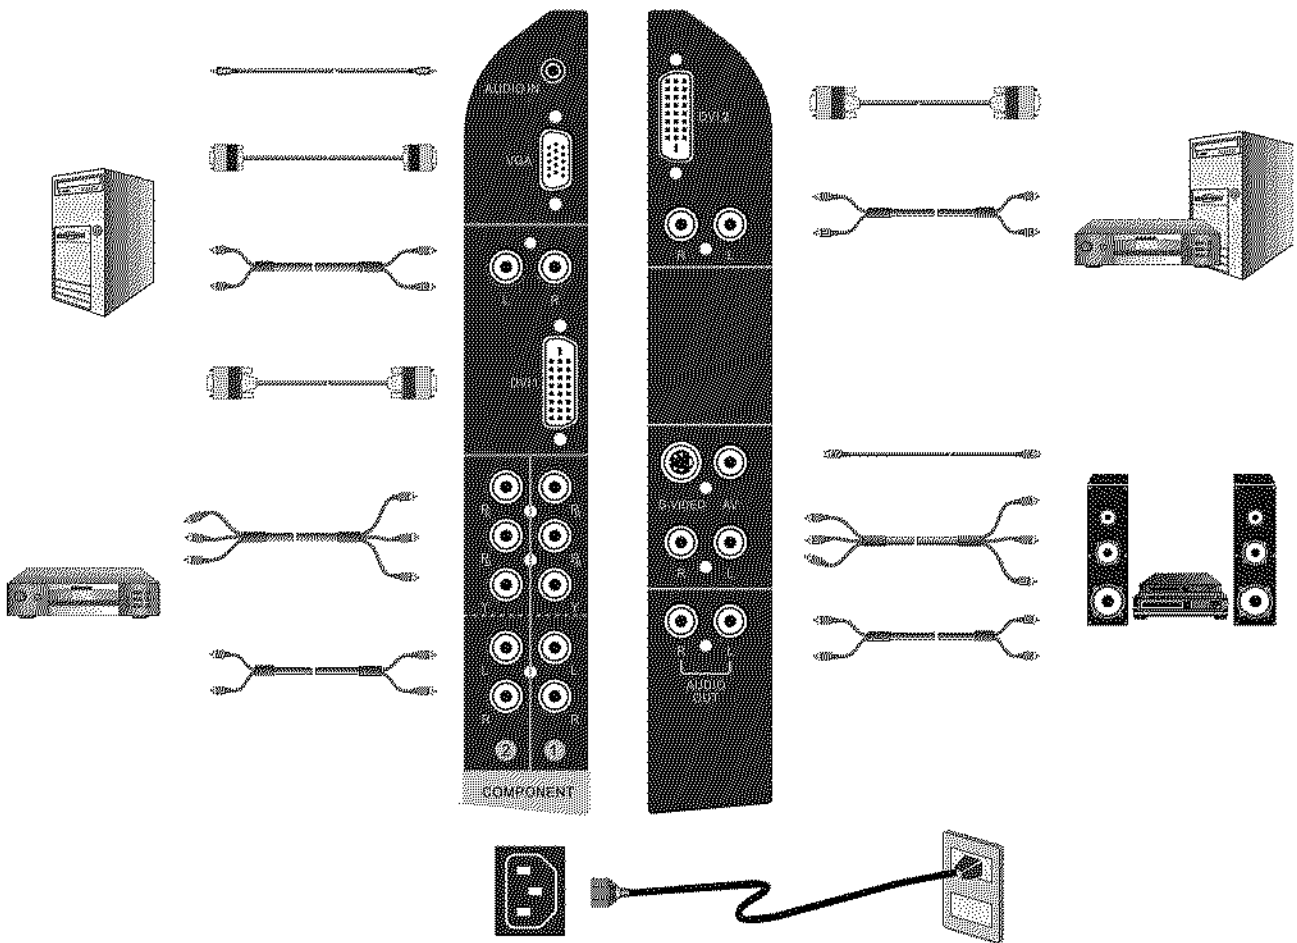


4. Connect power cables

 Connect the power cord to the HD Monitor then to a properly grounded AC outlet.

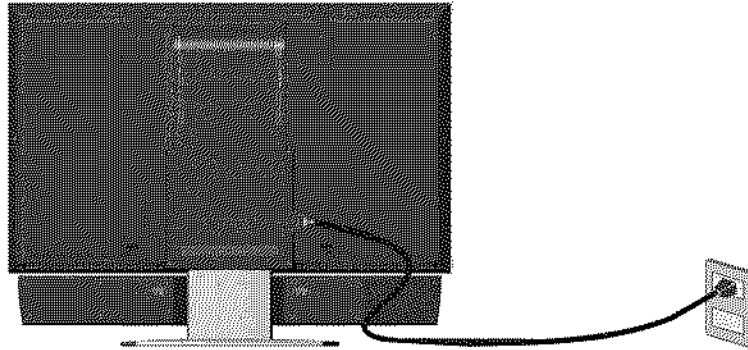

5. Turn Power On

 Press the Power ON button on the right side of the HD Monitor, or press the Power ON (Red) button on the remote control.

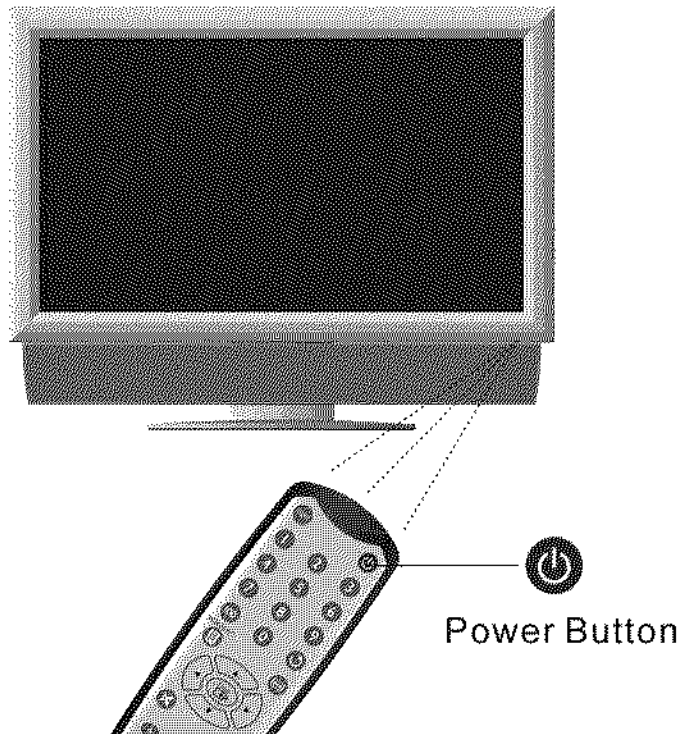

6. Select input source for the HD Monitor using the OSD menu or remote control

 
7. If connecting to a PC (VGA/DVI1/DVI2):

For the best picture quality, set the HD Monitor timing mode to VESA1920 x 1080 at 60Hz (refer to the graphic card's user guide to set this timing mode).

OSD Function


All the OSD function settings are controlled either by the remote control or using the control keys on the right side of HD Monitor.

To display the OSD main menu, press the Menu button on the right side of front control keys of the HD Monitor or the MENU key on the remote control. Use ◀ / ▶ arrow keys to highlight the desired OSD sub-menu.

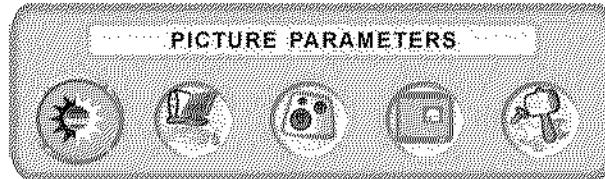


Main Menu

 To select a sub-menu, press ▲/▼ on the right side of the HD Monitor or the ▲/▼ key on the remote control. Also, by using the number keys on the remote control, you can select a OSD sub-menu directly.

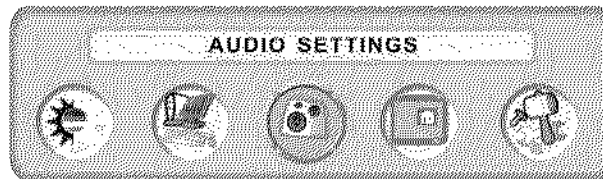


PICTURE PARAMETERS:

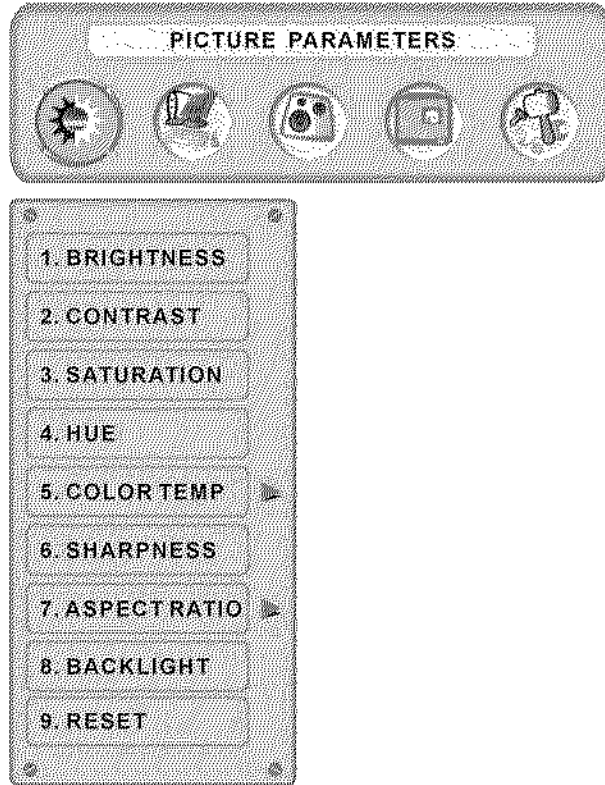 

Function Name	Function
Brightness	Brightness adjustment
Contrast	Contrast adjustment
Saturation	Saturation adjustment
Hue	Hue adjustment
Color Temp	Color temperature adjustment (Color 1, Color 2, Color 3)
Sharpness	Sharpness adjustment (Sharpness cannot be adjusted in PC mode)
Aspect Ratio	Set display to "STANDARD" / "FILL" / "ZOOM"
Backlight	Backlight adjustment
Reset	Reset video settings


 
PC PARAMETERS:

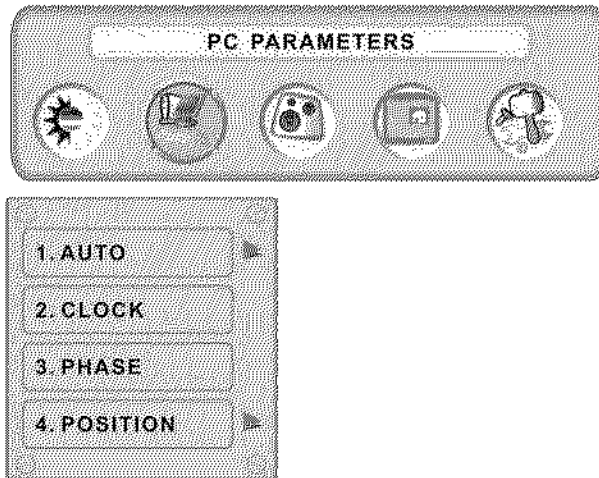

Function Name	Function
Auto Adjust	Automatically adjust the horizontal phase of the image
Clock	Clock adjustment
Phase	Phase adjustment
Position	Adjust the horizontal and vertical position of the image


NOTE: The GRAPHIC menu is only available when VGA source is selected.

  AUDIO SETTINGS:

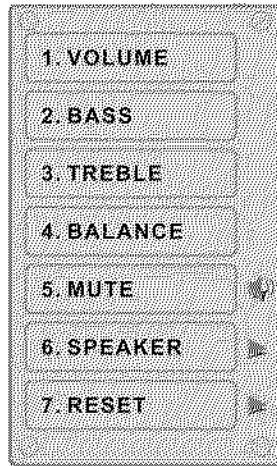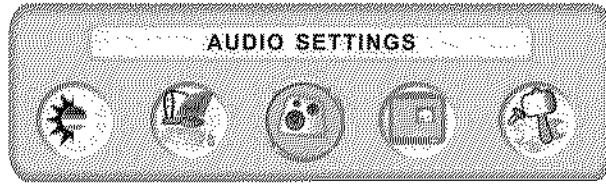

Function Name	Function
Volume	Volume adjustment
Bass	Bass adjustment
Treble	Treble adjustment
Balance	Balance adjustment
Mute	Select Audio OFF or ON
Speaker	Select internal or external speaker
Reset	Reset audio settings

 PICTURE-IN-PICTURE:

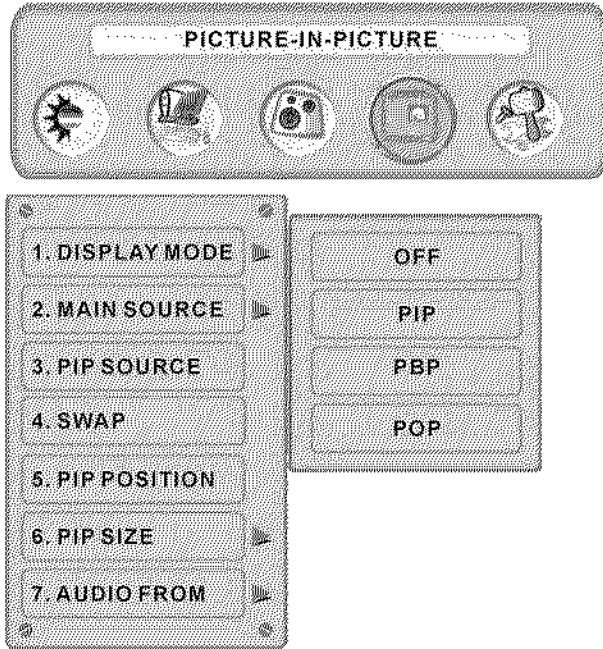

Function Name	Function
Display Mode	OFF --> PIP --> PBP --> POP
Main Source	Select main screen sources VGA --> DVI1--> DVI2 --> AV --> S-Video--> YPbPr1 --> YPbPr2
PIP Source	Select sub screen sources Please see PIP/PBP/POP specification in Table 1
Swap	Swap main screen and sub-screen source
PIP Position	Sub-screen display horizontal/vertical position adjustment
PIP Size	Sub-screen display size adjustment (Small -->Medium --> Large)
Audio From	Select main screen or sub-screen audio sources

Table 1:

Main \ SUB	VGA	DVI1	AV	S-Video	YPbPr1	YPbPr2	DVI2
	VGA	X	O	O	O	X	X
DVI1	O	X	O	O	O	O	O
AV	O	O	X	X	O	O	O
S-Video	O	O	X	X	O	O	O
YPbPr1	X	O	O	O	X	X	O
YPbPr2	X	O	O	O	X	X	O
DVI2	O	O	O	O	O	O	X

GENERAL SETTINGS:



Function Name	Function
Menu Position	OSD horizontal/vertical position adjustment
Menu Timeout	Set the time to turn off the OSD automatically
Language	OSD language selection
Sleep Timer	Set sleep timer to turn off the power automatically
Transparency	Set OSD transparency level
DPMS	Select DPMS On/Off
System Info	Display Input source, type and signal
Factory Reset	Restore factory default settings

Specifications

Panel	Type	37" (37.07" viewable diagonal area), TFT (Thin Film Transistor), Active Matrix WXGA LCD, 1920*1080 vertical stripe	
	Color	Anti-reflective coating + Anti-glare coating	
Viewing Angles		176° (H) / 176° (V)	
Input Signal	Video/Audio	RGB Analog * 1 (75 ohms, 0.7 Vp-p)/Mini-Stereo * 1 H/V separated (TTL) for PC DVI-D * 2 (HDCP support) / RCA (L/R) * 2 (DVI1 supports up to 1080P, DVI2 supports up to 1080i) fh: 30-80 kHz, fv: 50-75 Hz Component Video * 2 / RCA (L/R) Stereo * 2 Composite * 1 / S-Video * 1 / RCA (L/R) stereo * 1	
Output Signal		RCA (L/R) Stereo * 1	
HDTV Compatibility		480i, 480P, 720P, 1080i	
PC Compatible (VGA & DVI1)	Supported	1280 x 1024 @ 60, 75 Hz 1280 x 768 @ 60, 75Hz 1024 x 768 @ 60, 75 Hz 800 x 600 @ 60, 75 Hz 640 x 480 @ 60, 75 Hz 720 x 400 @ 70 Hz	1920 x 1080 @ 60 Hz
	(DVI2) Supported	1280 x 1024 @ 60Hz 1280 x 768 @ 60, 75Hz 1024 x 768 @ 60, 75 Hz 800 x 600 @ 60, 75 Hz 640 x 480 @ 60, 75 Hz 720 x 400 @ 70 Hz	
Speaker Output		20W (x2 Channels)	
Power	Voltage	100-240 VAC, 50/60 Hz (auto switch), 2.7A (MAX)	
Operating Conditions	Temperature	0° C to + 35° C (32° F to + 95° F)	
	Humidity	10% to 90% (no condensation)	
	Altitude	To 3,000 m	
Storage Conditions	Temperature	-20° C to + 60° C (-4° F to + 140° F)	
	Humidity	10% to 90% (no condensation)	
	Altitude	To 12,000m	
Dimensions	Physical	930 mm (W) x 720 mm (H) x 212 mm (D)	
Weight	Net / Gross	52.9 lb (24.0kgs) / 69.4 lb (31.5kgs)	
Regulations		FCC-B, UL/c-UL	
Power	On (Normal)	270W (Blue LED)	
Power	Off	<2W	
Power	Saving	<3W (Amber LED)	

Preset Timing Mode (Pre-adjusted to reduce blanking: 1920x1080 at 60Hz)

Warning: Do not set the graphics card in your computer to exceed these refresh rates; doing so may result in permanent damage to the HD Monitor.

Note: Product Specifications are subject to change without notice.

Troubleshooting

No Power

- Make sure power button is ON (Blue LED).
- Make sure AC power cord is securely connected to the AC socket.
- Plug another electrical device (such as a radio) to the power outlet to verify that the outlet is supplying the proper voltage.

AUDIO Interconnection Issues

- Remember that S-Video and Composite (AV) share the same audio source.

Power is ON but No Screen Image

- Make sure the video cable connected to the HD Monitor is tightly secured to the video output port on the back of the computer. If the other end of the video cable is not attached properly to the HD Monitor, secure it tightly.
- Adjust brightness and contrast.
- If you are using a Macintosh computer older than G3, you need a Macintosh adapter.
- Check Source settings.

Wrong or Abnormal Colors

- If any colors (red, green, or blue) are missing, check the video cable to make sure it is connected securely. Loose or broken pins in the cable connector could cause an improper connection.
- Connect the HD Monitor to another computer.

Remote Control Buttons Do Not Work

- Press only one button at a time.

No Sound

- Check the audio connection.
- Press MUTE on the remote control, so that MUTE disappears from the screen.
- Check the audio settings. The HD Monitor audio may be set to minimum.
- Press the Volume + (Up) key on the remote control.
- Make sure the speaker setting is set to "internal".

Remote Control Does Not Work

- Make sure batteries are inserted correctly.
- Replace batteries with new ones if necessary.

Remote Control Code Not Found in a "Universal" Remote

- Purchase a separate "learning" remote control.

How Can I Find More Help?

- Log on to: www.westinghousedigital.com
- Contact Westinghouse Customer Service at (866) 287-5555 or write us at service@westinghousedigital.com

