


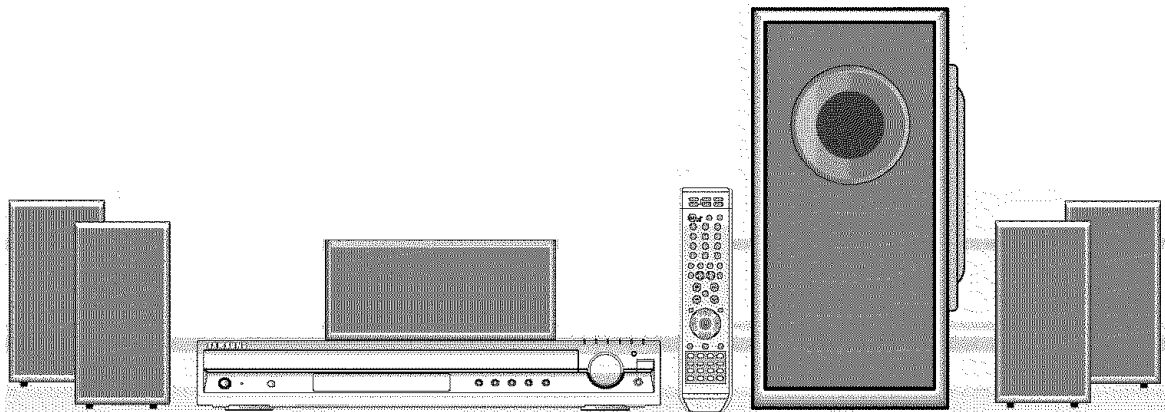

# Home Theater System with 5 Disc DVD Changer and HDMI HT-Q70

## Instruction Manual



# Safety Warnings

**CLASS 1 LASER PRODUCT  
KLASSE 1 LASER PRODUKT  
LUOKAN 1 LASER LAITE  
KLASS 1 LASER APPARAT  
PRODUCTO LASER CLASE 1**

**Note to CATV system installer :**

This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical



**CAUTION**

RISK OF ELECTRIC SHOCK.  
DO NOT OPEN



**CAUTION:**

 
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE REAR COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**CLASS 1 LASER PRODUCT**

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.**



This symbol indicates that dangerous voltage which can cause electric shock is present inside this unit.





This symbol alerts you to important operating and maintenance instructions accompanying the unit.



**WARNING:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

# Precautions

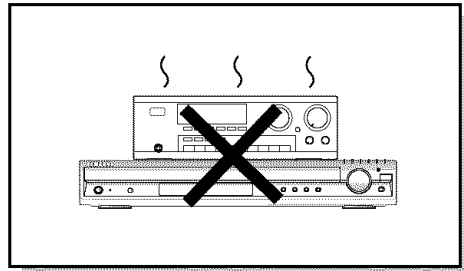
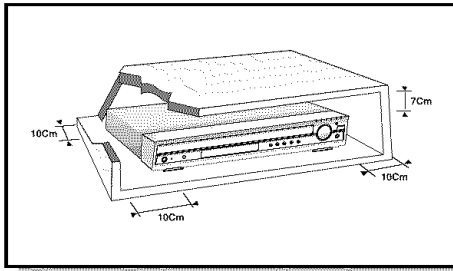


Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (3~4inches). Make sure the ventilation slots are not covered. Do not stack anything on top of the player. Do not place the player on modules or other equipment which may become hot. Before moving the player, ensure the disc tray is empty. This player is designed for continuous use. Switching off the Home Theater to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

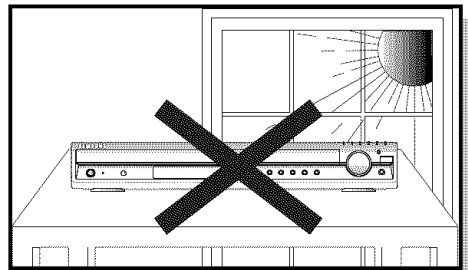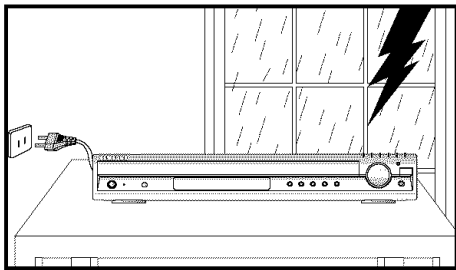

During thunderstorms, disconnect AC main plug from the wall outlet.  
Voltage peaks due to lightning could damage the unit.

Do not expose the unit to direct sunlight or other heat sources.  
This could lead to overheating and malfunction of the unit.

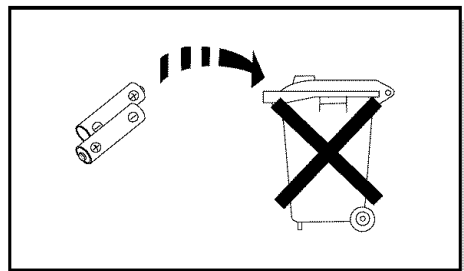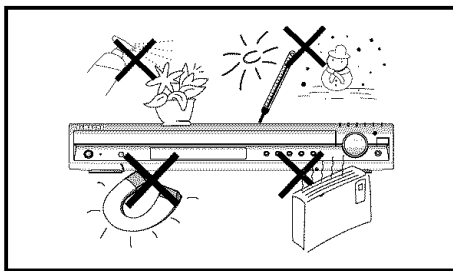

Protect the player from moisture (i.e. vases), and excess heat (e.g. fireplace) or equipment creating strong magnetic or electric fields (i.e. speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use. Use of this product is for personal use only.

The batteries used with this product contain chemicals that are harmful to the environment.  
Do not dispose of batteries in the general household trash.

Condensation may occur if your player or disc has been stored in cold temperatures.

If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

# Safety Instructions

## **READ INSTRUCTIONS**

All the safety and operating instructions should be read before the appliance is operated.

## **RETAIN INSTRUCTIONS**

The safety and operating instructions should be retained for future reference.

## **HEED WARNINGS**

All warnings on the appliance and in the operating instructions should be adhered to.

## **FOLLOW INSTRUCTIONS**

All operating and use instructions should be followed.

## **WATER AND MOISTURE**

Do not use this video product near water—for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

## **OVERLOADING**

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

## **VENTILATION**

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video product and to protect it from overheating these openings must not be blocked or covered.

The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface. This video product should never be placed near or over a radiator or heat register.

This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been followed.

## **POWER CORD PROTECTION**

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

## **CLEANING**

Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

## **LIGHTNING**

For added protection of this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

## **OBJECT AND LIQUID ENTRY**

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.

## **ACCESSORIES**

Do not place this video product on an unstable cart, stand, tripod, bracket, or table.

The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance.

Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.

## **CART**

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

## **POWER SOURCES**

This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of supply to your home, consult your appliance dealer or local power company. For video products intended to be operated from battery power, or other sources, refer to the operating instructions.

**POWER LINES**

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

**POLARIZATION**

This video product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other.) This plug will fit into the power outlet only one way.

This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

**OUTDOOR ANTENNA GROUNDING**

- If an outside antenna is connected to the antenna terminal, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges.
- In the U.S.A section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See the figure below.

**ATTACHMENTS**


Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

**SERVICING**

- Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards.
- Refer all servicing to qualified service personnel.

**REPLACEMENT PARTS**

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or having the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

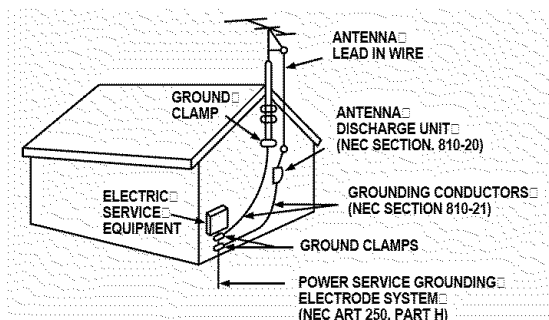

**SAFETY CHECK**

Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.

**DAMAGE REQUIRING SERVICE**

Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions.

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the video product.
- If the video product has been exposed to rain or water
- If the video product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.
- If the video product has been dropped or the cabinet has been damaged.
- When the video product exhibits a distinct change in performance - this indicates a need for service.

**HEAT**

This video unit should be situated away from heat sources such as radiators, stoves, or other products (including modules) that produce heat.

# Features

## ● Multi-Disc Playback & FM Tuner

The HT-Q70 combines the convenience of multi-disc playback capability, including DVD-AUDIO, DVD-VIDEO, CD, MP3-CD, WMA-CD, DivX, CD-R/RW, and DVD-R/RW, with a sophisticated FM tuner, all in a single player.

## ● USB Host Play

You can enjoy media files such as pictures, movies and tunes saved in an MP3 player, digital camera or USB memory by connecting the storage device to the USB port of the home theater.

## ● Dolby Pro Logic II

Dolby Pro Logic II is a new form of multi-channel audio signal decoding technology that improves upon existing Dolby Pro Logic.

## ● DTS (Digital Theater Systems)

DTS is an audio compression format developed by Digital Theater Systems Inc. It delivers full-frequency 5.1 channel sound.

## ● TV Screen Saver Function

The HT-Q70 automatically brightens and darkens your TV screen after 3 minutes in the stop mode.

The HT-Q70 automatically switches itself into the power saving mode after 20 minutes in the screen saver mode.

## ● Power Saving Function

The HT-Q70 automatically shuts itself off after 20 minutes in stop mode.

## ● Customized TV Screen Display

The HT-Q70 allows you to select your favorite image during JPEG and DVD playback and set it as your background wallpaper.

## ● HDMI

HDMI transmits DVD video and audio signals simultaneously, and provides a clearer picture.

## ● AV SYNC Function

Video may lag behind the audio if the unit is connected to a digital TV.

To compensate for this, you can adjust the audio delay time to sync up with the video.

## ● Optional XM radio

Samsung's XM Ready Home Theater Systems give you the opportunity to enjoy America's leading satellite radio service in CD-quality sound.

## ● Optional Wireless receiver amplifier

Samsung's optional rear-channel wireless module does away with cables running between your DVD receiver and rear-channel speakers. Instead, the rear speakers connect to a compact wireless module that communicates with your DVD receiver.

# Contents

ENG

PREPARATION

## PREPARATION

|                           |   |
|---------------------------|---|
| Safety Warnings .....     | 1 |
| Precautions .....         | 2 |
| Safety Instructions ..... | 3 |
| Features .....            | 5 |
| Notes on Discs .....      | 7 |
| Description .....         | 9 |

## CONNECTIONS

|  |    |
|--|----|
| Connecting the Speakers .....                              | 13 |
| Connecting the optional Wireless Receiving Amplifier ..... | 15 |
| Connecting the Video Out to TV .....                       | 17 |
| HDMI Function .....  | 18 |
| Connecting External Components .....                       | 20 |
| Connecting the FM Antenna .....                            | 21 |
| Connecting an optional XM Satellite Radio Antenna .....    | 22 |

## OPERATION

|  |    |
|--|----|
| Before Using Your Home Theater .....                 | 23 |
| Disc Playback .....                                  | 25 |
| Selecting a Disc in the Disc changer .....           | 26 |
| MP3/WMA-CD Playback .....                            | 27 |
| Displaying Disc Information .....                    | 28 |
| JPEG File Playback .....                             | 29 |
| DivX Playback .....                                  | 31 |
| Checking the Remaining Time .....                    | 33 |
| Fast/Slow Playback .....                             | 34 |
| Skipping Scenes/Songs .....                          | 34 |
| Repeat Playback .....                                | 35 |
| A-B Repeat Playback .....                            | 36 |
| Step Function .....                                  | 37 |
| Angle Function .....                                 | 37 |
| Zoom (Screen Enlarge) Function .....                 | 38 |
| EZ VIEW Function .....                               | 38 |
| Bonus Group / Navigating Pages .....                 | 39 |
| Selecting Audio/Subtitle Language .....              | 40 |
| Playing Media Files using the USB HOST feature ..... | 41 |
| Moving Directly to a Scene/Song .....                | 43 |
| Using Disc Menu .....                                | 44 |
| Using the Title Menu .....                           | 44 |

## SETUP

|   |    |
|---|----|
| Setting the Language .....                        | 45 |
| Setting TV Screen type .....                      | 47 |
| Setting Parental Controls (Rating Level) .....    | 49 |
| Setting the Password .....                        | 50 |
| Setting the Wallpaper .....                       | 51 |
| DVD Playback Mode .....                           | 53 |
| Setting the Speaker Mode .....                    | 54 |
| Setting the Delay Time .....                      | 55 |
| Setting the Test Tone .....                       | 57 |
| Setting the DRC (Dynamic Range Compression) ..... | 58 |
| Setting the Audio .....                           | 59 |
| AV SYNC Setup .....                               | 61 |
| Sound Field (DSP)/EQ Function .....               | 62 |
| Dolby Pro Logic II Mode .....                     | 63 |
| Dolby Pro Logic II Effect .....                   | 64 |

## RADIO OPERATION

|                                       |    |
|---------------------------------------|----|
| Listening to Radio .....              | 65 |
| Presetting Stations .....             | 66 |
| Before Using XM Satellite Radio ..... | 67 |
| Listening to XM Satellite Radio ..... | 68 |
| XM Display Mode .....                 | 69 |
| XM Search Mode .....                  | 71 |
| Presetting XM Satellite Radio .....   | 72 |

## MISCELLANEOUS

|  |    |
|--|----|
| Convenient Functions .....                   | 73 |
| Operating a TV with the Remote Control ..... | 75 |
| Before Calling for Service .....             | 77 |
| Cautions on Handling and Storing Discs ..... | 79 |
| Language Code List .....                     | 80 |
| USB Host Feature Supported Products .....    | 81 |
| Specifications .....                         | 82 |

# Notes on Discs



**DVD (Digital Versatile Disc)** offers fantastic audio and video, thanks to Dolby Digital surround sound and MPEG-2 video compression technology. Now you can enjoy these realistic effects in the home, as if you were in a movie theater or concert hall.



DVD players and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

The Region Number for this player is given on the rear panel of the player.

(Your DVD player will only play DVDs that are labeled with identical region codes.)

## Playable Discs

| Disc Type | Mark (Logo) | Recorded Signals | Disc Size | Max. Playing Time  |
|-----------|-------------|------------------|-----------|--|
| DVD       |             | Audio + Video    | 5"        | Approx. 240 min. (single-sided)<br>Approx. 480 min. (double-sided) |
|           |             |                  | 3 1/2"    | Approx. 80 min. (single-sided)<br>Approx. 160 min. (double-sided)  |
| AUDIO-CD  |             | Audio            | 5"        | 74 min.  |
|           |             |                  | 3 1/2"    | 20 min.  |
| DivX      |             | MPEG4<br>MP3     | 5"        | 74 min.  |
|           |             |                  | 3 1/2"    | 20 min.  |

## Do not use the following types of disc!

- LD, CD-G, CD-I, CD-ROM and DVD-ROM discs cannot be played on this player. If such discs are played, a "WRONG DISC FORMAT" message appears on the TV screen.
- DVD discs purchased abroad may not play on this player. If such discs are played, a "WRONG REGION CODE" message appears on the TV screen.

## Copy Protection

- Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.



## Disc Recording Format

- **This product does not support Secure (DRM) Media files.**

### CD-R Discs

- Some CD-R discs may not be playable depending on the disc recording device (CD-Recorder or PC) and the condition of the disc.
- Use a 650MB/74 minute CD-R disc.  
Do not use CD-R discs over 700MB/80 minute as they may not be played back.
- Some CD-RW (Rewritable) media, may not be playable.
- Only CD-Rs that are properly "closed" can be fully played. If the session is closed but the disc is left open, you may not be able to fully play the disc.

### CD-R MP3 Discs

- Only CD-R discs with MP3 files in ISO 9660 or Joliet format can be played.
- MP3 file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Use discs recorded with a compression/decompression data rate greater than 128Kbps.
- Only files with the ".mp3" and ".MP3" extensions can be played.
- Only a consecutively written Multisession disc can be played. If there is a blank segment in the Multisession disc, the disc can be played only up to the blank segment.
- If the disc is not closed, it will take longer to begin playback and not all of the recorded files may be played.
- For files encoded in Variable Bit Rate (VBR) format, i.e. files encoded in both low bit rate and high bit rate (e.g., 32Kbps ~ 320Kbps), the sound may skip during playback.
- A maximum of 500 tracks can be played per CD.
- A maximum of 300 folders can be played per CD.

### CD-R JPEG Discs



- Only files with the ".jpeg" and ".JPEG" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- JPEG file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- A maximum of 9,999 images can be stored on a single CD.
- When playing a Kodak/Fuji Picture CD, only the JPEG files in the picture folder can be played.
- Picture discs other than Kodak/Fuji Picture CDs may take longer to start playing or may not play at all.

### CD-R/RW DivX Discs


- Since this product only provides encoding formats authorized by DivX Networks, Inc., a DivX file created by the user might not be played.
- Software update for unsupported formats is not supported.  
(Example: QPEL, GMC, resolution higher than 720 x 480 pixels, etc.)
- Sections with high frame rate might not be played while playing a DivX file.
- For more information about the formats authorized by DivX Networks, Inc., visit "[www.divxnetworks.net](http://www.divxnetworks.net)".

# Description

## —Front Panel—

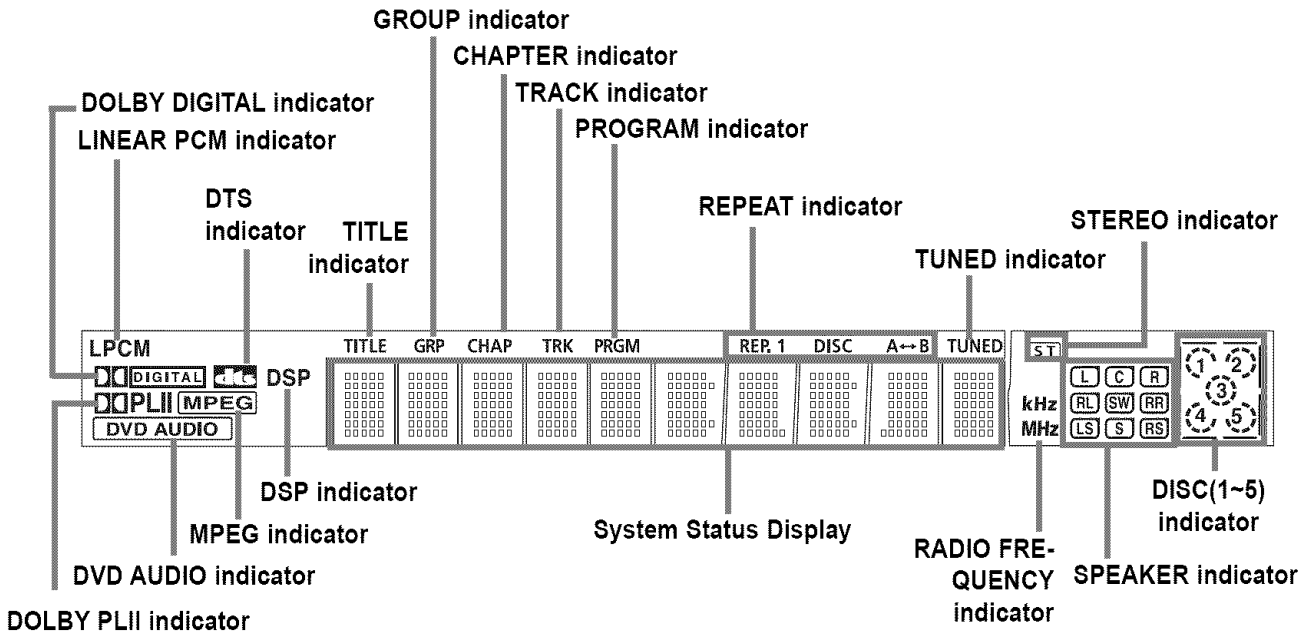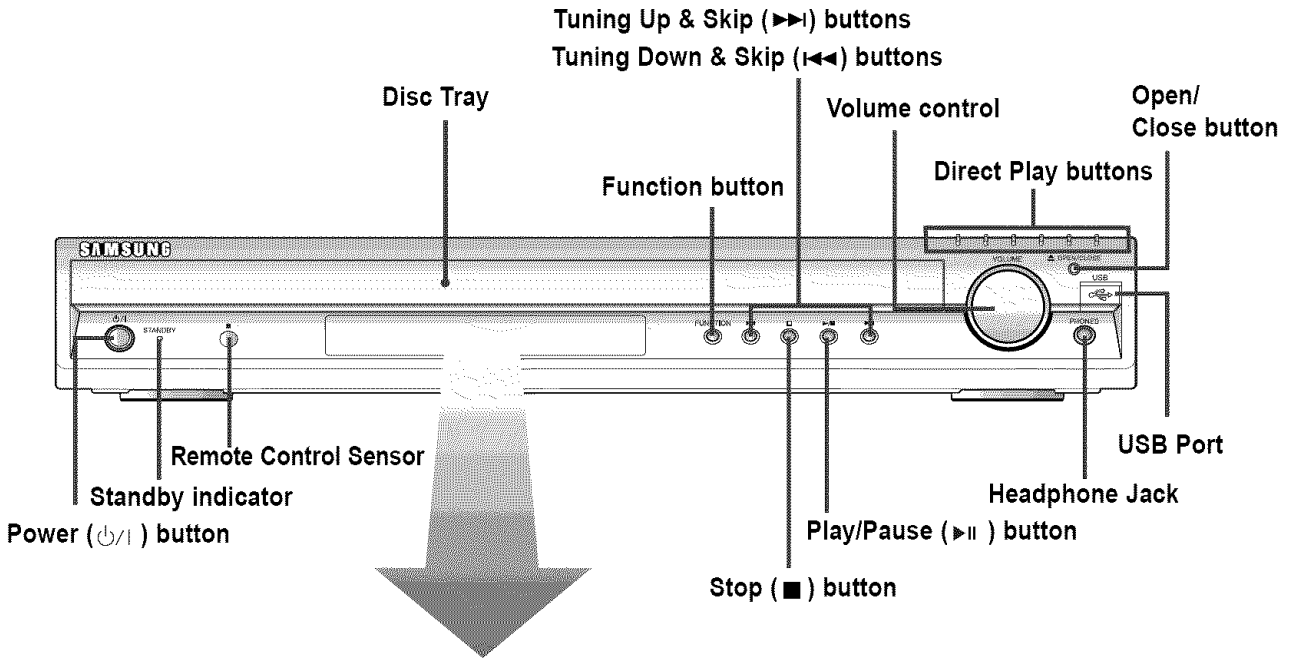

# —Rear Panel—

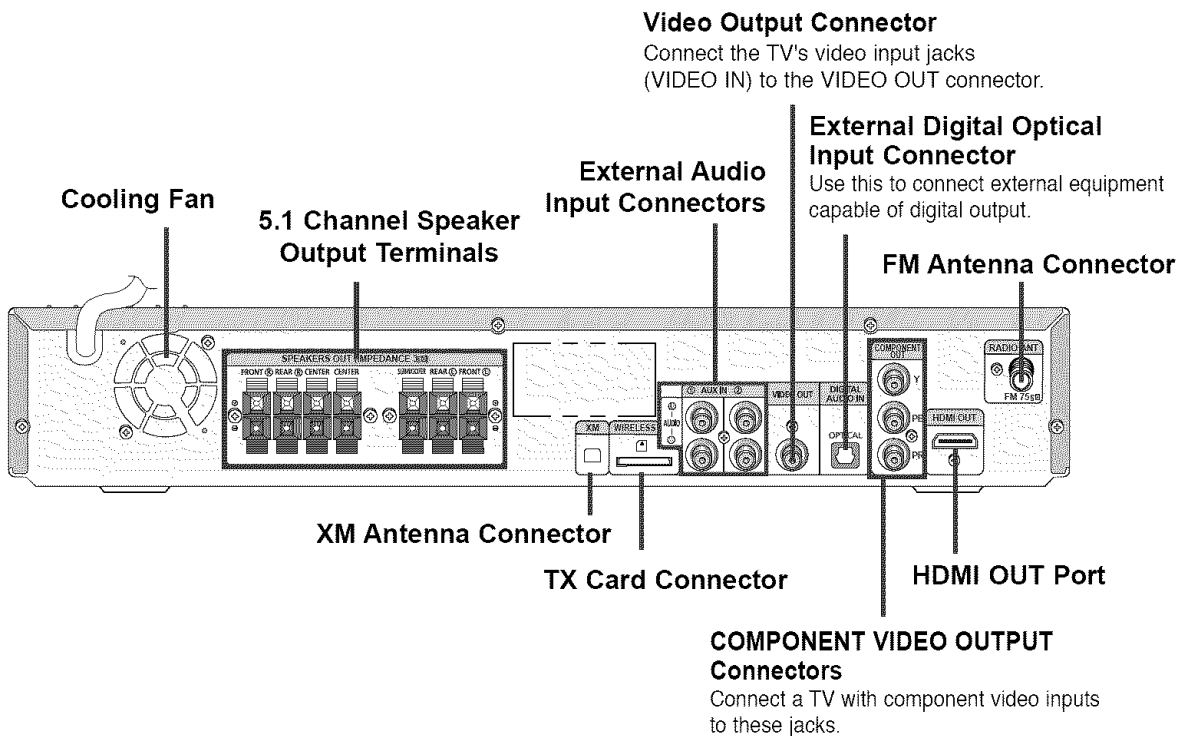


## Accessories




|  |                                     |                                    |                                       |
|--|-------------------------------------|------------------------------------|---------------------------------------|
|  |                                     |                                    |                                       |
| <b>Remote Control</b><br>(AH59-01643F) | <b>Video Cable</b><br>(AH39-40001V) | <b>FM Antenna</b><br>(AH42-00017A) | <b>User's Manual</b><br>(AH68-01833A) |

# Description

## —Remote Control—

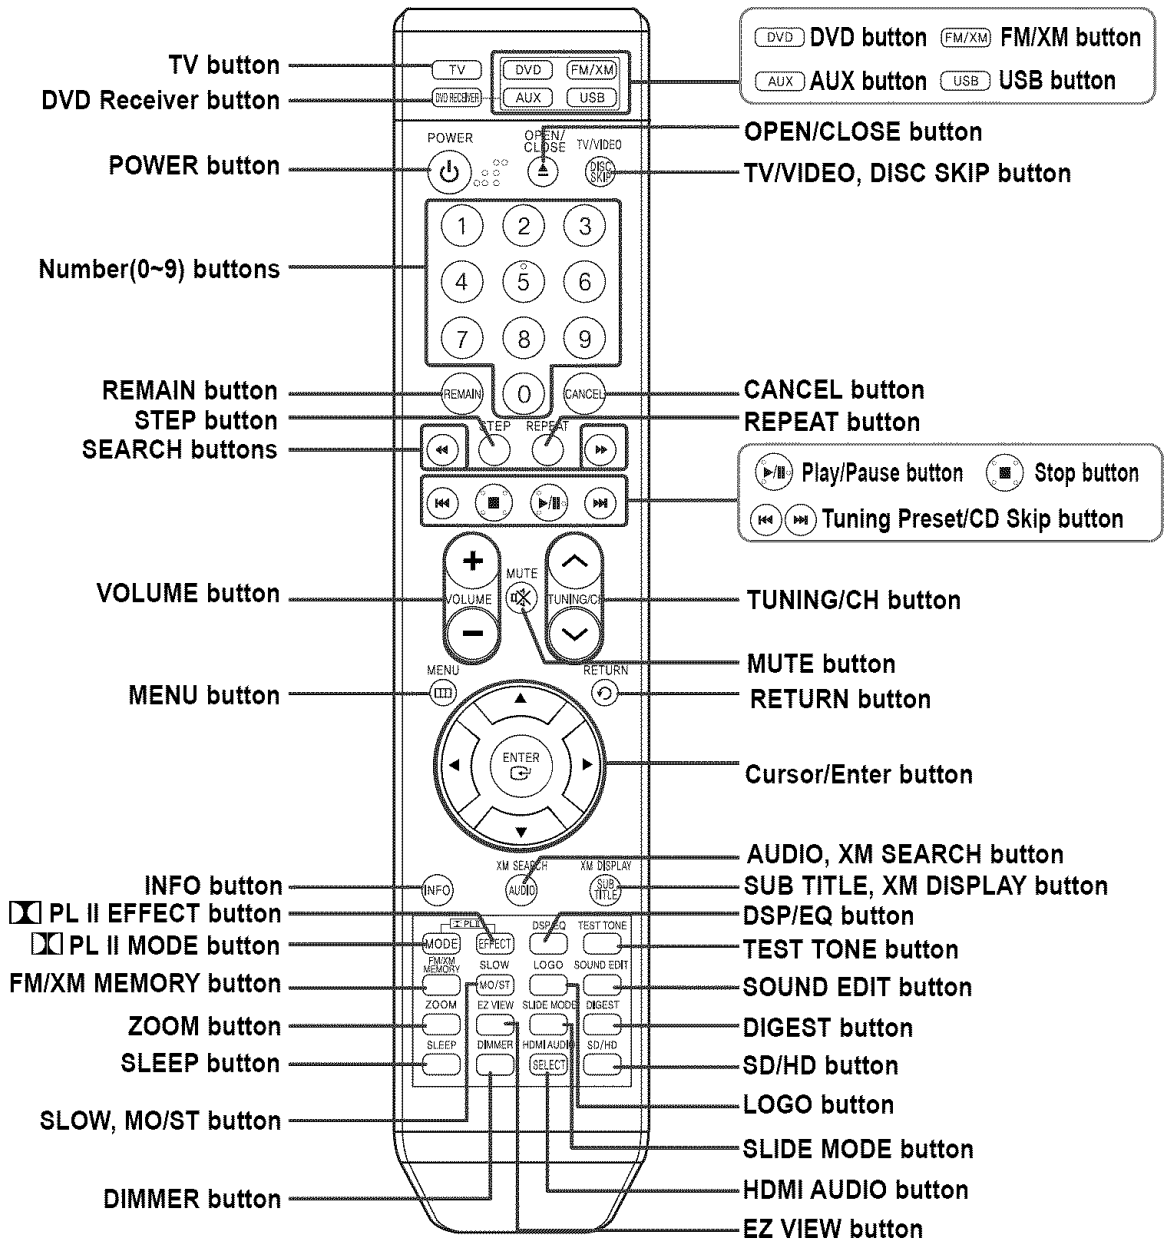

### Insert Remote Batteries

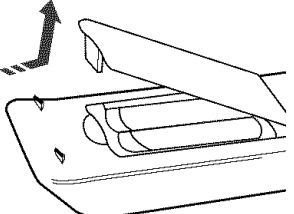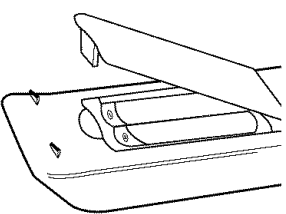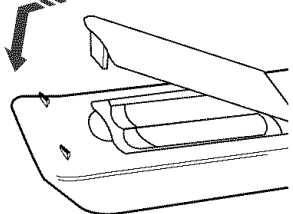
|  |  |   |
|--|--|---|
| <p><b>1</b> Remove the battery cover on the back of the remote by pressing down and sliding the cover in the direction of the arrow.</p>  | <p><b>2</b> Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and -).</p>  | <p><b>3</b> Replace the battery cover.</p>  |
|--|--|---|

**Caution**

- Follow these precautions to avoid leaking or cracking cells:**
- Place batteries in the remote control so they match the polarity:(+) to (+)and (-)to (-).
  - Use the correct type of batteries.Batteries that look similar may differ in voltage.
  - Always replace both batteries at the same time.
  - Do not expose batteries to heat or flame.


### Range of Operation of the Remote Control

The remote control can be used up to approximately 23 feet/7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

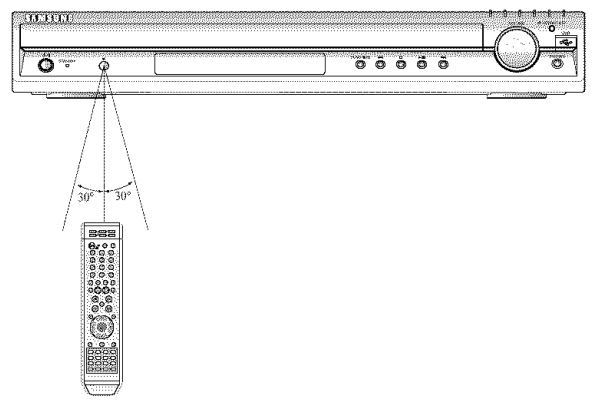

# Connecting the Speakers

Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

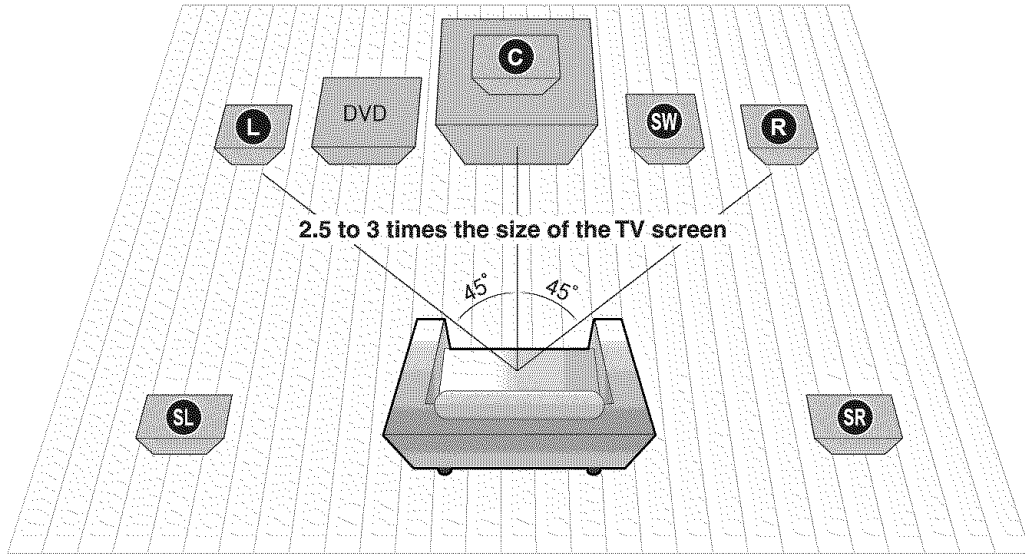

## Position of the Home Theater

- Place it on a stand, cabinet shelf, or under the TV stand.

## Front Speakers **L R**

- Place these speakers in front of your listening position, facing inwards (about 45°) toward you.
- Place the speakers so that their tweeters will be at the same height as your ear.
- Align the front face of the front speakers with the front face of the center speaker or place them slightly in front of the center speakers.

## Center Speaker **C**

- It is best to install it at the same height as the front speakers.
- You can also install it directly over or under the TV.

## Selecting the Listening Position


The listening position should be located about 2.5 to 3 times the distance of the TV's screen size away from the TV. Example: For 32" TVs 2~2.4m (6~8 feet)  
For 55" TVs 3.5~4m (11~13 feet)

## Rear Speakers **SL SR**


- Place these speakers behind your listening position.
- If there isn't enough room, place these speakers so they face each other.
- Place them about 60 to 90cm (2 to 3feet) above your ear, facing slightly downward.
- ★ Unlike the front and center speakers, the rear speakers are used to handle mainly sound effects and sound will not come from them all the time.

## Subwoofer **SW**

- The position of the subwoofer is not so critical. Place it anywhere you like.

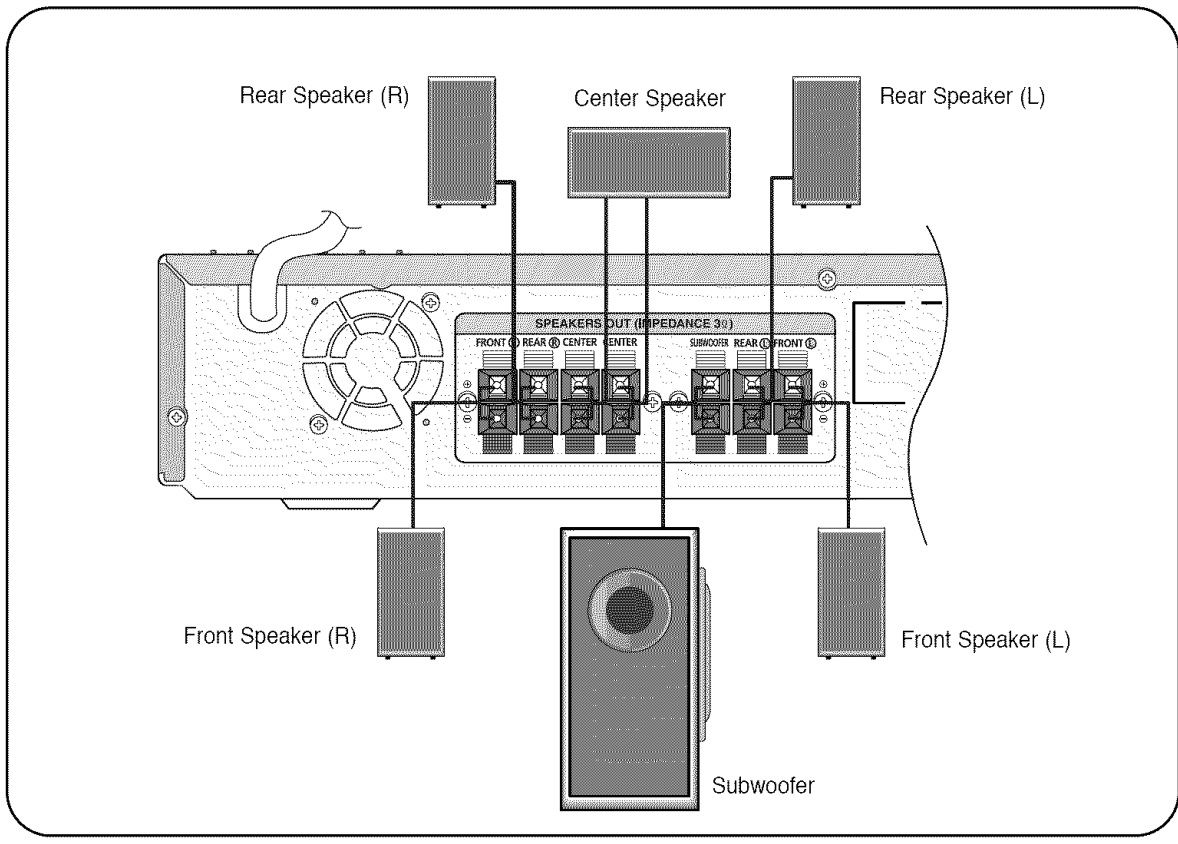

- 1 Press and hold the terminal tab.
- 2 Insert the speaker cord.
- 3 Release your finger.

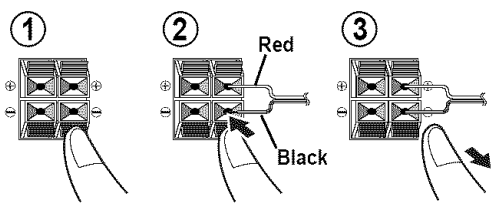

**Caution**

- Do not let children play with or near the speakers. They could get hurt if a speaker falls.
- When connecting the speaker wires to the speakers, make sure that the polarity (+/-) is correct.


**Note**

- If you place a speaker near your TV set, screen color may be distorted because of the magnetic field generated by the speaker. If this occurs, place the speaker away from your TV set.

# Connecting the optional Wireless Receiving Amplifier

To connect the rear speakers wirelessly, you have to additionally purchase the wireless receiving module and TX card from your Samsung retailer.


When you have purchased the wireless receiving module (SWA-3000)

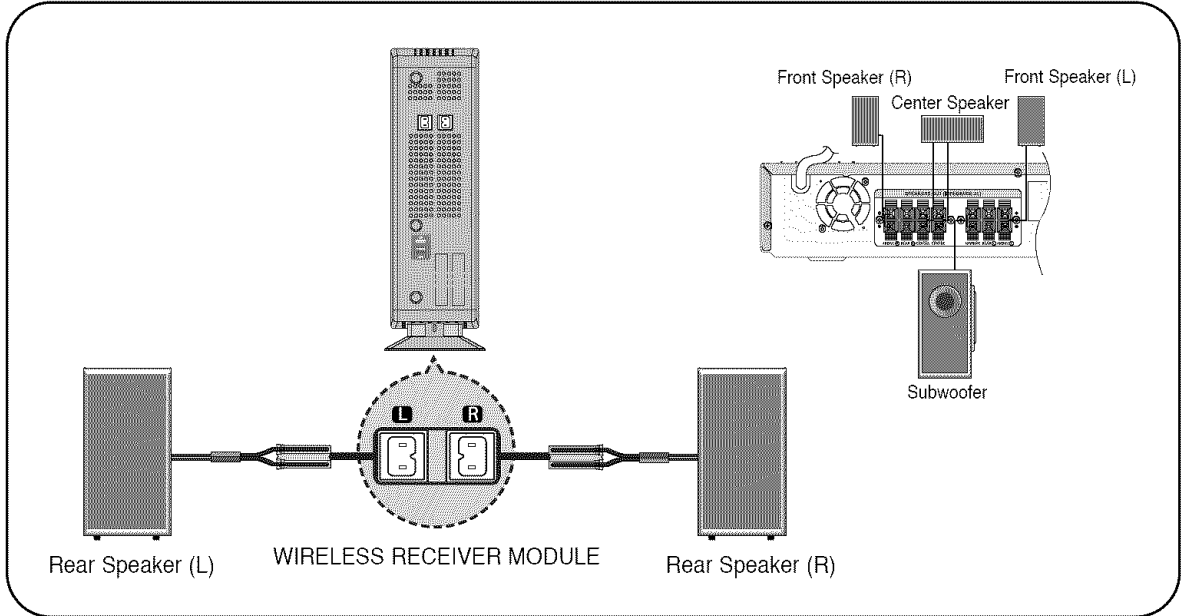

**1** Connect the front, center and subwoofer speakers, referring to page 14.


**2** Insert the TX card into the TX card connection port on the back of the main unit.

- Hold the TX card so that the slanted side faces leftward and insert the card into the port.
- The TX card enables communication between the main unit and the wireless receiver.

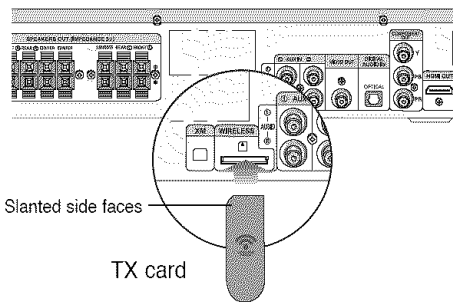

**3** Connect the left and right rear speakers to the wireless receiving module.

**4** Plug the power cord of the wireless receiving module in the wall outlet and switch the power switch 'ON'.

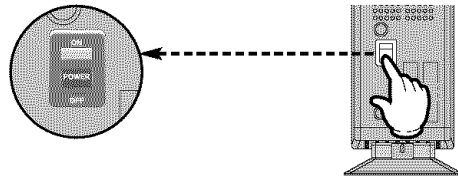

## Caution

- Do not insert a card other than the TX card dedicated for the product. The product might be damaged or it may not be removed easily.
- Do not insert the TX card upside down or in reverse direction.
- Insert the TX card when the main unit is turned off. Inserting the card when it is turned on may cause a problem.
- If the TX Card is inserted in the main unit, the rear speakers don't output sounds.



## Resetting Wireless Communication

Reset the system if a communication failure occurs, or if the Link indicator (blue LED) on the wireless receiver does not light up and the "REAR CHK" message blinks on the main unit's display.

Reset the system while the main unit and the wireless receiver module (SWA-3000) are in Power Standby mode.

- 1 With the main unit turned off, press and hold the remote control's **REMAIN** button for 5 seconds.


- Press the button until the POWER(⏻) indicator lights up blue. (The indicator will turn off in 1 second.)

- 2 With the wireless receiver module turned on, use a ball point pen or a pair of tweezers to press the **RESET** button on the back of the unit.

- The Standby/On LED on the front panel of the wireless receiver module blinks 2 times.

- 3 Turn on the main unit.

- The Link LED of the wireless receiver module is lit and the setup is finished.
- If Power Standby mode continues, repeat Steps 1 to 3 above.

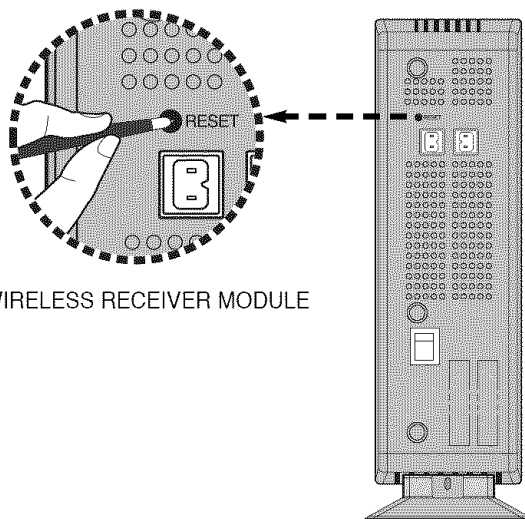

WIRELESS RECEIVER MODULE

### Caution


- When the wireless receiving module setting is complete, no audio signal is output from the Rear Speaker OUT ports on the back of the main unit.
- The wireless receiving antenna is built into the wireless receiver module. Keep the unit away from water and moisture.
- For optimal listening performance, make sure that the area around the wireless receiver module location is clear of any obstructions.
- Sound will be heard from the wireless rear speakers in DVD 5.1-CH or Dolby Pro Logic II mode only.
- In 2-CH mode, no sound will be heard from the wireless rear speakers.

### Note

- Place the wireless receiver module at the rear of the listening position. If the wireless receiver module is too close to the main unit, some sound interruption may be heard due to interference.
- If you use a device such as a microwave oven, wireless LAN Card, Bluetooth equipment, or any other device that uses the same frequency (2.4GHz) near the system, some sound interruption may be heard due to interference.
- The transmission distance of radio wave is about 33 feet, but may vary depending on your operating environment. If a steel-concrete wall or metallic wall is between the main unit and the wireless receiver module, the system may not operate at all, because the radio wave cannot penetrate metal.

# Connecting the Video Out to TV

Choose one of the two methods for connecting to a TV.

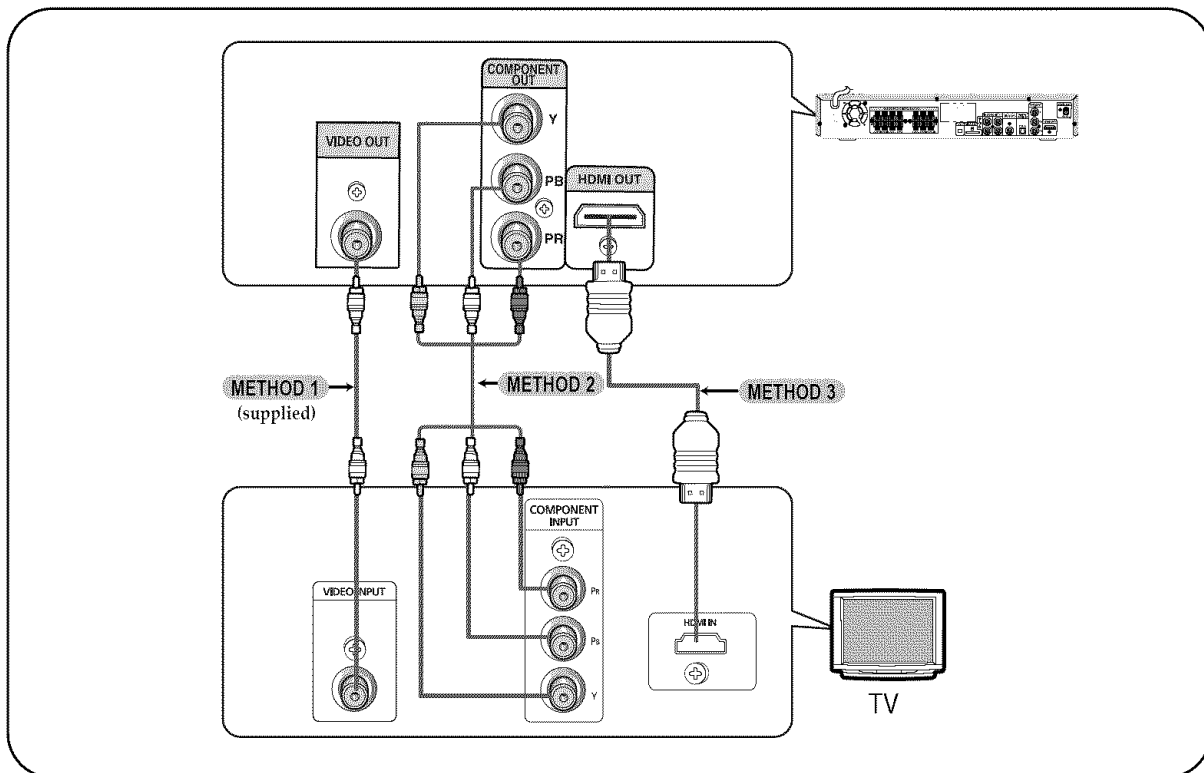

## **METHOD 1** Composite Video ..... (Good Quality)

- Connect the supplied video cable from the VIDEO OUT jack on the back panel of the system to the VIDEO IN jack on your TV.

## **METHOD 2** Component ..... (Better Quality)

- If your television is equipped with Component Video inputs, connect a component video cable (not supplied) from the Pr, Pb and Y jacks on the back panel of the system to the corresponding jacks on your TV.

## **METHOD 3** HDMI ..... (Best Quality)

- Connect the HDMI out to the HDMI input on your TV.


### **Note**

- This product operates in Progressive scan mode(480p Only ) for Component Output.
- If the TV only supports a resolution of 576i(480i), the screen may be divided into 2 screens, or display nothing.
- After making the video connection, set the Video input source on your TV to match the corresponding Video output (HDMI, Component or Composite) on your Home theater. See your TV owner's manual for more information on how to select the TV's Video Input source.

# HDMI Function

## What is HDMI (High Definition Multimedia Interface)?

This device transmits DVD video signal digitally without the process of converting to analog. You can get sharper digital pictures by connecting the video to your TV using an HDMI connection cable.

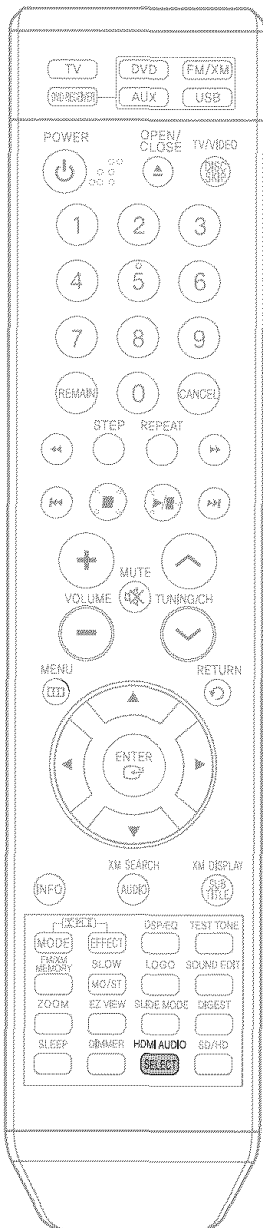

## HDMI Audio ON/OFF function

- The audio signals transmitted over the HDMI Cable can be toggled ON/OFF.

Press the **HDMI AUDIO** button on the remote control.

- This toggles between “AUDIO ON” and “AUDIO OFF” on the display.
- **AUDIO ON** : Both video and audio signals are transmitted over the HDMI connection cable, and audio is output through your TV speakers only.
- **AUDIO OFF** : Video is transmitted over the HDMI connection cable only, and audio is output through the home theater speakers only.

### Note

- The default setting value of this product is HDMI AUDIO OFF.
- HDMI AUDIO is automatically down-mixed to 2ch for TV speakers.
- If you turn the unit off and on, or switch functions when the HDMI AUDIO is set to ON, the HDMI AUDIO is automatically set to OFF.

# HDMI Function

## Resolution Selection

- This function allows the user to select screen resolution for HDMI output.

In Stop mode, press and hold the **SD/HD** (Standard Definition/High Definition) button on the remote control.

- Resolutions available for the HDMI output are 480P, 720P and 1080i.
- SD(Standard Definition) resolution is 480p and HD(High Definition) resolution is 720p/1080i.


Example: If the TV supports resolution up to 480p:

Press the **SD/HD** button.

- A 480p video signal is output through the HDMI output.
- If the TV does not support the configured resolution, you will not be able to see the picture properly.

### Note

- You do not have to make separate adjustments, since the Home Theater and TV will be automatically adjust themselves to the optimal resolution and aspect ratio if connected to HDMI. (If the TV is an HDTV and has an HDMI Input jack, output is automatically converted to 1080i resolution (if supported by the TV).)
- For component video output, only 480P is supported.
- When both HDMI and COMPONENT jacks are connected, COMPONENT video is not displayed.
- See your TV owner's manual for more information on how to select the TV's Video Input source.

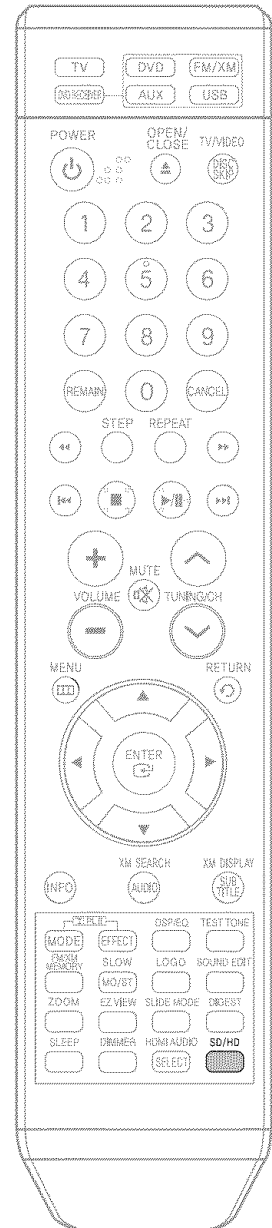


# Connecting External Components

ENG

## Connecting an External Digital / Analog Component

Example: Digital signal components such as a Set-Top Box or CD Recorder.

Analog signal components such as a VCR.

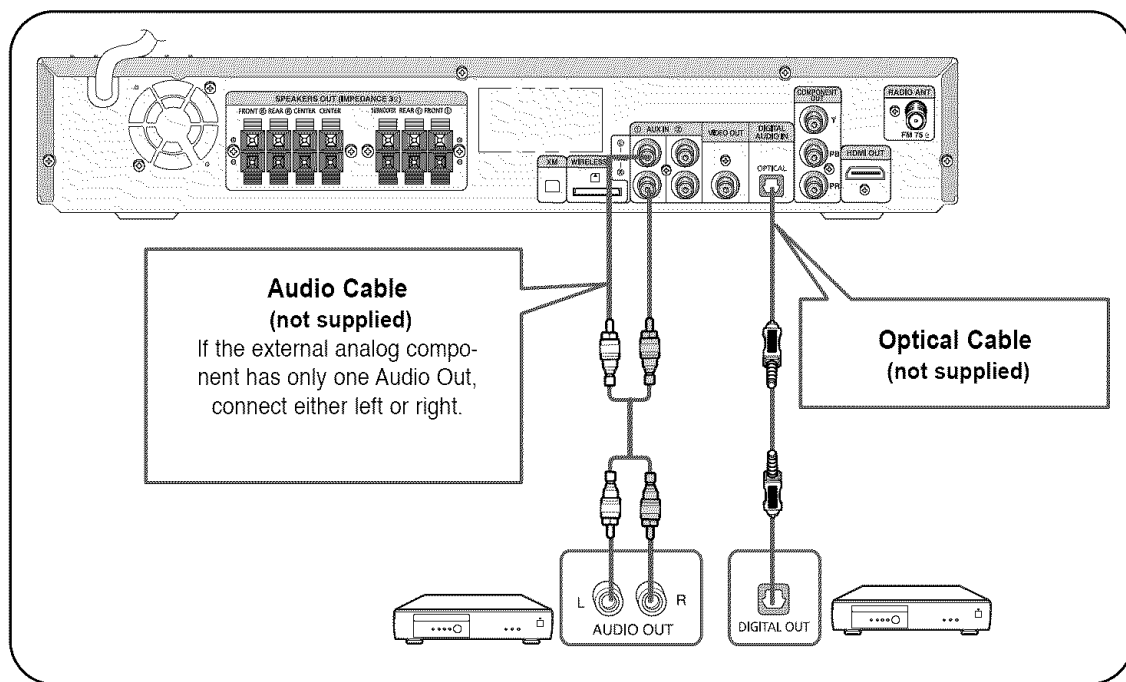


CONNECTIONS

- 1 Connect the Digital Input (OPTICAL) to the Digital Output on the external digital component.
- 2 Connect AUX (Audio) In on the Home Theater to Audio Out on the external analog component.
  - Be sure to match connector colors.
- 3 Press **AUX** on the remote control to select 'DIGITAL IN / AUX1/AUX2' input.
  - Each time the button is pressed, the selection changes as follows: AUX 1 → AUX 2 → DIGITAL IN.
  - You can also use the **FUNCTION** button on the main unit.  
The mode switches as follows: DVD/CD → DIGITAL IN → AUX 1 → AUX 2 → USB → FM → XM.

### Note

- You can connect the Video Output jack on your VCR to the TV, and connect the Audio Output jacks on the VCR to this product.


# Connecting the FM Antenna

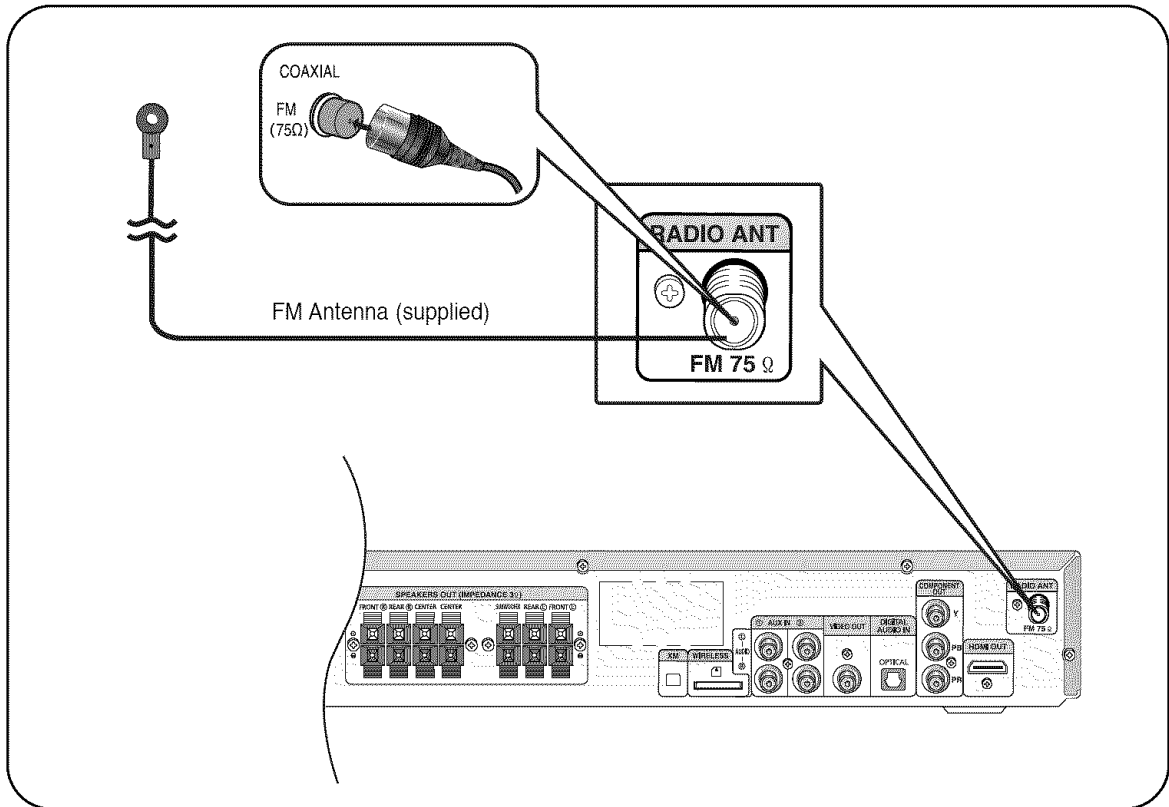

- 1 Connect the FM antenna supplied to the FM 75Ω COAXIAL terminal.
- 2 Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.

## Cooling Fan

The cooling fan supplies cool air to the unit to prevent overheating.

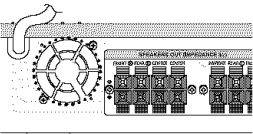

Please observe the following cautions for your safety.


- Make sure the unit is well-ventilated. If the unit has poor ventilation, the temperature inside the unit could rise and may damage it.
- Do not obstruct the cooling fan or ventilation holes. (If the cooling fan or ventilation holes are covered with a newspaper or cloth, heat may build up inside the unit and fire may result.)

## Notes

- This unit does not receive AM broadcasts.

# Connecting an optional XM Satellite Radio Antenna

ENG

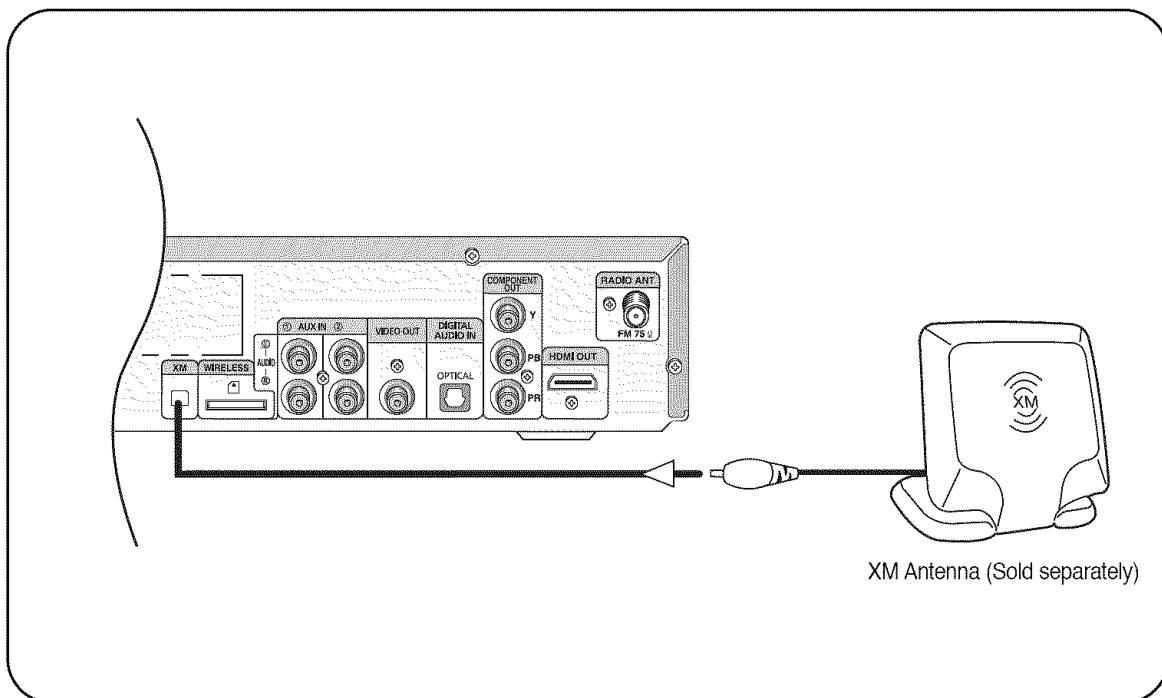

CONNECTIONS

Connect the XM Antenna(Sold separately) to the XM Antenna Connector on the rear of this unit.

## Notes

- To ensure optimal reception of XM's satellite signal, the XM Antenna should be placed at or near a southerly facing window with nothing obstructing its path to the sky. You can mount it indoors or outdoors.
- When making connections, also refer to the operation instructions of the XM Antenna.
- Depending on your location, the radio signal may be weak or cannot be tuned .

# Before Using Your Home Theater


Your Home Theater is capable of playing DVD, CD, MP3/WMA and JPEG discs. Depending on the disc you are using, these instructions may vary slightly. Read the instructions carefully before using.

## To Operate your Samsung TV and the Home Theater with the HT-Q70's Remote Control


- 1** Plug the main unit's power cord into the AC power supply.

- 2** Press **TV** button to set the remote to TV mode.

- 3** Press the **POWER** button to turn on your Samsung TV with this remote.

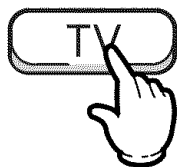

- 4** Press **TV/VIDEO** button to select VIDEO mode on your TV.

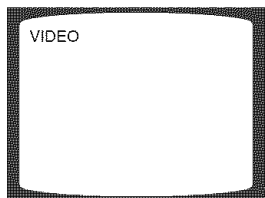

- 5** Press **DVD RECEIVER** button to switch to DVD RECEIVER mode.




- 6** Press **FUNCTION** button on the main unit or DVD button on the remote to enable DVD/CD playback.

### Note

- Buttons Enabled for TV Operation: POWER, CHANNEL, VOLUME, TV/VIDEO, and Numeric (0-9) buttons.
- By default, the remote control is set to work with Samsung TVs.  
See page 75 for more information about remote control operation with other manufacturer's TVs.




# Disc terminology

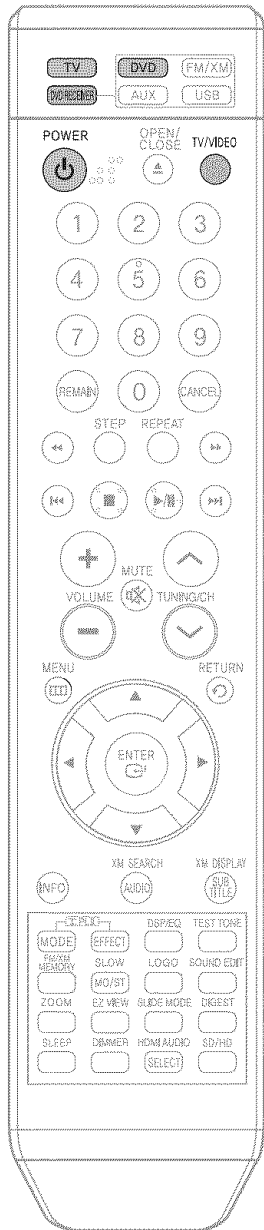


## Groups and tracks (DVD-AUDIO)

- DVD-audio is divided into several large sections called "groups" and smaller sections called "tracks". Numbers are allotted to these sections. These numbers are called "group numbers" and "track numbers".

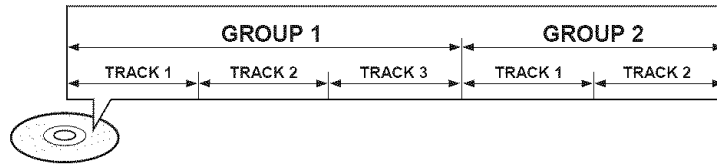


## Titles and chapters (DVD-VIDEO)

- DVD-video is divided into several large sections called "titles" and smaller sections called "chapters". Numbers are allotted to these sections. These numbers are called "title numbers" and "chapter numbers".

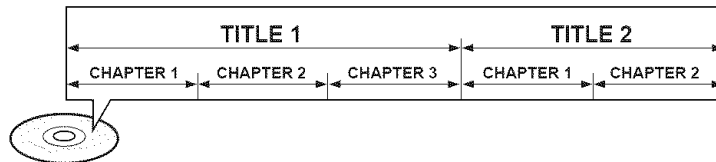


## Tracks (Video and music CDs)

- Video and music CDs are divided into sections called "tracks". Numbers are allotted to these sections. These numbers are called "track numbers".

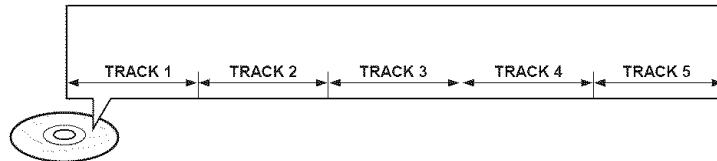


## Files (DivX)

- DivX is divided into sections called "files". Numbers are allotted to these sections. These numbers are called "file numbers".

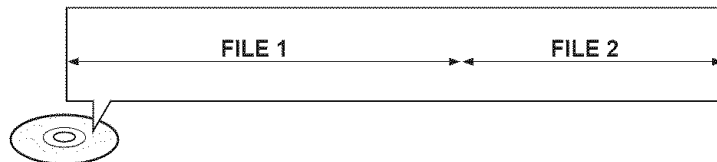

**Note**

- In this manual, the instructions marked with "DVD (  )" are applicable to DVD-VIDEO, DVD-AUDIO, and DVD-R/RW discs. Where a particular DVD type is mentioned, it is indicated separately.
- Depending on the content of the disc, the initial screen may appear different.

OPERATION

# Disc Playback

**1** Press **OPEN/CLOSE** button to open the disc tray.


**2** Load a disc.  
• Place a disc gently into the tray with the disc's label facing up.

**3** Press **DISC SKIP** button.  
• Rotate the carousel tray so you can load the third, fourth, and fifth discs.

**4** Close the compartment by pressing the **OPEN/CLOSE** button again.

DVD CD

• Playback starts automatically.

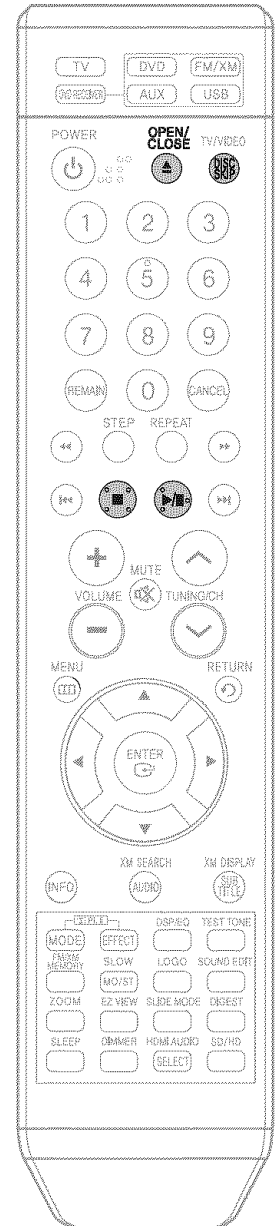

**Note**

• Depending on the content of the disc, the initial screen may appear different.

# Selecting a Disc in the Disc changer

The DVD/CD function is automatically selected when Disc Skip is pushed.

To select a specific disc, press the corresponding **DIRECT PLAY (1, 2, 3, 4, 5)** buttons on the front panel or **DISC SKIP** on the remote control, until the required disc indicator flashes.

- If the disc selected is not loaded, the next disc is played automatically.



To stop playback, press **STOP** during playback.


- If pressed once, "PRESS PLAY" is displayed and the stop position will be stored in memory. If **PLAY/PAUSE (▶/||)** button or **ENTER** button is pressed, playback resumes from the stop position. (This function works only with DVDs.)
- If pressed twice, "STOP" is displayed, and if **PLAY/PAUSE (▶/||)** button is pressed, playback starts from the beginning.

To temporarily pause playback, press **PLAY/PAUSE** during playback.

- To resume playback, press **PLAY/PAUSE (▶/||)** button again.


# MP3/WMA-CD Playback

Data CDs (CD-ROM, CD-R, CD-RW) encoded in MP3/WMA format can be played.

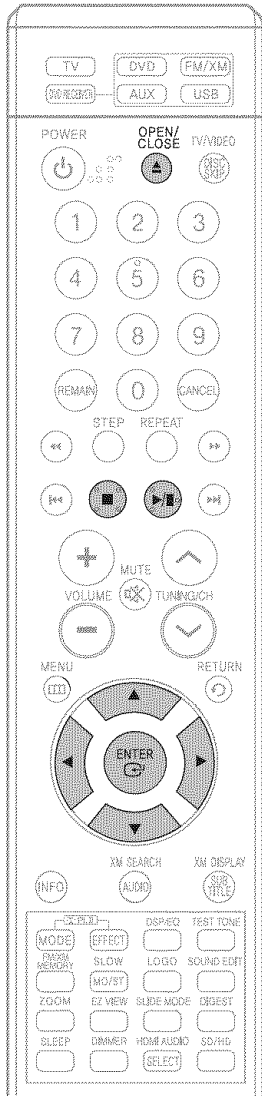


**1** Press the **OPEN/CLOSE** button to open the disc tray, and then load the MP3/WMA disc.

- The MP3/WMA menu screen will appear and playback will start.
- The appearance of the menu depends on the MP3/WMA disc.
- WMA-DRM files cannot be played.

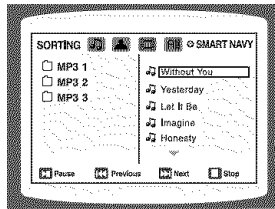

**2** In Stop mode, use ◀ ▶ ▲ ▼ to select the album, and then press the **ENTER** button.

- Use ▲ ▼ to select the track.

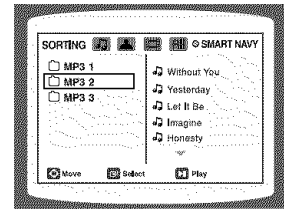

**3** To change the album, use ◀ ▶ ▲ ▼ to select another album in Stop mode, and then press the **ENTER** button.

- To select another album and track, repeat Steps 2 and 3 above.

**4** Press the **STOP** button to stop playback.


**Note**

- Depending on the recording mode, some MP3/WMA-CDs may not play.
- Table of contents of a MP3-CD varies depending on the MP3/WMA track format recorded on the disc.

## To play a file icon in the screen,

Press the ◀ ▶ ▲ ▼ button when it is in stop status and select a desired icon from the top part of the menu.

- To play music files only, select the icon.
- To view image files only, select the icon.
- To view movie files only, select the icon.
- To select all files select the icon.

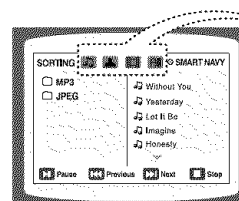



- Music File Icon
- Image File Icon
- Movie File Icon
- All File Icon

# Displaying Disc Information

You can view disc playback information on the TV screen.

Press **INFO** button.

- Each time the button is pressed, the display changes as follows:

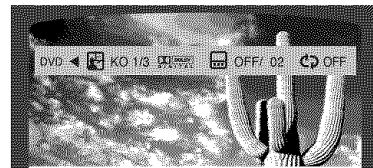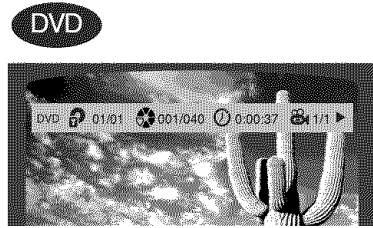


The information Display disappears from the screen

### Note

- Depending on the disc, the disc information display may appear different.
- Depending on the disc, you can also select DTS, DOLBY DIGITAL, or PRO LOGIC.



The information Display disappears from the screen

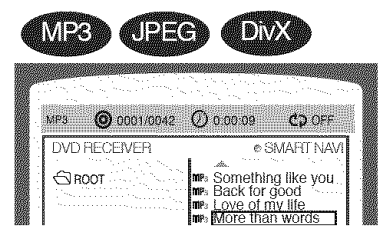

The information Display disappears from the screen

- **appears on the TV screen!**

If this symbol appears on the TV screen while buttons are being operated, that operation is not possible with the disc currently being played.

- **What is a Group?**  
A section of tracks contained in a DVD-AUDIO disc.
- **What is a Title?**  
A movie contained in a DVD-VIDEO disc.
- **What is a Chapter?**  
Each title on a DVD disc is divided into several smaller sections called "chapters".
- **What is a Track (File)?**  
A section of video or a music file recorded on a DVD-AUDIO, CD, or MP3-CD.

### Screen Display

DVD display

TITLE display

ELAPSED TIME display

LR STEREO (L/R) display

CD display

GROUP display

REPEAT PLAYBACK display

DOLBY DIGITAL display

DVD-AUDIO display

CHAPTER display

AUDIO LANGUAGE display

ANGLE display

TRACK (FILE) display

SUBTITLE display

# JPEG File Playback JPEG

Images captured with a digital camera or camcorder, or JPEG files on a PC can be stored on a CD and then played back with this Home Theater.



## Slide Mode

**1** Place the JPEG disc on the disc tray.

**2** Press the **OPEN/CLOSE** button.

**3** Press **SLIDE MODE** button.

- Playback starts automatically.
- Each time the button is pressed, the image makes the transition as follows:

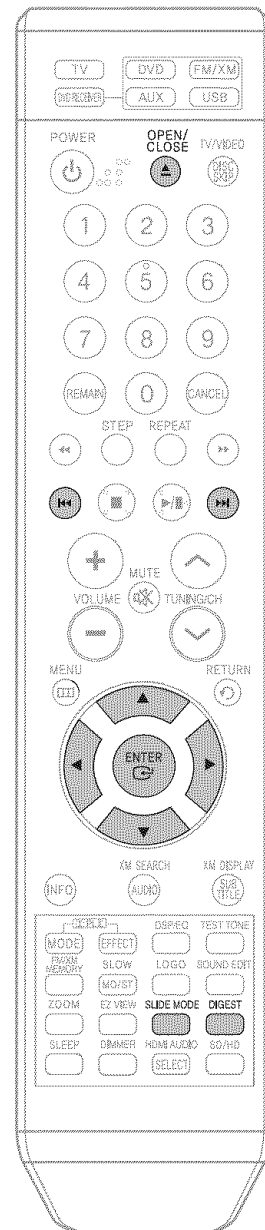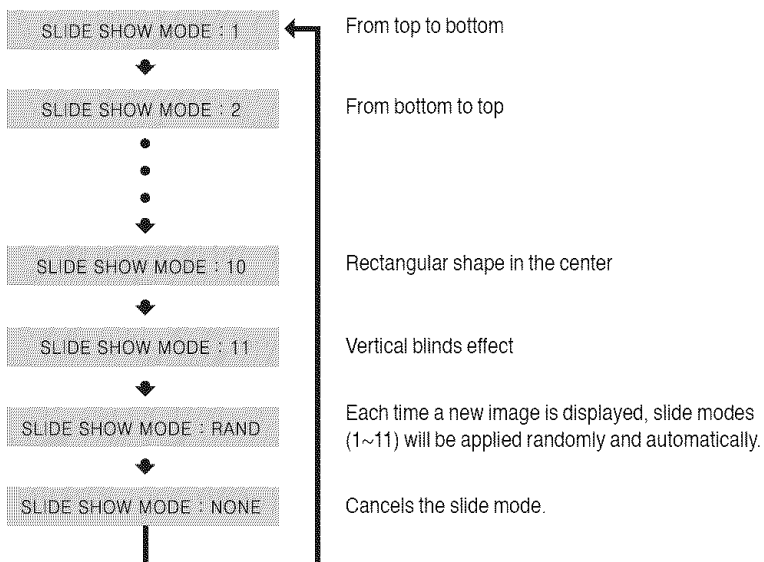

Press **◀◀▶▶** to skip to the next slide.


- Each time the button is pressed, the slide moves backward or forward.

# Digest Function

You can view 9 JPEG images on the TV screen.



**1** Press **DIGEST** button during playback.

- JPEG files will be shown in 9 windows.

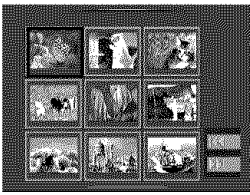

**2** Press Cursor **▲**, **▼**, **◀**, **▶** buttons to select the desired image and then press **ENTER** button.


- The selected image is played for 5 seconds before moving to the next image.

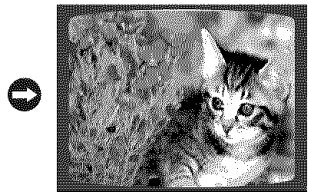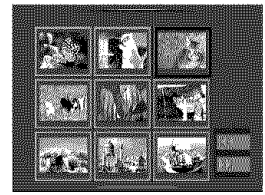

To view the previous or next image with 9 windows, press **◀◀▶▶**.

# Rotate/Flip Function

Press Cursor **▲**, **▼**, **◀**, **▶** buttons during playback.

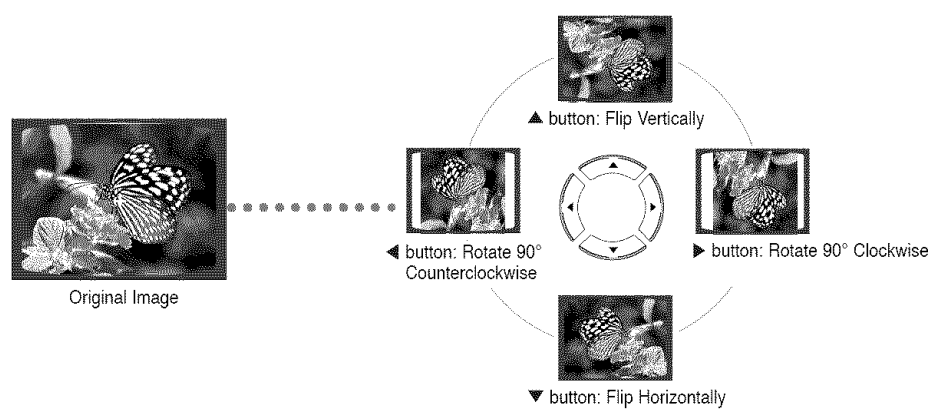

**Note**

- The maximum resolutions supported by this product are 5120 x 3480 (or 19.0 MPixel) for standard JPEG files and 2048 x 1536 (or 3.0 MPixel) for progressive image files.

# DivX Playback

The functions on this page apply to DIVX disc playback.

## Skip Forward/Back

During playback, press the **⏮ ⏭** button.

- Goes to the next file whenever you press **⏭** button, if there are over 2 files in the disk.
- Goes to the previous file whenever you press **⏮** button, if there are over 2 files in the disk.

## Fast playback

To play back the disc at a faster speed, press **⏮** or **⏭** during playback.

- Each time you press either button, the playback speed will change as follows:  
2x → 4x → 8x → 32x → Normal.

## 5 Minute Skip function

During playback, press the **⏮** , **⏭** button.

- Playback skips 5 minutes forward whenever you press **⏭** button.
- Playback skips 5 minutes back whenever you press **⏮** button.

## Zoom Function


**1** Press **ZOOM** button.

**2** Press Cursor **▲, ▼, ◀, ▶** buttons to move to the area you want to enlarge.

- Each time you press the button, your selection will toggle between "ZOOM X2" and "ZOOM OFF".

### Note

- DIVX file can be zoomed only in ZOOM X2 mode.
- DivX files have .Avi file extensions, however, not all .Avi files are DivX and may not be playable in this unit.

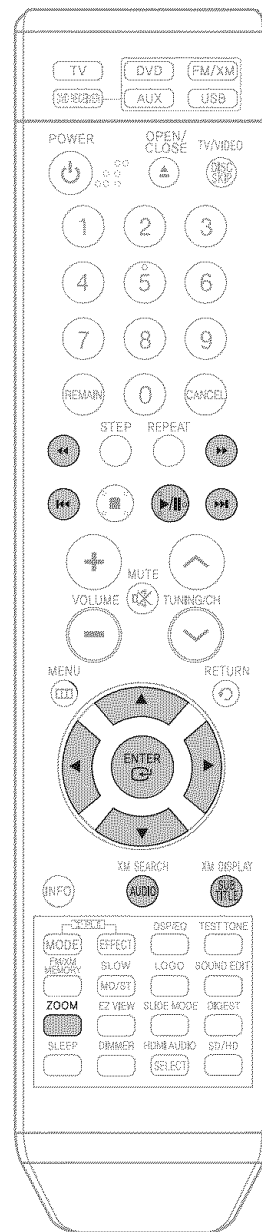




# Subtitle Display


Press the **SUBTITLE** button.

- Each time you press the button, your selection will toggle between “SUBTITLE (1/1, 1/2 …)” and “SUBTITLE OFF”.
- If the disc has only one subtitle file, it will be played automatically
- See number 2 (Caption Function) below for more details concerning Subtitle usage with DIVX discs.

# Audio Display

Press the **AUDIO** button.

- If there are multiple audio tracks on a disc, you can toggle between them.
- Each time you press the button, your selection will toggle between “AUDIO (1/1, 1/2 …)” and “

**Note** • “

## DivX(Digital internet video eXpress)

DivX is a video file format developed by Microsoft and is based on MPEG4 compression technology to provide audio and video data over the Internet in real-time.

MPEG4 is used for video encoding and MP3 for audio encoding so that the users can watch a movie at near DVD-quality video and audio.

### 1. Supported Formats

- This product only supports the following media formats.If both video and audio formats are not supported, the user may experience problems such as broken images or no sound.

#### • Supported Video Formats

| Format             | AVI            | WMV         |
|--------------------|----------------|-------------|
| Supported Versions | DivX3.11 ~ 5.1 | V1/V2/V3/V7 |

#### • Supported Audio Formats

| Format             | MP3        | WMA        | AC3         | DTS     |
|--------------------|------------|------------|-------------|---------|
| Bit Rate           | 80~384kbps | 56~128kbps | 128~384kbps | 1.5Mbps |
| Sampling Frequency | 44.1khz    |            | 44.1/48khz  | 44.1khz |

- DivX files, including audio and video files, created in the DTS format can only support up to 6Mbps.
- Aspect Ratio: Although default DivX resolution is 640\*480 pixels (4:3), this product supports up to 720\*480 pixels (16:9). TV screen resolutions higher than 800 will not be supported.
- When you play a disc whose sampling frequency is higher than 48khz or 320kbps, you may experience shaking on the screen during playback.

### 2. Caption Function

- You must have some experience with video extraction and editing in order to use this feature properly.
- To use the caption function, save the caption file (\*.smi) in the same file name as that of the DivX media file (\*.avi) within the same folder.

Example. Root Samsung\_007CD1.avi  
 Samsung\_007CD1.smi



- Up to 60 alphanumeric characters or 30 East Asian characters (2 byte characters such as Korean and Chinese) for the file name.

# Checking the Remaining Time

Press the **REMAIN** button.

- For checking the total and remaining time of a title or chapter being played.

Each time the **REMAIN** button is pressed

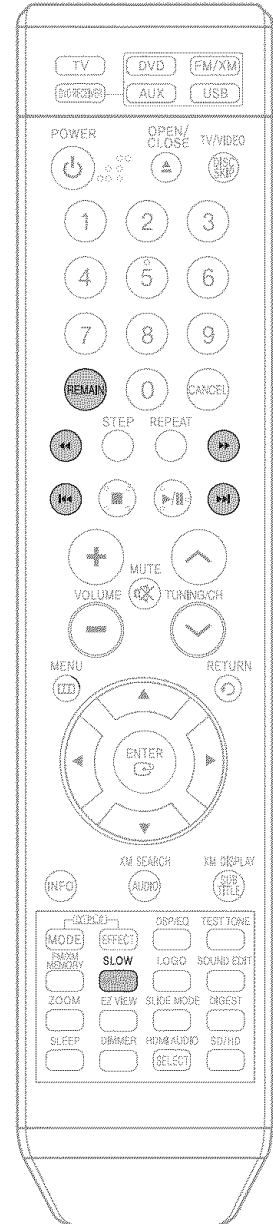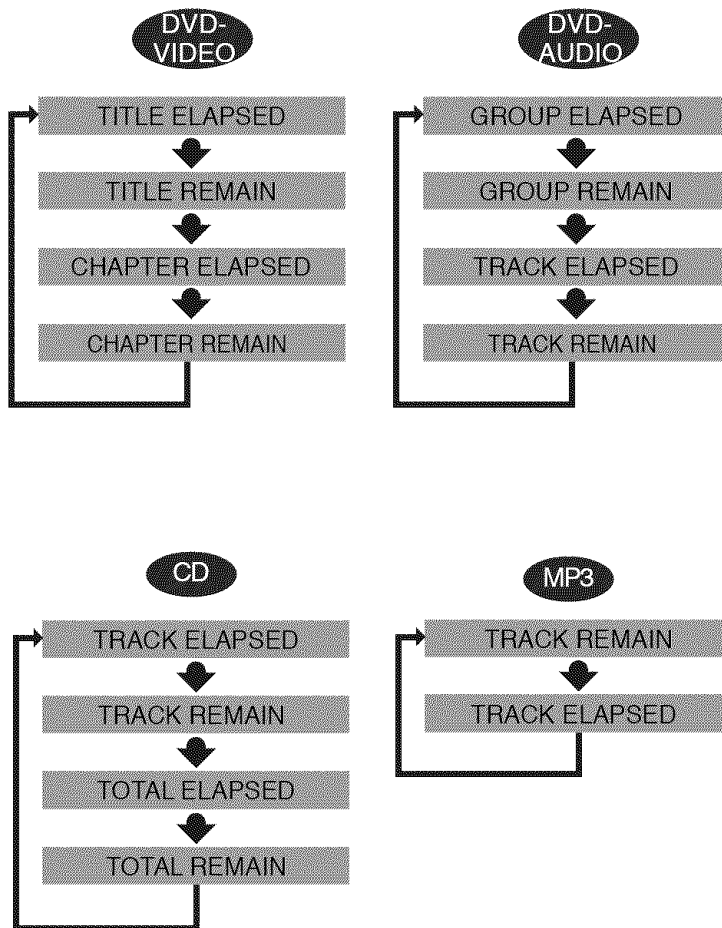


# Fast/Slow Playback

## Fast Playback

DVD CD MP3

Press **◀◀ ▶▶**.

- Each time the button is pressed during playback, the playback speed changes as follows:

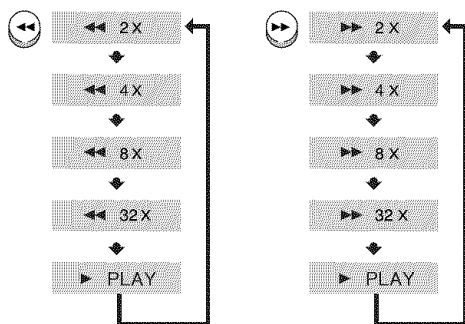


**Note**

- During fast playback of a CD or MP3-CD, sound is heard only at 2x speed, and not at 4x, 8x, and 32x speeds.

## Slow Playback

Press **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

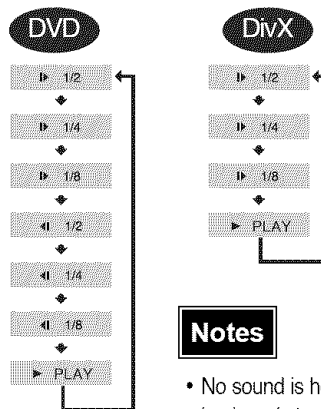

**Notes**

- No sound is heard during slow playback and step motion playback.
- Reverse slow playback does not work with DivX.


OPERATION

# Skipping Scenes/Songs


Press **◀◀ ▶▶**.

- Each time the button is pressed briefly during playback, the previous or next chapter, track, or directory (file) will be played.
- You cannot skip chapters consecutively.

DVD

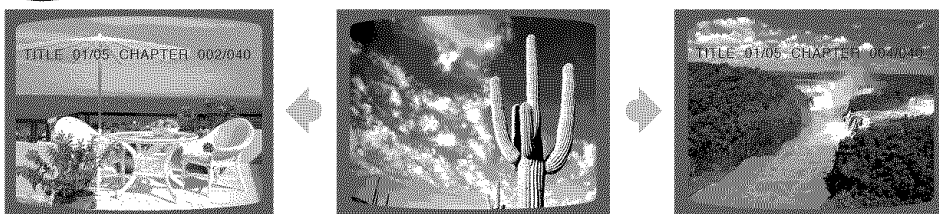

MP3

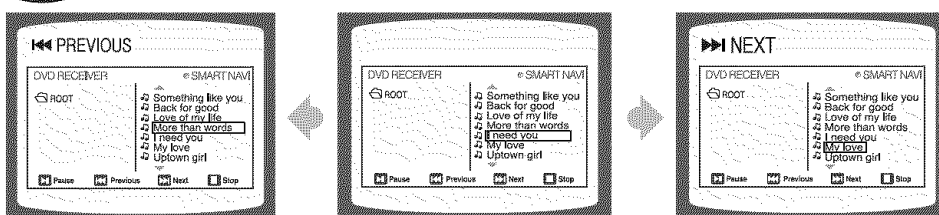

# Repeat Playback

Repeat playback allows you to repeatedly play a chapter, title, track (song), or directory (MP3 file).

DVD


CD

MP3

JPEG

Press **REPEAT** button.

- Each time the button is pressed during playback, the repeat playback mode changes as follows:

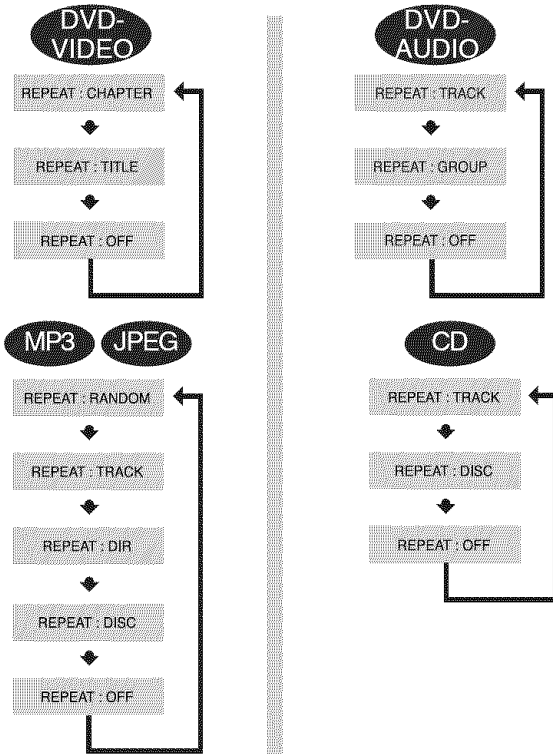

## Repeat Playback Options

### CHAPTER

Repeatedly plays the selected chapter.

### TITLE

Repeatedly plays the selected title.

### GROUP

Repeatedly plays the selected group.

### RANDOM

Plays tracks in random order.

(A track that has already been played may be played again.)

### TRACK

Repeatedly plays the selected track.

### DIR

Repeatedly plays all tracks in the selected folder.

### DISC

Repeatedly plays the entire disc.


### OFF

Cancels Repeat Playback.

## To Select a Repeat Playback Mode in the Disc Information Screen


- 1 Press **INFO** button twice.
- 2 Press Cursor **▶** button to move to REPEAT PLAYBACK (↻) display.
- 3 Press Cursor **▼** button to select the desired Repeat Playback mode.
- 4 Press **ENTER** button.

\* For MP3 and JPEG discs, you cannot select Repeat Play from the information display screen.

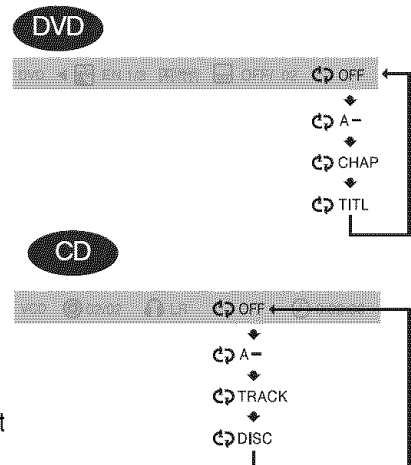

# A-B Repeat Playback

You can repeatedly play back a designated section of a DVD.

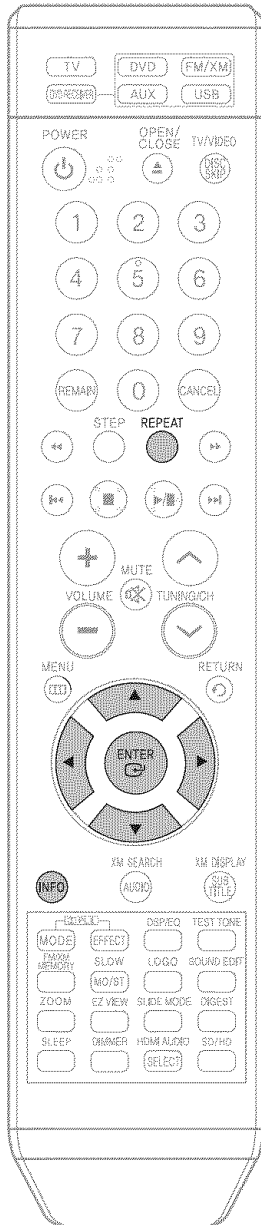

## DVD

**1** Press **INFO** button twice.

DVD ◀ ▶ EN 1/3 ▶▶ OFF/ 02 ↻ OFF

**2** Press Cursor ▶ button to move to REPEAT PLAYBACK (↻) display.

DVD ◀ ▶ EN 1/3 ▶▶ OFF/ 02 ↻ OFF

**3** Press Cursor ▲, ▼ buttons to select 'A-' and then press **ENTER** button at the beginning of the desired segment.

- When **ENTER** button is pressed, the selected position will be stored in memory.

DVD ◀ ▶ EN 1/3 ▶▶ OFF/ 02 ↻ A-



DVD ◀ ▶ EN 1/3 ▶▶ OFF/ 02 ↻ A-?

REPEAT : A-

**4** Press **ENTER** button at the end of the desired segment.

- The specified segment will be played repeatedly.

DVD ◀ ▶ EN 1/3 ▶▶ OFF/ 02 ↻ A-B

REPEAT : A-B

To return to normal playback, press Cursor ▲, ▼ buttons to select ↻ OFF.


## Note

- The A-B Repeat function does not operate with MP3, CD or JPEG discs.

# Step Function DVD

Press **STEP** button.


- The picture moves forward one frame each time the button is pressed during playback.

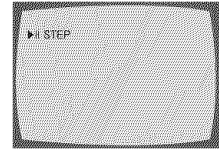

# Angle Function DVD

This function allows you to view the same scene in different angles.

 **1** Press **INFO** button.





**2** Press **Cursor ▶** button to move to **ANGLE (&#9745;)** display.




**3** Press **Cursor ▲, ▼** or numeric buttons to select the desired angle.

- Each time the button is pressed, the angle changes as follows:

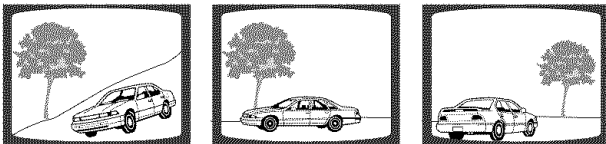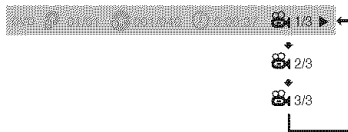

**Note**

- The Angle function works only with discs on which multiple angles have been recorded.

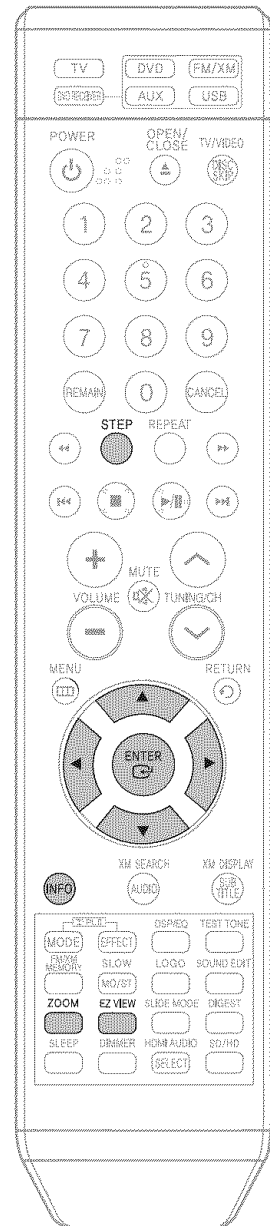


# Zoom (Screen Enlarge) Function

ENG


This function allows you to enlarge a particular area of the displayed image.

DVD

**1** Press **ZOOM** button.

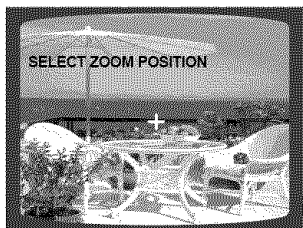


**2** Press Cursor **▲**, **▼**, **◀**, **▶** buttons to move to the area you want to enlarge.

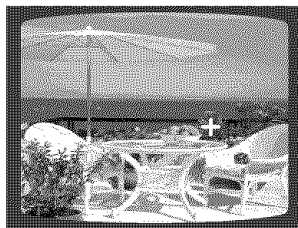

**3** Press **ENTER** button.

- Each time the button is pressed, the zoom level changes as follows:

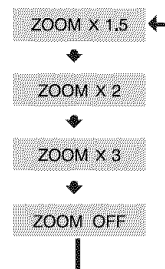

**Note**

- When a DivX disc is being played, only the 2:1 zoom-in is available.


# EZ VIEW Function

DVD

OPERATION

Press **EZ VIEW** button.


- Each time the button is pressed, the zoom function will switch between On and Off.
- When a movie is played in Widescreen format, black bars at the top and bottom of the TV screen can be removed by pressing the **EZ VIEW** button.

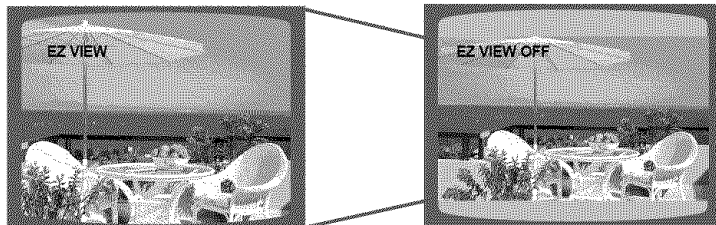

**Note**

- This function will not work if the DVD is recorded with multi-camera angle format.
- Black bars may not disappear because some DVD discs have a built-in horizontal to vertical ratio.
- This feature is not supported for DivX discs.


# Bonus Group / Navigating Pages

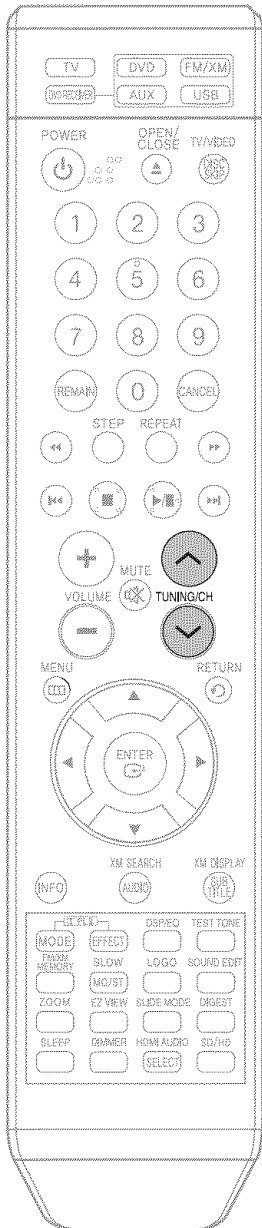

## Bonus Group **DVD-AUDIO**

Some DVD-Audio discs have an extra 'bonus' group that requires a 4-digit key number to access. See the disc packaging for details and the key number.

When you play a DVD-Audio disc that has a bonus group, the key number input screen appears automatically.

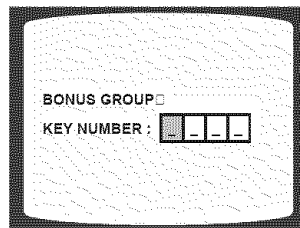

### Note

- If you eject the disc, switch the power off, or unplug the player, you will need to re-enter the key number.

## Navigating Pages **DVD-AUDIO**

During playback, press the **TUNING/CH** button on the remote control.

- You can select the desired image from a DVD-Audio disc containing still images.
- With some discs, you may not be able to select images.



# Selecting Audio/Subtitle Language

ENG

## Audio Language Selection Function DVD

**1** Press **INFO** button twice.

DVD ◀ EN 1/3

**2** Press Cursor **▲**, **▼** buttons or numeric buttons to select the desired audio language.

- Depending on the number of languages on a DVD disc, a different audio language (ENGLISH, SPANISH, FRENCH, etc.) is selected each time the button is pressed.

DVD ◀ EN 1/3  
▶ SP 2/3  
▶ FR 3/3

## Subtitle Language Selection Function DVD

**1** Press **INFO** button twice.

DVD ◀ EN 1/3

**2** Press Cursor **▶** button to move to **SUBTITLE** ( ) display.


DVD ◀ EN 1/3

**3** Press Cursor **▼** button or numeric buttons to select the desired subtitle.

DVD ◀ EN 01/03  
▶ SP 02/03  
▶ FR 03/03  
▶ OFF / 03

### Note

- To operate this function, you can also press the Select AUDIO or Select SUBTITLE buttons on the remote control.
- Depending on the disc, the Subtitle and Audio Language functions may not be available.

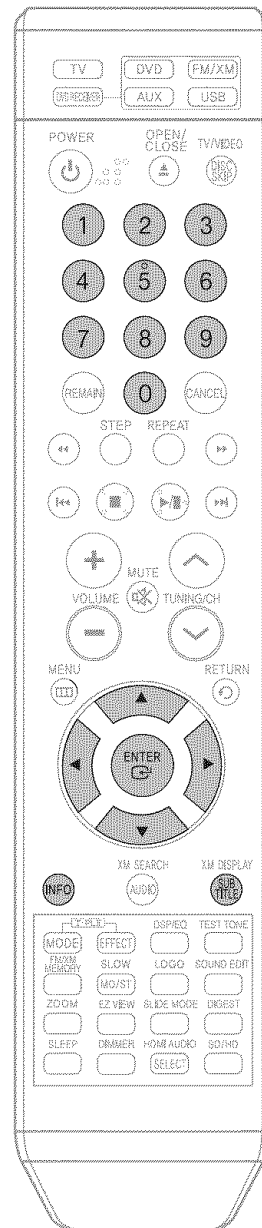


OPERATION

# Playing Media Files using the USB HOST feature


You can enjoy media files such as pictures, movies and music saved in an MP3 player, USB memory or digital camera in high quality video with 5.1 channel home theater sound by connecting the storage device to the USB port of the home theater.

- 1 Connect the USB device to the USB port on the rear of the unit.

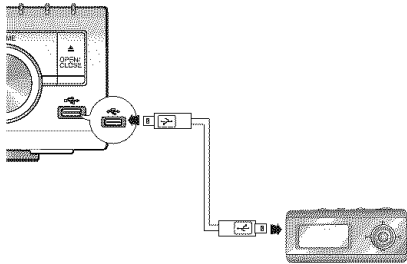

- 2 Press the **FUNCTION** button on the main unit or the **USB** button on the remote control to select the USB mode.

- "USB" appears on the display screen and then disappears.
- USB MENU screen appears on the TV screen and the saved file is played.

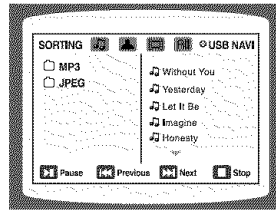

To stop playback, press the **STOP** (■) button.

## Safe USB Removal

To prevent damage to the memory stored in the USB device, perform safe removal before disconnecting the USB cable.

- (1) Press the Stop button twice in a row.  
The display will show **REMOVE → USB**.
- (2) Remove the USB cable.

## Skip Forward/Back


During playback, press the **⏮⏭** button.

- When there is more than one file, when you press the **⏭** button, the next file is selected.
- When there is more than one file, when you press the **⏮** button, the previous file is selected.

## Fast playback

To play back the disc at a faster speed, press **⏪** or **⏩** during playback.

- Each time you press either button, the playback speed will change as follows:  
2x → 4x → 8x → 32x → Normal.

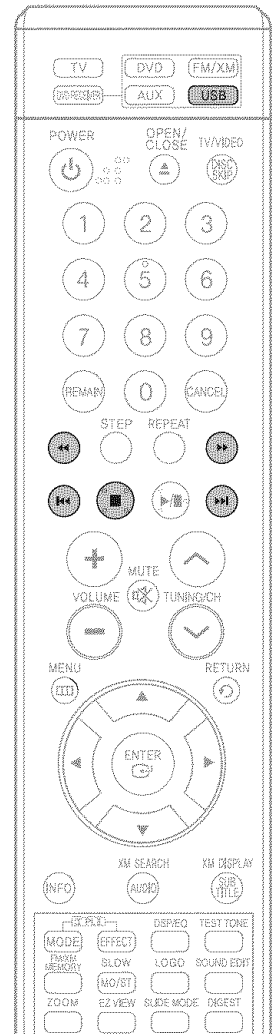

## Compatible Devices

1. USB devices that support USB Mass Storage v1.0.  
(USB devices that operate as a removable disk in Windows (2000 or later) without additional driver installation.)
2. MP3 Player: HDD and flash type MP3 players.
3. Digital camera: Cameras that support USB Mass Storage v1.0.
  - Cameras that operate as a removable disk in Windows (2000 or later) without additional driver installation.
4. USB HDD and USB Flash Drive: Devices that support USB2.0 or USB1.1.
  - You may experience a difference in playback quality when you connect a USB1.1 device.
  - For a USB HDD, make sure to connect an auxiliary power cord to the USB HDD for proper operation.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader
  - Depending on the manufacturer, the USB card reader may not be supported.
  - If you install multiple memory devices into a multi card reader, you may experience problems.
6. If you use a USB extension cable, the USB device might not be recognized.

### • Supported Formats

|               | File name | File extension | Bit rate   | Version               | Pixel   | Sampling Frequency |
|---------------|-----------|----------------|------------|-----------------------|---------|--------------------|
| Still Picture | JPG       | JPG .JPEG      | –          | –                     | 640*480 | –                  |
| Music         | MP3       | .MP3           | 80~384kbps | –                     | –       | 44.1kHz            |
|               | WMA       | .WMA           | 56~128kbps | V8                    | –       | 44.1kHz            |
| Movie         | WMV       | .WMV           | 4Mbps      | V1,V2,V3,V7           | 720*480 | 44.1kHz~48kHz      |
|               | DivX      | .AVI, .ASF     | 4Mbps      | DivX3.11~DivX5.1,Xvid | 720*480 | 44.1kHz~48kHz      |

- CBI (Control/Bulk/Interrupt) is not supported.
- Digital Cameras that use PTP protocol or require additional program installation when connected to a PC are not supported.
- A device using NTFS file system is not supported.  
(Only FAT 16/32 (File Allocation Table 16/32) file system is supported.)
- Some MP3 players, when connected to this product, may not operate depending on the sector size of their file system.
- The USB HOST function is not supported if a product that transfers media files by its manufacturer-specific program is connected.
- Does not operate with Janus enabled MTP(Media Transfer Protocol) devices.
- **The USB host function of this product does not support all USB devices. For information on the supported devices, see pages 81.**

# Moving Directly to a Scene/Song

DVD CD

**1** Press **INFO** button.




## Moving to a Title/Track

**2** Press Cursor **▲**, **▼** buttons or numeric buttons to select the desired title/track and then press **ENTER** button.



## Moving to a Chapter

**3** Press Cursor **◀**, **▶** buttons to move to Chapter (  ) display.



 
## Moving to a Chapter

**4** Press Cursor **▲**, **▼** buttons or numeric buttons to select the desired chapter and then press **ENTER** button.




## Moving to a Specific Time

**5** Press Cursor **◀**, **▶** buttons to move to time display.



## Moving to a Specific Time


**6** Press the numeric buttons to select the desired time and then press **ENTER** button.



MP3 JPEG

Press the **numeric** buttons.

- The selected file will be played.
- When playing an MP3 or JPEG disc, you cannot use **▲**, **▼** to move to a folder. To move a folder, press **■** (Stop) and then press **▲**, **▼**.

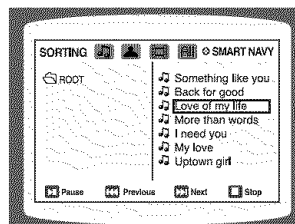

### Note

- You can press **◀◀▶▶** on the remote control to move directly to the desired title, chapter, or track.
- Depending on the disc, you may not be able to move to the selected title or time.

# Using Disc Menu DVD

You can use the menus for the audio language, subtitle language, profile, etc. DVD menu contents differ from disc to disc.

- 1 In Stop mode, press **MENU** button.




- 2 Press Cursor  $\blacktriangle$ ,  $\blacktriangledown$  buttons to move to 'DISC MENU' and then press **ENTER** button.

- When you select Disc Menu and it is not supported by the disc, the "This menu is not supported" message appears on the screen.



- 3 Press Cursor  $\blacktriangle$ ,  $\blacktriangledown$ ,  $\blacktriangleleft$ ,  $\blacktriangleright$  buttons to select the desired item.

- Press ENTER button.

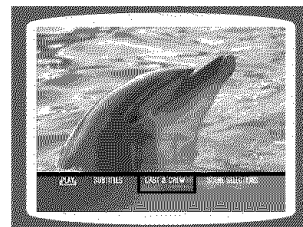

## Note

- Disc menu display may be different depending on the disc.


# Using the Title Menu DVD

For DVDs containing multiple titles, you can view the title of each movie. Depending on the disc, the availability of this feature may vary.

- 1 In Stop mode, press **MENU** button.




- 2 Press Cursor  $\blacktriangle$ ,  $\blacktriangledown$  button to move to 'Title Menu'.

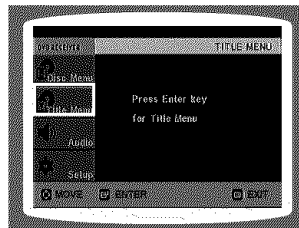

- 3 Press **ENTER** button.

- The title menu appears.

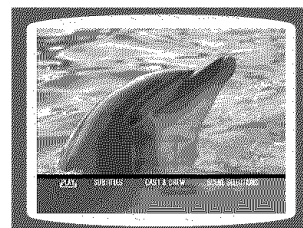


Press **MENU** button to exit the setup screen.

## Note

- Title menu display may be different depending on the disc.

# Setting the Language


OSD (On-Screen Display) language is set to English by default.

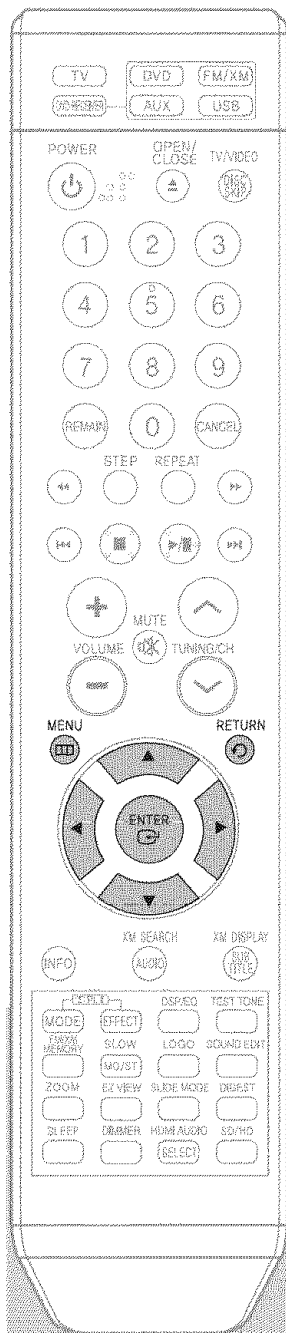

**1** In Stop mode, press **MENU** button.




**2** Press Cursor  $\blacktriangledown$  button to move to 'Setup' and then press **ENTER** button.

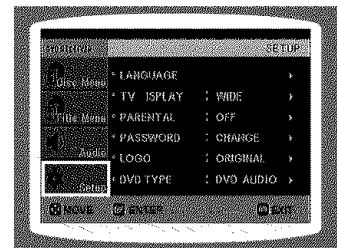


## Note


- To select another language, select OTHER and enter the language code of your country. (See page 80 for language codes)  
AUDIO, SUB TITLE and DISC MENU language can be selected.

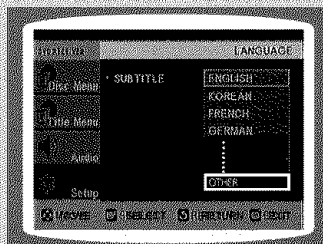

**3** Select 'Language' and then press **ENTER** button

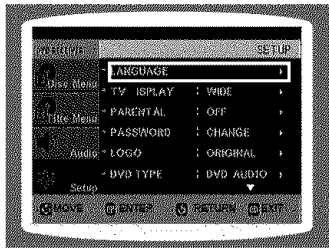


**4** Press Cursor **▲**, **▼** button to select 'OSD Language' and then press **ENTER** button.

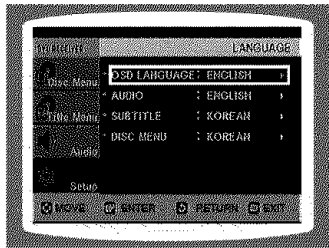

**5** Press Cursor **▲**, **▼** button to select the desired language and then press **ENTER** button.

- Once the setup is complete, the OSD will be English if English has been selected as language.

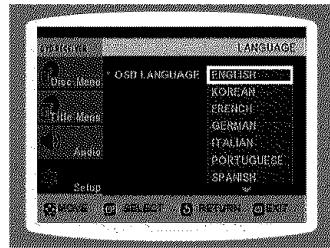


Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.


SETUP



Selecting the OSD Language

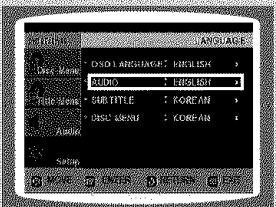

Selecting the Audio Language (recorded on the disc)

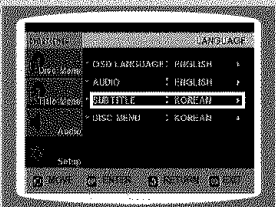

Selecting the Subtitle Language (recorded on the disc)




Selecting the Disc Menu Language (recorded on the disc)


\* If the language you selected is not recorded on the disc, menu language will not change even if you set it to your desired language.

# Setting TV Screen type


Depending on your TV type (Wide Screen or conventional 4:3), you can select the TV's aspect ratio.

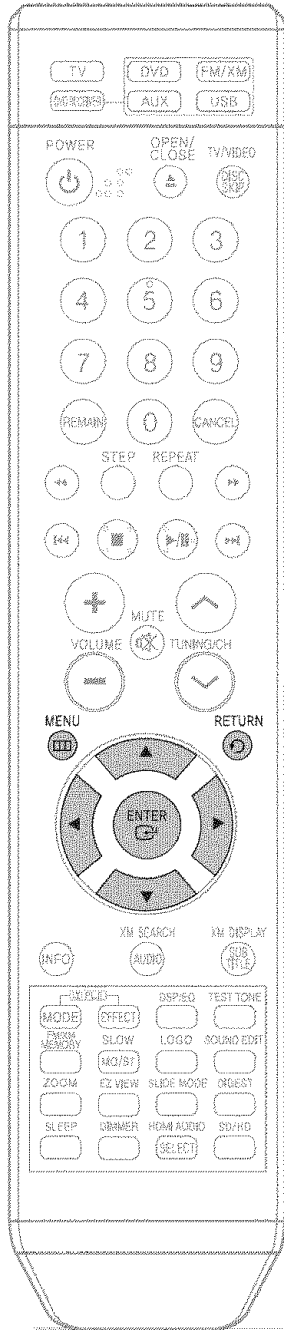


**1** In Stop mode, press **MENU** button.

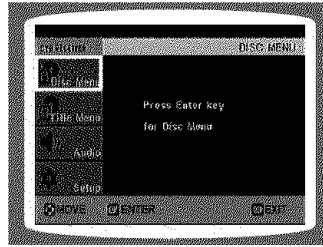

**2** Press Cursor **▼** button to move to 'Setup' and then press **ENTER** button.

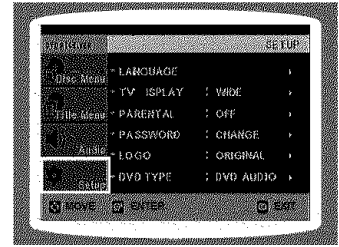


**3** Press Cursor **▼** button to move to 'TV DISPLAY' and then press **ENTER** button.

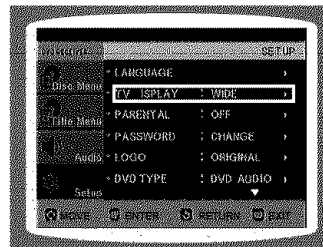

**4** Press Cursor **▲, ▼** button to select the desired item and then press **ENTER** button.

- Once the setup is complete, you will be taken to the previous screen.

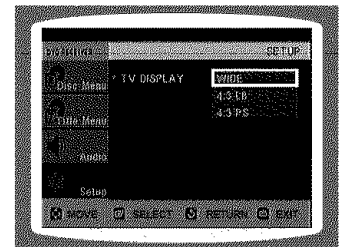

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.



## Adjusting the TV Aspect Ratio (Screen Size)

The horizontal to vertical screen size ratio of conventional TVs is 4:3, while that of widescreen and high definition TVs is 16:9. This ratio is called the aspect ratio. When playing DVDs recorded in different screen sizes, you should adjust the aspect ratio to fit your TV or monitor.

- For a standard TV, select either "4:3LB" or "4:3PS" option according to personal preference. Select "16:9" if you have a widescreen TV.

### WIDE

: Select this to view a 16:9 picture in the full-screen mode on your widescreen TV.

- You can enjoy the widescreen aspect.



### 4:3LB (4:3 Letterbox)

: Select this to play a 16:9 picture in the letter box mode on a conventional TV.

- Black bars will appear at the top and bottom of the screen.



### 4:3PS (4:3 Pan&Scan)

: Select this to play a 16:9 picture in the pan & scan mode on a conventional TV.

- You can see the central portion of the screen only (with the sides of the 16:9 picture cut off).




### Note


- If a DVD is in the 4:3 ratio, you cannot view it in widescreen.
- Since DVD discs are recorded in various image formats, they will look different depending on the software, the type of TV, and the TV aspect ratio setting.

# Setting Parental Controls (Rating Level)


Use this to restrict playback of adult or violent DVDs you do not want children to view.

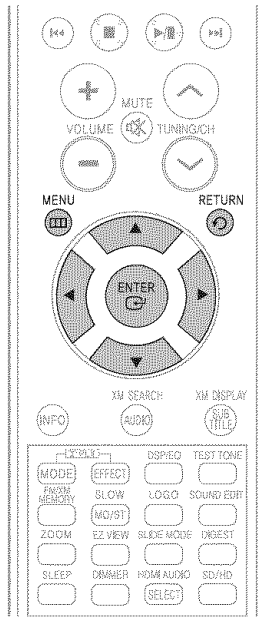


**1** In Stop mode, press **MENU** button.

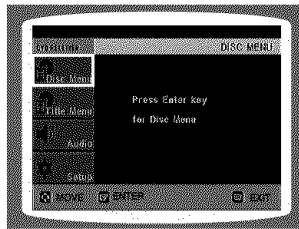

**2** Press Cursor  $\blacktriangledown$  button to move to 'Setup' and then press **ENTER** button.

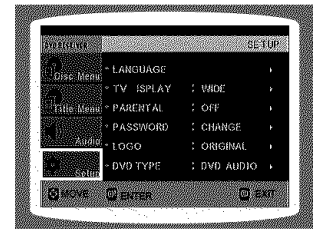


**3** Press Cursor  $\blacktriangledown$  button to move to 'PARENTAL' and then press **ENTER** button.

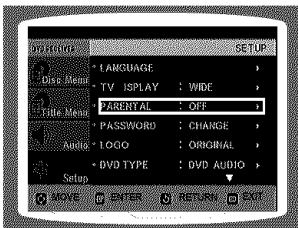


**4** Press Cursor  $\blacktriangle$ ,  $\blacktriangledown$  button to select the desired rating level and then press **ENTER** button.

- If you have selected Level 6, you cannot view DVDs with Level 7 or higher.
- The higher the level, the closer the content is to violent or adult material.

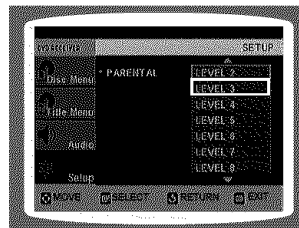

**5** Enter the password and then press **ENTER** button.

- The password is set to "7890" by default.
- Once the setup is complete, you will be taken to the previous screen.

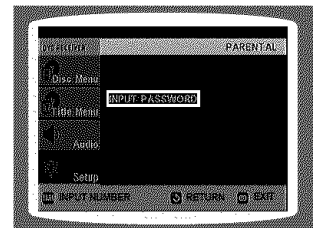

## Note


- This function works only if a DVD disc contains the rating level information.

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

# Setting the Password


You can set the password for the Parental (rating level) setting.

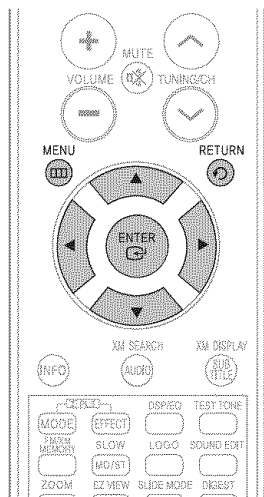

**1** Press **MENU** button.



**2** Press Cursor **▼** button to move to 'Setup' and then press **ENTER** button.

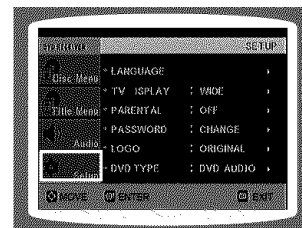

**3** Press Cursor **▼** button to move to 'PASSWORD' and then press **ENTER** button.




**4** Press **ENTER** button.



**5** Enter the password and then press **ENTER** button.

- Enter the old password, a new password, and confirm new password.
- The setting is complete.

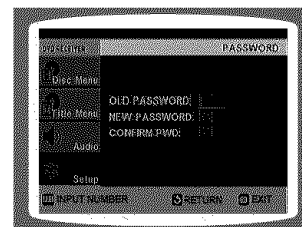

**Note** • The password is set to "7890" by default.

## If you have forgotten the rating level password, do the following:

- While the player is in the no disc mode, hold the main unit's  button for longer than 5 seconds. "INITIALIZE" appears on the display and all settings will return to the default values.
- Press the POWER button.

Using the **RESET** function will erase all stored settings.  
Do not use this unless necessary.


# Setting the Wallpaper

JPEG DVD

While watching a DVD or JPEG CD, you can set the image you like as background wallpaper.


## Setting the Wallpaper

**1** During playback, press **PLAY/PAUSE** button when an image you like appears.

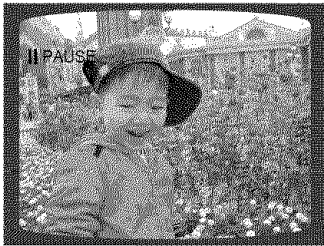


**2** Press **LOGO** button.

- "COPY LOGO DATA" will be displayed on the TV screen.

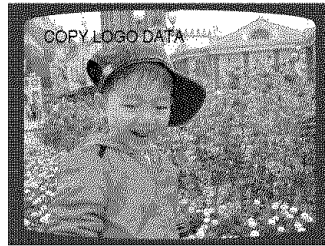


**3** The power will turn off and then back on.


- The selected wallpaper will be displayed.
- You can select up to 3 wallpaper settings.

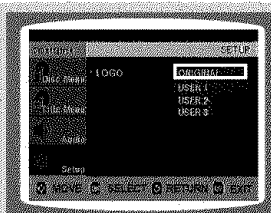

Select this to set the Samsung Logo image as your wallpaper.

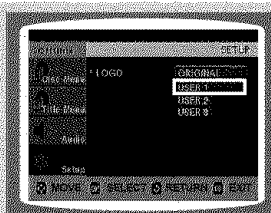

Select this to set the desired image as your wallpaper.

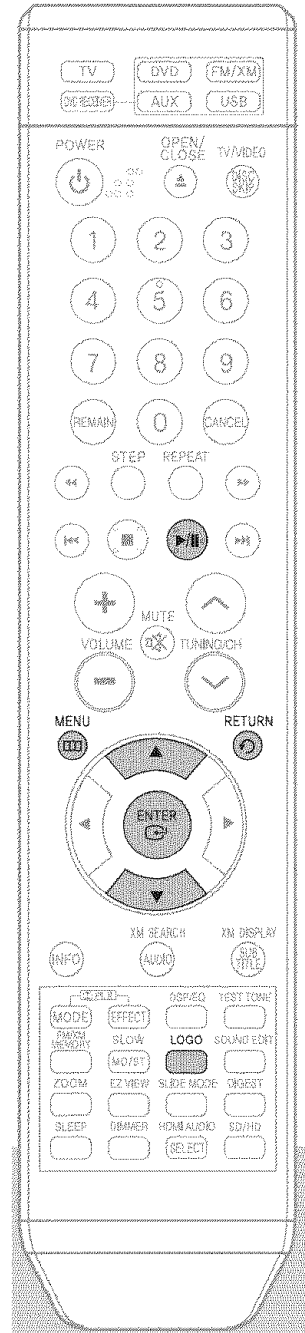


## To select one of the 3 wallpaper settings you've made


**1** In Stop mode, press **MENU** button.



**2** Press Cursor **▼** button to move to 'Setup' and then press **ENTER** button.

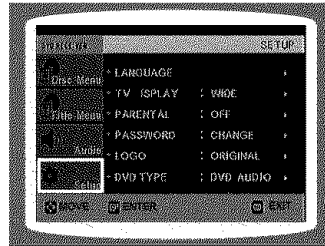


**3** Press Cursor **▼** button to move to 'LOGO' and then press **ENTER** button.

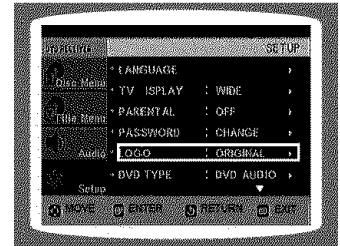

**4** Press **▼** to select the desired 'USER', and then press **ENTER**.

- This selects one of the 3 wallpaper screens

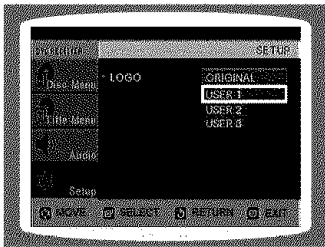


**5** Press **MENU** button to exit the setup screen.

Press **RETURN** button to return to the previous level.


Press **MENU** button to exit the setup screen.

# DVD Playback Mode


Some DVD-Audio discs contain DVD-Video as well as DVD-Audio. To play back the DVD-Video portion of the DVD-Audio disc, set the unit to DVD-Video mode.

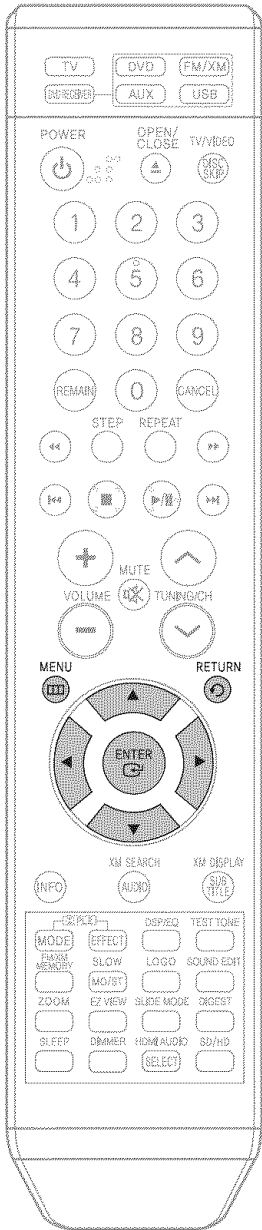


**1** Press the **MENU** button while the disc tray is open.

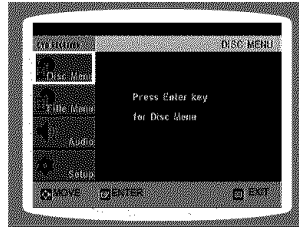

**2** Press Cursor **▼** button to move to 'Setup' and then press **ENTER** button.

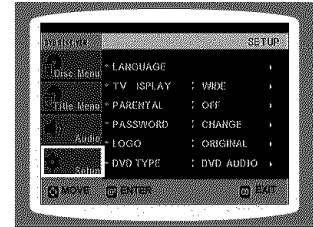

**3** Press Cursor **▼** button to move to 'DVD VIDEO' and then press **ENTER** button.

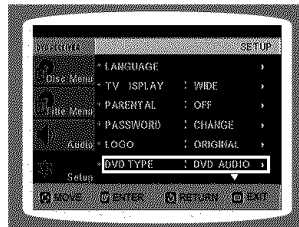

**4** Press Cursor **▲, ▼** button to move to 'DVD VIDEO' and then press **ENTER** button.

- Set steps 1 ~ 4 again if you want to switch to DVD AUDIO Play mode.




## Note

- DVD Play mode is set to DVD Audio as factory default setting.
- Powering off the main unit will automatically switch to the DVD Audio mode.

## When Selecting DVD Play Mode:

- **DVD VIDEO** : set to play the DVD video contents contained on a DVD audio disc.
- **DVD AUDIO** : set to play the default DVD audio.

## DivX (R) registration

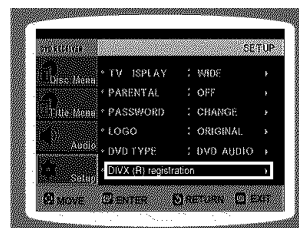

- Please use the Registration code to register this player with the DivX (R) video on demand format. To learn more, go to [www.divx.com/vod](http://www.divx.com/vod).

# Setting the Speaker Mode

Signal outputs and frequency responses from the speakers will automatically be adjusted according to your speaker configuration and whether certain speakers are used or not.


**1** In Stop mode, press **MENU** button.



**2** Press Cursor **▼** button to move to 'Audio' and then press **ENTER** button.




**3** In the Speaker Setup, press the **ENTER** button again.

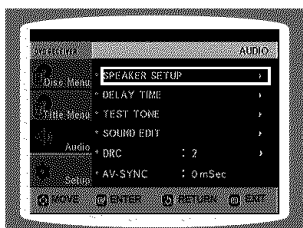

**4** Press Cursor **▲, ▼, ◀, ▶** buttons to move to the desired speaker and then press **ENTER** button.


- For C, SL, and SR, each time the button is pressed, the mode switches alternately as follows: SMALL → NONE.
- For L and R, the mode is set to SMALL.

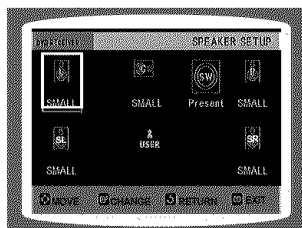

**SMALL** : Select this when using the speakers.  
**NONE** : Select this when no speakers are connected.


**Note**

- Depending on PRO LOGIC and STEREO settings, the speaker mode may vary (see page 63).

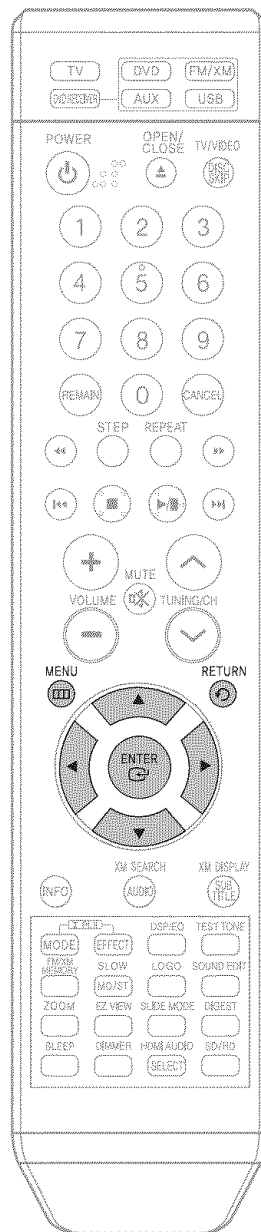

# Setting the Delay Time


If the speakers cannot be placed at equal distances from the listening position, you can adjust the delay time of the audio signals from the center and rear speakers.

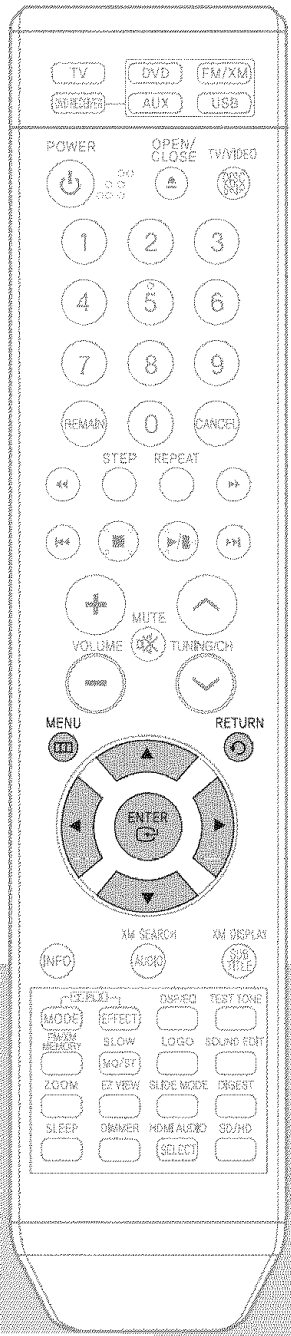

**1** In Stop mode, press **MENU** button.



**2** Press Cursor  $\blacktriangledown$  button to move to 'Audio' and then press **ENTER** button.

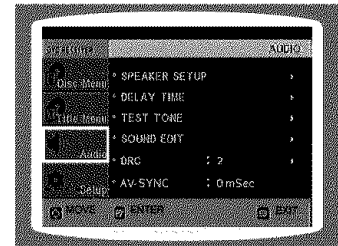

## Setting up the Speaker Delay Time


When 5.1CH Surround Sound is played, you can enjoy the best sound if the distance between you and each speaker is the same. Since the sounds arrive at the listening position at different times depending on the placement of speakers, you can adjust this difference by adding a delay effect to the sound of the Center and Surround Speakers.

### Note


- With  $\square$  IPL (Dolby Pro Logic II), the delay time may be different for each mode.
- With AC-3 and DTS, the delay time can be set between 00 and 15mSEC.
- The Center channel is only adjustable on 5.1 channel discs.



**3** Press Cursor  $\blacktriangledown$  button to move to 'DELAY TIME' and then press **ENTER** button.

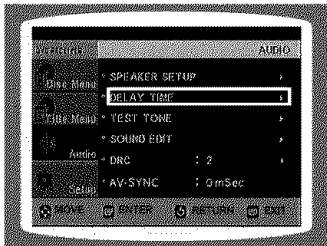


**4** Press Cursor  $\blacktriangle$ ,  $\blacktriangledown$ ,  $\blacktriangleleft$ ,  $\blacktriangleright$  buttons to move to the desired speaker and then press **ENTER** button.

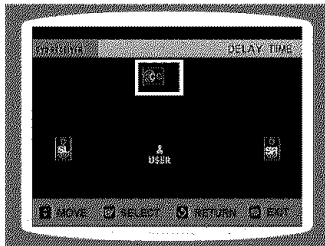

**5** Press Cursor  $\blacktriangleleft$ ,  $\blacktriangleright$  to set the Delay time.

- You can set the delay time for C between 00 and 05mSEC and for SL and SR between 00 and 15mSEC.

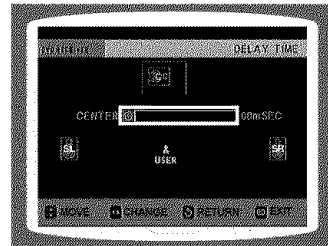

**Setting CENTER SPEAKER**


If the distance of Dc is equal to or longer than the distance of Df in the figure, set the mode as 0ms. Otherwise, change the setting according to the table.

| Distance between Df and Dc | Delay Time |
|----------------------------|------------|
| 0 inch                     | 0 ms       |
| 13.6 inches                | 1 ms       |
| 27.2 inches                | 2 ms       |
| 40.8 inches                | 3 ms       |
| 4.5 feet                   | 4 ms       |
| 5.6 feet                   | 5 ms       |

**Setting REAR (SURROUND) SPEAKERS**

If the distance of Df is equal to the distance of Ds in the figure, set the mode as 0ms. Otherwise, change the setting according to the table.


| Distance between Df and Ds | Delay Time |
|----------------------------|------------|
| 0 inch                     | 0 ms       |
| 40.8 inches                | 3 ms       |
| 6.7 feet                   | 6 ms       |
| 10.0 feet                  | 9 ms       |
| 13.4 feet                  | 12 ms      |
| 16.7 feet                  | 15 ms      |

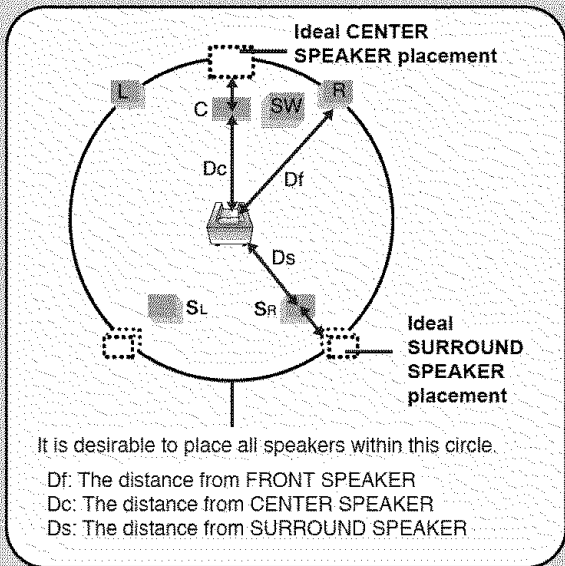


# Setting the Test Tone

Use the Test Tone feature to check the speaker connections.

- 1** In Stop or no disc mode, press **MENU** button.


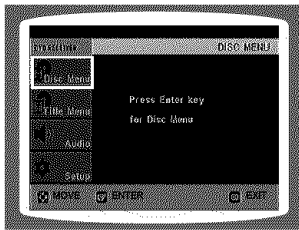


- 2** Press Cursor  $\blacktriangledown$  button to move to 'Audio' and then press **ENTER** button.

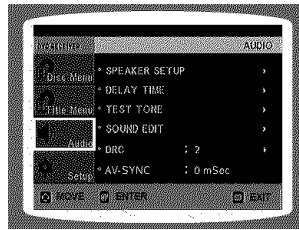

- 3** Press Cursor  $\blacktriangledown$  button to move to 'TEST TONE' and then press **ENTER** button.

- The test tone will be sent to L → C → R → SR → SL → SW in order. If the ENTER button is pressed again at this time, the test tone will stop.

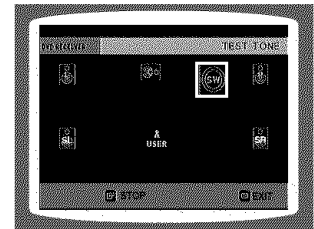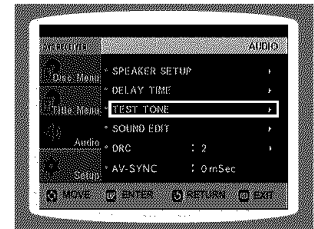

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.


Alternate method: press the **TEST TONE** button on the remote.

Press **TEST TONE** button.

- Test tone will be produced as follows:  
When playing a DVD or CD, this will work only in Stop mode.
- Use this function to check that each speaker is correctly connected and that there is no problem.

To end the test tone, press **TEST TONE** button again.

L: Front Speaker (L)    C: Center Speaker    SW: Subwoofer  
R: Front Speaker (R)    SL: Rear Speaker (L)    SR: Rear Speaker (R)

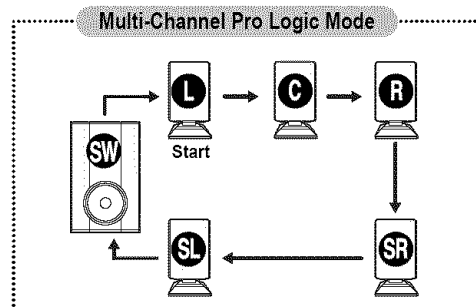


# Setting the DRC (Dynamic Range Compression)

ENG

This feature balances the range between the loudest and quietest sounds.


You can use this function to enjoy Dolby Digital sound when watching movies at low volume at night.

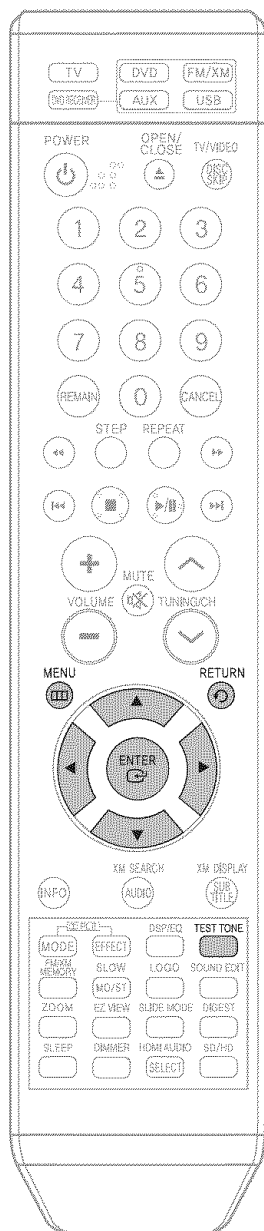


**1** In Stop or no disc mode, press **MENU** button.



**2** Press Cursor  $\blacktriangledown$  button to move to 'Audio' and then press **ENTER** button.

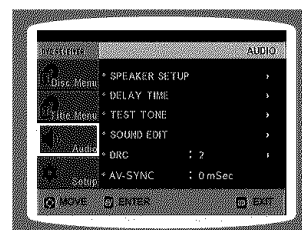


**3** Press Cursor  $\blacktriangledown$  button to move to 'DRC' and then press **ENTER** button.

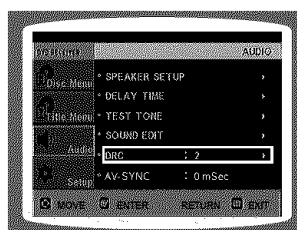

**4** Press Cursor  $\blacktriangle$ ,  $\blacktriangledown$  to adjust the 'DRC'.

- When the Cursor  $\blacktriangle$  button is pressed, the effect is greater, and when the Cursor  $\blacktriangledown$  button is pressed, the effect is smaller.

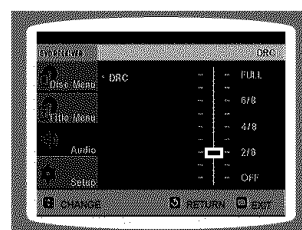


Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

SETUP

# Setting the Audio

You can adjust the balance and level for each speaker.

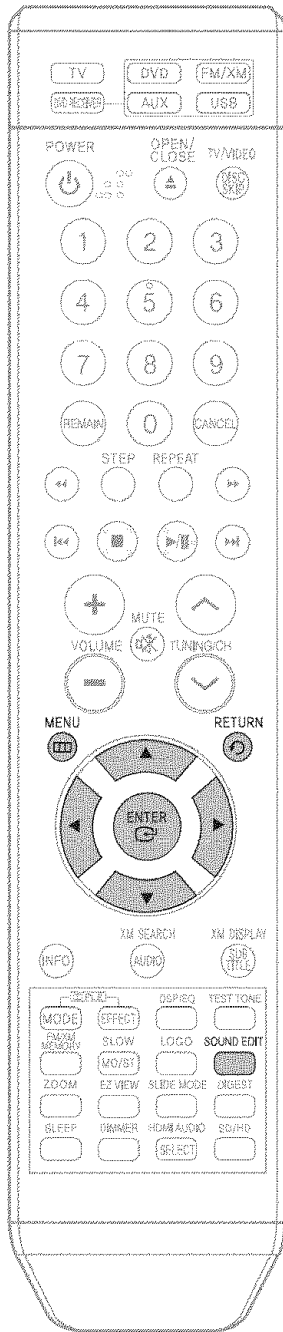


## Method 1 When adjusting the audio quality using the setup screen


**1** In Stop mode, press **MENU** button.




**2** Press Cursor  $\blacktriangledown$  button to move to 'Audio' and then press **ENTER** button.

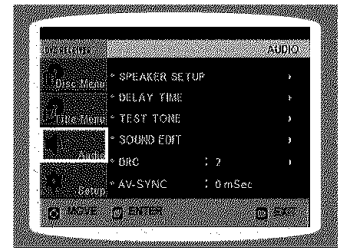

**3** Press Cursor  $\blacktriangledown$  button to move to 'SOUND EDIT' and then press **ENTER** button.

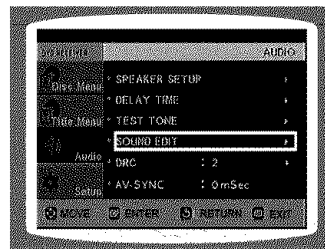

**4** Press Cursor  $\blacktriangle$ ,  $\blacktriangledown$  buttons to select and adjust the desired item. Press the  $\blacktriangleleft$ ,  $\blacktriangleright$  buttons to adjust the settings.

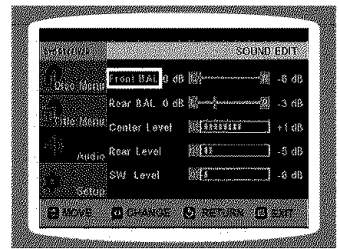


Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

**Method 2** When manually adjusting with the SOUND EDIT button


**Adjusting Front Speaker Balance**

 **1** Press **SOUND EDIT** button and then press Cursor  
◀, ▶.



**Adjusting Rear Speaker Balance**

 **2** Press **SOUND EDIT** button and then press Cursor  
◀, ▶.



**Adjusting Center Speaker Level**

**3** Press **SOUND EDIT** button and then press Cursor  
◀, ▶.



 
**Adjusting Rear Speaker Level**

**4** Press **SOUND EDIT** button and then press Cursor  
◀, ▶.



**Adjusting Subwoofer Speaker Level**

**5** Press **SOUND EDIT** button and then press Cursor  
◀, ▶.



SETUP

**Note**

**Adjusting Front/Rear Speaker Balance**

- You can select between 00 and -06 and OFF.
- The volume decreases as you move closer to -6.

**Adjusting Center/Rear/Subwoofer Speaker Level**


- The volume level can be adjusted in steps from +6dB to -6dB.
- The sound gets louder as you move closer to +6dB and quieter as you get closer to -6dB.

# AV SYNC Setup


Video may look slower than the audio if it is connected to a digital TV.  
If this occurs, adjust the audio delay time to match the video.

**1** Press the **MENU** button.


- Setup menu appears.

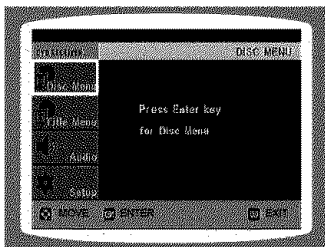

**2** Press Cursor **▲**, **▼** buttons to move to 'Audio' and then press **ENTER** button.

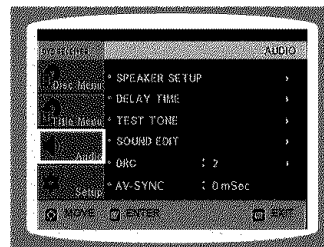


**3** Press Cursor **▲**, **▼** buttons to move to 'AV-SYNC' and then press **ENTER** button.

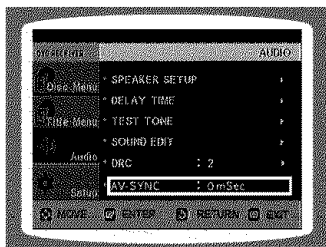

**4** Press Cursor **▲**, **▼** buttons to select the AV-SYNC Delay Time and then press the **ENTER** button.

- You can set the audio delay time between 0 ms and 300 ms. Set it to the optimal status.

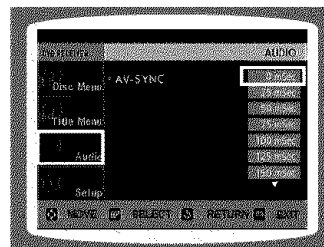


Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

# Sound Field (DSP)/EQ Function


ENG

DSP(Digital Signal Processor) DSP modes have been designed to simulate different acoustic environments.  
EQ: You can select ROCK, POP, or CLASSIC to optimize the sound for the genre of music you are playing

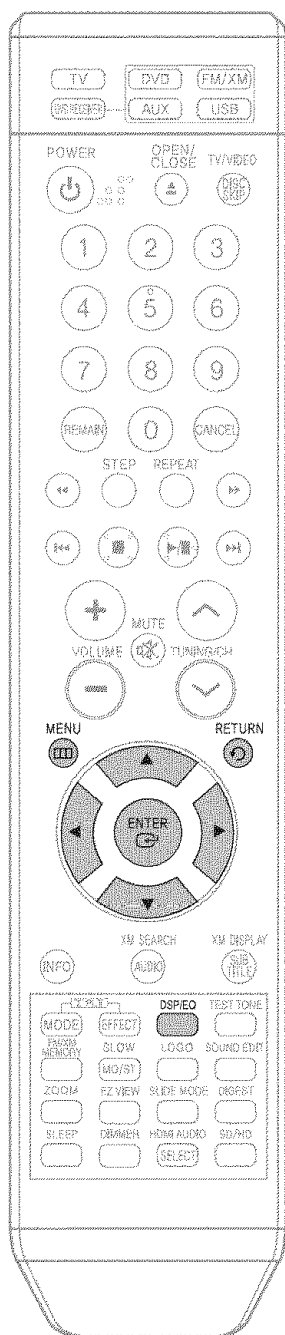


Press **DSP/EQ** button.

- "DSP" appears on the display panel.
- Each time the button is pressed, the selection changes as follows:

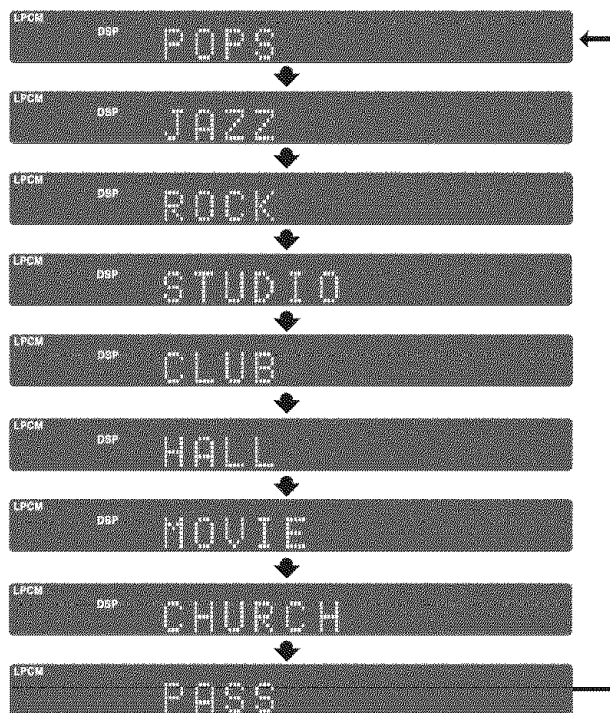

## Note

 - DSP/EQ function is only available in STEREO mode. Press the  PL II mode button to show STEREO on the display.
- This feature works with CDs, MP3-CDs, 2 channel DVD-Audio, DivX and Dolby Digital discs.
- When playing a DVD disc encoded with two or more channels, multi-channel mode will be selected automatically and DSP/EQ function does not work.


**POP, JAZZ, ROCK:** Depending on the genre of music, you can select POP, JAZZ, and ROCK.  
**STUDIO** : Provides a sense of presence as if in a studio.  
**CLUB** : Simulates the sound of a dance club with a throbbing bass beat.  
**HALL** : Provides a clear vocal as if listening in a concert hall.  
**MOVIE:** Provides the feeling of a movie theater.  
**CHURCH:** Gives the feel of being in a grand church.  
**PASS:** Select this for normal listening.

# Dolby Pro Logic II Mode

You can select the desired Dolby Pro Logic II audio mode.


Press  **PL II MODE** button.

- Each time the button is pressed, the mode changes as follows.

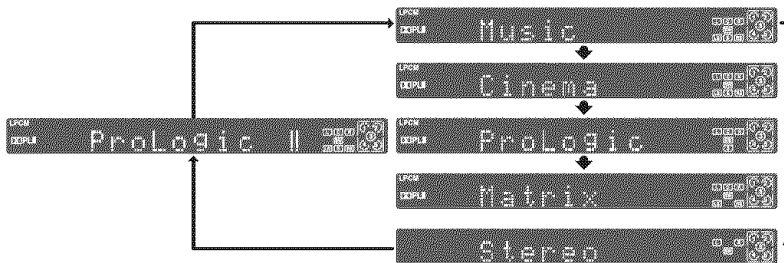

## Note

- When selecting Pro Logic II mode, connect your external device to the **AUDIO INPUT** jacks (L and R) on the player. If you connect to only one of the inputs (L or R), you cannot listen to surround sound.

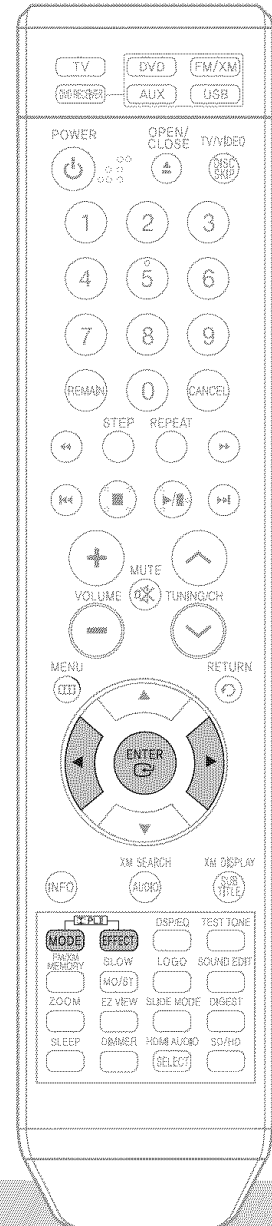

## PRO LOGIC II

- **MUSIC:** When listening to music, you can experience sound effects as if you are listening to the actual performance.
- **CINEMA:** Adds realism to the movie soundtrack.
- **PRO LOGIC:** You will experience a realistic multi-channel effect, as if using five speakers, while using just the front left and right speakers.
- **MATRIX:** You will hear 5.1 channel surround sound.

**STEREO:** Select this to listen to sound from the front left and right speakers and the subwoofer only.



# Dolby Pro Logic II Effect

This function works only in Dolby Pro Logic MUSIC mode.

**1** Press **PL II MODE** button to select 'MUSIC' mode.



**2** Press **PL II EFFECT** button to select Panorama, then press Cursor **◀**, **▶** buttons to select the desired effect setting.

- You can select either 0 or 1.
- This mode extends the front stereo image to include the surround speakers for an exciting "wraparound" effect with side wall imaging.



**3** Press **PL II EFFECT** button to select C-Width, then press Cursor **◀**, **▶** buttons to select the desired effect setting.

- You can select between 0 and 7.
- This sets the width of the center image. The higher the setting, the less sound comes from the center speaker.



**4** Press **PL II EFFECT** button to select Dimension, then press the Cursor **◀**, **▶** buttons to select the desired setting.

- You can select between 0 and 6.
- Incrementally adjusts the sound field (DSP) from the front or rear.



**Note**

- When playing a DVD disc encoded with two or more channels, multi-channel mode will be selected automatically and **PL II** (Dolby Pro Logic II) button does not work.

# Listening to Radio

## Remote Control Unit

**1** Press the **FM/XM** button to select the FM band.

**2** Tune in to the desired station.

**Automatic Tuning 1** When **◀◀▶▶** is pressed, a preset broadcast station is selected.

**Automatic Tuning 2** Press and hold **TUNING/CH** to automatically search for active broadcasting stations.

**Manual Tuning** Briefly press **TUNING/CH** to increase or decrease the frequency incrementally.

## Main Unit


**1** Press the **FUNCTION** button to select the FM band.

**2** Select a broadcast station.

**Automatic Tuning 1** Press the **STOP** (■) button to select PRESET and then press **◀◀▶▶** button to select the preset station.

**Automatic Tuning 2** Press the **STOP** (■) button to select "MANUAL" and then press and hold **◀◀▶▶** button to automatically search the band.

**Manual Tuning** Press **STOP** (■) to select MANUAL and then briefly press **◀◀▶▶** to tune in to a lower or higher frequency.

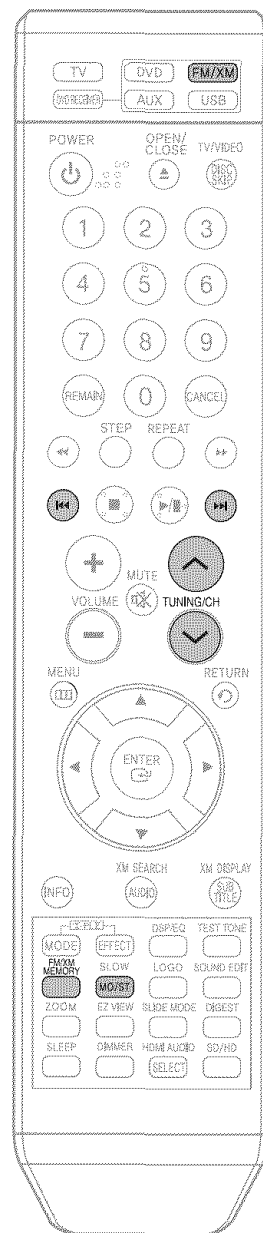

Press **MO/ST** button to listen in Mono/Stereo.  
(This applies only when listening to an FM station.)

- Each time the button is pressed, the sound switches between "STEREO" and "MONO".
- In a poor reception area, select MONO for a clear, interference-free broadcast.

# Presetting Stations

Example: Presetting FM 89.1 in the memory

- 1** Press the **FM/XM** button to select the FM band.



FM 91.90 MHz

- 2** Press **TUNING/CH** to select "89.10".

- Refer to Step 2 on page 65 to automatically or manually tune in to a station.



FM 89.10 MHz

- 3** Press the **FM/XM MEMORY** button.

- "PRGM" flashes in the display.



PRGM FM 89.10 MHz

- 4** Press **◀▶▶▶** to select preset number.

- You can select between 1 and 15 presets.



02 FM 89.10 MHz

- 5** Press the **FM/XM MEMORY** button again.

- Press the **FM/XM MEMORY** button before 'PRGM' disappears from the display.
- 'PRGM' disappears from the display and the station is stored in memory.



FM 89.10 MHz

- 6** To preset another station, repeat steps 2 to 5.

**Note**


- This unit does not receive AM broadcasts.

To tune in to a preset station, press **◀▶▶▶** on the remote control to select a channel.

# Before Using XM Satellite Radio

## What is XM satellite Radio?


XM Satellite Radio is the satellite radio service with millions of listeners across the U.S., broadcasting live daily. XM's channel lineup includes more than 160 digital channels of choice from coast to coast: 68 commercial-free music channels, featuring hip hop to opera, classical to country, bluegrass to blues; 33 channels of premier sports, talk, comedy, children's and entertainment programming; and more than 20 channels of the traffic and weather information for major metropolitan areas nationwide.

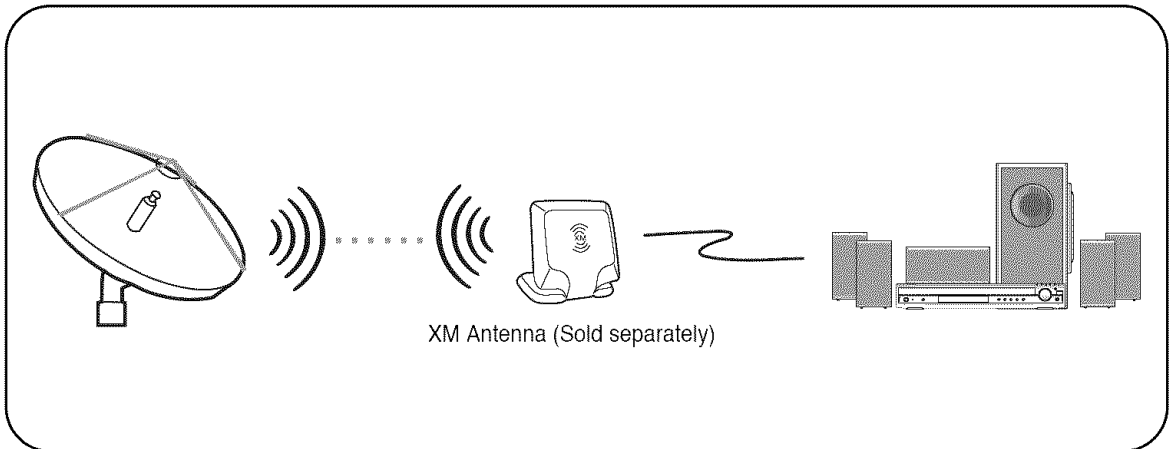

### Notes

- The XM Satellite Radio service is only available in the 48 contiguous United States (not available in Alaska and Hawaii).
- XM Antenna and monthly subscription are sold separately. For details, see the XM Satellite Radio website at "<http://www.xmradio.com>"
- To ensure optimal reception of XM's satellite signal, the XM Antenna should be placed at or near a southerly facing window with nothing obstructing its path to the sky. You can mount it indoors or outdoors.

# Listening to XM Satellite Radio

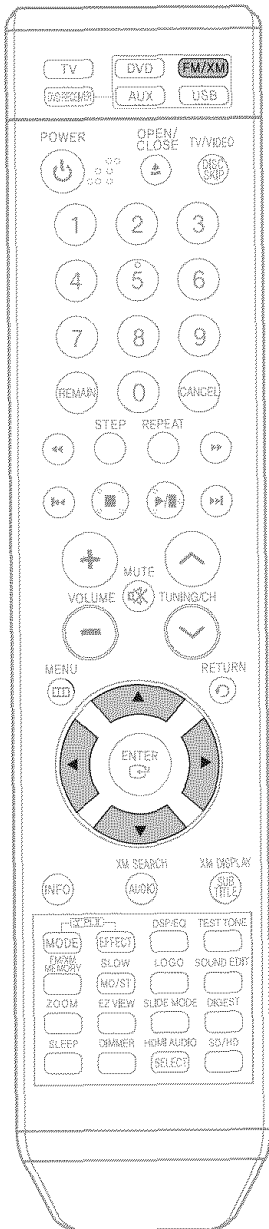

**1** Press the **FM/XM** button (or **FUNCTION** button on the main unit) and select the XM band.

- Each time the FM/XM button is pressed, the band switches between "FM → XM".



**2** Press **◀, ▶** button to select the channel, press **▲, ▼** button to select the category.


- You can select the channel directly by pressing the number buttons (1 to 255).

**Note**

- If "CHECK ANTENNA" appears in the display, the XM Antenna may not be connected to the XM Antenna Connector on the rear of this unit properly.
- When the selected channel is not available, "CH---" is displayed.


# XM Display Mode

The XM features described here only operate when the optional XM antenna is connected to the main unit.

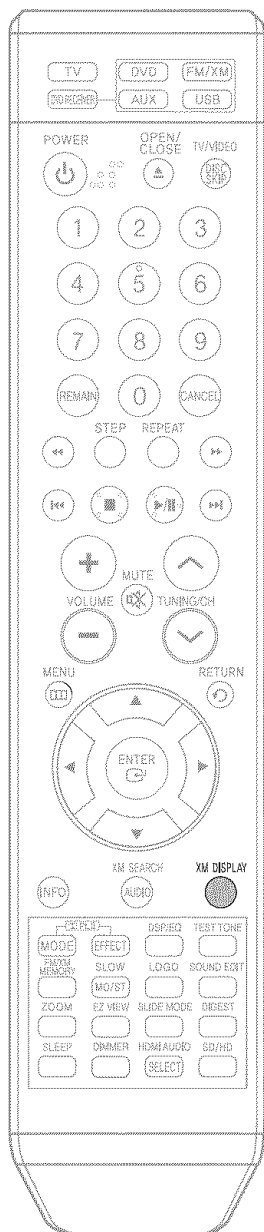

Press the **XM DISPLAY** button.

- Each time the XM DISPLAY button is pressed, the mode changes as follows:

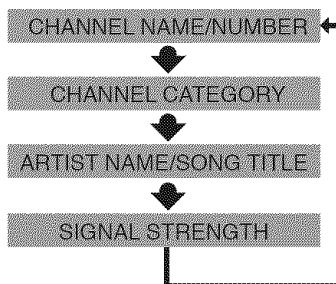

- When the Channel Name/Number is displayed :

10201

- When the Channel Category is displayed :

<CAT>

- When the Artist Name/Song Title is displayed :


Chuck Berry

- When the Signal Strength is displayed :

GOOD

## Notes

- The front panel display can indicate up to 10 alphanumeric characters at once. If the information contains more than 10 characters, the information scrolls from right to left.
- If the information contains a character that cannot be recognized by the unit, the character will be displayed with an underbar " \_ ".

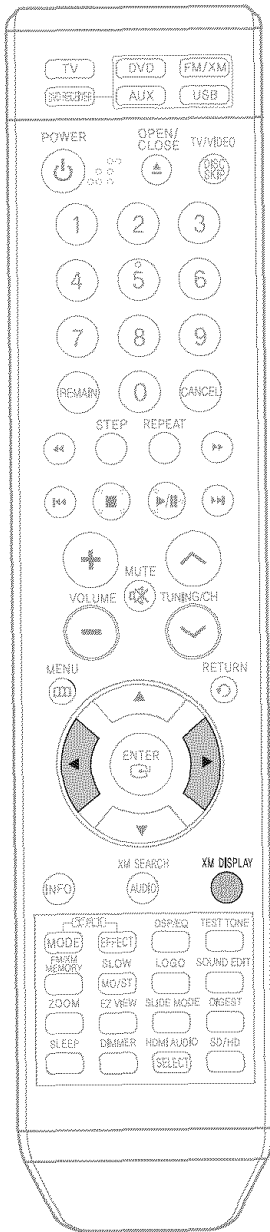

## Checking the XM signal strength

Press the **XM DISPLAY** button until “Signal” is displayed.

- The display changes as shown below according to the receiving condition.

| Display  | Condition                   |
|----------|-----------------------------|
| GOOD     | Signal strength is good     |
| MARGINAL | Signal strength is marginal |
| WEAK     | Signal strength is poor     |
| NO       | Loss of signal              |

## Checking the Radio ID

Press the ◀, ▶ button (or ◀◀▶▶ button on the main unit) to select channel “o”.

- The Radio ID is displayed. The ID below is just an example.

JH7X504Y


### Note

- To sign up for an account with the XM Satellite Radio service, an XM Satellite Radio ID number is required. Follow the procedure above to check your ID number, and then access the website at “<http://activate.xmradio.com>” or call “1-800-XM-RADIO(1-800-967-2346)” with a major credit card to sign up.


# XM Search Mode

Press the **XM SEARCH** button.


- Each time the XM SEARCH button is pressed, the mode changes as follows

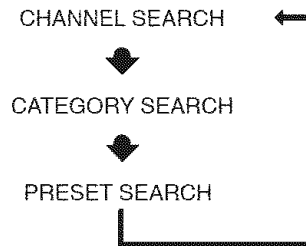


 
- Channel Search Mode : Press **TUNING/CH** (or **I◀◀▶▶I** button on the main unit) to move to the desired channel.



 - Category Search Mode Press **TUNING/CH** (or **I◀◀▶▶I** button on the main unit) to select the channel within the selected category.



  
- Preset Search Mode Press **TUNING/CH** (or **I◀◀▶▶I** button on the main unit) to select the channel within the memorized channels.







# Convenient Functions

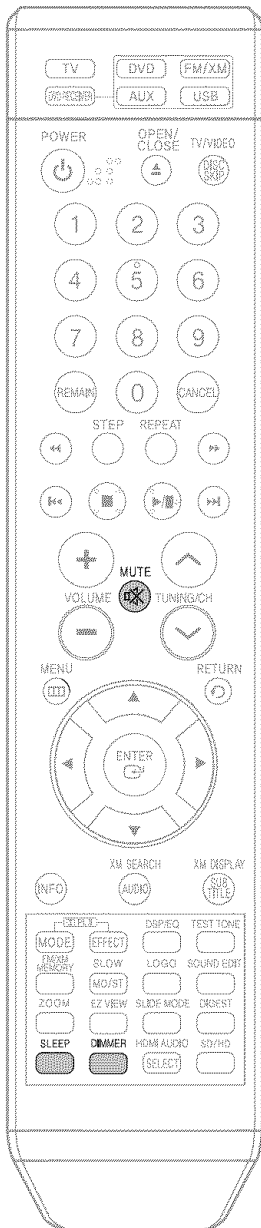

## Sleep Timer Function

You can set the time that the Home Theater will shut itself off.

Press **SLEEP** button.

- "SLEEP" will be displayed. Each time the button is pressed, the preset time changes as follows: 10 → 20 → 30 → 60 → 90 → 120 → 150 → OFF.

SLEEP 10

To confirm the sleep timer setting, press **SLEEP** button.

- The remaining time before the Home Theater will shut itself off is displayed.
- Pressing the button again changes the sleep time from what you have set earlier.

To cancel the sleep timer, press **SLEEP** button until OFF appears on the display.

## Adjusting Display Brightness

You can adjust the brightness of the display on the main unit so it won't interfere with your movie viewing.

Press **DIMMER** button.

- Each time the button is pressed, the brightness changes as follows: DARK → BRIGHT.

## Mute Function

This is useful when answering a doorbell or telephone call.

Press **MUTE** button.


- 'MUTE ON' appears in the display.
- To restore the sound, press the button again to select 'MUTE OFF'.



## Using Headphones

Use headphones (not supplied) for private listening pleasure.


Connect the headphones to the PHONES jack for private listening.

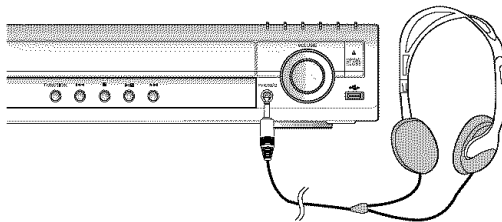

### Caution

- To prevent hearing damage, do not increase the volume excessively when using headphones.

# Operating a TV with the Remote Control

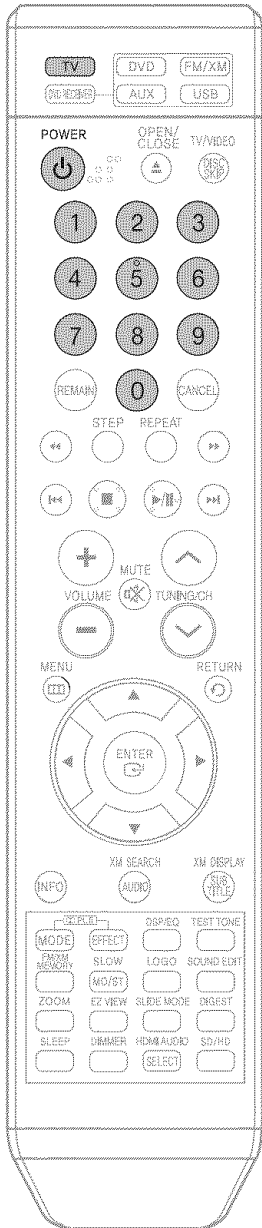

## When operating a TV with the remote control

**1** Press **TV** button to select TV mode.

**2** Press **POWER** button to turn on the TV.

**3** Point the remote control toward the TV.

**4** While holding down **POWER**, enter the code corresponding to your brand of TV.

- If the code matches the TV's code, the TV will be turned off.
- If there is more than one code listed for your TV in the table, enter one at a time to determine which code works.

### Example: For a Samsung TV

While holding down **POWER**, use the number buttons to enter 00, 01, 02, 03, 04, and 05.

**5** Point the remote control toward the TV and press **POWER**. If the TV turns off or on, the setting is complete.

- You can use the TV **POWER**, **VOLUME**, **CHANNEL**, and **Numeric** buttons (0~9).

### Note


- The remote control may not work on some brands of TVs. Also, some operations may not be possible depending on your brand of TV.
- If you do not set the remote control with the code for your brand of TV, the remote control will work on a Samsung TV by default.



## TV Brand Code List

| No. | Brand                   | Code   | No. | Brand                    | Code   |
|-----|-------------------------|--|-----|--------------------------|--|
| 1   | Admiral (M.Wards)       | 056, 057, 058  | 44  | MTC                      | 018  |
| 2   | A Mark                  | 001, 015   | 45  | NEC                      | 018, 019, 020, 040, 059, 060                                       |
| 3   | Anam                    | 001, 002, 003, 004, 005, 006, 007, 008, 009, 010,<br>011, 012, 013, 014  | 46  | Nikei                    | 003  |
| 4   | AOC                     | 001, 018, 040, 148   | 47  | Onking                   | 003  |
| 5   | Bell & Howell (M.Wards) | 057, 058, 081  | 48  | Onwa                     | 003  |
| 6   | Brocsonic               | 059, 060   | 49  | Panasonic                | 006, 007, 008, 009, 054, 066, 067, 073, 074                        |
| 7   | Candle                  | 018  | 50  | Penney                   | 018  |
| 8   | Cetronic                | 003  | 51  | Philco                   | 003, 015, 017, 018, 048, 054, 059, 062, 069, 090                   |
| 9   | Citizen                 | 003, 018, 025  | 52  | Philips                  | 015, 017, 018, 040, 048, 054, 062, 072                             |
| 10  | Cinema                  | 097  | 53  | Pioneer                  | 063, 066, 080, 091   |
| 11  | Classic                 | 003  | 54  | Portland                 | 015, 018, 059  |
| 12  | Concerto                | 018  | 55  | Proton                   | 040  |
| 13  | Contec                  | 046  | 56  | Quasar                   | 006, 066, 067  |
| 14  | Coronado                | 015  | 57  | Radio Shack              | 017, 048, 056, 060, 061, 075                                       |
| 15  | Craig                   | 003, 005, 061, 082, 083, 084   | 58  | RCA/Proscan              | 018, 059, 067, 076, 077, 078, 092, 093, 094                        |
| 16  | Croslex                 | 062  | 59  | Realistic                | 003, 019   |
| 17  | Crown                   | 003  | 60  | Sampo                    | 040  |
| 18  | Curtis Mates            | 059, 061, 063  | 61  | Samsung                  | 000, 015, 016, 017, 040, 043, 046, 047, 048, 049,<br>059, 060, 098 |
| 19  | CXC                     | 003  | 62  | Sanyo                    | 019, 061, 065  |
| 20  | Daewoo                  | 002, 003, 004, 015, 016, 017, 018, 019, 020, 021, 022, 023, 024,<br>025, 026, 028, 029, 030, 032, 034, 035, 036, 048, 059, 090 | 63  | Scott                    | 003, 040, 060, 061   |
| 21  | Daytron                 | 040  | 64  | Sears                    | 015, 018, 019  |
| 22  | Dynasty                 | 003  | 65  | Sharp                    | 015, 057, 064  |
| 23  | Emerson                 | 003, 015, 040, 046, 059, 061, 064, 082, 083, 084, 085  | 66  | Signature 2000 (M.Wards) | 057, 058   |
| 24  | Fisher                  | 019, 065   | 67  | Sony                     | 050, 051, 052, 053, 055  |
| 25  | Funai                   | 003  | 68  | Soundesign               | 003, 040   |
| 26  | Futuretech              | 003  | 69  | Spectricon               | 001  |
| 27  | General Electric (GE)   | 006, 040, 056, 059, 066, 067, 068  | 70  | SSS                      | 018  |
| 28  | Hall Mark               | 040  | 71  | Sylvania                 | 018, 040, 048, 054, 059, 060, 062                                  |
| 29  | Hitachi                 | 015, 018, 050, 059, 069  | 72  | Symphonic                | 061, 095, 096  |
| 30  | Inkel                   | 045  | 73  | Tatung                   | 006  |
| 31  | JC Penny                | 056, 059, 067, 086   | 74  | Techwood                 | 018  |
| 32  | JVC                     | 070  | 75  | Teknika                  | 003, 015, 018, 025   |
| 33  | KTV                     | 059, 061, 087, 088   | 76  | TMK                      | 018, 040   |
| 34  | KEC                     | 003, 015, 040  | 77  | Toshiba                  | 019, 057, 063, 071   |
| 35  | KMC                     | 015  | 78  | Vidtech                  | 018  |
| 36  | LG (Goldstar)           | 001, 015, 016, 017, 037, 038, 039, 040, 041, 042, 043, 044   | 79  | Videch                   | 059, 060, 069  |
| 37  | Luxman                  | 018  | 80  | Wards                    | 015, 017, 018, 040, 048, 054, 060, 064                             |
| 38  | LXI (Sears)             | 019, 054, 056, 059, 060, 062, 063, 065, 071  | 81  | Yamaha                   | 018  |
| 39  | Magnavox                | 015, 017, 018, 048, 054, 059, 060, 062, 072, 089   | 82  | York                     | 040  |
| 40  | Marantz                 | 040, 054   | 83  | Yupiteru                 | 003  |
| 41  | Matsui                  | 054  | 84  | Zenith                   | 058, 079   |
| 42  | MGA                     | 018, 040   | 85  | Zonda                    | 001  |
| 43  | Mitsubishi/MGA          | 018, 040, 059, 060, 075  | 86  | Dongyang                 | 003, 054   |

# Before Calling for Service

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics Service Center.


| Symptom   | Check/Remedy   |
|---|--|
| <b>Disc tray does not open.</b>   | <ul style="list-style-type: none"> <li>• Is the power cord plugged securely into the outlet?</li> <li>• Turn off the power and then turn it back on.</li> </ul>  |
| <b>Playback does not start.</b>   | <ul style="list-style-type: none"> <li>• Check the region number of the DVD. DVD discs purchased from abroad may not be playable.</li> <li>• CD-ROMs and DVD-ROMs cannot be played on this DVD player.</li> <li>• Make sure that the rating level is correct.</li> </ul>   |
| <b>Playback does not start immediately when the Play/Pause button is pressed.</b>                   | <ul style="list-style-type: none"> <li>• Are you using a deformed disc or a disc with scratches on the surface?</li> <li>• Wipe the disc clean.</li> </ul>   |
| <b>Sound is not produced.</b>   | <ul style="list-style-type: none"> <li>• No sound is heard during fast playback, slow playback, and step motion playback.</li> <li>• Are the speakers connected properly? Is the speaker setup correctly customized?</li> <li>• Is the disc severely damaged?</li> </ul>   |
| <b>Sound can be heard only from a few speakers and not all six.</b>                                 | <ul style="list-style-type: none"> <li>• When listening to a CD or radio, sound is output to the front speakers (L/R) only. Select "PRO LOGIC II" by pressing  PL II (Dolby Pro Logic II) on the remote control to use all six speakers.</li> <li>• Make sure that the DVD disc is 5.1-CH compatible.</li> <li>• If you set C, SL, and SR to NONE in the speaker mode in the audio setup of the setup screen, no sound is heard from the center speaker and the front left and right speakers. Set C, SL, and SR to SMALL.</li> </ul> |
| <b>Picture does not appear, sound is not produced, or the disc tray opens 2 to 5 seconds later.</b> | <ul style="list-style-type: none"> <li>• Was the DVD player suddenly moved from a cold place to a warm one? When condensation forms inside the player, remove the disc and let the player stand for 1 or 2 hours with the power on. (You can use the player again after condensation disappears.)</li> </ul>   |
| <b>Dolby Digital 5.1 CH Surround Sound is not produced.</b>   | <ul style="list-style-type: none"> <li>• Is there "Dolby Digital 5.1 CH" mark on the disc? Dolby Digital 5.1 CH Surround Sound is produced only if the disc is recorded with 5.1 channel sound.</li> <li>• Is the audio language correctly set to DOLBY DIGITAL 5.1-CH in the information display?</li> </ul>  |
| <b>The remote control does not work.</b>  | <ul style="list-style-type: none"> <li>• Is the remote control being operated within its operation range of angle and distance?</li> <li>• Are the batteries exhausted?</li> <li>• Have you selected the mode(TV/DVD) functions of the remote control (TV or DVD) correctly?</li> </ul>  |

| Symptom   | Check/Remedy  |
|---|---|
| <ul style="list-style-type: none"> <li>• Disc is rotating but no picture is produced.</li> <li>• Picture quality is poor and picture is shaking.</li> </ul>                                   | <ul style="list-style-type: none"> <li>• Is the TV power on?</li> <li>• Are the video cables connected properly?</li> <li>• Is the disc dirty or damaged?</li> <li>• A poorly manufactured disc may not be playable.</li> </ul>   |
| Audio language and subtitles do not work.   | <ul style="list-style-type: none"> <li>• Audio language and subtitles will not work for DVDs not containing them. And depending on the disc, they may work differently.</li> </ul>  |
| Menu screen does not appear even when the menu function is selected.  | <ul style="list-style-type: none"> <li>• Are you using a disc that does not contain menus?</li> </ul>   |
| Aspect ratio cannot be changed.   | <ul style="list-style-type: none"> <li>• You can play 16:9 DVDs in 16:9 WIDE mode, 4:3 LETTER BOX mode, or 4:3 PAN SCAN mode, but 4:3 DVDs can be seen in 4:3 ratio only. Refer to the DVD disc jacket and then select the appropriate function.</li> </ul>   |
| <ul style="list-style-type: none"> <li>• The main unit is not working. (Example: The power goes out or strange noise is heard.)</li> <li>• The DVD player is not working normally.</li> </ul> | <ul style="list-style-type: none"> <li>• Turn off the power and hold the  button on the main unit for longer than 5 seconds.</li> </ul> <p>Using the RESET function will erase all stored settings.<br/>Do not use this unless necessary.</p>  |
| The password for rating level has been forgotten.   | <ul style="list-style-type: none"> <li>• While "NO DISC" message appears on the display of main unit, hold the main unit's  button for longer than 5 seconds. "INITIALIZE" appears on the display and all settings will return to the default values.</li> <li>• Press the POWER button.</li> </ul> <p><b>Using the RESET function will erase all stored settings.<br/>Do not use this unless necessary.</b></p> |
| Can't receive radio broadcast.  | <ul style="list-style-type: none"> <li>• Is the antenna connected properly?</li> <li>• If the antenna's input signal is weak, install an external FM antenna in an area with good reception.</li> </ul>   |
| "CHECK ANTENNA" is displayed.   | <ul style="list-style-type: none"> <li>• XM Antenna Connector and the XM Antenna is not properly connected. Check the connections.</li> </ul>   |
| "ON SIGNAL" is displayed.   | <ul style="list-style-type: none"> <li>• Reposition your XM Antenna.</li> </ul>   |
| "OFF AIR" is displayed.   | <ul style="list-style-type: none"> <li>• The selected channel is not currently broadcasting.</li> </ul>   |
| Receiving only XM channel 0 and channel 1.  | <ul style="list-style-type: none"> <li>• XM Antenna is not activated.</li> <li>• Access the website at "<a href="http://activate.xmradio.com">http://activate.xmradio.com</a>" with a credit card to sign up.</li> </ul>  |

# Cautions on Handling and Storing Discs

Small scratches on the disc may reduce sound and picture quality or cause skipping. Be especially careful not to scratch discs when handling them.

## Handling discs

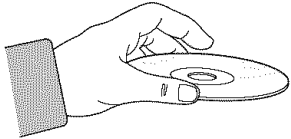


Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints will not get on the surface.


Do not stick paper or tape on the disc.

## Disc Storage


Do not keep in direct sunlight

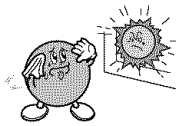

Keep in a cool ventilated area

 

 
Keep in a clean Protection jacket. Store vertically.



### Caution

- Do not allow the discs to become contaminated with dirt.
- Do not load cracked or scratched discs.

## Handling and Storing Discs

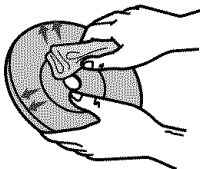

When you get fingerprints or dirt on the disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.

- When cleaning, wipe gently from the inside to the outside of the disc.

### Note

- Condensation may form if warm air comes into contact with cold parts inside the player. When condensation forms inside the player, the player may not operate correctly. If this occurs, remove the disc and let the player stand for 1 or 2 hours with the power on.



# Language Code List

Enter the appropriate code number for the initial settings “Disc Audio”, “Disc Subtitle” and/or “Disc Menu” (See page 45).

| Code | Language        | Code | Language     | Code | Language         | Code | Language   |
|------|-----------------|------|--------------|------|------------------|------|------------|
| 1027 | Afar            | 1181 | Frisian      | 1334 | Latvian, Lettish | 1506 | Slovenian  |
| 1028 | Abkhazian       | 1183 | Irish        | 1345 | Malagasy         | 1507 | Samoan     |
| 1032 | Afrikaans       | 1186 | Scots Gaelic | 1347 | Maori            | 1508 | Shona      |
| 1039 | Amharic         | 1194 | Galician     | 1349 | Macedonian       | 1509 | Somali     |
| 1044 | Arabic          | 1196 | Guarani      | 1350 | Malayalam        | 1511 | Albanian   |
| 1045 | Assamese        | 1203 | Gujarati     | 1352 | Mongolian        | 1512 | Serbian    |
| 1051 | Aymara          | 1209 | Hausa        | 1353 | Moldavian        | 1513 | Siswati    |
| 1052 | Azerbaijani     | 1217 | Hindi        | 1356 | Marathi          | 1514 | Sesotho    |
| 1053 | Bashkir         | 1226 | Croatian     | 1357 | Malay            | 1515 | Sundanese  |
| 1057 | Byelorussian    | 1229 | Hungarian    | 1358 | Maltese          | 1516 | Swedish    |
| 1059 | Bulgarian       | 1233 | Armenian     | 1363 | Burmese          | 1517 | Swahili    |
| 1060 | Bihari          | 1235 | Interlingua  | 1365 | Nauru            | 1521 | Tamil      |
| 1069 | Bislama         | 1239 | Interlingue  | 1369 | Nepali           | 1525 | Tegulu     |
| 1066 | Bengali; Bangla | 1245 | Inupiak      | 1376 | Dutch            | 1527 | Tajik      |
| 1067 | Tibetan         | 1248 | Indonesian   | 1379 | Norwegian        | 1528 | Thai       |
| 1070 | Breton          | 1253 | Icelandic    | 1393 | Occitan          | 1529 | Tigrinya   |
| 1079 | Catalan         | 1254 | Italian      | 1403 | (Afan) Oromo     | 1531 | Turkmen    |
| 1093 | Corsican        | 1257 | Hebrew       | 1408 | Oriya            | 1532 | Tagalog    |
| 1097 | Czech           | 1261 | Japanese     | 1417 | Punjabi          | 1534 | Setswana   |
| 1103 | Welsh           | 1269 | Yiddish      | 1428 | Polish           | 1535 | Tonga      |
| 1105 | Danish          | 1283 | Javanese     | 1435 | Pashto, Pushto   | 1538 | Turkish    |
| 1109 | German          | 1287 | Georgian     | 1436 | Portuguese       | 1539 | Tsonga     |
| 1130 | Bhutani         | 1297 | Kazakh       | 1463 | Quechua          | 1540 | Tatar      |
| 1142 | Greek           | 1298 | Greenlandic  | 1481 | Rhaeto-Romance   | 1543 | Twi        |
| 1144 | English         | 1299 | Cambodian    | 1482 | Kirundi          | 1557 | Ukrainian  |
| 1145 | Esperanto       | 1300 | Kannada      | 1483 | Romanian         | 1564 | Urdu       |
| 1149 | Spanish         | 1301 | Korean       | 1489 | Russian          | 1572 | Uzbek      |
| 1150 | Estonian        | 1305 | Kashmiri     | 1491 | Kinyarwanda      | 1581 | Vietnamese |
| 1151 | Basque          | 1307 | Kurdish      | 1495 | Sanskrit         | 1587 | Volapuk    |
| 1157 | Persian         | 1311 | Kirghiz      | 1498 | Sindhi           | 1613 | Wolof      |
| 1165 | Finnish         | 1313 | Latin        | 1501 | Sangro           | 1632 | Xhosa      |
| 1166 | Fiji            | 1326 | Lingala      | 1502 | Serbo-Croatian   | 1665 | Yoruba     |
| 1171 | Faeroese        | 1327 | Laothian     | 1503 | Singhalese       | 1684 | Chinese    |
| 1174 | French          | 1332 | Lithuanian   | 1505 | Slovak           | 1697 | Zulu       |

# USB Host Feature Supported Products

## Digital Camera

| Product            | Company   | Type           |
|--------------------|-----------|----------------|
| Finepix-A340       | Fuji      | Digital Camera |
| Finepix-F810       | Fuji      | Digital Camera |
| Finepix-F610       | Fuji      | Digital Camera |
| Finepix-1450       | Fuji      | Digital Camera |
| Finepix S7000      | Fuji      | Digital Camera |
| Finepix A310       | Fuji      | Digital Camera |
| KD-310Z            | Konica    | Digital Camera |
| Finecam SL300R     | Kyocera   | Digital Camera |
| Finecam SL400R     | Kyocera   | Digital Camera |
| Finecam S5R        | Kyocera   | Digital Camera |
| Finecam Xt         | Kyocera   | Digital Camera |
| Dimage-Z1          | Minolta   | Digital Camera |
| Dimage Z1          | Minolta   | Digital Camera |
| Dimage X21         | Minolta   | Digital Camera |
| Coolpix4200        | Nikon     | Digital Camera |
| Coolpix4300        | Nikon     | Digital Camera |
| Coolpix 2200       | Nikon     | Digital Camera |
| Coolpix 3500       | Nikon     | Digital Camera |
| Coolpix 3700       | Nikon     | Digital Camera |
| Coolpix 4100       | Nikon     | Digital Camera |
| Coolpix 5200       | Nikon     | Digital Camera |
| Stylus 410 digital | Olympus   | Digital Camera |
| 300-digital        | Olympus   | Digital Camera |
| U300               | Olympus   | Digital Camera |
| X-350              | Olympus   | Digital Camera |
| C-760              | Olympus   | Digital Camera |
| C-5060             | Olympus   | Digital Camera |
| X1                 | Olympus   | Digital Camera |
| U-mini             | Olympus   | Digital Camera |
| Lumix-FZ20         | Panasonic | Digital Camera |
| DMC-FX7GD          | Panasonic | Digital Camera |
| Lumix LC33         | Panasonic | Digital Camera |
| LUMIX DMC-F1       | Panasonic | Digital Camera |
| Optio-S40          | Pentax    | Digital Camera |
| Optio-S50          | Pentax    | Digital Camera |
| Optio 33LF         | Pentax    | Digital Camera |
| Optio MX           | Pentax    | Digital Camera |
| Digimax-420        | Samsung   | Digital Camera |
| Digimax-400        | Samsung   | Digital Camera |
| Sora PDR-T30       | Toshiba   | Digital Camera |
| Coolpix 5900       | Nikon     | Digital Camera |
| Coolpix S1         | Nikon     | Digital Camera |
| Coolpix 7600       | Nikon     | Digital Camera |
| DMC-FX7            | Panasonic | Digital Camera |
| Dimage Xt          | Minolta   | Digital Camera |
| AZ-1               | Olympus   | Digital Camera |

## USB Flash Disk

| Product          | Company  | Type                         |
|------------------|----------|------------------------------|
| Cruzer Micro     | Sandisk  | USB 2.0 USB Flash Drive 128M |
| Cruzer Mini      | Sandisk  | USB 2.0 128M                 |
| Cruzer Mini      | Sandisk  | USB 2.0 256M                 |
| SONY Micro Vault | Sony     | USB 2.0 64MB                 |
| FLEX DRIVE       | Serotech | USB 2.0 32MB                 |
| AnyDrive         | A.L tech | USB 2.0 128MB                |
| XTICK            | LG       | USB 2.0 128M                 |
| Micro Mini       | lomega   | USB 2.0 128M                 |
| iFlash           | Imation  | USB 2.0 64M                  |
| LG               | XTICK(M) | USB 2.0 64M                  |
| RIDATA           | EZDrive  | USB 2.0 64M                  |

## MP3 Player

| Product              | Company  | Type               |
|----------------------|----------|--------------------|
| Creative MuVo NX128M | Creative | 128 MB MP3 Player  |
| Iriver H320          | Iriver   | 20G HDD MP3 Player |
| YH-920               | Samsung  | 20G HDD MP3 Player |
| YP-T7                | Samsung  | MP3 Player         |
| YP-MT6               | Samsung  | MP3 Player         |
| YP-T6                | Samsung  | MP3 Player         |
| YP-53                | Samsung  | MP3 Player         |
| YP-ST5               | Samsung  | MP3 Player         |
| YP-T5                | Samsung  | MP3 Player         |
| YP-60                | Samsung  | MP3 Player         |
| YP-780               | Samsung  | MP3 Player         |
| YP-35                | Samsung  | MP3 Player         |
| YP-55                | Samsung  | MP3 Player         |
| IAUDIO U2            | Cowon    | MP3 Player         |
| IAUDIO G3            | Cowon    | MP3 Player         |
| IAudio M3            | Cowon    | HDD MP3 Player     |
| SI-M500L             | Sharp    | 256MB MP3 Player   |
| H10                  | Iriver   | MP3 Player         |
| YP-T5 VB             | Samsung  | MP3 Player         |
| YP-53                | Samsung  | 256MB MP3 Player   |

## Multi Card Reader

| Product             | Company            | Type  |
|---------------------|--------------------|---|
| UNICORN             | Unicorn            | USB 2.0 7 IN 1 CARD READER UC-601R            |
| USB 2.0 Card Reader | Billionton(Taiwan) | USB 2.0 Card Reader for SD/MMC/RS-MMC(3-in-1) |

## USB External HDD

| Product      | Company  | Type                   |
|--------------|----------|------------------------|
| CUTIE        | Serotech | POCKET HARD DISK DRIVE |
| MOMOBAY UX-2 | Dvico    | USB 2.0                |

# Specifications

|   |                             |  |                        |                          |
|---|-----------------------------|--|------------------------|--------------------------|
| G<br>E<br>N<br>E<br>R<br>A<br>L           | Power Consumption           | 110W   |                        |                          |
|   | Weight                      | 11lbs  |                        |                          |
|   | Dimensions (W x H x D)      | 17 x 3 x 17.1 inches                           |                        |                          |
|   | Operating Temperature Range | 41°F ~ 95°F                                    |                        |                          |
|   | Operating Humidity Range    | 10% ~ 75%                                      |                        |                          |
| T<br>U<br>N<br>E<br>R                     | Usable Sensitivity          | 10dB   |                        |                          |
|   | S/N Ratio                   | 60dB   |                        |                          |
|   | Distortion                  | 1%   |                        |                          |
| V<br>O<br>U<br>T<br>P<br>U<br>T           | Composite Video             | 1.0Vp-p(75Ω load)                              |                        |                          |
|   | Component Video             | Y:1.0Vp-p(75Ω load)                            |                        |                          |
|   |                             | Pr:0.70Vp-p(75Ω load)<br>Pb:0.70Vp-p(75Ω load) |                        |                          |
|   | HDMI                        | Impedance: 85~115Ω                             |                        |                          |
| A<br>M<br>P<br>L<br>I<br>F<br>I<br>E<br>R | Front speaker output        | 140W x 2(3Ω)                                   |                        |                          |
|   | Center speaker output       | 140W x 2(3Ω)                                   |                        |                          |
|   | Rear speaker output         | 140W x 2(3Ω)                                   |                        |                          |
|   | Subwoofer speaker output    | 160W(3Ω)                                       |                        |                          |
|   | Frequency range             | 20Hz~20KHz                                     |                        |                          |
|   | S/N Ratio                   | 75dB   |                        |                          |
|   | Channel separation          | 60dB   |                        |                          |
|   | Input sensitivity           | (AUX)400mV                                     |                        |                          |
| S<br>P<br>E<br>A<br>K<br>E<br>R           | Speaker system              | 5.1ch speaker system                           |                        |                          |
|   |                             | Front/Center/Rear speaker                      | Subwoofer speaker      |                          |
|   | Impedance                   | 3Ω x 6   | 3Ω                     |                          |
|   | Frequency range             | 145Hz~20KHz                                    | 35Hz~155Hz             |                          |
|   | Output sound pressure level | 84dB/W/M                                       | 82dB/W/M               |                          |
|   | Rated input                 | 140W   | 160W                   |                          |
|   | Maximum input               | 280W   | 320W                   |                          |
|   | Dimensions (W x H x D)      | Front/Rear                                     | 3.9 x 6.9 x 3.7 inches | 7.8 x 15.7 x 13.3 inches |
|   |                             | Center   | 11.8x 3.5 x 3.6 inches |                          |
|   | Weights                     | Front/Rear                                     | 3 lbs/2.6 lbs          | 13.9 lbs                 |
| Center                                    |                             | 2.9 lbs  |                        |                          |

# SAMSUNG Home Theater

## LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by Samsung Electronics America, Inc. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

**One (1) Year Parts and Labor\***  
(\*90 Days Parts and Labor for Commercial Use)

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. Warranty service can only be performed by a SAMSUNG authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center. Transportation of the product to and from the service center is the responsibility of the purchaser.

SAMSUNG will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

SAMSUNG's obligations with respect to software products distributed by SAMSUNG under the SAMSUNG brand name are set forth in the applicable end user license agreement. Non-SAMSUNG hardware and software products, if provided, are on an "AS IS" basis. Non-SAMSUNG manufacturers, suppliers, publishers, and service providers may provide their own warranties.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this product, and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied and authorized by SAMSUNG, or which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; product removal or reinstallation; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems. SAMSUNG does not warrant uninterrupted or error-free operation of the product.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty hardware service, please contact SAMSUNG at:

**SAMSUNG CUSTOMER CARE CENTER**  
400 Valley Road, Suite 201, Mt. Arlington, NJ 07856  
**1-800-SAMSUNG (1-800-726-7864) and [www.samsung.com](http://www.samsung.com)**

**SAMSUNG ELECTRONICS AMERICA, INC.**

**SERVICE DIVISION**

400 Valley Road, Suite 201  
Mount Arlington, NJ 07856  
1-800-SAMSUNG (1-800-726-7864)  
[www.samsung.com](http://www.samsung.com)



**AH68-01833A**