


# QUICK START INSTRUCTIONS

## Setting Your Electric Wall Oven Controls

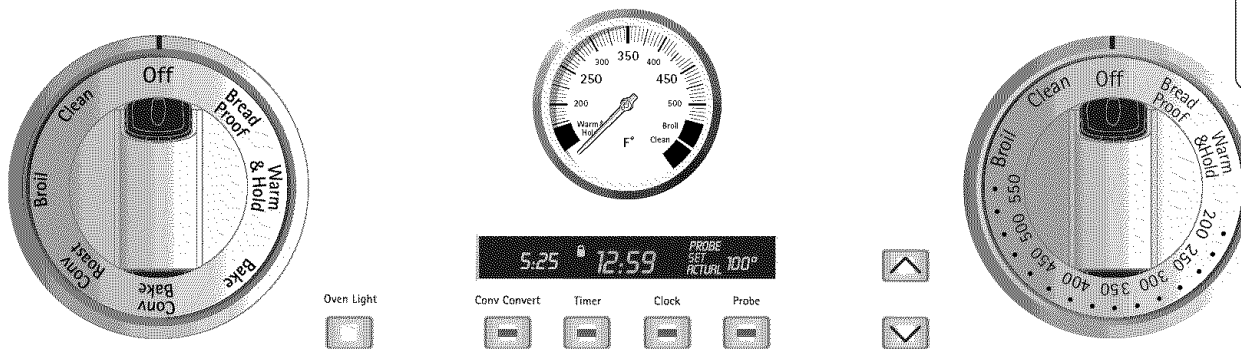


### OPERATION QUICK START INSTRUCTIONS

- Setting CLOCK**


Press . Press the or buttons once for 1 minute increment or keep it pressed for 10 minutes increment.
- Setting Kitchen TIMER**

Press . Press the or buttons once for 1 minute increment or keep it pressed for 10 minutes increment. Press again to cancel or stop the timer.
- Setting BAKE**  
(example: 350°F)


Turn the selector control knob to BAKE.  
Turn the temperature control knob to 350.


- Setting BROIL**


Turn the selector control knob to BROIL.  
Turn the temperature control knob to BROIL.

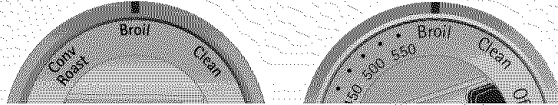
- Setting CONVECTION BAKE**  
(example: 350°F)


Turn the selector control knob to CONV BAKE.  
Turn the temperature control knob to 350.


- Setting CONVECTION ROAST**  
(example: 350°F)


Turn the selector control knob to CONV ROAST.  
Turn the temperature control knob to 350.

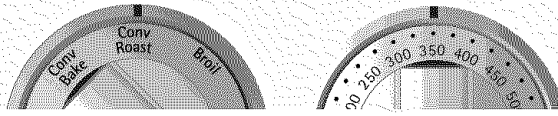
- Setting CONVECTION CONVERT**  
(example: 325°F)


Turn the selector control knob to CONV BAKE.  
Turn the temperature control knob to 350.  
Press .

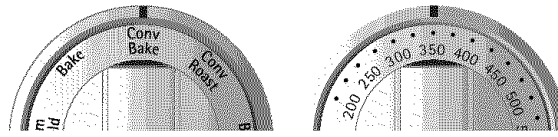
- Setting WARM & HOLD**


Turn the selector control knob to WARM & HOLD.  
Turn the temperature control knob to WARM & HOLD.

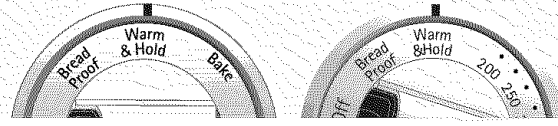
- Setting CLEAN**

Turn the selector control knob to CLEAN.  
Turn the temperature control knob to CLEAN.

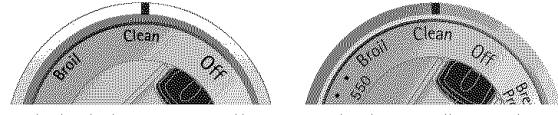
- Setting BREAD PROOF**


Turn the selector control knob to BREAD PROOF.  
Turn the temperature control knob to BREAD PROOF.

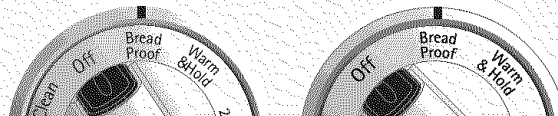

**IMPORTANT NOTES:**  
The instructions on this page are intended to provide a quick reference ONLY. Read all the instructions in the Use & Care Guide before using this appliance. The Use & Care Guide provides more detailed instructions that are required to understand all of the functions and features of your Wall Oven.

# INSTRUCCIONES DE INICIO RÁPIDO

Programación de los controles de la cubierta

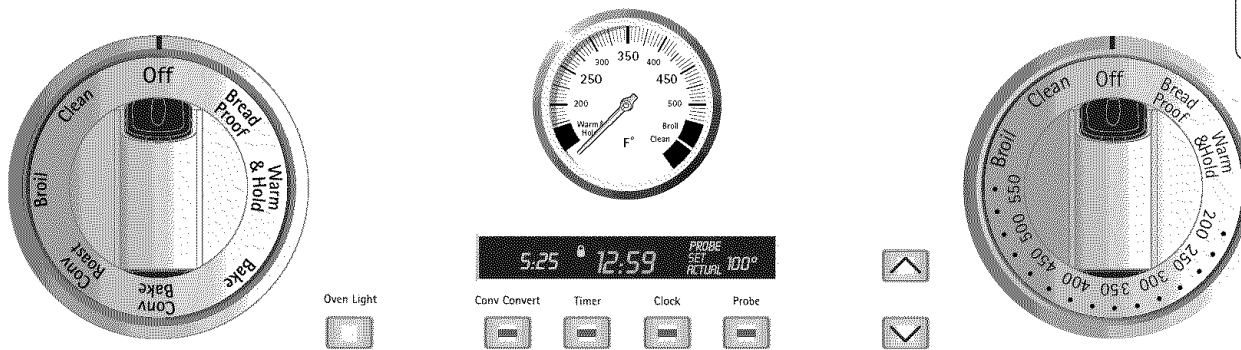

## FUNCIONAMIENTO INSTRUCCIONES DE INICIO RÁPIDO

### Reglaje del RELOJ

Presione el botón. Presione los botones o para incrementos de un minuto, o mantenga los botones presionados para incrementos de 10 minutos.

### Reglaje del TIEMPO

Presione el botón. Presione los botones o para incrementos de un minuto, o mantenga los botones presionados para incrementos de 10 minutos.


### Reglaje del HORNEAR (Ejemplo: 350°F)

Gire la perilla de control de selección a BAKE.  
Gire la perilla de control para la temperatura del horno a 350.




### Reglaje del PARRILLA DE ASAR

Gire la perilla de control de selección a BROIL.  
Gire la perilla de control para la temperatura del horno a BROIL.

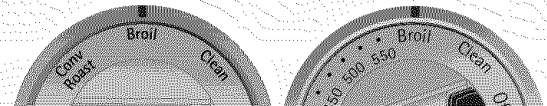


### Ajustando el Horno para HORNEAR A CONVECCIÓN (Ejemplo: 350°F)

Gire la perilla de control de selección a CONV BAKE.  
Gire la perilla de control para la temperatura del horno a 350.

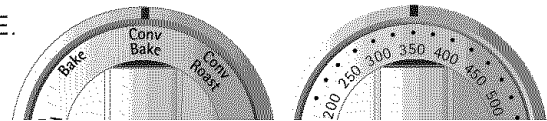


### Ajustando el Horno para ROSTIZAR A CONVECCIÓN (Ejemplo: 350°F)

Gire la perilla de control de selección a CONV ROAST.  
Gire la perilla de control para la temperatura del horno a 350.

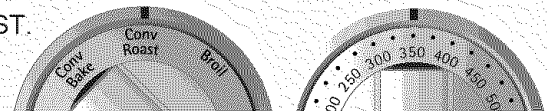


### Para configurar el CONVERSO DE CONVECCIÓN (Ejemplo: 325°F)

Gire la perilla de control de selección a CONV BAKE.  
Gire la perilla de control para la temperatura del horno a 350. Presione .

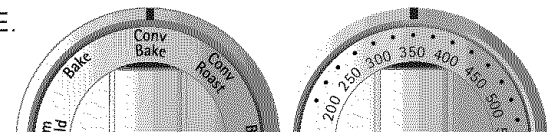


### Ajuste del dispositivo SERVIR TIBIO

Gire la perilla de control de selección a WARM & HOLD.  
Gire la perilla de control para la temperatura del horno a WARM & HOLD.

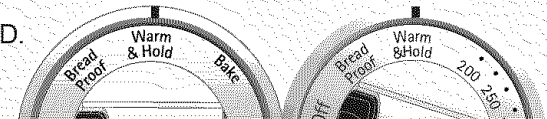

### Ajustando los controles para un ciclo de AUTO-LIMPIEZA

Gire la perilla de control de selección a CLEAN.  
Gire la perilla de control para la temperatura del horno a CLEAN.

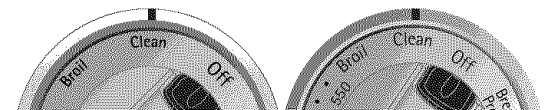

### Ajustando el DISPOSITIVO DE PANERA.

Gire la perilla de control de selección a BREAD PROOF.  
Gire la perilla de control para la temperatura del horno a BREAD PROOF.

