



Quick Start Dryer Guide

We have taken great care to give your new dryer the most convenient and easy-to-use features. Use this Quick Start Dryer Guide to help you optimize the use of your dryer. Consult the Use and Care Guide for more detailed instructions. To contact the Maytag® Services, LLC, Customer Assistance, call 1-800-688-9900. In Canada, call 1-800-688-2002.

⚠ WARNING



Explosion Hazard

Keep flammable materials and vapors, such as gasoline, away from dryer.

Do not dry anything that has ever had anything flammable on it (even after washing).

Failure to follow these instructions can result in death, explosion, or fire.

⚠ WARNING



Fire Hazard

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle.

Failure to follow these instructions can result in death or fire.



START

Clear the lint filter.

Place laundry in dryer. Shut the door.

Press **CONTROL ON**.

Select a cycle.

Press (and hold) **HOLD TO START**.



AUTOMATIC CYCLES

Automatic Cycles automatically match the cycle setting to the type of load, and adjust drying time for optimal performance.

See the Cycle Settings chart below.

Press **CONTROL ON**.

Select an Automatic cycle.

Select the **EXTRA CARE** feature, if desired.

Press (and hold) **HOLD TO START**.

To make changes during an Automatic cycle:

Press **OFF** twice.

Select **DRYNESS LEVEL** or Option.

Press (and hold) **HOLD TO START**.



MANUAL CYCLES

Use Manual Cycle to set a drying time and temperature.

Press **CONTROL ON**.

Select a Manual Cycle.

Press the **MANUAL DRY TIME** (+ or -) buttons until desired drying time is displayed.

Press **TEMP** until the desired temperature glows.

Press (and hold) **HOLD TO START**.

TIMED DRY - Select this cycle to control time and temperature.

TOUCHUP - Select this cycle to help remove wrinkles from clean dry clothes.

RAPID DRY - Select this cycle to dry small loads or loads requiring less drying time.



OPTIONS

EXTRA CARE feature - Provides heat-free periodic tumbling at the end of a cycle.

AIR ONLY - Use Air Only with **TIMED DRY** for items requiring drying without heat.

(ADJUSTABLE) CYCLE END SIGNAL - Press to select desired volume to alert you when a cycle ends.

CONTROL LOCKED - You can lock your settings to avoid unintended use of your dryer.

To lock or unlock the controls:

Press and hold **CYCLE END SIGNAL** for 3 seconds.

Cycle Settings

Cycle Load Type	Automatic Cycles					Manual Cycles ¹		
	Heavy Duty Heavyweight cottons, towels	Normal Sheets, coverings, work clothes	Casual Permanent press	Delicate Lingerie, washable woolens	Super Delicate Exercise wear, sheer curtains, lace	Timed Dry ² All loads	Touchup All loads	Rapid Dry Small loads
Temperature	High	Medium	Medium	Low	Extra-Low	High	Medium	High
Time (minutes)	40*	34*	36*	28*	22*	40	20	27

*Estimated Time

¹Selectable Times and Temperatures

²Remembers your last cycle settings.

