


# Use & Care Manual

## Wine Cooler

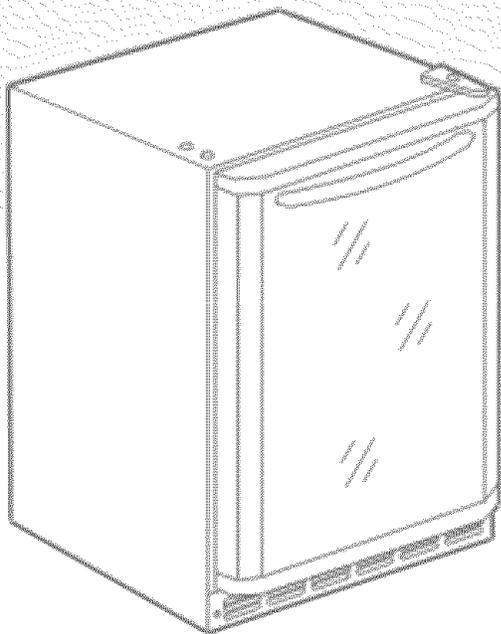

<b>Welcome</b> .....	2	
<b>Safety Instructions</b> .....	2-3	
<b>Installation</b> -- Includes Changing the Reversible Door .....	3 - 4	
<b>Looking Inside</b> .....	5	
<b>Temperature Controls</b> .....	5	
<b>Energy Saving Tips</b> .....	6	
<b>Care &amp; Cleaning</b> .....	6	
<b>Warranty</b> .....	7	
<b>Before You Call</b> .....	8	



## WELCOME & CONGRATULATIONS

Congratulations on your purchase of a new wine cooler! We here at **Electrolux Home Products, Inc.** are very proud of our product and we are completely committed to providing you with the best service possible. Your satisfaction is our #1 priority.

Please read this Use & Care Manual very carefully. It contains valuable information on how to properly maintain your new wine cooler.

We know you'll enjoy your new wine cooler and **Thank You** for choosing our product. We hope you consider us for future purchases.

### PLEASE READ AND SAVE THESE INSTRUCTIONS

This Use & Care Manual provides specific operating instructions for your model. Use your wine cooler only as instructed in this manual. These instructions are not meant to cover every possible condition and situation that may occur. Common sense and caution must be practiced when installing, operating and maintaining any appliance.

**Please record your model and serial numbers below for future reference. This information is found on your serial plate located either inside the appliance or outside on the rear wall.**

#### NOTE

Use only soap and water to clean serial plate.

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

**PLEASE COMPLETE AND MAIL IN THE *PRODUCT REGISTRATION CARD* INCLUDED WITH YOUR WINE COOLER.**

## BEFORE USE

- Before connecting the appliance to an electrical power supply, let it stand for about 4 hours. This will reduce the possibility of malfunctions in the cooling system due to improper handling.
- Clean the appliance thoroughly, especially the interior (See Care and Cleaning).
- If the interior accessories are not correctly placed, rearrange them as described in chapter "Looking Inside".
- These instructions are intended for the user. They describe the appliance and correct operating procedures for safe use.

### SAVE THESE INSTRUCTIONS

#### IMPORTANT

- If you have bought this appliance to replace an existing appliance equipped with a door lock that cannot be opened from the inside (lock, bolt), make sure that the lock is removed, disabled or destroyed before discarding. This will make it impossible for children to accidentally lock themselves inside the appliance and suffocate.
- To avoid risk of child entrapment, leave the shelves in place so children can not easily climb inside even when the appliance is in routine use or not in use in the home.
- The appliance must be properly connected to an electrical power supply. (See: Connecting to Power Supply)
- Do not use an extension cord.
- Always disconnect the appliance from the power supply before cleaning the appliance, or attempting repairs.



## SAFETY INSTRUCTIONS

**READ ALL INSTRUCTIONS BEFORE USING THIS WINE COOLER.**



#### WARNING

##### FOR YOUR SAFETY

Do not store or use gasoline, or other flammable vapors and liquids in the vicinity of this or any other appliance. Read product labels for flammability and other warnings.

##### CHILD SAFETY

- Destroy carton, plastic bags, and any exterior wrapping material immediately after the wine cooler is unpacked. Children should never use these items to play. Cartons covered with rugs, bedspreads, plastic sheets or stretch wrap may become airtight chambers, and can quickly cause suffocation.
- Remove all staples from the carton. Staples can cause severe cuts, and destroy finishes if they come in contact with other appliances or furniture.
- An empty, discarded wine cooler, refrigerator, or freezer is a very dangerous attraction to children.
- Remove and discard any spacers used to secure the shelves during shipping. Small objects are a choke hazard to children.
- Remove the door(s) of any appliance that is not in use, even if it is being discarded.



## SAFETY INSTRUCTIONS



### WARNING

- Repairs should be performed by qualified service personnel only.
- Do not defrost the appliance with other electric appliances (for example a hair dryer) and never attempt to scrape/ remove ice/frost with sharp objects.
- The cooling system of the appliance is filled with refrigerant and oil, so when the appliance is damaged, handle it with care and dispose of it in compliance with environmental protection safeguards.



### WARNING

#### RISK OF CHILD ENTRAPMENT

Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous — even if they will sit for “just a few days.” If you are getting rid of your old appliance, please follow the instructions below to help prevent accidents.

Before you throw away your old appliance:

- Take off the doors
- Leave the shelves in place so children may not easily climb inside.
- Have refrigerant removed by a qualified service technician.

#### REFRIGERANT


- All refrigeration products contain refrigerants, which under the guidelines of federal law must be removed before disposal of product. It is the consumer's responsibility to comply with federal and local regulations when disposing of this product.
- Be careful not to damage the tubes on the rear wall of the appliance (danger of pollution).



### WARNING

Avoid fire hazard or electric shock. Do not use an extension cord or an adapter plug. Do not remove any prong from the power cord.

Grounding type wall receptacle

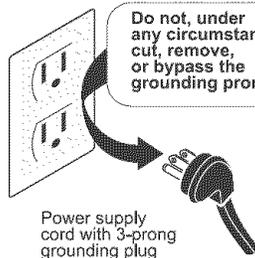

Power supply cord with 3-prong grounding plug




## INSTALLATION

This Use and Care Guide provides specific operating instructions for your model. Use the wine cooler only as instructed in this guide. **Before starting the wine cooler follow these important first steps.**


### BUILT-IN INSTALLATION

#### NOTE

If desired, change the door swing before installation.

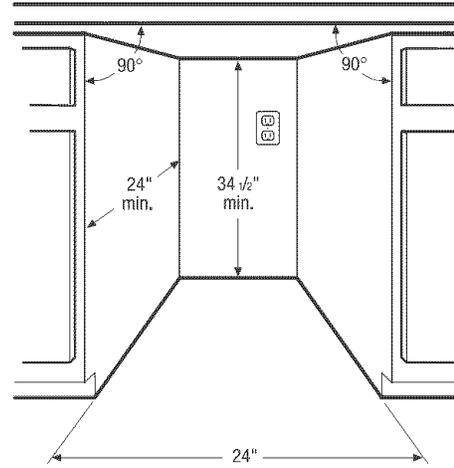


Top

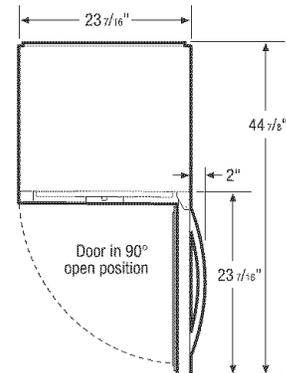

Front

Left

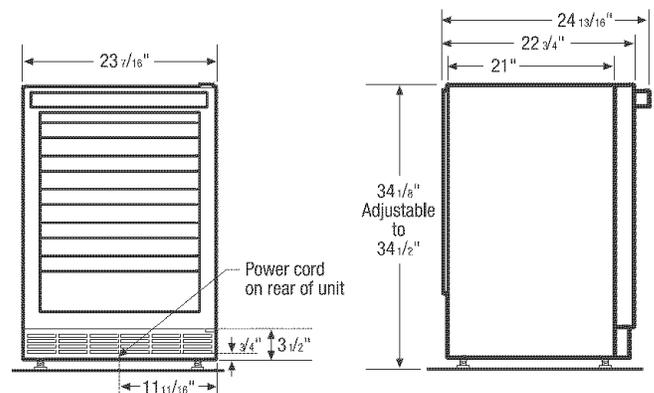

The cutout depth must be 24".

The cutout dimensions shown allow for a full door swing and access to the pull-out racks when installed as a built-in unit.

## INSTALLATION

If installing between frameless cabinets, a 1/2" wide filler strip or side panel may be needed on the hinge side. The filler strip will act as a spacer between the appliance and the adjacent cabinet door swing. The width of the opening must include the filler panels.

### NOTE

The door should protrude 1" beyond the surrounding cabinets.

### Connecting to Power Supply

- A 115 volt 60Hz., 15 or 20 amp power supply is required.
- An individual, properly grounded branch circuit or circuit breaker is recommended.
- Install a properly grounded 3-prong electrical receptacle recessed into the back wall as shown.
- The receptacle must be located on the rear wall as shown.
- Consult a qualified electrician or serviceman if the wiring instructions are not clearly understood, or if doubt exists as to whether the appliance is properly grounded.

### NOTE

GFI (ground fault interrupter) is not recommended.

The appliance can also be installed as a freestanding unit.

## FREE STANDING INSTALLATION

### Choose the location

Be sure the front of the appliance is unobstructed to allow air circulation and proper access to the door.

Do not install the appliance where the temperature will go below **55°F** or above **90°F**.


Do not install the appliance where it will be subject to direct sunlight, heat or moisture.

Allow sufficient space for door swing.

**This unit is not designed for use in a garage or any other outside installation.**

### Adjustable Feet

Some appliances have adjustable feet on the front side; use them to level the appliance.

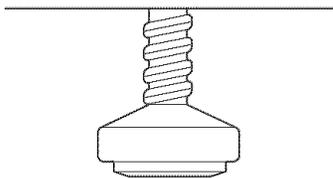


**Note:** For additional clearance when installing the unit beneath a low counter top, remove the hinge cover.

## CHANGING THE REVERSIBLE DOOR

### CAUTION

To avoid personal injury or property damage, have someone assist you during the door reversal process.

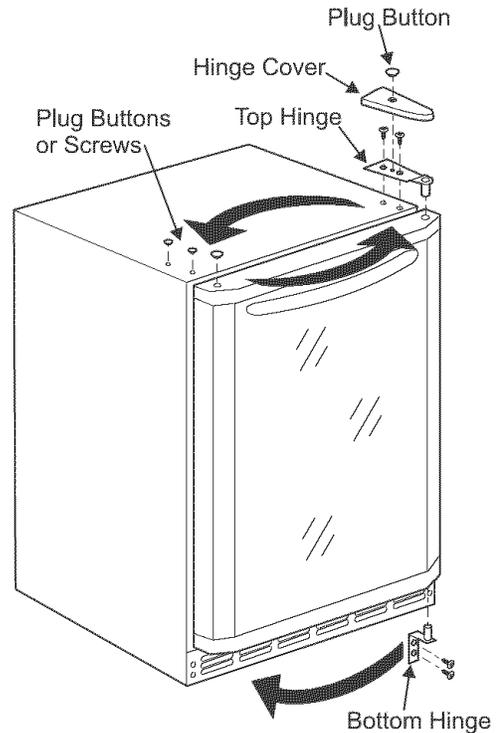

1. Remove top hinge assembly and keep for later use.
2. Remove bottom hinge assembly and keep for later use.
3. Remove plug buttons from upper left holes and transfer them to uncovered holes at right side. Be sure to press plug buttons firmly into holes.
4. Re-install top hinge assembly removed in step 1 on opposite side.
5. Re-install bottom hinge assembly removed in step 2 on opposite side.
6. Make sure door assembly is properly aligned on cabinet before tightening screws.

The process is now complete.




## LOOKING INSIDE

### Engaged wine racks

There are five, full depth wine racks on the upper part of the cabinet to store wine bottles.

**The second supporting guide (counting from top-down, see illustration marked "A") is not suitable for wine racks.** All of the top five wine racks have tabs to engage the cabinet on both sides. Any of the wine racks can be removed to store larger bottles.

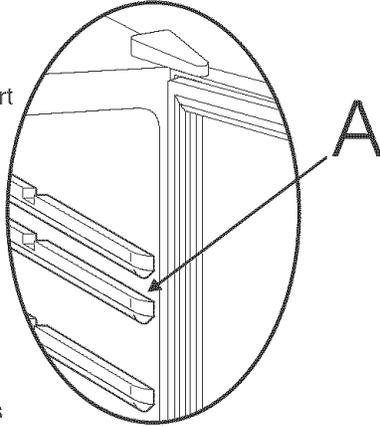

### To remove a rack:

1. Remove all bottles from rack.
2. Lift rack upwards and then pull out.

**To replace a rack:** place sides of rack back onto supporting guides in cabinet and push racks all the way into place.


### CAUTION

Make sure racks are completely engaged (pushed all the way back into cabinet) before loading any bottles.

### Bottle arrangement

The top five racks each hold eight bottles with the necks alternating front to back.

The bottom rack consists of two stories, each of which holds six bottles with the necks facing the front.

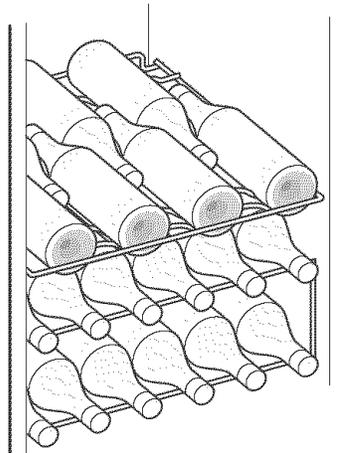


### Interior Light

The appliance has an interior light (max. 15W) for easy interior visibility.

**WE RESERVE THE RIGHT TO ALTER THE SPECIFICATIONS WITH NO EFFECT ON THE OPERATION OF THE APPLIANCE.**



## TEMPERATURE CONTROL

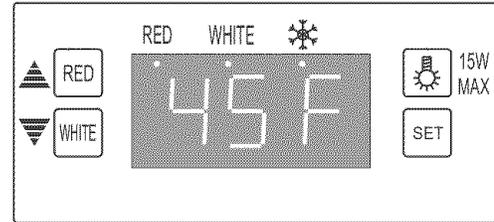

### COOL DOWN PERIOD

The intended temperature range of the wine cooler is 39°F to 64°F (+/- 5°F).

Average temperature for red wine is 54°F to 61°F.

Average temperature for white wine is 43°F to 50°F.

The display usually shows the average temperature of the appliance at that moment.

### PRESET WINE ZONES:

Press the [Red] or [White] pads to choose preset storage conditions for Red or White Wine. (The indicator 'RED' or 'WHITE' will light accordingly.) The programmed temperature for red or white wine will be displayed for a few seconds.

### MANUAL TEMPERATURE SETTING:

The temperature of the wine cooler can be set anywhere between 39°F to 64°F by the temperature up ▲ and temperature down ▼ pads as follows:

- (1) Press the [SET] pad until you hear a "beep" sound (approximately two seconds).
- (2) Press the ▲▼ pads to increase or decrease the desired temperature in increments of one degree.
- (3) Press the [SET] pad to confirm your choice - if no pad is pressed within ten seconds your choice will be automatically confirmed.

### NOTE

The temperature display can be changed between Celsius and Fahrenheit by pressing and holding the ▲ pad for approximately two seconds.

The ❄️ indicator indicates status of the refrigeration cycle as follows:

- (1) It remains ON during the refrigeration cycle;
- (2) It remains OFF during the idle cycle.

**To switch the interior light on/off,** simply press the [Light] pad.

**To switch the Appliance on/off,** simply press and hold [White] pad for approximately two seconds.



## ENERGY SAVING TIPS

### ENERGY SAVING IDEAS



- Try not to open the door too often, especially when the weather is hot and humid. Once you open the door, close it as soon as possible. This is especially important if you have an upright model.
- Make certain the appliance is sufficiently ventilated (adequate air circulation behind the appliance).
- Set the thermostat from higher to lower settings as soon as possible (depends on how loaded the appliance is, ambient temperatures etc.).
- If the gasket is damaged or the door seal is poor, energy consumption is substantially higher. To restore efficiency, replace the gasket.



## CARE AND CLEANING

### AUTOMATIC DEFROSTING OF THE APPLIANCE

There is no need to defrost the appliance, because ice depositing on the inner back wall is defrosted automatically.

Ice build-up on the inner back wall during compressor operation will defrost automatically (when the compressor has cycled off). Defrost water will drain out passing through the drain outlet in the inner back wall into a drain pan situated above the compressor, from where it evaporates.

### CLEANING THE APPLIANCE

Disconnect the power supply before cleaning the appliance.

Do not use solvent based or coarse, abrasive cleaning agents as you may damage the surface.

Wipe the control panel with a clean, damp cloth and dry thoroughly.

Clean the cabinet and grille with a mild detergent and warm water solution. Use a soft sponge and rinse with clean water. Wipe with a soft, clean towel to prevent water spotting.

Remove the detachable accessories in the interior of the appliance and clean with water and liquid detergent.



#### CAUTION

**Plastic parts cannot be washed in dishwashers.**

Wash inside surfaces of the refrigerator with a solution of two tablespoons of baking soda in one quart (1.136 litres) warm water. Rinse and dry. Wring excess water out of the sponge or cloth when cleaning in the area of the controls, or any electrical parts.



## CARE AND CLEANING CONT'D

### Stainless Steel

Clean with a high quality, stainless steel cleaner/polish. Frequent cleaning will remove surface contamination that could lead to discoloration or rust.

If any surface discoloration or rust appears, clean it quickly with Bon-Ami®, Barkeepers Friend®, or a similar cleanser specifically intended for stainless steel, and a non-abrasive cloth. Always clean in the direction of the grain. Always finish this process with a high quality stainless steel cleaner/polish to prevent further problems. Rust that is allowed to penetrate the surface of stainless steel can become impossible to remove.



#### CAUTION

- Do not clean with abrasive pads or steel wool which will scratch the surface or blur graining in stainless steel.
- Stainless steel may discolor when exposed to cleaners with bleach, chlorine gas, pool chemicals, or salt water.

### Glass Door

Clean the glass portion of the door with any high quality glass cleaner.

After cleaning, connect the appliance to the power supply and reload it.

### CHANGING THE BULB



#### WARNING

**Be sure to disconnect power supply before changing the bulb.**

1. Pull out power plug from wall socket. Use screw driver to loosen screw that holds bulb protective cover and then remove cover.
2. Rotate old bulb counter-clockwise to remove.
3. Screw in new bulb (max. 15W) clockwise.
4. Replace bulb protective cover.

### SWITCHING OFF THE APPLIANCE WHEN NOT IN USE

If the appliance will not be in use for long periods of time, disconnect the power supply, remove the contents, and defrost and clean the unit. Leave the door slightly open.



#### CAUTION

**This unit is NOT designed for outside installations such as garages or porches.**

# Major Appliance Warranty Information

Your appliance is covered by a one year limited warranty. For one year from your original date of purchase, Electrolux will pay all costs for repairing or replacing any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used and maintained in accordance with the provided instructions.

**Exclusions This warranty does not cover the following:**

1. Products with original serial numbers that have been removed, altered or cannot be readily determined.
2. Product that has been transferred from its original owner to another party or removed outside the USA or Canada.
3. Rust on the interior or exterior of the unit.
4. Products purchased "as-is" are not covered by this warranty.
5. Food or beverage loss due to any wine cooler failure.
6. Products used in a commercial setting.
7. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions.
8. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.
9. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory.
10. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts.
11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.
12. Damages to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc.
13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.

**DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES**

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

**If You Need Service** Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below.

This warranty only applies in the USA and Canada. In the USA, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice.

**USA**  
**1.800.944.9044**  
Electrolux Major Appliances  
North America  
P.O. Box 212378  
Augusta, GA 30907



**Canada**  
**1.800.668.4606**  
Electrolux Canada Corp.  
5855 Terry Fox Way  
Mississauga, Ontario, Canada  
L5V 3E4



# BEFORE YOU CALL

TROUBLESHOOTING GUIDE		Before calling for service, review this list. It may save you time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.	
PROBLEM	CAUSE	CORRECTION	
<b>WINE COOLER OPERATION</b>			
Wine cooler does not run.	<ul style="list-style-type: none"> <li>• Power cord is not properly connected.</li> <li>• Blown fuse or tripped circuit breaker.</li> <li>• Power outage.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure that power cord is properly connected.</li> <li>• Check/replace fuse. Reset circuit breaker.</li> <li>• Check house lights. Call Electric Company.</li> </ul>	
Cooling system continuously runs.	<ul style="list-style-type: none"> <li>• Door is frequently left open or left open for too long.</li> <li>• Door is not properly closed (door may sag; gasket may be contaminated or damaged).</li> <li>• Unit is overloaded.</li> <li>• Inadequate ventilation of the compressor.</li> </ul>	<ul style="list-style-type: none"> <li>• Open door only when required and only as long as required.</li> <li>• Close door. Check for sagging door and damaged or contaminated gasket.</li> <li>• Do not overload unit. Remove some wine bottles if necessary.</li> <li>• Provide adequate air circulation for compressor.</li> </ul>	
Ice (1/8 - 1/5" thick) forms on inner, rear wall requiring manual defrosting.	<ul style="list-style-type: none"> <li>• Door does not seal well.</li> <li>• Door is frequently opened or left open for extended periods of time.</li> <li>• Contents stored in appliance are warm.</li> <li>• Contents are touching inner back wall.</li> </ul>	<p><b>TO MANUALLY DEFROST</b></p> <p>Disconnect power supply to appliance and leave door open. NEVER use electric devices for defrosting and do NOT scrape ice or frost layer with sharp objects.</p> <ul style="list-style-type: none"> <li>• Clean door gasket if it is contaminated or replace it if it is damaged.</li> <li>• Open door only when required and only as long as required.</li> <li>• Do not allow contents to touch inner back wall.</li> </ul>	
Water leaks from appliance.	<ul style="list-style-type: none"> <li>• Discharge water outlet is clogged.</li> <li>• Defrost water drips over drain channel.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean clogged outlet.</li> <li>• Manually defrost increased ice layer as described in TO MANUALLY DEFROST above.</li> </ul>	
<b>SOUNDS AND NOISE</b>			
Louder sound levels whenever wine cooler is on.	<ul style="list-style-type: none"> <li>• Modern, high efficiency compressors operate at a higher level to maintain stable temperatures.</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal. When the surrounding noise level is low, you may hear the compressor running while it cools the interior of the unit.</li> </ul>	
Louder sound levels when compressor comes on.	<ul style="list-style-type: none"> <li>• Wine cooler operates at higher pressures during start of compressor ON cycle.</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal. Sound will level off or disappear as unit continues to run.</li> </ul>	
Unusual and loud noises may be heard, such as vibration or rattling.	<ul style="list-style-type: none"> <li>• Inadequate installation.</li> <li>• Items in unit touching each other.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure appliance is installed on firm, solid base/floor.</li> <li>• Make sure appliance is properly levelled.</li> <li>• Make sure appliance does not touch wall or kitchen units standing next to it.</li> <li>• Ensure that unit's interior accessories are correctly positioned.</li> <li>• Ensure that bottles, tins, and other vessels are not touching each other causing rattling and/or vibrations.</li> </ul>	

## BEFORE YOU CALL

PROBLEM	CAUSE	CORRECTION
<i>SOUNDS AND NOISE (Cont.)</i>		
Popping or cracking sound when compression comes on.	<ul style="list-style-type: none"> <li>• Metal parts undergo expansion and contraction, as in hot water pipes.</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal. Sound will level off or disappear as wine cooler continues to run.</li> </ul>
Bubbling or gurgling sound, like water boiling.	<ul style="list-style-type: none"> <li>• Refrigerant (used to cool wine cooler) is circulating throughout the system.</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal.</li> </ul>
Snapping sound.	<ul style="list-style-type: none"> <li>• Cold control turning the wine cooler on and off.</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal.</li> </ul>