

### 3-Function Mini Transmitter

F.C.C. rules prohibit adjustments to or modification of receiver and/or transmitter circuitry except for changing the code setting and replacing transmitter battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.


Manufactured under 1 or more of the following U.S. patents: RE29,525; 4,037,201; 4,750,118; 4,806,930

#### MATCH THE CODE IN NEW AND EXISTING TRANSMITTERS

Remove the cover screw in NEW transmitter. Turn case over to access code switches #1 through #9. Be careful not to move circuit board components. Locate code switches in original transmitter(s). (Refer to illustration). Set code switches in the 3-Function Mini Transmitter to the same positions as code switches in the original transmitter.

**NOTE 1:** Code switches #2 through #9 in ALL transmitters used to operate a receiver must be set to match. (Code switch #1 on a 3-function transmitter is neutral. Set it to ANY position. It will not affect the code selected.)

**NOTE 2:** If the original transmitter(s) has only 7 or 8 code switches, set code switches #8 and/or #9 to center (0) position in new transmitter.

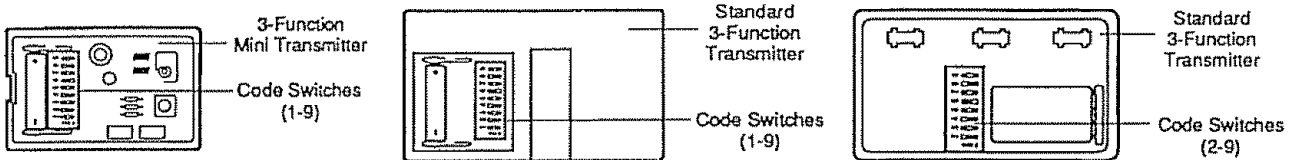

REPLACEMENT PARTS: Transmitter Housing Only (No circuit board) - 41A3592; 12V Battery - 10A14

#### CHANGE THE CODE IN RECEIVER AND TRANSMITTER(S)


##### 53000SR SERIES

(WITH RECEIVER 'SR' CODE BUTTON)

Garage Door Openers and Light Controls

(Illustration A shows a garage door opener receiver)

Select a transmitter push button to operate receiver

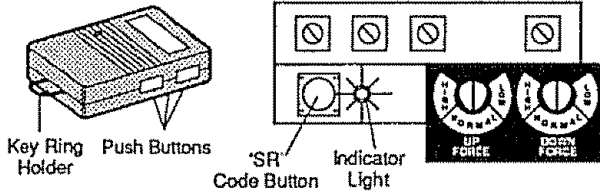

Make sure all transmitters are set to matching code switch positions as described above.

1. Press the 'SR' code button on your receiver (illustration A). The indicator light will turn ON.
2. **STAND AWAY FROM DOOR** and press the transmitter's **SELECTED PUSH BUTTON**. The indicator light will turn OFF and door will move. Code in receiver now matches transmitter(s) code and will activate when the selected transmitter push button is pressed.

**NOTE:** If transmitter push button is not pressed within 30 seconds, the indicator light will turn OFF. Repeat 1 and 2.

To use the 3-Function Mini Transmitter with other 53000SR Series receivers: Select another transmitter push button to operate a Light Control or additional garage door opener. Make sure all transmitters used to operate receiver are set to the same code (as described above). Then repeat 1 and 2.


You can select a different transmitter push button to operate each device.

##### 53000 SERIES

(WITH RECEIVER CODE SWITCHES)

Garage Door Openers and Light Controls

(Illustration B shows a garage door opener receiver)

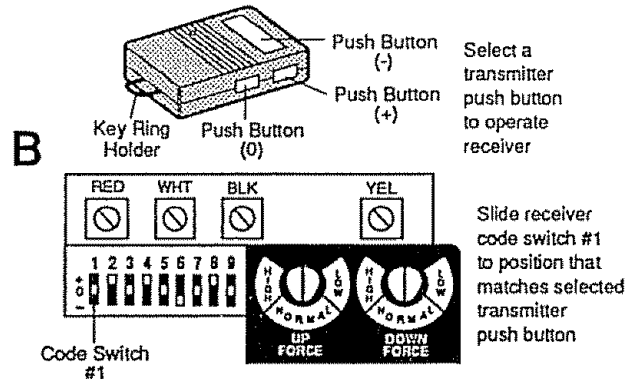

Make sure all transmitters are set to matching code switch positions as described above.



1. Select a transmitter push button to operate the receiver as shown in Figure B.
2. Set **RECEIVER** code switch #1 to match the position of the transmitter push button selected. Refer to Illustration B. Then set remaining code switches in receiver to match the transmitter(s) code switch positions.

**NOTE:** If the receiver has only 7 or 8 switches, set transmitter switch #8 and/or #9 to (0).

To use the 3-Function Mini Transmitter with other 53000 Series receivers: Set receiver code switch #1 to match the position of another transmitter push button. Then set remaining code switches to match transmitter(s) code switches.

Code switches #2 through #9 in all transmitters used to operate the receiver **MUST** be set to matching positions.

**Sears Model 139.53758  
3-Function Mini Transmitter**

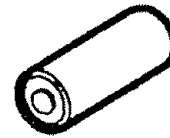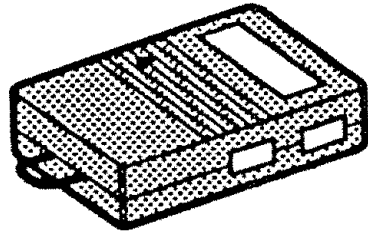

**REPLACEMENT PARTS:**  
Transmitter Housing Only (No circuit board)  
12V Battery

41A3592  
10A14