


## *Use & Care Guide*



## *Convection Toaster Oven*

Model No.  
100.80005 - Black  
100.81005 - White  
100.82005 - Red

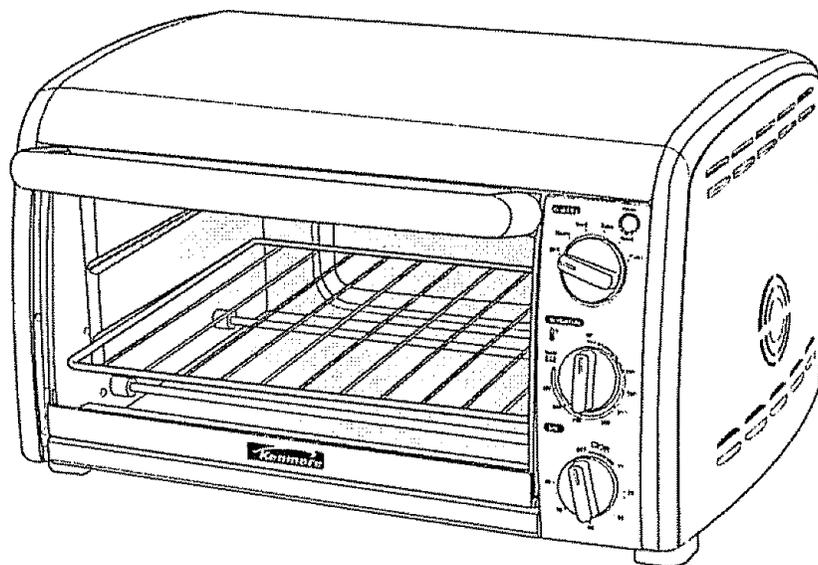

**CAUTION:** Read, understand and follow all Important Safeguards and Operating Instructions in this Manual before using this product.



Sears, Roebuck and Co.,  
Hoffman Estates, IL 60179 U.S.A.  
[www.kenmore.com](http://www.kenmore.com)

## WARRANTY

### KENMORE FULL WARRANTY

If this product fails due to a defect in material or workmanship within two years from the date of purchase, return it to any Sears store or other Kenmore outlet in the United States for free replacement.

This warranty does not include expendable parts, such as filters or blades, which can wear out from normal use within the warranty period.

This warranty applies for only 90 days if this product is ever used for other than private household purposes.

This warranty applies only while this product is used in the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., Hoffman Estates, IL 60179

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 Read all instructions.
- 2 **DO NOT** touch hot surfaces. Use handles or knobs.
- 3 To protect against electric shock, **DO NOT** immerse cord, plug, or Toaster Oven in water or other liquids.
- 4 Close supervision is necessary when any appliance is used by or near children.
- 5 **UNPLUG** from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 6 **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- 7 The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- 8 **DO NOT** use outdoors.
- 9 **NEVER** let the cord hang over the edge of table or counter, or touch hot surfaces.

## IMPORTANT SAFEGUARDS


10. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. **DO NOT** use this appliance for anything other than its intended use.
13. Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.
14. A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls and the like when in operation. Do not store any item on top of the appliance during operation.
15. **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
16. Extreme caution should be exercised when using containers constructed of materials other than metal or glass.
17. **DO NOT** store any materials, other than manufacturer's recommended accessories, in this toaster oven when not in use.
18. **DO NOT** place the following materials in the toaster oven: cardboard, plastic, paper, or other flammable materials.
19. **DO NOT** cover Crumb Tray or any part of the toaster oven with metal foil. This will cause overheating of the toaster oven.
20. To turn toaster oven power Off, push and hold the START/STOP button until the unit beeps and shuts off, then unplug.
21. To protect against electrical shock, this appliance is equipped with a cord having a 3-prong grounding-type plug for insertion into a proper grounding-type receptacle. **DO NOT** alter the plug for use in a 2-prong receptacle. If the plug will not fit into a receptacle, have the proper receptacle installed by a qualified electrician.

## 22. **SAVE THESE INSTRUCTIONS!**

- a) A short power-supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Extension cords are available and may be used if care is exercised in their use.
- c) If extension cord is used:
  - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and
  - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
  - 3) The extension cord should be a grounding-type 3-wire cord.

# PARTS AND FEATURES

Fig. 1

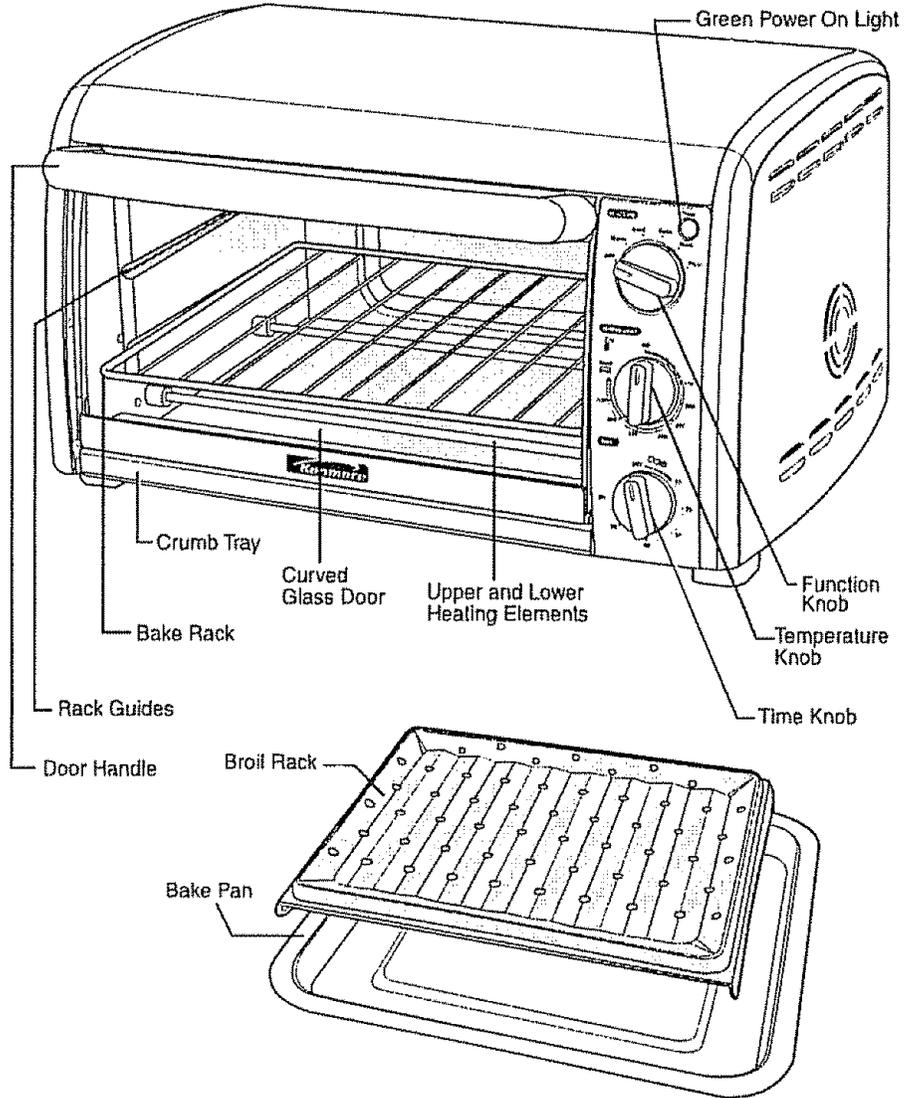

## OPERATING YOUR TOASTER OVEN



**CAUTION:** Appliance surfaces are hot during and after use. Always wear protective, insulated oven mitts when touching hot toaster oven or hot dishes and food, or when inserting or removing Bake Rack, Broil Rack, or other baking dishes.

### BEFORE FIRST USE:

1. Place Toaster Oven on a dry, flat, level surface such as a countertop or table.
2. Be sure the sides, back and top of the oven are at least four inches away from any walls, cabinets or objects on the counter or table.
3. Remove all accessories and wash them in hot sudsy water. Dry thoroughly before placing in the oven.

### BEFORE EACH USE:

1. Remove all items not required for the next cooking procedure.
2. Plug power cord into a standard 120-V, 60 Hz AC-only 3-prong electrical outlet. The Toaster Oven should be the only appliance operating on the circuit.

This Toaster Oven has Convection Technology for better, more efficient use of heat. Hot air circulating through your oven cooks food more evenly, at lower temperatures, and often with better and faster results. Moving air speeds up the rate of heat transference that naturally occurs when air of two different temperatures converges. The rush of heat speeds up the chemical reactions that occur when food cooks. Food cooks in less time in the convection oven. When the Toaster Oven is in the Bake, Warm or Pizza mode, the convection feature is on.



**CAUTION:** NEVER leave Toaster Oven unattended while it is in use.

### TOASTING

The large capacity oven allows for toasting 4 to 6 slices of bread or 6 English muffin halves, frozen waffles, or frozen pancakes. When toasting only 1 or 2 items, place the food in the center of the Toaster Oven's rack.

1. Be sure the crumb tray is in place.
2. Bake rack should be in the lower rack guide.
3. Turn the Function knob to Toast.
4. Set the Temperature knob to Toast.
5. Place the food to be toasted on the bake rack and close the door.


## OPERATING YOUR TOASTER OVEN

### TOASTING cont.

- 6 To turn on the power, turn the Time knob clockwise. The green Power light illuminates. **IMPORTANT:** Turn the Time knob past the 10 minute point, then back to the desired darkness (Fig 2).

For dark toast, turn the knob to point within the Dark icon . For medium toast point within the Medium icon . For light toast, point within the Light icon . Within each icon space, adjust pointer for doneness as desired.

7. The bell will ring and the power will automatically shut off when the Toaster Oven has finished toasting.
- 8 If toast is removed before the bell rings, turn the time knob to Off

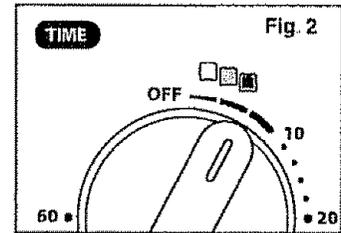


### BAKING

When baking one item at a time, position the Bake rack in the lower rack guides. The bakeware items that will fit in the oven are: a Bundt pan, 6-cup muffin pan, 9-inch pie pan, 9-inch loaf pan, or an Angel Food cake pan.

 **WARNING: DO NOT** use roasting bags, plastic or glass containers in the toaster oven.

1. Place the Bake rack in the lower rack guides.
2. To preheat the Toaster Oven, turn the Function knob to Bake and the Temperature knob to the temperature as directed in the recipe (Fig 3)
- 3 Next, to turn on the Power, turn the Time knob clockwise. The green Power light illuminates. Preheat OVEN By turning the Time knob clockwise past the 10 minute position then back to the dark toast icon  (approx. 5 minutes)(Fig 3).
- 4 When the toaster oven is preheated, the bell will ring and the Toaster Oven shuts Off. Place item to be baked on the Bake rack. Now set the Time knob to the desired amount of cook time (Fig 3), based on the recipe you are using. If a recipe has a range of time, always start with the shortest time and check the food for doneness at this point.
- 5 When the cook time is up, the bell rings, the Time knob is back at Off, the Power light goes out, and the Toaster Oven is Off. If more bake time is needed, reset Time knob for more minutes.
- 6 If the food is done before the bell rings, turn the Time knob to Off

Fig. 3

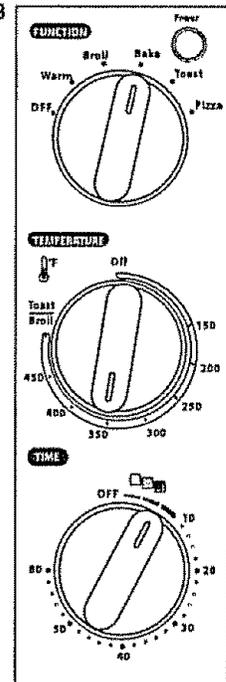

# OPERATING YOUR TOASTER OVEN

### BAKING cont.


#### Positioning the Bake Rack

Cookies can be baked using either set of rack guides, or both positions at once (with an additional rack sold separately)

Layer cakes are baked on the lower rack guide position. Pies can be baked in either or both positions. Always bake pies on a cookie sheet to catch any spills or drips.

### PIZZAS

Your toaster oven is designed to bake a 12-inch frozen pizza. When cooking a pizza, use the lower rack guides. You will need a 12-inch pizza pan, sold separately.

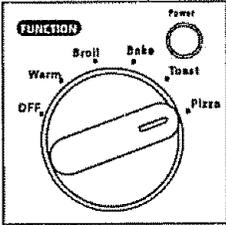


1. Place the bake rack in the lower rack guides.
2. To preheat the Toaster Oven, turn the Function knob to Pizza and the Temperature knob to the temperature indicated on package directions
3. Next, to turn on the Power, turn the Time knob clockwise. The green Power light illuminates. Preheat OVEN By turning the Time knob clockwise past the 10 minute position then back to 5 minutes, which is at the icon for "dark" toast.
4. When the toaster oven is preheated, the bell will ring and the Toaster Oven shuts Off. Place pizza pan on Bake rack. Now set the Time knob to the desired amount of cook time, based on the package directions. If directions have a range of time, always start with the shortest time and check for doneness at this point
5. When the cook time is up, the bell rings, the Time knob is back at OFF, the Power light goes out, and the Toaster Oven is Off. If more bake time is needed, reset Time knob for more minutes
6. If the pizza is done before the bell rings, turn the Time knob to OFF.

### BROILING / TOP BROWNING

For best results, it is recommended that you preheat the Toaster Oven for 5 minutes. Trim off any excess fat from meat, and dry off any excess moisture that may be on the food you are broiling

Fig. 4

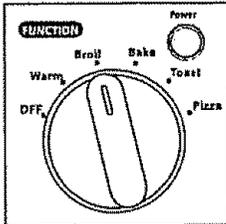


1. Place the Bake rack in the upper rack guide
2. Set The Temperature knob to Broil (see Fig 4). This is the highest oven temperature
3. Turn the Function knob to Broil.
4. Next, to turn on the power, turn the Time knob clockwise. The green Power light illuminates. Preheat oven by turning the Time knob clockwise past the 10 minute position then back to the dark toast icon (approx 5 minutes).

## OPERATING YOUR TOASTER OVEN

### BROILING / TOP BROWNING cont.

5. While toaster oven is preheating, place the Broil rack onto the Bake pan with the sides of the Broil rack facing down, so that there is space between the rack and the pan (Fig. 5)
6. Place food to be broiled on the Broil rack. Brush food with sauces or oils, as desired.
7. When the toaster oven is preheated, the bell will ring and the toaster oven shuts Off. Slide the Bake pan/Broil rack assembly onto the Bake rack (Fig. 5). Now set the Time knob to the desired amount of cooking time based on the recipe you are using. If a recipe has a range of time, always start with the shortest time and check the food for doneness at this point.
8. Turn food over halfway through cooking time or as directed in recipe.
9. When the cook time is up, the bell rings, the Time knob is back at Off, the Power light goes out, and the Toaster Oven is Off. If more broiling time is needed, reset Time knob for more minutes.
10. If the food is done before the bell rings, turn the Time knob to Off.

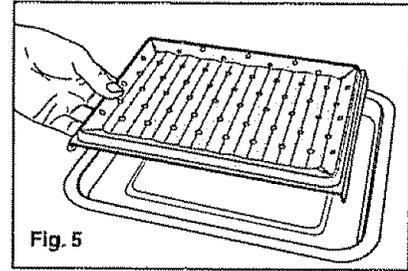

### KEEP WARM FEATURE

Cooked foods can be kept warm for up to 60 minutes. Longer periods of time are not recommended.

1. Set the Temperature knob to 200°.

**NOTE:** If you are planning to warm food for a period of time longer than 30 minutes or the food does not have much moisture content, you may want to turn the temperature down to 150°

2. Turn the Function knob to Warm.
3. Turn the Time knob clockwise all the way to the 60 minute mark
4. If you wish to use the Keep Warm feature for less time, adjust the Time knob accordingly, and if food is taken out before the bell goes off, turn the Time knob to Off

## CARE AND CLEANING

1. Allow oven and accessories to cool completely before cleaning.

**NOTE:** Sugar and Salt based foods have a tendency to stick to all surfaces and are very hard to clean. When cooking these types of foods with the Bake Pan and Broil Rack, soak and clean them immediately after each use.

2. All accessories should be washed by hand in hot sudsy water. Rinse and dry all accessories thoroughly. Automatic dishwashing not recommended.
3. The Glass Door can be wiped clean with a damp sponge and wiped dry with a paper or cloth towel.



### **WARNING:**

- **DO NOT** immerse Toaster Oven in water or any other liquid.
- **ALWAYS** make sure Time knob is in the 0 (Off) position and **UNPLUG** toaster oven from the electric outlet before cleaning.

4. To clean the crumb tray, slide it out of the oven and brush off crumbs. Wipe with a damp cloth and dry thoroughly.
5. Baked on stains can be removed with a paste made from baking soda and water. Rinse and dry thoroughly.
6. Clean the outside with a clean damp sponge or cloth and dry thoroughly. A non-abrasive liquid cleaner may be used for stubborn stains. Rinse and dry thoroughly. **NEVER** immerse Toaster Oven in water or any liquid.



**CAUTION: NEVER** use steel wool, scouring pads or abrasive cleaners to clean any parts of Toaster Oven interior, exterior, or Accessories.

7. Allow all parts and surfaces to dry thoroughly before plugging in and using Toaster Oven.

## Get it fixed, at your home or ours!

### Your Home

For repair – in your home – of all major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

**1-800-4-MY-HOME®** Call anytime, day or night  
(1-800-469-4663) (U.S.A. and Canada)  
[www.sears.com](http://www.sears.com) [www.sears.ca](http://www.sears.ca)

For expert home solutions advice: [www.managemyhome.com](http://www.managemyhome.com)

### Our Home

For repair of carry-in products like vacuums, lawn equipment, and electronics, call or go on-line for the nearest **Sears Parts & Repair Service Center**

**1-800-488-1222** (U.S.A.) **1-800-469-4663** (Canada)

Call anytime, day or night

[www.sears.com](http://www.sears.com) [www.sears.ca](http://www.sears.ca)

To purchase a protection agreement on a product serviced by Sears:

**1-800-827-6655** (U.S.A.) **1-800-361-6665** (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

**1-888-SU-HOGAR®**  
(1-888-784-6427)

Au Canada pour service en français:

**1-800-LE-FOYER<sup>MC</sup>**  
(1-800-533-6937)  
[www.sears.ca](http://www.sears.ca)

© Sears Brands, LLC

® Registered Trademark / <sup>TM</sup> Trademark / <sup>SM</sup> Service Mark of Sears Brands, LLC

® Marca Registrada / <sup>TM</sup> Marca de Fábrica / <sup>SM</sup> Marca de Servicio de Sears Brands, LLC

<sup>MC</sup> Marque de commerce / <sup>MD</sup> Marque déposée de Sears Brands, LLC