

# KitchenAid<sup>®</sup>

HOME APPLIANCES

# Installation Instructions

Part No. 9752179




**IMPORTANT:**  
**Read and save**  
**these instructions.**

**IMPORTANT:**

**Installer:** Leave Installation Instructions with the homeowner.

**Homeowner:** Keep Installation Instructions for future reference.


**Save** Installation Instructions for local electrical inspector's use.

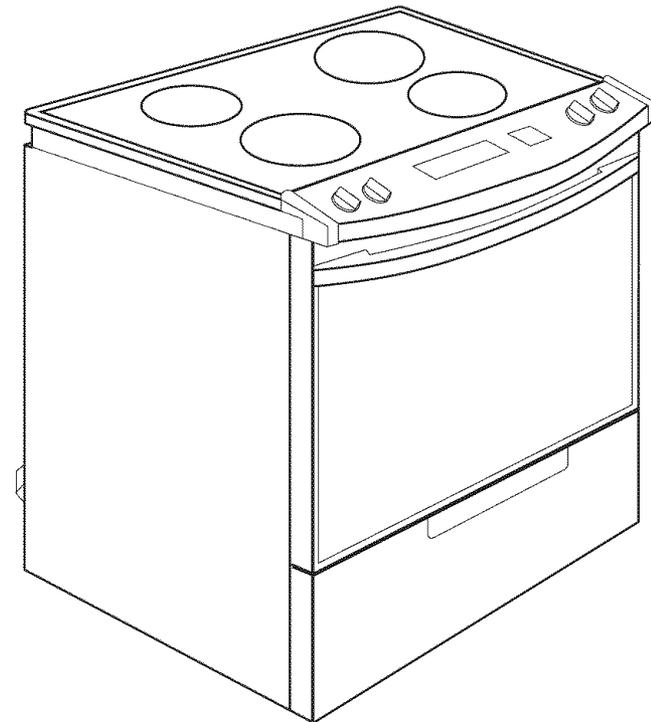

**30" (76.2 cm)**  
**Electric Slide-in Range**  
with self-cleaning  
thermal/convection oven

# Cabinet opening dimensions

25" (63.5 cm) countertop  
24" (61 cm) base cabinet

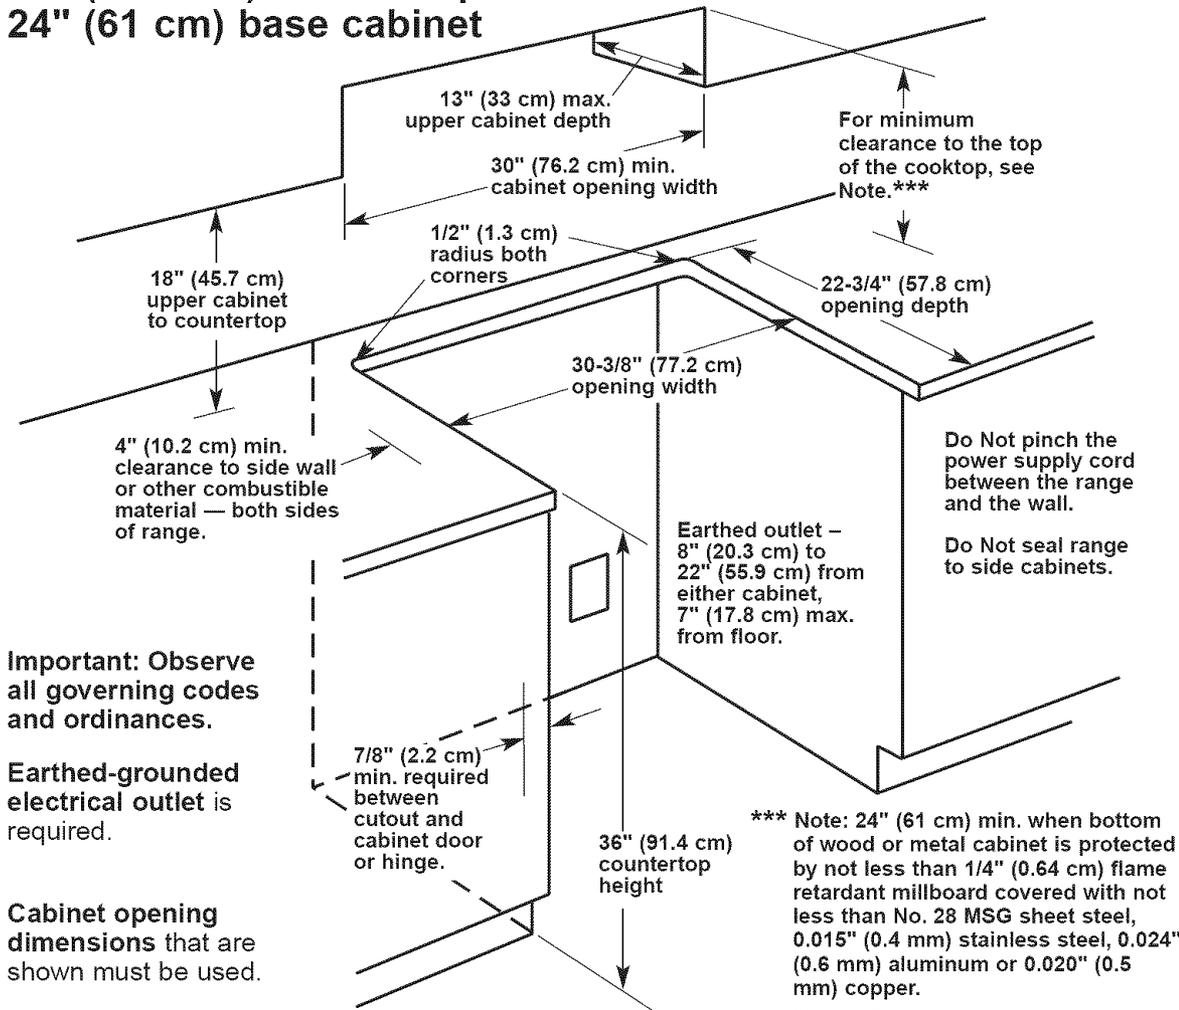


# Countertop preparation

The cooktop sides of the slide-in range fit over the cutout edge of your countertop.

If you have a square finish (flat) countertop and the opening width is 30-3/8" (77.2 cm), no countertop preparation is required.


Formed front-edged countertops must have molded edge shaved flat 1/4" (0.64 cm) from each front corner of opening.

Tile countertops may need trim cut back 1/4" (0.64 cm) from each front corner and/or rounded edge flattened.

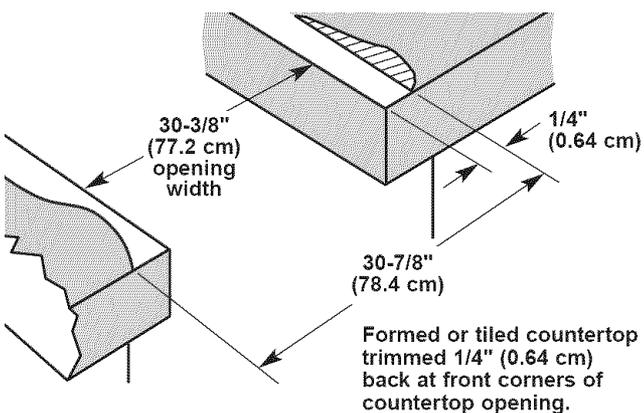


If countertop opening width is greater than 30-3/8" (77.2 cm), adjust the 1/4" (0.64 cm) dimension.

Countertop must be level. Place level on countertop, first side to side; then front to back. If countertop is not level, range will not be level. Oven must be level for satisfactory baking conditions.

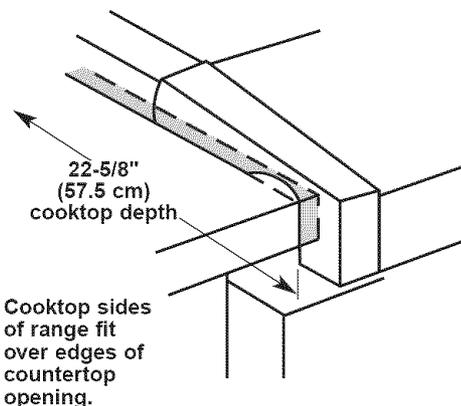

# Product dimensions

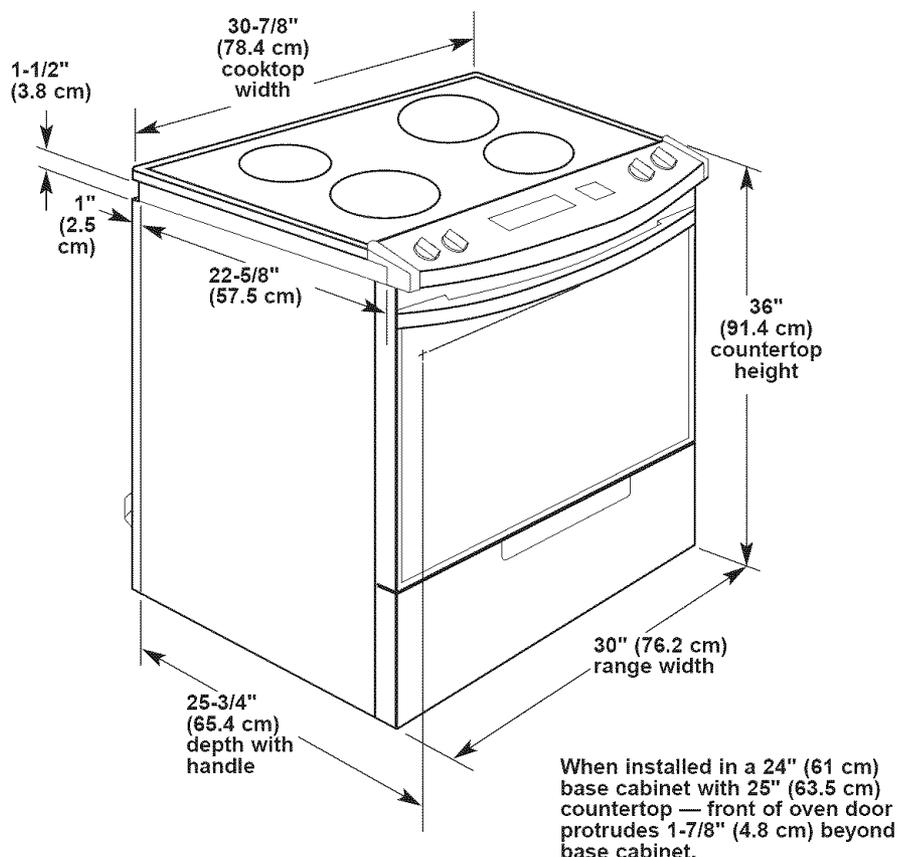

Panel A

# Before you start...

Read electrical and carpentry instructions.

**Proper installation** is your responsibility. A qualified technician must install this range. Make sure you have everything necessary for correct installation. It is the customer's responsibility to make sure that the countertop has been properly prepared and that the installation clearances specified on the model/serial rating plate are met. The model/serial rating plate is located on the frame behind the drawer.

**Check location** where range will be installed. The range should be located for convenient use in the kitchen. Recessed installations must provide complete enclosure of the sides and rear of range.

ALL OPENINGS IN THE WALL OR FLOOR WHERE RANGE IS TO BE INSTALLED MUST BE SEALED.

**Cutout shown** is for a 25-inch (63.5 cm) countertop with a 24-inch (61 cm) base cabinet and no backsplash. If countertop has a backsplash, see "Countertop preparation."

**Cabinet construction:** This appliance is designed for use in a base cabinet with a depth of 24 inches (61 cm). The maximum depth for overhead cabinets is 13 inches (33 cm). For the minimum vertical clearance between the cooking surface and the overhead cabinets, see Note.\*\*\* Overhead cabinets installed at either side of the appliance must be a minimum of 18 inches (45.7 cm) above the cooking surface. The minimum horizontal distance between the overhead cabinets is 30 inches (76.2 cm).

## WARNING

### Injury Hazard

To eliminate the risk of burns or fire, avoid installing cabinet storage above the cooking surface. If cabinets are already installed, reduce the hazard of reaching over a heated cooking surface by installing a range hood. The range hood should extend a minimum of 5 inches out from the bottom front of the cabinets.

Reaching over a heated cooking surface could result in a serious burn or other personal injury.

**Note:** The metal chassis of the range MUST be earth-grounded in order for the control panel to work. If the metal chassis of the range is not earth-grounded, NO keypads will operate. Check with a qualified electrician if you are in doubt as to whether the metal chassis of range is earth-grounded.

### Mobile home installation

The installation of this range must conform to the Manufactured Home Construction and Safety Standards, Title 24 CFR, Part 3280 (formerly the Federal Standard for Mobile Home Construction and Safety, Title 24, HUD, Part 280); or when such standard is not applicable, the Standard for Manufactured Homes Installations (Manufactured Home Sites, Communities and Setups), ANSI A225.1/NFPA 501A, or with local codes\*.

In Canada, the installation of this range must conform with the current standards CAN/CSA-Z240 — latest edition\*\*, or with local codes.

When this range is installed in a mobile home, it must be secured to the floor during transit. Any method of securing the range is adequate as long as it conforms to the standards listed above.


Four-wire power supply cord must be used in a mobile home installation. The appliance wiring will need to be revised.

Copies of the standards listed may be obtained from:

\* National Fire Protection Association  
Battery March Park  
Quincy, Massachusetts 02269

\*\* Canadian Standard Association  
178 Rexdale Boulevard  
Rexdale (Toronto), Ontario M9W 1R3


# Tools needed for installation:

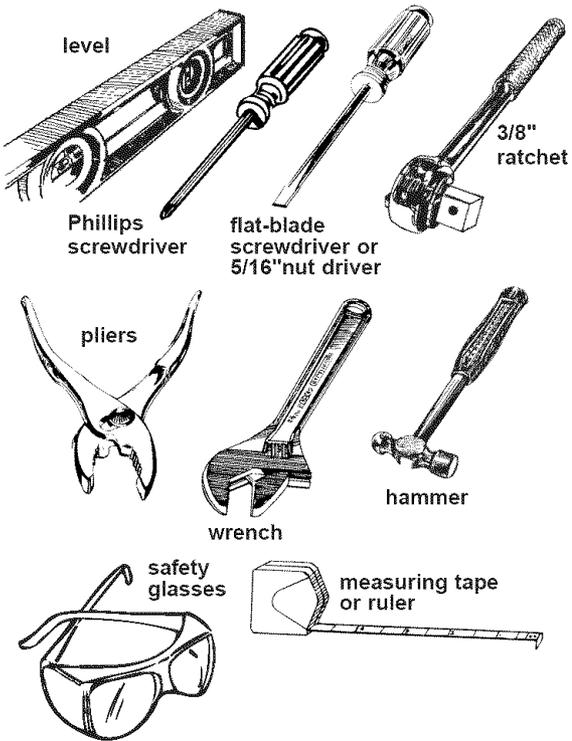

## Now start... With range in kitchen.

**1.** Put on safety glasses. Remove shipping materials, tape and protective film from range. Keep cardboard bottom and shipping base under range. Remove oven racks and parts package from inside oven.

**2.** Take 4 cardboard corners from the carton. Stack one cardboard corner on top of another. Repeat with the other two corners. Place corners lengthwise on the floor in back of range so corners will support outer side edges of range as shown.

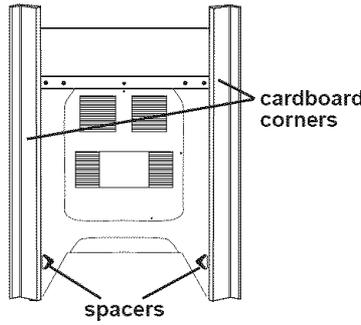


**! WARNING**  
**Injury Hazard**  
Because of the weight and size of the range, two or more people are needed to move and safely install it. Failure to do so could result in serious injury.

**3.** Firmly grasp the range and gently lay it on its back on the cardboard corners.

**4.** Pull cardboard bottom and shipping base firmly to remove.

**5.** Use an adjustable wrench to loosen the leveling legs 1-1/2 turns.

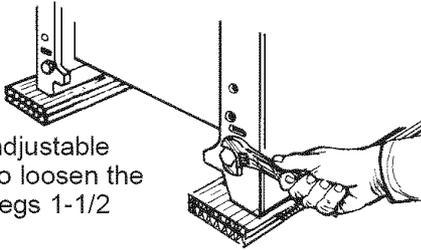

Before moving range, slide it onto cardboard or hardboard.

**6.** Place cardboard or hardboard in front of range. Stand range back up onto cardboard or hardboard.

**7.** Move range close to cabinet opening. Make sure all controls are in the "OFF" position. Make electrical connection. If the factory installed power supply cord cannot be plugged into your outlet, have a qualified electrician install a matching earthed outlet. Do Not modify the power supply cord.


**8.** Remove cardboard or hardboard from under range. Carefully move range into final position.


**9.** Press on front of storage drawer and release to open. Pull drawer open to first stop position. Lift front of drawer to clear white wheels in drawer guides. Remove drawer and set it aside on a protected surface.

**10.** Place rack in oven. Place level on rack, first side to side; then front to back. If range is not level, slide range out of position and use a 3/8" (95 mm) ratchet to adjust the leveling legs up or down. Then slide range back into position.


NOTE: Oven must be level for satisfactory baking conditions.

**11.** Insert storage drawer into slide rails on sides of drawer opening. Lift front of drawer slightly and push firmly to close drawer.

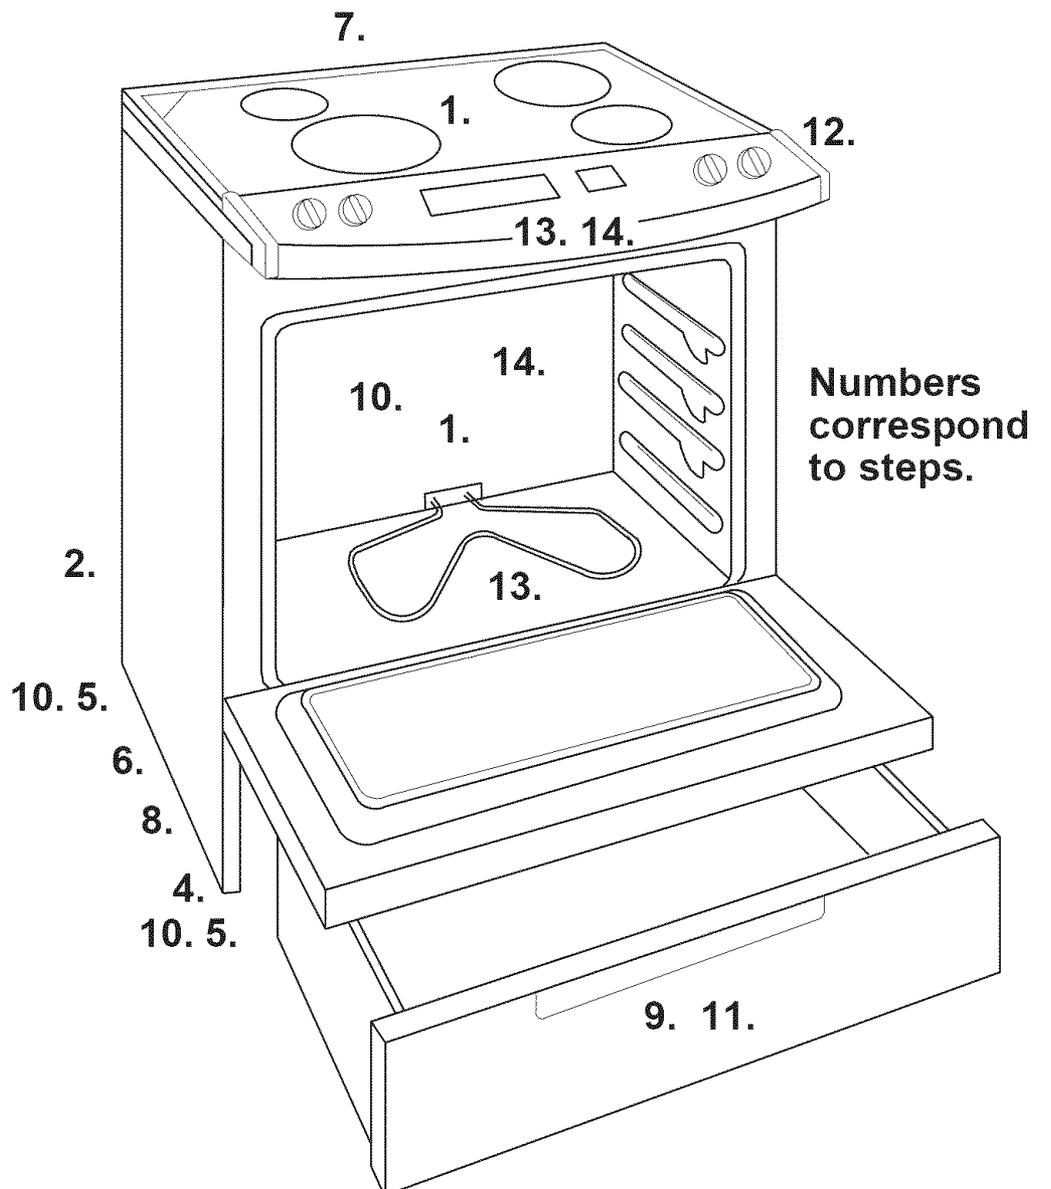

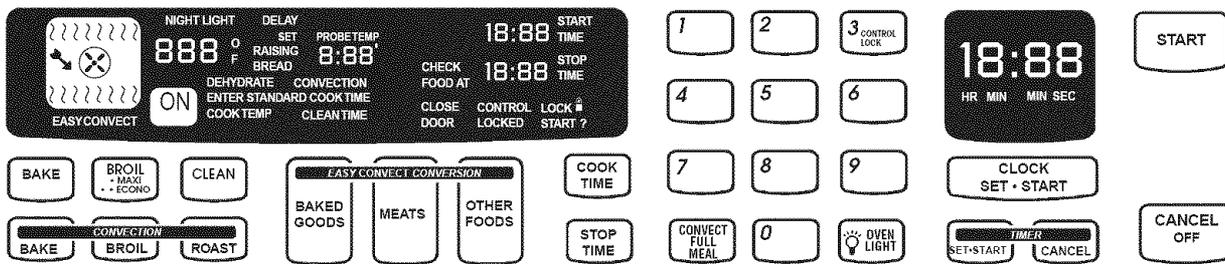

Control panels may vary.

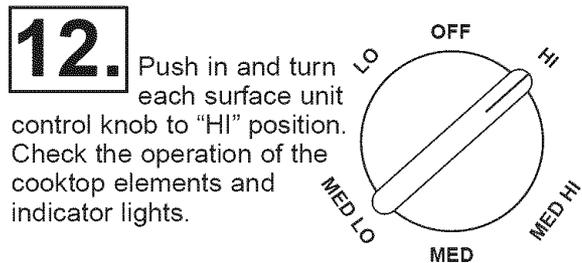

**13.** Check the operation of the oven element. Press the "BAKE" pad. "350°F" will appear in the temperature display. Press the "START" pad. "LO°F" will appear in the display; then "170°F" (when oven reaches 170°F). As the oven temperature rises, the temperature in the display will increase in 5°F increments until the oven reaches the set temperature.

The bottom element should glow red and the indicator light should be on. The upper element should become hot but not glow red.

Press "CANCEL OFF" pad.

**14.** Check the operation of the broil element. Close the oven door. Press the "BROIL" pad. "500°F" will appear in the temperature display. Press the "START" pad. Look through the oven window. The top element should glow red. Press the "CANCEL OFF" pad.

**To get the most efficient use from your new electric range, read your KitchenAid Use and Care Guide. Keep Installation Instructions and Guide close to the electric range for easy reference.**

## If the range does not operate...

- Check that the circuit breaker is not tripped or the house fuse blown.
- Check that power supply cord is plugged into wall receptacle.

### NOTE:

Refer to Use and Care Guide for operating instructions and cleaning instructions.



## WARNING

### Injury Hazard

Do Not step, lean or sit on the range, or the drawer or door of the range.

Failure to follow this instruction could result in serious injury.

## For cleaning and maintenance...

If removing the range is necessary for cleaning or maintenance, disconnect the electrical supply.

If electrical supply is inaccessible, lift the range slightly at the front and pull the range away from the wall. Pull the range out only as far as necessary to disconnect the electrical supply line.

**Before moving range, slide it onto cardboard or hardboard.**

Remove the range to complete cleaning or maintenance.

Move range back into operating position. Remove drawer. Level the range. Reconnect the electrical supply. Make sure that left rear leveling leg is engaged in the anti-tip bracket.

## Accessories

- Horizontal Backguard  
Part No. 9752090PW – White  
9752090PT – Almond  
9752090PB – Black

## If you need assistance...

The KitchenAid Consumer Assistance Center will answer any questions about operating or maintaining your range not covered in the Installation Instructions. The call is free.

When you call, you will need the range model number and serial number. Both numbers can be found on the model/serial rating plate located on the oven frame behind the door.

KitchenAid Consumer Assistance Center:  
English 1-800-461-5681  
French 1-800-461-5703

## If you need service...

Maintain the quality built into your KitchenAid Appliance — call a KitchenAid-authorized service company.

In the event that your KitchenAid appliance should need service, call the KitchenAid Consumer Assistance Center. A special operator will tell you the name of your nearest

KitchenAid-authorized service company.

KitchenAid Consumer Assistance Center:

English 1-800-461-5681  
French 1-800-461-5703