

Danby  
*Silhouette*

## OWNER'S MANUAL

Model • Modèle • Modelo

**DAR483BL**  
**DAR483W**  
**DAR483BLS**

### CAUTION:


Read and follow all safety rules and operating instructions before first use of this product.

### PRÉCAUTION:


Veuillez lire attentivement les consignes de sécurité et les instructions d'utilisation avant l'utilisation initiale de ce produit.

### ADVERTENCIA:

Lea y siga todas las reglas de seguridad e instrucciones de funcionamiento antes de usar este artefacto por primera vez.

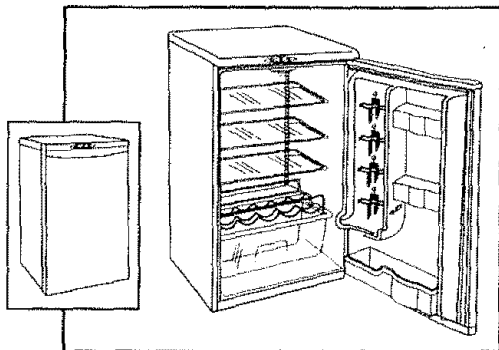

**DAR483BL/W**

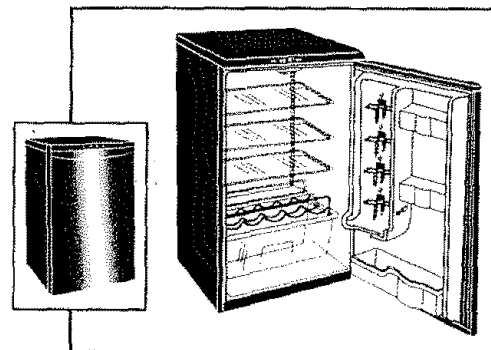

**DAR483BLS**

## ALL REFRIGERATOR

• Before Putting Into Use	2
• Important	3
• Placing and Installation	4
• Description of the Appliance	5
• Operation Control	6
• Use	8
• Maintenance and Cleaning	9
• Changing the Direction of opening the Door	10
• Trouble Shooting Guide	11
• Bulb Placement	12

## TOUT RÉFRIGÉRATEUR

• Avant la première mise en service	17
• Conseils importants	18
• Installation et raccordement	19
• Description de l'appareil	20
• Commande	21
• Utilisation	23
• Entretien et nettoyage	24
• Changement du sens d'ouverture de la porte	25
• En cas de problème	26
• Pour remplacer la lampe	27

## TODA REFRIGERADORA

• Antes de comenzar a usarla	32
• Importante	33
• Ubicación e instalación	34
• Descripción del artefacto eléctrico	35
• Controles de operación	36
• Uso	38
• Mantenimiento y limpieza	39
• Cambio de dirección de la apertura de la puerta	40
• Guía de solución de averías	41
• Cambio de la bombilla	42



# All Refrigerator

---

**Thank you for buying a Danby Silhouette appliance.  
We hope it will successfully serve your requirements for many years.**

**This Refrigerator** is for domestic use only and is intended for storing fresh foods at temperatures higher than 0°/ 32°F.

## SAVE THESE INSTRUCTIONS

<b>Before Putting Into Use</b> .....	<b>.2</b>	<b>Use</b> .....	<b>.8</b>
Instructions for Use		Storing Fresh Foods	
We Care for the Environment		<b>Maintenance and Cleaning</b> .....	<b>.9</b>
Tips for Energy Savings		Automatic Defrosting of the Refrigerator	
<b>Important</b> .....	<b>.3</b>	Cleaning of the Appliance	
Disposing of Worn Out Appliances		Switch Off the Appliance When Not In Use	
<b>Placing and Installation</b> .....	<b>.4</b>	<b>Changing the Direction of</b>	
Choosing the Right Place		<b>Opening the Door</b> .....	<b>.10</b>
Placing the Self-standing Appliance		<b>Trouble-Shooting Guide</b> .....	<b>.11</b>
Connection to Power Supply			
<b>Description of the Appliance</b> .....	<b>.5</b>		
<b>Operation Control</b> .....	<b>.6</b>		
Temperature Selection			

# **Before Putting Into Use**

---

- Before connecting the appliance to electrical power supply, leave it stand for about 2 hours, which will reduce the possibility of malfunctions in the cooling system due to transport handling.
- Clean the appliance thoroughly, especially in the interior (See Cleaning and Maintenance).
- In case the interior accessories are not correctly placed, rearrange them as described in chapter "Description of the Appliance".
- If the gasket is damaged or the door seal is poor, energy consumption is substantially higher. To restore efficiency, replace the gasket.
- Always consider instructions stated in sections Positioning and Energy Saving Tips, otherwise the energy consumption is substantially higher.

## **Instructions for Use**

These instructions for use are intended for the user. They describe the appliance and correct operating procedures for safe use.

**SAVE THESE INSTRUCTIONS:**

## **We Care for the Environment**

- Our products use environmentally friendly manner. To this end, individual packaging materials are clearly marked.
- These instructions are printed either on recycled paper or chlorine free bleached paper.
- When your appliance finally wears out, please try not to burden the environment with it; call your nearest authorized service agent. (See Disposing of Worn Out Appliance)

## **Tips for Energy Savings**

- Try not to open the door too often, especially when the weather is hot and humid. Once you open the door, close it as soon as possible. This is especially important if you have an upright model.
- Every now and then check if the appliance is sufficiently ventilated (adequate air circulation behind the appliance).
- Set the thermostat from higher to lower settings as soon as possible (depends on how loaded the appliance is, ambient temperatures etc).
- Before loading the appliance with packages of fresh foods, make sure that they are cooled to ambient temperature. (excluding soups)
- Ice and frost layers increase energy consumption, so clean the appliance as soon as the frost layer is 3-5 mm thick.

# Important

---

If you have bought this appliance to replace an old one equipped with a door lock that cannot be opened from the inside (lock, bolt), make sure that the lock is removed, disabled or destroyed before discarding. This will make it impossible for children to accidentally lock themselves inside the appliance and suffocate.

The appliance must be properly connected to an electrical power supply. (See: Connection to Power Supply).

If the food has a strange smell or color, throw it away, because it is very likely that it is spoiled and therefore is dangerous to consume.

Always disconnect the appliance from the power supply before cleaning the appliance, replacing the light bulb and / or attempting repairs. **WARNING:** repairs should be performed by qualified service personnel only.

Do not defrost the appliance with other electric appliances (for example a hair dryer) and never attempt to scrape/remove ice/frost with sharp objects. Use only enclosed tools or tools recommended by the manufacturer.

The refrigerating system of the appliance is filled with refrigerant and oil, so when the appliance is damaged, handle it with care and dispose of it in compliance with environmental protection safeguards. (See: We Care for the Environment).

The rating plate containing Model No/Serial No and other technical data specific to this unit, is located either inside the appliance or outside on the rear wall.

- The refrigerator system of the appliance is filled with refrigerant and insulating substances which should be separately treated and processed. Call your nearest authorized service agent or specialized servicing center. If you are unable to locate one, contact your local authorities or your distributor. Be careful not to damage the tubes on the rear wall of the appliance (danger of pollution).

## IMPORTANT WARNING

An empty refrigerator is a very dangerous attraction to children. Remove either the gasket, latches, lids or doors from unused appliances, or take some other action that will guarantee it harmless.

**DANGER:** Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- Take off the doors
- Leave the shelves in place so that children may not easily climb inside.

**DON'T WAIT! DO IT NOW!**

## Dispose of Worn Out Appliances

When your appliance finally wears out, dispose of it in a safe and harmless manner. If the appliance is equipped with a door lock that cannot be opened from the inside (lock, bolt), make sure the lock is removed, disabled or destroyed before being discarded. This will make it impossible for children to accidentally lock themselves inside the appliance and suffocate.

# Placing and Installation

---

## CHOOSING THE RIGHT PLACE


Place the appliance in a dry and regularly ventilated room. Never place the appliance near heat emitting devices (e.g. cooking appliances, radiators, water heaters or similar devices) and do not expose to direct sunlight.

The appliance should be positioned at least 3 cm away from electric or gas cooking appliances and at least 30 cm away from oil or coal fired stoves. If this is not possible, use an appropriate insulation barrier.

Behind the appliance there should be a free space at least 200 cm<sup>2</sup> wide and above the appliance kitchen units (cupboards) should be at least 5 cm away from the appliance in order to assure adequate ventilation.

## INSTALLATION

Place the appliance firmly on a solid base. Some appliances have adjustable feet on the front side; use them to level the appliance.

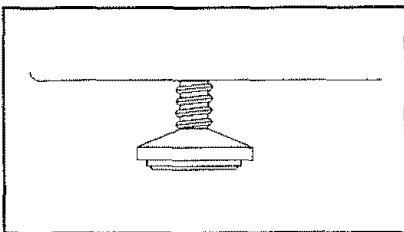

## WARNING

**Instructions pertaining to the risk of fire, electric shock, or injury to persons.**


## GROUNDING INSTRUCTIONS

For your personal safety, this appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a power cord having an equipment grounding conductor and grounding plug. The plug must be plugged into an appropriate wall outlet that is installed and grounded in accordance with all existing local codes and ordinances. Consult a qualified electrician or serviceman if the grounding instructions are not clearly understood, or if doubt exists as to whether the appliance is properly grounded.


## CONNECTION TO POWER SUPPLY

Connect the appliance power cord and plug to a properly grounded wall outlet. The required nominal voltage and frequency are indicated on the rating plate (inside the unit or on the exterior rear wall of the unit).

# Description of the Appliance

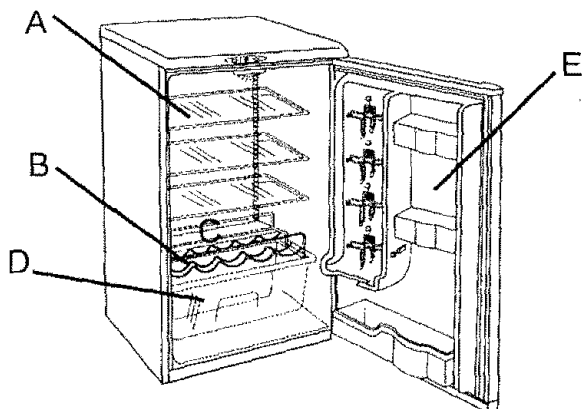

**DAR483W/BL**

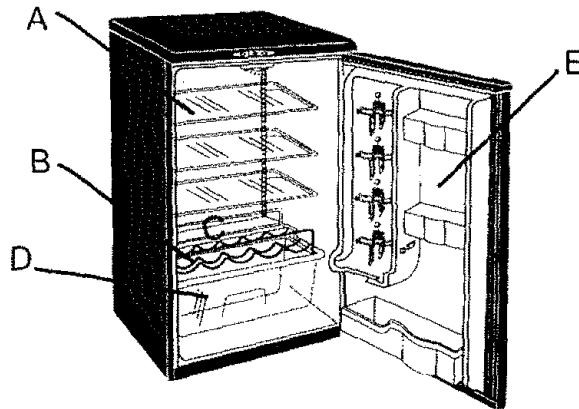

**DAR483BLS**


**(A) Tempered Cantilever Glass Shelves (3)  
(Models DAR 483W/BL/BLS) or Wire  
Cantilever Shelves (2) (Models  
DAR452W/BL**

(number and type of shelves depends on the model) Shelf can be optionally placed on the guides inside the appliance. It is protected against being pulled out accidentally. If you want to remove a shelf, slightly lift up the front part and pull it out. Perishable foods should be stored towards the back/rear of the shelves.

(ie: the coldest part of the shelf).

**(B) White/Bottle Rack  
(Model DAR483W/BL/BLS ONLY)**

Wine/Bottle rack is intended for storage of bottles. The wine/bottle rack can only be installed directly above the crisper cover as depicted. Fig A.

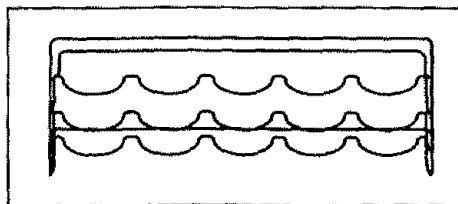

**Fig A.**

### (C) Defrost Water Outlet

The interior of the refrigerator is cooled with a cooling plate mounted in the rear wall. Under the plate there is a channel and an outlet for defrost water.

Regularly check the defrost water outlet and the drain channel for blockage. They should always be kept free and clean of food particles. If the drain outlet does become clogged, use a plastic straw to clean it.

### (D) Fruit and Vegetable Crisper

The crisper drawer is on the bottom of the appliance under the glass shelf. It provides adequate humidity which has a more

favorable effect on fruits and vegetables (less dehydration).

### (E) Door Liner

The door liner consists of various shelves or holders used for storing eggs, cheese butter and yogurt as well as other smaller packages, tubes, cans etc.


The lower shelf is used for storing large bottles.

### Illumination in the Interior of the Refrigerator

The light for illuminating the interior of the refrigerator is on, when the door is opened, off when the door is closed.

## Operation Control

ELECTRONIC CONTROL OPERATION;

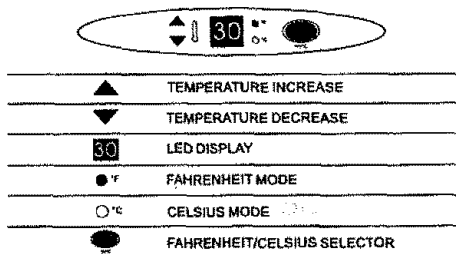

The electronic LED display on this refrigerator is programmed to display (independently) the following temperature(only) information.

**INTERNAL CABINET TEMPERATURE:** This setting is represented by a "Steady" state (non-flashing) LED display and is the normal (LED) default setting during operation.

**SET OPERATING TEMPERATURE:** this setting is represented by a "flashing" LED display and can only be programmed (SET) by pressing and releasing either of the ▲ ▼ (temperature) keys during operation.

**NOTE:** the set temperature can only be adjusted/set while the LED is in "flashing" mode.

**DEFAULT SETTINGS:** When the unit is first connected to a 120V/60Hz power supply, (and/or in the event of a power failure) temperature settings automatically revert to the following default settings:

The LED default setting for the internal (cabinet) temperature is the "real time" (ambient) temperature measured at the time the unit is connected or power is restored.

The LED default setting for the set operating temperature is 50° F/10° C. (after a power failure has occurred, the previously set temperature is automatically erased and will have to be re-set)

The LED default setting for temperature selection (° F/° C) is ° F. (Fahrenheit Scale)

**SETTING OPERATING TEMPERATURE:** To set/change the operating temperature;

1. Press and release either of the ▲ ▼ (temperature) keys.

The LED display will temporarily revert the (flashing) set temperature for approximately 5 seconds. (if you fail to set/change the operating temperature within this 5 second period, the LED will automatically revert back and display the internal (cabinet) temperature.

2. Each depression of the ▲ key (during flashing mode) will increase the temperature incrementally by 1° (temperature ranges between 36° F~46° F/2° C~8° C)

3. Each depression of the ▼ key (during flashing mode) will decrease the temperature incrementally by 1° (temperature ranges between 36° F~46° F/2° C~8° C) display for approximately 5 seconds after the selection is made, then revert back to display the internal (cabinet) temperature.

**TEMPERATURE SELECTION (° F/° C):** This unit can display temperatures on the "Fahrenheit" or "Celsius" scale. Press the temperature selector keypad to alternate between ° F/° C scale. The "blue" indicator light adjacent to the corresponding mode will illuminate to signify the selection made.

## DEFROSTING

Your refrigerator is designed with an "Auto-Cycle" defrost system. What is Auto Cycle defrost?

The refrigerated surfaces of the fresh food compartment defrost automatically, during the "off" cycle of the cold control. (thermostat) Defrost water from the fresh food compartment is disposed of automatically, by means of being channeled onto a drip tray located on the compressor. Heat transfer from the compressor causes the defrost water to evaporate.

To turn "OFF" the refrigerator permanently, you must disconnect the power cord from the electrical outlet. There is no "off" position (setting) available on the electronic control panel. When the refrigerator is not to be used for a long period of time, disconnect the plug and leave the door partially open.

**NOTE:** wait 3 to 5 minutes before restarting if operation has been interrupted



# Use

---

## Storing Fresh Foods

Proper use of the appliance, adequately packed food, correct temperature and taking into account hygienic precautions will substantially influence the quality of the food stored.

- Foods to be stored in the refrigerator should be properly packed so as to prevent mixing various moisture degrees and odors (in polyethylene bags or sheet, aluminum foil, wax paper, or stored in covered containers or bottles).
- Before storing food in the refrigerator, remove excessive packaging (like yogurt in multi-package).
- Pack systematically and make sure that foodstuffs do not touch each other (various odors may mix). Assure adequate air circulation around packages.
- Never store flammable, volatile or explosive substances.
- Beverages with high alcohol percentage shall be stored in tightly sealed bottles in vertical position.
- Food should not touch the rear wall of the refrigerator
- Foods should be cooled down before storing.
- Crispy and delicate foods should be stored in the coldest parts of the refrigerator.
- Try not to open the door too often.
- Set the thermostat to a setting where lowest temperatures are reached. Set the thermostat gradually so as to avoid freezing of foods. Use a thermometer and measure the temperature in the individual compartments. Place the thermostat in a glass vessel filled with water. Temperature readings are most reliable a few hours after a steady state condition is reached.
- Some organic solutions like volatile oils in lemon and orange peel, acid in butter etc. can cause damage when in contact with plastic surfaces or gaskets for long periods of time.
- Unpleasant odors inside the refrigerator is a sign that something is wrong with foods or that your refrigerator needs cleaning. Unpleasant odors can be eliminated or reduced by washing the interior of the refrigerator with mild solution of water and vinegar. We also recommend using activated carbon filters to clean the air or to neutralize odors.
- If you are planning a long journey, make sure to remove perishable articles of food out of the appliance before you leave.

# **Maintenance and Cleaning**

---

## **Automatic Defrosting of the Refrigerator**

There is no need to defrost the refrigerator, because ice depositing on the inner back wall is defrosted automatically.

Ice build-up on the inner back wall during the compressor operation; will (when the compressor has cycled off) defrost automatically. Defrost water collects inside the drain through passing through the drain outlet in the inner back wall into a drain pan situated above the compressor, from where it evaporates.

## **Cleaning the Appliance**

Disconnect the power bar before cleaning the appliance.

Do not use coarse or aggressive cleaning agents as you can damage the surface.

Clean the exterior with water and detergent.


Remove the detachable accessories in the interior of the appliance and clean with water and liquid detergent. Plastic parts cannot be washed in dishwashers.

Wash the interior of the appliance with lukewarm water, adding one or two spoonfuls of vinegar.

After cleaning, connect the appliance to power supply and reload it.

# **Changing the Direction of the Door Opening (Swing)**

If you find the direction of opening the door on your appliance inconvenient, you can change it. Holes on the opposite side have already been prepared in the factory.

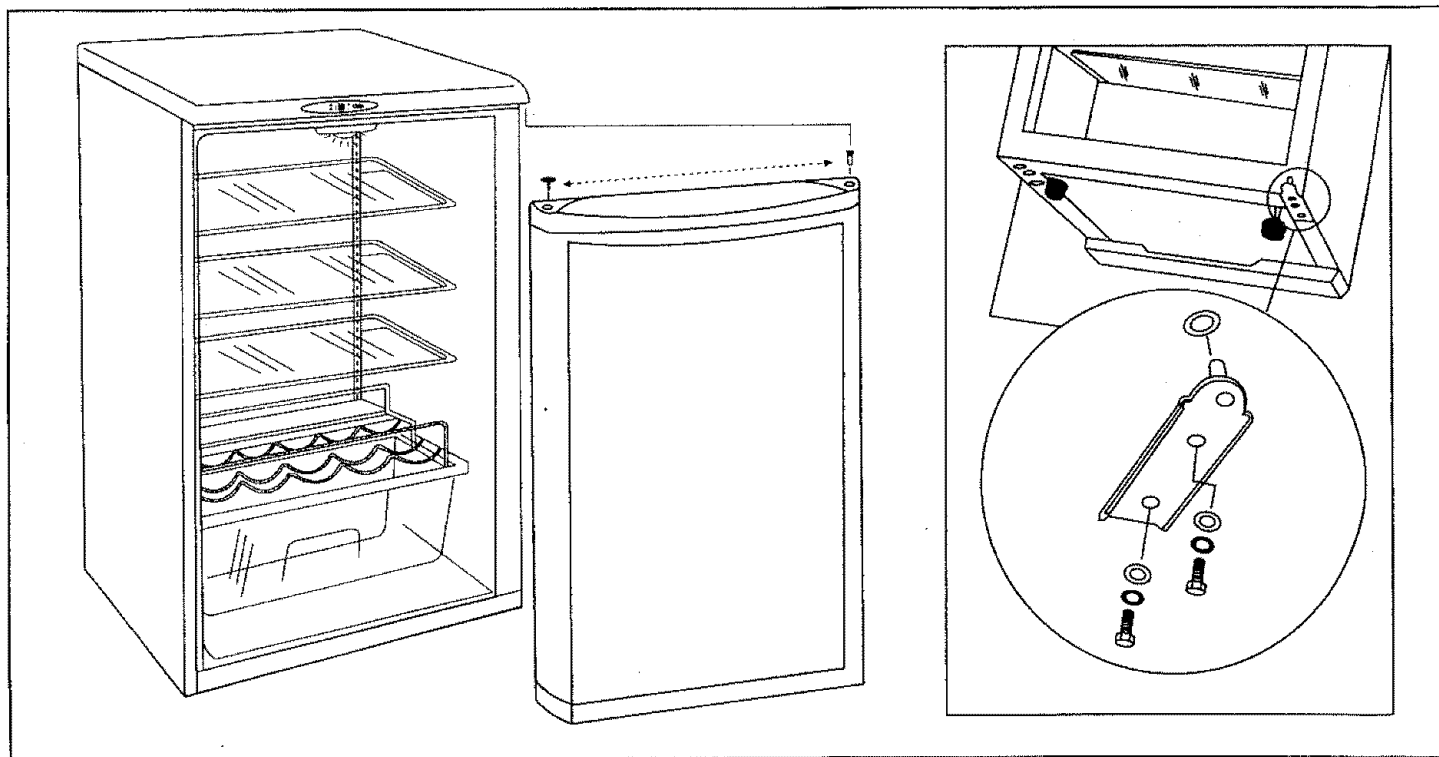

# Trouble-Shooting Guide

---

Sometimes you may come across minor problems that in most cases do not require a service call and can be easily eliminated. The problem may have resulted from improper handling and/or installation of the appliance. Please refer to the below trouble-shooting guide to assist you in identifying the possible cause and solution to your problem. Should the problem still persist after completing these checkpoints. Contact the closest authorized service agent in your area for assistance.

## The Appliance Fails to Operate After Connecting to Electrical Power Supply

- Check the power cord is properly connected.
- Check the power supply in the electrical outlet. (blown fuse / circuit breaker)
- Make sure the appliance is switched on. (thermostat knob in operating position)

## Continuous Operation of the Cooling System

- The door is frequently opened or left open for too long.
- The door is not properly closed (the door may sag, the gasket may be polluted or damaged).
- Perhaps you may have overloaded the appliance with fresh foods.
- The reason may be inadequate ventilation of the compressor (assure adequate air circulation).

## Ice Formation on the Inner Rear Wall

As long as the defrost water runs to the channel and through the outlet to the drain pan on the compressor, automatic defrosting of the appliance is assured.

In case the ice formation on the inner back wall is increased (3-5 mm), ice should be manually defrosted.

Disconnect the power cord from the electric outlet

After defrosting is complete, turn the knob to desired position and close the refrigerator door. The cause of

increased ice formation may be one of the following: the door does not seal well (clean the gasket if it is contaminated, or replace it if it is damaged);

- the door is frequently opened or left too long;
- the food stored in the refrigerator was warm;
- the food or dish is touching the inner back wall.

## Water is Leaking From the Refrigerator

If the discharge water outlet is clogged, or the defrost water drips over the channel, water will leak from the refrigerator.

- Clean the clogged outlet, for example with a plastic straw.
- Manually defrost the increased ice layer. See "Ice Formation on the Inner rear Wall"

## Noise

Cooling in a refrigerator-freezing appliance is made possible by cooling the system using a compressor, which will produce certain noise levels. How noisy the appliance is depends on where it is placed, how it is used and how old the appliance is.

- **During the operation** of the compressor the noise of the liquid is heard and when the compressor is not operating, the refrigerant flow is heard. This is a normal condition and it has no influence whatsoever on the lifetime of the appliance.

- **After starting the appliance**, the operation of the compressor and the refrigerant flow may be louder, which does not mean that something is wrong with the appliance and it has no influence on the lifetime of the appliance. Gradually the noise is reduced.

- Sometimes **unusual and louder** noise is heard, which is rather unusual for the appliance. This noise is often a consequence of inadequate installation.

- The appliance must be level and installed on a firm solid base/floor.


- It should not touch the wall or kitchen units standing next to it.

- Check the accessories on the interior of the appliance, they should be placed correctly in their positions; also check, bottles, tins, and other vessels are not touching each other causing rattling and/or vibrations.

# **Bulb Replacement**

---

Before replacing the light bulb, disconnect the appliance from the power supply. Using a phillips screwdriver, remove the screw located on the left (center) side of the light cover. Pull the light cover straight down. Replacement light bulb must be the same wattage as the original bulb.(15 watts only) If you cannot locate this size bulb locally, contact Danby's toll free number 1-800-26-DANBY.

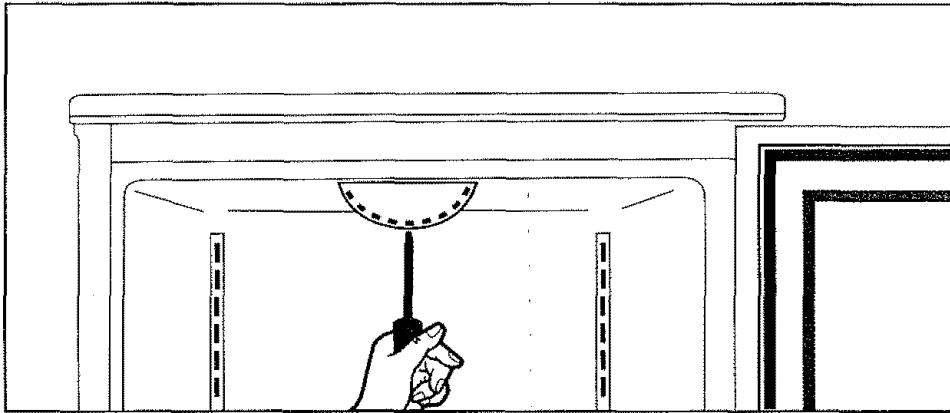


**WE RESERVE THE RIGHT TO ALTER THE SPECIFICATIONS WITH NO INFLUENCE ON THE OPERATION OF THE APPLIANCE.**

## Parts List

Illus. No.	Description	DAR483W Part No.	DAR483BL Part No.	DAR483BLS Part No.
1	Upper Storage Bin	432.1A	432.1A	432.1A
1A	Bottle Shelf Washer	483.01A	483.01A	483.01A
1B	Bushing	483.01B	483.01B	483.01B
1C	CANSTOR shelf	483.01C	483.01C	483.01C
1D	Cover	483.01D	483.01D	483.01D
1E	Middle Storage Bin	431.1B	431.1B	431.1B
1F	Door Gasket	432.4(LG)	432.4(CG)	432.4(CG)
1G	Bottom Storage Bin	432.1C	432.1C	432.1C
1H	Self Tapping Screw for Liner	483.01H	483.01H	483.01H
1I	Door	483.52(W)	483.52(BL)	483.52(SS)
2	Door Liner	483.02	483.02	483.02
3	Table top	483.03(W)	483.03(BL)	483.03(BL)
4	Touch pad	483.04(W)	483.04(BL)	483.04(BLS)
5	Self Tapping Screw for Liner	483.05	483.05	483.05
6	Display Board	483.06	483.06	483.06
8	Electronic control box	483.08	483.08	483.08
9	Power board	483.09	483.09	483.09
11	Washer	432.10	432.10	432.10
12	Upper Hinge	432.11	432.11	432.11
13	Bulb	452.12	452.12	452.12
14	Accessories Of Lamp	452.13	452.13	452.13
15	Reflector	452.15	452.15	452.15
17	NTC sensor	483.17	483.17	483.17
18	Bulb Box	483.18	483.18	483.18
19	Lamp Cover	452.19	452.19	452.19
20	Lamp Switch	452.18	452.18	452.18
21	Thermostat Box Cover	483.21	483.21	483.21
22	Support Plate(Lower Hinge)	432.18	432.18	432.18
23	Bottom Hinge	432.17	432.17	432.17
24	Adjustable Foot	432.19	432.19	432.19
25	Bottom Hinge Screw	432.20A	432.20A	432.20A
26A	Lock Washer (Lower Hinge)	432.20B	432.20B	432.20B
26B	Bushing (Lower Hinge)	432.20C	432.20C	432.20C
27	Foot	432.21	432.21	432.21
28	Fixed Foot Screw	432.22	432.22	432.22
29	Power Supply Cord	99352.03	99352.03	99352.03
30A	Crisper	432.24	432.24	432.24
30B	Glass Crisper Cover	482.28	482.28	482.28
30C	Wine Rack	482.35	482.35	482.35
31	Glass Shelf	482.32	482.32	482.32
32	Wire Clip	432.26	432.26	432.26
33	Load Wire Clamp	432.27	432.27	432.27
34	Wire Clamp Screw	432.28	432.28	432.28
35	Splic Box	432.32	432.32	432.32
36	Earthing Wire Screw	432.31	432.31	432.31
37	Compressor Support	99352.51	99352.51	99352.51
38	Compressor Support Screw	432.38	432.38	432.38
39	Compressor Bolt Washer	99352.08	99352.08	99352.08
40	Suction Tube Sleeve	99352.09	99352.09	99352.09
41	Spring Washer	99352.10	99352.10	99352.10
42	Fixing Screw	99352.11	99352.11	99352.11
43	Compressor	99352.12	99352.12	99352.12
44	Starter relay	99352.13	99352.13	99352.13
45	Cover	99352.14	99352.14	99352.14
46	Dryer	432.47	432.47	432.47
47	Evaporator	452.52	452.52	452.52
48	Door Hinge Cover	432.54(W)	432.54(BL)	432.54(BL)
49	Thermostat Sleeve Screw	432.50	432.50	432.50
50	Thermostat Sleeve	432.51	432.51	432.51
51	Fixed Table Top Screw	432.9	432.9	432.9
52	Support Foam	483.52	483.52	483.52
53	Screw	432.7	432.7	432.7
54	Support board	432.8	432.8	432.8

# REPAIR PARTS

## Model DAR483W/BL/BLS

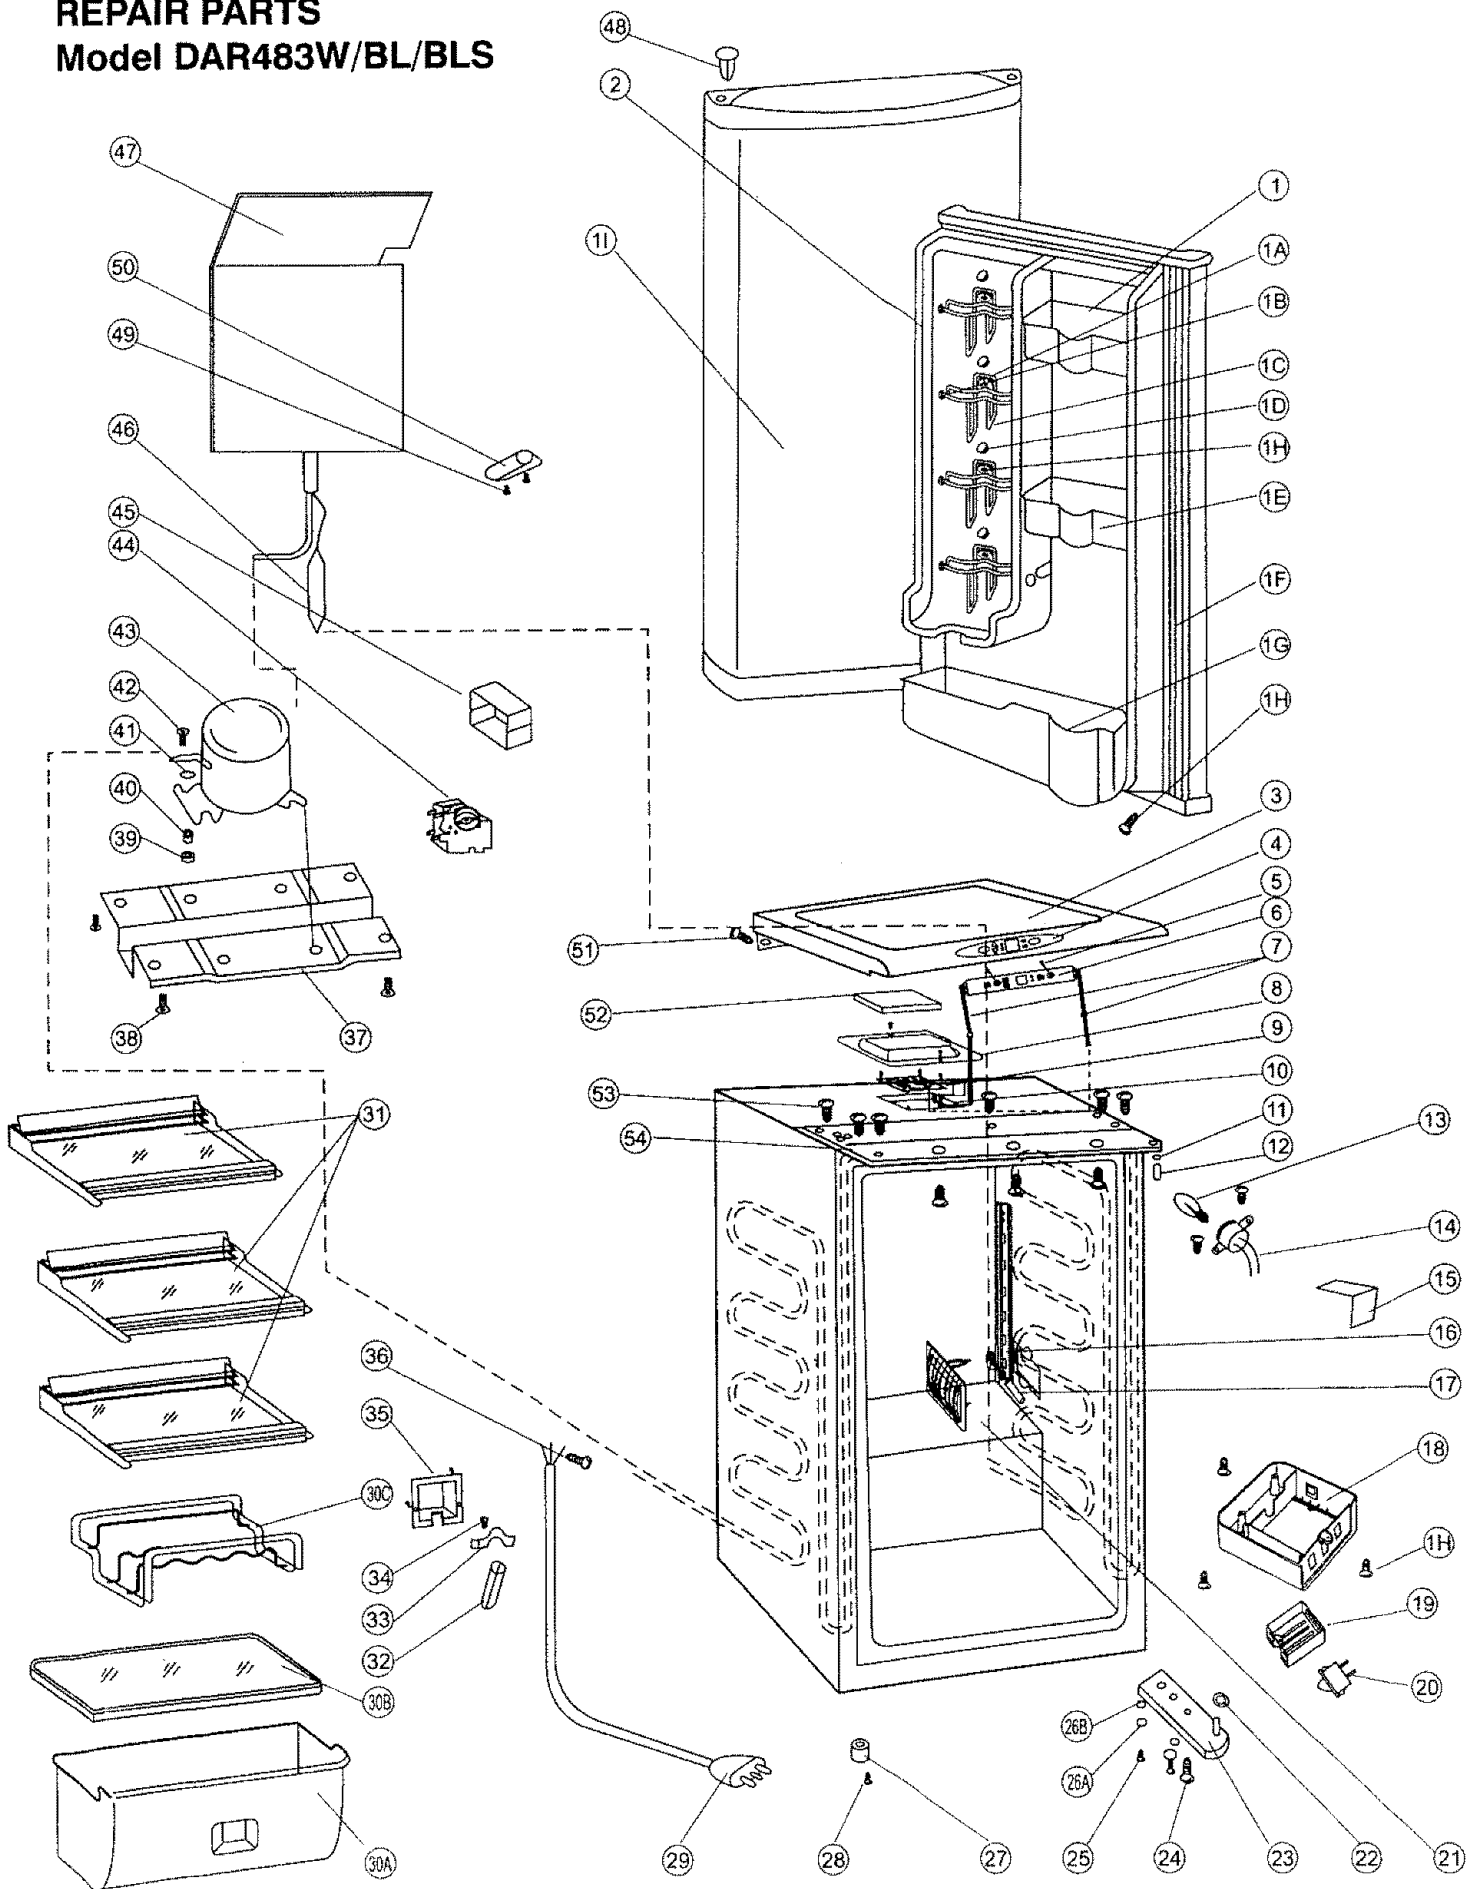

# Danby® LIMITED PRODUCT WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workmanship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

This warranty is available only to the person to whom the unit was originally sold by Danby or by an authorized distributor of Danby, and is non-transferable.

## TERMS OF WARRANTY

Plastic parts (ie. evaporator door, door rails, covers and trays are warranted for thirty (30) days only from purchase date, with no extensions provided.

*First 2 Years* During the first two years (2), any electrical parts of this product found to be defective, including any sealed system units, will be repaired or replaced, at warrantor's option, at no charge to the ORIGINAL purchaser. Consumable parts (ie. Light bulbs) are not warranted or guaranteed for any length of time.

*Third Through Fifth year* During the next three years (3), any part of the sealed system found to be defective (consisting of compressor, condenser, evaporator, dryer and all related tubing) will be replaced without charge. The purchaser shall pay for all labour and return freight during this three year (3) period for repair or replacement of any sealed system components. Any unit being diagnosed as non-functional due to sealed system failure and warranting an exchange during the existing three (3) years will be subject to an appropriate depreciation or user fee, including any and all freight charges being levied against the consumer.

*To obtain Service* Danby reserves the right to limit boundaries of "In Home Service" due to the proximity of an Authorized Service Depot. Any appliance requiring service outside the limited boundaries of "In Home Service", it will be the customer's responsibility to transport the appliance to the closest Authorized Service Depot at their own expense. Contact your dealer from whom your unit was purchased, or contact your nearest authorized Danby service depot, where service must be performed by a qualified service technician. If service is performed on the units by anyone other than an authorized service depot, or the unit is used for commercial application, all obligations of Danby under this warranty shall be at an end.

The following clause refers to single and double door refrigerators, supplied with or without a separate freezer section. Nothing within this warranty shall imply that Danby will be responsible or liable for any spoilage or damage to food or other contents of this appliance, whether due to any defect of the appliance, or its use, whether proper or improper.

## EXCLUSIONS

Save as herein provided, Danby Products Limited (Canada) or Danby Products Inc. (U.S.A.), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by Danby Products Limited or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, Danby Products Limited (Canada) or Danby Products Inc. (U.S.A.), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless Danby Products Limited from any claim for damages to persons or property caused by the unit.

## GENERAL PROVISIONS

No warranty or insurance herein contained or set out shall apply when damage or repair is caused by any of the following:

- 1) Power Failure.
- 2) Damage in transit or when moving the appliance.
- 3) Improper power supply such as low voltage, defective house wiring or inadequate fuses.
- 4) Accident, alteration, abuse or misuse of the appliance such as inadequate air circulation in the room or abnormal operating conditions, (extremely high or low room temperature).
- 5) Use for commercial or industrial purposes.
- 6) Fire, water damage, theft, war, riot, hostility, acts of God such as hurricanes, floods etc.
- 7) Service calls resulting in customer education.

Proof of purchase date will be required for warranty claims; so, please retain bills of sale. In the event warranty service is required, present this document to our AUTHORIZED SERVICE DEPOT.

Warranty Service	
With-In Canada	With-In United State
In Home	In Home

Danby Products Limited  
PO Box 1778, 5070 Whitelaw Road,  
Guelph, Ontario, Canada N1H 6Z9  
Telephone: (519) 837-0920 FAX: (519) 837-0449

08/00

Danby Products Inc.  
PO Box 669, 101 Bentley Court,  
Findlay, Ohio, U.S.A. 45839-0669  
Telephone: (419) 425-8627 FAX: (419) 425-8629