

## INSTALLATION NOTICE

Part Number: 72783386, 72783389, 72783602, 72783603, 72783604, 72783605, 72783606, 72783607, 75004839, 75004944, 75005112, 75005118

**TOSHIBA MODELS:** 27D46, 32D46, 32DF46, 27DF46

Before replacing the TV main board or digital PCB you will need to determine what version TV micro is on the chassis. The chart below details the proper combination of TV Main PCB to Digital PCB.


Model	Ref	Desc	TV Micro IC101			
			OEC7144A	OEC7144B	OEC7144C	OEC7144D
27D46	PCB070	Main PCB Part #	72783606	See NOTE	See NOTE	See NOTE
27D46	PCBDH0	Digital PCB Part #	72783603	75005112	75005112	75005112
32D46	PCB070	Main PCB Part #	72783607	See NOTE	See NOTE	See NOTE
32D46	PCBDH0	Digital PCB Part #	72783604	75005118	74005118	75005118
32DF46	PCB070	Main PCB Part #	72783605	See NOTE	See NOTE	See NOTE
32DF46	PCBDH0	Digital PCB Part #	72783602	75004839	75008910	75008910
27DF46	PCB070	Main PCB Part #	72783386	See NOTE	See NOTE	See NOTE
27DF46	PCBDH0	Digital PCB Part#	72783389	75004944	75004944	75004944

**NOTE when replacing the main PCB:** If the TV micro on the original main PCB "IS NOT" OEC7144A you will need to order the main PCB w/OEC7144A TV micro and a new digital PCB.

Identify the TV Micro physically by looking at IC101 or going into the service menu by using the procedure below:

1. Turn the TV on.
2. Set the **VOLUME** to minimum.
3. Press both **VOL. DOWN** button on the set and the **(8)** button on the remote control for more than 2 seconds.
4. Confirm the TV Micro Version.

### How to Identify TV Micro version on IC101

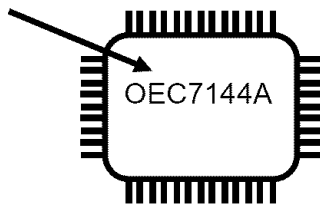

### TV Micro Version using Service menu

