

USE AND CARE INFORMATION. DO NOT REMOVE.

• Tips on everyday care and use

To control temperature: Start by setting both freezer and fresh food controls at "INITIAL SETTING". Wait 24 hours for entire cabinet to cool. See control panel for further adjustments. Check again after 24 hours.

Ice cream is the best check of freezer temperature. It should be firm. When hard to serve, freezer is colder than needed.

Never turn Temperature Control to OFF unless both compartments are empty.

Keep your Kenmore refrigerator at its best: Clean the tubing behind the base grille when dusty.

Any time you won't be using your refrigerator regularly, such as during vacation, unplug and empty it. Move the icemaker feeler arm to the UP (off) position. Clean inside and block doors open.

For all cleaning: Mix 1 tablespoon baking soda with 1 quart warm water. Or use mild soap. No strong cleaners, scouring powder or pads.

Help protect the paint finish by waxing the outside of the refrigerator when new and then at least twice a year. Use kitchen appliance wax, taking care not to wax plastic parts.

• Things to remember

- 1. Always allow 24 hours for your refrigerator to reach a new temperature setting.**
- 2. The fans and motor will start and stop often.** They must, to maintain the temperature you select.
- 3. Adjust the rollers at the front of the refrigerator** so it rests firmly on the floor with front raised just enough that the doors close easily when opened about halfway. Use pliers or adjustable wrench to turn the roller adjusting screws.
- 4. Unplug refrigerator before doing anything with electrical system,** even changing a light bulb. To replace the fresh food or freezer bulb(s), first consult the owner's manual for instructions to remove the light panels. Replace with the same size bulbs.
- 5. Wrap or cover all food.** To reduce odors and stale food.
- 6. No need to defrost.** Your Kenmore defrosts itself automatically.
- 7. Much information you need is attached to your refrigerator.** More complete information is in your Owners Manual.

Plumbing is required for the icemaker. Move icemaker feeler arm to UP (off) position when water line is not hooked up.

DANGER—ELECTRICAL SHOCK HAZARD.
Disconnect power before servicing.