
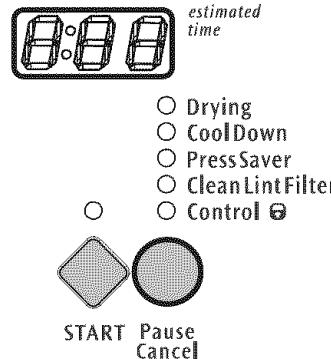
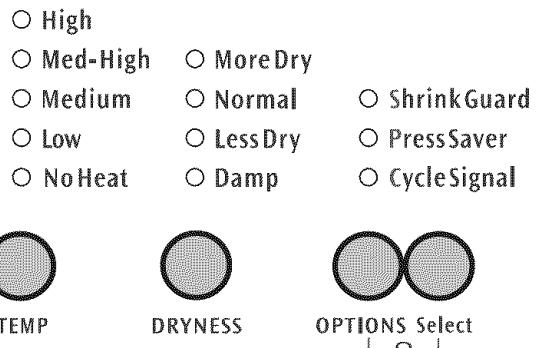


# DRYER OPERATING INSTRUCTIONS

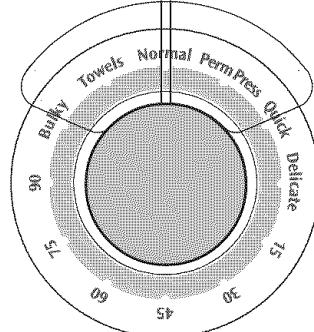

## Before Operating Your Dryer

**Read your dryer Owner's Guide.** It has important safety and warranty information. It also has many suggestions for best drying results.

**WARNING** To reduce the risk of fire, electric shock or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your dryer Owner's Guide before operating this appliance.

### Operating Steps

Read "Drying Procedures" in your Owner's Guide. It explains these operating steps in detail.

1. Prepare items for drying.
2. Check that lint filter is clean and in place.
3. Load the dryer. If desired, add a dryer fabric softener sheet. Close the door.
4. Select the appropriate cycle and settings for each load.
- Turn the Cycle Selector knob to select the cycle. The estimated drying time will be displayed.
- Suitable drying temperature, dryness level and options will automatically be indicated for each cycle. To change the temperature and dryness level, press TEMP and DRYNESS until the desired selections are made.
- To select an option, press OPTIONS until the indicator for a desired option flashes and press Select. Follow the same steps to delete an option.
- If a dryness level or option is not available for a cycle, it will not light.
- Changes made to the cycle will automatically be remembered the next time that cycle is selected.

- See the "Dryer Settings Chart" for more details.
- 5. Press START to begin the cycle.
- To pause the cycle or change settings, press Pause/Cancel once. "PAU" will be displayed alternately with the estimated drying time. To resume the cycle, press START.
- To stop or change the cycle, press Pause/Cancel twice.
- 6. A signal will sound at the end of the cycle and periodically during Press Saver when the Cycle Signal option is selected. When the cycle ends, remove items immediately and hang or fold.
- 7. Clean the lint filter after every load. The Clean Lint Filter indicator will light at the end of the cycle as a reminder.

## Cycle Selection

Turn the Cycle Selector knob to the desired cycle. For best results, follow the fabric care label instructions on items to be dried. To change the selection after the cycle has begun, press Pause/Cancel twice, select a new cycle and press START. Just turning the knob to another selection will not change the cycle. The signal will beep and the status lights will flash, but the original cycle will continue.

### Auto Dry

Auto Dry cycles take the guesswork out of drying time. Loads dried using the Towels, Normal, Perm Press and Delicate cycles will dry automatically at the selected temperature to the desired dryness level.

The dryer uses sensing bars to sense the moisture level of the load as it tumbles through heated air. Auto Dry cycles save time and energy and protect fabrics. The estimated drying time will be displayed for about 5 minutes. Then the outside of the display will light up in a circular track to indicate the drying time is automatically being determined by the sensors. When the load has reached the selected dryness level, it will continue to tumble, unheated, during a Cool Down period. This helps reduce wrinkling and makes items easier to handle during unloading. The estimated Cool Down time will be displayed.

Drying time varies depending on size and dampness of load and fabric type. If the load is too small or almost dry, the sensing bars may not detect enough moisture to continue the cycle and the cycle may end after a few minutes. Select a Timed Dry setting to dry such loads.

Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

### Towels

Select this Auto Dry cycle for towel loads.

### Normal

Select this Auto Dry cycle for cotton items.

### Perm Press

Select this Auto Dry cycle for cottons and blends with a no-iron finish.

### Delicate

Select this Auto Dry cycle for knits and delicate items.

## Cycle Selection (Con't)

### Quick

Select this cycle to quickly dry a small load made up of just a few items. It provides approximately 20 minutes of tumbling followed by a 10-minute cool down period.

### Bulky

Select this cycle to dry a comforter, blanket, sleeping bag or similar item. Cool Down is approximately 10 minutes.

### Timed Dry

To manually select the drying time for any load, turn the knob to a numbered setting. Drying times from 15 to 90 minutes are available in 15-minute increments. You will not be able to select a cycle or dryness level. Timed Dry is recommended when using the No Heat option.

**Note:** To change cycles, press Pause/Cancel twice.

**WARNING** To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastic, or similarly textured, rubber-like materials. Use the No Heat setting only.

## Cycle Settings

Appropriate drying temperature, dryness level and options will automatically be displayed for each cycle. The TEMP, DRYNESS and OPTIONS settings can be changed before the cycle is started. Those adjustments will automatically be remembered each time that cycle is selected. If a temperature, dryness level or option is not recommended for a cycle, the indicator will not light. If changes are attempted after the cycle starts, the status lights will blink, the signal will beep and "Err" will be displayed. To change a setting after the cycle starts, press Pause/Cancel **once**, adjust the setting and press START to resume the cycle. See the "Dryer Settings Chart" for more details.

## Drying Temperature

For best results, follow the fabric care label instructions on items to be dried. To change the drying temperature, press TEMP to scroll to the desired heat. To protect your wardrobe, not all temperatures are available with every cycle.

**High** heat is recommended for sturdy fabrics.

**Medium High** heat is recommended for most cotton fabrics.

**Medium** heat is recommended for wrinkle free, permanent press and lightweight fabrics.

**Low** heat is recommended for delicate fabrics.

**No Heat** should only be used with a Timed Dry setting to dry items containing feathers, down, foam rubber, plastics or rubber-like materials; to freshen clothing, pillows or blankets; or to dust draperies.

**Note:** Using No Heat in any Auto Dry cycle will result in long drying times and /or wet loads at the end of the cycle.

## Dryness Level

To change the dryness level, press DRYNESS until the desired selection is made. Select **Normal** for most loads.

Occasionally a load may seem too damp or over-dried at the end of the cycle. To increase drying time for similar loads in the future, select **More Dry**. For loads requiring less drying time, select **Less Dry**.

Select **Damp Dry** for items you wish to partially dry before hanging or ironing.

**Note:** To prevent over-drying, not every dryness level is available with every cycle.

## Options

To select an option, press OPTIONS until the indicator for the desired option flashes, then press Select. If an option is not available for a cycle, the indicator will not light. Follow the same steps to delete an option.

The **Cycle Signal** will sound at the end of the cycle and periodically during Press Saver.

Select **Shrink Guard** to lower the initial drying temperature to protect fabrics from overdrying.

Select **Press Saver** if the dried load might not be removed promptly at the end of the cycle. The dry load will continue tumbling without heat for 30 minutes to help reduce wrinkling. When the Cycle Signal is selected, a beep will be heard periodically. The load may be removed any time during Press Saver.

## Dryer Features

### (Control Lock)

To avoid having someone accidentally start or stop the washer, press OPTIONS and Select at the same time and hold for about 10 seconds until the  (Control Lock) lights up. "LOC" will be displayed alternately with the estimated cycle time. Turning the Cycle Selector knob or pressing any button will produce flashing indicator lights and/or beeping. To unlock the controls, press and hold OPTIONS and Select for about 10 seconds.

### Status Lights

The following indicators may be lighted during the cycle:

- Drying
- Cool Down
- Press Saver
- Clean Lint Filter
-  (Control Lock)

## DRYER SETTINGS CHART

AVAILABLE CYCLE SETTINGS - These temperatures, dryness levels and options are available with the following cycles:

	Towels	Normal	Perm Press	Delicate	Quick	Bulky	Timed Dry
<b>Estimated drying time ***</b>	60 minutes	50 minutes	40 minutes	20 minutes	30 minutes	45 minutes	15 to 90 minutes
<b>Temperatures</b>							
High	* ✓	✓			✓		✓
Medium-High	✓	* ✓	✓		✓	✓	* ✓
Medium		✓	* ✓	✓	* ✓	* ✓	✓
Low		✓	✓	* ✓	✓	✓	✓
No Heat	**	**	**	**			✓
<b>Dryness Level</b>							
More Dry	✓	✓					
Normal Dry	* ✓	* ✓	* ✓	✓			
Less Dry		✓	✓	* ✓			
Damp Dry		✓	✓	✓			
<b>Options</b>							
Shrink Guard		✓	✓	* ✓			✓
Press Saver		✓	* ✓	* ✓	✓	✓	✓
Cycle Signal	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓

\* Factory setting

✓ Available settings

\*\* Not recommended

\*\*\* Estimated cycle duration is based on normal dryness level and factory settings.





ARRANGEMENTS DISPONIBLE DE CYCLE - les ces températures, niveaux de sécheresse et options sont disponibles avec les cycles suivants:

	Serviettes (Towels)	Volumineux (Bulky)	Normal	Repassage Permanente (Perm Press)	Rapide (Quick)	Délicat (Delicate)	Sécharge Minuté (Timed Dry)
Durée Estimée de Cycle **	60 minutes	45 minutes	50 minutes	40 minutes	30 minutes	20 minutes	15 to 90 minutes
<b>Températures</b>							
La Haute (High)	* ✓				✓		✓
La Milieu Haute (Medium High)	✓	✓	* ✓	✓	✓		* ✓
Le Milieu (Medium)		* ✓	✓	* ✓	* ✓	✓	✓
Le Bas (Low)		✓	✓	✓	✓	* ✓	✓
San Chaleur (No Heat)	**		**	**		**	✓
<b>Niveau de Sécheresse</b>							
Plus Sec (More Dry)	✓	-	✓				
Normal Sèchent (Normal Dry)	* ✓		* ✓	* ✓		✓	
Moins Sec (Less Dry)			✓	✓		* ✓	
Sec Humide (Damp Dry)			✓	✓		✓	
<b>Options</b>							
Garde de Rétrécissement (Shrink Guard)			✓	✓		✓	✓
Gardi Pli (Press Saver)		✓	✓	* ✓	✓	* ✓	✓
Signal Sonore du Cycle (Cycle Signal)	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓	* ✓

\* Arrangement d'usine    ✓ Cycles disponibles    \*\*non recommandé

\*\*\*La durée estimée de cycle est basée sur les arrangements normaux de niveau et d'usine de sécheresse.