



Use and Care Guide

Spacemaker™ Dryer

Contents

Accessory Kits	4	Problem Solver	9, 10
Appliance Registration	2	Safety Instructions	3, 4
Automatic Drying	7	Sorting	5
Care and Cleaning	8	Special Drying Instructions	8
Consumer Services	11	Timed Drying	7
Controls Setting Guide	6, 7	User Maintenance Instructions	8
Dryer Exhaust	8	Warranty	Back Cover
Energy-Saving Tips	4		
Extra Care Feature	7		
Fabric Softeners	4		
Knits Drying Tips	7, 8		
Lint Filter	6		
Loading	5-7		
Model and Serial Numbers	2		
operating Instructions	6, 7	GE Answer Center®	
Perm. Press Drying Tips	7, 8, 10	800.626.2000	

Models **DDP1370G**
DDP1375G
DDP1380G

Help us help you...

Before using your dryer, read this book carefully.

It is intended to help you operate and maintain your new dryer properly.

Keep it handy for answers to your questions.

If you don't understand something or need more help, write (include your phone number):

Consumer Affairs
GE Appliances
Appliance Park
Louisville, KY 40225

Write down the model and serial numbers.

You'll find them on a label on the front of the dryer behind the door.

These numbers are also on the Consumer Product Ownership Registration Card that came with your dryer. Before sending in this card, please write these numbers here:

Model Number

Serial Number

Use these numbers in any correspondence or service calls concerning your dryer.

If you received a damaged dryer...

Immediately contact the dealer (or builder) that sold you the dryer.

Save time and money. Before you request service . . .

Check the Problem Solver on pages 9 and 10. It lists causes of minor operating problems that you can correct yourself.

FOR YOUR SAFETY

If you smell gas:

1. Open windows.
2. Don't **touch** electrical switches:
3. Extinguish any open flame.
4. Immediately call your **gas** supplier.

***Don't turn electric switches on or off because sparks may ignite the gas.**

FOR YOUR SAFETY

Do not store or use gasoline or other flammable **vapors** and liquids in the vicinity of this or **any** other appliance.

If you need service

To obtain service, see the Consumer Services page in the back of this book.

We're proud of our service and want you to be pleased. If for some reason you are not happy with the service you receive, here are three steps to follow for further help.

FIRST, contact the people who serviced your appliance. Explain why you are not pleased. In most cases, this will solve the problem.

NEXT, if you are still not pleased, write all the details-including your phone number—to:

Manager, Consumer Relations
GE Appliances
Appliance Park
Louisville, Kentucky 40225

FINALLY, if your problem is still not resolved, write:

Major Appliance
Consumer Action Panel
20 North **Wacker** Drive
Chicago, Illinois 60606

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance.

WARNING—To reduce the risk of fire, electric shock, or injury to persons when using this appliance, follow basic precautions, including the following:

• Use this appliance **only for its intended purpose** as described in this Use and Care Book.

• This dryer must be properly **installed** and located in accordance with the **Instigation Instructions** before it is used. If you did not receive an Installation Instructions sheet with your dryer, you can obtain one by contacting the service location nearest you.

—Properly ground to conform with all governing codes and ordinances. Follow details in **Installation Instructions**.

—Locate where the temperature is above **50°F (10°C)** for satisfactory operation of the dryer control system. Do not install or store the dryer where it will be exposed to the weather.

—Connect to a properly rated, protected and **sized** power-supply circuit to avoid electrical overload.

—Exhausting to the outside is **STRONGLY RECOMMENDED** to prevent **large** amounts of moisture and lint from being blown into the room. **Carefully** follow the Exhausting Details in the Installation Instructions. If your dryer is *not* exhausted to the outside, see special instructions on page 8.

• When disconnecting this appliance pull by the plug rather than the cord to avoid damage to the cord or junction of cord and plug. Make sure that the cord is located so that it will not be stepped on, tripped over or otherwise subjected to damage or stress.

• Do not repair or replace any part of the **appliance** or attempt any servicing **unless** specifically recommended in this Use and Care Book or in published user-repair instructions that you understand and have the skills to carry out.

To minimize the possibility of a fire hazard.

• Do not use heat to dry articles containing rubber, plastic, or similar materials (such as padded bras, tennis shoes, galoshes, bath mats, rugs, bibs, baby pants, plastic bags, etc.) as these materials may melt or burn. Also, some rubber materials, when heated, can under certain circumstances produce fire by spontaneous combustion.

• Garments labeled “Dry Away From Heat” (such as life jackets containing Kapok) must not be put in your dryer.

• **Do not wash** or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as gasoline, degreasers, drycleaning solvents, kerosene, etc.) which may give off vapors that could **ignite** or explode. Do not use or store such substances **on/or around** your washer and/or dryer **during** operation.

• Any article on which you have used a cleaning solvent, or which contains flammable materials (such as cleaning cloths, mops, towels used in beauty salons, restaurants or barbershops, etc.) must not be placed in or near the dryer until all traces of these flammable liquids or solids and their fumes have been

removed. There are many highly flammable items used in homes such as: acetone, denatured alcohol, gasoline, kerosene, some household cleaners, some spot removers, turpentine, waxes, wax removers and products containing petroleum distillates.

• Clean the lint filter before each load to prevent lint accumulation inside the dryer or in the room.

DO NOT OPERATE THE DRYER WITHOUT THE LINT FILTER IN PLACE.

• Keep area around and underneath your appliance free from the accumulation of combustible materials, such as lint, paper, rags, chemicals, etc.

• Do not store items that may burn or melt (such as clothing, paper material, plastics or plastic containers, etc.) on top of the dryer during operation.

• The interior of the machine and the exhaust duct connector inside the dryer should be cleaned periodically by a qualified individual.

• Exhaust duct (see installation instructions). Use only metal duct inside dryer or for exhausting dryer to the outside.

To minimize the possibility of injury.

• **Never reach** into the dryer while the drum is moving. Before loading, unloading or adding clothes, wait until the drum has completely stopped.

(continued next page)

IMPORTANT SAFETY INSTRUCTIONS

(continual)

• **Close supervision is necessary if this appliance is used by or near children. Do not allow children to play inside, on or with this appliance or any discarded appliance. Dispose of discarded appliances and shipping or packing materials properly. Before discarding a dryer, or removing from service, remove the door of the drying compartment.**

• **Keep** all laundry aids (such as detergents, bleaches, fabric softeners, etc.) out of the reach of children, preferably in a locked cabinet. Observe **all** warnings on container labels to avoid personal injury.

• **Keep** the floor around your appliances clean **and** dry to reduce the possibility of slipping.

• **Do not dry** fiberglass **articles** in your dryer. Skin irritation could result from the remaining glass particles that may be picked up by clothing during **subsequent** dryer uses.

• **The** laundry process can reduce the **flame retardancy** of fabrics. To avoid such a result, the garment **manufacturer's** care instructions should be followed very carefully.

• Never climb on or stand on the dryer top or door.

• **Do not tamper with controls.**

• **To minimize** the possibility of electric shock, unplug this **appliance** from the power-supply before attempting any maintenance or cleaning (except the **removal** and cleaning of the lint **filter**). **NOTE:** Turning the Cycle Selector knob to the **OFF** position does **NOT** disconnect the appliance from the power-supply.

• Do not operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.

Dryer-applied fabric softeners or anti-static conditioners

You may wish to soften your laundered fabrics or reduce the static electricity in them. We recommend you use either a fabric softener in the wash cycle, according to the manufacturer's instructions for those products, or try a dryer-added product for which the manufacturer gives written assurance on the package that their product can be safely used in your dryer.

Service or performance problems caused by the use of these products are the responsibility of the manufacturers of those products and are not covered under the warranty of this appliance.

SAVE THESE INSTRUCTIONS

Energy-Saving Tips

• Sort clothes by weight so that you won't have to run an extra cycle for one or two heavier, slower-drying items. See page 8.

• Do not overload dryer. For efficient drying, clothes need to tumble freely.

• Use Automatic Drying Cycle (on models so equipped) whenever possible to help prevent over-drying and save energy.

• To help prevent need for ironing, use **Perm Press** or **Knits Cycle**. Remove garments immediately at end of drying cycle and place on hangers.

• Dry your clothes in consecutive loads. Using a "warm" dryer will save energy.

• Clean dryer lint filter each time you dry.

• Clean dryer exhaust **ducting** at least once a year. A partially clogged exhaust can lengthen drying time.

Optional Accessories

Accessory Kits are available for installing the dryer on top of the washer or in a rack above the washer. The dryer may also be mounted directly on a wall. See your dealer for details.


How to Sort Clothes for Drying

Normally, if you sort clothes correctly for washing, you will have properly sorted drying loads.

Here are additional suggestions for good dryer load make-up:

Sort by surface texture

Separate

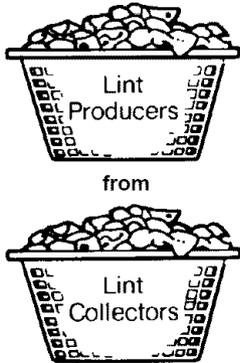


Lint Reducers such as terry toweling and chenille give up lint.

Lint Collectors such as man-made fibers and napped fabrics like velveteen and corduroy attract lint. These must be dried separately.

Sort by fabric


Separate

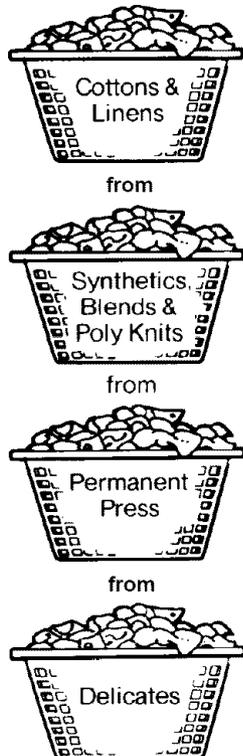

In addition to sorting to reduce lint collection, it is recommended that fabrics of similar construction be dried together whenever possible.


Sort by color

Separate

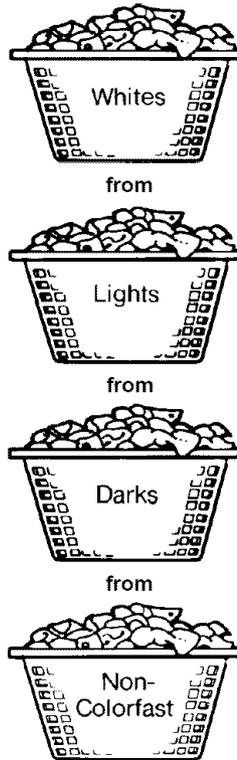

Sort by weight

Separate

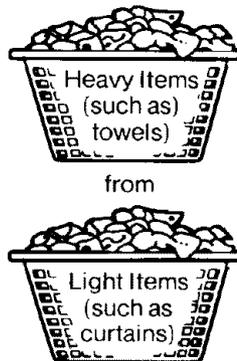


For Special Drying Instructions see page 8.

How to load your dryer


For best results, dry only articles of the same or similar type fabric in a single load. Never overload the dryer. The drum should be no more than 1/2 full of wet articles. Overloading prolongs drying time and produces uneven drying.

Operating Instructions for Model DDP1375G and DDP1370G (120V)

WARNING—To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** before operating this appliance.

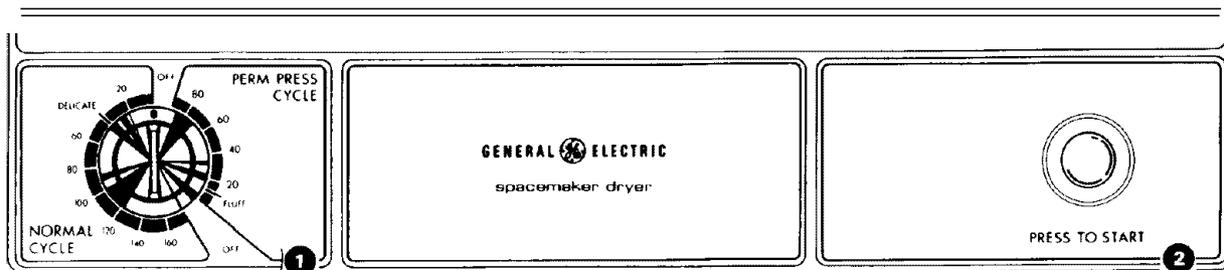

Model DDP1375G

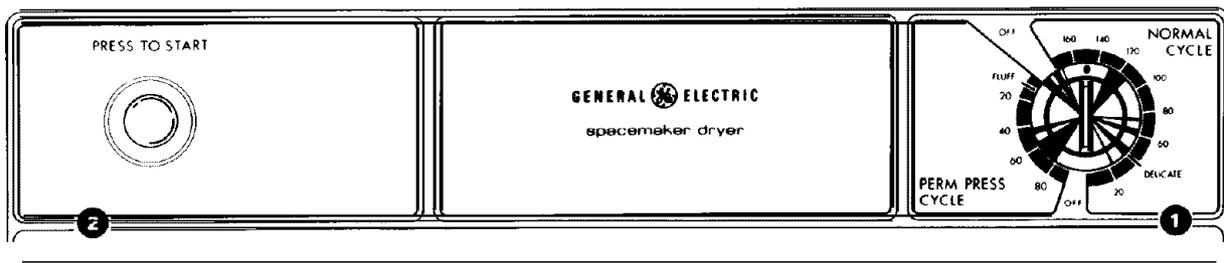

Model DDP1370G

Loading

- Load clothes into dryer following instructions on page 5. If you do mix various types of fabrics in your load, set the controls for the lighter-weight fabrics and remove when dry. Reset the controls for the remaining heavier fabrics.

- Clean lint filter. See below.
- Close door. Door must be closed before dryer will operate.

Set the Controls

See the Controls Setting Guide below.

1 Turn Cycle Selector to desired cycle and select correct drying time for load size and type.


2 Push START button momentarily to start dryer. (Opening door during operation stops the dryer. To re-start, close the door and push START button again.)

Controls Setting Guide

Cycle Setting	NORMAL CYCLE			PERM PRESS CYCLE			
		Large Load	Med. Load	Small Load	Delicate Setting (up to 40 min.)	60 min.	40 min.
Fabric	Cottons & Linens			Delicates, Sheers	Cottons, Damp Dried for Ironing	Permanent Press, Synthetics & Blends	Plastics, Rubber Dewrinkling

The times **suggested** are to be followed as a guide. You may find that best results are obtained for some of your fabrics by setting times to either side of these recommendations.

Clean the lint filter before drying every load.

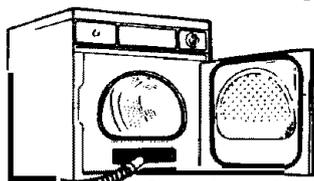

Clean the lint filter by putting your moistened fingers at one corner of the filter and wiping in a sideways motion all the way across to the other corner. Periodically remove

and insert the suction hose from a vacuum cleaner into the opening. Do not operate the dryer without the lint filter in place.


SHRINKAGE, KNITS

• **Relaxation shrinkage** can occur in fabrics that have been improperly stretched and elongated by the **relaxation**. When this occurs, garment maybe-pressed back into the shape after each wash and dry cycle.

• **Progressive or delayed shrinkage** is caused when starch or sizing (in some fabrics) is gradually removed by laundering. Maybe noticed in older garments that have been laundered many times without previous shrinkage. Treat as for Relaxation Shrinkage above.

Operating Instructions for Model DDP1380G (240V)

WARNING—To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** before operating this appliance.

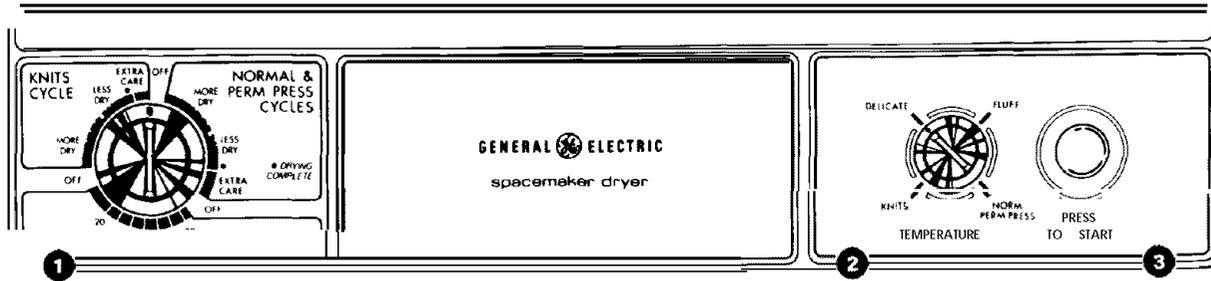

Loading

- Load sorted clothes into dryer following instructions on page 5.
- Clean lint filter. See page 6.
- Close door. Door must be closed before dryer will operate.

Set the Controls

See Controls Setting Guide below.

- 1 Turn Cycle Selector to desired cycle.
- 2 Turn Temperature control dial to appropriate setting.

- 3 Push START button momentarily. (Opening door during operation stops the dryer. To re-start, close the door and push START button again.)

Controls Setting Guide

Cycle Setting	AUTOMATIC CYCLES		TIMED CYCLES				
	Normal & Permanent Press	Knits	3040 min.	40-W min.	20 min.	Time Desired	
Fabric	Cottons & Linens	Permanent Press	Synthetic Knits & Blends	Delicates, Sheers	Avg. Load of Mixed Cottons	Cottons (Damp Dried for Ironing)	Plastics, Rubber Dewrinkling
Temperature Setting	Normal/Perm Press (High Heat)		Knits (Med. Heat)	Delicate (Low Heat)	Normal/Perm Press (High Heat)		Fluff (No Heat)

The times suggested above are to be followed as a guide. You may find that best results are obtained for some of your fabrics by setting times to either side of these recommendations.

Dryness selections guide for the automatic cycles

Set to Middle Position

• For most normal loads.




Set toward MORE DRY

- For loads that include heavyweight fabrics.
- If you desire to remove more moisture.




Set toward LESS DRY

- For lightweight fabric loads.
- If you desire to remove less moisture.

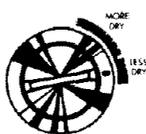

Extra-Care Cycles Minimize Wrinkle-Setting

When the Cycle Selector reaches *, the drying cycle is complete. Clothes can be removed at this point or at any time during the EXTRA CARE cycle. Following the drying cycle, EXTRA CARE automatically provides no-heat tumbling to minimize wrinkling.

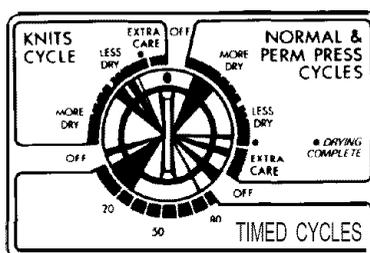

Polyester Knits & Perm Press Drying Tips

• Do not overload—Garments being dried or dewrinkled should tumble freely.

• Remove clothes immediately—To help prevent wrinkling, remove from the dryer immediately at the end of the drying cycles.

• Place on hangers—Permanent Press and Polyester Knit garments look best if placed on hangers after drying.

How Timed and Automatic Drying Differ

Automatic drying—The Automatic Dry Control system continually senses air temperature in dryer drum. Wet laundry keeps this air cool. When drum air is warm enough, heat turns off. When the air cools, heat turns back on. This on and off cycling may happen a number of times (depending on the fabric, load size and Cycle Selector setting). The Cycle Selector advances (when the heat is off) until it automatically turns dryer off.

Timed drying—You select the number of minutes you wish the dryer to run and it turns off at the end of this time period.

Special Drying Instruction

Save and refer to Garment Manufacturer's Drying Instructions

Load	Special Instructions
Permanent Press	Do not overload dryer; clothes should tumble freely. Remove as soon as dryer stops; place clothes on hangers to minimize wrinkling .
Polyester Knits	Do not overload dryer; clothes should tumble freely. Remove as soon as dryer stops; place clothes on hangers to minimize wrinkling .
Baby Clothes—Sturdy: Diapers, Nightgowns, Shirts, Pads, Sheets, Receiving Blankets, Coveralls.	Important: If children's sleepwear is made of Modacrylic, dry only on Low Heat/Timed Cycle or Delicate Cycle. High Heat or excessive drying can reduce the flame retardancy of these fabrics. Check manufacturer's drying instructions.
Baby Clothes—Delicate	See above instructions.
Blankets—Wool, Part Wool, Cotton	Follow manufacturer's instructions. Do only one blanket at a time. Partially dry in your dryer for no longer than 20 minutes. Remove while still damp and finish drying on flat surface.
Plastics—Aprons, bibs, tablecloths, chair covers, bowl covers, curtains.	Use Fluff (No Heat)

Care and Cleaning

USER MAINTENANCE INSTRUCTIONS

- To keep your dryer looking good, wipe cabinet with a damp cloth. Occasionally wash it with mild soap and water and then apply a light coat of appliance polish to help preserve the finish.
- Clean the lint filter before every load. See page 6.
- Keep area around and underneath your appliance free from the accumulation of combustible materials, such as lint, paper, rags, chemicals, etc.
- Keep the floor around your appliances clean and dry to reduce the possibility of slipping.
- Do not store dryer where it will be exposed to the weather.
- If your dryer is exhausted to the outside, inspect and clean dryer exhaust ducting at least once a year.


How to reduce the possibility of a fire hazard, if your dryer is not exhausted to the outside:

A clothes dryer produces combustible lint. When the dryer is not exhausted to the outside, this lint is more apt to accumulate in and near the dryer, which could create a fire hazard.

It is imperative to keep the laundry area (around the washer and dryer) **clean** and free from the accumulation of lint, paper, rags, etc. Clean this area regularly.

Also inspect the dryer's blower compartment at least once a year and remove accumulated lint as follows:

1. Unplug the dryer.
2. Remove the access panel.
3. Clean out any lint that may have accumulated. Wipe or vacuum, being careful not to disturb any electrical or mechanical connections.

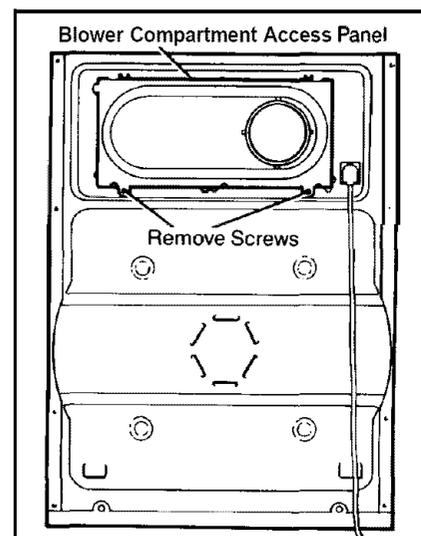

With **dryer unplugged**, remove two **Phillips-head screws** at bottom of blower **compartment** access panel. **Tip bottom of panel** out until clips slip out. To replace, slip top of panel up until clips are secured. Press bottom of panel in and replace **screws**.



Questions? Use This Problem Solver

PROBLEM	POSSIBLE CAUSE AND REMEDY
DRYER WON'T START	<ul style="list-style-type: none">• Dryer unplugged. Make sure cord is plugged in.• No power to dryer. Check fuses and circuit breakers to make sure dryer is getting current. Automatic electric dryers may use two.• Controls improperly set. Make sure timer is set and START control is turned.• Dryer door is open. Make sure dryer door is securely closed. Dryer will not run with door open. <p>If dryer still does not operate, call for service.</p>
CLOTHES TAKE TOO LONG TO DRY	<ul style="list-style-type: none">• Controls improperly set. Check all controls to make sure they are correctly set for the load you wish to dry.• Failure to clean lint filter. Remove and clean lint filter each time dryer is used. Periodically clean area under lint filter with vacuum cleaner.• Improper ducting. Make sure dryer is ducted in accordance with Instigation Instructions.• Obstruction in exhaust ducting. Make sure ducting is clean and free of obstruction, and make sure damper in outside wall cap operates easily. If flexible ducting is used, be sure it is not kinked and is installed according to Instigation Instructions.• Blown fuses or tripped circuit breakers. Check household fuses or circuit breakers. Most electric dryers use two. It is possible for one to be blown or tripped, and the dryer still tumble without heat.• Improper sorting. Do not mix heavy, hard-to-dry items with lightweight articles.• Too many items in dryer. Dry only one washer load at a time. Do not combine loads.• Too few items in dryer. If drying only one article, add two more similar articles, even if dry, to ensure proper tumbling.• 120-volt operation. If your dryer is operating on 120-volt circuit, longer drying times could be normal. The drying on this circuit takes about three times as long as on a 240-volt circuit.• Excessively wet clothes. Check washer; it may be malfunctioning.

(continued next page)

The Problem Solver (continued)

PROBLEM	POSSIBLE CAUSE AND REMEDY
<p>WRINKLING IN PERMANENT PRESS AND “NO-IRON” ITEMS</p>	<p>. Leaving clothes in dryer after tumbling stops. Remove clothes immediately and place on hangers when dryer stops tumbling.</p> <ul style="list-style-type: none"> ● Too many items in dryer. Dry only one washer load at a time. Do not combine loads. ● Too few items in dryer. If drying only one article, add two or more similar articles, even if dry, to ensure proper tumbling. ● Improper sorting of load. Avoid laundering heavy Permanent Press items, such as work clothes, with lighter Permanent Press items such as shirts or blouses. Also, do not wash or dry Permanent Press items with ordinary items such as towels, bed linens, etc. ● Too many items in washer. Items must have room to move freely. Permanent Press loads should always be smaller than regular loads . . . no more than medium loads. ● Use of incorrect wash and dry cycles. Use Permanent Press Wash Cycle. This cycle provides a cool-down rinse to minimize wrinkling. Also, use Permanent Press Dry Cycle. ● Incorrect water level. Use large water level for Medium Load; medium level for Small Load. ● Washing repeatedly in water that is too hot for the fabric. Wash these fabrics in cool or warm water with plenty of detergent. <p>. Accumulation of lime scale due to use of carbonate detergents. If a non-phosphate detergent must be used, avoid the use of a carbonate-built detergent.</p> <ul style="list-style-type: none"> ● Failure to use fabric softener. Proper use of fabric softener will minimize wrinkling. <hr/> <p>To correct wrinkling—</p> <p>Steps to remove stubborn wrinkles:</p> <ol style="list-style-type: none"> 1. Retumble on “Permanent Press” setting with small load, 2. Rerinse and dry on “Permanent Press” setting. 3. Some wrinkles may remain, these wrinkles cannot be removed. * <p>*NOTE: If you follow good laundry procedures and Permanent Press clothes still come out wrinkled, the finish may not be good quality. Also, in permanent press synthetic/cotton blends, the cotton portion of the fabric can eventually wear away leaving only the synthetic. Since the cotton has a resin finish that imparts the memory, a loss or decrease of permanent press performance will result.</p>

**If you need more help.. call, toll free:
 GE Answer Center”
 800.6262000
 consumer information service**

We'll Be There


With the purchase of your new GE appliance, receive the assurance that if you ever need information or assistance from GE, we'll be there. All you have to do is call—toll-free!



In-Home Repair Service

800-GE-CARES
(800-432-2737)

AGE Consumer Service professional will provide expert repair service, scheduled at a time that's convenient for you. Many GE Consumer Service company-operated locations offer you service today or tomorrow, or at your convenience (7:00 a.m. to 7:00 pm. weekdays, 9:00 a.m. to 2:00 pm. Saturdays). Our factory-trained technicians know your appliance inside and out—so most repairs can be handled in just one visit.

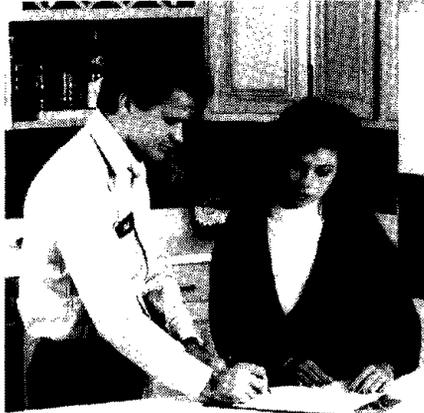

Service Contracts

800-626-2224

You can have the secure feeling that GE Consumer Service will still be there after your warranty expires. Purchase a GE contract while your warranty is still in effect and you'll receive a substantial discount. With a multiple-year contract, you're assured of future service at today's prices.

Parts and Accessories

800-626-2002

Individuals qualified to service their own appliances can have needed parts or accessories sent directly to their home, free of shipping charge! The GE parts system provides access to over 47,000 parts... and all GE Genuine Renewal Parts are fully warranted. VISA, MasterCard and Discover cards are accepted.


User maintenance instructions contained in this booklet cover procedures intended to be performed by any user. Other servicing generally should be referred to qualified service personnel. Caution must be exercised, since improper servicing may cause unsafe operation.




GE Answer Center

800.626.2000

Whatever your question about any GE major appliance, GE Answer Center® information service is available to help. Your call—and your question—will be answered promptly and courteously. And you can call any time. GE Answer Center® service is open 24 hours a day, 7 days a week.

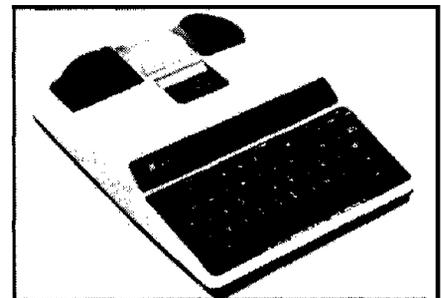

Telecommunication Device for the Deaf

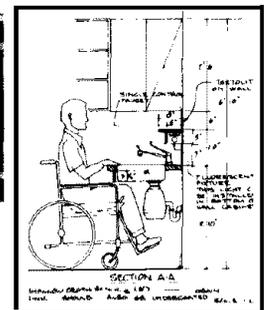

For Customers With Special Needs...

800.626.2000

Upon request, GE will provide Braille controls for a variety of GE appliance and a brochure to assist in planning barrier-free kitchen for persons with limited mobility. To obtain these items free of charge, call 800.626.2000.

Consumers with impaired hearing or speech who have access to a TDD or a conventional teletypewriter may call 800-TDD-GEAC (800-833-4322) to request information or service.

YOUR GE AUTOMATIC CLOTHES DRYER WARRANTY

Save proof of original purchase date such as your sales slip or cancelled check to establish warranty period.

WHAT IS COVERED

FULL ONE-YEAR WARRANTY

For one year from date of original purchase, we will provide, free of charge, parts and service labor in your home to repair or replace **any part of the dryer** that fails because of a manufacturing defect.

This warranty is extended to the original purchaser and any succeeding owner for products purchased for ordinary home use in the 48 mainland states, Hawaii and Washington, D.C. In Alaska the warranty is the same except that it is LIMITED because you must pay to ship the product to the service shop or for the service technician's travel costs to your home.

All warranty service will be provided by our Factory Service Centers or by our authorized Customer Care™ servicers during normal working hours.

Look in the White or Yellow Pages of your telephone directory for GENERAL ELECTRIC COMPANY, GENERAL ELECTRIC FACTORY SERVICE, GENERAL ELECTRIC-HOTPOINT FACTORY SERVICE or GENERAL ELECTRIC CUSTOMER CARE® SERVICE.

WHAT IS NOT COVERED

• Service trips to your home to teach you how to use the product.

Read your Use and Care material.

If you then have any questions about operating the product, please contact your dealer or our Consumer Affairs office at the address below, or call, toll free:

GE Answer Center™

800.626.2000

consumer information service

• Improper installation.

If you have an installation problem, contact your dealer or installer. You are responsible for providing adequate electrical, exhausting and other connecting facilities.

• Replacement of house fuses or resetting of circuit breakers.

• Failure of the product if it is used for other than its intended purpose or used commercially.

• Damage to product caused by accident, fire, floods or acts of God.

WARRANTOR IS **NOT** RESPONSIBLE FOR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.

Warrantor: General Electric Company

**If further help is needed concerning this warranty, write:
Manager—Consumer Affairs, GE Appliances, Louisville, KY 40225**

Part No. 113 D5497P195
Pub. No. 49-9689

DDP1370G
DDP1375G
DDP1380G