

SEARS


OWNER'S
MANUAL

MODEL NO.
315.111690

CAUTION:
Read and follow
ALL safety rules
and instructions
before operating
this equipment.

**SAVE THIS
MANUAL FOR
FUTURE REFERENCE**

Thank You for Buying
Craftsman Tools

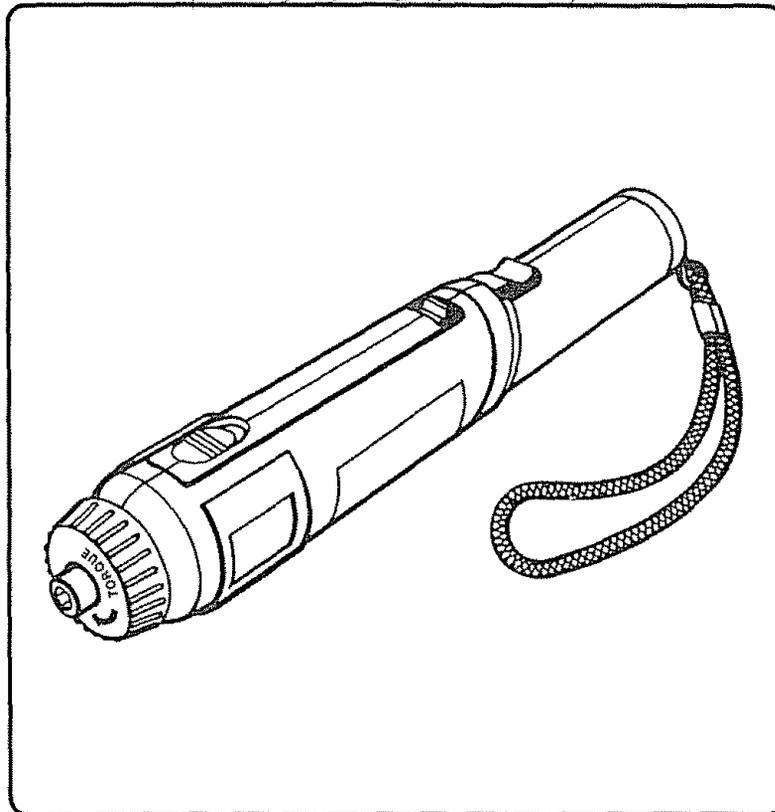

CRAFTSMAN[®]
Cordless Screwdriver
Two Speed / Reversible

Rules for Safe Operation
Warranty
Operation
Maintenance
Repair Parts

Sold by SEARS, ROEBUCK AND CO., Hoffman Estates, IL 60179 U.S.A.

RULES FOR SAFE OPERATION



WARNING:

Do not attempt to operate this tool until you have read thoroughly and understand completely all instructions, safety rules, etc. contained in this manual. Failure to comply can result in accidents involving fire, electric shock, or serious personal injury. Save owner's manual and review frequently for continuing safe operation, and instructing others who may use this tool.

READ ALL INSTRUCTIONS

1. **KNOW YOUR POWER TOOL.** Read owner's manual carefully. Learn its applications and limitations as well as the specific potential hazards related to this tool.
2. **GUARD AGAINST ELECTRICAL SHOCK** by preventing body contact with grounded surfaces. For example: Pipes, radiators, ranges, refrigerator enclosures.
3. **KEEP WORK AREA CLEAN.** Cluttered areas and benches invite accidents.
4. **AVOID DANGEROUS ENVIRONMENT.** Don't use power tool in damp or wet locations or expose to rain. Keep work area well lit.
5. **KEEP CHILDREN AND VISITORS AWAY.** All visitors should wear safety glasses and be kept a safe distance from work area. Do not let visitors contact tool or extension cord.
6. **STORE IDLE TOOLS.** When not in use tools should be stored in a dry and high or locked-up place - out of the reach of children.
7. **DON'T FORCE TOOL.** It will do the job better and safer at the rate for which it was designed.
8. **USE RIGHT TOOL.** Don't force small tool or attachment to do the job of a heavy duty tool. Don't use tool for purpose not intended - for example - A circular saw should never be used for cutting tree limbs or logs.
9. **WEAR PROPER APPAREL.** Do not wear loose clothing or jewelry that can get caught in tool's moving parts and cause personal injury. Rubber gloves and non-skid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair and keep it from being drawn into nearby air vents.
10. **ALWAYS WEAR SAFETY GLASSES.** Everyday eyeglasses have only impact-resistant lenses; they are **NOT** safety glasses.
11. **PROTECT YOUR LUNGS.** Wear a face mask or dust mask if operation is dusty.
12. **PROTECT YOUR HEARING.** Wear hearing protection during extended periods of operation.
13. **SECURE WORK.** Use clamps or a vise to hold work. It's safer than using your hand and it frees both hands to operate tool.
14. **DON'T OVERREACH.** Keep proper footing and balance at all times. Do not use on a ladder or unstable support.
15. **MAINTAIN TOOLS WITH CARE.** Keep tools sharp at all times, and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
16. **REMOVE ADJUSTING KEYS AND WRENCHES.** Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
17. **NEVER USE IN AN EXPLOSIVE ATMOSPHERE.** Normal sparking of the motor could ignite flammable liquids, gases, or fumes.
18. **KEEP HANDLES DRY, CLEAN, AND FREE FROM OIL AND GREASE.** Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products or any strong solvents to clean your tool.
19. **STAY ALERT.** Watch what you are doing and use common sense. Do not operate tool when you are tired. Do not rush.
20. **CHECK DAMAGED PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless indicated elsewhere in this instruction manual.



Look for this symbol to point out important safety precautions. It means attention!!! Your safety is involved.

RULES FOR SAFE OPERATION (Continued)

21. **DO NOT USE TOOL IF SWITCH DOES NOT TURN IT ON AND OFF.** Have defective switches replaced by an authorized service center
22. **DRUGS, ALCOHOL, MEDICATION.** Do not operate tool while under the influence of drugs, alcohol, or any medication.
23. **DRIVING SCREWS INTO ELECTRICAL WIRING IN WALLS, CEILINGS, OR OTHER AREAS CAN CAUSE THE SCREWDRIVER BIT OR COLLET TO BECOME ELECTRICALLY LIVE.** Do not touch metal parts when driving screws into a wall; grasp only the insulated handle(s) or plastic housing when using this tool. Make sure hidden electrical wiring, water pipes, and mechanical hazards are not in the path of the bit when driving screws into a wall.
24. **INSPECT FOR** and remove all nails from lumber before driving screws

IMPORTANT SAFETY RULES FOR BATTERY TOOLS

25. Battery tools do not have to be plugged into an electrical outlet; therefore, they are always in operating condition. Be aware of possible hazards when not using your battery tool or when changing accessories
26. **USE ONLY THE CHARGER PROVIDED WITH YOUR BATTERY TOOL.** Do not substitute any other charger. Use of another charger could cause batteries to explode causing possible serious injury.
27. **DO NOT PLACE BATTERY TOOLS OR THEIR BATTERIES NEAR FIRE OR HEAT.** They may explode.
28. **DO NOT CHARGE BATTERY TOOL IN A DAMP OR WET LOCATION.**
29. Your battery tool should be charged in a location where the temperature is more than 50°F but less than 100°F.
Under extreme usage or temperature conditions, battery leakage may occur. If liquid comes in

contact with your skin, wash immediately with soap and water, then neutralize with lemon juice or vinegar. If liquid gets in your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention.

31. If carrying your battery tool at your side, make sure it is not running and your finger is not on the switch. Avoid accidental starting.
32. **SECURE WORK** before applying power. **NEVER** hold workpiece in your hand or across your legs.
33. **WHEN SERVICING USE ONLY IDENTICAL CRAFTSMAN REPLACEMENT PARTS.**

IMPORTANT SAFETY INSTRUCTIONS FOR CHARGER

34. **SAVE THESE INSTRUCTIONS.** This manual contains important safety and operating instructions for battery charger part number 999555-001.
35. Before using battery charger, read all instructions and cautionary markings in this manual, on battery charger, and product using battery charger.

36 **WARNING:**

To reduce risk of injury, charge only nickel-cadmium type rechargeable batteries. Other types of batteries may burst causing personal injury and damage.

37. Do not expose charger to rain or snow.
38. Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.
39. To reduce risk of damage to charger body and cord, pull by charger body rather than cord when disconnecting charger.
40. Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.

WARNING:



The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and a full face shield when needed. We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields, available at Sears Retail Stores.

RULES FOR SAFE OPERATION (Continued)

41. An extension cord should not be used unless absolutely necessary. Use of improper extension cord could result in a risk of fire and electric shock. If extension cord must be used, make sure:
- That pins on plug of extension cord are the same number, size and shape as those of plug on charger.
 - That extension cord is properly wired and in good electrical condition; and
 - That wire size is large enough for AC ampere rating of charger as specified below:

AWG Size of Cord/Length of Cord, Feet				
Feet	25	50	100	150
AWG	16	16	16	16

42. **DO NOT OPERATE CHARGER WITH A DAMAGED CORD OR PLUG.** If damaged, have replaced immediately by a qualified serviceman.
43. Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified serviceman.
44. Do not disassemble charger; take it to a qualified serviceman when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
45. To reduce risk of electric shock, unplug charger from outlet before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.
46. Do not use charger outdoors.
47. Disconnect charger from power supply when not in use.
48. **SAVE THESE INSTRUCTIONS.** Refer to them frequently and use them to instruct others who may use this tool. If you loan someone this tool, loan them these instructions also.



WARNING:

If any parts are missing, do not operate your screwdriver until the missing parts are replaced. Failure to do so could result in possible serious personal injury.



WARNING:

Do not allow familiarity with your screwdriver to make you careless. Remember that a careless fraction of a second is sufficient to inflict severe injury.

INTRODUCTION

CONGRATULATIONS AND THANK YOU FOR BUYING THIS CRAFTSMAN CORDLESS SCREWDRIVER. It has been designed, engineered and manufactured to provide you with Sears high standard of dependability, ease of operation, and operator safety. Properly cared for, it will give years of rugged, trouble-free performance.



CAUTION:

Carefully read through this entire owner's manual before using your new screwdriver. Pay close attention to the Rules For Safe Operation, Warnings and Cautions. If you use your screwdriver properly and only for what it is intended, you will enjoy years of safe, reliable service.

Your screwdriver has many features for making driving operations more pleasant and enjoyable. Safety, performance and dependability have been given top priority in the design of this screwdriver making it easy to maintain and operate.

SPECIFICATIONS:	
Collet	1/4 Inch
Motor	3.6 Volt DC
Charger Rating	120 Volts, 60 Hz, AC Only
No Load Speed	130 / 400 RPM
Switch	Two Speed - Reversible
Charger Rate	3-5 Hours
Maximum Torque	54 / 20 In. Lbs
* No. of #8 x 1-1/4-in. Screws Driven Per Charge	65
* These specifications represent the average number of screws driven into white pine using a fully charged screwdriver. Screwdriver will not reach full charge the first time it is charged. Allow several cycles (driving screws followed by recharging) for screwdriver to become fully charged.	

FULL ONE YEAR WARRANTY ON CRAFTSMAN CORDLESS SCREWDRIVER

If this Craftsman Cordless Screwdriver fails to give complete satisfaction within one year from the date of purchase, **RETURN IT TO THE NEAREST SEARS STORE IN THE UNITED STATES**, and Sears will replace it, free of charge.

If this cordless screwdriver is used for commercial or rental purposes, this warranty applies for only 90 days from the date of purchase.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., DEPT. 817WA, Hoffman Estates, IL 60179

TABLE OF CONTENTS

1. Rules for Safe Operation	2-4
A. Important Safety Rules For Battery Tools	3
B. Important Safety Instructions for Charger	3
2. Introduction and Product Specifications	5
3. Warranty and Table Of Contents	5
4. Operation	6-9
5. Accessories and Replacement Parts	10
6. Maintenance and Battery Removal	11
7. Parts Ordering / Service	12

OPERATION



WARNING:

Always wear safety goggles or safety glasses with side shields when operating tools. Failure to do so could result in objects being thrown into your eyes, resulting in possible serious injury.

KNOW YOUR SCREWDRIVER

See Figure 1.

Before attempting to use your screwdriver, familiarize yourself with all operating features and safety requirements.

STICK/PISTOL COMBINATION SCREWDRIVER

As shown in figure 1, your screwdriver has been designed so that it can be operated as a stick screwdriver or a pistol screwdriver

WRIST STRAP

See Figure 1


A wrist strap is provided to reduce the chances of dropping your screwdriver. Place one hand through the wrist strap when carrying tool.

CHARGING YOUR SCREWDRIVER

This tool has been shipped in a low charge condition to prevent possible problems. Therefore, you should charge it at least 5 hours prior to use

NOTE: Batteries will not reach full charge the first time they are charged. Allow several cycles (driving screws followed by recharging) for them to become fully charged.

If the charger does not charge your screwdriver under normal circumstances, return **both** the screwdriver and charger to your nearest Sears repair center for electrical check.

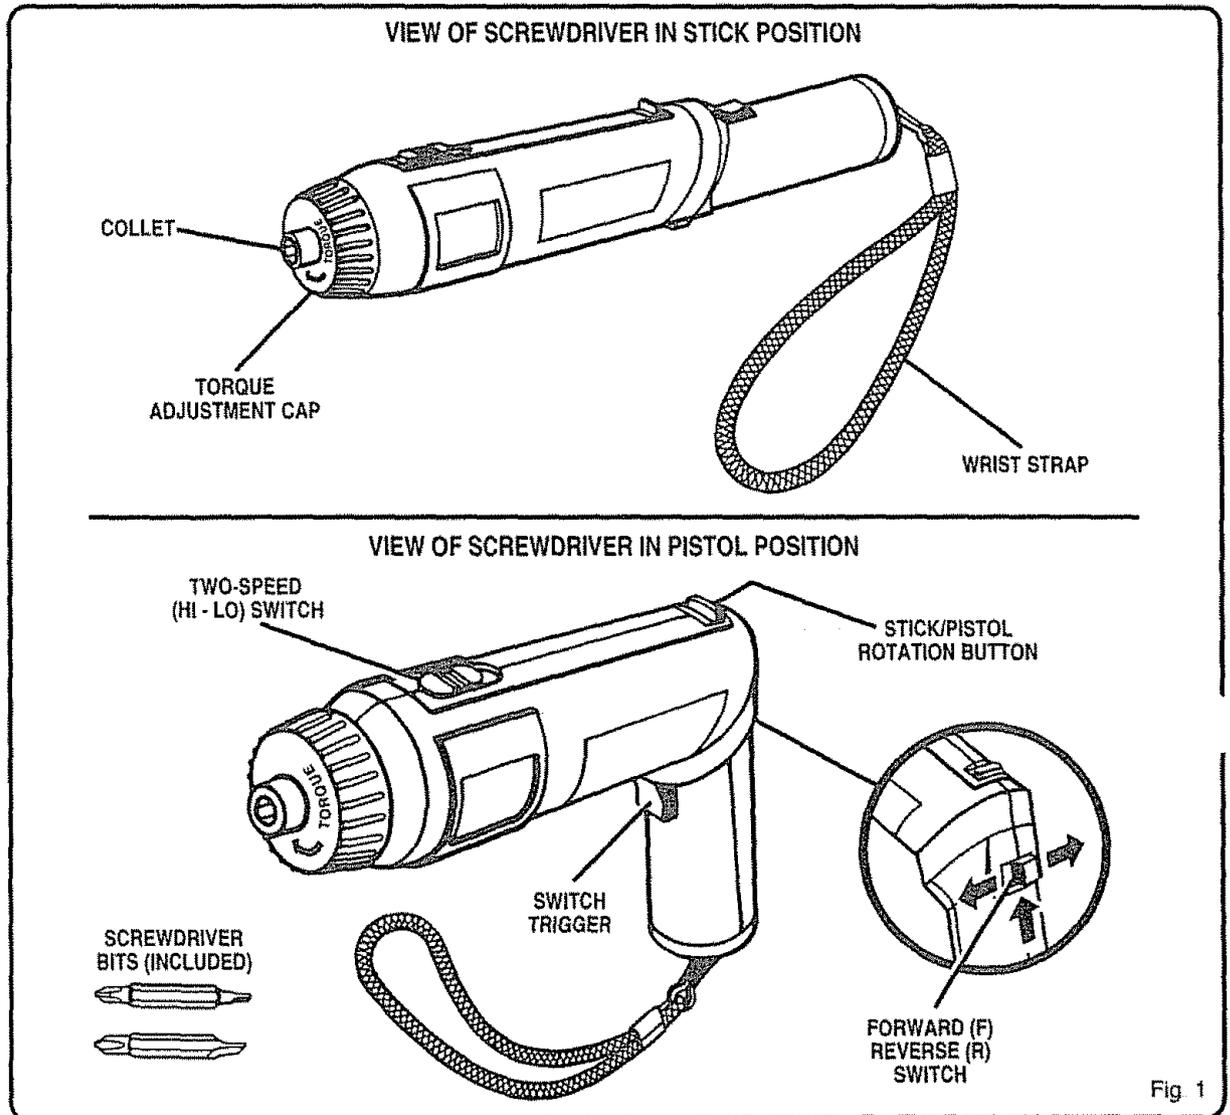

OPERATION

CHARGING STAND

See Figure 2

For storage convenience, a charging stand with bit storage has been provided with your screwdriver. It has the capacity for storing your screwdriver and two (2) bits which are also included with your screwdriver.

TO MOUNT CHARGING STAND

See Figures 2 and 3

- Locate close to an electrical outlet **NOTE:** Temporarily place your screwdriver in charging stand. Check to make sure it will not interfere with the charger or electrical outlet.
- Drill two (2) pilot holes then insert the two (2) wall anchors provided **NOTE:** Pilot holes should be 1-3/16 inches apart See Figure 3
- Position charging stand on wall aligning holes in charging stand with pilot holes
- Secure charging stand with the two (2) screws provided

TO CHARGE

- Screwdriver must be in stick position to be charged **NOTE:** Charging stand is designed only to accept screwdriver in stick position
- Place screwdriver in charging stand **NOTE:** Screwdriver must be in charging stand to be charged
- Insert charger plug into input jack making sure they are properly connected
- **Charger can be used with normal house voltage of 120 volts, 60 Hz, AC only.**
- Connect charger to power supply
- The charge indicator light (LED) indicator, which is located on the charging stand, will light up when charger is properly connected to power supply. This red light indicates your screwdriver is charging and will remain on until charger is disconnected from power supply
- After normal usage, a minimum of 3 to 5 hours of charging time is required to be fully charged
- **DO NOT** place charger in an area of extreme heat or cold. It will work best at normal room temperature


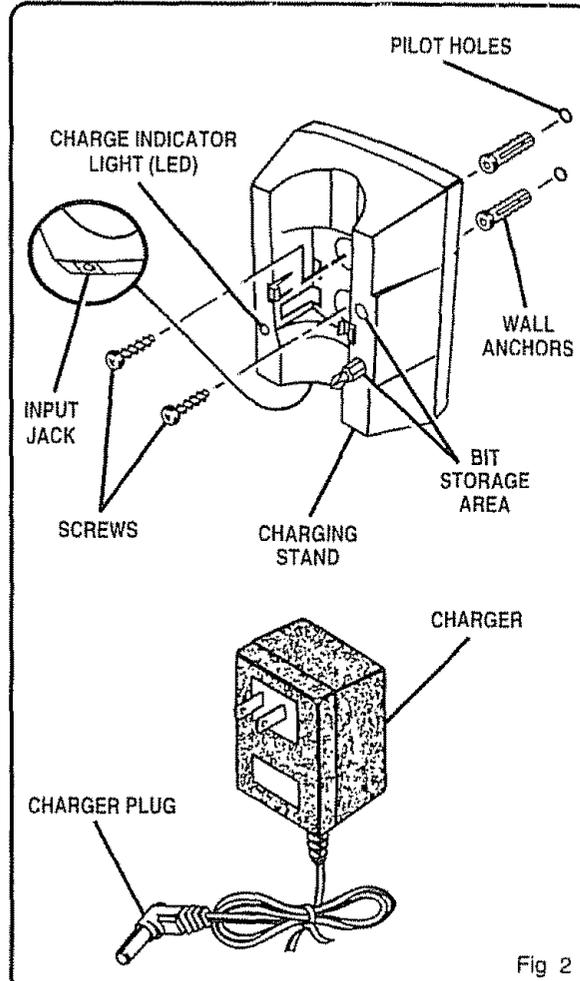


Fig 2

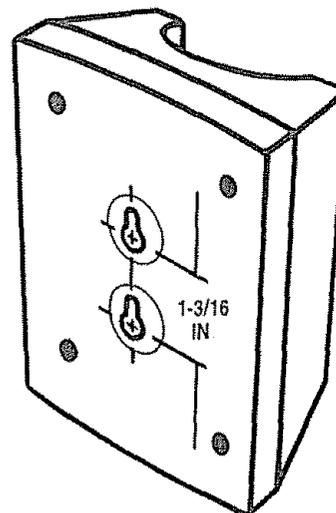

BACK SIDE OF CHARGING STAND

Fig 3

CAUTION:

Your screwdriver contains special high temperature batteries to help prevent battery damage when left on charge for extended periods of time. However, once the batteries become fully charged, we recommend that you unplug charger from power supply and disconnect it from screwdriver.

OPERATION

SWITCH

See Figure 4

To turn your screwdriver **ON**, depress switch trigger in the direction of the arrow in figure 4. To turn it **OFF**, release the switch trigger

TWO-SPEED (HI-LO) SWITCH

See Figure 5

Your screwdriver has been designed for two speed driving. A slide switch is located on top of your screwdriver to select either **HI** or **LO** speed. When using screwdriver in the **HI** speed setting, speed will increase and unit will have less power and torque. When using screwdriver in the **LO** speed setting, speed will decrease and unit will have more power and torque. Use **HI** speed for fast screwdriving applications and **LO** speed for high power and torque applications.

REVERSIBLE

See Figure 6

Your screwdriver is equipped with a Forward/Reverse Switch which allows you to change the direction of rotation of the bit. For driving or forward rotation, slide the switch to the forward (**F**) position. To reverse the bit direction, slide the switch to the reverse (**R**) position.

CAUTION:

To prevent gear damage, always allow bit to come to a complete stop before changing the direction of rotation or the two-speed (hi-lo) switch.

To stop your screwdriver, release switch trigger and allow your screwdriver to come to a complete stop.

SWITCH LOCK

See Figure 6

The switch trigger can be locked in the **OFF** position. This feature can be used to prevent the possibility of accidental starting when not in use. To lock switch trigger, place the forward/reverse switch in center position.

WARNING:

Battery tools are always in operating condition. Therefore, switch should always be locked when not in use or carrying at your side.

WARNING:

Always wear safety goggles or safety glasses with side shields when operating tools. Failure to do so could result in objects being thrown into your eyes, causing possible serious injury.

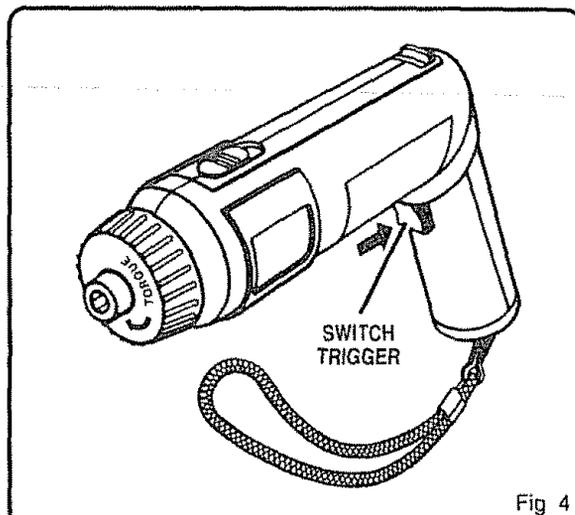


Fig 4

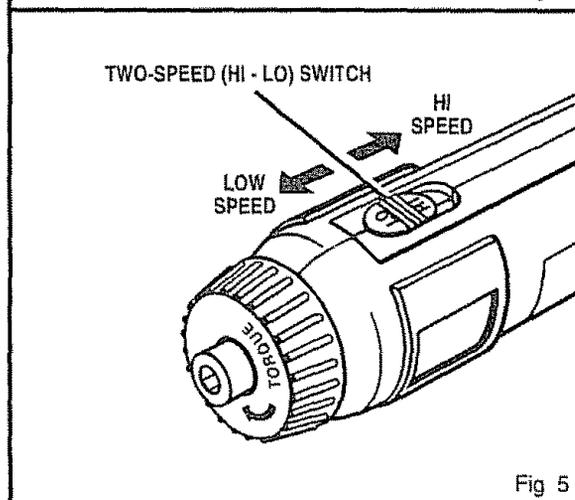


Fig 5

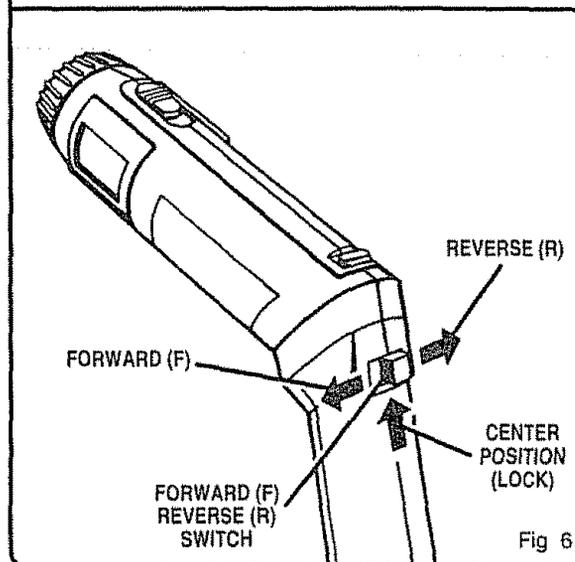


Fig 6

OPERATION

STICK / PISTOL COMBINATION SCREWDRIVER

Your screwdriver has been designed so that it can be used as a stick screwdriver or a pistol screwdriver. As shown in figure 7, a rotation button is located on the top of your screwdriver. To place your screwdriver in pistol position, hold it in normal operating position, push rotation button forward and rotate handle clockwise. To place your screwdriver in stick position, hold it in normal operating position, push rotation button forward and rotate handle counterclockwise.

COLLET

The collet on your screwdriver has been designed to accept 1/4 in hex bits. See Figure 8.

TO INSERT BIT

See Figure 8.

- Lock switch trigger by placing the forward/reverse switch in center position. See Figure 6.
- Insert bit into collet as far as possible.
- When finished using your screwdriver, remove bit from collet and place it in charging stand for storage. See Figure 2.

BITS INCLUDED WITH CORDLESS SCREWDRIVER

- Double-ended Bit (#1 Phillips and #5 Slotted)
- Double-ended Bit (#2 Phillips and #7 Slotted)

ADJUSTABLE TORQUE CLUTCH

(Tightening Power of Your Screwdriver)

See Figure 9.

When using your screwdriver for various driving applications, it becomes necessary to increase or decrease the power and torque in order to help prevent the possibility of damaging screwheads, threads, workpiece, etc. In general, power and torque should correspond to the difficulty of the screw to be driven. If torque is too high the screws may be damaged or broken.

NOTE: Your screwdriver has been shipped with the adjustable torque clutch set at the lowest torque setting.




TO ADJUST TORQUE

See Figure 9.

Locate arrow on torque adjustment cap.

- To increase torque, rotate torque adjustment cap in the direction of the arrow. When cap stops rotating, you have reached the highest torque setting. To decrease torque, rotate torque adjustment cap in the opposite direction of the arrow. When cap stops rotating, you have reached the lowest torque setting.

NOTE: Remember the two-speed feature (HI-LO) when setting torque. The amount of torque will vary depending on which speed setting you have your screwdriver. Switching to LO speed will increase torque and switching to HI speed will decrease torque.

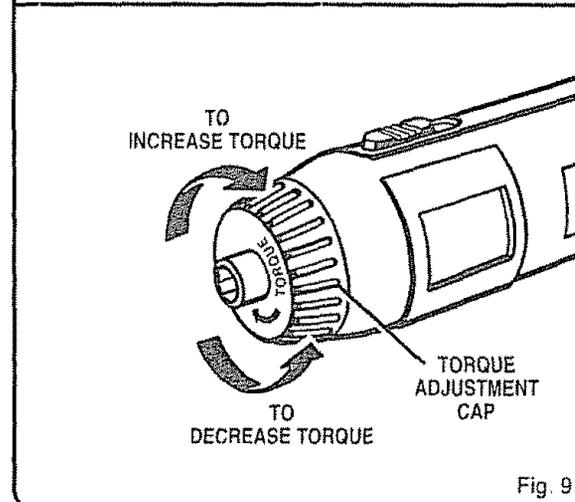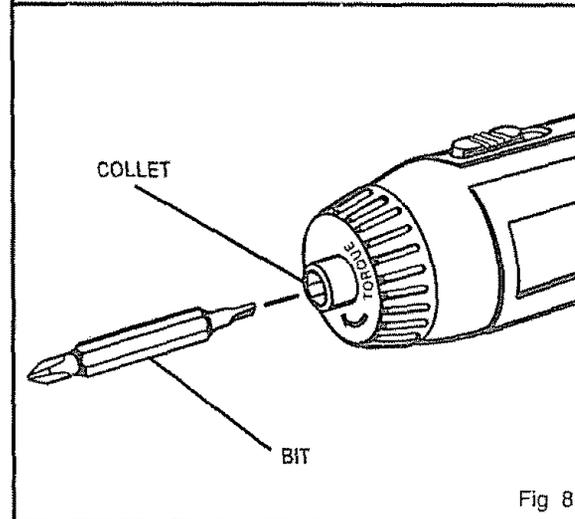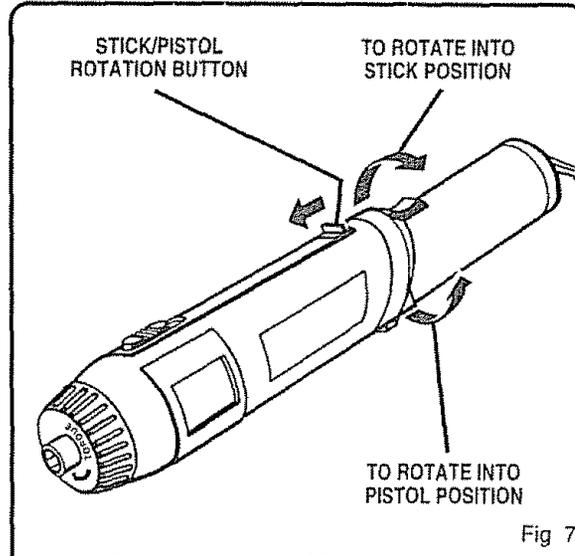

BATTERIES

Your screwdriver is equipped with 3 nickel-cadmium rechargeable batteries. Length of service from each charging will depend on the type of work you are doing.

The batteries in this tool have been designed to provide maximum trouble free life. However, like all batteries, they will eventually wear out. To remove batteries, see page 11, Battery Removal. Handling of these batteries, especially when wearing rings and jewelry, could result in a serious burn.

To obtain the longest possible battery life, we suggest the following:

- ☑ Store and charge your batteries in a cool area. Temperatures above normal room temperature will shorten battery life.
- ☑ Never store batteries in a discharged condition. Recharge them immediately after they are discharged.
- ☑ All batteries gradually lose their charge. The higher the temperature, the quicker they lose their charge. If you store your tool for long periods of time without using it, recharge the batteries every month or two. This practice will prolong battery life.

ACCESSORIES

The following recommended accessories are currently available at Sears Retail Stores.


- No. 2 Phillips / 8-10 Slotted, 2 Ea
- No. 3 Phillips / 6-8 Slotted, 2 Ea
- 5-Pc. Hex Shank Drill Bit Set
- 6-Pc. Extra Length Screwdriver Bit Set
- 7-Pc. Screwdriver Bit Set and Case
- 13-Pc. Power Screwdriver / Nutdriver Set and Case
- 30-Pc. Power Screwdriver / Nutdriver Set and Case
- 17-Pc. Power Screwdriver / Nutdriver Set and Case

 **WARNING:** The use of attachments or accessories not listed might be hazardous.

REPLACEMENT PARTS

WHEN SERVICING, USE ONLY IDENTICAL CRAFTSMAN REPLACEMENT PARTS

Key No.	Part Number	Description
1	999555-001	Battery Charger
2	974277-001	Battery Pack

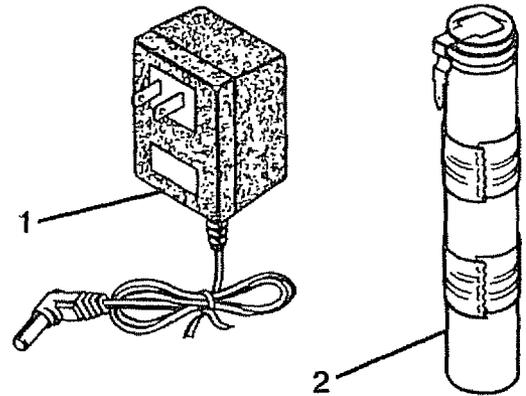

MAINTENANCE

WARNING:

When servicing use only identical Craftsman replacement parts. Use of any other parts may create a hazard or use product damage.

WARNING:

Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc. come in contact with plastic parts. They contain chemicals that can damage, weaken, or destroy plastic.

Avoid using solvents when cleaning plastic parts. Most are susceptible to various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

DO NOT ABUSE POWER TOOLS. Abusive practices can damage tool as well as workpiece.

WARNING:

Do not attempt to modify this tool or create accessories not recommended for use with this tool. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

BATTERY REMOVAL



To preserve natural resources, please recycle or dispose of expired batteries properly.

THIS PRODUCT CONTAINS NICKEL-CADMIUM BATTERY. MUST BE DISPOSED OF PROPERLY.

LOCAL, STATE, OR FEDERAL LAWS MAY PROHIBIT DISPOSAL OF NICKEL-CADMIUM BATTERIES IN ORDINARY TRASH. CONSULT YOUR LOCAL WASTE AUTHORITY FOR INFORMATION REGARDING AVAILABLE RECYCLING AND/OR DISPOSAL OPTIONS.

BATTERY REMOVAL, PREPARATION FOR RECYCLING

See Figure 10

TO REMOVE:

- Lock switch trigger by placing the forward/reverse switch in center position. See Figure 6
- Remove cover securing batteries by twisting it in the direction of the arrow as shown in figure 10.
- Slide batteries from motor housing enough to expose leads and battery terminals. Disconnect leads from battery terminals. **NOTE:** Be careful not to break battery terminals when disconnecting leads.

WARNING:

Upon removal, cover the battery's terminals with heavy duty adhesive tape. Do not attempt to destroy or disassemble battery or remove any of its components. Nickel-cadmium batteries must be recycled or disposed of properly. Also, never touch both terminals with metal objects and/or body parts as short circuit may result. Keep away from children. Failure to comply with these warnings could result in fire and/or serious injury.

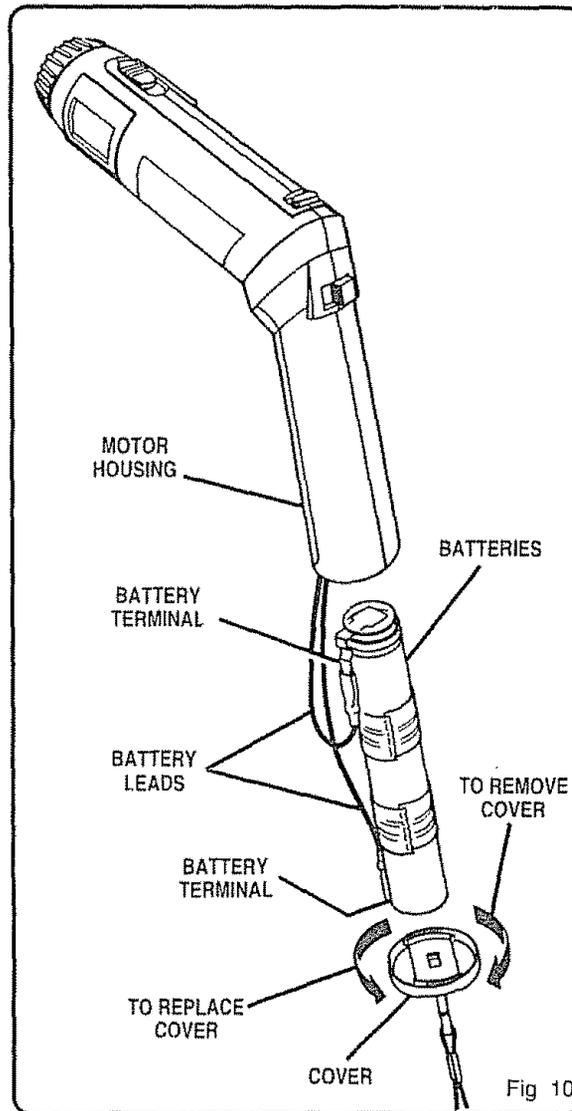


Fig 10

SEARS

OWNER'S
MANUAL

MODEL NO.
315.111690

HOW TO ORDER
REPLACEMENT
PARTS

IF YOU NEED REPAIR
SERVICE
OR PARTS:

FOR REPAIR SERVICE, CALL
THIS TOLL FREE NUMBER:
1-800-4-REPAIR
(1-800-473-7247)

FOR REPLACEMENT PARTS
INFORMATION AND
ORDERING, CALL THIS
TOLL FREE NUMBER:
1-800-366-PART
(1-800-366-7278)

CRAFTSMAN®

Cordless Screwdriver Two-Speed / Reversible

The model number of this tool will be found on a plate attached to the motor housing.

WHEN ORDERING REPLACEMENT PARTS,
ALWAYS GIVE THE FOLLOWING INFORMATION:

- | | |
|------------------------------|--|
| • PART NUMBER | • PART DESCRIPTION |
| • MODEL NUMBER
315.111690 | • NAME OF ITEM
Cordless Screwdriver |

All parts listed may be ordered from any Sears Service Center and most Sears stores.