


**TOSHIBA**

# Color Television

OWNER'S MANUAL

**CE35E15**

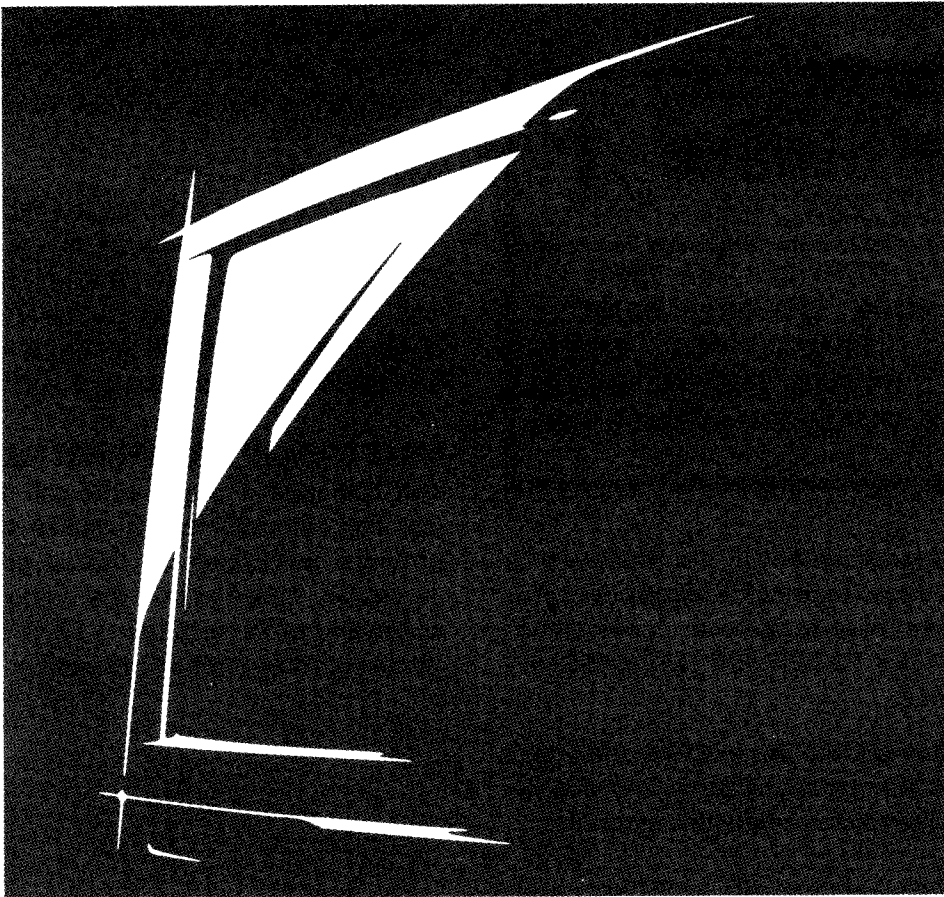

SET UP

PREPARATION

BASIC OPERATION

ADVANCED  
OPERATION

EQUIPMENT  
CONNECTIONS

REFERENCE  
SECTION

## Dear Customer

Congratulations! You have purchased one of the finest Color TV's on the market!

This manual will help you use the many exciting and useful features to make your TV viewing more enjoyable than ever before.

Before operating your TV set, please read all these safety and operating instructions completely and then retain for future reference.

## Customer's Record

You will find the model number and serial number on the back of your TV set.

Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product.

Model Number \_\_\_\_\_


Serial Number \_\_\_\_\_

# Safety Precautions

---

### WARNING:

**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

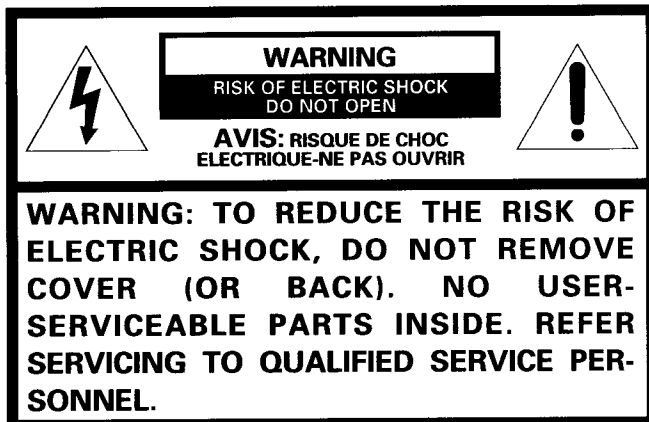

The lightning symbol in the triangle tells you that the voltage inside this product may be strong enough to cause an electric shock. DO NOT TRY TO SERVICE THIS PRODUCT YOURSELF.



The exclamation point in the triangle tells you that important operating and maintenance instructions follow this symbol.

This TV set may be used only with TOSHIBA stand model ST3501. Use with other stands may result in instability causing possible injury.

### CAUTIONS:

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLET UNLESS THE PRONGS CAN BE FULLY INSERTED INTO THE OUTLET TO PREVENT ANY EXPOSURE OF THE PRONGS ON THE POLARIZED PLUG.

### ATTENTION:

POUR PRÉVENIR LES CHOC ÉLECTRIQUES, NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉS À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT.

### NOTE TO CATV SYSTEM INSTALLER IN THE USA:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

# Table of Contents

---

## Set Up

Installing Your TV Set .....	4
Antenna/Cable TV Connection .....	5
Antenna/Cable TV and VCR Connections .....	6

## Preparation

Location of Controls (TV Set) .....	7
Location of Controls (Remote Control) .....	8
Before Using the Remote Control .....	9
Using the Remote with VCR or Cable TV	
Converter .....	10
Programming the Remote Control .....	11
Menu Function (General Instructions) .....	14
Programming Channel Memory .....	15

## Basic Operation

Watching TV Programs .....	17
Convenient Remote Functions .....	18
Adjusting the Picture .....	20
Adjusting the Sound .....	22
Selecting Stereo/SAP Broadcasts .....	23

## Advanced Operation

Enhancing the Surround Sound Effect .....	24
Watching Picture-in-Picture .....	25
Setting the Off-Timer (Sleep Timer) .....	28
Setting the Clock .....	29
Locking Channels .....	30
Programming Your Favorite Channels .....	32
Using Closed-Captioned Function .....	34
Labeling Channels .....	36
Activating Noise Reduction/ Flesh Tone Functions .....	38
Changing On-Screen Display Language .....	39

## Equipment Connections

Connecting a Standard VCR .....	40
Connecting a VCR with an S-Video Jack .....	41
Dubbing/Editing Video Tapes Using 2 VCRs .....	42
Connecting an Audio Amplifier .....	43
Connecting External Speakers .....	44

## Reference Section

Cleaning and Care .....	45
Specifications .....	45
Before Calling Service Personnel .....	46
Limited United States Warranty .....	47

# Installing Your TV Set

---

## Where to install

Place the TV on the floor or on a sturdy platform. The mounting surface should be flat and steady.

## Lighting

Do not place the TV in a room where direct lighting strikes the screen. Use soft and indirect lighting.

## Air circulation

Place the TV far enough from the walls to allow proper ventilation. This will prevent the TV from overheating and avoid possible damage to the TV. Avoid dusty places too.

## Power supply

Plug into an electrical outlet with standard household power (120 volt AC, 60Hz). Do not change the plug's safety prong. See the right column.

## WARNING :

### TO AVOID PERSONAL INJURY


- Do not stand or climb on the TV.
- Do not put a VCR or any heavy object on top of the TV.

## CAUTION :

As a safety feature, the plug has one prong wider than the other. It will fit only one way into a standard electrical outlet. If the plug will not fit into the outlet, try turning it around. If the plug will not fit either way, the outlet is probably old and non-standard.

You will need to have a new outlet installed by an electrician.


**DO NOT CHANGE THE SAFETY FEATURE OF THE PLUG.**

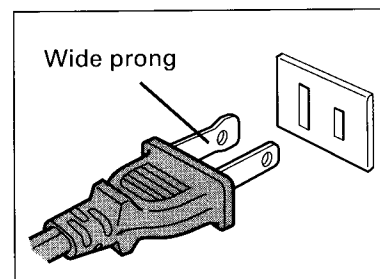


# Antenna/Cable TV Connection

You can use either an indoor or outdoor antenna to receive VHF and/or UHF channels. Channels 2 - 13 are VHF channels, and channels 14 - 69 are UHF channels. We recommend using an outdoor antenna for better picture quality. You can receive Cable TV by connecting a cable supplied by your local cable company. Cable TV delivers both VHF and UHF channels and other channels not available from your antenna.

## Connecting an antenna or Cable without a decoder box

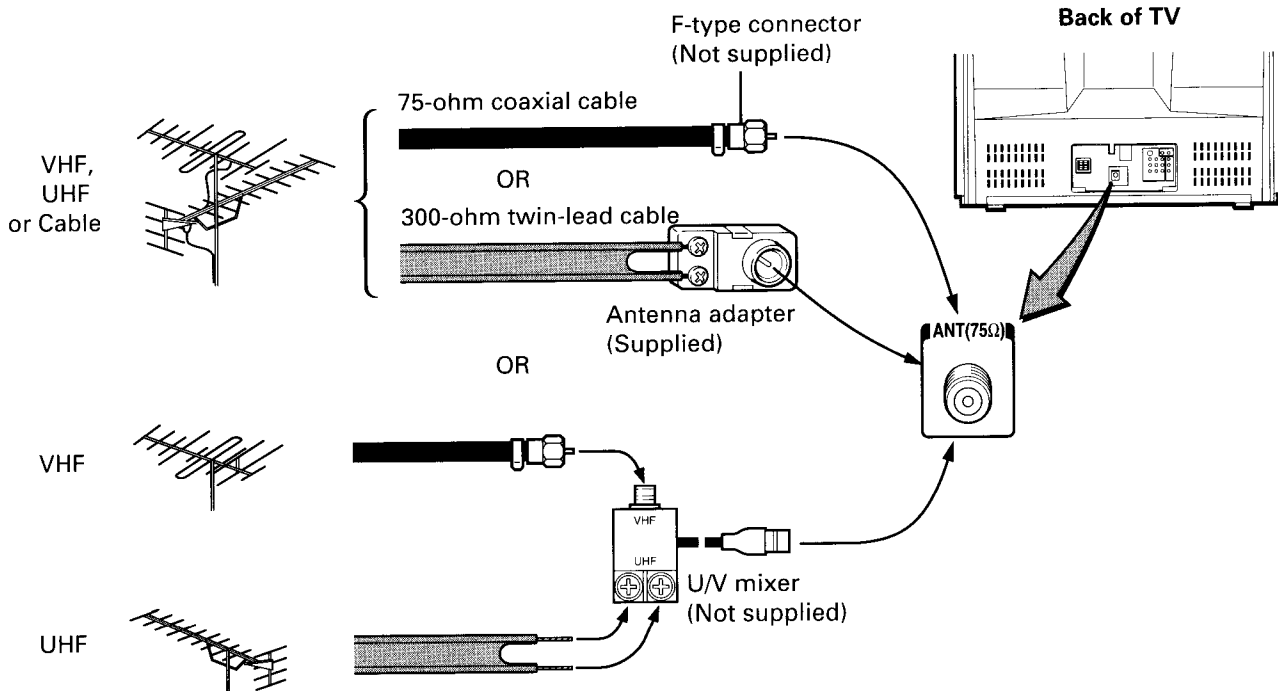

## Connecting a Cable with a decoder box

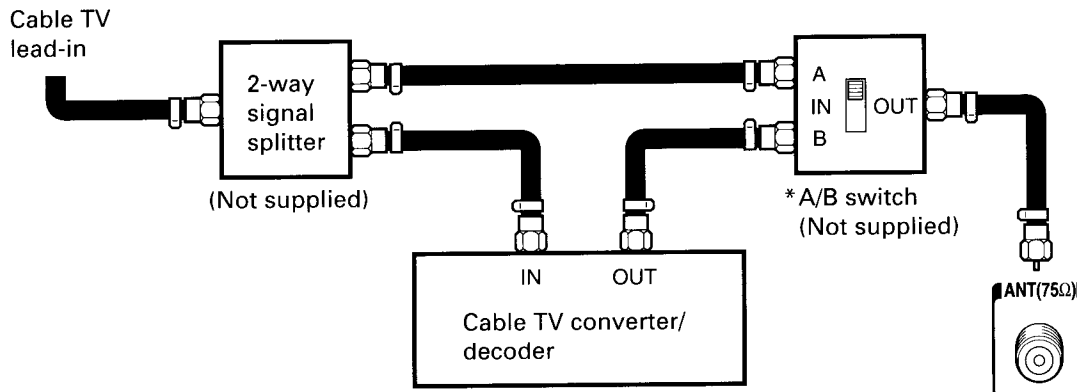


**Notes:**

- \* "A" position on the A/B switch allows you to select unscrambled channels using the TV's channel keys.
- "B" position allows you to select scrambled channels via the converter/decoder box using the converter's channel keys. Place your TV on channel 3 or 4 to match the converter's output channel.
- If you use a VCR, connect its antenna in/out between the decoder box and A/B switch.

# Antenna/Cable TV and VCR Connections


After antenna cable connections are made, you are still required to connect the VCR using a video/audio connecting cables for (stereo) playback of good quality from the VCR. See page 40.

## Antenna/Cable TV connection via VCR (simplified method)

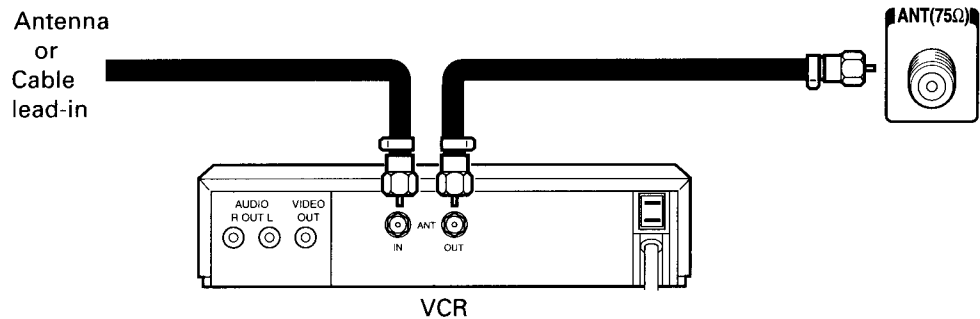

**Note:** On many VCR's, playing tapes causes the VCR's TV/VCR switching to disconnect the antenna signals from the TV. If you cannot select a certain channel, try pressing the TV/VCR button on the Remote Control.

## Using a 2-way signal splitter

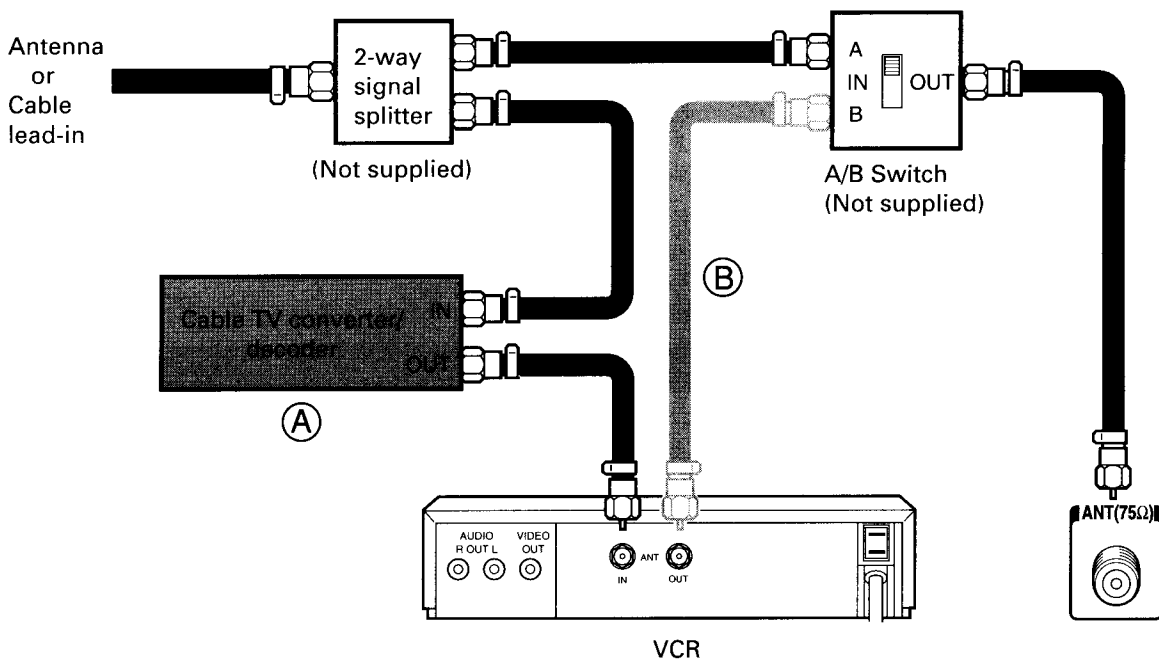


### Notes:

- When connecting a cable TV converter/decoder (A):
  - "A" position on the A/B switch allows you to select unscrambled channels using the TV's channel keys.
  - "B" position on the A/B switch allows you to select scrambled channels via the cable TV converter/decoder using the converter's channel keys. Place your TV and VCR on channel 3 or 4 to match the converter's output channel.
- The cable (B) connection is necessary only when the cable TV converter/decoder (A) is connected.


# Location of Controls (TV Set)

For specific use of each control, consult the corresponding page numbers in brackets.

Front view


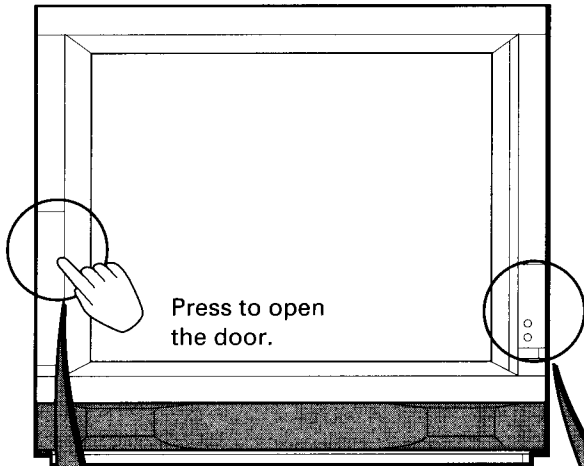


Rear view

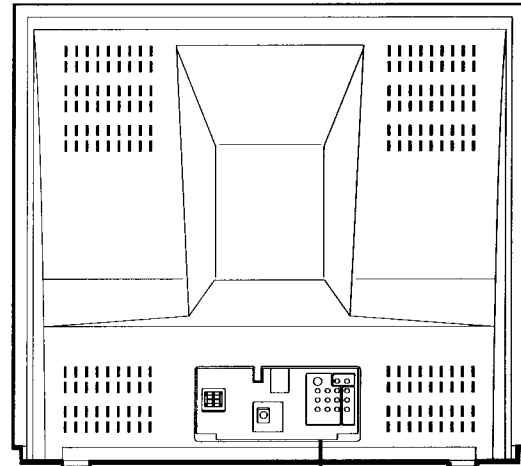

VIDEO/AUDIO terminals [40]

Behind the door

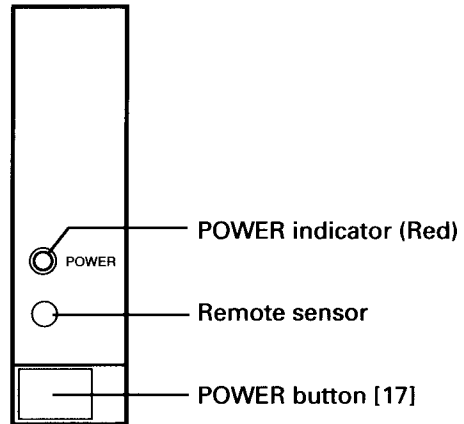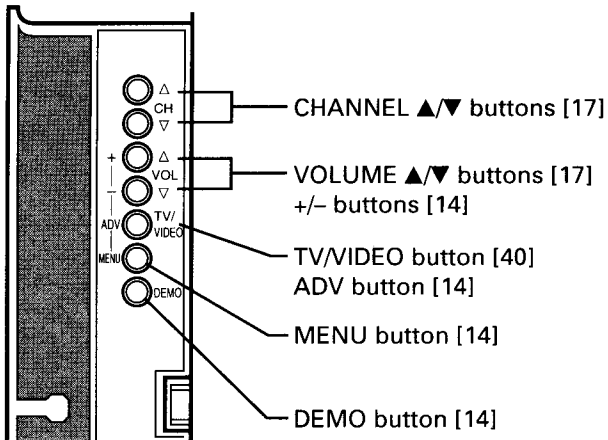

SET UP


PREPARATION

Antenna/Cable TV and VCR Connections  
Location of Controls (TV Set)

# Location of Controls (Remote Control)

Only the buttons that are used to operate the TV set are described here.  
For details on the use of each control, refer to pages in brackets.

Aim at the remote sensor on the TV.

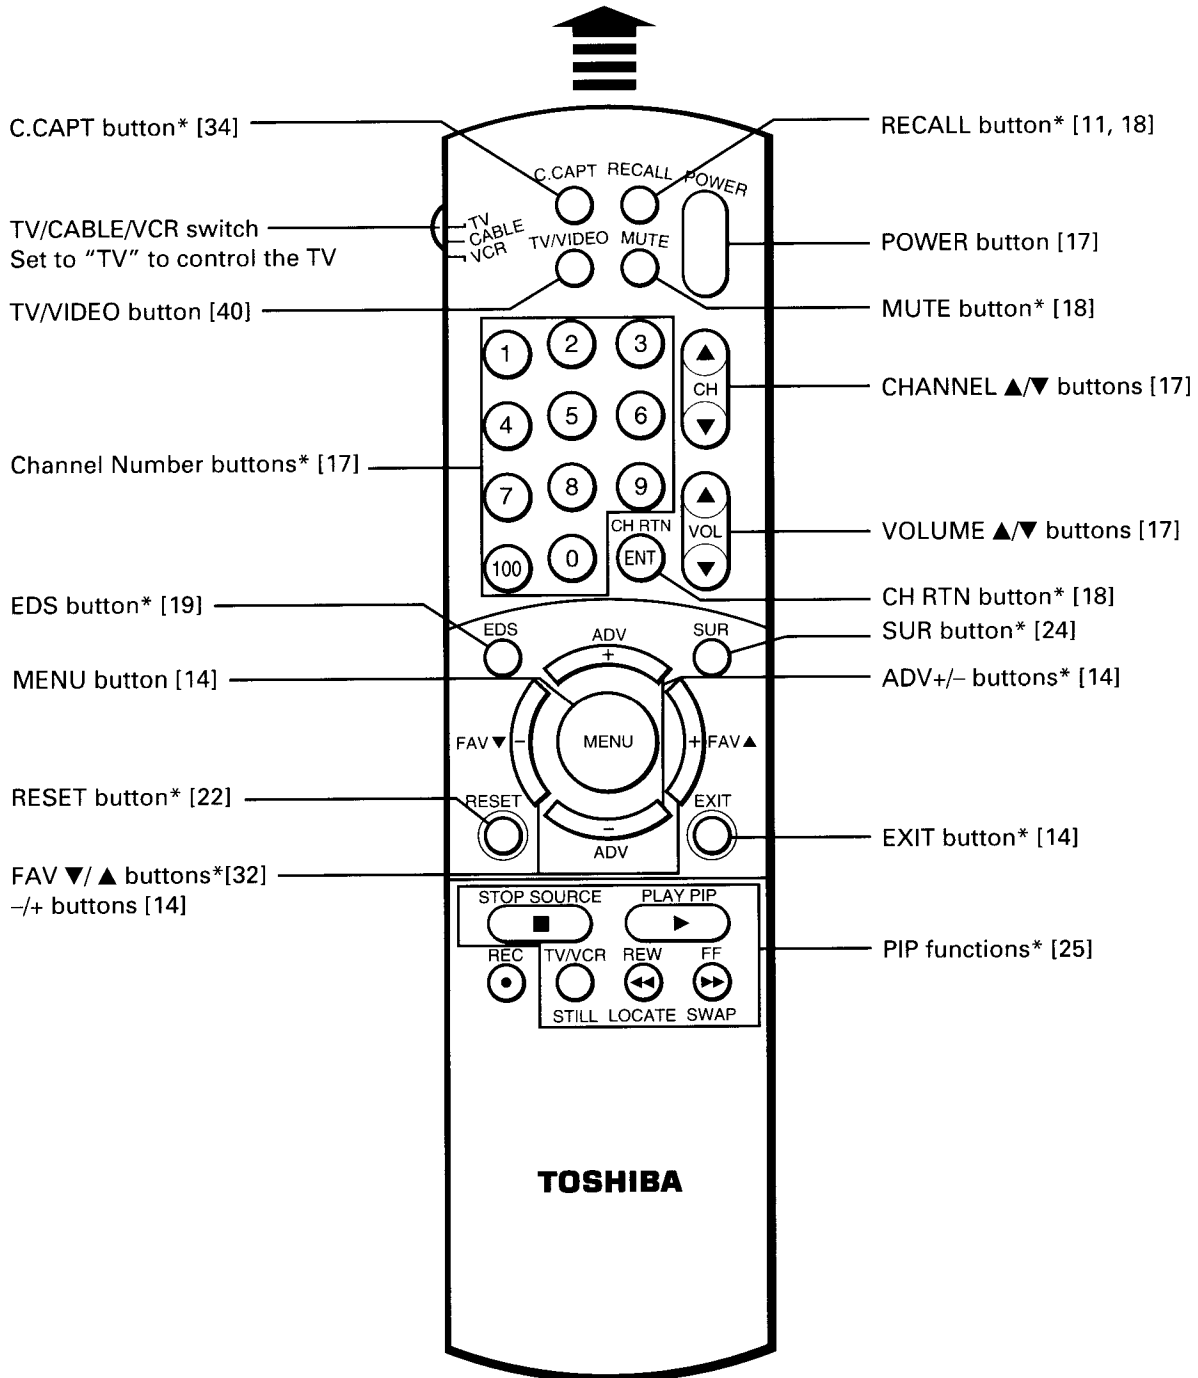

\*These functions do not have duplicate locations on the TV set. They can be controlled only with the Remote Control.



# Before Using the Remote Control

## Introductions

With this Remote Control, you can operate your TV and most models of remote-controlled VCR's and Cable TV converters even if they are different brands.

However, this Remote Control must be programmed to control other brands of VCR's and/or Converters. If you will be using your TV set with a TOSHIBA VCR, your remote has already been preprogrammed for you.

- Before attempting to operate your Remote Control, install the batteries according to the section "Installing and replacing batteries" shown below.
- For more detailed instructions, see the section "Programming the Remote Control" on page 11.


### Notes:

- After installing new batteries, the Remote Control will set itself to the codes for TOSHIBA's TV and VCR. If you are using the Remote Control to operate equipment that uses different codes, it will have to be reprogrammed for those codes.
- This Remote Control may have functions not available on the original remote control.
- These functions may or may not operate your VCR or Cable TV Converter. Refer to the owner's manuals supplied with the equipment to see which functions are available.
- The remote control supplied with your VCR or Cable TV Converter may have keys not duplicated on this Remote Control. If these functions are desired, the original remote will have to be used.


PREPARATION

## Installing and replacing batteries

- 1 Place the Remote Control with the face down. Press down on the ridged area of the battery cover and slide it off.

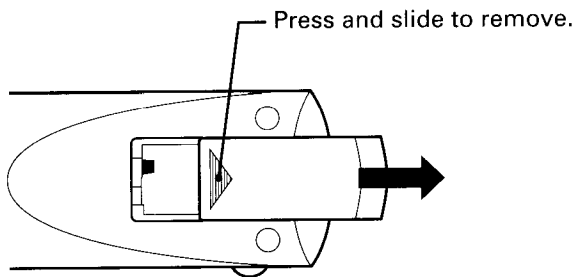

- 2 Place two "AAA" size batteries, matching the + and - signs on each battery to the + and - signs of the battery compartment.

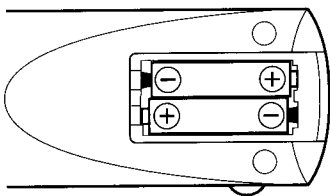

- 3 Replace the battery cover until the lock snaps.

### CAUTION:

- Do not throw your batteries into a fire. Dispose of your batteries in a designated disposal area.
- Do not combine used old batteries with new ones.
- Do not mix battery types.

### Tips for Best Operation


- For optimum performance, aim the Remote Control directly at the TV from a distance of no more than 16 ft (5m) and be sure there is no obstruction between the Remote Control and the TV.
- If your Remote Control does not always adjust the TV as you wish, you probably need to replace the batteries.
- Remove dead batteries immediately to prevent battery acid from leaking into the battery compartment.
- If you do not intend to use the Remote Control for a long period, remove the batteries.

Location of Controls (Remote Control)/ Before Using the Remote Control

# Using the Remote with VCR or Cable TV Converter


- To control TOSHIBA VCR, first set the TV/CABLE/VCR switch to "VCR" position. The buttons shown below will then control the VCR. The rest of the buttons operate the TV as usual. If you have another brand of VCR, you can probably program your Remote to control it. Details are on page 11.
- To control a cable TV converter, this Remote Control must be programmed to recognize the brand of your converter. See page 11. Set the TV/CABLE/VCR switch to "CABLE" position whenever you control the cable TV converter.

Aim at the VCR or cable TV converter

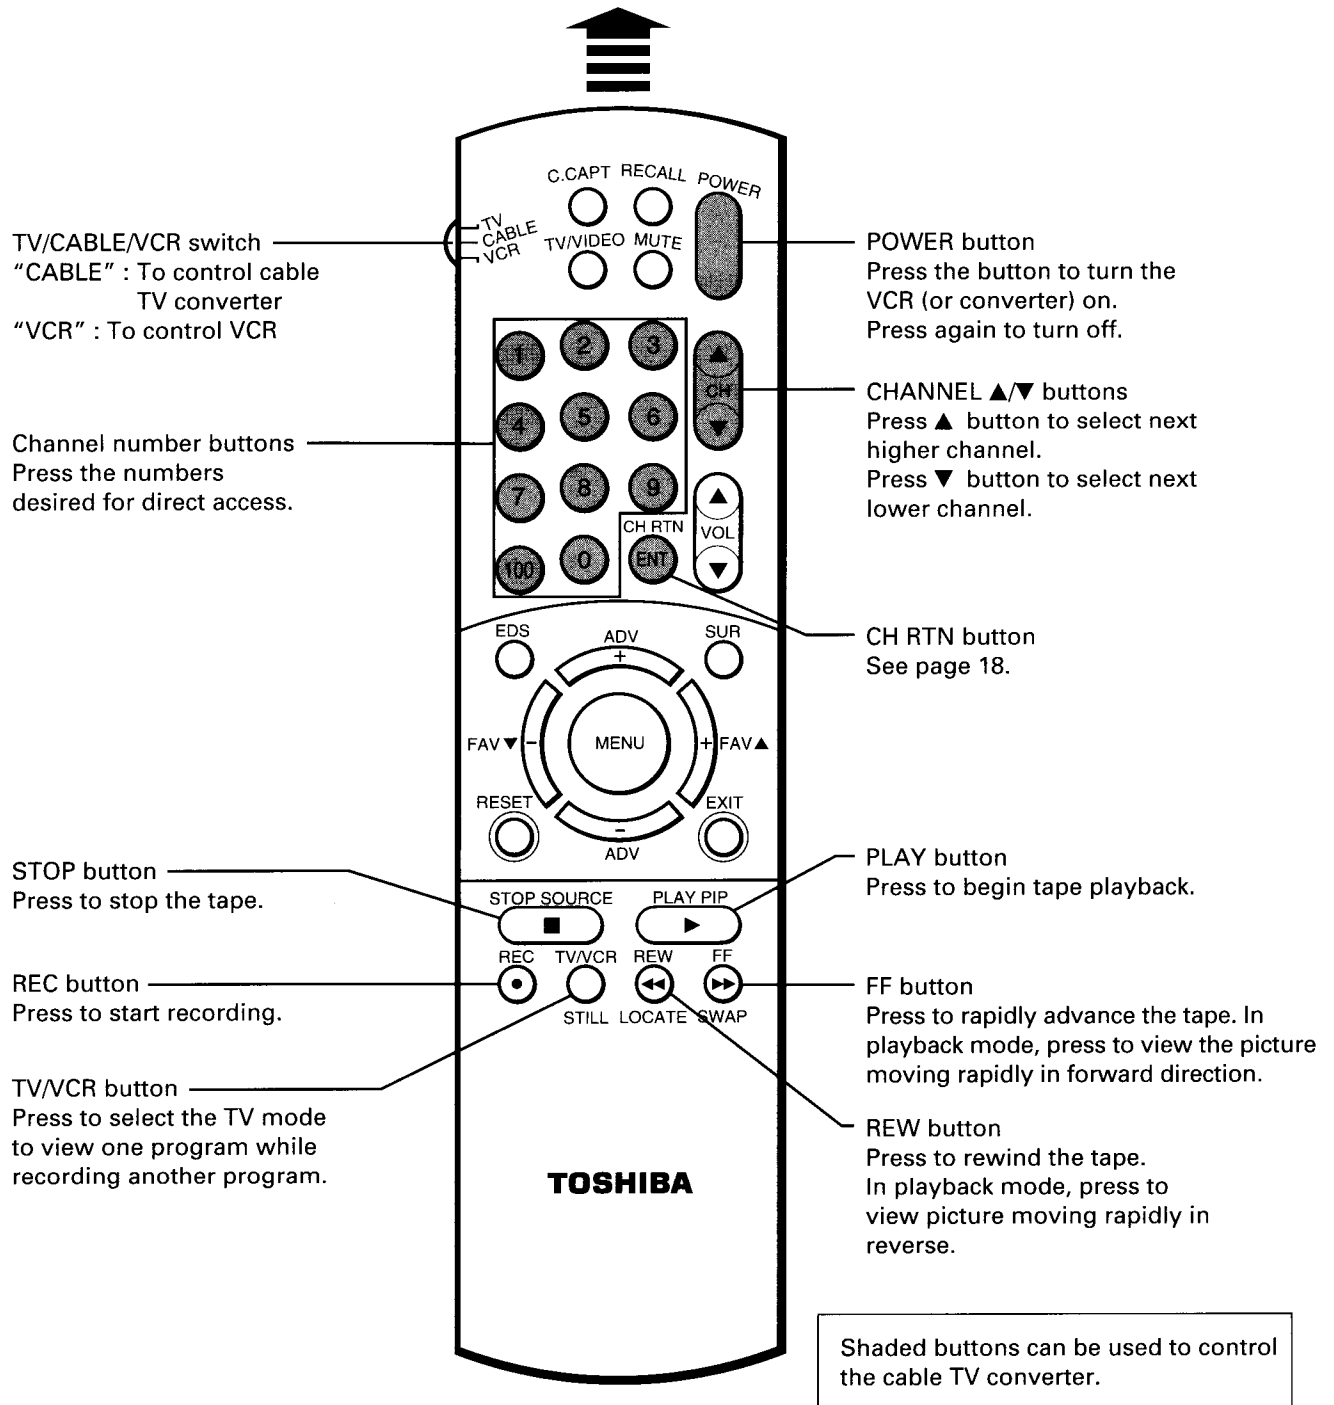

# Programming the Remote Control

- This Remote Control is preprogrammed to operate TOSHIBA VCR's.
- To use VCR's other than Toshiba models (or Cable converter), perform the following procedures before operating.

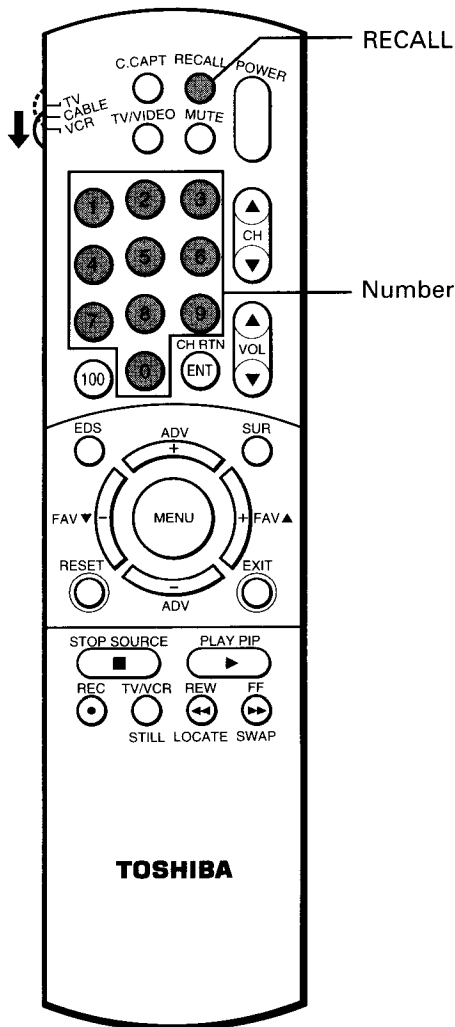

## To control other brands of VCR's and cable TV converters

**1** Refer to the "VCR code table" (or "Cable TV converter code table") on pages 12 and 13 to find the code number that corresponds to the brand name of your VCR (or your converter).

If more than one number is listed, try each one separately until you find the one that works.

**2** Set the TV/CABLE/VCR switch to "VCR" (or "CABLE").

**3** Hold down **RECALL** while pressing the **Number** buttons for the three digit code number for your brand of VCR (or converter).

**4** Point the Remote Control at the VCR (or at the converter) and press **POWER** to test the code number.

- If the right number was entered, the VCR (or the converter) should turn on.

- If the VCR (or the converter) does not respond to the Remote Control, repeat steps 1 to 4 with another code number.

### Notes:

- You have to reprogram the Remote Control when you change its batteries.
- Some newer VCR's are capable of working on either of two remote codes. These VCR's have a switch labeled "VCR1/VCR2". If your VCR has this kind of switch, and does not respond to all the code numbers for your VCR brand name, set the switch to another position ("VCR1" or "VCR2") and reprogram the Remote Control.

For future reference, write the code you used.

VCR CODE: \_\_\_\_\_

CABLE CODE: \_\_\_\_\_

# Programming the Remote Control (Continued)

- In some rare cases, you may not be able to operate your non-Toshiba equipment with the supplied Remote Control. This is because your equipment may use a code that is not provided with this Remote Control. In this case, please use the equipment's own remote control.

## VCR code table

BRAND NAME	CODE NUMBER
Adventura .....	019
Aiko .....	297
Aiwa .....	019
Akai .....	060,068,080,125 261
Akiba .....	091
Alba .....	039,228,297
American High .....	054
Amstrad .....	019
Anam .....	181
Anitech .....	091
ASA .....	056,100
Asha .....	259
Asuka .....	056
Audiovox .....	056
Baird .....	019,123
Basic Line .....	039,091,297
Beaumarck .....	259
Bell & Howell .....	123
Blaupunkt .....	053,181
Brandt .....	206
Broksonic .....	140,203,230
Bush .....	091,228,297
Calix .....	056
Canon .....	054
Capehart .....	039
Carver .....	100
CCE .....	091,297
CGE .....	019
Cimline .....	091
Citizen .....	056,297
Clatronic .....	039
Colt .....	091
Condor .....	039
Craig .....	056,066,091,259
Crown .....	091,297
Curtis Mathes .....	054,079
Cybernex .....	259
Daewoo .....	039,064,065,297
Dansai .....	091
Daytron .....	039
De Graff .....	061
Decca .....	019,100
Dual .....	060
Dumont .....	019,100,123,124
Dynatech .....	019
Elcatech .....	091
Electrohome .....	056
Electronic .....	019
Electroponic .....	056
Emerex .....	051
Emerson .....	019,021,056,062, 080,087,140,203, 227,228,230,231, 313,314,380
ESC .....	297
Ferguson .....	060
Fidelity .....	019
Finlandia .....	100,123,129
Finlux .....	019,061,100,123, 124
Firstline .....	056,062,064,091, 228
Fisher .....	065,066,073,085, 123
Frontech .....	039
Fuji .....	052,054
Funai .....	019
Garrard .....	019
GE .....	054,079,084,221
GEC .....	100
General .....	071
Go Video .....	251,298
Goldstar .....	037,056,057
Goodmans .....	019,039,056,081, 091,297
Gradiente .....	019
Graetz .....	060,123
Granada .....	065,100,123
Grandin .....	019,056,091
Grundig .....	100
Harley Davidson .....	019
Harman/Kardon .....	057,094
Harwood .....	087,091
HCM .....	091
Headquarter .....	065
HI-Q .....	066
Hinari .....	091,227
Hitachi .....	019,060,061,084, 124,254
Hypson .....	091
Imperial .....	019
Interfunk .....	100
ITT .....	060,065,123,125
ITV .....	056,297
JCL .....	054
Jensen .....	060
JVC .....	027,060,086
Kaisui .....	091
Kendo .....	125,228
Kenwood .....	057,060,065,086
KLH .....	091
Kodak .....	054,056
Korpel .....	091
Leyco .....	091
Lloyd .....	019
Loewe .....	056
Loewe Opta .....	100
Logik .....	091,259
Luxor .....	062,065,123,125
LXI .....	056
M-Electronic .....	019
Magnavox .....	054,058,100,019, 129,168
Magnin .....	259
Manesth .....	064,091
Marantz .....	054,057,081,100
Marta .....	056
Masushita .....	054
Matsui .....	227,228,314
MEI .....	054
Memorex .....	019,054,056,058 065,066,067,123 259
Memphis .....	091
Metz .....	181
MGA .....	062,080
MGN Technology ..	259
Minolta .....	061,124
Mitsubishi .....	062,080,086,094 100,192,233,261
Motorola .....	054,067
MTC .....	019,259
Multitech .....	019,091
Murphy .....	019
NEC .....	057,059,060,069 086
Neckermann .....	100
Nesco .....	091
Nikko .....	056
Noblex .....	259
Nokia .....	060,065,123,125 259
Nordmende .....	060
Oceanic .....	019
Olympus .....	054
Optimus .....	056,067
Optonica .....	067,081
Orion .....	140,227,228,314
Osaki .....	019,056,091
Otto Versand .....	100
Palladium .....	056,091
Panasonic .....	054,096,115,181 244
Penney .....	054,056,057,059 061,073,259
Pentax .....	061,084,124
Perdio .....	019
Philco .....	054
Philips .....	054,081,100,129
Phonola .....	100
Pilot .....	056
Pioneer .....	086,100
Portland .....	039
Profitronic .....	259
Proline .....	019

Protec .....	091
Pulsar .....	058
Pye .....	100
Quarter .....	065
Quartz .....	065
Quasar .....	054,096,115
Quelle .....	100
Radio Shack .....	019,056
Radiola .....	100
Radix .....	056
Randex .....	056
RCA .....	054,061,079,084 096,115,124,125 168,221
RCA Unified .....	079
Realistic .....	019,054,056,065 066,067,081,085 123,259
Rex .....	060
Ricoh .....	053
Roadstar .....	056,091,259,297
Runco .....	058
Saba .....	060
Saisho .....	227,228
Salora .....	062,065,125
Samsung .....	064,259
Sanky .....	058,067
Sansui .....	060,086
Sanyo .....	065,066,123,259
SBR .....	100
Schaub Lorenz .....	019,060
Schneider .....	019,091,100,129
Scott .....	062,064,140,203 229,230,231
Sears .....	054,056,061,065 066,073,085,123 124
SEG .....	259
SEI .....	100
Seleco .....	060
Sentra .....	039
Sharp .....	067,081
Shintom .....	091
Shogun .....	259
Siemens .....	056,123
Silva .....	056
Singer .....	091
Sinudyne .....	100
Sontec .....	056
Sony .....	051,052,053,054
STS .....	061
Sunstar .....	019
Sylvania .....	019,054,062,100 129
Symphonic .....	019
Tashiko .....	019

Tatung .....	019,060,100
Teac .....	019,060
Technics .....	054,181
Teknika .....	019,054,056,071
Teleavia .....	060
Telefunken .....	060,206
Tenosal .....	091
Tensai .....	019
Thomson .....	060
Thorn .....	060,123
TMK .....	227,259
Toshiba .....	060,062,064,085 229,231,385
Totevision .....	056,259
Triumph .....	227
Unitech .....	259
Universum .....	019,056,068,100 125
Vector .....	064
Vector Research .....	057,059
Victor .....	027,060,086
Video Concepts .....	059,064,080
Videosonic .....	259
Wards .....	019,054,061,066 067,081,091,168 231,259
XR-1000 .....	019,054,091
Yamaha .....	057,060
Yamishi .....	091
Yokan .....	091
Yoko .....	039,259
Zenith .....	052,053,058


**Cable TV converter code table**

<b>BRAND NAME</b>	<b>CODE NUMBER</b>
ABC .....	020,022,026,030, 032,033,036,066
Antronix .....	041
Archer .....	041,058,172
Belcor .....	075
Cable Star .....	075
Cabletenna .....	041
Cableview .....	041
Century .....	172
Citizen .....	172
Colour Voice .....	044,050
Comtronics .....	059,079
Contec .....	038
Eastern .....	021
Garrard .....	172
GC Electronics .....	035,075
Gemini .....	034,089
General Instrument	030

Hamlin .....	028,039,053,278 292
Hitachi .....	030
Hytex .....	026
Jasco .....	172
Jerrold .....	022,030,031,033 034,043,045,066 295
Macom .....	052
Magnavox .....	046
Memorex .....	019
Movie Time .....	175
NSC .....	089,175
Oak .....	026,038,267
Panasonic .....	040,126
Paragon .....	019
Philips .....	044,046,047,048 049,050,079,172
Pioneer .....	042,163
Popular Mechanics	419
Pulsar .....	019
PVP Stereo	
Visual Matrix .....	022
RCA .....	040
Regal .....	039,278,292
Regency .....	021
Rembrandt .....	030,089
Runco .....	019
Samsung .....	059,163
Scientific Atlanta ..	025,027,036,296 346
Signal .....	034,059
Signature .....	030
SL Marx .....	059
Sprucer .....	040
Standard	
Components .....	174
Starcom .....	022,034,066
Stargate .....	034,059
Starquest .....	034
STS .....	175
Sylvania .....	020
Tancy .....	019,123
Televue .....	059
Texscan .....	020
Tocom .....	031,032,078
Toshiba .....	019
Tusa .....	034
Unika .....	041,172
United Artists .....	026
United Cable .....	022
Universal .....	041,058,075,096 172,210
Viewstar .....	046,079,230
Zenith .....	019



# Menu Function (General Instructions)

We suggest you familiarize yourself with the procedure before using the Menu function. To adjust any TV feature, the use of the Menu function is required. The adjustment that can be made to the TV appear on the screen.

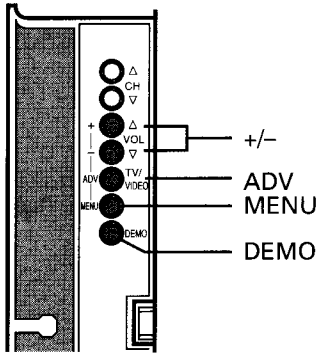

## MENU button (on TV and on Remote)

Each time you press **MENU**, the Picture, Audio, Setup or Option menu on-screen display is selected in order, then press **ADV**.

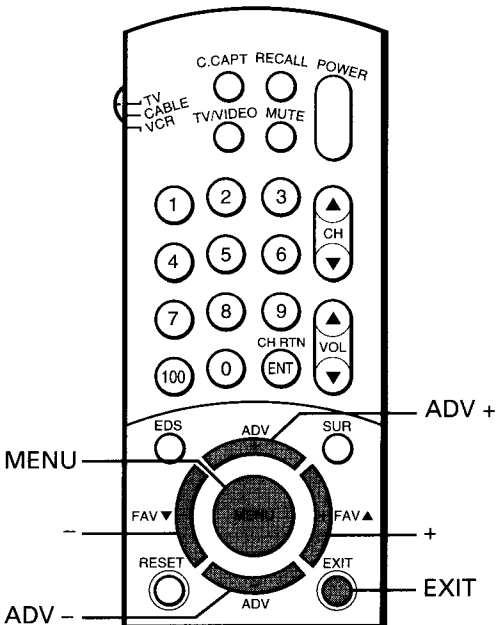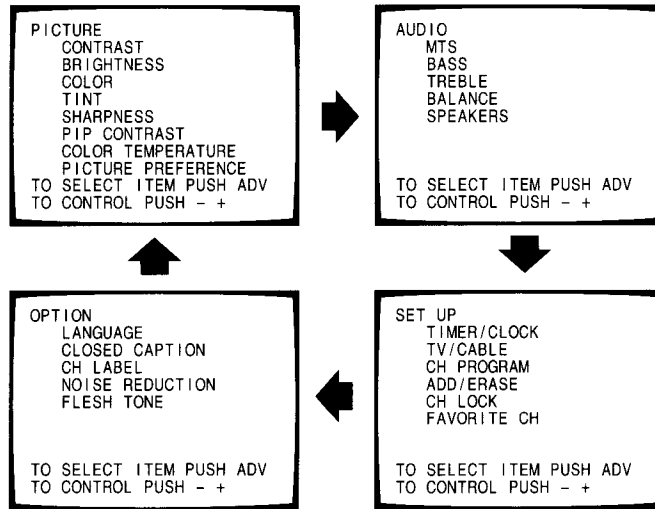

## ADV button (on TV and on Remote)

Use **ADV** after you have selected the on-screen menu you want to adjust with the **MENU** button.

Each time you press **ADV**, the function to be adjusted will be selected in order.

ADV + button ..... from bottom to top

ADV, ADV - button ..... from top to bottom

The selected function will be displayed in magenta.

## -/+ buttons (on TV and on Remote)

Use -/+ to adjust the function you have selected with the **ADV** button.

### Notes:

- The ADV button on the TV will function as the TV/VIDEO button when no menu display is on the screen.
- The -/+ buttons on the TV will function as the VOLUME ▼/▲ buttons when no menu display is on the screen.
- The -/+ buttons on the Remote Control will function as the FAV ▼/▲ buttons when no menu display is on the screen.

## EXIT button (on Remote)

The above four menu displays will automatically disappear from the screen if no control has been operated for about 15 seconds.

If you want to clear the screen of all on-screen displays instantly, press **EXIT**.

## DEMO button (on TV)

When you press the button, the TV will automatically display a variety of its on-screen menus and special features.


This function is provided for demonstration purposes only. Press **DEMO**.

The on-screen demonstration will start after about 4 seconds.

To stop the on-screen demonstration, press **DEMO** again.


# Programming Channel Memory

The channel memory is the list of TV channel numbers your TV will stop on when you press the CHANNEL ▲ or ▼ button. **First, use the TV/CABLE and CH PROGRAM functions to preset all active channels in your area automatically.** If necessary, arrange the preset channels with the ADD/ERASE functions so that you can tune into only desired channels.


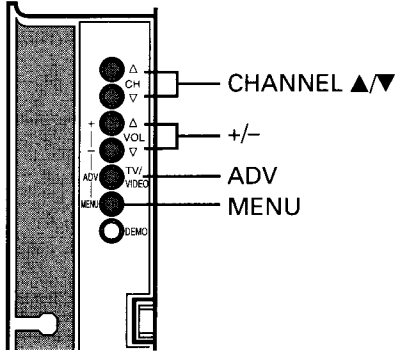


## TV/CABLE function

- 1 Press **POWER** to turn on the TV.
- 2 Press **MENU** repeatedly to display the SET UP menu on the screen.
- 3 Press **ADV** repeatedly until "TV/CABLE" is displayed in magenta.

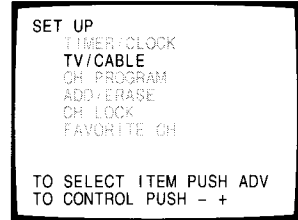


- 4 Press **-** or **+** until the mode that corresponds to your TV signal system is displayed in magenta. Each time you press the button, the TV\*, STD CABLE\*, HRC CABLE\* or IRC CABLE\* mode will be selected in order.

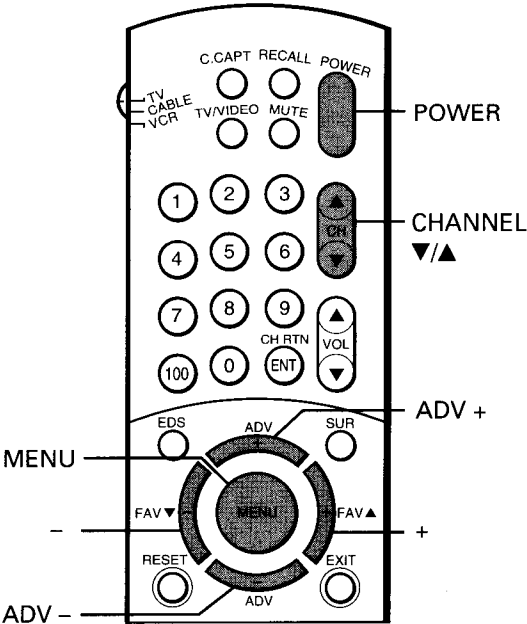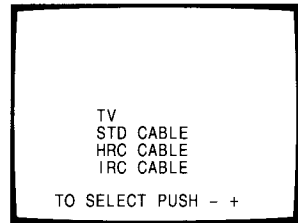


## CH PROGRAM function


- 1 Select "CH PROGRAM" following steps 2 and 3 above.

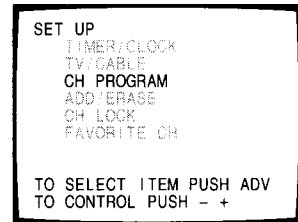

- 2 Press **-** or **+** to start channel programming. The TV will automatically cycle through all the TV or CABLE channels on the mode selected by the TV/CABLE function, and store active channels in the channel memory.

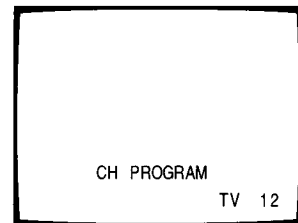

- 3 When channel programming is complete, you will see the message at the right.

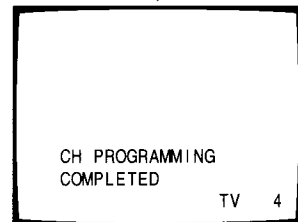

- 4 Press **CHANNEL ▲** or **▼** to make sure the channel programming has been done properly.


\* This TV receives the following TV signals:

1. **TV:** TV broadcast signals. (VHF channels 2 through 13 and UHF channels 14 through 69)
2. **STD CABLE:** Standard cable TV signals.
3. **HRC CABLE:** Harmonic Related Carrier cable TV signals.
4. **IRC CABLE:** Incremental Related Carrier cable TV signals.

If you are not sure what CABLE system they are using, consult your local cable company.


# Programming Channel Memory (Continued)

## ADD/ERASE function


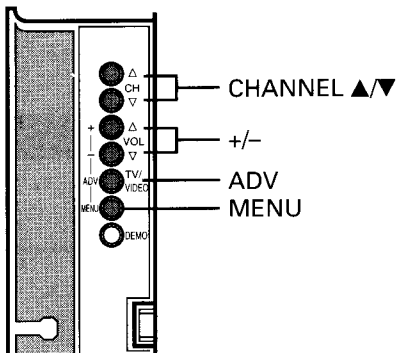


After performing the CH PROGRAM function, you can add or erase specific channels.


- 1 Select the channel you want to erase using the **CHANNEL ▲** or **▼** button, or select the channel you want to add using the **Channel Number** buttons.
- 2 Press **MENU** repeatedly to display the SET UP menu.

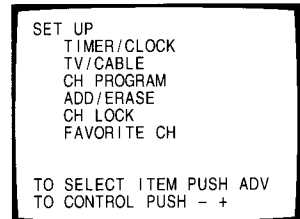

- 3 Press **ADV** repeatedly until "ADD/ERASE" is displayed in magenta.

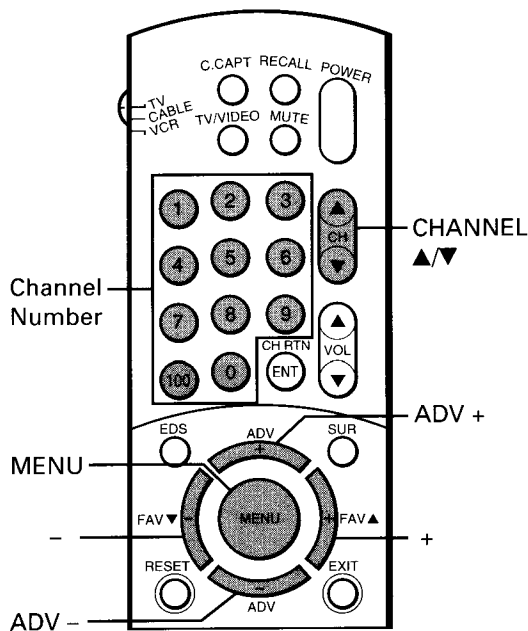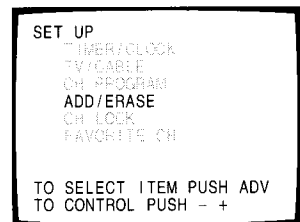

- 4 Press **-** or **+**:  
**To erase the channel**  
 Press the button until "CH ERASE" is displayed in magenta indicating that the channel has been erased from the memory.  
**To add the channel**  
 Press the button until "CH ADD" is displayed in magenta indicating that the channel has been memorized.

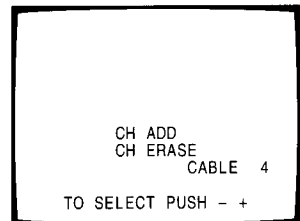

- 5 Repeat steps 1 to 4 for other channels.

You have now completed the channel programming.

## CABLE channel reference chart


Number on this TV	1	5	6	14	15	16	.....	34	35	36	37	38	.....	60	61	62	63	64	65	66
Corresponding CABLE channel	A-8	5(A-7)	6(A-6)	A	B	C	.....	U	V	W	AA	BB	.....	XX	YY	ZZ	AAA	BBB	65	66
Number on this TV	67	68	69	.....	92	93	94	95	96	97	98	99	100	101	102	.....	123	124	125	
Corresponding CABLE channel	67	68	69	.....	92	93	94	A-5	A-4	A-3	A-2	A-1	100	101	102	.....	123	124	125	

The above chart is typical of many cable system channel allocations. If in doubt, consult your cable company.




# Watching TV Programs

- First set the TV/CABLE/VCR switch on the Remote Control to the "TV" position.

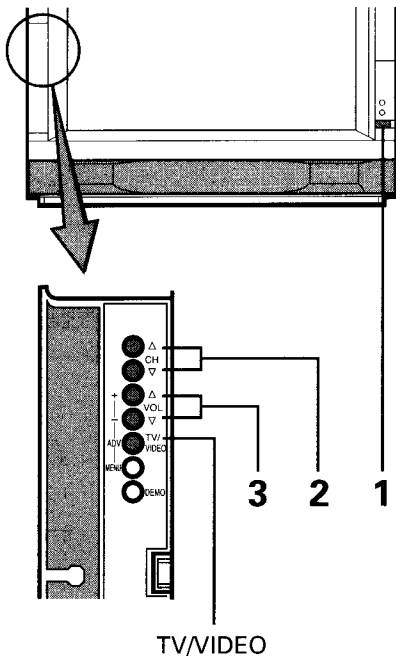

**1** Press **POWER** to turn on the TV.  
The following on-screen information will be displayed for a few seconds.

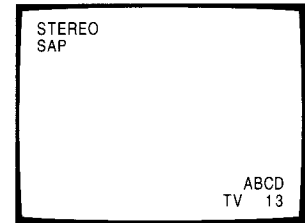

- Channel number or the VIDEO mode selected.
- Channel label (if previously preset).
- Stereo or SAP audio status.

To turn off the TV, press **POWER** again.

**2** Select a channel in one of the following two ways.

- **To scan the memorized channels in numerical sequence**  
Press **CHANNEL ▲** to select the next higher channel.  
Press **CHANNEL ▼** to select the next lower channel.  
Press the button again to select the next memorized channels.

- **To select a channel directly**



Press the **Channel Number** buttons (0-9 and 100).  
To select channel 4, press "4" (or press "0", "4").  
To select channel 38, press "3", "8".  
To select channel 125, press "100", "2", "5" in sequence.

**If you cannot select certain channels, either TV (off the air) or CABLE channels**

Check if the TV/CABLE function is properly set. See page 15.

**3** Press **VOLUME ▲/▼** to adjust the volume.

To increase the volume, press **▲**.  
To decrease the volume, press **▼**.

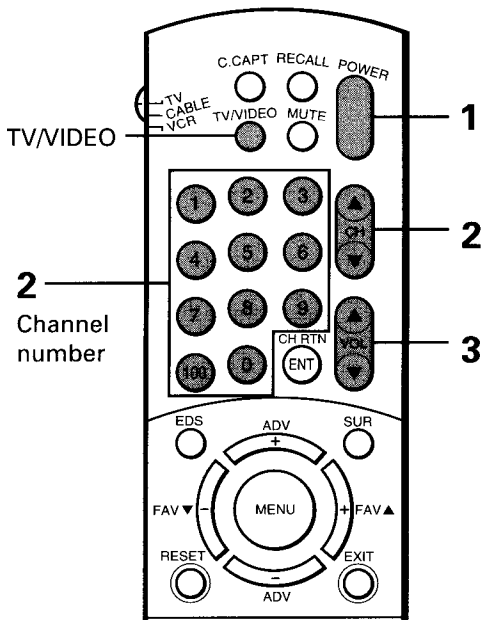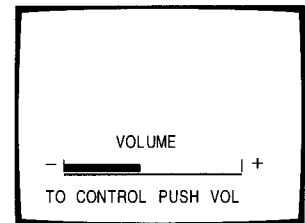

## Notes:

- The **VOLUME ▼/▲** buttons on the TV function as the **-/+** buttons while any menu display (PICTURE, AUDIO, SET UP or OPTION) is on the screen.
- The **TV/VIDEO** button on the TV functions as the **ADV** button while any menu display (PICTURE, AUDIO, SET UP or OPTION) is on the screen.

## Watching Video Input

The **TV/VIDEO** button is used to view the signals coming from other devices like VCR's or Video Disc Players connected to this TV.  
Details are on page 40.


## Auto-Power-Off

If a vacant channel is tuned or TV broadcast for a day is finished, the TV will automatically turn off after about 15 minutes.  
This feature does not operate in the VIDEO mode.

## Last Mode Memory

If the power is cut off while you are viewing the TV and the power is resupplied, the TV is turned on automatically by the **Last Mode Memory** feature. If the power is going to be off or when you leave home for a long time, remove the power plug from the wall outlet to prevent the TV from turning on in your absence.


# Convenient Remote Functions

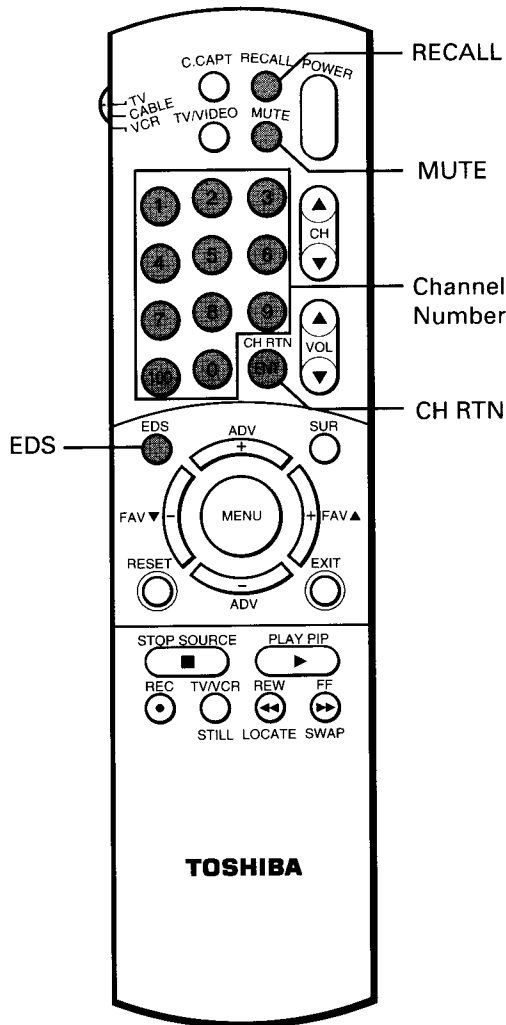

## Displaying on-screen information

Press **RECALL** to display the following on-screen information.


- Channel number or VIDEO mode selected
- Channel caption (if previously preset)
- Time (if clock has been set)
- Stereo or SAP audio status

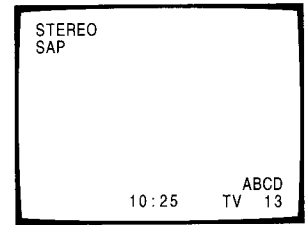

## Muting the sound

Press **MUTE** to mute the sound. The word "MUTE" will be displayed on the screen as shown. This is useful during telephone calls or other interruptions. To restore the sound, press **MUTE** again.

**Note:** When the MUTE button is pressed, the Closed-Captioned feature is activated. To deactivate, press the MUTE button again. (This feature only functions when the Closed Caption mode is set to "OFF".)

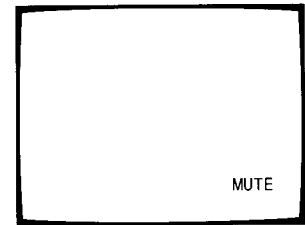


## Changing quickly between two channels

Press **RTN** to return to the last channel viewed. This is useful should you want to view two channels. This allows you to view two programs without entering an actual channel number each time.

### To operate this function

- 1 Select the first channel you want to watch.
- 2 Select the other channel with the **Channel Number** buttons.
- 3 Press **RTN**.  
The previous channel will return.


Each time you press **RTN**, the TV will switch back and forth between the two channels.

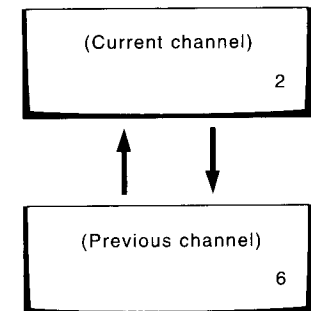

## Displaying the EDS information

Press **EDS** to display the following EDS (Extended Data Service) information for about 30 seconds.


- Network name ①
- Call letters ②
- Program name ③
- Program type ④
- Program length ⑤
- Time in show ⑥ (elapsed time)
- Program description ⑦

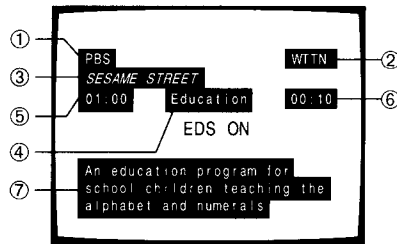

Some of the above information may not be displayed.


### If the TV program you are watching does not include the EDS information

Only "EDS ON" will be displayed for about 4 seconds when you press **EDS**.

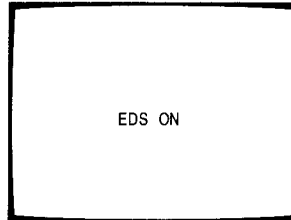


### To erase the EDS display

Press **EDS** again.

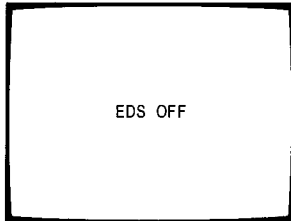


# Adjusting the Picture

You can adjust the picture quality (CONTRAST, BRIGHTNESS, COLOR, TINT and SHARPNESS) to suit your taste.

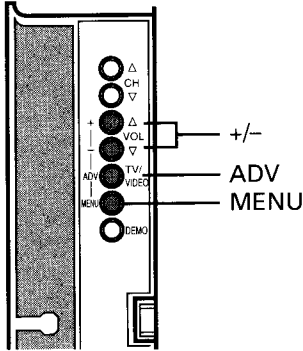


## Adjusting the picture quality


- 1 Press **MENU** repeatedly to display the PICTURE menu.
- 2 Press **ADV** repeatedly until the item you want to adjust is displayed in magenta.
- 3 Press **-** or **+** to adjust the level.

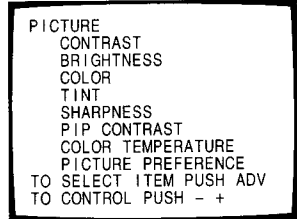

**Example:** CONTRAST adjustment mode display

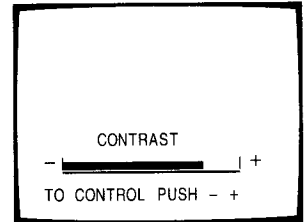

Press **ADV** (while the bar display remains on the screen).  
 The next setting will be selected in the PICTURE menu.

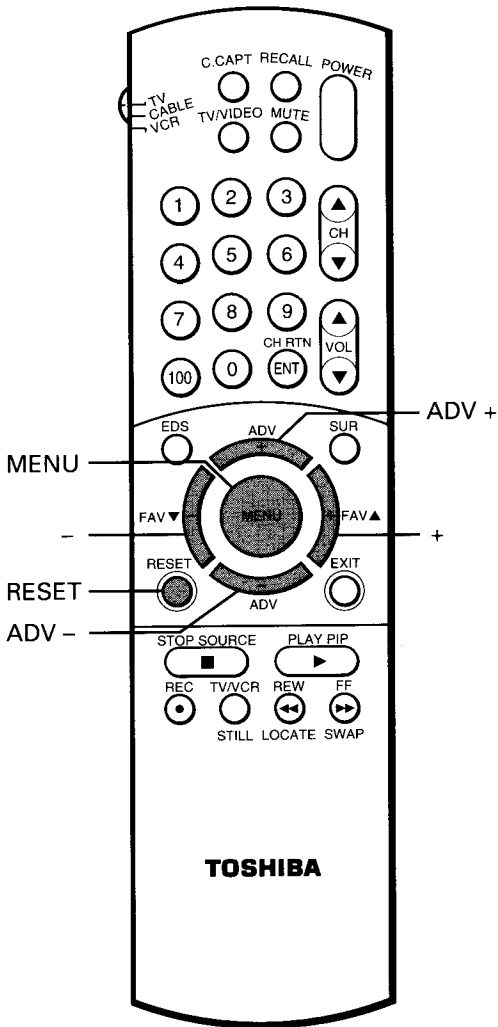

Selection	Pressing	
	-	+
CONTRAST	lower	higher
BRIGHTNESS	darker	lighter
COLOR	paler	deeper
TINT	reddish	greenish
SHARPNESS	softer	sharper

The above five PICTURE items you have adjusted will be stored in the MEMORY of the PICTURE PREFERENCE function (See page 21.)

### To reset the picture adjustments


Press **RESET**. (See page 22 for details.)

**Note:** The "PIP CONTRAST" function is explained on page 27.


### Selecting the color temperature

These selections adjust differences between the blue and red tones of the picture.

- 1-2** Select "COLOR TEMPERATURE" following the steps 1 and 2 on the previous page.

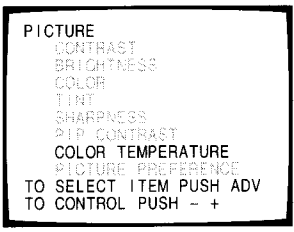


- 3** Press - or + until the mode you want is displayed in magenta. Choose between flesh tones that are COOL, MEDIUM and WARM in order.

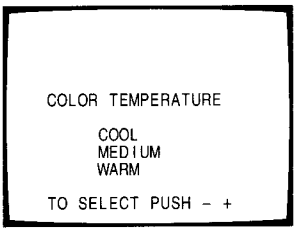


### Selecting the picture preference function

You can select a desired picture tone from three picture preset modes (NORMAL, THEATER, MEMORY) instantly.

- 1-2** Select "PICTURE PREFERENCE" following the steps 1 and 2 on the previous page.

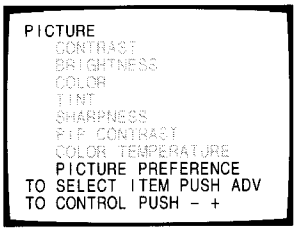

- 3** Press - or + until the mode you want is displayed in magenta.

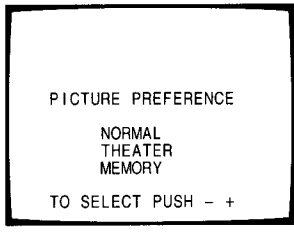


Mode	Picture quality
NORMAL	The picture quality preset at the factory
THEATER	Soft and moody picture
MEMORY	The picture quality you set (First follow page 20.)

**Note:** When you press the RESET button, the TV returns to "NORMAL" mode. (Your preferred adjustments remain in "MEMORY" mode.)


# Adjusting the Sound

You can adjust the sound quality (BASS, TREBLE and BALANCE) to suit your taste.

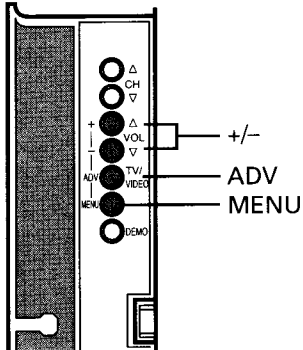


## Adjusting the sound quality

- 1 Press **MENU** repeatedly to display the AUDIO menu.
- 2 Press **ADV** repeatedly until the item you want to adjust is displayed in magenta.
- 3 Press **-** or **+** to adjust the level.

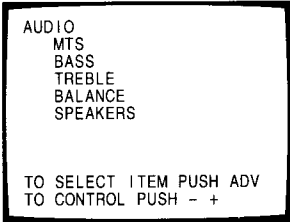


**Example:** BASS adjustment mode display

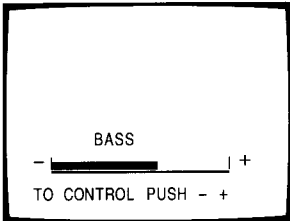

Press **ADV** (while the bar display remains on the screen).  
The next setting will be selected in the AUDIO menu.

Selection	Pressing	
	-	+
BASS	weaker	stronger
TREBLE	weaker	stronger
BALANCE	decreases the right channel	decreases the left channel

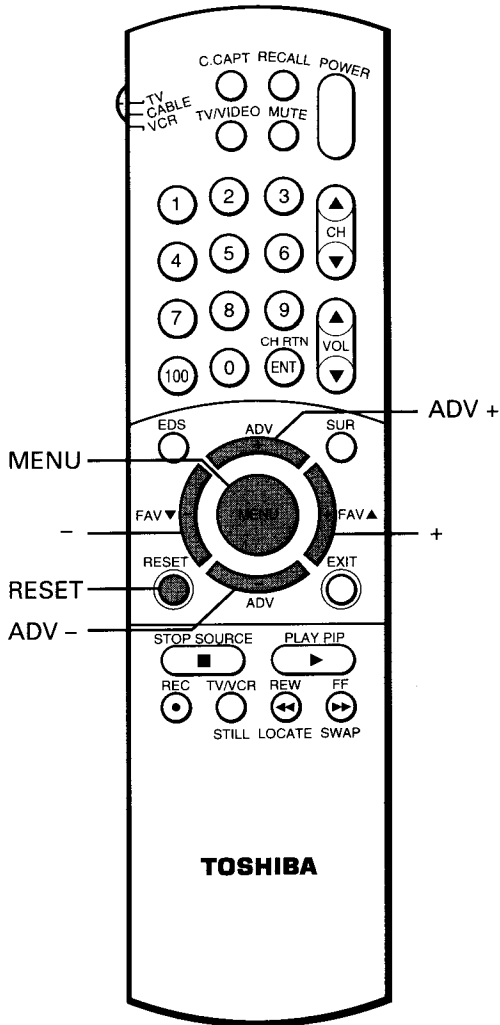

### RESET button (on the Remote Control)

To reset the PICTURE and AUDIO adjustments to the factory-preset level (maximum CONTRAST and all other adjustments centered)

Press **RESET**.

The RESET button also performs the following adjustments.



- COLOR TEMPERATUTE ..... COOL
- PICTURE PREFERENCE ..... NORMAL
- NOISE REDUCTION ..... OFF
- PIP CONTRAST ..... Maximum setting



**Note:** The "MTS" and "SPEAKERS" functions are explained on pages 23 and 43.



# Selecting Stereo/SAP Broadcasts

The MTS (Multi-channel TV Sound) feature allows you to improve your TV viewing with high fidelity stereo sound. MTS also provides for an extra channel, SAP (Second Audio Program), used to transmit a second language or other audio information.

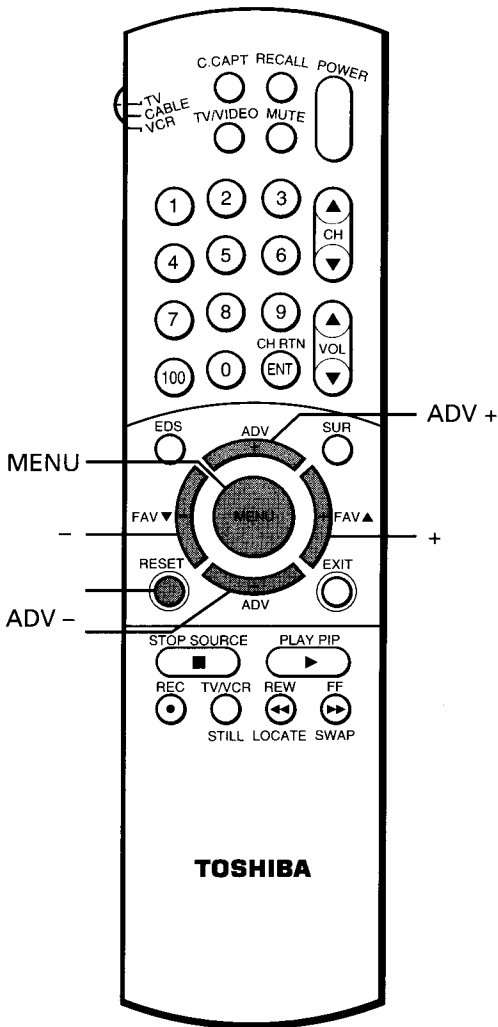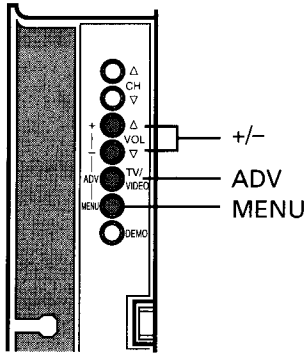

## Listening to stereo sound


- 1 When the TV receives a stereo (or SAP) broadcast, the word "STEREO" (or "SAP") is displayed on the screen whenever the TV is turned on, a channel is selected, or the RECALL button is pressed.
- 2 Press **MENU** repeatedly to display the AUDIO menu.
- 3 Press **ADV** repeatedly until "MTS" is displayed in magenta.
- 4 Press **-** or **+** until "STEREO" is displayed in magenta. If a stereo broadcast is received, "STEREO" will be displayed in yellow.

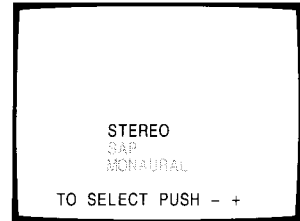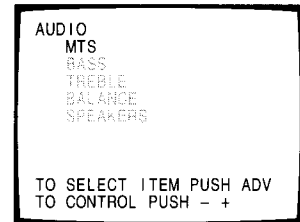

Normally this function can be left in the STEREO mode. Your TV will then automatically reproduce either stereo or monaural sound, whichever is broadcast.

## Listening to second language

- 1-3 Follow the above steps 1 to 3.
- 4 Press **-** or **+** until "SAP" is displayed in magenta. You will hear only the second language from the left and right speakers.

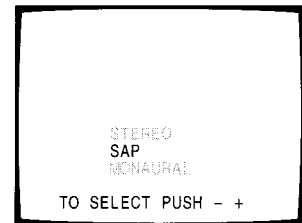

### Notes:


- Be sure you have selected the STEREO mode if broadcast is in stereo.
- "MTS" in the AUDIO menu does not function in the VIDEO mode.

### If the stereo sound is noisy

If a broadcast signal is not strong enough, and noise-free stereo sound is not available, select the "MONAURAL" mode. The noise should be reduced.

# Enhancing the Surround Sound Effect


The Surround function expands the audio listening field wider and deeper than you would believe possible from a TV's speakers. This function process stereo signals from a TV broadcast or VIDEO input.

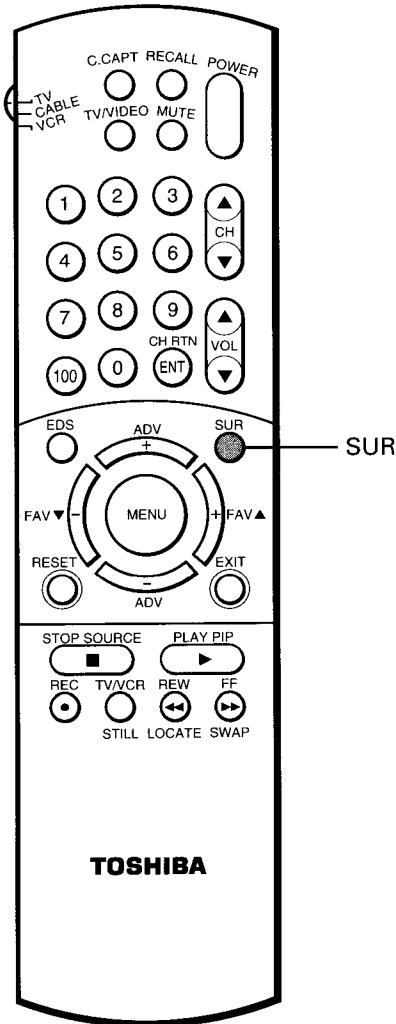

## Activating the Surround function

- 1 Select the STEREO mode following the steps on the previous page.
- 2 Press **SUR** on the Remote Control to call up the Surround ON/OFF mode on the screen display as shown.

Press **SUR** until "SURROUND ON" is displayed in magenta.

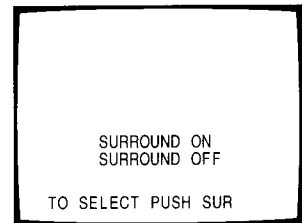

The Surround function has now been activated.

**Note:** Normally you can leave the MTS function set to "STEREO" and the Surround function set to "ON". The TV will automatically produce either Surround stereo or monaural, depending on the broadcast type.



### To deactivate the Surround

Select "SURROUND OFF" in step 2 above.




# Watching Picture-in-Picture

In addition to the main picture, another TV program or video source being received through the VIDEO input jacks can be displayed simultaneously as a small picture. This is called PIP (Picture-in-Picture).  
**Be sure to connect a VCR with the VIDEO/AUDIO cables.**

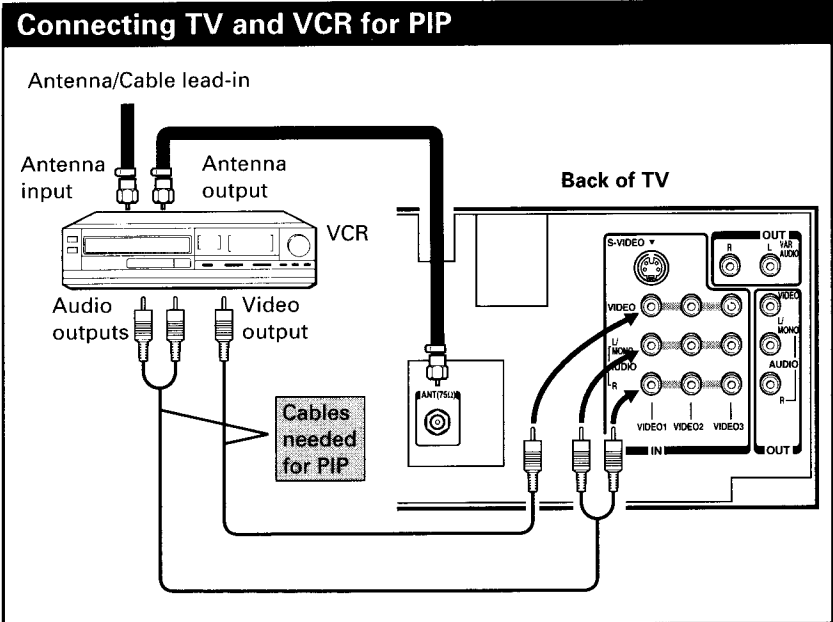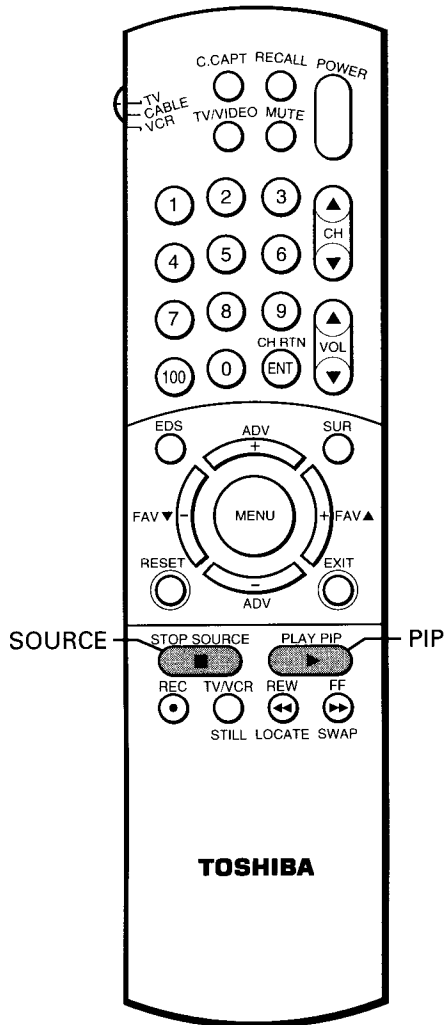


## Displaying a small picture

**1** Press **PIP** once to display a small picture. The 1/9 size window picture will appear. If you press **twice**: The 1/16 size window picture will appear.

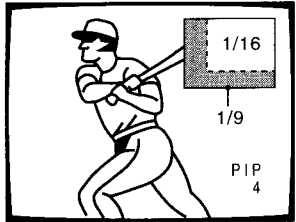

**2** Press **SOURCE** repeatedly to select the input source for the small picture. Select "VIDEO 1", "VIDEO 2" or "VIDEO 3". The selected mode will be displayed in magenta.

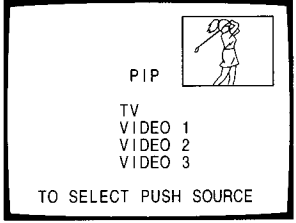

**3** Select channels for the PIP using the VCR's channel keys.

**To turn off the small picture, press PIP**  
 - **Twice**, if you watch the 1/9 size window picture.  
 - **Once**, if you watch the 1/16 size window picture.

Enhancing the Surround Sound Effect/ Watching Picture-in-Picture


**ADVANCED OPERATION**

# Watching Picture-in-Picture (Continued)

## Using advanced functions


### To change the position of the small picture

Press **LOCATE** repeatedly when a small picture is displayed. The display position of the small picture will change in order.

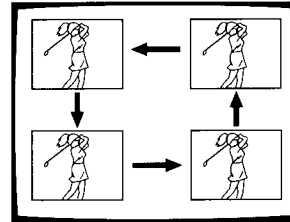


### To switch the main and small picture

Press **SWAP** when a small picture is displayed. The main and small pictures will switch. To switch them again, press **SWAP** again.

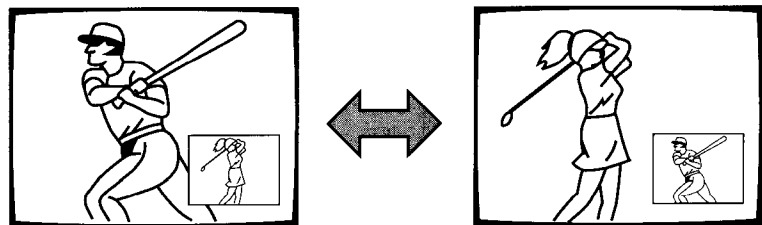


### To freeze the small picture

Press **STILL** when a small picture is displayed. The small picture will become a still picture. To return it to a moving picture, press **STILL** again.

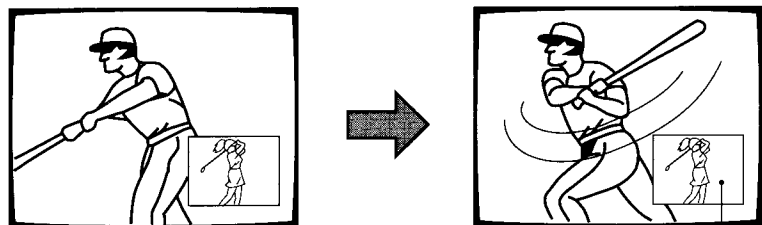

Still picture

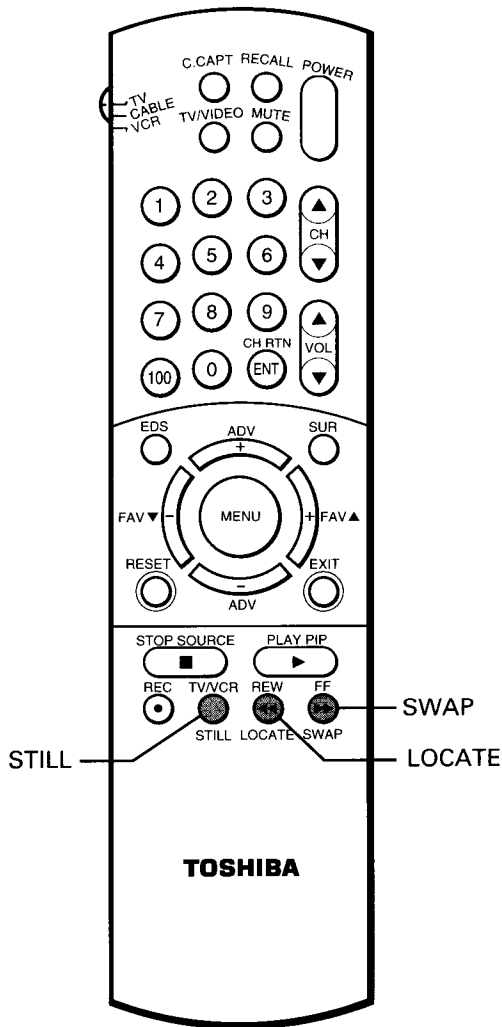


STILL

SWAP


LOCATE

## Adjusting the picture performance of the small picture


### To adjust the contrast of the small picture

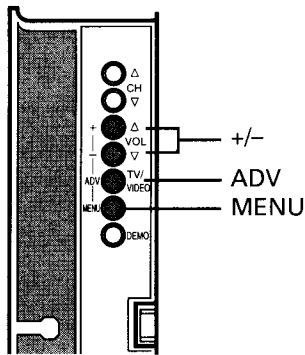


1 Press **PIP** to display a small picture.

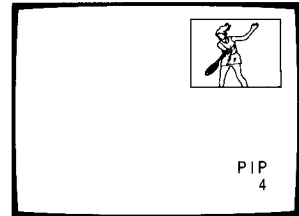



2 Press **MENU** repeatedly to display the PICTURE menu.

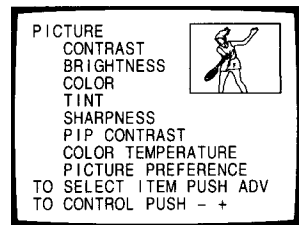

3 Press **ADV** repeatedly until "PIP CONTRAST" is displayed in magenta.

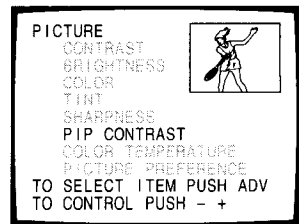

4 Press **-** or **+** to adjust the contrast level of the small picture.

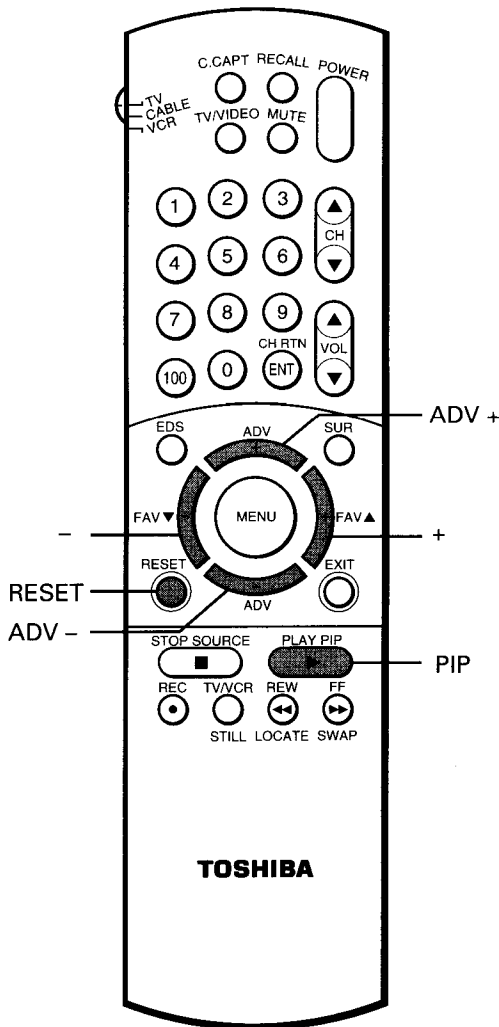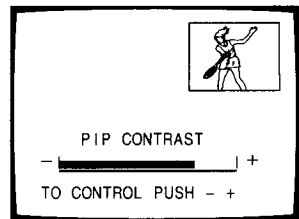


**Note:** When you press the **RESET** button, your adjustment will automatically be set to the factory-preset level.

#### CAUTION:

Avoid displaying stationary images on your TV screen for an extended period of time. Stationary patterns generated by PIP display, computer displays, videogames, stock market reports, etc. can become permanently ingrained on the picture tube. This damage is not protected by your warranty as it is the result of misuse. If you use your TOSHIBA Television to display still images, it is always advisable to reduce the brightness and contrast settings. Never leave a PIP display, computer display or videogame unattended.




# Setting the Off-Timer (Sleep Timer)

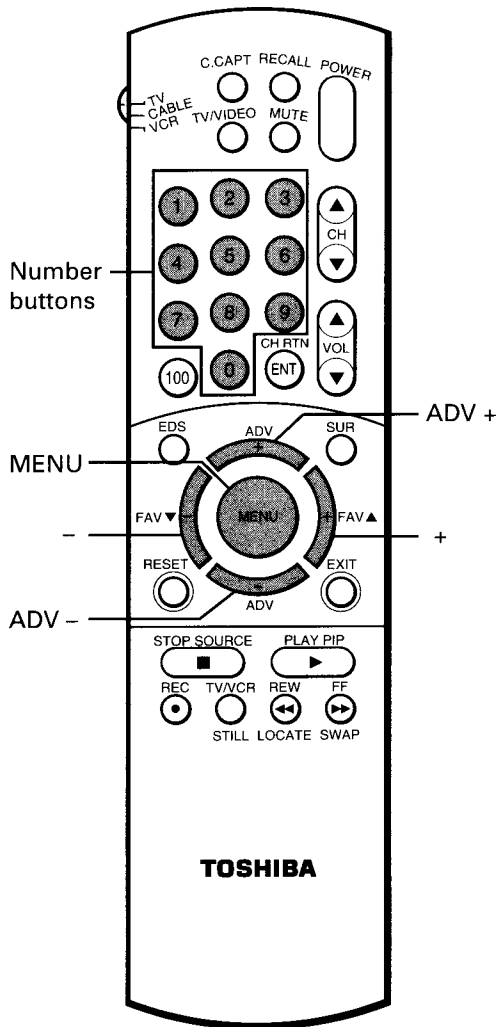

## Setting the off-timer

With the off-timer, you can set the TV to turn off automatically after a pre-determined period of time (up to 180 minutes in 10 minutes unit).

- 1** Press **MENU** repeatedly to display the SET UP menu.
- 2** Press **ADV** repeatedly until "TIMER/CLOCK" is displayed in magenta.
- 3** Press **-** or **+** until "TIMER" is displayed in magenta in the TIMER mode.
- 4** Press two **Number** buttons to enter the length of time you want the TV to stay on after each number position starts to blink.  
**Example:** 120 minutes  
Press 1, then 2.
- 5** Press **ADV** to start the off-timer. The display color will change from magenta to cyan, then the display will go off.

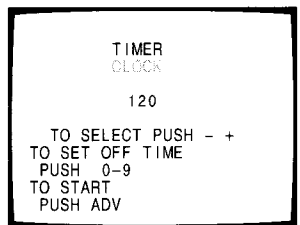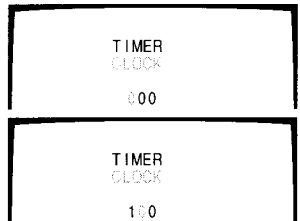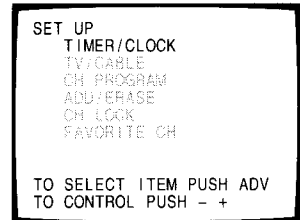


### To cancel the setting

Press **POWER** twice, once to turn the TV off and once to turn it on again.

**Note:** To display the time remaining, call up the TIMER mode display. The remaining time will be displayed on the screen. To close the display, press **EXIT**.

# Setting the Clock


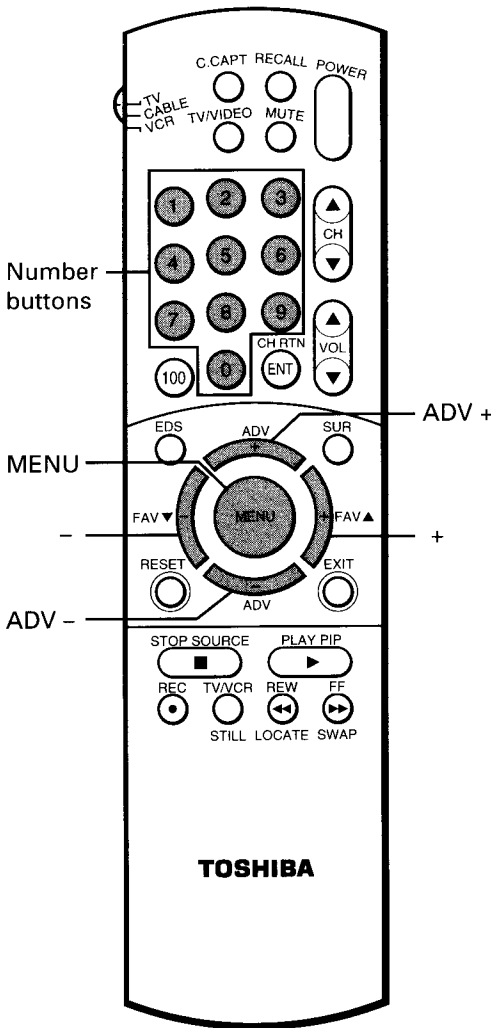


## Setting the clock

- 1 Press **MENU** repeatedly to display the SET UP menu.
- 2 Press **ADV** repeatedly until "TIMER/CLOCK" is displayed in magenta.
- 3 Press **-** or **+** until "CLOCK" is displayed in magenta in the CLOCK mode.
- 4 Press four **Number** buttons to enter the correct time after each number position starts to blink.
 

**Example:** To set 10:25 p.m.  
Press 1, 0, 2 and 5.

  - The clock operates on a 12-hour cycle.
- 5 Press **ADV** to start the clock.

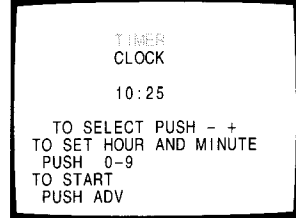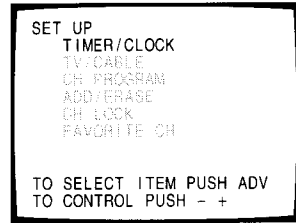


**To monitor the time**  
 Press **RECALL**.

**Note:** If the power source for the TV is interrupted (i.e., AC cord unplugged or power failure), the clock will have to be reset. (The time display will show "00:00".)

# Locking Channels


With this function you can lock out specific channels by entering your own 4-digit code. The TV will not be able to tune to those channel for the next 24 hours, unless you enter the code. This TV has 8 memory spaces total, 4 for the TV mode and 4 for CABLE mode.

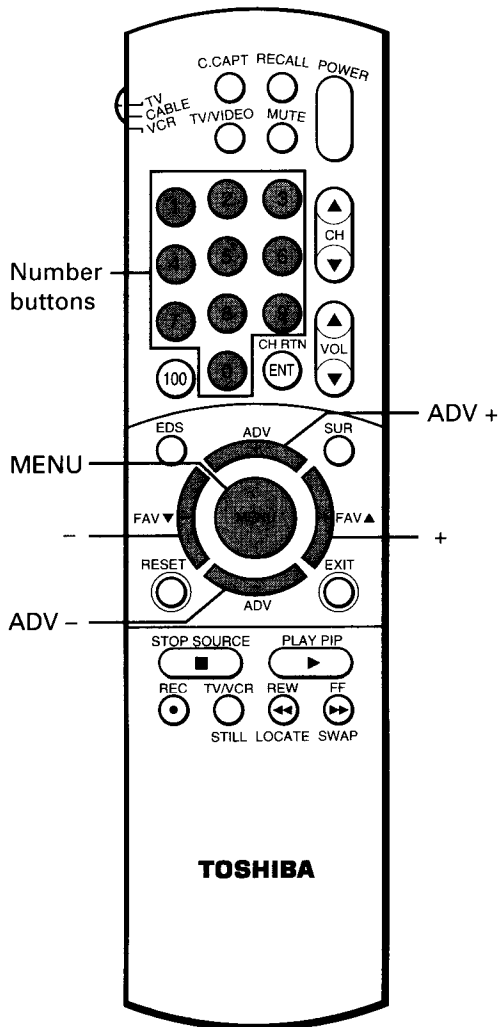


## Locking out channels

**1** Select a channel you want to lock out.

**Example:** channel 4

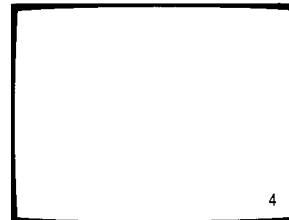


**2** Press **MENU** repeatedly display the SET UP menu.

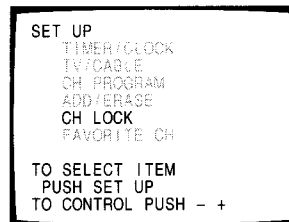

**3** Press **ADV** repeatedly until "CH LOCK" is displayed in magenta.

**4** Press **-** or **+** to call up the channel lock adjustment display shown below. Each time you press the button, you are guided between "SET" and "CLEAR". Select "SET"


SET  
↓↑  
CLEAR

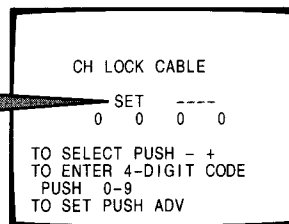


**5** Press **Number** buttons (0 - 9) to enter a 4-digit code. The numbers you enter will replace the dashes in the display. **Pick a number that is easy to remember.**

**Example:** To enter "1234"  
Press 1, 2, 3 and 4 in order.

1 - - - → 1 2 - - → 1 2 3 - → 1 2 3 4

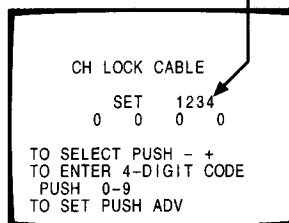

- 6** Press **ADV** to lock out the channel.  
The display at the right will appear on the screen for about 4 seconds.

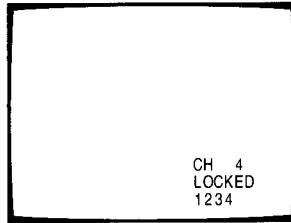


- 7** Repeat steps 1 to 6 for other channels.  
This TV has 8 memory spaces total, 4 for the TV mode and 4 for CABLE mode respectively.

**Note:** If a different code number is used whenever you lock out a channel, the last one has priority over the preceding ones.

- 8** Select another channel before turning off the TV.


## Unlocking channels

- 1** Select "CLEAR" following steps 2 to 4 on the previous page.

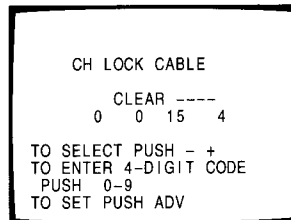


- 2** Enter the 4-digit code used to lock out the channels with the Number buttons.

- 3** Press **ADV**.  
**If you have entered the correct code**  
The display shown at the right appears.

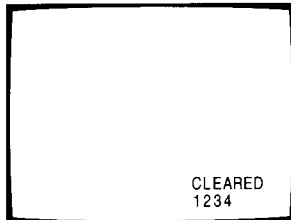



**If a wrong code has been entered**  
These messages appear. Try to enter the correct code again.

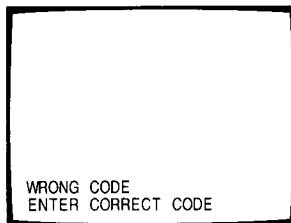

**If you want to know the channels you have locked out**  
Call up the channel lock adjustment mode using the SET UP menu.

# Programming Your Favorite Channels


The Favorite Channel Programming feature allows you to program up to 12 of your favorite channels. Once programmed, you can use the FAV ▼/▲ buttons on the Remote Control to scan through only your favorite channels, skipping other channels you do not normally view. You can use the CHANNEL ▲/▼ buttons to scan through all the channels you programmed in the TV's memory.

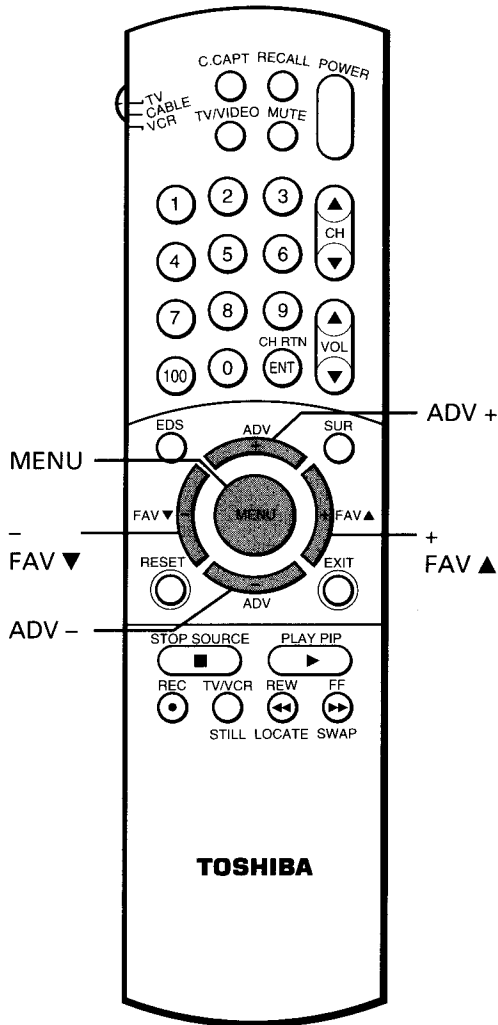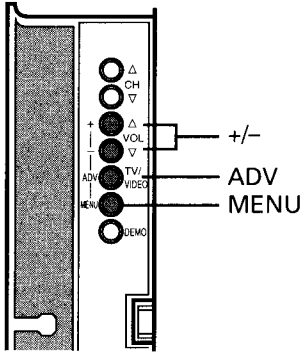


## Programming your favorite channels

**1** Select a channel you want to program.


**Example:** channel 2

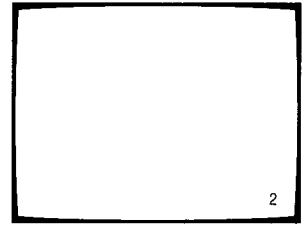

**2** Press **MENU** repeatedly to display the SET UP menu.

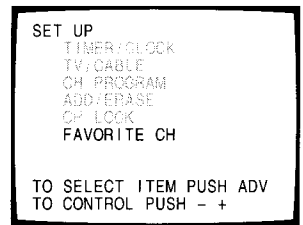


**3** Press **ADV** repeatedly until "FAVORITE CH" is displayed in magenta.

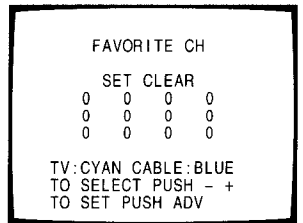

**4** Press - or + to display FAVORITE CH menu. Each time you press - or +, you are guided between "SET" and "CLEAR".

Display "SET" in magenta.

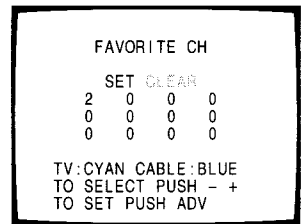

**5** Press **ADV** until the channel number to be programmed ("2" in this example) replaces "0" on the display.

**6** Repeat steps 1 to 5 for other channels.

## Selecting your favorite channels

To select your favorite channels you have programmed, use the **FAV ▼/▲** buttons on the Remote Control instead of using the **CHANNEL ▲/▼** buttons.


**Note:** The **FAV ▼/▲** buttons cannot function if you have not programmed your favorite channels.




## Clearing your favorite channels

- 1 Select a favorite channel you want to clear.

**Example:** channel 2

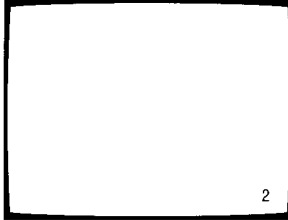

- 2 Press **MENU** repeatedly to display the SET UP menu.

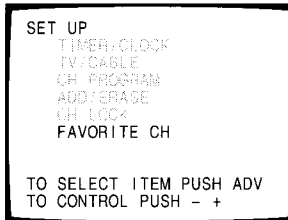


- 3 Press **ADV** repeatedly until "FAVORITE CH" is displayed in magenta.


- 4 Press **-** or **+** to display FAVORITE CH menu.

Each time you press **-** or **+**, you are guided between "SET" and "CLEAR".

Display "CLEAR" in magenta.



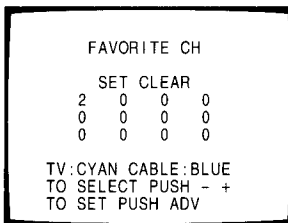


- 5 Press **ADV** until the channel number to clear ("2" in this example) changes to "0" on the display.

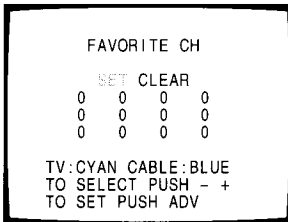

- 6 Repeat steps 1 to 5 for other channels.

# Using Closed-Captioned Function

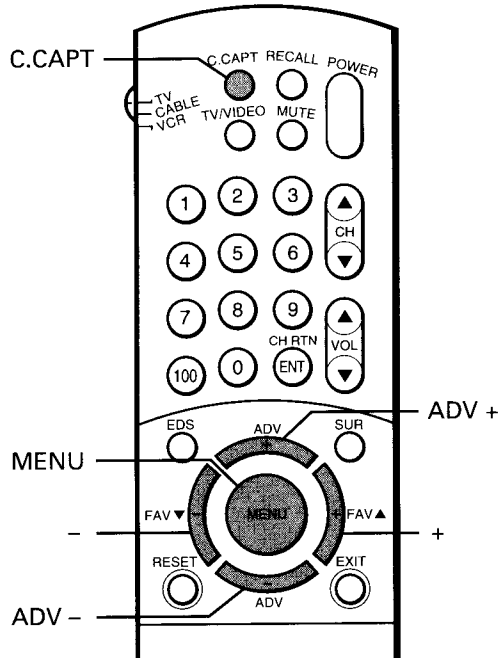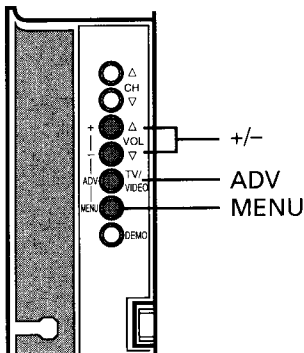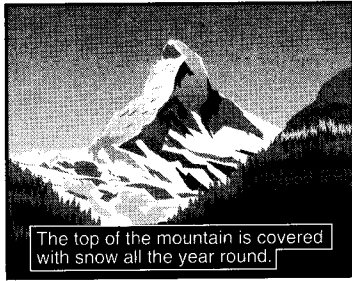


**Note:**  
 A closed-captioned signal may not be decoded in the following situations.

- When a video tape has been dubbed.
- When the signal reception is weak.
- When the signal reception is non-standard.

## Viewing captions

Closed-captioning is a printed version of the dialogue, narration, and/or sound effects of a TV program. Captions will appear at either the top or bottom of the screen during captioned broadcasts as shown. Captioning is especially helpful for hearing impaired individuals.



- 1 Select the desired program.
- 2 Press **C.CAPT** on the Remote Control to call up the CLOSED CAPTION mode display.

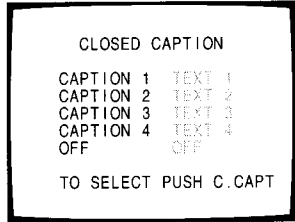

Press **C.CAPT** repeatedly until "CAPTION 1", "CAPTION 2", "CAPTION 3" or "CAPTION 4" is displayed in magenta. Select "CAPTION 1" for a transcription of the primary language in your area. Select "CAPTION 3" for captioning information usually of secondary languages. "CAPTION 2" or "CAPTION 4" carries Closed Captioning but not necessarily in the same time frame as the sound from the program.

### You can also select this feature using the on-screen menu function.

- 1 Press **MENU** repeatedly to display the OPTION menu.
- 2 Press **ADV** repeatedly until "CLOSED CAPTION" is displayed in magenta.
- 3 Press - or + to select "CAPTION 1", "CAPTION 2", "CAPTION 3" or "CAPTION 4".

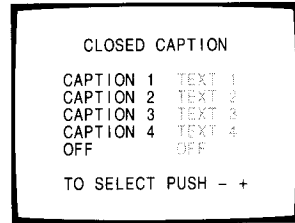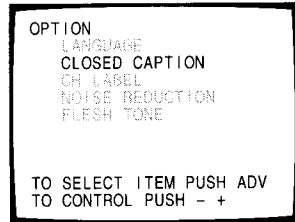

**To deactivate this feature**  
 Select "OFF" in the CLOSED CAPTION mode display.



## Viewing text

Text is information that is presented using from one half to all of the television screen. It is usually not related to the program.

For example, it could be a listing of the closed-captioned programs, news, weather information or stock market reports.


- 1 Select the desired program.
- 2 Press **C.CAPT** on the Remote Control to call up the CLOSED CAPTION mode display.

Press **C.CAPT** repeatedly until "TEXT 1", "TEXT 2", "TEXT 3" or "TEXT 4" is displayed in magenta.

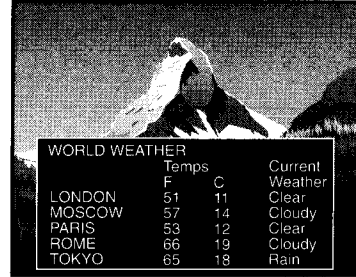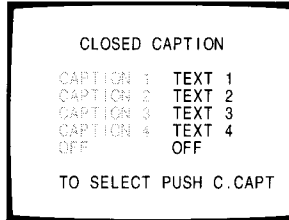


You can also select this feature using the on-screen menu function.

- 1 Press **MENU** repeatedly to display the OPTION menu.
- 2 Press **ADV** repeatedly until "CLOSED CAPTION" is displayed in magenta.

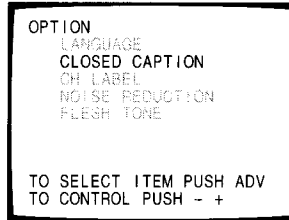

- 3 Press - or + to select "TEXT 1", "TEXT 2", "TEXT 3" or "TEXT 4".

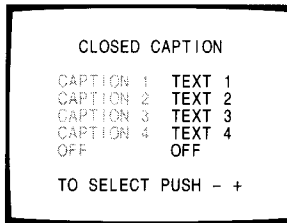



### To deactivate this feature

Select "OFF" in the CLOSED CAPTION mode display.

**Note:** If you select a closed-captioned channel and the "TEXT" mode, the TEXT screen always appears. However, TEXT characters are not displayed when no signal is aired.

# Labeling Channels


This feature allows you to enter a 4 letter channel identifier of your choice that will appear over the channel number display. The labeling can be anything you want (for example the station call letters).

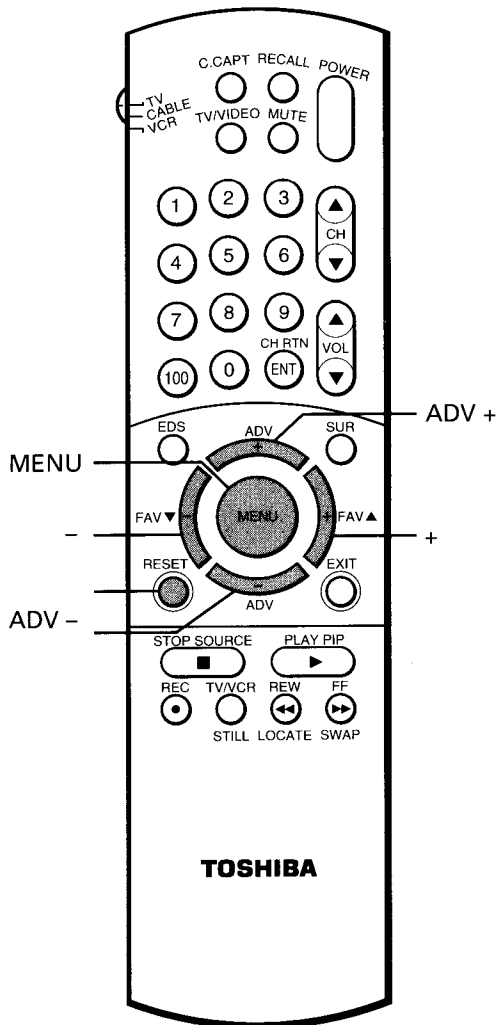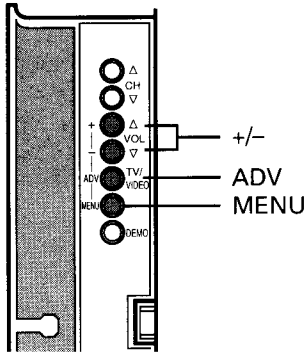


## Programming the channel labels

- 1 Select the channel you want to apply labels.

**Example:** To assign "ABCD" to channel 4.

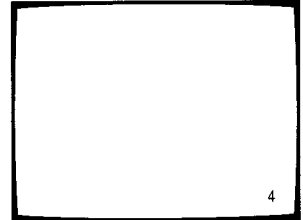


- 2 Press **MENU** repeatedly to display the OPTION menu.

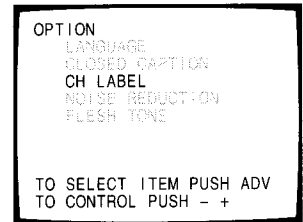


- 3 Press **ADV** repeatedly until "CH LABEL" is displayed in magenta.


- 4 Press - or + to call up the CH LABEL mode display shown below on the screen.

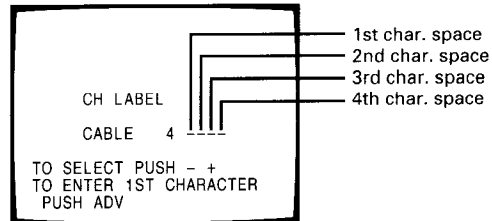

Letters of the alphabet, numbers and other graphic symbols are available for labeling. Each time you press the - or + button, the displayed character will change in the following order.

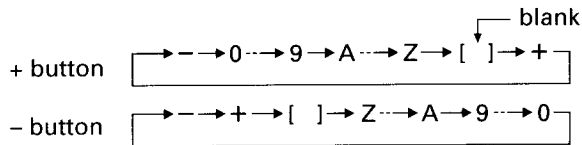


- 5 Press - or + repeatedly until the 1st character ("A" in this example) appears in the 1st character space.

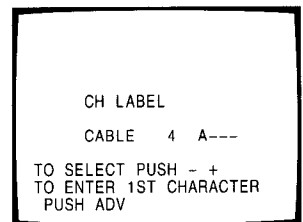


- 6 Press **ADV** once to enter the 1st character and to advance to the next character space.

- 7** Repeat steps 5 and 6 to enter the 2nd, 3rd and 4th characters ("B", "C", "D" in this example). When the on-screen message at the right appears, the channel label has been stored in the memory.

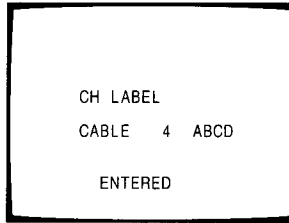


- 8** Repeat steps 1 through 7 for other channels. You will be able to apply labels to up to 32 names. The label will appear when you turn the TV on, select a channel, or press the RECALL button.

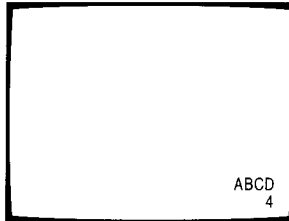


### Clearing channel labels

- 1** Select the channel which has the label you want to clear.


- 2-4** Follow steps 2-4 on the previous page to call up the CH LABEL mode display.

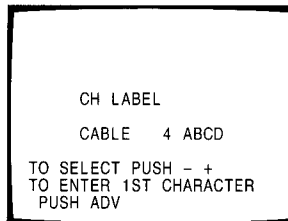

- 5** Enter "[blank]" or "-" in all character spaces.

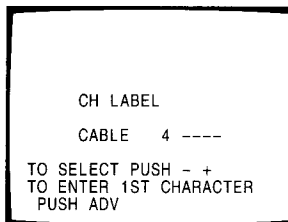


# Activating Noise Reduction/Flesh Tone Functions

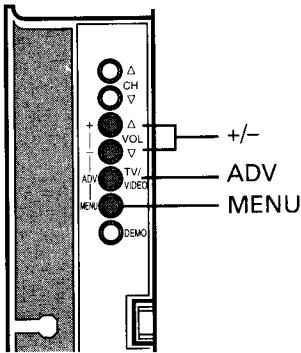


## Reducing picture noise

This function allows you to reduce visible interference in your TV picture. This is useful when receiving a broadcast with a weak signal or playing back a video cassette or disc damaged by repeated use.

- 1 Press **MENU** repeatedly to display the **OPTION** menu.
- 2 Press **ADV** repeatedly until "NOISE REDUCTION" is displayed in magenta.

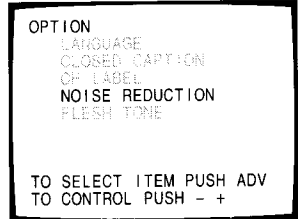

- 3 Press **-** or **+** until "NOISE REDUCTION ON" is displayed in magenta.

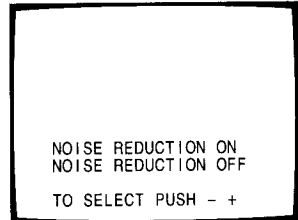


**To deactivate this function**  
Select "NOISE REDUCTION OFF".


## Activating flesh tone function

This function allows you to obtain natural flesh tone by correcting the reference of tint between TV stations.


- 1-2 Select "FLESH TONE" following steps 1 and 2 above.

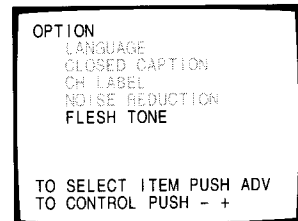

- 3 Press **-** or **+** until "FLESH TONE ON" is displayed in magenta.

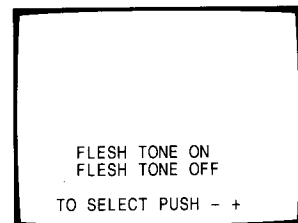


**To deactivate this function**  
Select "FLESH TONE OFF".

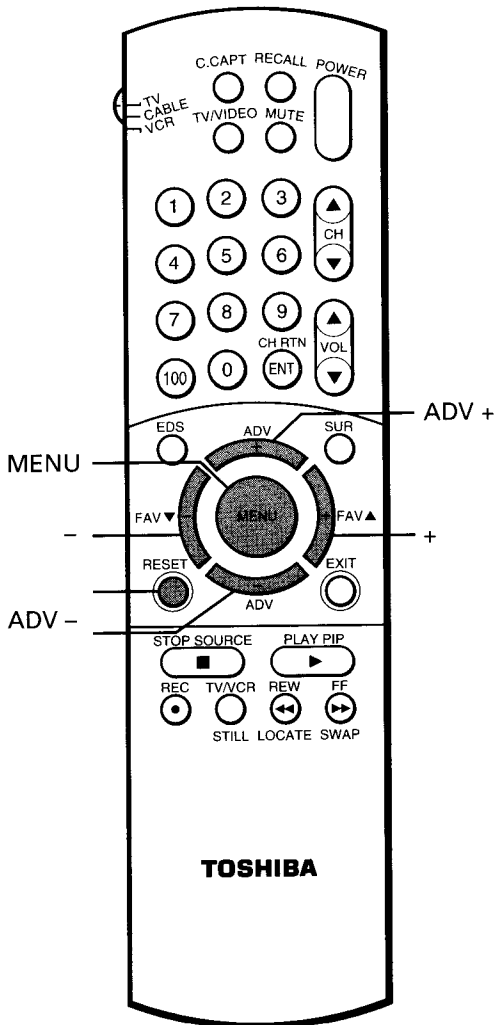




# Changing On-Screen Display Language

Three different languages (ENGLISH, FRENCH and SPANISH) are available for the on-screen displays (adjustment menus, and messages), and you can choose the desired one.

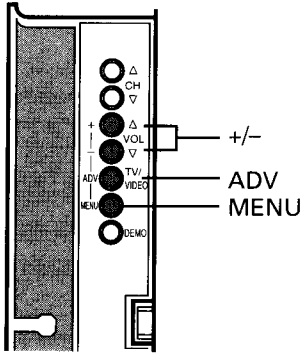


## Selecting a language

- 1 Press **MENU** repeatedly to display the OPTION menu.
- 2 Press **ADV** repeatedly until "LANGUAGE" is displayed in magenta.
- 3 Press **-** or **+** until your desired language is displayed in magenta.

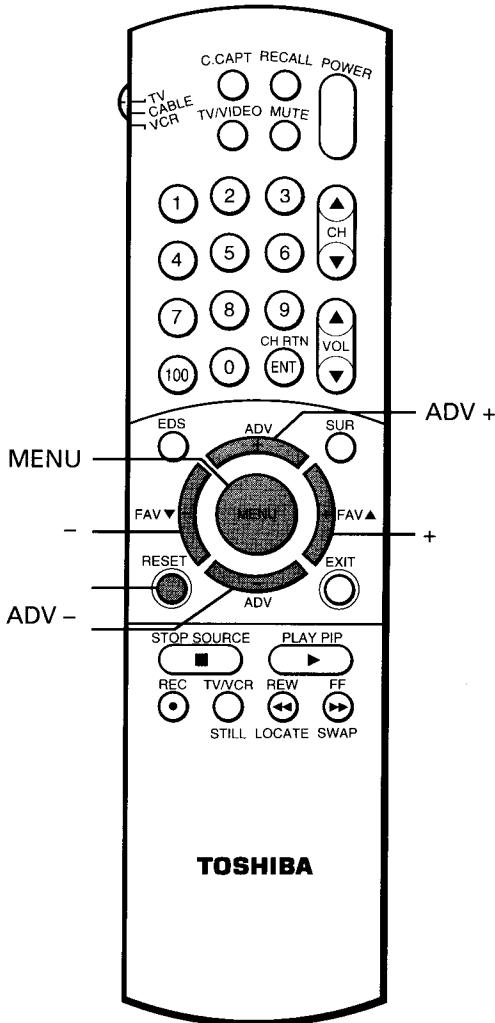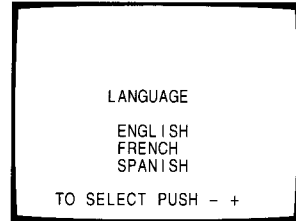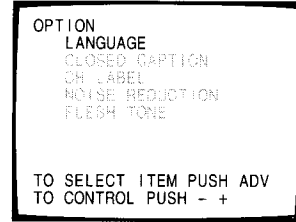


**Example:** PICTURE menu display


"ENGLISH"

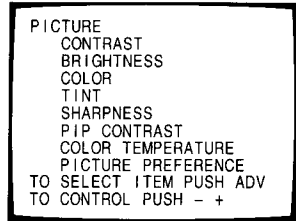

"FRENCH"

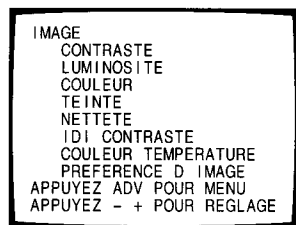

"SPANISH"

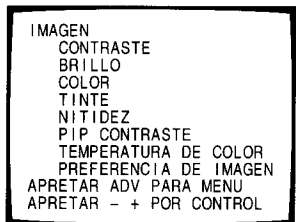


Activating Noise Reduction/Flesh Tone Functions/  
Changing On-Screen Display Language

ADVANCED  
OPERATION

# Connecting a Standard VCR



Connect VIDEO 1, VIDEO 2 or VIDEO 3 IN jacks on the TV rear panel to the video/audio output jacks of a VCR, Laser disk player, camcorder, etc. for playback of video material.

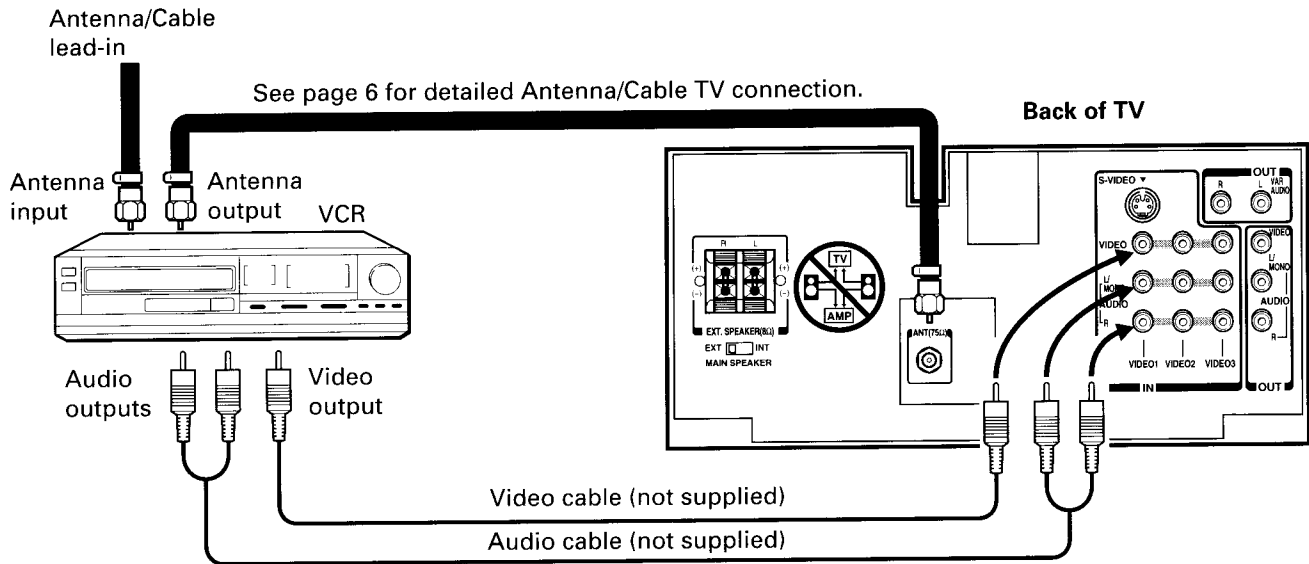

## Selecting video input source

To operate your TV and video equipment properly, refer to the instructions furnished with the video equipment.


- 1 Turn the TV and VCR ON.
- 2 Press **TV/VIDEO** on the Remote Control or on the TV to select the appropriate source. ("VIDEO 1" in this example). Each time you press the button, TV, VIDEO 1, VIDEO 2 or VIDEO 3 source will be selected in order.

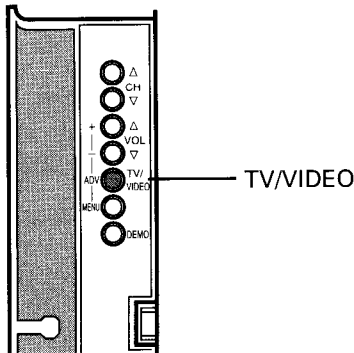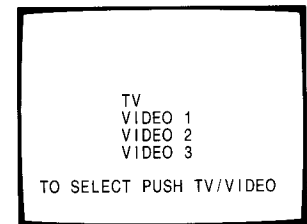

- 3 Operate your VCR normally.

### Notes:


- The VIDEO 2 IN jacks can also be used for connecting a second piece of video equipments with video/audio outputs. To view video from equipment connected to the VIDEO 2 IN jacks, select "VIDEO 2".
- The VIDEO 3 IN jacks can also be used for connecting a third piece of video equipments with video/audio outputs. To view video from equipment connected to the VIDEO 3 IN jacks, select "VIDEO 3".
- If you connect a monaural VCR, connect the audio output of the VCR to the L/MONO jack of the VIDEO 1/2/3 IN jacks on the TV.

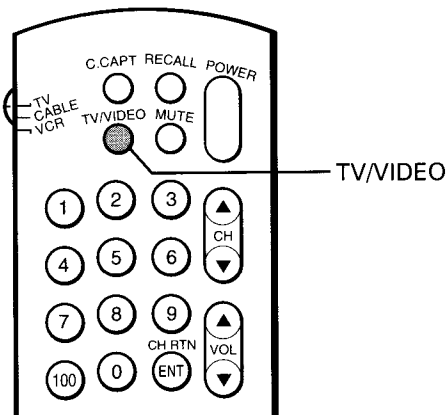



# Connecting a VCR with an S-Video Jack

If you connect a VCR with an S-video jack to the S-VIDEO jack on the back of the TV, you must also connect the audio cables to the AUDIO jacks of the VIDEO 1 IN jacks on the back of the TV. The S-video cable only carries the video signal. Audio signals are separate.

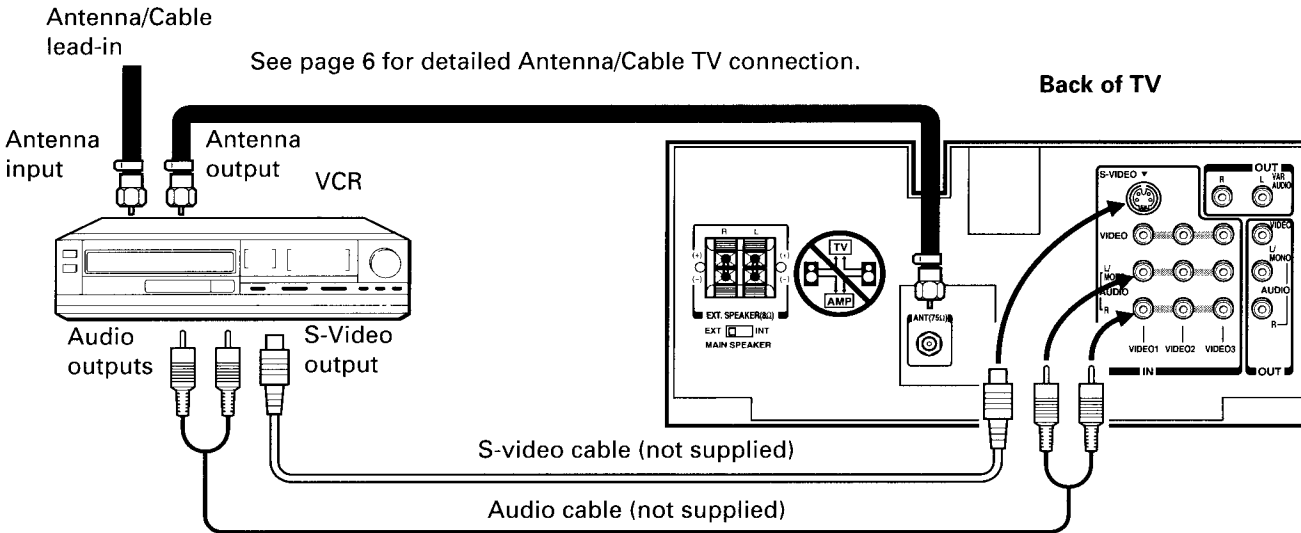

## Selecting video input source

- 1 Turn the TV and VCR ON.
- 2 Press **TV/VIDEO** to select "VIDEO 1".
- 3 Operate your VCR normally.

### Notes:

- If you connect a monaural VCR, connect the audio output of the VCR to the L/MONO jack of the VIDEO 1 IN jacks on the TV set.
- When the S-video cable is connected to the S-VIDEO IN jack, the video cable (phono-type) should not be connected.
- The S-VIDEO jack accepts SEPARATED Luminance/Chrominance (Y-C) signals conforming to the NTSC standard.


Connecting a Standard VCR/ Connecting a VCR with an S-Video Jack

EQUIPMENT CONNECTIONS

# Dubbing/Editing Video Tapes Using 2 VCRs

To dub or edit your own video tapes between one VCR and another, connect the VCR that will play to the input jacks (VIDEO 1, VIDEO 2 or VIDEO 3) on the TV. Then connect the output jacks from the TV to the input jacks on the recording VCR.

**Note:** Do not connect one VCR to the output and input jacks on the TV at the same time.

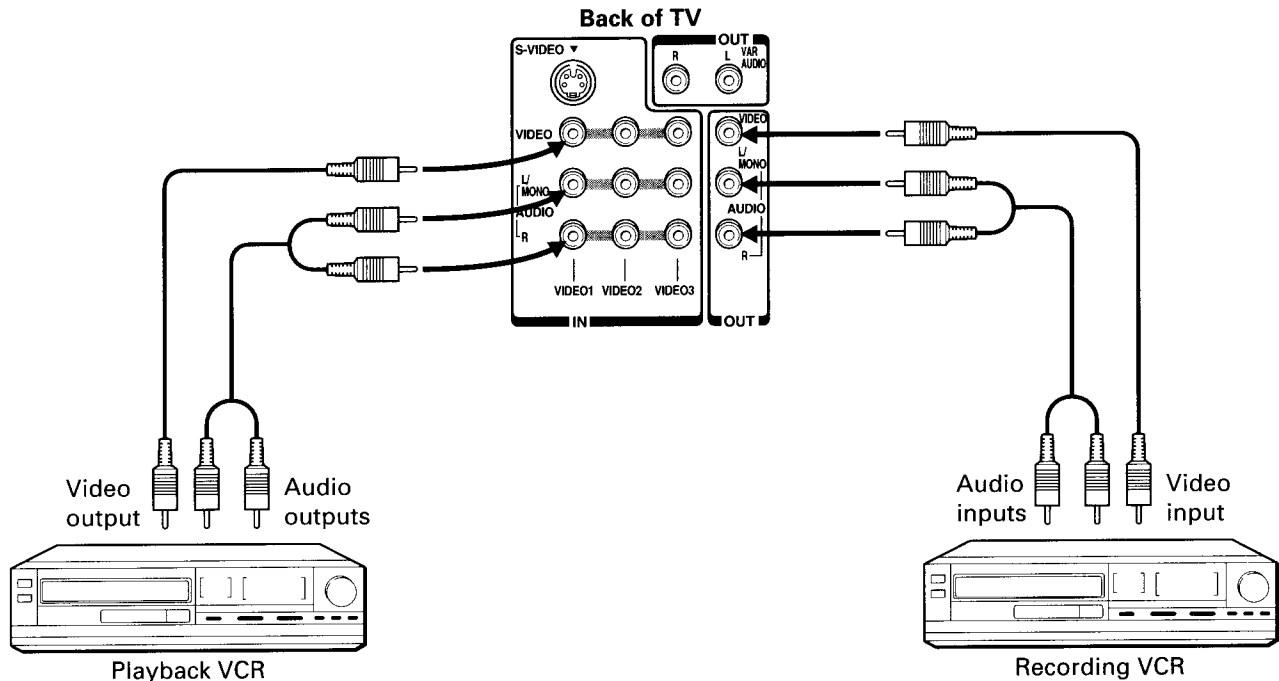

## Monitoring your dubbing/editing

- 1 Turn the TV and both VCR's ON.
- 2 Press **TV/VIDEO** to select "VIDEO 1".
- 3 Set the recording VCR to record mode and the playback VCR to play.
- 4 You can view the video signal from the playback VCR on the TV screen while dubbing it onto the recording VCR.

### CAUTION:


The unauthorized recording of television programs, video tapes and other materials may infringe upon the provisions of the copyright laws.

### Notes:

- The input switch of the VCR is normally in the TV position. Change the switch of the recording VCR to the LINE or CAMERA position when using the video/audio inputs of the VCR as above. Some VCR's automatically switch when the cables are plugged into the video/audio inputs.
- The PIP picture cannot be output through the VIDEO OUT jack.

# Connecting an Audio Amplifier

Connect the VARIABLE AUDIO OUT jacks to the auxiliary input jacks on a stereo amplifier. You can control the audio signal going to the audio level using the Remote Control for this TV.

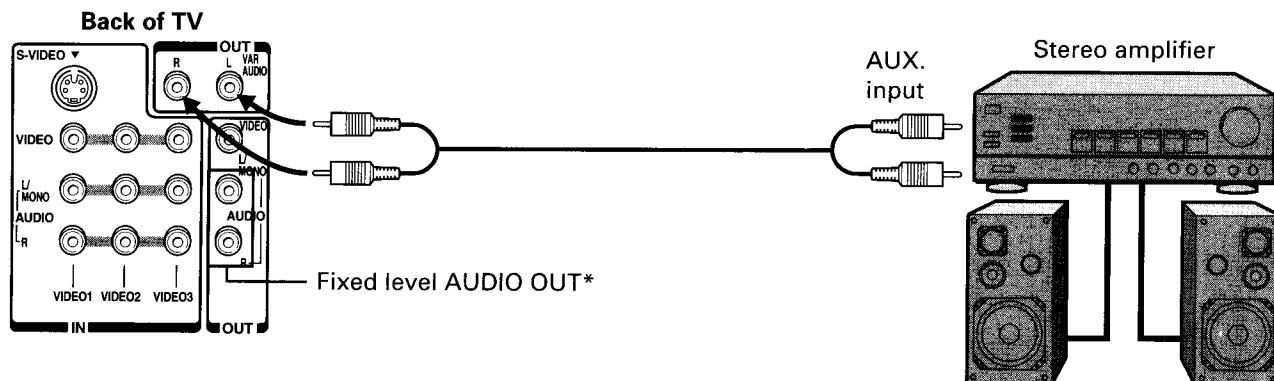



\* The "fixed level" audio signal present at the AUDIO jacks of VIDEO/AUDIO OUT jacks is also ideal for connecting an audio cassette recorder (or amplifier) to record audio from the TV. This constant audio signal is not affected by pressing the VOLUME buttons on the TV or the TV's Remote Control.

## Preparing for use

- 1 Turn the TV and the stereo amplifier ON.
- 2 Adjust the VOLUME buttons on the TV for a moderate listening level.
- 3 Disconnect the built-in speakers following the instructions at the right.
- 4 Adjust the volume control on the stereo amplifier for a moderate listening level.
- 5 Control of the audio can now be done using the VOLUME and MUTE buttons on the Remote Control of the TV, and using the AUDIO menu items (BASS, TREBLE and BALANCE).

## Turning off the built-in speakers

- 1 Press **MENU** repeatedly to display the AUDIO menu.
- 2 Press **ADV** repeatedly until "SPEAKERS" is displayed in magenta.
- 3 Press **-** or **+** until "SPEAKERS OFF" is displayed in magenta.

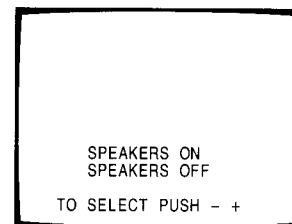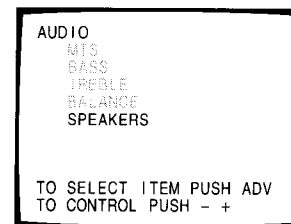


The built-in speakers will be turned off.

**To turn on the built-in speakers**  
Select "SPEAKERS ON" in step 3 above.

# Connecting External Speakers



You can connect speakers to the EXTERNAL SPEAKER terminals on the TV set to enhance sound from the TV.

Before connecting the speakers, turn the TV off.

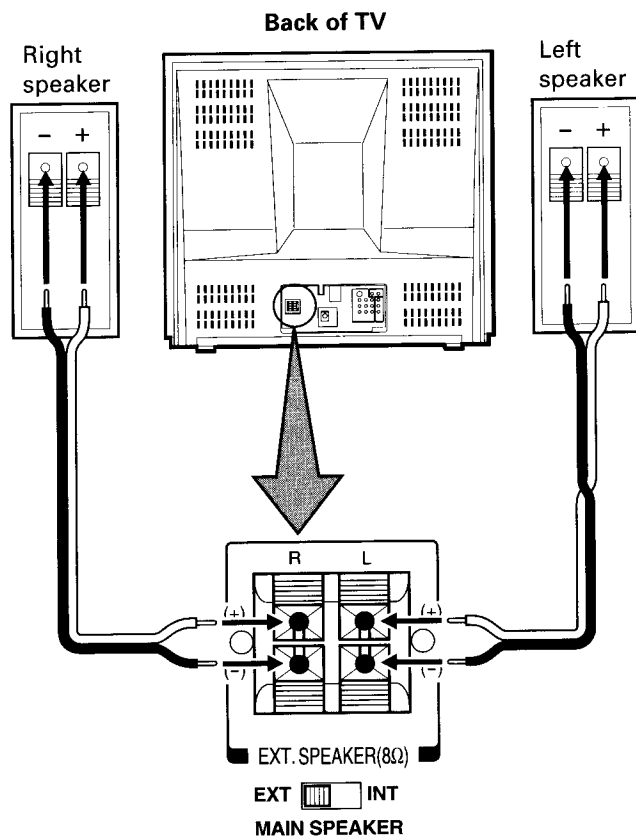

## Preparing for use

- 1 Connect the speaker cables. While pressing the clamp, insert the cable core. Then, release the clamp. Match the right and left channels and +/- polarities of the TV speaker terminals with the external speakers.

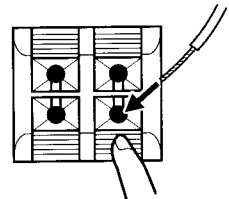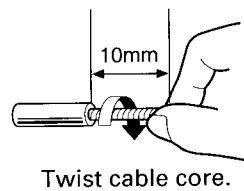


- 2 Set the MAIN SPEAKER switch to "EXT". The built-in TV speakers are switched off.



### CAUTIONS:

- Do not connect external speakers to more than one audio source at a time. You will damage your equipment if you connect the same speaker system to both the TV and amplifier.
- Use only external speakers with an impedance rating of 8 ohms and input power of 10 W or greater.

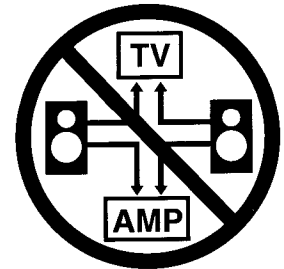

# Cleaning and Care

**WARNING: TV sets use High Voltage. Do not try to remove the cabinet back. Refer servicing to qualified service personnel.**

- To clean the TV screen:
    1. First remove the plug from the power outlet to avoid possible shock hazard.
    2. Use a clean cellulose sponge or chamois cloth dampened with a solution of mild detergent and warm water to clean TV screen and trim. Do not use too much water on the TV screen. Water spills into the cabinet and may cause damage to the TV. Avoid excess water.
    3. Remove any extra moisture with the same cloth or a dry one.
  - To maintain the finish and appearance of the cabinet, polish it from time to time with a quality furniture polish.
- Caution:** Never use strong solvents such as thinner, benzene or other chemicals on or near cabinet, as they might damage the finish of the cabinet.

## Specifications

TELEVISION SYSTEM:	NTSC standard
CHANNEL COVERAGE:	VHF; 2 through 13 UHF; 14 through 69 Cable TV; mid band (A-8 through A-1, A through I) super band (J through W) hyper band (AA through ZZ, AAA, BBB) ultra band (65 through 94, 100 through 125)
POWER SOURCE:	120V AC, 60Hz
POWER CONSUMPTION:	118W (average)
AUDIO POWER:	10W + 10W
SPEAKER TYPE:	Two 2-3/4 x 5 inches (70 x 130mm)
VIDEO/AUDIO TERMINALS:	S-VIDEO INPUT (VIDEO 1) Y-INPUT: 1V(p-p), 75 ohm, negative sync. C-INPUT: 0.286V(p-p) (burst signal), 75 ohm VIDEO 1/VIDEO 2/VIDEO 3 INPUT VIDEO: 1V(p-p), 75 ohm, negative sync. AUDIO: 150mV(rms) (30% modulation, 47k ohm) VIDEO/AUDIO OUTPUT VIDEO: 1V(p-p), 75 ohm, negative sync. AUDIO: 150mV(rms) (30% modulation, 4.7k ohm) VARIABLE: AUDIO OUTPUT 0-350mV(rms) (30% modulation, 4.7k ohm) EXTERNAL SPEAKER TERMINALS Accept speakers of impedance 8 ohm, input power 10W or greater
DIMENSIONS:	Width 36-17/32 inches (928mm) Height 32-1/4 inches (819mm) Depth 23-47/64 inches (603mm)
MASS:	196lbs (88.2kg)
SUPPLIED ACCESORIES	Remote Control with 2 "AAA" size batteries Antenna adapter

Design and specifications are subject to change without notice.

# Before Calling Service Personnel

Before calling service personnel, please check the following chart for a possible cause of the problem you are experiencing. A minor adjustment on your part may eliminate the problem and restore your TV reception.

Symptoms	Check	Adjustments
<ul style="list-style-type: none"> <li>No picture, no sound</li> </ul>	<ul style="list-style-type: none"> <li>Be sure power cord is plugged in.</li> <li>May be station trouble.</li> <li>Check antenna connections.</li> <li>Check antenna for broken wires.</li> </ul>	<ul style="list-style-type: none"> <li>Press POWER button.</li> <li>Try another channel.</li> </ul>
<ul style="list-style-type: none"> <li>No sound, picture OK</li> </ul>	<ul style="list-style-type: none"> <li>May be station trouble.</li> <li>Check if SPEAKERS ON/OFF function (page 43) or MAIN SPEAKER switch (page 44) is properly set.</li> </ul>	<ul style="list-style-type: none"> <li>Try another channel.</li> <li>Adjust VOLUME.</li> </ul>
<ul style="list-style-type: none"> <li>Poor sound, picture OK</li> </ul>	<ul style="list-style-type: none"> <li>May be station trouble.</li> <li>Check antenna connections.</li> <li>May be local interference from an appliance.</li> </ul>	<ul style="list-style-type: none"> <li>Try another channel.</li> <li>Adjust VOLUME.</li> <li>Adjust BASS, TREBLE, or BALANCE control.</li> <li>Re-orient antenna.</li> </ul>
<ul style="list-style-type: none"> <li>Poor picture, sound OK</li> <li>Snowy picture</li> <li>Lines in picture</li> <li>Distorted picture</li> <li>Weak picture</li> </ul>	<ul style="list-style-type: none"> <li>May be local interference from an appliance.</li> <li>Check antenna connections.</li> <li>Check antenna for broken wires.</li> <li>May be station trouble.</li> </ul>	<ul style="list-style-type: none"> <li>Try another channel.</li> <li>Adjust BRIGHTNESS.</li> <li>Adjust CONTRAST.</li> <li>Adjust SHARPNESS.</li> <li>Re-orient antenna.</li> </ul>
<ul style="list-style-type: none"> <li>Poor reception of broadcast channels</li> </ul>	<ul style="list-style-type: none"> <li>Check antenna connections.</li> <li>Check antenna for broken wires.</li> <li>If VCR is connected, check TV/VCR switch.</li> </ul>	<ul style="list-style-type: none"> <li>Try another channel.</li> <li>Re-orient antenna.</li> </ul>
<ul style="list-style-type: none"> <li>No UHF, VHF OK</li> </ul>	<ul style="list-style-type: none"> <li>Be sure TV/CABLE function (page 15) is in "TV" mode.</li> </ul>	
<ul style="list-style-type: none"> <li>Unable to select a certain channel</li> </ul>	<ul style="list-style-type: none"> <li>That channel may be locked out with CH LOCK function (page 30), or erased with the ADD/ERASE function (page 16).</li> </ul>	
<ul style="list-style-type: none"> <li>Multiple images (ghosts)</li> </ul>	<ul style="list-style-type: none"> <li>May be station trouble.</li> <li>Check antenna connections.</li> </ul>	<ul style="list-style-type: none"> <li>Try another channel.</li> <li>Re-orient antenna.</li> </ul>
<ul style="list-style-type: none"> <li>Poor color or No color</li> </ul>	<ul style="list-style-type: none"> <li>May be station trouble.</li> <li>Check antenna connections.</li> <li>Check antenna for broken wires.</li> <li>May be local interference from an appliance.</li> <li>Check if station is broadcasting in color.</li> <li>If you change the direction of the TV while the TV is activated, the picture may suffer from color shading. If so, turn off the TV and allow to cool for about 30 minutes, then turn on the TV again. The picture should improve.</li> </ul>	<ul style="list-style-type: none"> <li>Try another channel.</li> <li>Re-orient antenna.</li> <li>Adjust TINT.</li> <li>Adjust COLOR.</li> </ul>
<ul style="list-style-type: none"> <li>No stereo or SAP sound from a known MTS broadcast</li> </ul>	<ul style="list-style-type: none"> <li>Check if MTS function is properly set.</li> </ul>	
<ul style="list-style-type: none"> <li>Remote control does not work</li> </ul>	<ul style="list-style-type: none"> <li>Check if TV/CABLE/VCR switch is properly set.</li> <li>Be sure power cord is plugged in.</li> <li>Check battery in Remote control.</li> </ul>	<ul style="list-style-type: none"> <li>Change batteries.</li> </ul>

# Limited United States Warranty

Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii Inc. ("THI") make the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

## Limited One (1) Year Warranty

TACP and THI warrant this product and its parts against defects in materials or workmanship for a period of one (1) year after the date of original retail purchase. During this period, TACP and THI will repair a defective product or part, without charge to you. "Authorized TACP/THI service station personnel will come to your home when warranty service is required. Depending on the type of repair required, the service will either be performed in your home or the set will be taken to the authorized TACP/THI service station for repair and returned to your home at no cost to you."

## Limited Two (2) Year Warranty of Picture Tube

TACP and THI further warrant the picture tube in this product against defects in materials or workmanship for a period of two (2) years after the date of original retail purchase. During this period, TACP and THI will replace a defective picture tube without charge to you, except that if a defective picture tube is replaced after one (1) year from the date of the original retail purchase, you pay labor charges involved in the replacement.

## Owner's Manual and Registration Card

You should read this owner's manual thoroughly before operating this product. You should also insure that your name and address are on file as owner of a TACP/THI product by completing and mailing the enclosed registration card within ten days after you, or the person who has given you this product as a gift, purchased this product. This is one way to enable TACP/THI to provide you with

better customer service and improved products. Failure to return the card will not affect your rights under this warranty so long as you retain other proof of purchase such as a bill of sale.

## Your Responsibility

The above warranties are subject to the following conditions:

- (1) You must retain your bill of sale or provide other proof of purchase.
- (2) All warranty servicing of this product must be made by an Authorized TACP/THI Service Station.
- (3) **These warranties are effective only if the product is purchased and operated in the U.S.A.**
- (4) Labor service charges for set installation, set up, adjustment of customer controls and installation or repair of antenna systems are not covered by this warranty. Reception problems caused by inadequate antenna systems are your responsibility.
- (5) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, damage caused by Acts of God, such as lightning or fluctuations in electric power, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have been altered or modified without authorization of TACP/THI or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

## Step-By-Step Procedures – How to Obtain Warranty Service

If, after following all of the operating instructions in this manual and checking the section "BEFORE CALLING SERVICE PERSONNEL", you find that service is needed;

- (1) Contact one of the TACP/THI Service Centers listed below for warranty service or call the TACP toll free number **800-631-3811** within thirty (30) days after you find a defective product or part to find the nearest TOSHIBA Authorized Service Station or any authorized TOSHIBA dealer.
- (2) Please present your bill of sale or other proof to the Authorized Service Station. "Authorized TACP/THI service station personnel will come to your home when warranty service is required. Depending on the type of repair required, the service will either be performed in your home or the set will be taken to the authorized TACP/THI service station for repair and returned to your home at no cost to you."
- (3) If you have any question about service, please contact one of the following TACP/THI Service Centers:

IN THE CONTINENTAL UNITED STATES  
Should your unit require service, Call



NORTHEAST	MIDWEST	WEST	SOUTHWEST	SOUTHEAST	HAWAII
82 Totowa Road, Wayne, New Jersey 07470	1010 Johnson Drive, Buffalo Grove, Ill 60089-6900	5490 E. Francis St., Ontario, California 91761	1421 Champion Drive Suite 304, Carrollton, Texas 75006	6115 Jimmy Carter Blvd., Suite C2, Norcross, Georgia 30071-4607	327 Kamakee Street, Honolulu, Hawaii 96814

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any product or parts. In no event shall TACP or THI be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which action must be commenced to enforce any obligation of TACP or THI arising under this warranty or under any statute, or law of the United States or any state thereof, is hereby limited to 90 days from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.



### ATTENTION CANADIAN CONSUMERS:

Canadian consumers are requested to complete the special Canadian "Warranty Registration Form" enclosed, and forward this completed form with a copy of bill of sale to TOSHIBA OF CANADA to "Register and Validate" their warranty.

Before Calling Service Personnel/ Limited United States Warranty

REFERENCE SECTION

## **TOSHIBA AMERICA CONSUMER PRODUCTS, INC.**

HEAD OFFICE/82 TOTOWA ROAD, WAYNE, NEW JERSEY 07470

FACTORY SERVICE CENTERS/NORTHEAST: 82 TOTOWA ROAD, WAYNE, NEW JERSEY 07470

MIDWEST: 1010 JOHNSON DRIVE, BUFFALO GROVE, ILLINOIS 60089-6900

WEST: 5490 E. FRANCIS ST., ONTARIO, CA 91761

SOUTHWEST: 1421 CHAMPION DRIVE, SUITE 304 CARROLLTON, TEXAS 75006

SOUTHEAST: 6115 JIMMY CARTER BLVD., SUITE C2, NORCROSS, GA 30071-4607

## **TOSHIBA HAWAII, INC.**

HEAD OFFICE/327 KAMAKEE STREET, HONOLULU, HAWAII 96814, U.S.A.

## **TOSHIBA OF CANADA LTD.**

HEAD OFFICE/191 MCNABB STREET, MARKHAM, ONTARIO, L3R 8H2, CANADA TEL: (905) 470-5400

SERVICE CENTERS/TORONTO: 191 MCNABB STREET, MARKHAM, ONTARIO, L3R 8H2, CANADA TEL: (905) 470-5400

MONTREAL: 1643, NORTH SERVICE RD., TRANS-CANADA HIGHWAY, DORVAL QUEBEC, H9P 1J1, CANADA

TEL: (514) 332-6860

VANCOUVER: 3870 JACOMBS ROAD, RICHMOND, B.C., V6V 1Y6, CANADA TEL: (604) 270-8481

MANUFACTURED BY

**TOSHIBA AMERICA CONSUMER PRODUCTS, INC.**

PRINTED IN USA

(95-09) B

# **TOSHIBA**

23562490