

A Note to You

Thank you for buying a KITCHENAID* appliance!

KitchenAid designs the best tools for the most important room in your house. To ensure that you enjoy many years of trouble-free operation, we developed this Use and Care Guide. It contains valuable information concerning how to operate and maintain your new appliance properly and safely. Please read it carefully.

Also, please complete and mail the enclosed Product Registration Card.

If you need assistance or service, first see the "Troubleshooting" section of this book. After checking "Troubleshooting," additional help can be found by checking the "Requesting Assistance or Service" section.

When calling, you will need to know your appliance's complete model number and serial number. You can find this information on the model and serial number plate (see diagrams on pages 7 or 8).

Keep this book and the sales slip together in a safe place for future reference. **You must provide proof of purchase or installation date for in-warranty service.**

Model Number _____

Builder/Dealer Name _____

Serial Number _____


Address _____

Date Installed _____

Phone _____

5. Set cook time.

PRESS

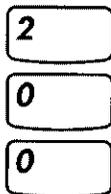

YOU SEE



(display shows 2-hour cook time)

6. Start oven.

PRESS



YOU SEE



7. When baking/roasting is done:

“End” will show on the display. Four tones will sound, followed by four short reminder tones every minute until you open the door or press the Cancel/Off pad.


YOU SEE



To delay start and stop automatically:

1. Prepare oven.

Position the oven rack(s) properly and place the food in the oven. For correct rack placement, see “Rack positions” on page 23 and “Rack placement” chart on page 24.

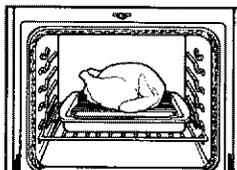

2. Choose Bake setting.

PRESS



YOU SEE



3. Set temperature (optional).

Do this step if you want to set a temperature other than the one displayed.

NOTE: See a reliable cookbook for temperature recommendations.

PRESS



YOU SEE



(example shows 375°F temperature setting)

continued on next page



Using and Caring for Your Oven

4. Press Cook Time pad.

PRESS






YOU SEE



5. Set cook time.

PRESS

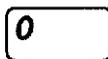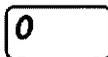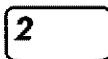

YOU SEE



(example shows 2-hour cook time)

6. Press Stop Time pad.

PRESS





YOU SEE




7. Set stop time.

PRESS

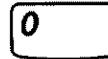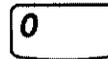

YOU SEE

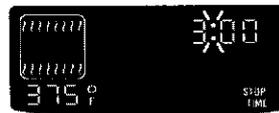

(display shows stop time of 3:00)

8. Press Start pad.

PRESS



YOU SEE



When start time is reached:

YOU SEE





9. When baking/roasting is done:

"End" will show on the display. Four tones will sound, followed by four short reminder tones every minute until you open the door or press the Cancel/Off pad.

YOU SEE



To cancel timed cooking settings:

Press Cancel/Off pad.

PRESS



YOU SEE

(display will go blank)

Cleaning your oven and controls



! WARNING

Explosion Hazard

Do not store flammable materials such as gasoline near this appliance.

Doing so can result in death, explosion, fire, or burns.


PART	WHAT TO USE	HOW TO CLEAN
Control knobs	Sponge and warm, soapy water	<ul style="list-style-type: none"> • Turn knobs to OFF and pull straight away from control panel. • Wash, rinse, and dry thoroughly. Do not soak. • Do not use steel wool or abrasive cleansers. They may damage the finish of the knobs. • Replace knobs. Make sure all knobs point to OFF.

continued on next page

Troubleshooting

Most cooking problems often are caused by little things you can find and fix without tools of any kind. Check the lists below and on the next page before calling for assistance or service. If you still need help, see “Requesting Assistance or Service” on pages 44 and 45.

If nothing operates, check the following:

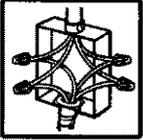

Is the range wired into a live circuit with the proper voltage?
(See Installation Instructions.)



Have you blown a household fuse or tripped a circuit breaker?



Other possible problems and their causes:

PROBLEM	CAUSE
The oven will not operate	<ul style="list-style-type: none">• You have not set the electronic control correctly. Refer to the section in this manual describing the function you are operating.• You have programmed a delayed start time. Wait for the start time to be reached or cancel and reset the controls.
The surface units will not operate	<ul style="list-style-type: none">• You have blown a household fuse or tripped a circuit breaker.• You have not set the control knobs correctly. Push control knobs in before turning to a setting.
The control knob(s) will not turn	<ul style="list-style-type: none">• You are not pushing in before turning.
The Self-Cleaning cycle will not operate	<ul style="list-style-type: none">• You have programmed a delayed start time. Wait for the start time to be reached or cancel and reset the controls.
Cooking results are not what you expected	<ul style="list-style-type: none">• The range is not level. (See Installation Instructions.)• The oven temperature seems too low or too high. See “Adjusting oven temperature” on page 28 to adjust oven temperature.• You did not preheat the oven before baking (if called for in recipe).