

Operator's Manual




GUTTER ATTACHMENT KIT

Model No.

358.797110

- Safety
- Assembly
- Operation
- Maintenance
- Español, p. 8

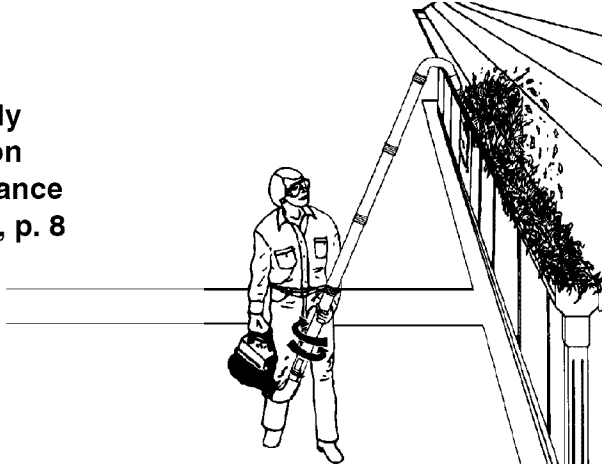

FOR HOUSEHOLD USE ONLY



WARNING:

Read and follow all Safety Rules and Operating Instructions before first use of this product.



For answers to your questions about this product, call 7am-7pm, Mon.-Sat., or 10am-7pm, Sun.

1-800-235-5878 (Hours listed are Central Time)

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.

545154299 Rev. 1 6/1/07 BRW

TABLE OF CONTENTS

Safety Rules	2	Storage	7
Assembly	3	Spanish	8
Operation	6	Parts & Ordering	Back Cover
Maintenance	7		

SAFETY RULES

⚠ WARNING: Failure to follow all Safety Rules and Precautions can result in serious injury.

KNOW YOUR UNIT

- Read your operator's manual for the original tool. Make certain you completely understand and can follow all warnings and safety rules in the manual for the original tool and in this manual before operating the tool with gutter attachment installed.
- Restrict unit to users who understand and will follow all warnings and safety rules in the manual for the original tool and in this manual.

⚠ WARNING: Inspect area before starting unit. Remove all debris and hard objects such as rocks, glass, wire, etc. that can ricochet, be thrown, or otherwise cause injury or damage during operation.

PLAN AHEAD

- Always wear eye protection when operating, servicing or performing maintenance on unit. Wearing eye protection will help to prevent rocks or debris from being blown or ricocheting into eyes and face which can result in blindness or serious injury. Eye protection should meet the requirements of ANSI Z87.1.
- Always wear foot protection. Do not go barefoot or wear short pants or sandals.
- Always wear a respirator or face mask when working with the unit in dusty environments.
- Secure hair above shoulder length. Secure or remove loose clothing or clothing with loosely hanging straps, ties, tassels, etc. They can be caught in moving parts.
- Do not operate unit when you are tired, ill, upset, or if you are under the influence of alcohol, drugs, or medication.
- Keep children, bystanders, and animals away from work area a minimum of 30 feet (10 meters) when starting or operating unit. Do not point blower or gutter at-

tachment nozzle in the direction of people or pets.

OPERATE YOUR UNIT SAFELY

- Inspect unit before each use for worn, loose, missing or damaged parts. Do not use until unit is in proper working order.
- Do not set unit on any surface except a clean, hard area while engine/motor is running. Debris such as gravel, sand, dust, grass, etc., could be picked up by the air intake and thrown out through discharge opening, damaging unit, property, or causing serious injury to bystanders or operator.
- Do not overreach or use from unstable surfaces such as ladders, trees, steep slopes, rooftops, etc. Keep firm footing and balance at all times.
- Never place objects inside the tubes; always direct blowing debris away from people, animals, glass, and solid objects such as trees, automobiles, walls, etc. The force of air can cause rocks, dirt, or sticks to be thrown or to ricochet which can hurt people or animals, break glass, or cause other damage.
- Never run unit without the proper equipment attached. Always install all tubes included in the gutter attachment kit.
- Check air intake opening and tubes frequently, always with the engine/motor stopped and spark plug/power supply disconnected. Keep tubes free of debris which can accumulate and restrict proper air flow.
- Never place any object in air intake opening as this could restrict proper air flow and cause damage to the unit.
- Never use for spreading chemicals, fertilizers, or other substances which may contain toxic materials.
- To avoid spreading fires, do not use near leaf or brush fires, fireplaces, barbecue pits, ashtrays, etc.
- Use only in daylight or good artificial light.
- Use only for jobs explained in this manual.

ASSEMBLY

CARTON CONTENTS

Check carton contents against the following list. Refer to the illustrations in the OPERATION section of this manual.

Model 358.797110


- Nozzle
- Elbow with spacer ring
- Extension Tube (4)
- Pivot Tube
- Adapter and collar - gas units
- Adapter - electric units with tube release button
- Goggles

Examine parts for damage. Do not use damaged parts.


If you need assistance or find parts missing or damaged, please call 1-800-235-5878.

ASSEMBLY


Match the blower outlet on your unit to one of those illustrated. To begin assembly, go to the section which corresponds to your blower outlet.

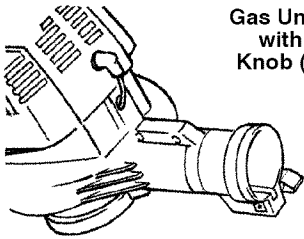


Gas Units with Knob (1)

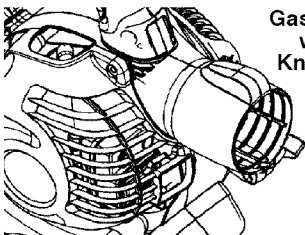


Gas Units with Knob (2)

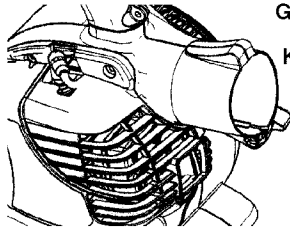

Gas Units with Knob (3)

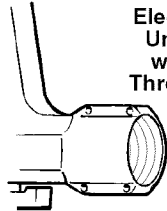


Electric Units with Threads

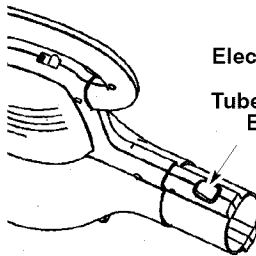

Electric Units with Tube Release Button

GAS UNITS WITH KNOB (1)


1. Stop engine and wait until impeller has completely stopped turning.
2. Remove all tubes or other attachments from unit.
3. Thread spacer ring onto elbow threads until secure.

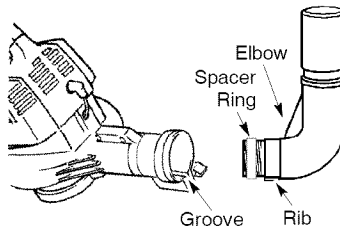


- Align rib with groove and insert elbow into blower outlet.
- Secure the tubes by turning the knob clockwise.
- Proceed to ALL UNITS - TUBE ASSEMBLY.

GAS UNITS WITH KNOB (2)


- Stop engine and wait until impeller has completely stopped turning.
- Remove all tubes or other attachments from unit.
- Insert the notched end of the adapter into elbow; push parts together until the adapter snaps into place.

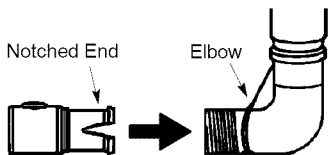

- Align the rib on the adapter with the slot on the inside of the collar; slide the adapter into the collar.

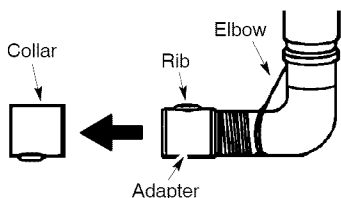

- Align the rib on the collar with the groove in the blower outlet; slide the collar into place.

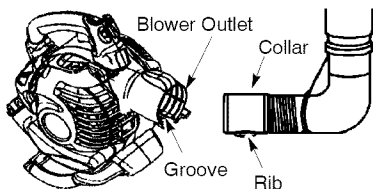


- Secure the tubes by turning the knob clockwise.
- Proceed to ALL UNITS - TUBE ASSEMBLY.


GAS UNITS WITH KNOB (3)

- Stop engine and wait until impeller has completely stopped turning.
- Remove all tubes or other attachments from unit.

- Insert the notched end of the adapter into elbow; push parts together until the adapter snaps into place.

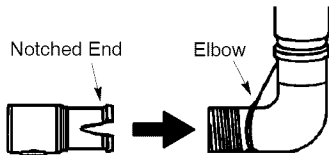


- Align the rib on the adapter with the groove in the blower outlet; slide the adapter into place.

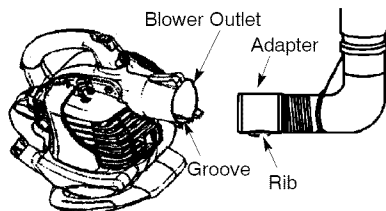

- Secure the tubes by turning the knob clockwise.
- Proceed to ALL UNITS - TUBE ASSEMBLY.

ELECTRIC UNITS WITH THREADS

- Stop the motor, disconnect power source, and wait until impeller has completely stopped turning.
- Remove all tubes or other attachments from unit.
- Remove spacer ring from elbow.
- Thread the small end of the elbow into the blower outlet until the elbow stop is about 3/8 inch from blower outlet.

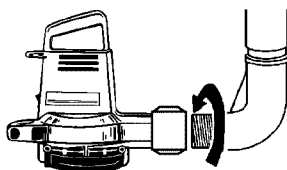


- Proceed to ALL UNITS - TUBE ASSEMBLY.

ELECTRIC UNITS WITH TUBE RELEASE BUTTON

- Stop the motor, disconnect power source, and wait until impeller has completely stopped turning.
- Remove all tubes or other attachments from unit.

3. Insert the notched end of the adapter into elbow; push parts together until the adapter snaps into place.

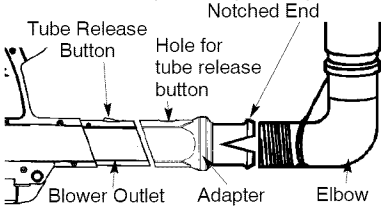


4. Align the grooves on the adapter with the grooves on the blower outlet.
5. Push the adapter onto the blower outlet until it snaps into place (adapter is secured by tube release button).
6. Proceed to ALL UNITS - TUBE ASSEMBLY.


ALL UNITS - TUBE ASSEMBLY

1. Push the slotted end of the pivot tube over the elbow until the flange bottoms out in the elbow groove.

NOTE: Be sure flange snaps into groove.

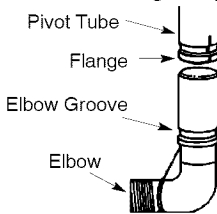


2. Test rotating action of the pivot tube by rotating the pivot tube right and left.
3. Assemble extension tubes up to a total of 4, depending on the height of gutter to be cleaned.
4. Thread nozzle onto the last tube.
- NOTE:** Make sure threaded joints (tubes and nozzle) are securely tightened.
5. Align the tube assembly in a vertical position.
6. Thread extension tube assembly onto the end of the pivot tube.

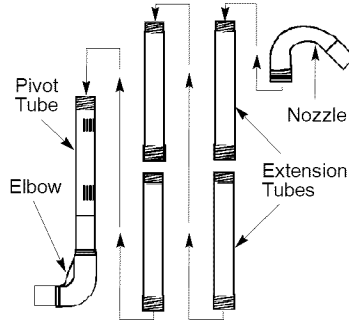

OPERATION

KNOW YOUR GUTTER ATTACHMENT

READ THIS OPERATOR'S MANUAL AND SAFETY RULES BEFORE OPERATING YOUR UNIT. Compare illustrations to your unit to familiarize yourself with the location of the various controls and adjustments. Save this manual for future reference.

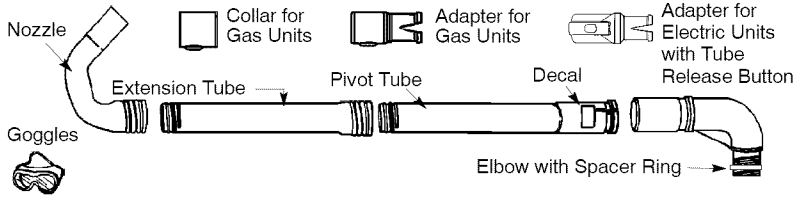


STARTING INSTRUCTIONS

⚠ WARNING: You MUST make sure the tubes are secure before using the unit. Do not use the unit without all of the tubes properly attached to avoid flying debris and/or impeller contact which can cause serious injury. Always wear eye protection to prevent rocks or debris from being blown or ricocheting into the eyes and face which can result in blindness or serious injury.

⚠ WARNING: Hold the unit as illustrated when starting (for gas units only). Do not set unit on any surface except a clean, hard area when starting and/or using the unit. Debris such as gravel, sand, dust, grass, etc. could be picked up by the air intake and thrown out through the discharge opening, damaging the unit or property, or causing serious injury to bystanders or the operator.

NOTE: When starting unit, lean the top of gutter attachment against a wall, tree, etc., for support.


- Support the gutter attachment with one hand as soon as the engine or motor starts.

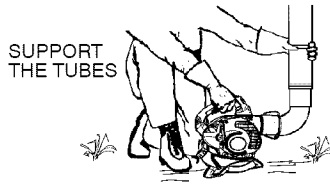


OPERATING TIPS

- Wear eye protection to guard against eye injury.
- To reduce the risk of hearing loss associated with sound level(s), hearing protection is required.
- To reduce the risk of injury associated with contacting rotating parts, stop the engine/disconnect from the power source and wait until impeller has completely stopped turning before installing or removing attachments.
- Stand 3 to 4 feet away from building.
- Rotate the pivot tube to position the nozzle right or left.

STARTING POSITION
(for gas units only)

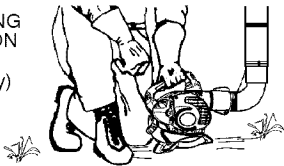

- Follow the STARTING INSTRUCTIONS in your operator's manual.

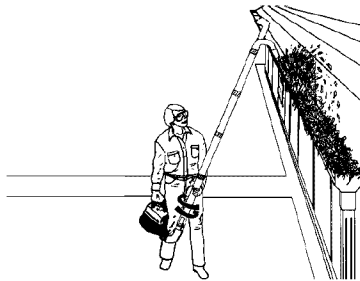

MAINTENANCE

CUSTOMER RESPONSIBILITIES

Fill in dates as you complete regular service	Before Use	After Use	Service Dates
Check for loose fasteners and parts	✓		
Check for damaged or worn parts	✓		
Inspect and clean unit and labels	✓		
Check for clogged tubes		✓	

GENERAL RECOMMENDATIONS

The warranty on this unit does not cover items that have been subjected to operator abuse or negligence. To receive full value from the warranty, the operator must maintain unit as instructed in this manual. Various adjustments will need to be made periodically to properly maintain your unit.

BEFORE EACH USE

CHECK FOR LOOSE FASTENERS AND PARTS

- Nozzle and tube connections
- Adapter (if used)
- Screws and handles on blower

CHECK FOR DAMAGED OR WORN PARTS

Contact Sears Service Center for replacement of damaged or worn parts.

CHECK FOR CLOGGED TUBES

- Nozzle and tubes should be free from obstructions and debris.

AFTER EACH USE

CLEAN UNIT AND LABELS

- Inspect complete unit for loose or damaged parts. Clean the unit using a damp cloth with a mild detergent.
- Wipe off unit with a clean dry cloth.

STORAGE

⚠ WARNING: Perform the following steps after each use:

- Allow motor/engine to cool before storing or transporting.
- Store the unit well out of the reach of children.

SEASONAL STORAGE

Prepare your unit for storage at the end of the season or if it will not be used for 30 days or more.

If your unit is to be stored for a period of time:

- Clean the unit thoroughly before lengthy storage.
- Store in a clean dry area.