

**NOTES:**

1. MATERIAL - 50# POLAR BRITE 96 BRITE/OPAQUE - WHITE  
(ALTERNATE 50# LYNX OPAQUE OFFSET WHITE)
2. PAPER SIZE - 11" X 17"
3. FINISHED SIZE - 8 1/2" X 11"
4. FORMAT - SADDLE STITCHED BOOK.
5. PRINTING INSTRUCTIONS -
- PAGES (INCLUDES COVERS) - (12)
- # OF SIDES PRINTED - 2
- # OF COLORS - 2
- INK COLOR/SPEC - BLACK AND BLUE/PMS5483
- SPECIAL INSTRUCTIONS - NONE

#### Intellidry Dryer MD-4

# USER'S GUIDE

#### TABLE OF CONTENTS

Welcome.....	1
Safety Instructions.....	1-2
Dryer Exhaust Tips.....	3
Operating Tips.....	4
Controls At A Glance.....	5-6
Care and Cleaning.....	7
Replacing Drum Light.....	7
Reversing the Door.....	7
Special Laundry Tips.....	8
Before You Call.....	9
Dryer Accessories.....	10
Warranty.....	Back Page



KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Models: MD5960 • MD6000 • MD7057

#### Welcome



Welcome and congratulations on your purchase of a Maytag dryer! Your complete satisfaction is very important to us. For best results, we encourage you to read these instructions before you begin using your new appliance. You will prove operating and maintenance procedures.

**Important Safety Instructions**

**Notice & Warning.....**

The California Department of Water and Toxic Enforcement Control Program (Proposition 65) of the Governor of California has issued a list of substances known to the State of California to cause cancer or reproductive harm, and requires businesses to warn customers of potential exposure.

Users of this appliance are hereby warned that the burning of gas can result in low-level exposure to some of the substances listed including benzene, formaldehyde and dust, due primarily to the presence of incomplete combustion of natural gas, liquid petroleum (LPG) fuels. Exposure should be kept free of obstructions and properly exhaust dryers will minimize exposure.

**A WARNING — To reduce the risk of fire, electric shock or injury to persons when using your appliance, follow these precautions, including the following:**

#### Important Safety Instructions

**Important Safety Notice & Warning.....**

**A WARNING — To reduce the risk of fire, electric shock or injury to persons when using your appliance, follow these precautions, including the following:**

1. Read all instructions before using the appliance.

2. To avoid the possibility of fire or explosion:

a. Do not dry items that have been previously cleaned, washed in, soaked in, or spattered with gasoline, paint thinner, dry-cleaning solvents, or explosive substances as they give off vapors which could ignite or explode. Any material on which these substances have been spilled should be washed with flammable liquids or solids, or soaks should be removed before being placed in the dryer. Until all traces of these materials have been removed, the laundry should not be dried. Do not dry items containing rubber materials which have been cleaned with gasoline, paint thinner, or dry-cleaning solvents.

b. Items containing foam rubber may be labeled "flammable". Do not dry items made of foam rubber or similar materials which contain flammable materials. These materials must not be dried on a heat setting. Foam rubber materials when heated can undergo a chemical reaction which can produce fire by spontaneous combustion.

c. Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.

d. Before the appliance is removed from service or discarded, remove the door to the drying compartment.

e. Do not use any phone in your building.

f. Clean the room, building or area of all occupants.

g. Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.

h. If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

11. Keep the area around the exhaust opening and surrounding areas free from accumulation, dust and debris.

12. The interior of the dryer and exhaust duct should be cleaned periodically by qualified service personnel.

13. This appliance must be properly grounded. Never plug the appliance cord into a receptacle which is not properly grounded. Connect the appliance in accordance with local and national codes. See installation instructions for grounding this appliance.

14. Do not sit on top of the clothes dryer.

**A WARNING — Do not place into your dryer items that have been stored or exposed to paint, paint thinners or other flammable oil.**

Even after being washed, these items may contain significant amounts of these oils. Their remaining can ignite spontaneously. The potential for spontaneous ignition increases when the items containing vegetable oil or cooking oil are exposed to heat from the sun or other sources. If these items are dried in the clothes dryer, warm these items, allowing an oxidation reaction in the oil to occur. Oxidation creates heat. If this heat cannot escape, the item may become hot enough to catch fire. Piling, stacking or storing these kinds of items may prevent heat from escaping.

15. Do not wash and unwashable fabrics that contain vegetable oil or cooking oil can be dangerous. Washing these items in hot water with extra detergent will reduce, but will not eliminate the hazard. Always use the "cool down" cycle for these items to reduce the items' temperature. Never remove the items from the clothes dryer or hot or interrupt the drying cycle until the items have run through the "cool down" cycle. Never pile or stack these items when they are hot.

16. Close the door screen before or after each load.

#### Save These Instructions

2

#### Dryer Exhaust Tips .....

**A WARNING — Plastic or nonmetal flexible duct presents a potential fire hazard.**

##### Do

Read the installation instructions and the user's guide.

##### Don't

Let a poor exhaust system cause slow drying.



After each load.

To shorten drying time.

To operate more efficiently.

##### Do

Let your dryer release the air easily.

##### Don't

Use plastic, foil, or non-metal flexible duct.

Restrict your dryer with a poor exhaust system.

##### Do

Use 4-inch diameter rigid metal duct. Tape all joints, including at the dryer. Never use hot-mopping screws.

##### Don't

Use plastic, thin foil, or non-metal flexible duct.

Restrict your dryer with a poor exhaust system.

##### Do

Keep duct runs as straight as possible.

##### Do

Check all ducts before installing your new dryer. Be sure vent flap opens and closes freely. Inspect and clean the exhaust system annually.

#### Operating Tips .....

##### Clean the Lint Filter

- After each load.
- To shorten drying time.
- To operate more efficiently.

##### Load the Dryer Properly

• By placing only one wash load in the dryer at a time.

• Avoid very small loads or missing heavy-weight and lightweight clothes.

• When only one or two articles need drying, add a few similar items to improve tumbling and drying efficiency.

• When drying large, bulky items such as a blanket or comforter, it may be necessary to suspension the load during the cycle to ensure even drying.



##### Add A Fabric Softener Sheet If Desired

- After loading the dryer.
- To control static cling.

• Before the load becomes warm. This helps prevent greasy-looking softener stains.

• And remove any used softener sheets from the dryer to prevent greasy-looking softener stains.

##### Check the Moisture Monitor



**NOTE:** The top monitor light will display when an IntelliDry® cycle is in operation. The top light will blink on and off. As loads dry, they will be longer than normal. No lights will display during Time Dry or Air Fluff.

The bottom light is the sensor will remain on until the cool down portion of the cycle starts. During cool down the dryer continues to tumble the load in unheated air to help maximize wrinkling.

NO CHANGES TO MATERIALS, CONFIGURATION, OR PROCESS MAY BE MADE WITHOUT PRIOR WRITTEN APPROVAL FROM MAYTAG.

CANCELLED

NOTICE OF PROPRIETARY INFORMATION  
DRAWING IS THE PROPERTY OF MAYTAG CORPORATION, MAYTAG APPLIANCES. NEITHER THIS DRAWING NOR ANY INFORMATION CONTAINED HEREIN MAY BE COPIED, REPRODUCED, OR DISCLOSED, IN WHOLE OR IN PART, WITHOUT THE EXPRESS WRITTEN PERMISSION OF MAYTAG CORPORATION, NEWTON LAUNDRY PRODUCTS, ©MAYTAG CORPORATION, UNPUBLISHED WORK. ALL RIGHTS RESERVED.

403 WEST 4TH STREET, NEWTON, IOWA 50208 U.S.A.

TITLE: USER GUIDE - MD6000/7057

SPICER SIZE DWG NO: 6 3711690 REV: E

SCALE: NONE DATE: 07/26/00 STAT: C


ADDED BY: 28790

SHEET 1 OF 2

REVISION HISTORY					
ZONE	REV	DESCRIPTION	DATE	APP'D	CHG NO
B	UPDATE AND ADD MD5960	6/28/00	JT	30933	
C	REDRAWN TO SHOW TEXT AND GRAPHICS	12/28/00	RJF	31602	
D	UPDATE MATERIAL NOTES	10/3/01	RJF	32398	
E	COMPLETE CANCELLATION	12-19-02	DAT	34090	

**Controls At A Glance****Step 1 Select Cycle**

**IntelliDry® WRINKLE FREE FABRICS with Press Care** automatically senses the moisture in the load and shuts off when the selected dryness level is reached. It minimizes wrinkles in synthetic fabrics such as acrylic, nylon, polyester or blends by providing a cool down period which tumbles the load in heated air at the end of the cycle. Simply set the control to the desired dryness level (more dry - less dry). The triangle symbol, ▲ (select models) or line between more dry and less dry is the initial preferred setting for the majority of loads.

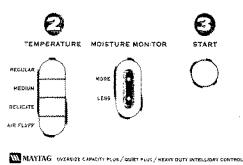


Control panel styling varies by model

**Step 2 Select Temperature**

**REGULAR** - for sturdy cottons or those labeled "Tumble Dry".  
**MEDIUM** - for permanent press, synthetics, lightweight cottons or items labeled "Tumble Dry Medium".  
**DELICATE** - for heat sensitive items labeled "Tumble Dry Low" or "Tumble Dry Warm".  
**AIR PLUFF** - tumbles without heat. Used for sensitive loads or items needing freshening.

Note: The dial can be turned in either direction to select a cycle. Once started, the dial will not advance at a specific rate during the IntelliDry cycles. At first the dial may not advance at all. Toward the end of the cycle (when the load begins to dry) the dial will advance at a more regular rate and much more quickly. This is normal operation.

**IntelliDry® REGULAR** automatically senses the moisture in the load and shuts off when the selected dryness level is reached. This cycle is designed for loads such as towels, underwear, t-shirts, jeans, etc. Set the control to the desired dryness level (more dry - less dry). The triangle symbol, ▲ (select models) or line between more dry and less dry is the initial preferred setting for the majority of loads.

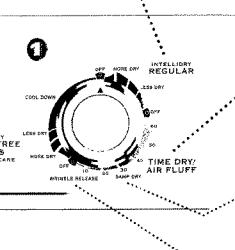

**TIME DRY/AIR PLUFF** may be selected for any load if the IntelliDry® sensor system is not desired. Set the control to the desired number of minutes.

**DAMP DRY** (select models) is designed to "partially" dry items. It provides approximately 20 minutes of heated tumbling and 5 minutes of cool down tumbling without heat.

**Step 3 Press Start**

Push this button to start the dryer. The dryer door must be shut for the dryer to operate. If the door is opened during the cycle, the start button must be pushed again to resume the cycle once the door is closed.

**END OF CYCLE SIGNAL**: Shortly before the cycle is complete, an audible signal will sound. During the IntelliDry® fabric care cycle or the IntelliDry® Wrinkle Free Fabrics cycle, the audible signal will sound intermittently.

On select models the end-of-cycle signal can be turned off if desired.

**WRINKLE RELEASE** (select models) will release wrinkles from items that are clean and dry but slightly wrinkled, such as from a crowded closet, packed suitcase or from sitting in the dryer too long after the end of the cycle. It provides 10 minutes of heated tumbling and 5 minutes of cool down tumbling without heat.

**Care and Cleaning**

**Control Panel** - clean with a soft, damp cloth. Do not use abrasive substances.

**Drum** - remove any stains such as crayon, ink or paint and dye from items, items such as towels or jeans, etc. Use a damp cloth. Then tumble old towels or rags to remove any excess stain or cleaning substance. Once these items are removed, the drum will be clean, but should not transfer to subsequent loads.

**Cabinet** - wipe off any marks with soap and water.

**Dryer Exhaust System** - should be inspected and cleaned once a year to maintain optimum performance. The outside exhaust hood should be cleaned more frequently to ensure proper operation. (Refer to the Installation Instructions for more information.)

**Special Laundry Tips**

Please follow the care label or manufacturer's instructions for drying special items. If care label instructions are not available, use the following information as a guide.

ITEM	LAUNDERING TIPS
<b>Bedspreads &amp; Comforters</b>	<ul style="list-style-type: none"> <li>Follow the care label instructions or dry on the Regular cycle.</li> <li>Be sure the item is thoroughly dry before using or storing.</li> <li>May require repositioning to ensure even drying.</li> </ul>
<b>Blankets</b>	<ul style="list-style-type: none"> <li>Dry only by blanket at a time for best tumbling action.</li> <li>Be sure the item is thoroughly dry before using or storing.</li> </ul>
<b>Curtains &amp; Draperies</b>	<ul style="list-style-type: none"> <li>Use the Wrinkle Free Fabrics cycle to help minimize wrinkling.</li> <li>Dry items in small loads for best results and remove as soon as possible.</li> </ul>
<b>Clot Diapers</b>	<ul style="list-style-type: none"> <li>Use the Regular cycle to make diapers come out soft and fluffy.</li> </ul>
<b>Down-filled Items (gackets, sleeping bags, comforters, etc.)</b>	<ul style="list-style-type: none"> <li>Use the Regular cycle and a delicate temperature setting.</li> <li>Place a clean pair of sneakers in the dryer with the item to fluff the down comforters, etc. Adding a couple of dry towels shortens dry time and absorbs moisture.</li> </ul>
<b>Foam Rubber (cug, backs, stuffed toys, certain shoulder pads, etc.)</b>	<ul style="list-style-type: none"> <li><b>DON'T</b> dry on a heat setting. Use the Time Dry/Air Pluff/cool heat cycle.</li> <li><b>WARNING</b> - Drying a rubber item with heat may damage it or pose a fire hazard.</li> </ul>
<b>Pillows</b>	<ul style="list-style-type: none"> <li>Use the Regular cycle.</li> <li>Add a couple of dry towels and a pair of clean sneakers to help the tumbling action and to fluff the item.</li> <li><b>DON'T</b> dry dry-kapok or from pillows.</li> </ul>
<b>Plastics (shower curtains, outdoor furniture covers, etc.)</b>	<ul style="list-style-type: none"> <li>Use the Time Dry/Air Pluff cycle on a Delicate or Air Pluff temperature depending on the care label instruction.</li> </ul>

**Replacing the Drum Light**

 
Instructions for replacing the bulb:

- Unplug or disconnect the dryer from the electrical power source.
- Open the door and use a Phillips screwdriver to remove the screw attaching the lens to the center frame.
- Remove lens cover by pulling cover toward center of center of center frame.
- Rotate bulb counter-clockwise to remove from socket.
- Replace the bulb with a 120 volt, 10 watt maximum incandescent base light bulb.
- Turn the light bulb clockwise into socket.
- Replace lens cover by hooking plastic tabs into holes from below slight bending.
- Reinstall the screw into the lens cover screw hole.
- Reconnect dryer to power supply.

**Reversing the Door**

Directions for reversing the dryer door:

- Remove the hinge base covers and screws.
- While supporting the door, remove 2 screws in the hinge that secure the hinge to the cabinet.
- Reverse door by lifting slightly at the hinge and pulling the hinge tabs out of the hinge frame.
- Move the following parts to the opposite side of the door: 2 hinges + 4 hinge screws, 4 door screws, door strike and screw, inner door cover plate and screw.
- Attach the door to the opposite side of the cabinet using the 2 counter sunk hinge screws. (See below).
- Screw the lower hinge screw in first. This will help to align the door and hinge.
- Replace the hinge base covers to the opposite side.

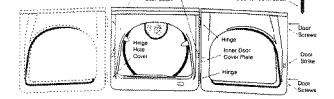**Clothes Dryer Warranty****Full One Year Warranty**

For one year from the date of original retail purchase, any part which fails in normal home use will be repaired or replaced free of charge.

**Limited Warranty**

After the first year from date of original retail purchase, though the time period based below, the parts designated below which fail in normal home use will be repaired or replaced free of charge for the part itself, with the owner paying all other costs, including labor, mileage and transportation.

**Second Year - All parts****Third Through Fifth Year - Decremental**

**Additional Limited Warranty Against Dent Through**  
Should an exterior cabinet become dented or damaged, the cost, not through the fifth year of the warranty period, to repair or replace will be made free of charge. After the first and through the tenth year, repair or replacement will be made free of charge for the part itself, with the owner paying all other costs, including labor, mileage and transportation.

**Protease This Full warranty does not apply when the dryer is located in the United States or Canada. Dryers located overseas are covered by the limited warranties only, including parts which fail during the first two years.**

**Canadian Residents:**

This warranty applies only to dryers installed in Canada that have been fitted with Canadian Standards Association markings. The dryers are brought into Canada to transfer of residence from the United States to Canada.

The specific warranties expressed above are the ONLY warranties provided by the manufacturer. This warranty gives you specific legal rights, and you may also have other rights, that vary from state to state.

**To Receive Warranty Service**

To locate an authorized service company in your area contact the Maytag dealer from whom your appliance was purchased, or call Maytag Appliance Sales Company, Maytag Customer Assistance at the number listed below. Should you receive satisfactory warranty service, please call or write:

**Maytag Appliance Sales Company  
P.O. Box 2570  
Des Moines, IA 50317-2570  
U.S.A. 1-800-488-2960  
U.S. customers using TTY for deaf, hearing impaired or speech impaired, call 1-800-688-2980.**

When calling, please have your serial number, model number, and name and address of the door where the door was purchased.

**(a) Your name, address and telephone number.**

**(b) Name and address of your dealer and the date the appliance was purchased.**

**(c) Description of the problem you are having.**

**(d) Proof of purchase.**

**What is not covered by these warranties:**

- Product performance for conventional residential use.
- Any damage resulting from misuse, abuse or accident.
- Any repair, modification, alteration or adjustment not authorized by the manufacturer.
- Damaged caused by commercial use.
- Damage, abuse, accidents, or unauthorized or incorrect assembly.
- Consequential or incidental damages sustained by any person as a result of any breach of these warranties.
- Dryer damage caused by fire, flood, lightning or any other natural or man-made disaster, war or acts of God.
- Damage caused by misuse, abuse, negligence or other violation of consequences of intellectual property, or the above exclusion may apply.

**Users' Guides, service manuals and part catalogs are available from Maytag Appliance Sales Company, Maytag Customer Assistance.**

**Form No. 5306MC Part No. 8-371162 U.S.A. 1-800-688-2960**

08/86 © 1986 Maytag Corporation, Maytag Appliance Sales Company, Inc., Newton, Iowa 50208

Model No. 3300291 JN LITE USA

**CANCELLED**

<b>NOTICE OF PROPRIETARY INFORMATION</b>		
<b>THIS DRAWING IS THE PROPERTY OF MAYTAG CORPORATION, MAYTAG APPLIANCES. NEITHER THIS DRAWING NOR ANY INFORMATION CONTAINED HEREIN MAY BE COPIED OR USED, IN WHOLE OR IN PART, WITHOUT THE EXPRESS WRITTEN PERMISSION OF MAYTAG CORPORATION, BENTON LAUNDRY PRODUCTS.</b>		
<b>© MAYTAG CORPORATION - UNPUBLISHED WORK. ALL RIGHTS RESERVED.</b>		
<b>43 WEST 4TH ST., NORTH BENTON, IOWA 50208 U.S.A.</b>		
<b>TITLE:</b>		
<b>USER GUIDE</b>		
<b>SPICER</b>	<b>SIZE DWG NO.</b>	<b>6 3711690 REV E</b>
<b>D</b>	<b>SCALE: NONE</b>	<b>STC</b>
<b>D</b>	<b>1</b>	<b>SHEET 2</b>

RD CHANGES TO MATERIALS, CONFIGURATION, OR PROCESS MAY BE MADE WITHOUT PRIOR WRITTEN APPROVAL FROM MAYTAG

For further assistance contact Maytag Appliances Sales Company, Maytag Customer Assistance:  
U.S. 1-800-688-2960 or Canada 1-800-688-2088.  
U.S. customers using TTY for deaf, hearing impaired or speech impaired, call 1-800-688-2988.