



TIME-OF-DAY

- Press "CLOCK" key, rotate "TIME-TEMP" dial to desired time-of-day. Control will automatically initiate clock.

MINUTE TIMER

- Press "MINUTE TIMER" key and rotate "TIME-TEMP" dial to desired timer period. Display will increment in 5, 10, 60 - second, 5 and 10 minute increments to a maximum of 9 hours, 50 minutes in 1 minute steps. Control will automatically initiate timer countdown two seconds after last dial entry.

CANCEL-MINUTE TIMER

- Press "MINUTE TIMER" key and rotate "TIME-TEMP" dial counter-clockwise until time is spun off.

BAKE

- Press "BAKE-TEMP" key and rotate "TIME-TEMP" dial clockwise to desired bake temperature. Display will increment in 5°F increments (Range 170°F to 550°F). Control will automatically initiate bake operation two seconds after last dial entry. Actual oven temperature rise will be displayed during oven preheat in 5°F increments, starting at 100°F.

BROIL

- Press "BROIL" key and rotate "TIME-TEMP" dial clockwise. "LO" or "HI" appears in display. Control will automatically initiate broil operation two seconds after last dial entry.

OVEN CLEANING

- Latch oven "DOOR" to clean position. Press "CLEAN" key. Display will indicate 3 hour clean period. Two seconds after "CLEAN" key is pressed, control will automatically initiate "CLEAN" operation.

COOK TIME

- Press "COOK TIME" key and rotate "TIME-TEMP" dial clockwise to desired hours and minutes of cook time (Display will increment in 5 and 10 minute increments). Two seconds after last dial entry, control will assume "COOK TIME" and initiate cooking.

STOP TIME

- Press "STOP TIME" key and rotate "TIME-TEMP" dial clockwise to desired stop time for bake or clean operation (Display will increment in 5 minute increments). Two seconds after last dial entry, control will assume delayed operation.

OFF/CANCEL

- Press "OFF/CANCEL" key. Control will cancel all cooking, cleaning and timing operations except timer. Display will return to time-of-day display unless a timer operation is present.