

*Use & Care Guide
Manual Del Propietario
Manuel Du Propriétaire*



**Vacuum Cleaner
Aspiradora
Aspirateur**

Model, Modelo, Modèle
401.39030(U.S.)
401.39035(U.S.)

CAUTION:

Read and follow all safety and operating instructions before first use of this product.

CUIDADO:

Lea y sigue todas las instrucciones de operación y seguridad antes del uso de este producto.

ATTENTION :

Veillez lire toutes les consignes de sécurité et le mode d'emploi avant d'utiliser ce produit.

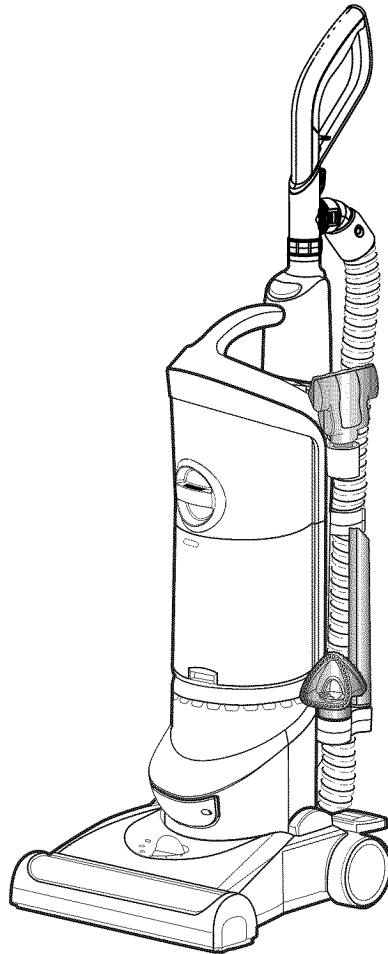


TABLE OF CONTENTS

Before Using Your New Vacuum Cleaner2	Vacuum Cleaner Care11-17
Kenmore Vacuum Cleaner Warranty3	Vacuum Cleaner Storage 11
Important Safety Instructions 4-5	Dust Bin Removal and Replacement 12
Parts and Features6	Motor Filter Maintenance 13
Assembly Instructions 7-8	Exhaust Filter Maintenance..... 14
Operating Instructions 8-10	Light Bulb Replacement 14
Power Cord8	Belt or Brushroll Removal and Replacement15
Switch Operating9	Suction Diverter Maintenance16
Floor/ Carpet Cleaning 9-10	Mini Turbo Brush Replacements ..17
Above Floor Cleaning..... 11	Troubleshooting18
	Master Protection Agreements ...19
	Requesting Service (back page)

BEFORE USING YOUR NEW VACUUM CLEANER

Please read this guide. It will help you assemble and operate your new Kenmore vacuum cleaner in the safest and most effective way.

For more information about vacuum cleaner care and operation, call your nearest Sears store. You will need the complete model and serial numbers when requesting information.

Your vacuum cleaner's model and serial numbers are located on the Model and Serial Number Plate.

Use the space below to record the model number and serial number of your new Kenmore vacuum cleaner.

Model No. _____

Serial No. _____

Date of Purchase _____

Keep this book and your sales check (receipt) in a safe place for future reference.

KENMORE VACUUM CLEANER WARRANTY

ONE YEAR LIMITED WARRANTY ON KENMORE VACUUM CLEANER

When installed, operated and maintained according to all instructions supplied with the product, if this appliance fails due to a defect in material and workmanship within one year from the date of purchase, return it to any Sears store, Sears Parts & Repair Service Center, or other Kenmore outlet for free repair.

If this appliance is ever used for other than private family purposes, this warranty applies for only 90 days from the date of purchase.

**This warranty covers only defects in material and workmanship.
Sears will NOT pay for:**

1. Expendable items that can wear out from normal use, including but not limited to filters, belts, light bulbs, and bags.
2. A service technician to instruct the user in correct product installation, operation or maintenance.
3. A service technician to clean or maintain this product.
4. Damage to or failure of this product if it is not installed, operated or maintained according to the all instructions supplied with the product.
5. Damage to or failure of this product resulting from accident, abuse, misuse or use for other than its intended purpose.
6. Damage to or failure of this product caused by the use of detergents, cleaners, chemicals or utensils other than those recommended in all instructions supplied with the product.
7. Damage to or failure of parts or systems resulting from unauthorized modifications made to this product.

Disclaimer of implied warranties; limitation of remedies

Customer's sole and exclusive remedy under this limited warranty shall be product repair as provided herein. Implied warranties, including warranties of merchantability or fitness for a particular purpose, are limited to one year or the shortest period allowed by law. Sears shall not be liable for incidental or consequential damages. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, or limitation on the duration of implied warranties of merchantability or fitness, so these exclusions or limitations may not apply to you.

This warranty applies only while this appliance is used in the United States or Canada.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**Sears, Roebuck and Co., Hoffman Estates, IL 60179
Sears Canada Inc., Toronto, Ontario, Canada M5B 2B8**

IMPORTANT SAFETY INSTRUCTIONS



WARNING

Your safety is important to us. To reduce the risk of fire, electrical shock, injury to persons or damage when using your vacuum cleaner, follow basic safety precautions including the following:

READ ALL INSTRUCTIONS IN THIS MANUAL BEFORE ASSEMBLING OR USING YOUR VACUUM CLEANER.

Do not use outdoors or on wet surfaces. Electrical shock could occur.

Do not allow to be used as a toy. Close attention is necessary when used by or near children.

Use only as described in this manual. Only use attachments designed for this vacuum.

Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a Sears or other qualified service center for inspection.

Do not pull or carry by cord, use cord as handle, close a door on a cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.

Do not handle plug or appliance with wet hands.

Do not put any objects into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

Do not use without Dust Bin and filters in place.

Turn off all controls before unplugging.

Do not use to pick-up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

Keep the vacuum cleaner on the floor. Do not use on stairs.

Do not use an extension cord with this vacuum cleaner.

Store the vacuum cleaner indoors. Put vacuum cleaner away after use to prevent tripping accidents.

IMPORTANT SAFETY INSTRUCTIONS

Using improper voltage may result in damage to the motor and possible injury to the user. Proper voltage is listed on the cleaner plate.

WARNING : The cords, wires, and/or cables supplied with this product contains chemicals, including lead or lead compounds, known to the state of California to cause cancer and birth defects or other reproductive harm. Wash hands after using.

SAVE THESE INSTRUCTIONS

Proper assembly and safe use of your vacuum cleaner are your responsibilities. Your vacuum cleaner is intended only for **Household use**. Read this Use & Care Guide carefully for important use and safety information. This guide contains safety statements under warning and caution symbols. Please pay special attention to these boxes and follow any instructions given.

Your cleaner contains a thermal protective device to shut off the motor to avoid overheating. If this happens, turn switch off and unplug the cleaner. Inspect the exhaust, inlet, and filters for any blockage. Empty the dust bin and clean filters. After approximately 30 minutes the motor will have cooled and the vacuum will be ready to use.

Note : The cleaner must remain unplugged during the 30 minute cooling period.

CAUTION : Even though the main motor is shutted off, the power nozzle brushroll could not stop. Turn off the power nozzle brushroll switch before inspect the cleaner. After approximately 30 minutes the motor will have cooled and the vacuum will be ready to use.

Note : The cleaner must remain unplugged during the 30 minute cooling period.

PARTS AND FEATURES

It is important to know your vacuum cleaner's parts and features to assure its proper and safe use. Review these before using your vacuum cleaner.

Item	Part No.
HEPA Filter	DJ97-00984D
Headlight	DJ47-00004A

Accessories




Crevice Tool



Mini Turbo Brush



Dust Brush/
Upholstery Tool

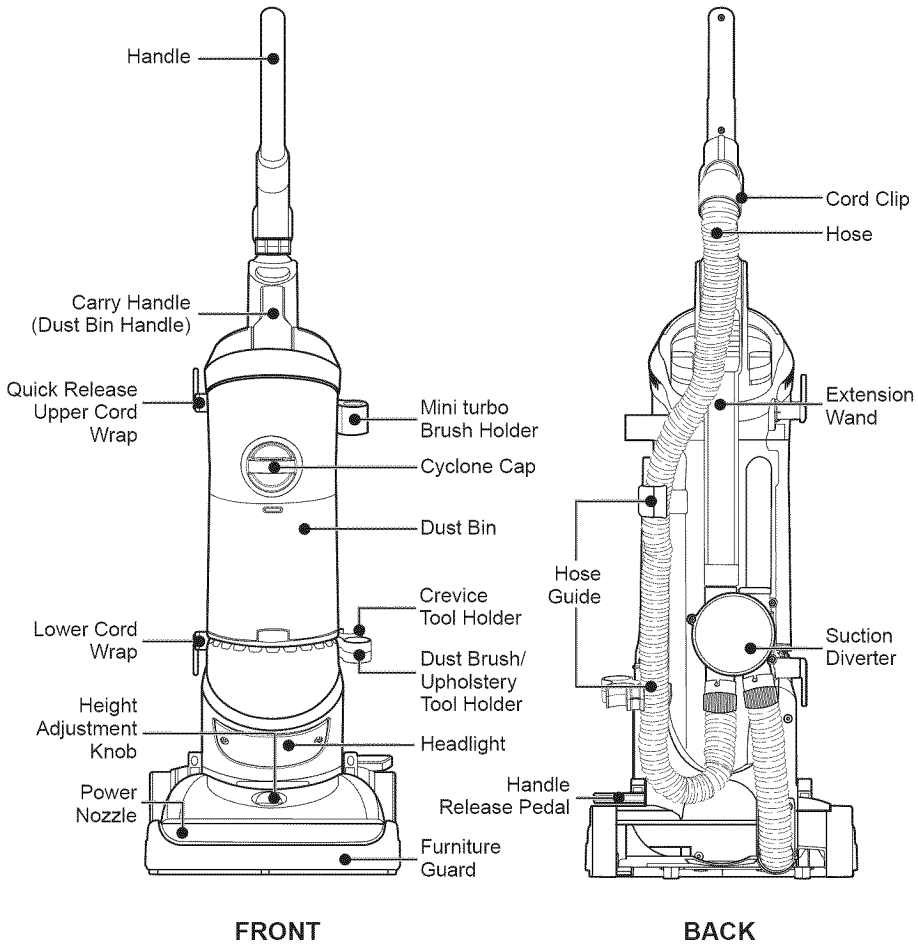



Please pay special attention to these hazard alert boxes, and follow any instructions given. **WARNING** statements alert you to such dangers as fire, electric shock, burns and personal injury. **CAUTION** statements alert you to such dangerous personal injury and/or property damage.

ASSEMBLY INSTRUCTIONS




WARNING

Electrical Shock Hazard


Do not plug into the electrical supply until the assembly is complete. Failure to do so could result in electrical shock or injury.

Before assembling the vacuum cleaner, check the **PACKING LIST** on the cover of the separate REPAIR PARTS LIST or on the carton. Use this list to verify that you have received all the components of your new Kenmore vacuum cleaner.

HANDLE ASSEMBLY

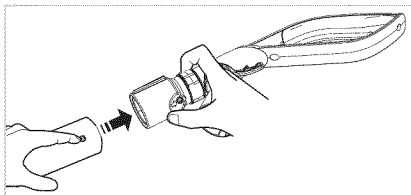

1. Slide fully retracted extension wand into the handle until you hear a click.

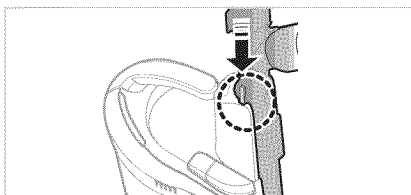

2. Slide fully retracted wand and handle into the slot on body until you hear a click.




CAUTION


Do not overtighten.

Overtightening could strip the screw holes.


Do not operate the vacuum cleaner without the screws in place.

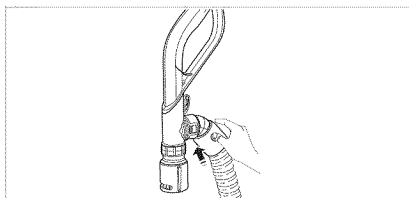

3. Slide fully retracted hose into the handle until you hear a click.

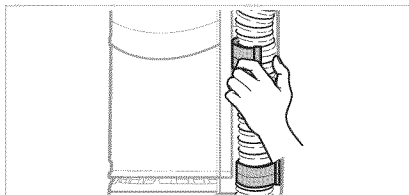

4. Extend the hose and fix into the two hose guides down the back of the vacuum cleaner.

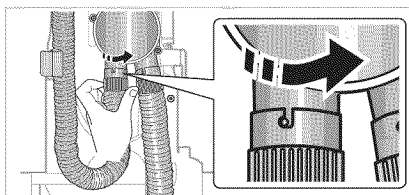


5. Slide slot in hose end over tab on control tube. Turn hose to right to secure tab in slot.

ASSEMBLY INSTRUCTIONS


TOOL PLACEMENT

Place mini turbo brush (A) into the tool holder on side of the body. Place dust brush/upholstery tool (B) into its accessory holder on side of the body. Place crevice tool (C) into its accessory holder on side of the body.

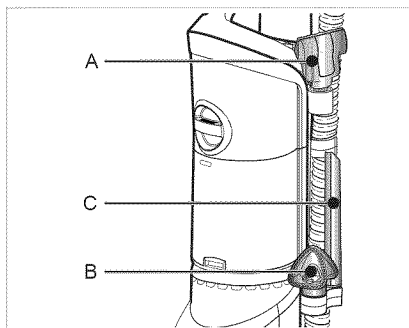

OPERATING INSTRUCTIONS

POWER CORD

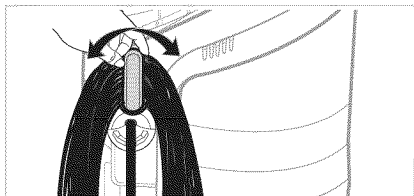


1. Turn the quick release upper cord wrap to either side and down to release the power cord.



WARNING

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

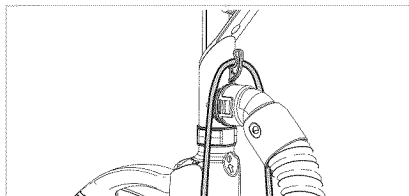

2. Unclip the power cord plug from the power cord. Place the power cord into the cord clip on the body as shown. This helps keep the power cord out from under the vacuum cleaner nozzle.
3. Plug the polarized power cord into a 120 Volt outlet located near the floor.
4. To store cord, turn upper cord hook to the up position, then wrap cord.




WARNING

Personal Injury and Product Damage Hazard

- **DO NOT** plug in if switch is in the ON position. Personal injury or damage could result.
- **DO NOT** use outlets above counters. Damage from cord to items in surrounding area could occur.

SWITCH OPERATING

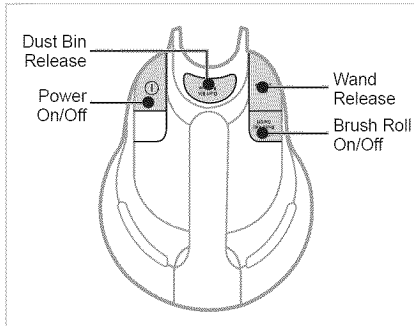

Power switch/Power Nozzle brushroll switch

The Power on/off button is located on the top of vacuum body.


Turn on vacuum by power button after plugging cord into electrical outlet.

The Power nozzle brush on/off button turns the rotating brushroll on and off.

Turn brushroll switch on to clean carpet and rugs.

Turn brushroll switch off to clean hard surface floors.

The brushroll will automatically turn off when the handle is in the upright position.

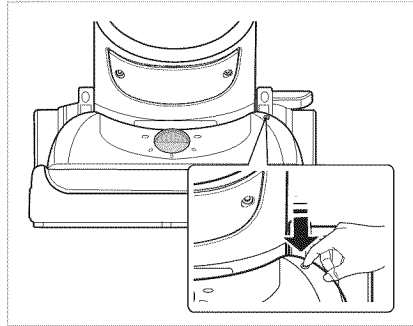

Circuit breaker (Reset switch)

The circuit breaker turns off the brushroll if its motion becomes obstructed.

The brushroll will stop, but the suction motor will continue to run.

To reset the breaker, turn cleaner off and unplug it. Clear the obstruction from brushroll area.

Press reset switch to the on position, turn cleaner on and continue cleaning.

FLOOR/CARPET CLEANING

HEIGHT ADJUST KNOB

1. Place handle in upright position
 2. Turn height adjustment knob to desired setting
- Lowest setting – For bare floors
4-step carpet setting – For various carpet heights

Low carpet setting


– For short pile carpets

Intermediate carpet settings

– For medium pile carpets


High carpet setting

– For plush pile carpets

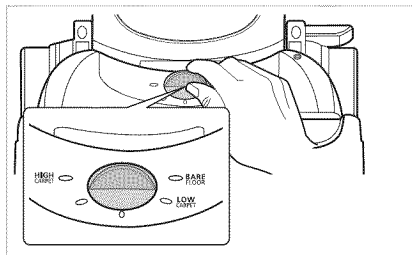


Note : For optimal cleaning performance, adjust to the lowest practical setting. If your cleaner is difficult to push, adjust to the next higher setting.

FLOOR/CARPET CLEANING

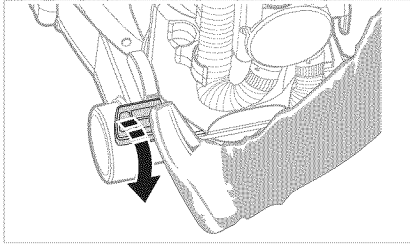


HANDLE RELEASE

To release handle, push the handle release pedal located on the lower left side of the cleaner.

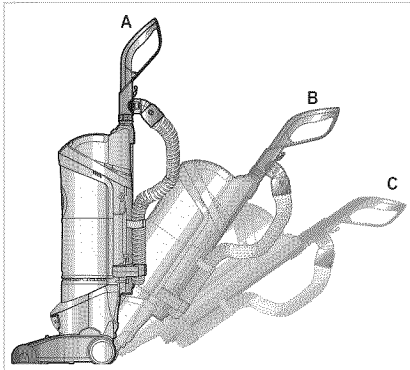

Rotate the handle and adjust it to the desired position for (A) storing the upright, (B) operating the cleaner, and (C) to clean under furniture.

NOTE : Rotating brushroll could cause area rug fringe to become tangled within cleaner. Use caution when vacuuming any rugs with fringe.

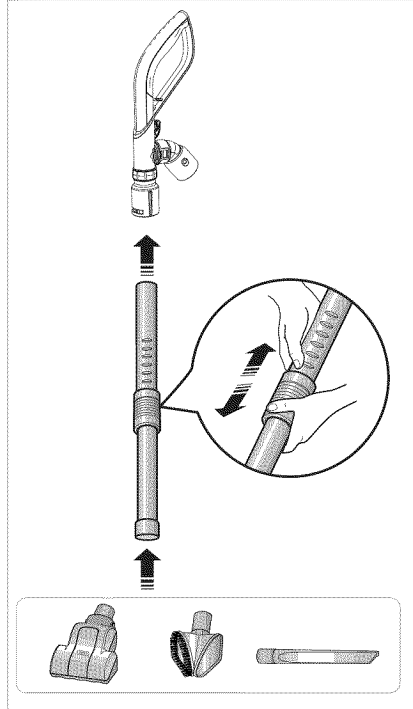

CLEANING TOOLS

Attachment tools can be used to clean furniture, drapes, stairs, or in corners. Place the vacuum on the floor with handle in the upright position while using attachment tools.


EXTENSION WAND

Adjust the length of the extension wand by sliding the length control button located in the center of the extension wand back and forth.


ABOVE FLOOR CLEANING

CAUTION

Brush agitator continues to rotate while hose is removed or in use and at all times while cleaner is on. Keep hair, loose clothing, fingers, and all parts of body away from brush area while cleaner is on. Cleaner must be in the upright position to lift the rotating brushroll off the carpet when cleaning above the floor.

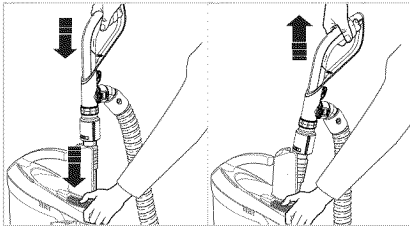

Put the cleaner in the upright position to stop the brushroll rotating, or simply press the brushroll on/off button. Press the wand release button. While pressing the wand release button, push down on handle and then pull it up and out. The Suction Diverter automatically changes the airflow from the power nozzle to the extension wand. Choose any of the handy accessories or use the hose alone.

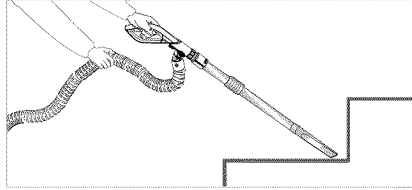


Simply push the attachment firmly onto the end of the wand or hose handle. To remove tool, twist and pull apart gently.

HANDLE WITH SUCTION CONTROL SLIDE


When using attachments for cleaning draperies, small rugs with low pile and other delicate items, twist the suction control slide to the open position. This slide is located on the handle, close to the extension wand. This will reduce suction for ease of cleaning.

Note : Return suction control slide to the closed position for normal cleaning.

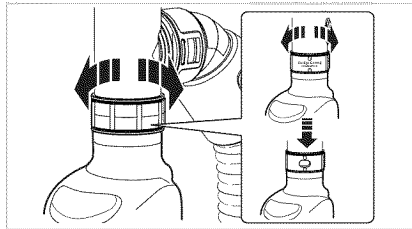

VACUUM CLEANER CARE

VACUUM CLEANER STORAGE

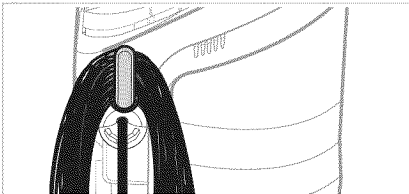

Gather the cord and wrap it loosely around the upper and lower cord wraps. Lock power cord plug onto the power

cord. Store the vacuum cleaner in a dry, indoor area, on the floor with the handle locked in the upright and position.

WARNING

Electrical Shock and Personal Injury Hazard Wrapping the cord too tightly puts stress on the cord and can cause cord damage.

DUST BIN REMOVAL AND REPLACEMENT



WARNING

Electrical Shock and Personal Injury Hazard


Disconnect electrical supply before servicing or cleaning the unit.

Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.


EMPTY DUST BIN



Push the dust bin release button. Grasp dust bin by handle and pull out to remove.

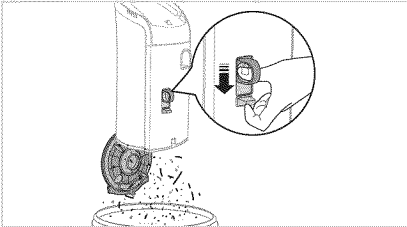


Hold dust bin over waste receptacle and push down on thumb switch as shown to release dust bin contents.

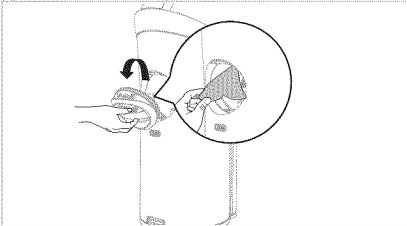


Turn cyclone cap to left and pull out to remove. Clean debris from cyclone chamber. Replace cyclone cap.

After cleaning out cyclone, ensure that cyclone cap is properly inserted and secured in place.

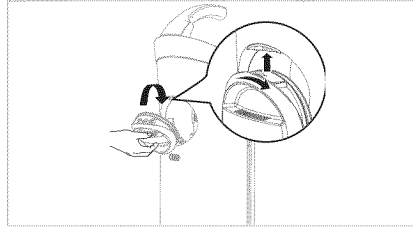

Turn cyclone cap to right until tab of cyclone cap fits into notch on rim of cyclone chamber.

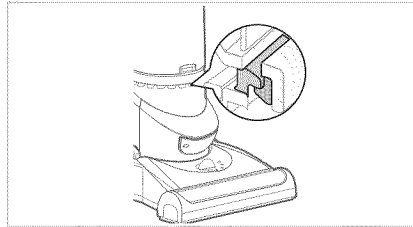

Replace dust bin into vacuum cleaner. Make sure bin base is securely fitted to body grille as shown.

MOTOR FILTER MAINTENANCE




WARNING

Electrical Shock and Personal Injury Hazard


Disconnect electrical supply before servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.

Note : Inspect and clean motor filters on a regular basis. Based on frequent vacuum use, replace filters every 6 months for best vacuuming performance.


Remove dust bin as described in Dust Bin Removal and Replacement section.

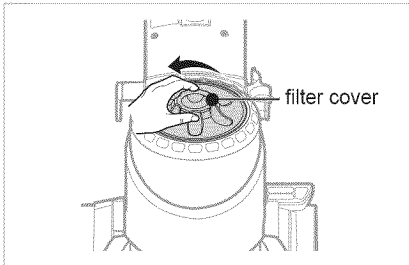


Unlock and remove the filter cover.

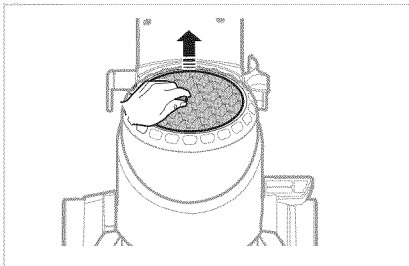


Lift out filter case.

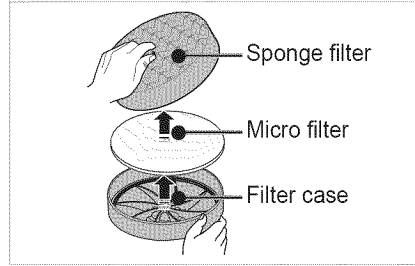


Separate sponge filter and micro filter from filter case.

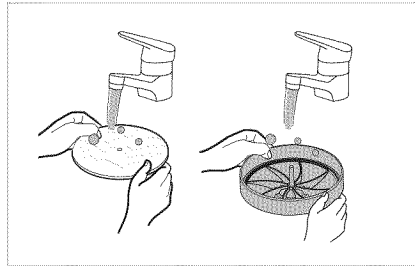

Wash filters and case in cold water only.

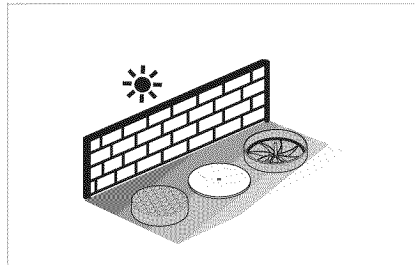


Dry for at least 12 hours.

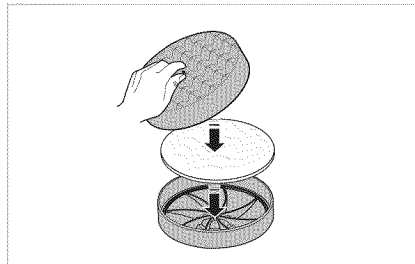


Ensure filters are completely dry before refitting onto the vacuum cleaner.

EXHAUST FILTER MAINTENANCE

 Note : Inspect HEPA filter regularly for accumulation of dust and debris. Replace if necessary. Based on frequent vacuum use, the HEPA exhaust filter should be replaced every 6 months for best vacuuming performance.



1. Remove Dust Bin and Motor Filter Case as previously described in this Use & Care Guide.
2. Grasp HEPA filter by one of the raised plastic fins and lift up and out.
3. Observe the order shown below when reassembling the filters.

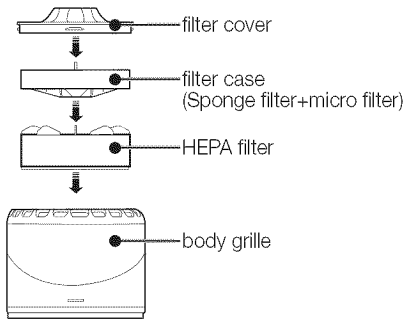

LIGHT BULB REPLACEMENT





WARNING

Electrical Shock and Personal Injury Hazard

Disconnect electrical supply before servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.

1. Using a screwdriver, remove 2 screws as shown and lift off the lens.
2. Remove the bulb from the socket by grasping bulb and pulling straight out.
3. Install the new bulb by pushing it gently into the socket until the bulb snaps into place.

TO REPLACE LIGHT BULB

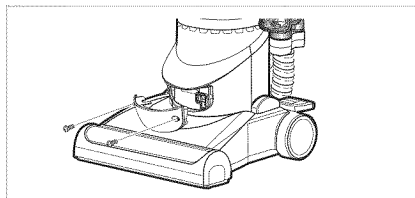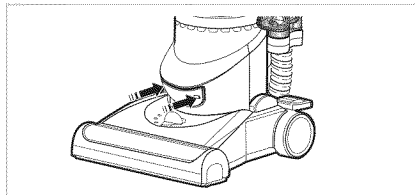

4. Reposition lens and secure with 2 screws.

BELT OR BRUSHROLL REMOVAL AND REPLACEMENT




WARNING


Electrical Shock and Personal Injury Hazard

Disconnect electrical supply before servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.


TO REMOVE BELT

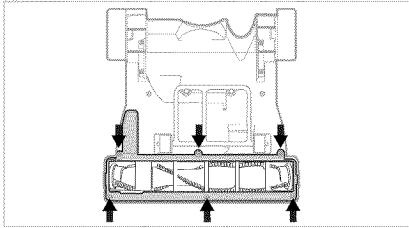

Lay cleaner flat and flip cleaner to expose nozzle base. Base should lay flat and face up. To remove nozzle guard, remove 6 screws.

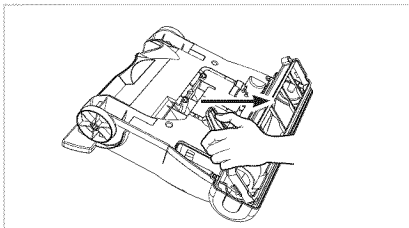


Rotate/pivot the nozzle guard and pull off.

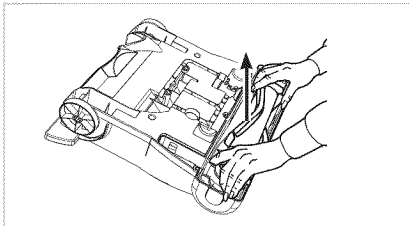


Lift and remove brushroll. Dispose of old belt.


TO REPLACE BELT OR BRUSHROLL

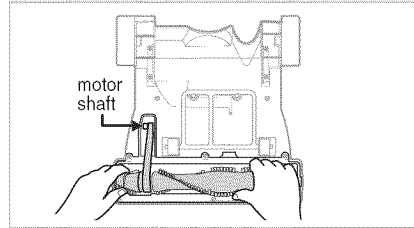

Slide belt onto motor shaft.

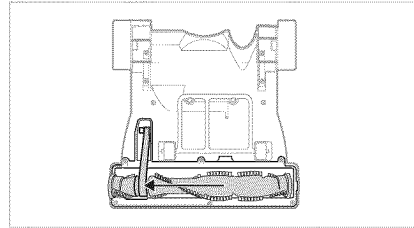

Place new belt in area of brushroll without bristles.

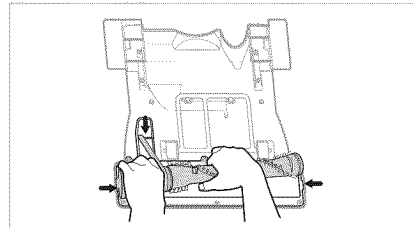

With new belt in place, pull and slide brushroll into nozzle making sure that the brushroll end caps are in the correct orientation. Rotate brushroll manually to make sure belt is properly aligned. Reposition brush cover and 6 screws. Tighten screws securely.

SUCTION DIVERTER MAINTENANCE




WARNING

Electrical Shock and Personal Injury Hazard

Disconnect electrical supply before servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.

If you notice a decrease in suction, you should inspect and clean out the small hose inside the Suction Diverter according to the following instructions.


1. Remove the handle and extension wand as described in Above Floor Cleaning section.
2. Remove power cord from cord storage wraps.
3. Use handle release button to lower vacuum cleaner body to lowest position.
4. Lay vacuum cleaner on floor with back side facing up.
5. Remove both hose ends from bottom of Suction Diverter.

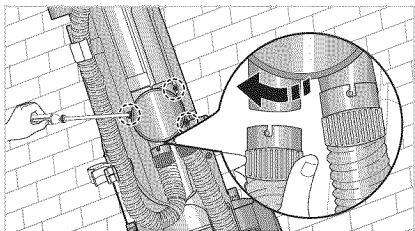


6. Remove 3 screws from Suction Diverter as shown.
7. Grasp the underside of the diverter with both hands and raise up and out.

Note : There is a spring-loaded plunger that will pop forward when the diverter is pulled out.


Diverter Plunger

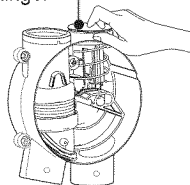

8. Depress the spring-loaded plunger to straighten the diverter hose to make it easier to clean out.

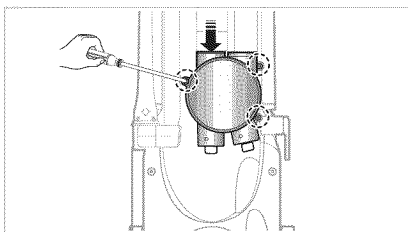


9. To fit diverter back into place, position top of spring-loaded plunger against rim of extension wand holder. Push up from bottom of diverter. Once diverter screw holes are aligned, push down on top of diverter to settle it into place. Replace and tighten 3 screws to secure diverter into place.

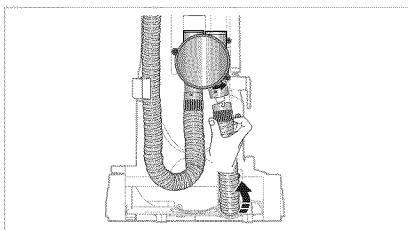


10. Replace hoses onto diverter tubes as shown.

MINI TURBO BRUSH REPLACEMENT

TO REPLACE BRUSHROLL

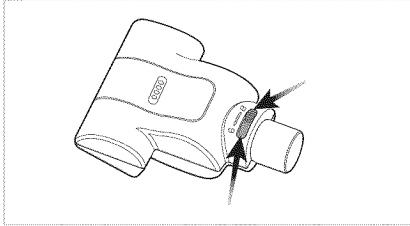


1. Slide the switch to the unlock position and remove bottom plate.

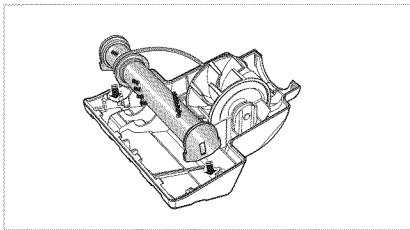


2. Inspect condition of brushroll. Replace brushroll if brushes are worn down. To remove brushroll, pull up and out of end slots in nozzle housing. Insert ends of brushroll into same slots to replace.

Note : Inspect belt to ensure that it is in good condition. If belt is broken or cracked, replace belt according to To Replace Belt instructions.

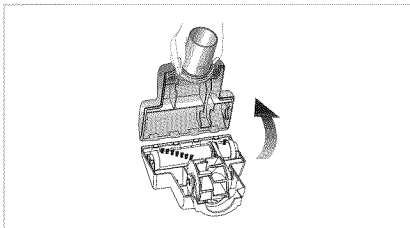


3. Insert the four tabs on edge of bottom plate into slots on front of tool. Pivot bottom plate down and snap closed. Slide switch to lock position to secure the bottom plate in place.

TO REPLACE BELT

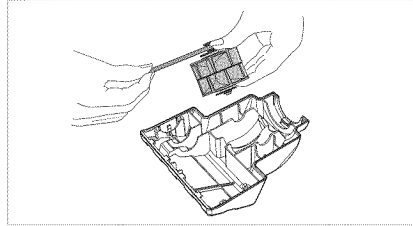


1. Remove bottom plate by sliding switch to unlock position. See figure in To Replace Brushroll instructions.
2. Loop one end of new belt around shaft of pulley.

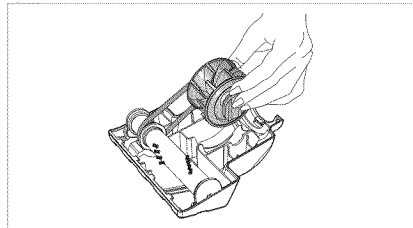

3. Loop other end of belt around designated area for it on brushroll. Insert brushroll into slots in nozzle housing. See figure in To Replace Brushroll instructions.
4. Fit turbo brush back together as described in To Replace Brushroll instructions.

TROUBLESHOOTING

Review this table to find do-it-yourself solutions for minor performance problems. Any service needed, other than maintenance described in this Use & Care Guide, should be performed by a Sears or other qualified service agent.



WARNING Disconnect electrical supply before performing maintenance to the unit. Failure to do so could result in electrical shock or personal injury.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Cleaner won't run	1. Power cord not firmly plugged into outlet.	1. Plug unit in firmly.
	2. Blown house fuse or tripped house circuit breaker.	2. Check fuse or breaker in home. Replace fuse / reset breaker.
	3. Thermal protector activated.	3. Allow cleaner to cool.-Pg.5
	4. Cleaner not turned on.	4. Press on/off button.
Cleaner won't pick up or low suction.	1. Dust bin not installed correctly	1. Review dust bin removal and replacement - Pg.12
	2. Dust bin full.	2. Empty dust bin - Pg.12
	3. Brushroll worn	3. Replace brushroll - Pg.15
	4. Broken or worn belt.	4. Replace belt - Pg.15
	5. One or both filters clogged.	5. Remove filters and clean - Pg.13
	6. Carpet height setting is incorrect.	6. Set carpet height adjust lever to appropriate setting for carpet being cleaned - Pg.9
	7. Vacuum circuit breaker tripped.	7. Reset breaker switch - Pg.9
	8. Clog in small hose in Suction Diverter.	8. Inspect and clean out Suction Diverter - Pg.16
Dust escaping from cleaner	1. Dust bin full.	1. Empty dust bin - Pg.12
	2. Dust bin not installed correctly.	2. Review Dust Bin removal and replacement - Pg.12
	3. Hose not installed correctly.	3. Review hose placement - Pg.7
	4. HEPA filter clogged.	4. Replace HEPA filter
	5. Filter assembly not positioned properly.	5. Ensure that filter assembly is positioned properly.
	6. Motor filter clogged.	6. Clean motor filter.
Cleaner tools won't pick-up	1. Hose clogged.	1. Check inlets, hose and dust bin for obstructions: remove obstruction. If clog persists, take vacuum cleaner to a Sears or other qualified service dealer.
	2. Dust bin full.	2. Empty dust bin - Pg.12
	3. One or both filters clogged.	3. Remove filters and clean - Pg.13
Headlight not Working	1. Bulb burnt out.	1. Replace bulb - Pg.14
	2. Loose electrical wires.	2. Take to Sears Service Center.
Cleaner is difficult to push	1. Carpet height setting is incorrect.	1. Set carpet height adjust lever to appropriate setting for carpet being cleaned - Pg.9
	2. Broken or worn belt.	2. Replace belt - Pg.15

MASTER PROTECTION AGREEMENT

Congratulations on making a smart purchase. Your new Kenmore product is designed and manufactured for years of dependable operation. But like all products, it may require preventive maintenance or repair from time to time. That's when having a Master Protection Agreement can save you money and aggravation.

The Master Protection Agreement also helps extend the life of your new product. Here's what the Agreement* includes:

- ✓ **Parts and labor** needed to help keep products operating properly **under normal use**, not just defects. Our coverage goes **well beyond the product warranty**. No deductibles, no functional failure excluded from coverage – **real protection**.
- ✓ **Expert service** by a force of more than **10,000 authorized Sears service technicians**, which means someone you can trust will be working on your product.
- ✓ **Unlimited service calls and nationwide service**, as often as you want us, when ever you want us.
- ✓ **"No-lemon" guarantee** – replacement of your covered product if four or more product failures occur within twelve months.
- ✓ **Product replacement** if your covered product can't be fixed.
- ✓ **Annual Preventive Maintenance Check** at your request – no extra charge.
- ✓ **Fast help by phone** – we call it **Rapid Resolution** – phone support from a Sears representative on all products. Think of us as a "talking owner's manual."
- ✓ **Power surge protection** against electrical damage due to power fluctuations.
- ✓ **\$250 Food Loss Protection** annually for any food spoilage that is the result of mechanical failure of any covered refrigerator or freezer.
- ✓ **Rental reimbursement** if repair of your covered product takes longer than promised.
- ✓ **10% discount** off the regular price of any non-covered repair service and related installed parts.

Once you purchase the Agreement, a simple phone call is all that it takes for you to schedule service. You can call anytime day or night, or schedule a service appointment online.

The Master Protection Agreement is a risk free purchase. If you cancel for any reason during the product warranty period, we will provide a full refund. Or, a prorated refund anytime after the product warranty period expires. Purchase your Master Protection Agreement today!

Some limitations and exclusions apply. For prices and additional information in the U.S.A. call 1-800-827-6655.

*** Coverage in Canada varies on some items. For full details call Sears Canada at 1-800-361-6665.**

Sears Installation Service

For Sears professional installation of home appliances, garage door openers, water heaters, and other major home items, in the U.S.A. or Canada call **1-800-4-MY-HOME®**.

Get it fixed, at your home or ours!

Your Home

For expert troubleshooting and home solutions advice:

manage my home

www.managemyhome.com

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME[®]

(1-800-469-4663)

www.sears.com

Call anytime, day or night

(U.S.A. and Canada)

www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call anytime for the location of the nearest

Sears Parts & Repair Service Center

1-800-488-1222 (U.S.A.)

www.sears.com

1-800-469-4663 (Canada)

www.sears.ca

To purchase a protection agreement on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR[®]

(1-888-784-6427)

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca

Sears

© Sears Brands, LLC

® Registered Trademark / TM Trademark / SM Service Mark of Sears Brands, LLC

® Marca Registrada / TM Marca de Fábrica / SM Marca de Servicio de Sears Brands, LLC

^{MC} Marque de commerce / ^{MD} Marque déposée de Sears Brands, LLC