


## Operating Instructions

Warning: Before operating dishwasher, read important safety instructions in the Automatic Dishwashing Guide

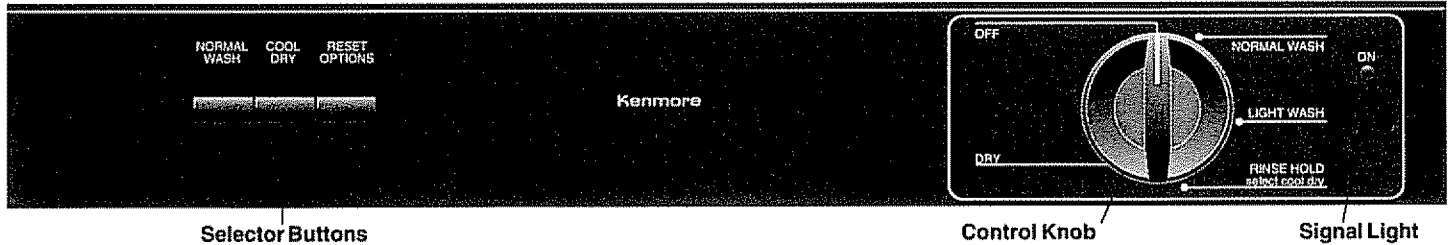

## Cycles

### Starting Your Dishwasher

1. Load the dishwasher and add detergent. *Use fresh granular automatic dishwashing detergent for best results.*
2. Close the door but **do not latch**.
3. Follow specific cycle selection directions listed below.

Desired Cycle	Description	To Select:	Cycle Sequence
<b>Normal Wash Hot Dry</b>	For normally soiled dishes. Select <b>Hot Dry</b> for drier dishes.  <b>Cycle Time:</b> Approx. 74 minutes <b>Water Usage:</b> Approx. 12.5 gallons	<ul style="list-style-type: none"> <li>• Push <b>Reset Options</b> to clear prior selections.</li> <li>• Push <b>Normal Wash</b> button.</li> <li>• Turn control knob to <b>Normal Wash</b>.</li> </ul>	All cycles start with <u>pre-drain</u> .  
	<b>Normal Wash Cool Dry</b>	For normally soiled dishes. Select <b>Cool Dry</b> to save energy.  <b>Cycle Time:</b> Approx. 74 minutes <b>Water Usage:</b> Approx. 12.5 gallons	
<b>Light Wash Hot Dry</b>	For pre-rinsed or lightly soiled dishes. Select <b>Hot Dry</b> for drier dishes.  <b>Cycle Time:</b> Approx. 60 minutes <b>Water Usage:</b> Approx. 7.5 gallons	<ul style="list-style-type: none"> <li>• Push <b>Reset Options</b> to clear prior selections.</li> <li>• Turn control knob to <b>Light Wash</b>.</li> </ul>	
	<b>Light Wash Cool Dry</b>	For normally soiled dishes. Select <b>Cool Dry</b> to save energy.  <b>Cycle Time:</b> Approx. 60 minutes <b>Water Usage:</b> Approx. 7.5 gallons	
<b>Rinse Hold Cool Dry</b>	For rinsing dishes that will be washed later. Use <b>Cool Dry only</b> . Do not use detergent.  <b>Cycle Time:</b> Approx. 15 minutes <b>Water Usage:</b> Approx. 5.0 gallons	<ul style="list-style-type: none"> <li>• Push <b>Reset Options</b> to clear prior selections.</li> <li>• Push <b>Normal Wash</b> button.</li> <li>• Push <b>Cool Dry</b> button.</li> <li>• Turn control knob to <b>Rinse Hold</b>.</li> </ul>	

4. Turn on the hot water faucet nearest the dishwasher to clear cool water from the water pipe, then turn faucet off.
5. Latch dishwasher door.

**Note:** The "ON" light glows while the dishwasher is operating. If

the light doesn't come on when you latch the door, make sure the control knob has been advanced far enough. *Motor sounds will be heard before water enters the dishwasher.*

## Helpful Hints

### Before operating your dishwasher

Please read your Automatic Dishwashing Guide, it contains **important safety information** for the safety of those operating your dishwasher. It also contains many suggestions for obtaining the best results from your dishwasher.

### What your dishwasher needs to do its job

- Water temperature should be 140°F(60°C).
- Water pressure should be between 15 and 120 pounds per square inch.
- **Fresh granular** detergent for automatic dishwashers.
- Proper connections to water and electricity.
- Rinse agent dispenser filled to reduce spotting and speed drying.

### Loading the dishwasher

Proper loading contributes to good washing results. See your Automatic Dishwashing Guide for complete instructions and loading examples.

- Remove loose food from dishware.
- When loading dishware into the rack, remember the following:
  - Load plastic items ("Dishwasher Safe") in upper rack only.
  - Place glasses in rows **between** prongs not over prongs.
  - Silverware should be loaded so pieces do not nest together or protrude through openings in the basket.
  - Dishes should not interfere with turning or extending parts of the spray system.

- Load with soiled surfaces facing inward.
- Items should be placed so water can drain freely.

### How to add a dish during a cycle

1. To be certain the added item is washed and rinsed, make sure there is a full wash cycle yet to be completed.
2. Unlatch the door to stop the cycle. Wait for the water action to stop.
3. Open the door and add the dish.
4. Close and latch the door. The cycle will resume automatically.

### Remember, it is normal...

- For a small amount of water to remain in the bottom of the tub.
- To hear some sounds while your dishwasher is running:
  - The fill valve opening or closing
  - Water entering the dishwasher
  - Timer clicking as it advances
  - Water being pumped out during drain
  - Detergent cup opening
  - Pump motor starting
  - Double drain at the end of last rinse

### Before you call for service

Please check the Common Dishwashing Problems and Solutions section of your Automatic Dishwashing Guide. It lists many minor operating problems and solutions you can correct yourself.

## Detergent Dispenser

### NORMAL WASH Cycle

Fill detergent cups #1 and #3. Rotate lid counterclockwise. Fill detergent cups #2 and #4. Cups #1 and #3 should be covered

### LIGHT WASH Cycle

Fill detergent cups #1 and #3. Rotate lid counterclockwise. Cups #1 and #3 should be covered.

