

**SONY**

BRAVIA

# LCD Digital Color TV

**XBR**

KDL-52XBR9  
KDL-46XBR9  
KDL-40XBR9

## **Sony Customer Support**

U.S.A.: [www.sony.com/tvsupport](http://www.sony.com/tvsupport)

Canada: [www.sony.ca/support](http://www.sony.ca/support)

United States

1.800.222.SONY

Canada

1.877.899.SONY

Please Do Not Return  
the Product to the Store

## Owner's Record

The model and serial numbers are located at the rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this TV.

Model Name

\_\_\_\_\_

Serial No.

\_\_\_\_\_

"XrossMediaBar" is a trademark of Sony Corporation. "XMB" is a trademark of Sony Corporation and Sony Computer Entertainment Inc.

"PlayStation" is a registered trademark and "PS3" is a trademark of Sony Computer Entertainment Inc.

DLNA<sup>®</sup>, the DLNA Logo and DLNA CERTIFIED<sup>™</sup> are trademarks, service marks, or certification marks of the Digital Living Network Alliance.



Your BRAVIA TV is ENERGY STAR<sup>®</sup> qualified in the "Home" mode.

It meets strict energy efficiency guidelines set by the U.S. Environmental Protection Agency and Department of Energy. ENERGY STAR is a joint program of these government agencies, designed to promote energy efficient products and practices.



Changes to certain features, settings, and functionalities of this TV (i.e. TV Guide, Picture/Sound, Light Sensor, Power Savings) can increase or change the power consumption.

Depending upon such changed settings, the power consumption may exceed the limits required for the ENERGY STAR qualification in the "Home" mode.

## CAUTION

To prevent electric shock and blade exposure, do not use this polarized AC plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted.

- Operate the TV only on 120-240 V AC.
- Avoid operating the TV at temperatures below 41°F (5°C).

## Licensing Information

Macintosh is a trademark of Apple Inc., registered in the U.S. and other countries.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

Ferguson Patent Properties, LLC:

U.S. Patent No. 5,717,422

U.S. Patent No. 6,816,141

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

In the United States, TV Guide and other related marks are trademarks of Gemstar-TV Guide International, Inc. and/or its subsidiaries. In Canada, TV Guide is a registered mark of Transcontinental Inc., and is used under license by Gemstar-TV Guide International, Inc. and/or its subsidiaries.

The TV Guide On Screen system is manufactured under license from Gemstar-TV Guide International, Inc. and/or its subsidiaries.

The TV Guide On Screen system is protected by one or more of the following United States patents 6,498,895; 6,850,693; 6,396,546; 5,940,073; 6,239,794 to Gemstar-TV Guide International, Inc. and/or its subsidiaries.

Gemstar-TV Guide International, Inc. and/or its related affiliates are not in any way liable for the accuracy or availability of the program schedule information or other data in the TV Guide On Screen system and cannot guarantee service availability in your area. In no event shall Gemstar-TV Guide International, Inc. and/or its related affiliates be liable for any damages in connection with the accuracy or availability of the program schedule information or other data in the TV Guide On Screen system.

Blu-ray Disc is a trademark.

"BRAVIA" and BRAVIA, S-Force, Motionflow, BRAVIA Sync, DME<sup>x</sup> and "x.v. Color" are trademarks or registered marks of Sony Corporation.

This manual is for the 40, 46 and 52 inch BRAVIA KDL-XBR9 series models with screen size measured diagonally.

# Contents

## Introducing Your BRAVIA® TV

|  |   |
|--|---|
| Experiencing Stunning HD with Your BRAVIA TV ..... | 4 |
| The Four Steps to a Full HD Experience .....       | 4 |
| TV Feature Highlights .....                        | 5 |

## Getting Started

|   |    |
|---|----|
| Setting Up Your TV .....                                | 6  |
| Using a Wall-Mount Bracket .....                        | 7  |
| Locating Inputs and Outputs .....                       | 8  |
| Connecting the TV .....                                 | 10 |
| Connecting Internet & DLNA Certified™ Networks .....    | 13 |
| Connecting Other Equipment .....                        | 14 |
| Bundling the Connecting Cables .....                    | 15 |
| Installing the TV Against a Wall or Enclosed Area ..... | 15 |
| Securing the TV .....                                   | 16 |
| Running Initial Setup .....                             | 18 |

## Operating the TV

|   |    |
|---|----|
| Using the Remote Control .....          | 19 |
| Remote Control Button Description ..... | 20 |
| TV Controls and Indicators .....        | 23 |
| Programming the Remote Control .....    | 24 |

|  |    |
|--|----|
| Manufacturer's Code List .....                       | 25 |
| Using Other Equipment with Your Remote Control ..... | 27 |
| Remote Control Backlight .....                       | 28 |

## Exploring the XMB™ and TV Features

|   |    |
|---|----|
| Category Icons .....                            | 30 |
| Accessing Photo, Music, and Video Content ..... | 31 |
| BRAVIA Internet Video .....                     | 32 |
| Photo, Music, and Video .....                   | 33 |
| BRAVIA Internet Widgets .....                   | 35 |
| Favorites .....                                 | 37 |
| TV Guide On Screen® .....                       | 38 |
| Background TV .....                             | 40 |
| Inputs .....                                    | 40 |
| Wide Mode .....                                 | 41 |
| BRAVIA Sync with Control for HDMI .....         | 43 |

## Other Information

|                                   |    |
|-----------------------------------|----|
| How to Care for Your BRAVIA ..... | 44 |
| Troubleshooting .....             | 44 |
| Specifications .....              | 46 |
| Index .....                       | 47 |

## Welcome to the World of BRAVIA® HDTV

Thank you for purchasing this Sony BRAVIA® high-definition television. Use the documentation listed below to get the most out of your TV.



### Safety Booklet

Provides precautionary measures to keep you and your TV safe. Read this information prior to setting up your TV.



### Quick Setup Guide

Provides TV setup information, illustrates sample optional equipment connection diagrams, and highlights TV features.



### Operating Instructions

Provides general TV operation information.



### Reference Book

Offers the most complete TV operation information available for your TV and presents advanced customization details. Access it at [www.sony.com/referencebook](http://www.sony.com/referencebook).



The TV operation information above has been designed in an eco-friendly manner to reduce the consumption of natural resources.

# Introducing Your BRAVIA® TV

## Experiencing Stunning HD with Your BRAVIA TV

To experience the stunning detail of your new BRAVIA TV, you need access to high-definition (HD) programming. Your BRAVIA TV can receive and display HD programming from:


- Over-the-air broadcasting via HD-quality antenna
- HD cable subscription
- HD satellite subscription
- Blu-ray Disc™ player or other HD compatible external equipment

Contact your cable, satellite or HD service provider for information on upgrading to HD programming.


## The Four Steps to a Full HD Experience

### Set, Source, Sound, and Setup

Along with your BRAVIA TV **set**, a complete HD system requires a **source** of HD programming, an HD **sound** system, and a proper connection **setup**. Refer to the Quick Setup Guide, enclosed separately, for connecting other optional equipment.

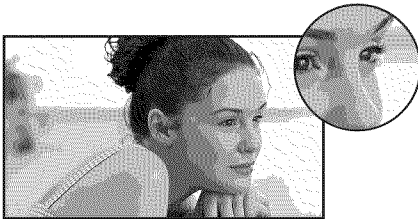

You can enjoy crisp, clear images, smooth movement, and high-impact visuals from 1080 HD signals as shown here.




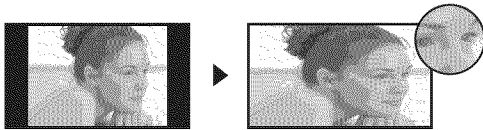


When you compare a high-definition signal to a standard definition signal, you will notice a big difference in picture quality. If black bars appear as shown here, press **WIDE** on the remote control to fill the screen.

## TV Feature Highlights

Your **BRAVIA** TV is equipped with the latest in TV technology.

- **Broadband Internet Connectivity: BRAVIA** Internet Video brings videos, movies and much more from the Internet to your TV (page 32). **BRAVIA** Internet Widgets allow you to access local weather, news, and much more. Displayed here is **Widgets** (page 35).
- **Digital Media Accessibility:** Use the **Photo, Music,** and **Video** Category icons to access photo, music, and video files from DLNA Certified™ networked equipment or Sony USB equipment. Displayed here is **Photo USB** (page 33).
- **Central Location for Your Favorite Items:** The **Favorites** feature centralizes your favorite **BRAVIA Internet Video** and **Widgets** items, **Photo, Music, Video** content, **TV channels, External Inputs,** and **Background TV** themes for quick and easy access (page 37).
- **Channel Programming Information:** TV Guide On Screen® provides TV programming information (page 38).
- **TV Home Menu: XMB™ (XrossMediaBar)** TV menu provides you access to TV settings, photo, music, video, TV channel listings, and more (page 29).

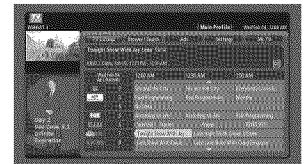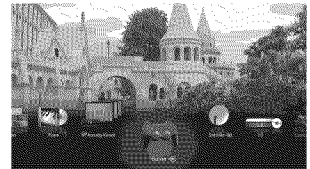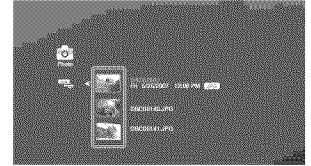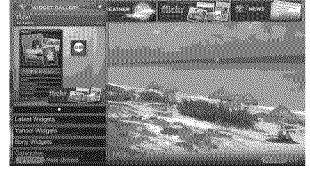


# Getting Started

## Setting Up Your TV

Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand. You will need a Phillips screwdriver and the supplied screws to complete the task. Look for the attachment instructions taped to the TV unit.

Be sure to consider the following while setting up your TV:

- Disconnect all cables when carrying the TV.
- Carry the TV with the adequate number of people; larger size TVs require two or more people.
- Correct hand placement while carrying the TV is very important for safety and to avoid damages.

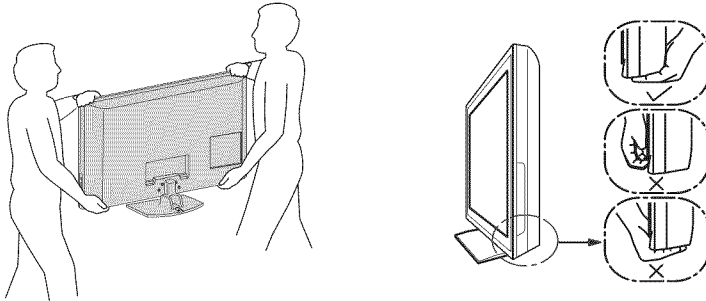

- Ensure your TV has adequate ventilation, see page 15.
- For best picture quality, do not expose the screen to direct illumination or sunlight.
- Avoid installing the TV in a room with reflective wall and floor materials.
- Avoid moving the TV from a cold area to a warm area. Sudden room temperature changes may cause moisture condensation. This may cause the TV to show poor picture and/or poor color. Should this occur, allow moisture to evaporate completely before powering the TV on.



- Read the supplied Safety Booklet for additional safety information.
- When cable connection is completed, be sure to secure the TV to a stable surface or mount it to a wall. The designated Sony wall-mount bracket model and TV stand model name(s) are available under the “Other Information” section of Operating Instructions. For details on securing the TV, see page 16.

## Using a Wall-Mount Bracket

All models except the 52 inch (measured diagonally) model can be mounted to a wall using the Wall-Mount Bracket (not supplied) out of the box as packaged.

If you are mounting the 52 inch model to a wall, remove the Table-Top Stand. For removing the Table-Top Stand, refer to the instructions attached to the TV.


Prepare the TV for the Wall-Mount Bracket before making cable connections.

**Sony strongly recommends that you use the Wall-Mount Bracket model designed for your TV (see page 45) and that wall-mounting of your TV should be performed by a Sony dealer or licensed contractor.**

- Follow the instruction guide provided with the Wall-Mount Bracket for your model. You may also need to refer to the online Reference Book for additional information for your TV model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the mounting hooks to the TV set. (Do not use the screws that are intended for the Table-Top Stand attachment.)


The supplied M6 screws are designed so that they are 8 mm to 12 mm in length when measured from the attaching surface of the mounting hook.

The diameter and length of the screws differ depending on the Wall-Mount Bracket model. Use of screws other than those supplied with the bracket may result in internal damage to the TV set or cause it to fall, etc.

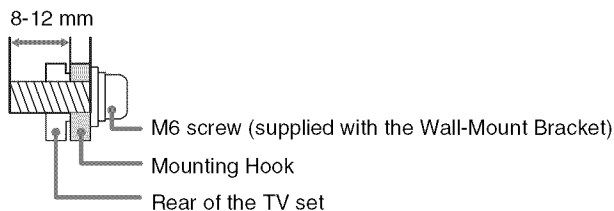

- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children. When you are using the Table-Top Stand, be sure to read page 17.

# Locating Inputs and Outputs

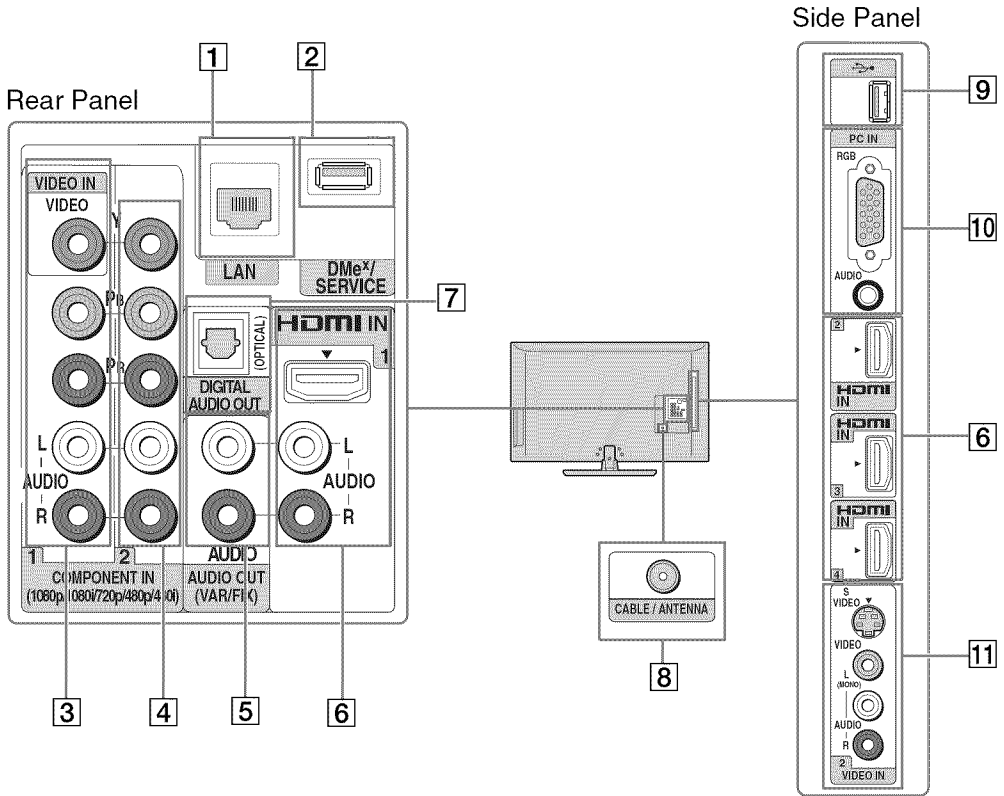

- An HDMI or Component video (YPbPr) connection is required to view 480i, 480p, 720p, 1080i and 1080p video formats. The 1080/24p video format is available only with HDMI connection. This TV displays all video input signals in a resolution of 1,920 dots × 1,080 lines.



| Item  | Description   |
|---|---|
| 1 LAN   | Connects to an existing network using an Ethernet cable. Be sure to complete <b>Network Setup</b> (page 18).  |
| 2 DMe <sup>x</sup> /SERVICE   | This USB port is only for service unless you are connecting an optional BRAVIA Link module (DMe <sup>x</sup> ).   |
| 3 VIDEO IN 1/<br>COMPONENT<br>IN 1 (1080p/<br>1080i/720p/<br>480p/480i)/<br>L-AUDIO-R | This input port can be used as composite video input (VIDEO 1) or as component video input (COMPONENT 1). For composite use, connect the yellow jack to Y for video and use audio (L/R) for audio signals. For component connection, use Y, P <sub>B</sub> , P <sub>R</sub> for video signals and also connect the audio (L/R) for audio signals. By default, this TV will automatically detect and switch between VIDEO 1 and COMPONENT 1. To manually set the input type, press <b>HOME</b> , select <b>Settings</b> , then <b>Channels &amp; Inputs</b> , then select <b>Video/Component 1 Selection</b> . |
| 4 COMPONENT<br>IN 2   | Component video provides better picture quality than the S Video and composite video.<br>Audio connection is required for the COMPONENT IN ports, connect audio (L/R).  |
| 5 AUDIO OUT<br>(VAR/FIX)  | Connects to the left and right audio input jacks of your analog audio equipment. You can use these outputs to listen to your TV's audio through your stereo system.   |
| 6 HDMI IN 1/2/3/4<br>L-AUDIO-R  | HDMI (High-Definition Multimedia Interface) provides an uncompressed, all-digital audio/video interface between this TV and any HDMI-equipped audio/video equipment, such as a set-top box, DVD player, and A/V receiver. HDMI supports enhanced, or high-definition video, plus digital audio. Be sure to use only an HDMI cable that bears the HDMI logo.<br>Use the HDMI IN 1 port when connecting DVI equipment with a DVI-to-HDMI cable or adapter (not supplied). Equipment using a DVI connection also requires an additional audio connection using an audio cable connected to AUDIO (L/R).          |
| 7 DIGITAL AUDIO<br>OUT (OPTICAL)  | Connects to the optical audio input of digital audio equipment that is PCM/Dolby* Digital compatible.   |
| 8 CABLE/<br>ANTENNA   | RF input that connects to your cable or over-the-air antenna.   |
| 9 USB   | Connects to USB equipment to access photo, music, and video files.  |
| 10 PC IN<br>(RGB/AUDIO)   | Connects to a personal computer's video and audio output connector. Can also be connected to other analog RGB equipment.<br>For some Apple Macintosh computers, it may be necessary to use an adapter (not supplied). If an adapter is used, connect the adapter to the computer before connecting the HD15-HD15 cable.<br>You may need to adjust the TV settings or your PC's resolution and timing (see page 12).   |
| 11 VIDEO IN 2<br>S VIDEO/VIDEO<br>L (MONO)-<br>AUDIO-R                                | Connects to the S VIDEO output jack of video equipment. If both composite video and S VIDEO are connected, S VIDEO signal has priority.<br>If you have mono equipment, connect its audio output port to the TV's L (MONO) audio input port.   |

\* Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

# Connecting the TV

## Cable System or VHF/UHF Antenna System

You can enjoy high-definition and standard-definition digital programming (if available in your area) along with standard-definition analog programming.

This TV is capable of receiving unscrambled digital programming for both cable (QAM and 8VSB) and external VHF/UHF antenna (ATSC).

### Cable or VHF/UHF (or VHF only)




- It is strongly recommended that you connect the CABLE/ANTENNA input using a 75-ohm coaxial cable to receive optimum picture quality. A 300-ohm twin lead cable can easily be affected by radio frequency interference, resulting in signal degradation.

## Cable System and VHF/UHF Antenna System

Use an optional A-B RF switch (not supplied) to switch between the cable and over-the-air antenna programming, as shown here.

Set the **Cable/Antenna** setting found

under the Settings on the **XMB™** to **Cable** or **Antenna** for the type of input signal you choose.

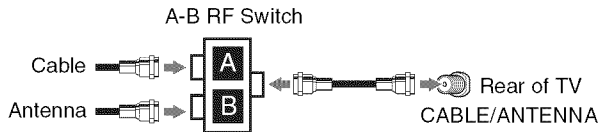


## HD Cable Box/HD Satellite Box

You can enjoy high-definition programming by subscribing to a high-definition service or a high-definition satellite service. For the best possible picture, make sure you connect this equipment to your TV via the HDMI or component video (with audio) input located on the back of your TV.


### Shown with HDMI Connection

Rear of TV

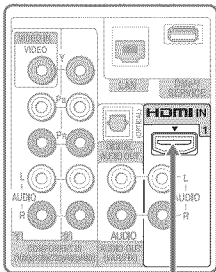


HDMI cable

CATV/Satellite antenna cable

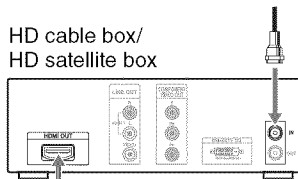


HD cable box/  
HD satellite box

## Shown with DVI Connection

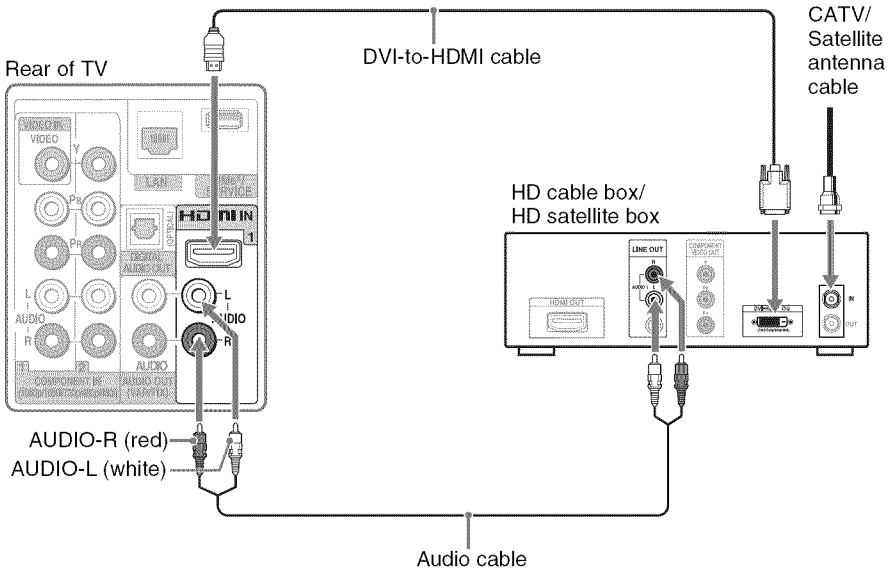

- If your equipment has a DVI output and not an HDMI output, connect the DVI output to the HDMI IN 1 (with DVI-to-HDMI cable or adapter) and connect the audio output to the AUDIO IN (L/R) of HDMI IN 1.


## Shown with Component Connection

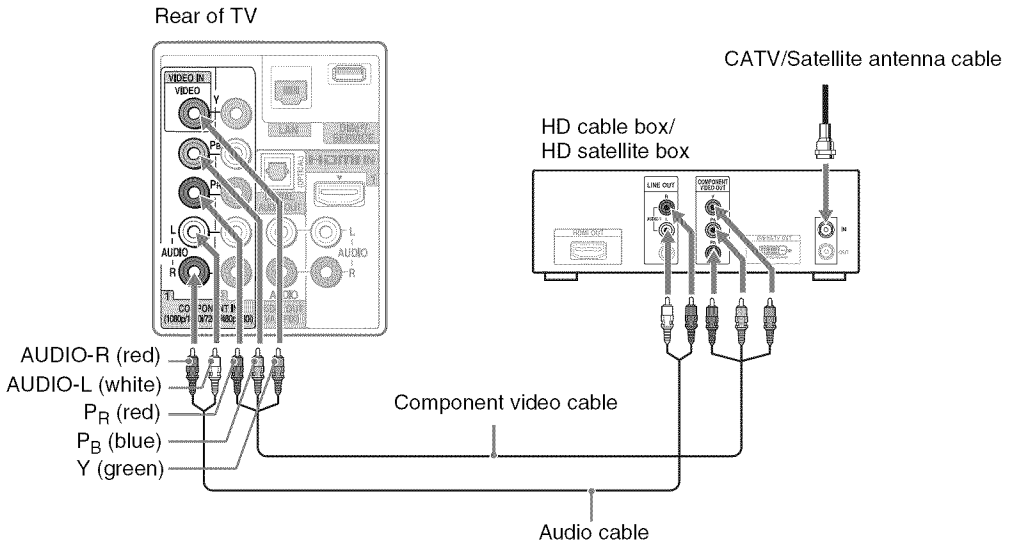

## Shown with PC connection

Use the TV as a monitor for your PC by connecting an HD15-HD15 cable connection as shown to the right.

This TV can also be connected to a PC with a DVI or HDMI output. (Refer to the supplied Quick Setup Guide.)

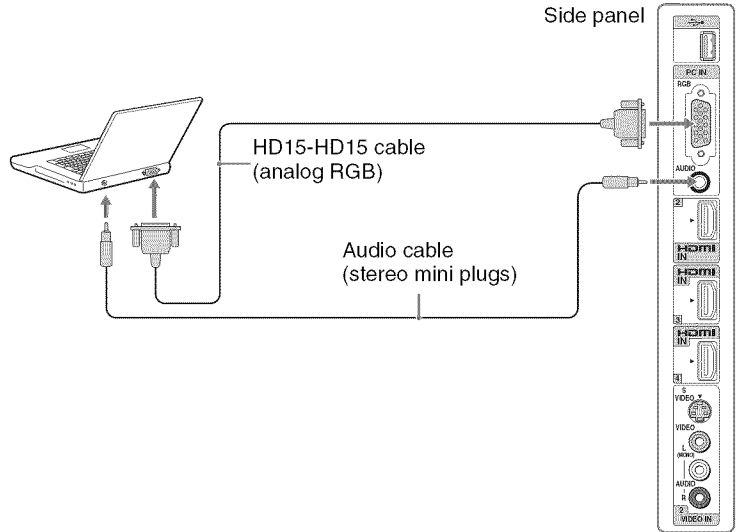

## PC Input Signal Reference Chart

After connecting the PC to the TV, set the output signal from your PC according to the supported resolutions and timings indicated below.

| <i>Supported resolutions</i> |                           |          |                        |                                   |                                |                 |
|------------------------------|---------------------------|----------|------------------------|-----------------------------------|--------------------------------|-----------------|
| <i>Signal</i>                | <i>Horizontal (Pixel)</i> | <i>x</i> | <i>Vertical (Line)</i> | <i>Horizontal frequency (kHz)</i> | <i>Vertical frequency (Hz)</i> | <i>Standard</i> |
| VGA                          | 640                       | x        | 480                    | 31.5                              | 60                             | VGA             |
| SVGA                         | 800                       | x        | 600                    | 37.9                              | 60                             | VESA Guidelines |
| XGA                          | 1,024                     | x        | 768                    | 48.4                              | 60                             | VESA Guidelines |
| WXGA                         | 1,280                     | x        | 768                    | 47.4                              | 60                             | VESA            |
|                              | 1,280                     | x        | 768                    | 47.8                              | 60                             | VESA            |
|                              | 1,360                     | x        | 768                    | 47.7                              | 60                             | VESA            |
| SXGA                         | 1,280                     | x        | 1,024                  | 64.0                              | 60                             | VESA            |
| HDTV*                        | 1,920                     | x        | 1,080                  | 67.5                              | 60                             | CEA-861*        |



- This TV's PC input does not support Sync on Green or Composite Sync.
- This TV's PC VGA input does not support interlaced signals.
- For the best picture quality, it is recommended to use the signals in the above chart. In plug and play, signals with a 60 Hz vertical frequency will be detected automatically. (PC reboot may be necessary.)

\* The 1080p timing when applied to the HDMI input will be treated as a video timing and not PC timing. This affects **Picture** settings and **Wide Mode** settings. To view PC content set **Scene Select** to **Graphics**, **Wide Mode** to **Full**, and **Display Area** to **Full Pixel**.



- Connect the PC IN jack to the PC using an HD15-HD15 cable with ferrite core (analog RGB) and audio cable (see page 9).
- The TV enters the standby mode automatically when the PC is connected to the TV and no signal has been output from the PC for more than 30 seconds, see the online Reference Book for details.

# Connecting Internet & DLNA Certified™ Networks

Connect an Ethernet cable from your home network to the LAN input of your TV to enjoy **BRAVIA** Internet features and/or connect to DLNA Certified™ media servers, see page 31 to learn more about these features.


## Sample Network Connection Diagram

### Internet Features

- **BRAVIA** Internet Video
- **BRAVIA** Internet Widgets


### DLNA Certified™ Media Player Features

- Photo
- Music
- Video

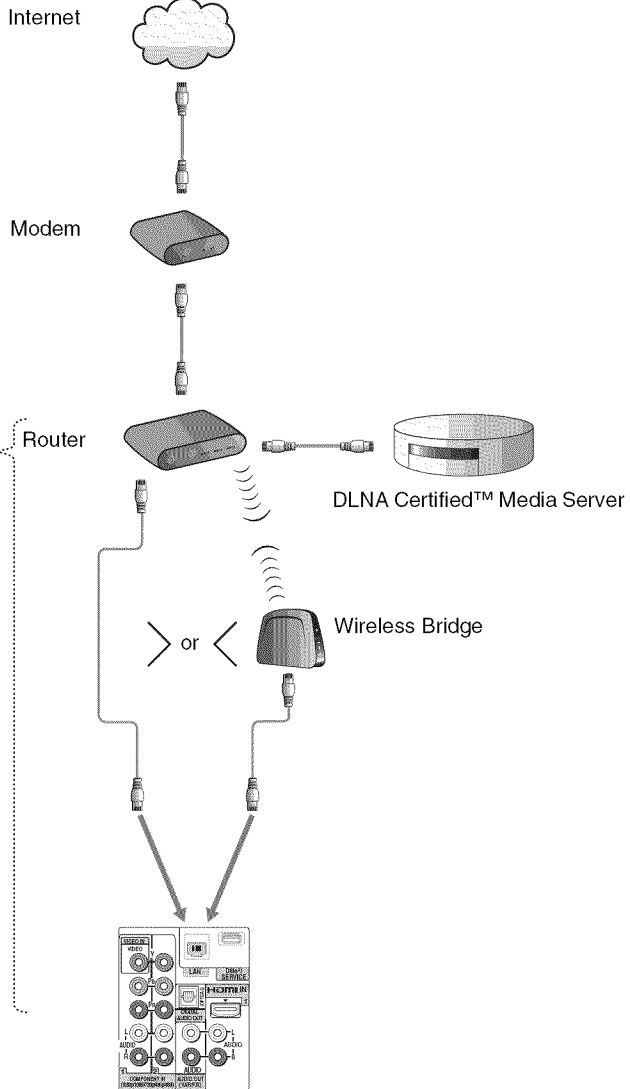

- For more information about compatible wireless bridges, visit <https://internet.sony.tv>
- Refer to your DLNA Certified equipment's operating instructions for setup and connection information.

# Connecting Other Equipment

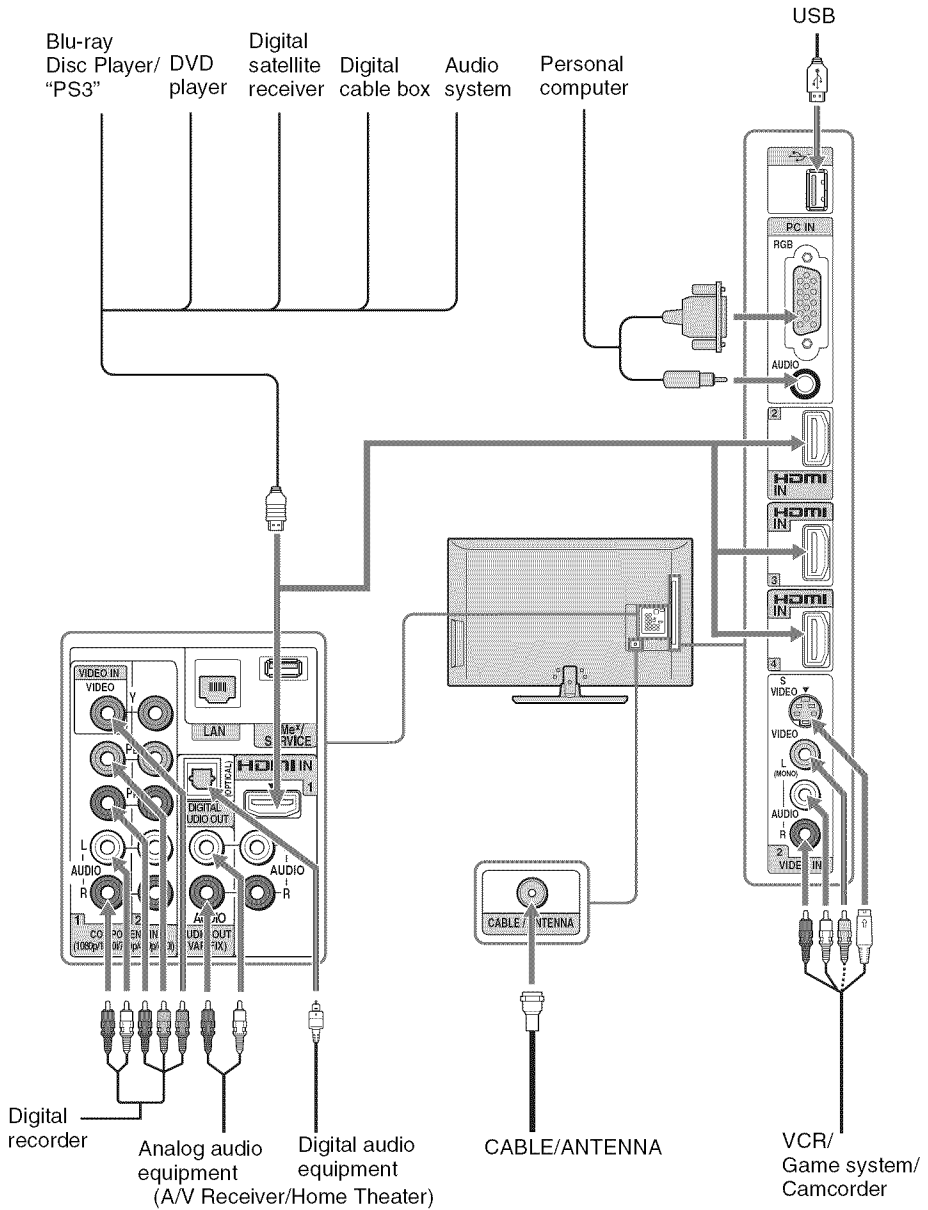


• Refer to the Quick Setup Guide (supplied) when connecting other equipment to your TV.

## Bundling the Connecting Cables

Use the attached cable clammer to bundle the connecting cables. The cable clammer is located on the Table-Top Stand as illustrated. Refer to the online Reference Book when mounting the TV to a wall.


Do not bundle the AC power cord with other connecting cables.

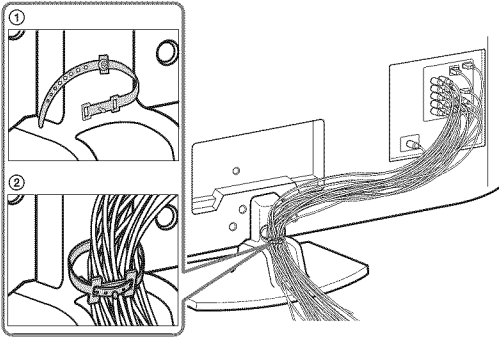


## Installing the TV Against a Wall or Enclosed Area

Make sure that your TV has adequate ventilation. Allow enough space around the TV as shown below. Avoid operating the TV at temperatures below 41 °F (5 °C).

### Installed with stand

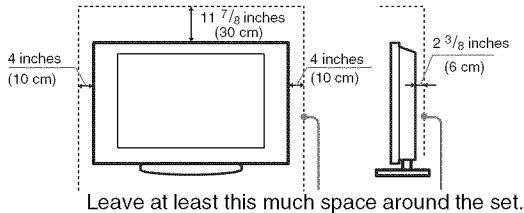


### Installed on the wall

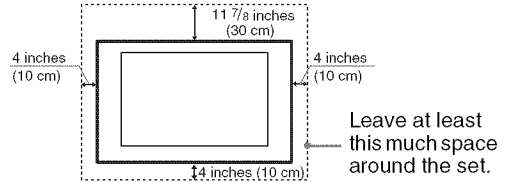


Never install the TV set as follows:

Air circulation is blocked.

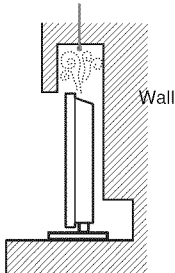

Air circulation is blocked.

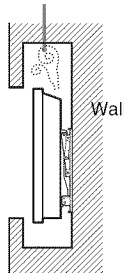

- Inadequate ventilation can lead to overheating of the TV and may cause TV damage or cause a fire.

## Securing the TV



Sony strongly recommends taking measures to prevent the TV from toppling over. Unsecured TVs may topple and result in property damage, serious bodily injury or even death.

### Preventing the TV from Toppling

- Secure the TV to a wall and/or stand.
- Do not allow children to play or climb on furniture and TV sets.
- Avoid placing or hanging items on the TV.
- Never install the TV on:
  - slippery, unstable and/or uneven surfaces.
  - furniture that can easily be used as steps, such as a chest of drawers.
- Install the TV where it cannot be pulled, pushed, or knocked over.
- Route all AC power cords and connecting cables so that they are not accessible to curious children.

### Recommended Measures to Secure the TV


Consider the following measures when securing your TV to a TV stand (not supplied).

#### 1 Secure the stand for the TV.

Make sure the TV stand can adequately support the weight of the TV. Use two angle braces (not supplied) to secure the stand.

For each angle brace use the appropriate hardware to:

- attach one side of the angle brace to the wall stud.
- attach the other side to the TV stand.

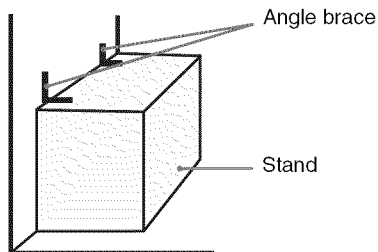




## 2 Secure the TV to the stand.

Use the optional hardware listed below (not supplied):

- M4 × 20 machine screw (screwed into the TV's Table-Top Stand).
- A screw or similar (attach it to the TV stand).
- Rope or chain (strong enough to support the weight of the TV). Make sure that there is no excess slack in the rope or chain.


An alternative way to secure the TV is with an optional Sony Support Belt Kit.

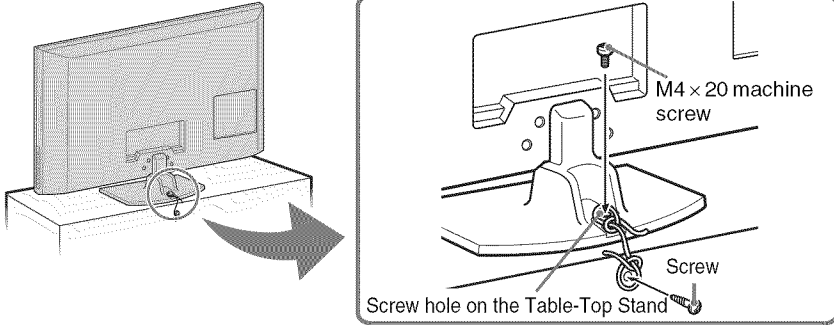

## 3 Anchor the TV to the wall.

Use the hardware listed below (not supplied).

- Two M6 × 14 mm anchor bolts (screw into the top-most wall-mount holes located on the rear of the TV).
- Rope or chain (attach to one M6 anchor bolt).
- Wall-anchor (attach to the wall stud) strong enough to support the weight of the TV (pass the rope through the wall-anchor, then attach to the other M6 anchor bolt).

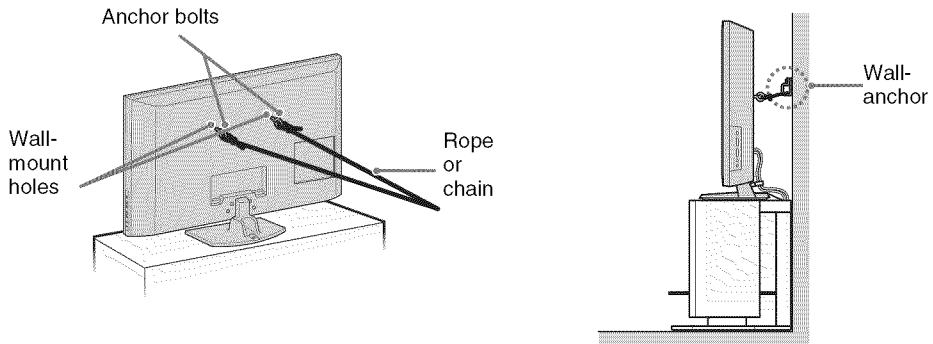

- Contact Sony Customer Support to obtain the optional Support Belt Kit by providing your TV model name.

For United States call: 1-800-488-7669 or visit: [www.sony.com/accessories](http://www.sony.com/accessories)


For Canada call: 1-877-899-7669

- Measure 2 provides minimal protection against the TV toppling over. For further protection, follow all three measures recommended above.

# Running Initial Setup

The **Initial Setup** screen appears when you turn on the TV for the first time.

- 1 Complete your cable connections before proceeding with the **Initial Setup** (refer to the Quick Setup Guide and the online Reference Book for additional information).
- 2 Use the following remote control buttons to navigate through the **Initial Setup**.

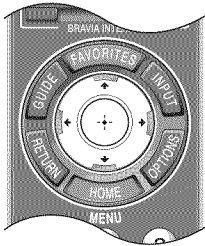

**▲/▼ button:**

Allows you to highlight options where applicable.

**⊕ button:**

Allows you to select the highlighted option.

**◀ button:**

Allows you to move back to the previous screen, where applicable.

**▶ button:**

Allows you to move to the next screen, where applicable.



- 3 Select the language for the on-screen display (OSD) text.
- 4 Select your viewing environment. **Home** mode sets the TV display to settings optimized for home viewing (this setting is ENERGY STAR compliant). **Retail** mode changes the display settings to a default more appropriate for a store environment.
- 5 Select your country and enter your ZIP or Postal code.
- 6 Set the clock to the current date and time.
- 7 Select **Continue** to scan for available channels and enable the **TV Guide On Screen**<sup>®</sup> feature. If you receive channels from a cable box or satellite receiver and do not wish to use the TV's built-in tuner, select **Skip**. Selecting **Skip** will disable the **TV Guide On Screen** feature, which is only available when the TV's tuner is used.
- 8 To benefit from the network features included on this TV, connect to your existing home network (see page 13). Follow the instructions on the screen to complete **Network Setup**, or select **Skip** to complete it at a later time (optional). Refer to the online Reference Book for more details.

**Initial Setup** is complete. You can now begin watching your new TV.




- Enabling the TV Guide On Screen feature will increase the amount of time the TV is in Download Acquisition Mode (DAM); see page 46.
- For more information on **TV Guide On Screen**, see page 38.
- If the language that you selected in the **Language** setting is available from the broadcaster as an **Alternate Audio** language, your TV will automatically switch to the matching language with the **Alternate Audio** feature. To change the audio settings, access the **Alternate Audio** menu by pressing **OPTIONS** on the remote control when an alternate audio stream is available from the broadcaster. **Alternate Audio** is only available for digital programs (see the online Reference Book).
- To complete **Network Setup** at a later time, access the **XMB**<sup>™</sup> and select the **Network** icon on the **Settings** menu. Then select **Network Setup**.

# Operating the TV

## Using the Remote Control


### Inserting Batteries into the Remote Control

Insert two size AA batteries (supplied) by matching  $\oplus$  and  $\ominus$  on the batteries to the diagram inside the battery compartment of the remote control.

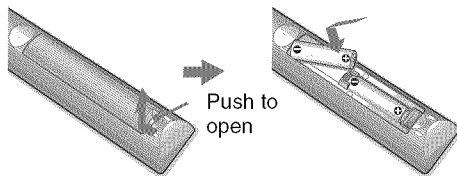

### Guidelines for Remote Control

- Point your remote control directly at the IR sensor located on your TV.
- Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.
- Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.
- If you are having problems with the remote control, reinsert or replace your batteries and make sure that they are correctly inserted.

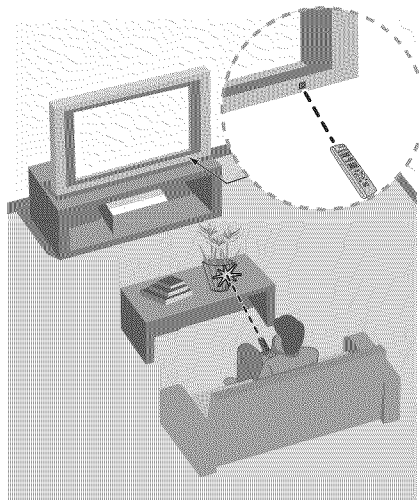


# Remote Control Button Description




| Button                    | Description  |
|---------------------------|--|
| <b>1</b> DISPLAY          | Press once to display information about the channel/program/input you are viewing. The information will time out in a few seconds or press again to exit. You can change the display preference, press <b>HOME</b> and go to <b>Preferences</b> to set <b>Info Banner</b> to <b>Small</b> , <b>Medium</b> or <b>Large</b> .  |
| <b>2</b> LIGHT            | Press to light up the remote control buttons. Refer to the online Reference Book for additional information on the remote control backlight.   |
| <b>3</b> FUNCTION Buttons | The <b>FUNCTION</b> button indicator lights up momentarily when pressed to show which external equipment the remote control is operating. These buttons can be programmed to operate external equipment. You must first press one of these <b>FUNCTION</b> buttons to operate the corresponding equipment. See page 24 for “Programming the Remote Control”.   |
| <b>4</b> SYNC MENU        | <p>The buttons listed below can operate video equipment programmed to the <b>DVD</b>, <b>AMP</b>, or <b>STB FUNCTION</b> buttons of the remote control. When the <b>TV FUNCTION</b> button is selected, the buttons can also be used to control the connected equipment with the <b>Control for HDMI</b> function (not available on all <b>Control for HDMI</b> equipment). Some other buttons on the remote control may also operate <b>BRAVIA® Sync™</b> equipment.</p> <p><b>◀◀ PREV:</b> Press to replay the current program from the previous chapter mark (if any) or from the beginning of the live TV cache.</p> <p><b>◀◀◀ REPLAY:</b> Press to replay the current program for a set period of time.</p> <p><b>▶▶▶ ADVANCE:</b> Press to advance forward a set period of time when playing back a recorded program.</p> <p><b>▶▶▶ NEXT:</b> Press to advance forward to the next chapter mark (if any) or to live TV when playing back a recorded program.</p> <p><b>◀◀ (fast reverse):</b> Press to play a program in fast rewind mode.</p> <p><b>▶▶▶ PLAY:</b> Press to play a program at a normal speed.</p> <p><b>▶▶▶ (fast forward):</b> Press to play a program in fast forward mode.</p> <p><b>⏸ PAUSE:</b> Press to pause playback.</p> <p><b>■ STOP:</b> Press to stop playback.</p> <p><b>SYNC MENU:</b> Press once to display the <b>Sync'd HDMI Devices</b> (while a <b>Control for HDMI</b> device is not selected). Select the HDMI device and then press <b>SYNC MENU</b> to display the menu of connected equipment (not available on all <b>Control for HDMI</b> equipment).</p> <p><b>THEATER:</b> Press to turn on and off the <b>Theater Mode</b>. The picture settings will be set for a cinema-like experience and the audio will be switched to the audio output of the attached speakers of your <b>BRAVIA Sync</b> audio system. Your <b>BRAVIA Sync</b> audio system must be connected by an HDMI connection to your TV (see page 43 for details).</p> |



• The **5. PLAY** and **CH +** buttons have a tactile dot. Use them as a reference when operating the TV.

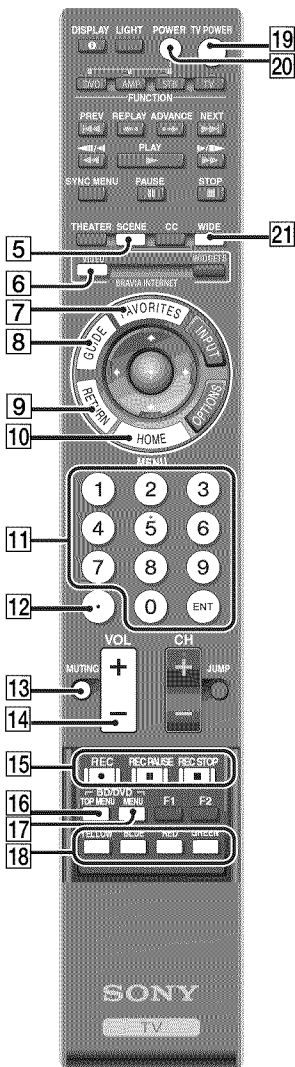


| Button                             | Description  |
|------------------------------------|--|
| <b>5 SCENE</b>                     | Press to select the best picture and sound settings for the particular type of content you are viewing.  |
| <b>6 BRAVIA INTERNET VIDEO</b>     | Press to display the <b>XMB™</b> with highlight on the most recently viewed Internet content provider (see page 32).   |
| <b>7 FAVORITES</b>                 | Press to display <b>Favorites</b> menu. Press again to exit from the <b>Favorites</b> menu (see page 37).  |
| <b>8 GUIDE</b>                     | Press to open the <b>TV Guide On Screen</b> system. Press again to exit the Guide (see page 38).   |
| <b>9 RETURN</b>                    | Press to go back to the previous screen or exit from the screen when displaying menu items and settings.   |
| <b>10 HOME</b>                     | Press to display <b>TV Home Menu/XMB™</b> to access <b>TV Settings</b> and other media and network related content.  |
| <b>11 0-9 ENT</b>                  | Press <b>0-9</b> to select a channel; the channel changes after two seconds. Press <b>ENT</b> to change channels immediately.  |
| <b>12</b>                          | Use with <b>0-9</b> and <b>ENT</b> to select digital channels. For example, to enter 2.1, press <b>2</b> , <b>.</b> , <b>1</b> and <b>ENT</b> .  |
| <b>13 MUTING</b>                   | Press to mute the sound. Press again or press <b>VOL +</b> to restore the sound.   |
| <b>14 VOL +/-</b>                  | Press to adjust the volume.  |
| <b>15 DVR/VR Record Buttons</b>    | <ul style="list-style-type: none"> <li> <b>REC:</b> Press to start recording.</li> <li> <b>REC PAUSE:</b> Press to pause recording.</li> <li> <b>REC STOP:</b> Press to stop recording.</li> </ul> |
| <b>16 BD/DVD TOP MENU</b>          | Press to display the top menu of the BD/DVD disc.  |
| <b>17 BD/DVD MENU</b>              | Press to display the BD/DVD disc menu.<br>   |
| <b>18 YELLOW, BLUE, RED, GREEN</b> | For more information, refer to the operating manual of the connected equipment.  |
| <b>19 TV POWER</b>                 | To use with Sony Blu-ray Disc player (BD), see page 28.  |
| <b>20 POWER</b>                    | Press to turn on and off the TV.   |
| <b>21 WIDE</b>                     | Press to turn on and off the external equipment selected by <b>FUNCTION</b> buttons.   |
|                                    | Press repeatedly to cycle through the available <b>Wide Mode</b> settings (see page 41).   |

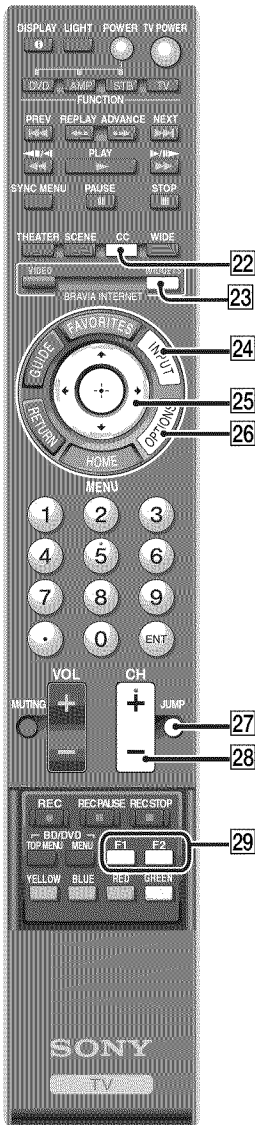


| Button                            | Description   |
|-----------------------------------|---|
| <b>22</b> CC                      | Press to turn <b>Closed Captions (CC)</b> on, off, or automatically display CC when sound is muted.   |
| <b>23</b> BRAVIA INTERNET WIDGETS | Press to display the <b>BRAVIA</b> Internet Widgets. While the <b>BRAVIA</b> Internet Widgets are displayed on the screen, press again to remove the Widgets from the screen (see page 35). |
| <b>24</b> INPUT                   | Press to display the list of inputs. Press repeatedly to toggle through the inputs. See page 40.  |
| <b>25</b> ↑/↓/←/→<br>+            | Press ↑/↓/←/→ to move focus/highlight. Press + to select/confirm an item.   |
| <b>26</b> OPTIONS                 | Press to display a list of convenient functions and menu shortcuts. The <b>Options</b> menu items vary based on current input and/or content.   |
| <b>27</b> JUMP                    | Press to jump back and forth between two channels or inputs. The TV alternates between the current channel or input and the last channel or input that was selected.                        |
| <b>28</b> CH +/-                  | Press to scan through channels. To scan quickly through channels, press and hold down either +/-.   |
| <b>29</b> F1/F2                   | Press to select the function of connected components. For details, see page 27 “Using Other Equipment with Your Remote Control”.  |



# TV Controls and Indicators

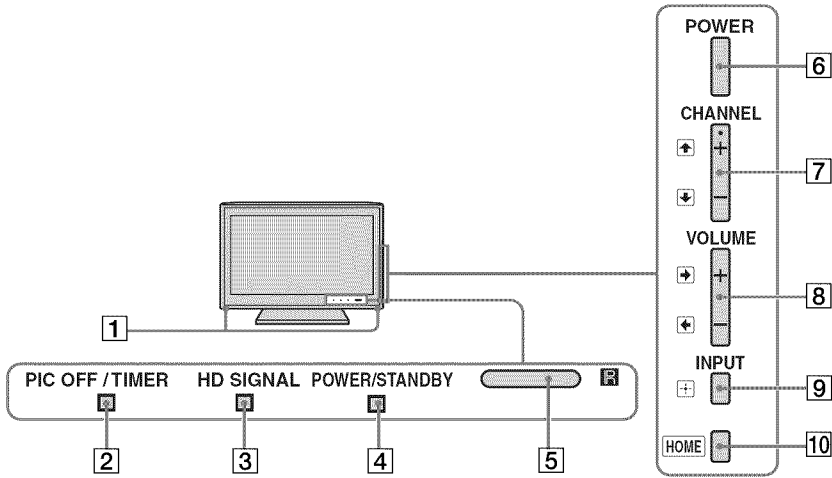


| Item                                   | Description   |
|--|---|
| 1 <b>Speaker</b>                       | Outputs audio signal.   |
| 2 <b>PIC OFF/ TIMER</b>                | Lights up in orange when the <b>Timer</b> or <b>Sleep Timer</b> is set. Lights up and/or blinks in orange during a software upgrade. Lights up in green when the <b>Power Saving</b> is set to <b>Picture Off</b> .   |
| 3 <b>HD SIGNAL</b>                     | Lights up when the TV receives HD signal including up converted signals.  |
| 4 <b>POWER/ STANDBY</b>                | Lights up in red when your TV is in PC power saving mode or during the software upgrade. Lights up in green when the TV is turned on. If the LED blinks in red continuously, this may indicate that the TV needs servicing (see contacting Sony information on the front cover).  |
| 5 <b>Light Sensor</b>                  | Senses room light level and adjusts the screen brightness accordingly. Do not put anything near the sensor or the nearby general area (as shown above), as its function may be affected.  |
| <b>(IR) Infrared Receiver</b>          | Receives IR signals from the remote control. Do not block this area, as it may interfere with remote control operation.   |
| 6 <b>POWER</b>                         | Press to turn on and off the TV.  |
| 7 <b>- CHANNEL +</b><br>↓            ↑ | Press to scan through channels. To scan quickly through channels, press and hold down either +/- . In the <b>MENU</b> screen, these buttons serve as up/down buttons.   |
| 8 <b>- VOLUME +</b><br>←            →  | Press to adjust the volume. In the <b>MENU</b> screen, these buttons serve as left/right buttons.   |
| 9 <b>- / INPUT</b>                     | Press to display the list of inputs or confirm your selection. Press repeatedly to toggle through the inputs.<br><br><ul style="list-style-type: none"> <li>Inputs can be changed by pressing ↑/↓ and ⊕ while the list of external inputs is displayed.</li> <li>Refer to page 40 for information about setting up the external inputs labels. In the <b>MENU</b> screen, this button serves to confirm the selection or setting.</li> </ul> |
| 10 <b>HOME</b>                         | Press to display <b>TV Home Menu/XMB™</b> to access TV <b>Settings</b> and other media and network related content.   |

# Programming the Remote Control

The remote control can be programmed to operate other equipment and is pre-programmed to operate the following Sony equipment.

| Function Button | Sony Equipment    | Code Number |
|-----------------|-------------------|-------------|
| DVD             | DVD Player        | 31033       |
| AMP             | Receiver          | 52172       |
| STB             | Digital Satellite | 01639       |

## Programming Other Equipment

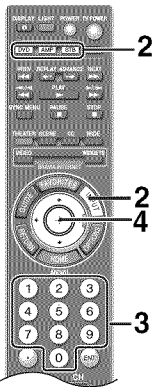

Follow the steps below to program your TV remote control.

- 1 Find the code that corresponds to your equipment from page 25. If more than one code is provided, try programming the first code listed.
- 2 Press and hold **DVD**, **AMP** or **STB** simultaneously with the **INPUT** button and release. When in the programming mode, the **FUNCTION** button blinks for approximately 30 seconds until a code is entered.
- 3 Enter the five digit code using **0-9** while the **FUNCTION** button is lit. If the code is not entered within 30 seconds, you must repeat step 2.
- 4 Press **+** or **ENT** to confirm the code. If successfully programmed, the **FUNCTION** button blinks twice; if not, it blinks five times.



- Any of the **FUNCTION** buttons can be programmed to operate other equipment regardless of the labeling. For example, **DVD** can be programmed to operate a Blu-ray Disc player.

## Confirm the Programming

If you can turn your equipment on and off using the green **POWER** button, the programming is complete. If not, try the next code listed.



- In some cases, you may not be able to program your remote control. If this is the case, use your equipment's own remote control.



# Manufacturer's Code List

If your equipment's code is not listed, visit <http://esupport.sony.com/remotecodes> for a more comprehensive list.

## Sony Equipment Codes

| Sony Equipment       | Programmable Code Number   |
|----------------------|----------------------------|
| A/V Receiver         | 52172                      |
| Blu-ray Disc Player  | 41516, 42178, 42180        |
| Cable -Digital       | 02177                      |
| DVD A/V System       | 51622, 51558, 51658, 51858 |
| DVD Changers         | 31633                      |
| DVD Player           | 31033, 31069, 31070        |
| DVD/HDD Combo Player | 31033, 31069, 31070        |
| DVD/VCR Combo Player | 30864                      |
| DVR /HDD Player      | 22181, 22182, 22183        |
| Satellite            | 01639                      |
| VCR                  | 21232, 21546, 22184        |

## Other Manufacturer Equipment Codes

### HD Blu-ray Disc Players

| Manufacturer | Code  |
|--------------|-------|
| LG           | 40741 |
| Panasonic    | 41641 |
| Philips      | 42084 |
| Pioneer      | 40142 |
| Samsung      | 40199 |

### DVD Player

| Manufacturer | Code  |
|--------------|---|
| Coby         | 30778, 30852, 31077, 31086, 31107, 31165, 31177, 31351, 31628 |
| Cyberhome    | 30816, 30874, 31023, 31024, 31117, 31129, 31502, 31537        |
| GPX          | 30699, 30769  |
| JVC          | 30558, 30623, 30867, 31164, 31550, 31602                      |
| Koss         | 30651, 30769, 30896, 31061, 31423                             |
| Memorex      | 30695, 30831, 31270   |

| Manufacturer | Code  |
|--------------|---|
| Panasonic    | 30490, 30503, 30571, 30703, 31762                             |
| Philips      | 30503, 30539, 30646, 30675, 31267, 31354, 32056               |
| RCA          | 30522, 30571, 30717, 30790, 30822, 31022                      |
| Samsung      | 30490, 30573, 30744, 31044, 31075, 31470                      |
| Sylvania     | 30675, 31268  |
| Toshiba      | 30503, 30539, 30573, 30695, 31154, 31503, 31588, 31608, 31854 |

### DVD Changers

| Manufacturer | Code         |
|--------------|--------------|
| Sylvania     | 30675        |
| Techwood     | 30692        |
| Toshiba      | 30503, 31154 |
| Yamaha       | 30497, 30545 |
| Zenith       | 30741        |

### DVD Recorder

| Manufacturer | Code                |
|--------------|---------------------|
| Cyberhome    | 31129, 31502        |
| JVC          | 31164               |
| LG           | 30741               |
| Lite-On      | 31158, 31416, 31440 |
| Panasonic    | 30490               |
| Philips      | 30646               |
| Samsung      | 30490, 31470        |
| Sylvania     | 30675               |
| Toshiba      | 31588               |

### DVD/VCR Combo Units

| Manufacturer | Code                       |
|--------------|----------------------------|
| JVC          | 30867, 31164, 31550, 31602 |
| Broksonic    | 30695, 31419               |
| Panasonic    | 31762                      |
| Toshiba      | 30503, 31854               |
| Zenith       | 30741, 30869               |

### VCR's

| Manufacturer | Code   |
|--------------|--|
| Daewoo       | 20037, 20045, 20046, 20278, 21137  |
| JVC          | 20041, 20067, 21162  |
| Panasonic    | 20000, 20035, 20162, 20225, 20226, 20614, 20616, 21062, 21162, 21262               |
| Philips      | 20000, 20035, 20045, 20048, 20081, 20162, 20209, 20616, 20618, 20739, 21081, 21181 |
| Sylvania     | 20000, 20035, 20043, 20081, 20593, 21593   |

### A/V Receiver/Home Theater Systems

| Manufacturer | Code   |
|--------------|--|
| Audiovox     | 30790, 51390   |
| Bose         | 50674, 51229, 51933                                    |
| Denon        | 50121, 51142, 51306, 51360, 52857                      |
| Emerson      | 50531  |
| JVC          | 50331, 51495   |
| Koss         | 30651  |
| LG           | 51293  |
| Onkyo        | 51298, 51320, 51805                                    |
| Panasonic    | 50308, 51288, 51308, 51316, 51548, 51633, 51763, 51764 |
| Philips      | 31267, 51189, 51266, 51269                             |
| Pioneer      | 50150, 50531, 50630, 50823, 51023, 51384               |
| RCA          | 30790, 50531, 50823, 51023, 51254, 51390, 51511, 51609 |
| Samsung      | 51295, 51500   |
| Sherwood     | 31077, 51077, 51517, 51653                             |
| Yamaha       | 30497, 50176, 50354, 51023, 51276, 51331, 51376, 51815 |
| Zenith       | 51293  |

## Digital Video Recorders

| Manufacturer | Code  |
|--------------|---|
| TiVo         | 01442, 01443, 01444,<br>20618, 20636, 20739 |

## Satellite

| Manufacturer           | Code  |
|------------------------|---|
| DirecTV                | 00099, 00247, 00392,<br>00566, 00639, 00749,<br>00819, 01076, 01108,<br>01109, 01142, 01377,<br>01392, 01414, 01442,<br>01442, 01443, 01444,<br>01609, 01639, 01640,<br>01749, 01856, 20739 |
| Dish Network<br>System | 00775, 01170, 01505,<br>01775   |
| Echostar               | 00775, 01170, 01505,<br>01775   |
| Funai                  | 01377   |
| GE                     | 00392, 00566  |
| Hitachi                | 00749, 00819, 01250   |
| Hughes                 | 00749, 01142, 01443,<br>01444, 01749, 20739   |
| Humax                  | 01790, 20739, 21797,<br>21988   |
| JVC                    | 00775, 01170, 01775   |
| LG                     | 01226, 01414, 22010   |
| Panasonic              | 00247, 00701, 20614,<br>20616   |
| Philips                | 00099, 00722, 00749,<br>00775, 00819, 01076,<br>01142, 01749, 20618,<br>20739   |
| RCA                    | 00143, 00392, 00566,<br>00775, 00855, 01142,<br>01392, 01442, 20880   |
| Samsung                | 01108, 01109, 01142,<br>01276, 01377, 01442,<br>01609, 20739  |
| TiVo                   | 01442, 01443, 01444,<br>20618, 20636, 20739   |

## Cable Box

| Manufacturer                           | Code  |
|--|---|
| AT & T                                 | 00858, 02045  |
| Jerrold/<br>General Inst./<br>Motorola | 00003, 00276, 00476,<br>00810, 00858, 01187,<br>01254, 01376, 02045 |
| Pace                                   | 00008, 00237, 00877,<br>01877                                       |
| Panasonic                              | 00000, 00008, 00107,<br>00144                                       |
| Pioneer                                | 00144, 00533, 00877,<br>01877                                       |
| Scientific Atlanta                     | 00000, 00003, 00008,<br>00237, 00477, 00877,<br>01877               |
| Zenith                                 | 00000, 00525, 00899   |

## Using Other Equipment with Your Remote Control

The table below describes the remote control commands available when external equipment is programmed to the the **DVD**, **AMP**, or **STB** buttons on the TV's remote control.

| Button                   | Action  | Universal<br>Blu-ray,<br>HD-DVD, DVD,<br>DVD-R,<br>DVD/HDD,<br>DVD/VCR | Universal<br>VCR, DVR | Universal<br>SAT/CBL | Universal<br>AMP/Receiver |
|--------------------------|---|--|-----------------------|----------------------|---------------------------|
| <b>Access Control</b>    |   |  |                       |                      |                           |
| <b>DISPLAY</b>           | Display   | ✓  | Information           | ✓                    | ✓                         |
| ⊕                        | Select  | ✓  | ✓                     | ✓                    | ✓                         |
| ○                        | Clear, (cancel)                                       | ✓  | ✓                     | N/A                  | ✓                         |
| <b>ENT</b>               | Enter   | ✓  | ✓                     | ✓                    | ✓                         |
| <b>Shortcuts Control</b> |   |  |                       |                      |                           |
| <b>GUIDE</b>             | Guide   | ✓  | ✓                     | ✓                    | ✓                         |
| <b>FAVORITES</b>         | Favorites   | N/A  | N/A                   | ✓                    | N/A                       |
| <b>INPUT</b>             | Input Select  | ✓  | ✓                     | ✓                    | ✓                         |
| <b>RETURN</b>            | Exit  | ✓  | ✓                     | ✓                    | ✓                         |
| <b>HOME</b>              | Setup Menu  | ✓  | ✓                     | ✓                    | ✓                         |
| <b>OPTIONS</b>           | Options   | N/A  | List                  | List                 | List                      |
| <b>TOP MENU</b>          | Top Menu/List   | Top Menu   | List                  | List                 | Top Menu                  |
| <b>MENU</b>              | Menu  | Menu   | Menu                  | Menu                 | Menu                      |
| <b>F1</b>                | For selecting<br>between<br>DVD/VCR in<br>combo units | HDD, DVD/HDD,<br>DVD/VCR   | VCR,<br>VCR/DVD       | N/A                  | N/A                       |
| <b>F2</b>                |   | DVD  | DVD                   | N/A                  | N/A                       |
| <b>Equipment Control</b> |   |  |                       |                      |                           |
| <b>POWER</b>             | Turn on/off   | ✓  | ✓                     | ✓                    | ✓                         |
| ⏮                        | Previous, Skip<br>backward                            | ✓  | ✓                     | ✓                    | ✓                         |
| ⏪                        | Replay  | ✓  | ✓                     | ✓                    | Band                      |
| ⏩                        | Advance, Skip   | ✓  | ✓                     | ✓                    | Surround                  |
| ⏭                        | Next, Skip<br>forward                                 | ✓  | ✓                     | ✓                    | ✓                         |
| ⏮                        | Rewind  | ✓  | ✓                     | ✓                    | ✓                         |
| ▶                        | Play  | ✓  | ✓                     | ✓                    | ✓                         |
| ⏭                        | Fast Forward  | ✓  | ✓                     | ✓                    | ✓                         |
| ⏸                        | Pause   | ✓  | ✓                     | ✓                    | ✓                         |
| ■                        | Stop  | ✓  | ✓                     | ✓                    | ✓                         |
| <b>Recording Control</b> |   |  |                       |                      |                           |
| ●                        | Record  | ✓  | ✓                     | ✓                    | ✓                         |
| ⏸                        | Record Pause  | ✓  | ✓                     | ✓                    | ✓                         |
| ■                        | Stop  | ✓  | ✓                     | ✓                    | ✓                         |

| Button                    | Action            | Universal Blu-ray, HD-DVD, DVD, DVD-R, DVD/HDD, DVD/VCR | Universal VCR, DVR | Universal SAT/CBL | Universal AMP/Receiver |
|---------------------------|-------------------|---|--------------------|-------------------|------------------------|
| <b>Navigation Control</b> |                   |   |                    |                   |                        |
| ↑/↓                       | Cursor up/down    | ✓   | ✓                  | ✓                 | ✓                      |
| ←/→                       | Cursor left/right | ✓   | ✓                  | ✓                 | ✓                      |
| <b>Tuning Control</b>     |                   |   |                    |                   |                        |
| 0 - 9                     | Digit input       | ✓   | ✓                  | ✓                 | ✓                      |
| CH +/-                    | Channel up/down   | ✓   | ✓                  | ✓                 | ✓                      |
| JUMP                      | Last channel      | N/A   | N/A                | ✓                 | N/A                    |
| <b>Volume Control</b>     |                   |   |                    |                   |                        |
| VOL +/-                   | TV volume +/-     | N/A   | ✓                  | ✓                 | AMP/RECEIVER Vol.      |
| MUTING                    | Muting            | N/A   | N/A                | N/A               | ✓                      |
| <b>R/G/B/Y Control</b>    |                   |   |                    |                   |                        |
| RED                       | Red               | ✓   | N/A                | ✓                 | DVD or BD Input        |
| GREEN                     | Green             | ✓   | N/A                | ✓                 | VIDEO 1 or A/V Input   |
| BLUE                      | Blue              | ✓   | N/A                | ✓                 | SAT or Cable Input     |
| YELLOW                    | Yellow            | ✓   | N/A                | ✓                 | TV or Tuner Input      |

## Remote Control Backlight

The remote control backlight can be set to automatically light up when a button is pressed.

### To set auto backlight:

Press **LIGHT** and **MUTING** simultaneously until the four **FUNCTION** buttons blink.

### To turn off auto backlight:

Press **LIGHT** and **MUTING** simultaneously until the **TV FUNCTION** button blinks.

### To change the backlight timeout:

**1** Press **LIGHT**, **VOL +**, and **CH +** simultaneously until one of the **FUNCTION** buttons blinks.

**2** Select the **FUNCTION** button that corresponds to your preferred timeout and press **(+)**.

5 seconds (default), press **DVD** button

10 seconds, press **AMP** button

15 seconds, press **STB** button

20 seconds, press **TV** button


### To reset the remote control to the factory default:

Press **SCENE**, **TV POWER**, and **(+)** simultaneously. The four **FUNCTION** buttons blink when successfully reset.


# Exploring the XMB™ and TV Features

Most TV functions are available from this menu screen called the **TV Home Menu/XMB™** (XrossMediaBar).

Press **HOME** to access the **TV Home Menu/XMB™**.

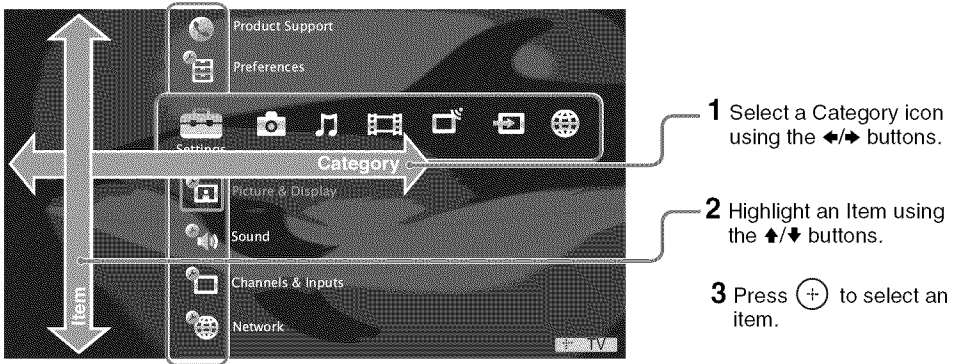

The **XMB™** displays help text that describes options available within an item.

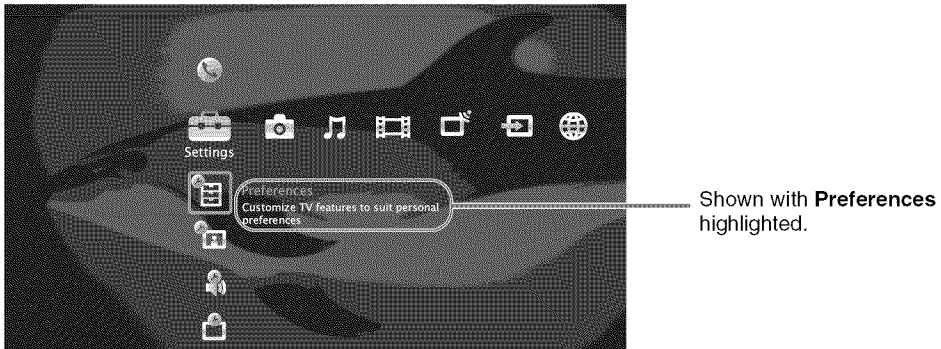

## Category Icons

The Category icons organize your TV settings and TV features for quick and easy access. Press **▲/▼** to highlight an item within a Category icon and then press **(+)** to make a selection.

---



The **Settings** icon contains all of the necessary configurations to customize your TV settings.



**Product Support** for troubleshooting and TV software information.



**Preferences** for customizing TV settings such as Timers, Parental Lock, Language, and much more.



**Picture & Display** for adjusting picture and display settings.



**Sound** for adjusting sound and speaker related settings.



**Channels & Inputs** for setting up TV channel list and external inputs.



**Network** for setting up Network related settings.

---



The **Photo**, **Music**, and **Video** icons organize your photo, music, and video files from Internet content providers, DLNA Certified media servers, and Sony USB connected equipment. Be sure to select the correct icon when accessing files. Refer to the feature section for more information on these icons.

---



The **TV** icon provides you access to the TV channel list. You can select the TV Guide On Screen<sup>®</sup> icon located at the top of the channels list from this icon.

---



Highlight the **External Inputs** icon to select your connected home equipment inputs when watching a movie, playing a game, recording a program, or working on your PC.

---



The **Network** icon lists downloaded **BRAVIA** Internet Widgets. You can access the Widget Gallery from this icon. Refer to the feature section for more information on this icon.

---

## Accessing Photo, Music, and Video Content


You can access a variety of Internet content by connecting to your existing home network with Internet connectivity. Your photo, music, and video files can also be accessed once you have set up a DLNA Certified equipment or after plugging in Sony USB equipment directly to your TV.



To display content under **Photo**, **Music**, **Video**, or **Network**:

- 1 Press **HOME** to display the **XMB™**.
- 2 Press **◀/▶** to highlight the **Photo**, **Music**, **Video**, or **Network** icon.
- 3 Press **▲/▼** to highlight an item.

Shown here is the **XMB™** with the **Photo** icon highlighted.

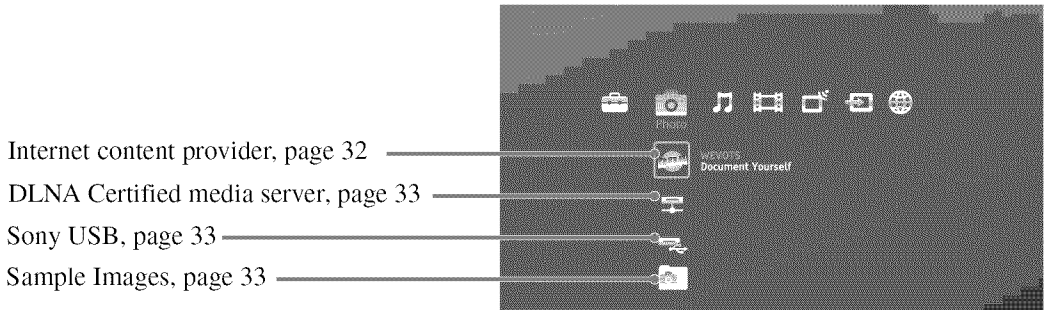

- The items displayed may vary for each category icon, your connected equipment, and the availability of Internet services.

## BRAVIA Internet Video

**BRAVIA** Internet Video serves as a gateway delivering select Internet content and a variety of on-demand entertainment straight to your **BRAVIA** TV.

To connect to the **BRAVIA** Internet Video service, make sure that your TV is connected to your broadband home network and that you have completed the **Initial Setup** and **Network Setup** (see page 18).

The Internet content provider icons appear under the **Photo**, **Music**, **Video**, and **Network** icons on the **XMB**™. Highlight an icon and press  $\oplus$  to open the Internet content provider's service.

Press  $\uparrow/\downarrow/\leftarrow/\rightarrow$  to navigate and  $\oplus$  to make a selection.



The look and feel of Internet content providers may vary.


### Seeking Forwards and Backwards

Some Internet content providers allow you to seek forward or seek backward. Press  $\rightarrow$  or  $\blacktriangleright\blacktriangleright$  to move forward in the video. Press  $\leftarrow$  or  $\blacktriangleleft\blacktriangleleft$  to move backward.

The **Control Panel** appears with a dot indicating the point at which the playback will resume. To resume playback, press  $\oplus$  or  $\blacktriangleright$ . See the illustration below for details.

To change the speed of the seek, press the corresponding button up to three times.

Press the corresponding buttons to control playback.

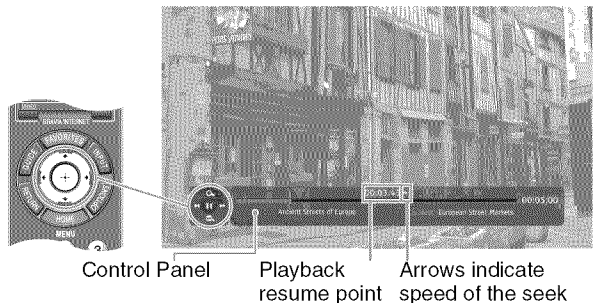

### Saving to Favorites

You can save an Internet content provider to your **Favorites**; see “**Adding to Favorites**” on page 37.



- Some Internet content providers arrange videos by **Categories**; press **OPTIONS** to view more categories.
- Press **DISPLAY** to see more information on the highlighted video.
- The **Parental Lock** function set on the TV blocks video content based on the appropriate TV or Movie Rating. Refer to the online Reference Book.
- Recommended connection speed: Standard Definition video - 2.5 Mbps, High Definition video - 10 Mbps.
- To update the **BRAVIA** Internet Video content providers, select the **Internet Video** icon from the **Network** menu on the **XMB**™.




## Photo, Music, and Video

Media files from DLNA Certified media servers or Sony USB equipment can easily be accessed from the **Photo**, **Music**, and **Video** Category icons. For a list of supported file formats, see page 46.


### Accessing Media Files

- 1 Press **HOME**.
- 2 Highlight and select a Category icon.
- 3 Highlight and select a DLNA Certified media server, Sony USB or sample folder. (Pressing **OPTIONS** will display additional menu items, see “Media File Options Menu” below.)
- 4 Press **(+)** to select an item from the List View.

Shown with **Photo** selected.

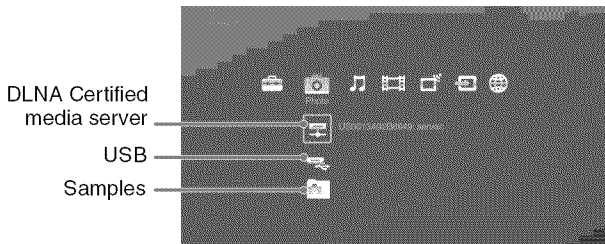

Shown with **Photo** USB media location selected.

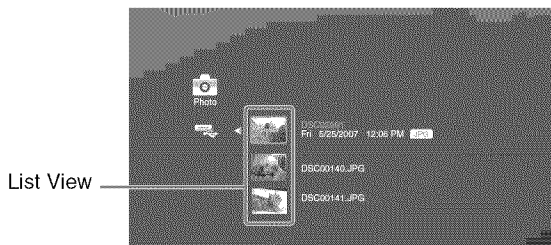

Shown here is a photo file after pressing **OPTIONS**.



### Media File Options Menu

Press **OPTIONS** after accessing a media file to display a list of available options such as **Playback Method**, **Start Slideshow**, **Add to Favorites**, and **Device Actions**.



The Options Menu for each Category icon and media file selected may vary.



- Internet content may appear under each icon if the TV **Network Setup** has been completed (see page 18).
- Media files cannot be saved in the TV but can be added to **Favorites** and accessed when the equipment containing the media file is connected.
- Refer to page 13 for a sample DLNA Certified equipment or page 14 for Sony USB equipment connection diagrams.

## Adding Music to a Slideshow

- 1 Highlight the **Photo** icon. Select from your DLNA Certified media servers, Sony USB connected equipment, or the sample folder.
- 2 Highlight the folder to display as a slideshow, press **OPTIONS** and then select **Playback Method**.
- 3 Select **Slideshow Music**, then select **Browse Music**.
- 4 Highlight and select an item from the list of available DLNA Certified media servers, Sony USB connected equipment, or sample folder.
- 5 Press **↓/↑** to highlight the music file or folder you would like to add to your slideshow and select **OK**.

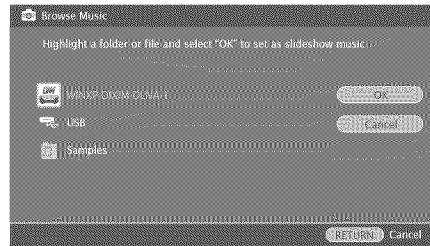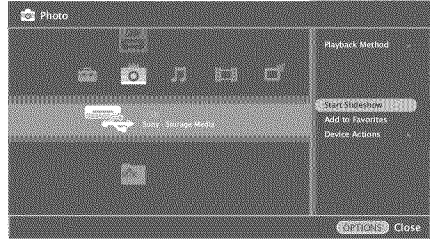


## Playing Music or Video

When playing music or video files, press **+** to pause or play the file. Press and hold **←** to move backward or press and hold **→** to move forward.

## Functionality of USB Equipment and DLNA Certified Media Servers

The USB functionality on this TV is compatible with most Sony brand digital cameras, MICRO VAULT USB Flash Drives, and DLNA Certified media servers but not all. Sony cannot guarantee or assure compatibility with all formats, products or in the following cases:

- Use of non-Sony brand USB equipment
- Use of video or audio clips processed on a computer
- Use of files obtained from the Internet or from printed film processing center.

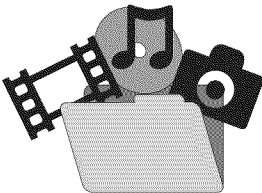

Prevent losing your files, be sure to back up all of your media files stored on USB equipment to prevent data corruption. Sony cannot accept responsibility for lost or damaged data stored on USB equipment.




- For more information on this feature, refer to the online Reference Book.

# BRAVIA Internet Widgets

The **BRAVIA** Internet Widgets feature allows you to view content such as weather, stock, and news information when your TV is connected to the Internet.

## Displaying Widgets

- 1 Press **WIDGETS**. Predefined, minimized Widgets such as the Widgets Gallery will appear on the TV screen.
- 2 Press **▲/▼/◀/▶** to highlight a minimized Widget then press **⊕** to launch it. The Widget will expand into a full view.

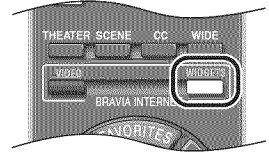


## Minimizing Widgets

Press **RETURN** to minimize an expanded Widget. Press **RETURN** again to close the Widget.

## Hiding Widgets

Press **WIDGETS** to hide all of the Widgets on the screen.

To hide an individual Widget, highlight the Widget and press **OPTIONS**. Then select **Close Widget**. For details on launching the closed Widget again, see “Launching Widgets” page 36.

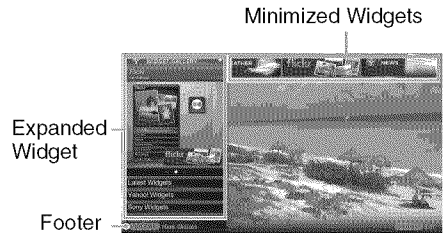

## Sample Widgets Options Menu

Highlight an expanded or minimized Widget and press **OPTIONS** to display an options menu. A sample options menu is shown below.

| Option                  | Description   |
|-------------------------|---|
| <b>Dock/Undock</b>      | Docks or undocks Widgets to the bottom of the TV screen.  |
| <b>Move</b>             | Allows you to move Widgets (page 36).   |
| <b>Close Widget</b>     | Allows you to close a Widget.   |
| <b>Hide Widgets</b>     | Allows you to hide Widgets.   |
| <b>Hide/Show Footer</b> | Hides or shows a footer. The footer will explain how to navigate within a Widget and may appear for an extended period of time. |




- The displayable content of the Widgets feature depends on the content provider and can change over time.
- Some Widgets may fill your entire TV screen when expanded into a full view.
- Widgets may be customized to match your preferences such as viewing weather for your local region or viewing your preferred stocks.
- Widgets available on PCs or other devices may not be available on your TV.

## Moving Widgets on the Screen

Widgets can be moved when they are undocked and in a minimized state.

- 1 Display the Widgets by pressing **WIDGETS** then press **OPTIONS** and select **Undock**.
- 2 Highlight a minimized Widget, press **OPTIONS** and then select **Move**.
- 3 Use **▲/▼/◀/▶** to move the Widget and press **+** to set it in your preferred location.

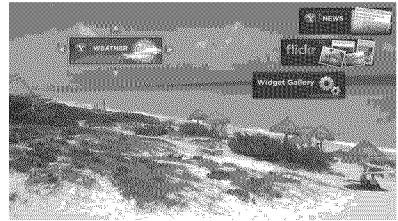

## Downloading Widgets


### Widget Gallery

Access the Widget Gallery to download Widgets. Downloaded Widgets will automatically appear on your TV screen and are accessible from the **Network** Category icon of the **XMB™**.

## Launching Widgets

Hidden or closed Widgets can be accessed from the **Network** Category icon. (Press **OPTIONS** to access additional menu items.)

- 1 Press **HOME**.
- 2 Highlight the **Network** Category icon.
- 3 Highlight a Widget and then press **+**.  
The Widget will automatically appear on your TV screen.

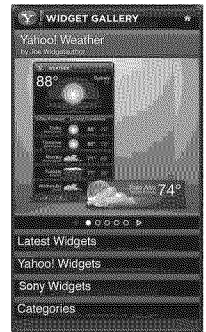

## Deleting Widgets

While under the **Network** Category icon, highlight a Widget, press **OPTIONS** then select **Delete**.




- Widgets may need to be deleted from the **Network** Category icon if memory space has been exceeded when downloading new Widgets.
- An expanded Widget cannot be moved using the remote control arrow buttons.

## Favorites

With **Favorites**, you can manage your preferred **TV** channels, **External Inputs**, **Photo**, **Music**, and **Video** content from a DLNA server or USB connected equipment, **Internet content**, **Widgets**, and **Background TV** themes for easy access.

### Displaying Favorites

Press **FAVORITES**.

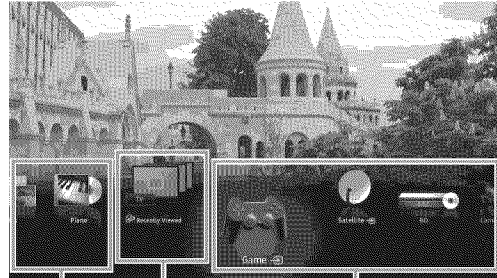

Saved Media Files/Folders

Recently Viewed  
Items

Saved Inputs

### Navigating Favorites

- 1 Press **◀/▶** to move between saved selections in a carousel-like fashion.
- 2 When the Recently Viewed list is highlighted, press **▲/▼** to move between the items.
- 3 To tune to an item, highlight its icon and press **(+)**.

### Adding to Favorites

- 1 On the **XMB™**, highlight the icon of an item you wish to add and press **OPTIONS**.
- 2 Highlight **Add to Favorites** and press **(+)**.

### Removing from Favorites

- 1 In the **Favorites** screen, highlight the item to remove and press **OPTIONS**.
- 2 Highlight **Remove from Favorites** and press **(+)**.



- To organize items saved to **Favorites** based on type (such as **TV** channels or **Photos**), press **OPTIONS** from the **Favorites** screen, select **Favorites View**, then choose **Stacked**.
- You can also add or remove an item while tuned to it, or while it is highlighted in **Favorites**. Press **OPTIONS** and select either **Add to Favorites** or **Remove from Favorites**.
- To clear your Recently Viewed items, highlight the list in **Favorites** and press **OPTIONS**, then select **Clear Recently Viewed**. Recently Viewed items are also cleared when the TV is powered off.
- **Auto Program** will clear your **TV** channels from **Favorites** (see page 18).
- **Initial Setup** will clear **Favorites** back to factory default.


# TV Guide On Screen®

Use the Guide to find the program that you want to watch. The Guide allows you to organize and personalize the program listings.

The Guide is available with connection to your cable service or with over-the-air antenna signal. You must connect your signal directly to the TV's **CABLE/ANTENNA** input without using a cable box.

## TV Guide On Screen System Elements

- Press **GUIDE** to display the **TV Guide On Screen**.

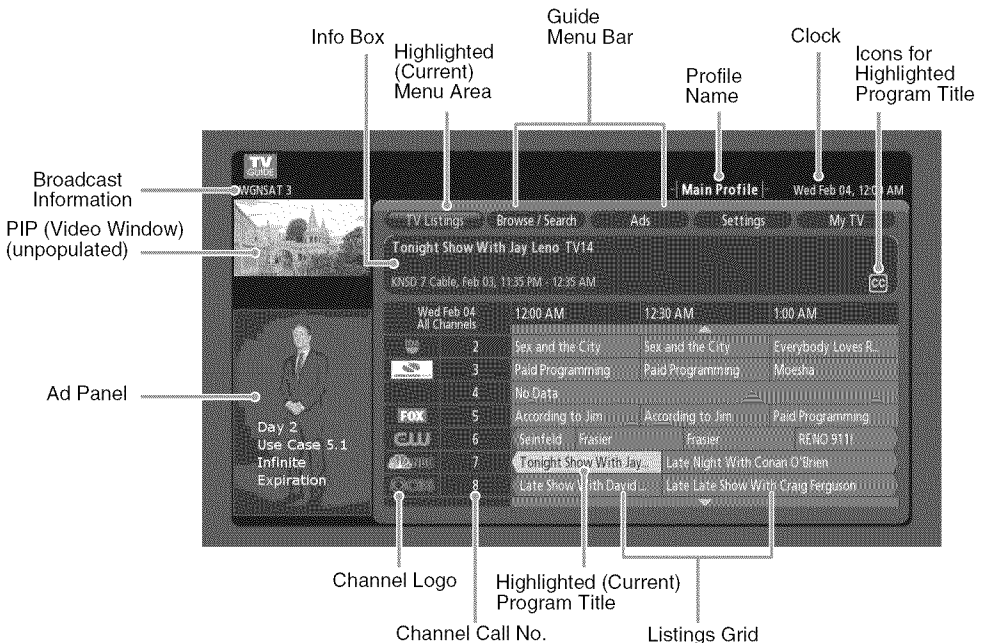

- Press **OPTION** to get back to the **Guide Menu Bar**. The **CH +/-** buttons can be used to page up/down through listings.

## TV Listings

Up to 24 hours of program listings are available. You can also organize the program listings by categories, while TV Listings is highlighted on the Guide menu bar, press **(+)** to display a popup menu that allows you to customize the listings. For example, if you are an avid sports fan, you can customize the listings to only show sports-related channels.

## Browse/Search

You can look for a program by browsing through categories or by entering a keyword or title.

## Ads

Provides advertisements from TV Guide sponsors.

## Settings

Under the Settings menu, you will find the Guide information and be able to set up Guide settings or profiles: **Guide Information Screen**, **Guide Settings**, **Profile Settings**, **Reset Guide**, **Edit Channels**, **Update TV Listings**, **Select Channel Lineup**.

## My TV

The **My TV** feature allows you to organize the program listings by profiles such as **Movie**, **Sport**, or **Kids**. You can also create your own profile name and organize your favorite programs or channels.



When you add a favorite channel using the **OPTIONS** button while watching your program, your favorite channel will be added to the **Main Profile** under **My TV**. The channels you add to **My TV** will also automatically appear as your favorite channel in the TV's **Favorites**.

To disable the Guide feature, press **HOME** then select **Preferences** menu from the **Settings** on the **XMB™**. Look for **Program Information Source** then select the **Broadcaster** option.




- Enabling the TV Guide On Screen feature will increase the amount of time the TV is in Download Acquisition Mode (DAM); see page 46.
- Refer to the online Reference Book for details on how to customize the Guide or create personal profiles.

# Background TV

**Background TV** uses the current video on your TV to create images that are similar to a screen saver.

## Navigating Background TV

- 1 Tune to a channel or input.
- 2 Press **OPTIONS**.
- 3 Highlight **Background TV** and press (+).
- 4 Highlight a theme and press (+). The TV will display the current channel or input using the selected **Background TV** theme.

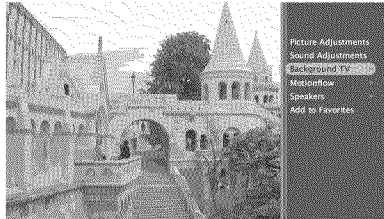

- 5 Press **RETURN** to exit the **Background TV** and return to the current channel or input.



- **Background TV** themes may also be saved to **Favorites**, so that you can launch these themes from the **Favorites** screen.

## Inputs

Press **INPUT** to display the **Input** menu and toggle through the External Inputs to select the video source. The **Input** menu consists of TV mode and other equipment connected to the TV.

You can label your External Inputs for easy identification by the connected equipment name rather than the name of the input.

### How to Label an Input

- 1 From the **Settings** icon on the **XMB™**, select **Channels & Inputs**. Then, select **Manage Inputs**.  
Press **▲/▼** to highlight the video input (Video/Component 1, Video 2, Component 2, HDMI 1-4) to which you want to assign a label, press (+) to select the input of your choice.
- 2 Press **▲/▼** to highlight one of the displayed labels corresponding to the equipment connected to that input then press (+) to label the equipment.
- 3 If you have an open input port where no equipment is connected, that input is grayed-out and skipped on the **Input** menu. You can **Enable** input ports so that they are always selectable. Refer to the online Reference Book for instructions.



 

 
 
 
 




## Wide Mode

The **Wide Mode** feature allows you to select the screen display of your preference. Based on the original signal source, a black frame or black bars may surround the picture.

You can manually change the **Wide Mode** setting while watching TV by pressing the **WIDE** button on your remote control. For more information on customizing **Wide Mode** settings, refer to the online Reference Book.

### Changing the Wide Screen Mode







 
 
Press **WIDE** repeatedly to cycle through the available modes.

| 4:3 Original source   | 16:9 Original source  |
|---|---|
| Standard-definition source<br> | High-definition source<br> |
| ↓   | ↓   |
| <b>Wide Zoom</b><br>           | <b>Wide Zoom</b><br>       |
| <b>Normal</b><br>              | <b>Normal</b><br>This mode is not available.  |
| <b>Full</b><br>                | <b>Full</b><br>            |
| <b>H Stretch</b><br>This mode is not available.   | <b>H Stretch</b><br>     |
| <b>Zoom</b><br>              | <b>Zoom</b><br>          |

- **Normal** is only available with 480i or 480p sources.
- **H Stretch** is only available with 720p, 1080i, 1080p and 1080/24p sources.

## Changing the Wide Screen Mode for PC Timing

        **Wide Mode** is also available while in the PC input mode. Press **WIDE** repeatedly to cycle through the available modes while in the PC input mode.

| Incoming PC signal   | Incoming PC signal   |
|--|--|
|  800 × 600        |  1,280 × 768      |
| ↓  | ↓  |
| <b>Normal</b><br> | <b>Normal</b><br> |
| <b>Full 1</b><br> | <b>Full 1</b><br> |
| <b>Full 2</b><br> | <b>Full 2</b><br> |


## **BRAVIA® Sync™ with Control for HDMI**

 The **BRAVIA Sync** function allows this TV to communicate with other Sony equipment supporting the **Control for HDMI** function.

### **To connect Sony equipment with Control for HDMI**

Use an HDMI cable that bears the HDMI logo for connection.

Line up the triangle on the head of the HDMI cable with the triangle on the label of the HDMI input when connecting the HDMI cable.



### **Setting the Control for HDMI**

The **Control for HDMI** function must be set up in order for the TV to communicate with other **Control for HDMI** enabled equipment.

To setup the TV's Control for HDMI:

- 1** Select **Channels & Inputs** on the **Settings** menu.
- 2** Highlight **HDMI Settings** and press  $\oplus$ .
- 3** Select **Control for HDMI** and set it to **On**.

To verify connected devices, select **Device List** from the **HDMI Settings** menu.

For other equipment, refer to its operating instructions.

### **Available options using Control for HDMI**

The following operations are available after you connect the supported Sony equipment with **Control for HDMI** function to your TV:

- Automatically turn off the connected equipment when you turn off the TV.
- The connected equipment and TV are turned on by One-Touch-Play.
- Possible operations with **SYNC MENU** buttons, see page 20.

When a Sony A/V receiver with **BRAVIA Sync** is connected, the following additional operations are possible:

- Turning on the A/V receiver when the TV is turned on.
- Automatically switching to the audio output of the A/V receiver's attached speakers.
- Adjusting the volume and muting of the A/V receiver with the TV's remote control.


# Other Information

## How to Care for Your BRAVIA

Safety is very important, please read and follow the safety documentation (Safety Booklet) separately provided.

Unplug the TV and other connected equipment from the wall outlet before you begin cleaning your TV.

- Wipe the LCD screen gently with a soft cloth.
- Stubborn stains may be removed with a cloth slightly moistened with a solution of mild soap and warm water.
- If using a chemically pretreated cloth, please follow the instruction provided on the package.
- Never use strong solvents such as a thinner, alcohol or benzene for cleaning.
- Do not plug in the TV into the wall outlet until the moisture from cleaning has evaporated.

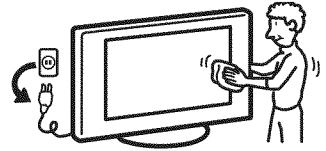

The TV should also be placed on a stable surface to prevent it from toppling over (see page 16 and 17). If you have young children or pets at home, check regularly to insure the TV is securely fastened.

## Troubleshooting

Many problems with picture and sound quality are related to improper cable connection; refer to the Quick Setup Guide provided for sample connections.

### Things to consider

- Check the Input selection by pressing **INPUT**. You may be watching the wrong input.
- You may have accidentally pressed the **MUTING** button on your remote control; press **MUTING** again or press **VOL +** to deactivate muting.
- The remote control may be installed incorrectly or may be low.
- An object or fluorescent light may be interfering with the remote control's operation.
- To reset the TV to factory default settings:
  - 1** Turn on the TV.
  - 2** While pressing **▲** on the Remote Control, press **POWER** on the TV. (The TV will turn itself off, then back on again.)

**WARNING:** The reset will clear all of your customized settings including the **Parental Lock** setting.

If you have forgotten your password, enter the master password: 4357. This password clears your previous password and allows you to enter a new password.

**The online Reference Book provides additional information on troubleshooting. Contact Sony if you need further assistance.**

## Declaration of Conformity

Trade Name: SONY

Model: KDL-40XBR9/KDL-46XBR9/KDL-52XBR9

Responsible Party: Sony Electronics Inc.

Address: 16530 Via Esprillo,

San Diego, CA 92127 U.S.A.

Telephone Number: 858-942-2230

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## For customers in Canada

This Class B digital apparatus complies with Canadian ICES-003.

## FCC Related Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Pursuant to FCC regulations, you are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

## Note

This television includes a QAM demodulator which should allow you to receive unscrambled digital cable television programming via subscription service to a cable service provider. Availability of digital cable television programming in your area depends on the type of programming and signal provided by your cable service provider.

## Compatible Wall-Mount Bracket and Speaker Bar Information

Use the following Sony Wall-Mount Bracket or Speaker Bar with your TV model.

| Sony TV Model No.                 |            |            |            |
|-----------------------------------|------------|------------|------------|
|                                   | KDL-40XBR9 | KDL-46XBR9 | KDL-52XBR9 |
| Sony Wall-Mount Bracket Model No. | SU-WL500   |            |            |
| Sony Speaker Bar Model No.        | HT-CT500   |            | -          |

Use with other Wall-Mount Brackets may cause instability and could result in property damages or injury.

## To Customers

Sufficient expertise is required for TV installations. Be sure to subcontract the installation to a Sony dealer or licensed contractor and pay adequate attention to safety during the installation.

## For Customers in the United States

The lamp in this product contains mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance ([www.eiae.org](http://www.eiae.org)).

# Specifications

| Model   | KDL-40XBR9  | KDL-46XBR9                                  | KDL-52XBR9                                |
|---|---|---|---|
| <b>System</b>   |   |   |   |
| Television system                                     | NTSC: American TV standard<br>ATSC (8VSB terrestrial): ATSC compliant 8VSB<br>QAM on cable: ANSI/SCTE 07 2000 (Does not include CableCARD functionality)  |   |   |
| Channel coverage                                      | Analog terrestrial: 2 - 69 / Digital terrestrial: 2 - 69<br>Analog Cable: 1 - 135 / Digital Cable: 1 - 135  |   |   |
| Panel system  | LCD (Liquid Crystal Display) Panel  |   |   |
| Speaker output  | 10 W + 10 W   |   |   |
| <b>Input/Output jacks</b>                             |   |   |   |
| CABLE/ANTENNA   | 75-ohm external terminal for RF inputs  |   |   |
| VIDEO IN 1/2  | S VIDEO (4-pin mini DIN) (VIDEO 2 only): Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative / C: 0.286 Vp-p (Burst signal), 75 ohms<br>VIDEO: 1 Vp-p, 75 ohms unbalanced, sync negative<br>AUDIO: 500 mVrms (Typical) / Impedance: 47 kilohms   |   |   |
| COMPONENT IN 1/2                                      | YPbPr (Component Video): Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative / Pb: 0.7 Vp-p, 75 ohms / Signal format: 480i, 480p, 720p, 1080i, 1080p<br>AUDIO: 500 mVrms (Typical) / Impedance: 47 kilohms   |   |   |
| HDMI IN 1/2/3/4                                       | HDMI: Video: 480i, 480p, 720p, 1080i, 1080p, 1080/24p<br>Audio: Two channel linear PCM 32, 44.1 and 48 kHz, 16, 20 and 24bits, Dolby Digital<br>AUDIO (HDMI IN 1 only): 500 mVrms (Typical) / Impedance: 47 kilohms   |   |   |
| AUDIO OUT   | 500 mVrms (typical)   |   |   |
| DIGITAL AUDIO OUT (OPTICAL)                           | PCM/Dolby Digital optical signal  |   |   |
| PC IN   | D-sub 15-pin, analog RGB, 0.7 Vp-p, 75 ohms, positive<br>See the PC Input Signal Reference Chart on page 12.  |   |   |
| PC AUDIO INPUT  | Stereo mini jack, 500 mVrms. (Typical) / Impedance: 47 kilohms  |   |   |
| USB   | MPEG2, MP3, and JPEG.   |   |   |
| DLNA  | MPEG2, LPCM, MP3, and JPEG.   |   |   |
| <b>Power and others</b>                               |   |   |   |
| Power requirement                                     | 120-240 V AC, 50/60 Hz  |   |   |
| Power consumption in use                              | 205 W   | 240 W                                       | 300 W                                     |
| in DAM*   | All models less than 20 W (You may hear a clicking noise during the download but this is normal.)   |   |   |
| in standby  | All models less than 0.1 W with 120 V AC and with 240 V AC less than 0.3 W  |   |   |
| Screen size (inches measured diagonally)              | 40  | 46  | 52  |
| Display resolution                                    | 1,920 dots (horizontal) × 1,080 lines (vertical)  |   |   |
| Speaker/Full range (2) (mm) with speaker box (inches) | 45 × 120<br>1 3/4 × 4 3/4   |   |   |
| Tweeter (2) (mm) (inches)                             | 16<br>5/8   |   |   |
| Dimensions with stand (mm) (inches)                   | 961 × 649 × 303<br>37 7/8 × 25 5/8 × 12   | 1,094 × 725 × 330<br>43 1/8 × 28 7/8 × 13   | 1,243 × 821 × 358<br>49 × 32 3/8 × 14 1/8 |
| without stand (mm) (inches)                           | 961 × 580 × 85<br>37 7/8 × 22 7/8 × 3 3/8   | 1,094 × 657 × 85<br>43 1/8 × 25 7/8 × 3 3/8 | 1,243 × 745 × 85<br>49 × 29 3/8 × 3 3/8   |
| wall-mount hole pattern (mm)                          | 300 × 300   |   |   |
| wall-mount screw size (mm)                            | M6<br>(length: refer to diagram on page 7)  |   |   |
| Mass with stand (kg) (lb.)                            | 19.9<br>43.9  | 23.9<br>52.7                                | 29.9<br>65.9                              |
| without stand (kg) (lb.)                              | 17.2<br>37.9  | 20.6<br>45.4                                | 25.9<br>57.1                              |
| Supplied accessories                                  | Remote control RM-YD029 (1) / AC power cord (1) / Size AA batteries (2) / Cable clammer (1 attached to the Table-Top Stand) / Operating Instruction Manual (1) / Quick Setup Guide (1) / Warranty Card (1) / Safety and Regulatory Booklet (1) / Attaching the Table-Top Stand (1) / Screws (4) (except KDL-52XBR9) |   |   |
| Optional accessories                                  | Connecting cables / Support Belt Kit / Wall-Mount Bracket: see page 45  |   |   |

\* Download Acquisition Mode (DAM) is used for software updates and/or collecting data for TV Guide On Screen.

- Optional accessories availability depends on its stock.
- Design and specifications are subject to change without notice.

# Index

0-9 buttons 21

## A

AUDIO OUT jack, described 8, 9  
Auto Program 18

## B

Background TV 40  
BD/DVD MENU button 21  
BD/DVD TOP MENU button 21  
BRAVIA INTERNET VIDEO button 21  
BRAVIA INTERNET WIDGETS button 22  
BRAVIA Sync buttons 20

## C

CABLE/ANTENNA input, described 8, 9  
CC button 22  
CH +/- button 22, 23  
COMPONENT IN (1080p/1080i/720p/480p/480i) 8, 9

## D

DIGITAL AUDIO OUT (OPTICAL) 8, 9  
DISPLAY button 20  
DMe<sup>®</sup>/SERVICE 8, 9  
DVR/VCR Record Buttons 21

## E

ENT button 21

## F

F1/F2 buttons 22  
Favorites 37  
FAVORITES button 21  
FUNCTION button 20

## G

GUIDE button 21

## H

HD SIGNAL 23  
HDMI IN 1/2/3/4 L-AUDIO-R 8, 9  
HOME button 21, 23

## I

Infrared Receiver (IR) 23  
INPUT button 22, 23

## J

JUMP button 22

## L

LAN 8, 9  
LIGHT button 20  
Light Sensor 23

## M

MUTING button 21

## O

OPTIONS button 22

## P

PC IN 8, 9  
PIC OFF/TIMER LED 23  
POWER button 21, 23  
POWER/STANDBY LED 23  
Programming the Remote Control 24

## R

RETURN button 21

## S

S VIDEO jack 8, 9  
SCENE button 21  
Speaker 23

## T

Troubleshooting 44

## U

USB 8, 9

## V

VIDEO/AUDIO (L/R) jacks, described 8, 9  
VOL +/- button 21, 23

## W

WIDE button 21

## Y

YELLOW, BLUE, RED, GREEN buttons 21

## For Your Convenience

|                               |   |
|-------------------------------|---|
| <b>Online Reference Book:</b> | To learn more about your TV, visit the online Reference Book at:<br><a href="http://www.sony.com/referencebook">http://www.sony.com/referencebook</a>   |
| <b>Online Registration:</b>   | Be sure to register your TV.<br><b>United States</b> <a href="http://productregistration.sony.com">http://productregistration.sony.com</a><br><b>Canada</b> <a href="http://www.SonyStyle.ca/registration">http://www.SonyStyle.ca/registration</a>   |
| <b>Software Updates:</b>      | Your TV is capable of receiving software updates. For the latest information about software updates for your TV, visit:<br><b>United States</b> <a href="http://www.sony.com/tvsupport">http://www.sony.com/tvsupport</a><br><b>Canada</b> <a href="http://www.sony.ca/support">http://www.sony.ca/support</a><br><br>NOTE: If your TV is connected to the Internet, you can check for software updates by selecting <b>Settings, Product Support</b> and then <b>Software Update</b> . |



### Mixed Sources

Product group from well-managed forests, controlled sources and recycled wood or fiber

Cert no. SCS-COC-001395  
[www.fsc.org](http://www.fsc.org)  
© 1996 Forest Stewardship Council

<http://www.sony.net/>

Printed in U.S.A.

4-140-826-11(1)

