

Home Theatre System

Operating Instructions _____ **US**

Mode d'emploi _____ **FR**

Manual de instrucciones _____ **ES**

HT-CT500



WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc.

Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

In door use only.

For the customers in the U.S.A.



This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Owner's Record

The model and serial numbers are located on the rear exterior of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. HT-CT500

Serial No. _____

The following FCC statement applies only to the version of this model manufactured for sale in the USA. Other versions may not comply with FCC technical regulations.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (aerial).
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.

- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



ENERGY STAR[®] is a U.S. registered mark. As an ENERGY STAR[®] partner, Sony Corporation has determined that this product meets the ENERGY STAR[®] guidelines for energy efficiency.

Precautions

On safety

- Should any solid object or liquid fall into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not climb on the subwoofer, as you may fall down and injure yourself, or system damage may result.

On power sources

- Before operating the system, check that the operating voltage is identical to your local power supply. The operating voltage is indicated on the nameplate at the rear of the subwoofer.
- If you are not going to use the system for a long time, be sure to disconnect the system from the wall outlet (mains). To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.
- One blade of the plug is wider than the other for the purpose of safety and will fit into the wall outlet (mains) only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- AC power cord (mains lead) must be changed only at the qualified service shop.
- The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

On heat buildup

Although the system heats up during operation, this is not a malfunction. If you continuously use this system at a large volume, the system temperature of the back and bottom rises considerably. To avoid burning yourself, do not touch the system.

On placement

- Place the system in a location with adequate ventilation to prevent heat buildup and prolong the life of the system.
- Do not place the system near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Do not place anything at the rear of the subwoofer that might block the ventilation holes and cause malfunctions.
- Do not cover the grill of the subwoofer.
- Do not place the system near equipment such as a TV, VCR, or tape deck. (If the system is being used in combination with a TV, VCR, or tape deck, and is placed too close to that equipment, noise may result, and picture quality may suffer. This is especially

US

continued

likely when using an indoor antenna. Therefore, we recommend using an outdoor antenna.)

- Use caution when placing the system on surfaces that have been specially treated (with wax, oil, polish, etc.) as staining or discoloration of the surface may result.

On operation

Before connecting other components, be sure to turn off and unplug the system.

If you encounter color irregularity on a nearby TV screen

The system is magnetically shielded to allow it to be installed near a TV set. However, color irregularities may still be observed on certain types of TV sets.

If color irregularity is observed...

Turn off the TV set, then turn it on again after 15 to 30 minutes.

If color irregularity is observed again...

Place the system further away from the TV set.

On cleaning

Clean the system with a soft dry cloth. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

If you have any question or problem concerning your system, please consult your nearest Sony dealer.

Copyrights

This system incorporates Dolby* Digital and Pro Logic Surround and the DTS** Digital Surround System.

* Manufactured under license from Dolby Laboratories.

“Dolby”, “Pro Logic”, and the double-D symbol are trademarks of Dolby Laboratories.

** Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.

This system incorporates High-Definition Multimedia Interface (HDMI™) technology.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

The font type (Shin Go R) installed in this system is provided by MORISAWA & COMPANY LTD.

These names are the trademarks of MORISAWA & COMPANY LTD., and the copyright of the font also belongs to MORISAWA & COMPANY LTD.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

All other trademarks and registered trademarks are of their respective holders. In this manual, ™ and © marks are not specified.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license.

Other trademarks and trade names are those of their respective owners.

“M-crew Server” is a trademark of Sony Corporation.

“BRAVIA Sync” is a trademark of Sony Corporation.

“PLAYSTATION” is a trademark of Sony Computer Entertainment Inc.

“S-AIR” and its logo are trademarks of Sony Corporation.

“x.v.Color” and “x.v.Color” logo are trademarks of Sony Corporation.

About the S-AIR function

The system is compatible with the S-AIR function, which allows transmission of sound between S-AIR products wirelessly.

S-AIR receivers can be used with the system. You can enjoy system sound in another room.

S-AIR products can be purchased as options (the S-AIR product lineup differs depending on the area).

Notes or instructions for the S-AIR receiver in these Operating Instructions refer only to when the S-AIR receiver is used.

For details on the S-AIR function, see "Using an S-AIR product" (page 85).

Table of contents

Precautions	3
About the S-AIR function	5
Getting Started	
Unpacking	8
Step 1: Positioning the system	10
Warning about installing the system's speaker to the TV stand or a wall	12
Step 2: Connecting the speaker	25
Step 3a: Connecting the components with HDMI jacks	27
Step 3b: Connecting the components without HDMI jacks	30
Setting up the sound output of the connected component	34
Function for conversion of video signals	35
Step 4: Connecting the antenna (aerial)	37
Step 5: Connecting the AC power cord (mains lead)	39
Step 6: Operating the system using the GUI	39
(Graphical User Interface)	
Connecting other components	45

Playback Options

Index to parts and controls	47
Enjoying TV	50
Enjoying other components	51

DMPORT function

Features of DIGITAL MEDIA PORT (DMPORT)	53
Selecting the operation screen	53
Operating the component connected to the DIGITAL MEDIA PORT adapter ...	54
Playing the selected track	55

Surround Sound Functions

Enjoying the surround effects	57
Adjusting the bass and treble level	58
Enjoying the sound at low volume	59
(Night Mode)	

“BRAVIA” Sync features

What is “BRAVIA” Sync?	60
Preparing for the “BRAVIA” Sync	60
Enjoying a Blu-ray Disc/DVD	62
(One-Touch Play)	
Enjoying the TV sound from the speakers	62
(System Audio Control)	
Turning off the TV, system, and connected components	64
(System Power Off)	
Enjoying the components while the system is in standby mode	65
(HDMI Pass Through)	

Tuner Functions

Listening to FM/AM radio using the GUI menu	66
Listening to FM/AM radio using the front panel display of the subwoofer	68

Advanced Settings

Controlling connected Sony components with the remote	72
Changing the input button assignments of the remote	75
Setting the speaker level	78
Adjusting the delay between the sound and the image	79
(A/V Sync)	
Enjoying multiplex broadcast sound	80
(Dual Mono)	
Reassigning the audio input	81
(Audio Assign)	
Converting the resolution of analog video input signals	82
(Resolution)	
Enjoying higher quality HDMI images	83
(Video Direct)	
Changing the brightness of the front panel display	84
(Dimmer)	

Changing the display setting	84
(Display)	
Using an S-AIR product.....	85
Settings and adjustments using the system menu	95
Using the sleep timer	96
(SLEEP)	

 
Additional Information

Troubleshooting	97
Specifications.....	100
Glossary	102
Overview of the menus	104
Index	105
Menu index	106


Getting Started

Unpacking

- Subwoofer (SA-WCT500) (1)



- Remote commander (RM-ANP037) (1)

 

- Screws for the extension bracket (large, +PSW5 × 12 mm) (7)



- Speaker (SS-CT500) (1)



- Screws for the rear cover (small, M3 × 8 mm) (4)



- AM loop antenna (aerial) (1)



- R6 (size AA) batteries (2)



- Support belt (1)

 


- FM wire antenna (aerial) (1)



- WS-CT500EB

- Extension bracket (1)




- Screw for the support belt (+PSW4 × 20 mm) (1)



- Speaker cord (1)



 
- Rear cover (1)




- Wood screw for the support belt (M3.8 × 20 mm) (1)



 - Digital optical cord for a TV (2.5 m) (1)

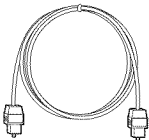


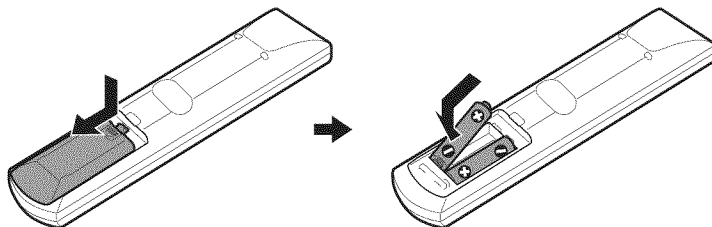
- Clamper (1)



- Operating Instructions (1)

Inserting batteries into the remote

Insert two R6 (size AA) batteries (supplied) by matching the ⊕ and ⊖ ends on the batteries to the markings inside the compartment. To use the remote, point it at the remote sensor  on the speaker or in the front panel display of the subwoofer.




Notes


- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with an old one.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct sunlight or lighting apparatus. Doing so may cause a malfunction.
- If you do not intend to use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Step 1: Positioning the system


The illustrations below are examples of how to install the subwoofer and speaker. You can install the speaker on the TV stand or hang the speaker on a wall.

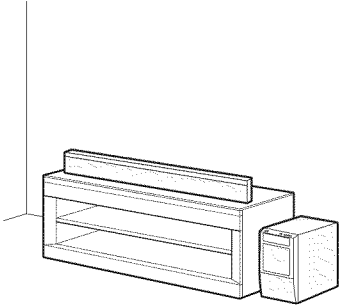


Install the speaker on a rack.

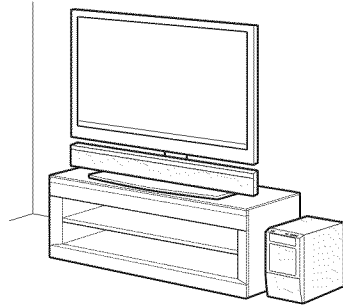

For details, see "Installing the speaker on the TV stand" (page 15).

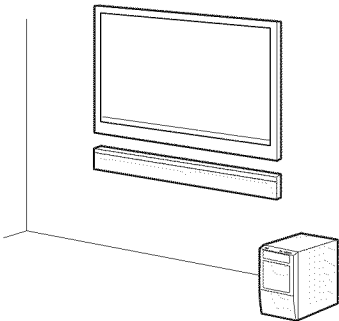

For details, see "Installing the speaker on a wall" (page 24).

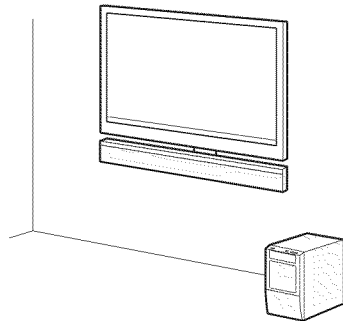

For details, see "Hanging the speaker and TV on a wall" (page 21).


Notes

- Do not block the heat ventilation on the rear panel of the subwoofer.
- Do not cover the grill of the subwoofer.

Connecting the speaker cord to the speaker

The connector of the speaker cords and the color tube are color-coded depending on the type of speaker. Connect the speaker cords to match the color of the SPEAKER jacks.

Connect the connector for the remote control to the REMOTE CTRL jack.

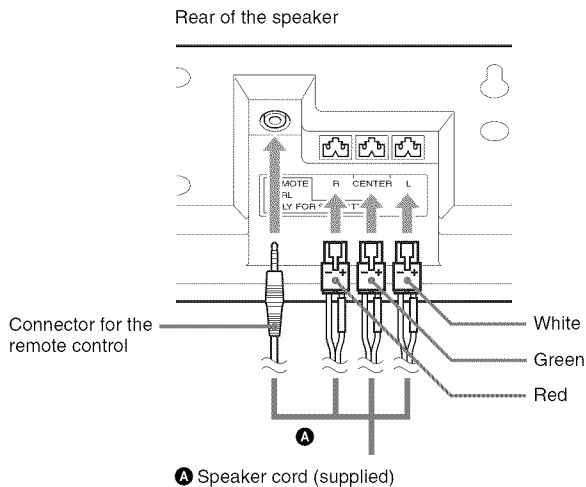

Note

- When you install the speaker or a TV on a wall, be careful not to stumble over the cord connected to the speaker.

Warning about installing the system's speaker to the TV stand or a wall

To Customers

Sufficient expertise is required for installing this product. Be sure to subcontract the installation to Sony dealers or licensed contractors and pay special attention to safety during the installation. Sony is not liable for any damages or injury caused by mishandling or improper installation, or installing anything other than the specified product. Your statutory rights (if any) are not affected.

On Safety

Products by Sony are designed with safety in mind. If the products are used incorrectly, however, it may result in a serious injury through fire, electric shock, the product toppling over, or the product dropping. Be sure to observe the precautions for safety to prevent such accidents.


WARNING

If the following precautions are not observed, serious injury or death through fire or electric shock, the product toppling over or falling can result.

Do not drop the products or install them where there is a possibility of them falling down.



- Be sure to subcontract installing, moving or dismantling the products to licensed contractors and keep small children away during the procedure.
- Unauthorized installation may result in serious injury or property damage.
- Having an unauthorized dealer carry or dismantle the SS-CT500 speaker or SS-CT500 speaker-installed TV may lead to the products' falling and result in serious injury or property damage. Make sure that two or more persons carry or dismantle the product(s).
- Do not remove screws, etc., after mounting the SS-CT500 speaker or SS-CT500 speaker-installed TV.

- Do not handle the products with excessive force during cleaning or maintenance.
- If you hang the SS-CT500 speaker or SS-CT500 speaker-installed TV on a fragile wall or a wall whose surface is not flat or perpendicular, the product(s) may fall and cause injury or property damage.
- If the SS-CT500 speaker or SS-CT500 speaker-installed TV is not installed firmly on the wall, the product(s) may fall and cause injury or property damage.

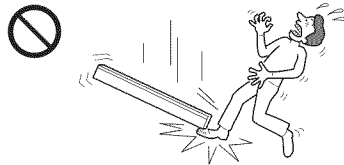


Do not place any object on the products.

- Do not put anything on the products. If you do so, the system may fall and cause injury or property damage.

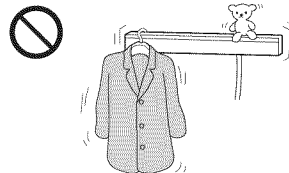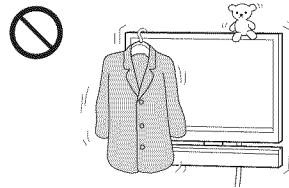


Do not lean or hang on the products.



- Do not lean or hang on the products, as they may fall on you and cause serious injury.

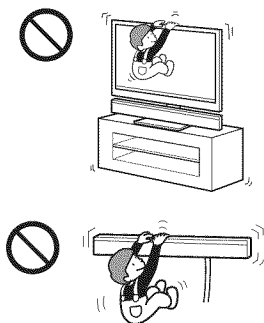**Pay attention to the location.**

- Do not install the products on wall surfaces such as a pillar, where the corners or the sides of the products protrude away from the wall surface. If a person or object happens to hit the protruded corner or side of the products, it may cause injury or property damage.
- Do not expose the products to rain or moisture, or spill liquid of any kind on them. It may cause a fire or electric shock.
- Never place the products in hot, humid or excessively dusty places, or in a place where they are subject to mechanical vibrations. Doing so may cause a fire or electric shock.
- Keep flammable objects or open flames (e.g., candles) away from the products.
- Do not install the products over or under an air conditioner. If the products are exposed to wind from the air conditioner for an extended period of time, or get wet by water leakage from the air conditioner, this may cause a fire, an electric shock, or malfunctions.

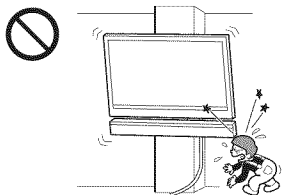**Do not allow the cords to be pinched.**


- If the AC power cord (mains lead) or connecting cords are pinched between the products and the wall, floor, or other object, or bent or twisted by force, the internal conductors may become exposed and cause a short circuit or an electrical break. This may cause a fire or an electric shock.
- Do not step on the AC power cord (mains lead) or connecting cords when you carry the products. The cord may be damaged, and this may result in a fire or electric shock.

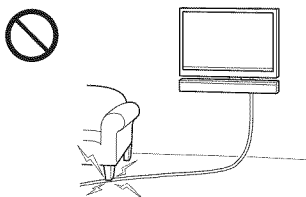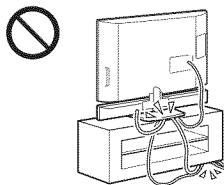**Do not cover the ventilation holes of the products.**

- If you cover the ventilation holes (with a cloth, etc.), heat may build up inside and cause a fire.

**Do not stumble over the cords.**

- You may trip, or may cause the products to topple over and cause injury.

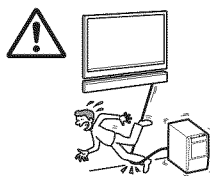

continued

CAUTION

If the following precautions are not observed, injury or property damage may occur.

Do not install any equipment other than the specified product.

- The WS-CT500EB accessories (supplied) are designed for use with the specified equipment only. If you install equipment other than that specified, it may fall or break, and cause injury.
- Do not modify the products.
- Do not place anything hot directly on the products. The heat may cause discoloration or deformation of the products.

Be sure to secure the system's speaker and TV.

- Secure the SS-CT500 speaker and TV firmly when installing them together. Then, secure the SS-CT500 speaker-installed TV firmly on the stand or wall. If the SS-CT500 speaker and TV are not installed securely, they may fall or topple over, and cause injury.

Do not apply weight to the products or subject them to any kind of impact.


- When installing the SS-CT500 speaker to a TV stand or hanging the SS-CT500 speaker - installed TV on a wall, do not apply weight to the speaker or TV with your hand. Do not hit the speaker or TV with hard objects, such as a screwdriver, etc.

When moving the SS-CT500 speaker-installed TV

If you move the products forcefully, damage or injury may result. Be sure to follow the proper procedures and advice given below.

- Be sure that two or more persons carry the SS-CT500 speaker-installed TV, and only after unplugging and removing the connected equipment.
- Be careful not to allow your hands or feet to be pinched under the bottom of the SS-CT500 speaker-installed TV.
- When carrying the SS-CT500 speaker-installed TV, do not hold it by the SS-CT500 speaker part. Doing so may cause damage or injury.

- Do not drag the SS-CT500 speaker-installed TV. The base part may come off and damage the floor.

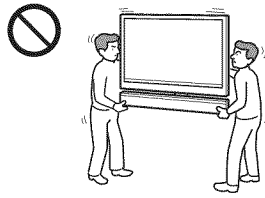

Notes on installation

- When assembling, spread a cloth on the floor to avoid damaging the floor.
- Install the products on a solid and flat floor.
- Be sure that two or more persons install the products. Doing it alone may result in an accident or injury.
- Be sure to keep children away during the process.

Be sure to install the products securely following the instructions.

- Tighten the screws securely. If the SS-CT500 speaker is not installed securely, it may fall and cause damage or injury.
- Be careful not to pinch your fingers or hands when assembling the products.

Notes on installation on a wall

- If you use the products installed on a wall for a long time, the wall behind or above the products may become discolored or the wallpaper may come unstuck, depending on the material of the wall.
- If the products are removed after installed on the wall, the screw holes will remain.
- Consult your licensed contractor regarding an appropriate location (free from radio noise, etc.) before installing.

Installing the speaker on the TV stand


You can install the speaker with the following TV models (not supplied):

- KDL-40/46XBR9
- KDL-40/46W51xx*

* In the actual model names, the "xx" indicates numbers and/or characters specific to each model.

Although the shape of the TV stand base differs depending on the TV model, you can install the speaker on the TV stand following this procedure.


1 Remove the screws of the TV.

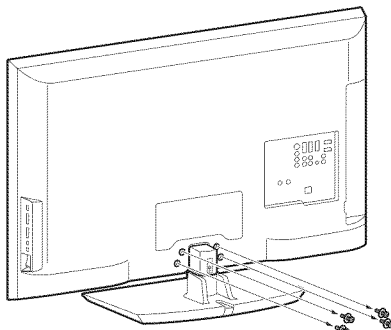

2 Detach the TV from the TV stand.


Note

- Make sure to place the TV on a soft thick cloth with the screen side down to prevent damaging the surface of the LCD.

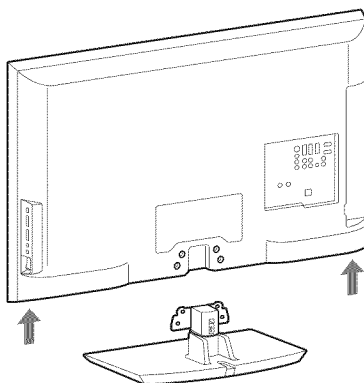


continued

3 Remove the screw of the cover.

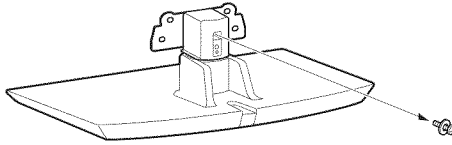


4 Detach the cover from the TV stand.


When detaching the cover, slightly splay open the hooks of the cover from the front side of the stand with your fingers, and then push the cover toward the rear of the stand.

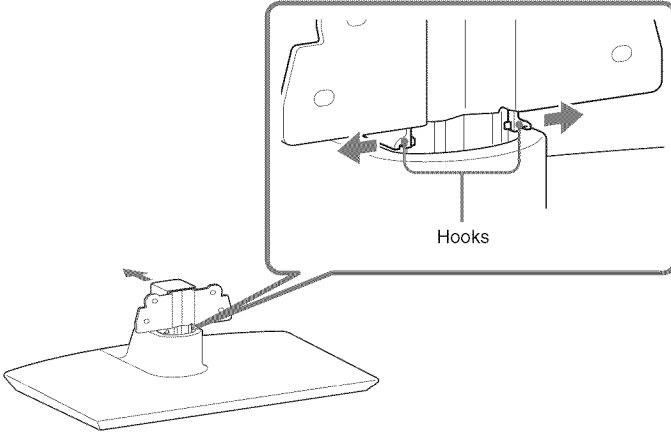


5 Secure the extension bracket (supplied) to the TV stand with the large screws (+PSW5 × 12 mm) (supplied).

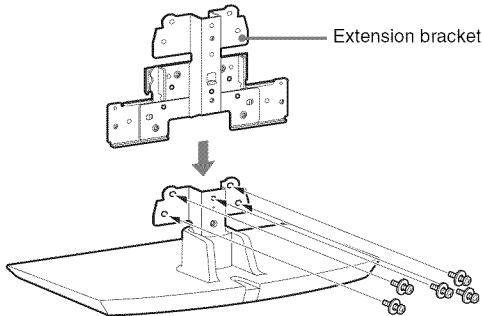

- 6** Hook the rivets of the extension bracket to the holes of the back of the speaker and secure the speaker with the large screws (+PSW5 × 12 mm) (supplied).

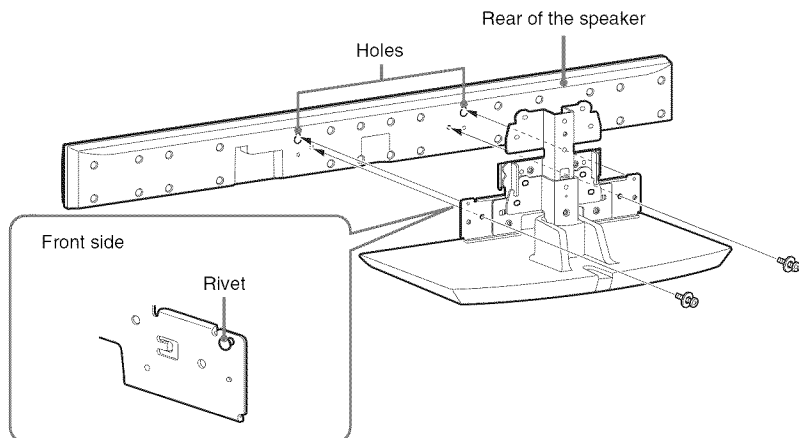


- 7** Reattach the TV.

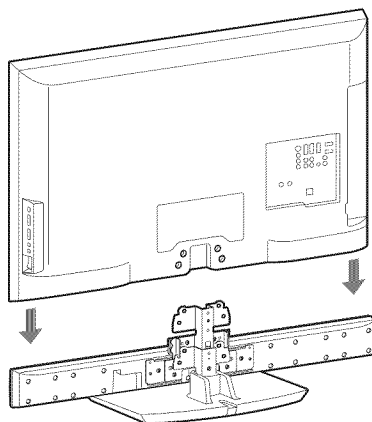

continued


8 Secure the TV with the screws removed in step 1.

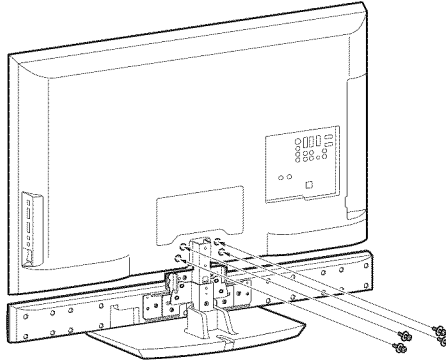

9 Attach the rear cover (supplied) with the small screws (M3 × 8 mm) (supplied).


Note

- When carrying the SS-CT500 speaker-installed TV, do not hold it by the SS-CT500 speaker part. Doing so may cause damage or injury.

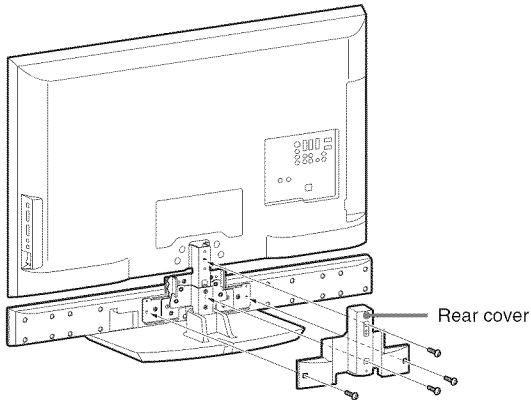

To prevent the TV from toppling over

As a protective measure, secure the TV.

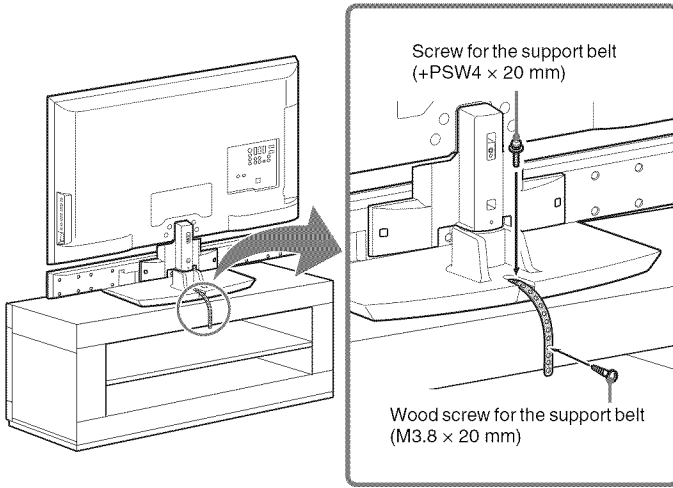

- 1** Place the TV on the center of the rack.
- 2** Fit the support belt (supplied) to the TV, then firmly fasten with the screw for the support belt (+PSW4 x 20 mm) (supplied) using a screw driver.
- 3** Fasten the support belt to the rack with the wood screw for the support belt (M3.8 x 20 mm) (supplied).

Note

- Be careful not to pinch your fingers when setting up the TV and rack.


To bundle the cords

You can bundle the cords using the clamber (supplied).

Note

- Do not bundle the AC power cord (mains lead) using this clamber.

- 1** Attach the clamber (supplied) on the rear cover.
- 2** Bundle the cords, and then fasten the clamber.

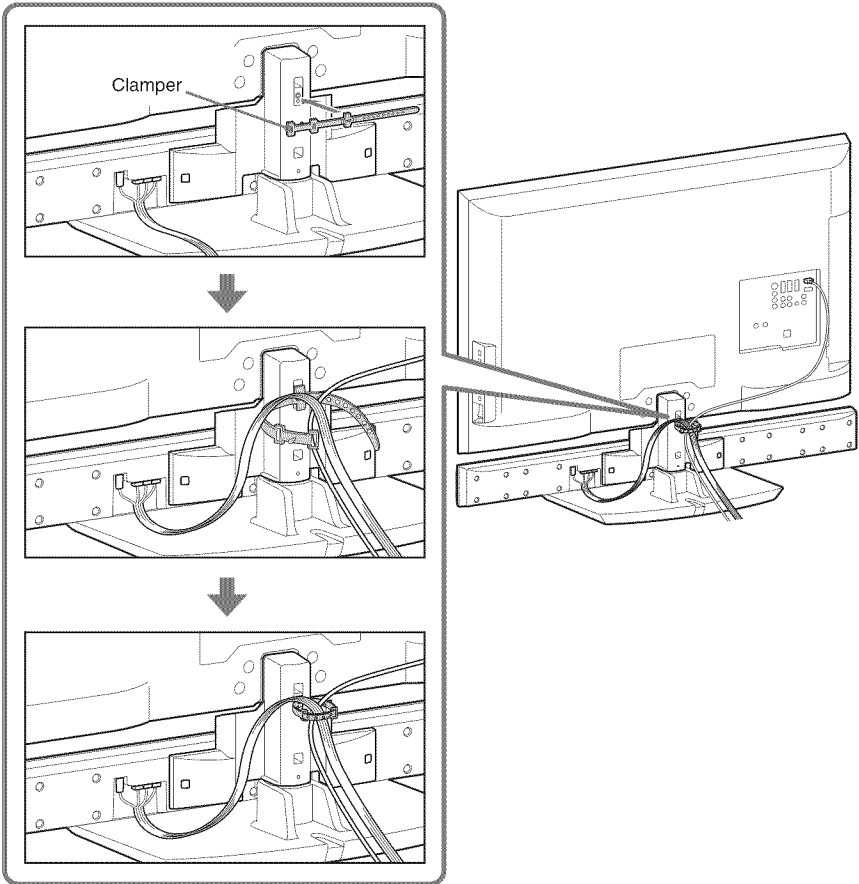

Hanging the speaker and TV on a wall

You can hang the speaker with the following TV models (not supplied):


- KDL-40/46XBR9
- KDL-40/46W51xx*

* In the actual model names, the "xx" indicates numbers and/or characters specific to each model.


Note

To hang the TV on the wall, refer to the operating instructions of the TV.


1 Remove the screws of the TV.

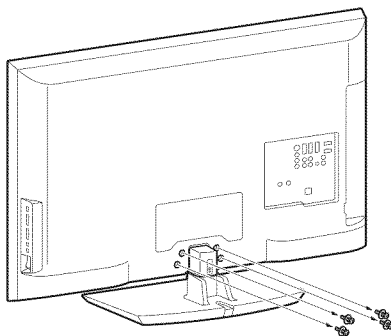

2 Detach the TV from the TV stand.

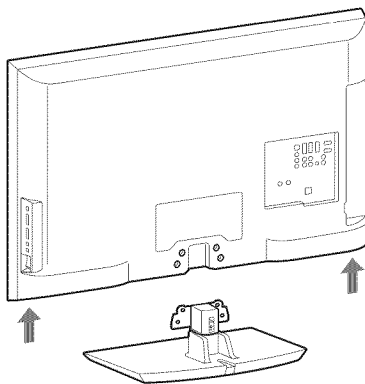


- 3** Hook the rivets of the extension bracket to the holes of the back of the speaker, and then secure the speaker to the extension bracket with the large screws (+PSW5 × 12 mm) (supplied).

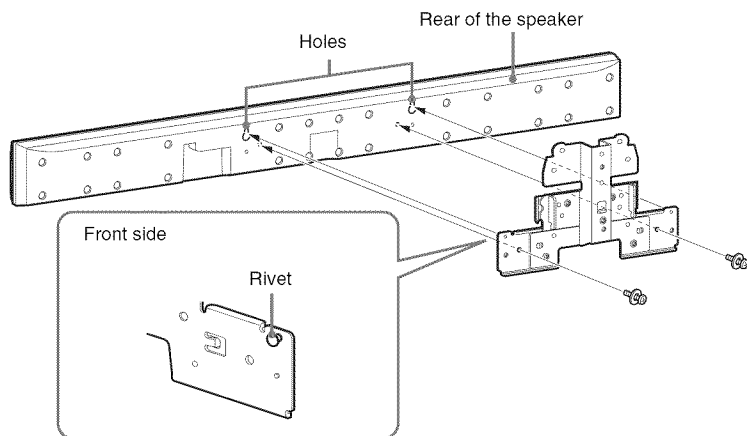


- 4** Reattach the TV.

Note

- Make sure to place the TV on a soft thick cloth with the screen side down to prevent damaging the surface of the LCD.

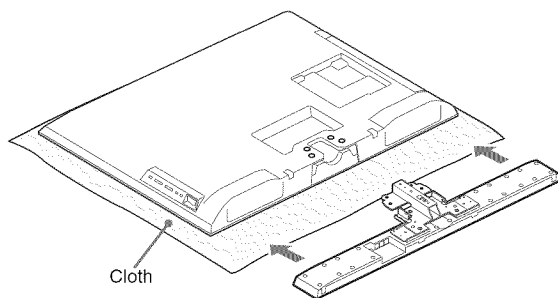

5 Secure the TV with the screws removed in step 1.

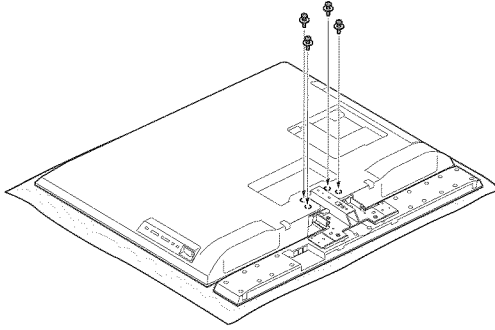

6 Hang the TV on the wall.

For details on hanging the TV on the wall, refer to the operating instructions of the TV.

Note

- When hanging the SS-CT500 speaker-installed TV on the wall or taking it off the wall, do not hold it by the SS-CT500 speaker part. Doing so may cause damage or injury.


 
Installing the speaker on a wall

You can install the speaker on the wall.

Notes


- Use screws that are suitable for the wall material and strength. As a plaster board wall is especially fragile, attach the screws securely to a wall beam. Install the speaker on a vertical and flat reinforced area of the wall.
- Be sure to subcontract the installation to Sony dealers or licensed contractors and pay special attention to safety during the installation.
- Sony is not responsible for accidents or damage caused by improper installation, insufficient wall strength, improper screw installation or natural calamity, etc.

- 1 Prepare screws (not supplied) that are suitable for the holes on the back of the speaker. See the illustrations below.**

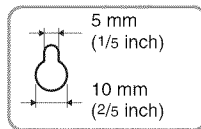


Hole on the back of the speaker

- 2 Fasten the screws to the wall. The screws should protrude 6 to 7 mm (approx. 1/4 inch).**

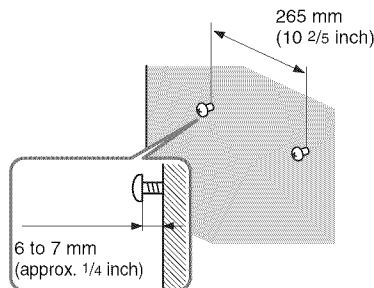


- 3 Hang the speaker onto the screws.**

Align the holes on the back of the speaker to the screws, then hang the speaker onto the two screws.

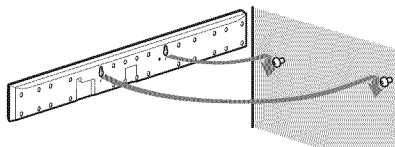

Step 2: Connecting the speaker

The connector of the speaker cords and the color tube are color-coded depending on the type of speaker. Connect the speaker cords to match the color of the **SPEAKER** jacks. Connect the connector for the remote control to the **REMOTE CTRL** jack.

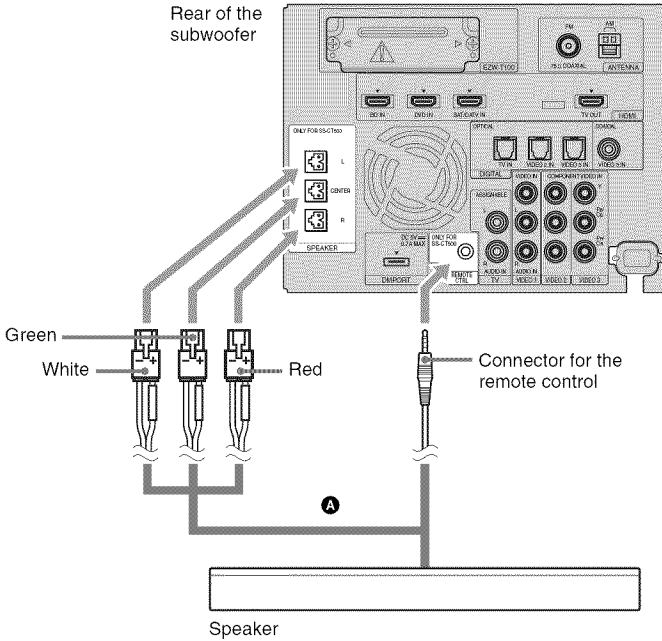

A Speaker cord (supplied)

Note


- You can use the remote by pointing it toward either the speaker or the subwoofer when the connector for the remote is inserted into the **REMOTE CTRL** jack. When the connector for the remote is not connected, the speaker does not receive signals from the remote.

continued


To extend the speaker cord

Substitute the speaker cord (supplied) with another speaker cord (not supplied) that has the desired length.

With the catch facing down, press and hold the connector down against a flat surface (①) and remove the speaker cords from the connector (②).

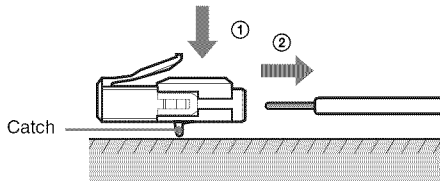

 If you reconnect the speaker cord (supplied) to the connector, be sure to match the speaker cord to the appropriate speaker terminals: \oplus to +, and \ominus to -. Connect the cord which a color tube is attached on one side to +. If the cords are reversed, the sound will lack bass and may be distorted.




Step 3a: Connecting the components with HDMI jacks

Sony recommends that you connect components to the system using HDMI cables. With HDMI, you can easily enjoy both high quality sound and high quality images. For details on the Control for HDMI function, see “What is “BRAVIA” Sync?” (page 60).

Connecting a TV monitor, projector, etc.

Connect the audio output of the TV to the audio input of the system using a digital optical cord or an audio cord in order to listen to the TV sound from the system.

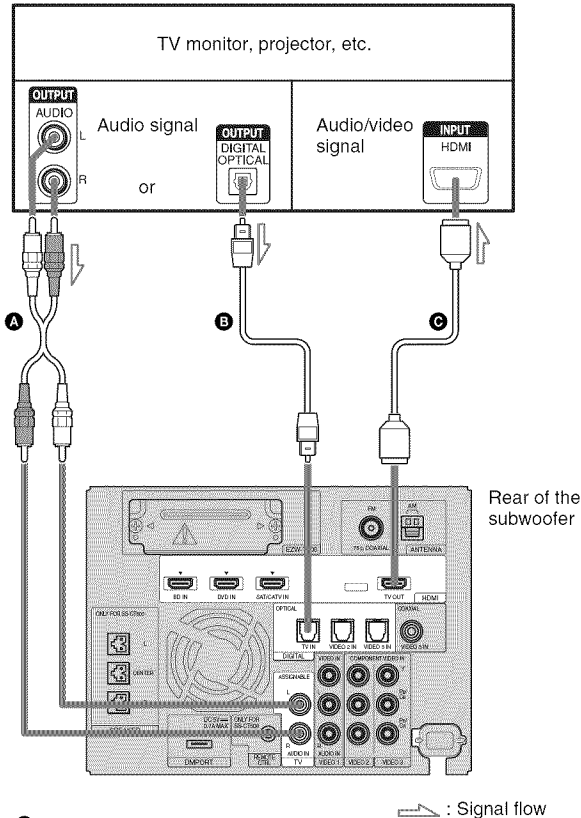

- A** Audio cord (not supplied)
- B** Digital optical cord (supplied)
- C** HDMI cable (not supplied)


➤ : Signal flow

Tip

• For details on connecting the TV without an HDMI jack, see “Step 3b: Connecting the components without HDMI jacks” (page 30).

continued

Connecting a Blu-ray Disc player (recorder), “PlayStation 3”, DVD player (recorder), satellite tuner, cable television tuner, etc.

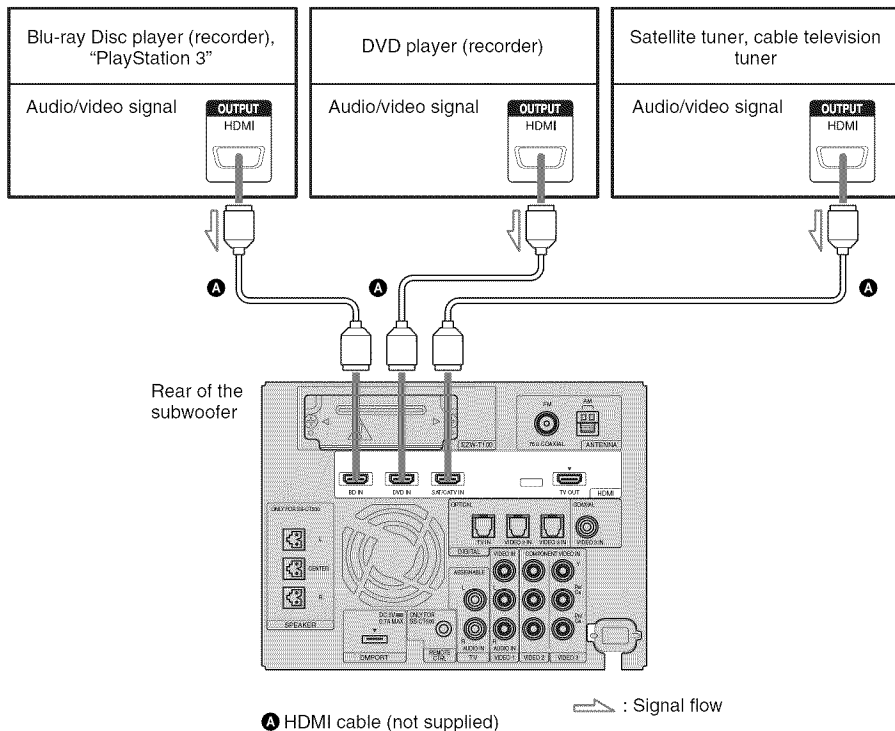

Notes on HDMI connections

- Use a High Speed HDMI cable. If you use a Standard HDMI cable, 1080p or Deep Color images may not be displayed properly.
- Sony recommends that you use an HDMI-authorized cable or Sony HDMI cable.
- Check the setup of the connected component if an image is poor, or sound does not come out of a component connected via the HDMI cable.
- Audio signals (sampling frequency, bit length, etc.) transmitted from an HDMI jack may be suppressed by the connected component.
- Sound may be interrupted when the number of channels or sampling frequency of audio output signals from the playback component is changed.
- When the connected component is not compatible with copyright protection technology (HDCP), the image and/or the sound from the HDMI TV OUT jack may be distorted or may be not output. In this case, check the specification of the connected component.
- Sony does not recommend using an HDMI-DVI conversion cable.
- When TV or tuner input is selected, the video signal that was selected last time is output.


- This system supports Deep Color and “x.v.Color” transmission, extended by HDMI ver1.3.

Step 3b: Connecting the components without HDMI jacks

When you connect a DVD player (recorder), satellite tuner, VCR, etc. without HDMI jacks, you can choose the connecting combination of the system. This system is equipped with a function for converting video signals. For details, see “Function for conversion of video signals” (page 35).

Connecting a TV monitor, projector, etc.

The following illustration shows how to connect the TV without HDMI jacks and the components to the subwoofer.

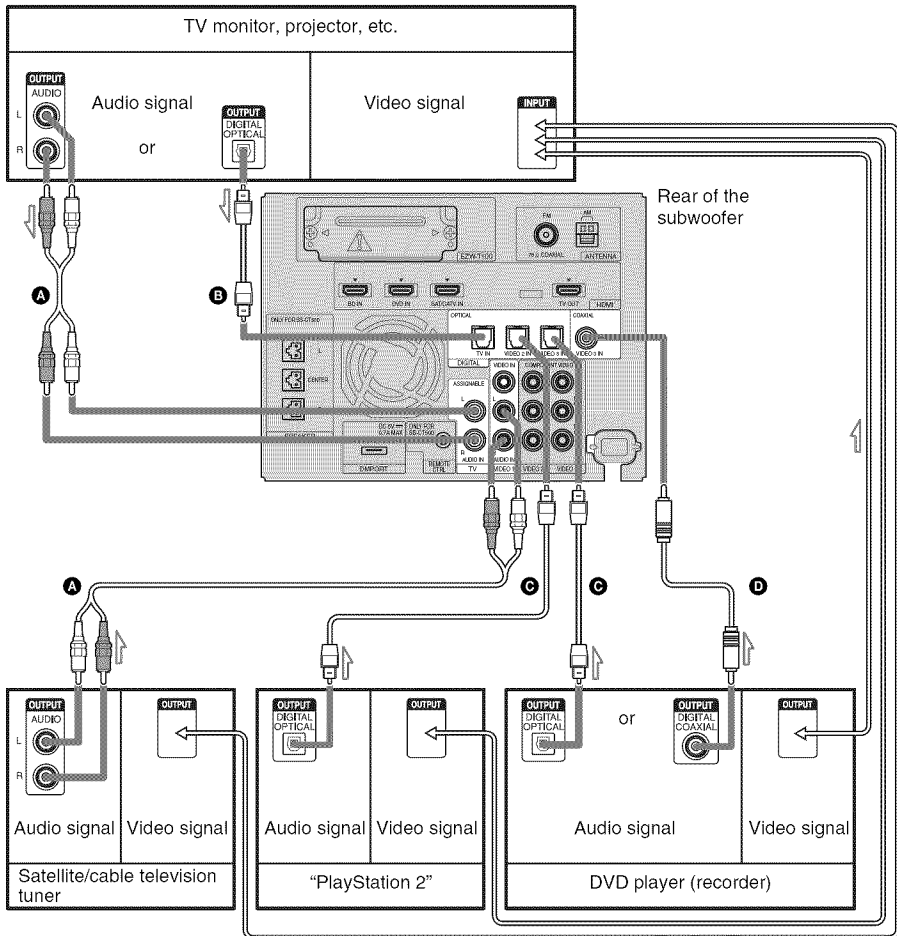

- A** Audio cord (not supplied)
- B** Digital optical cord (supplied)
- C** Digital optical cord (not supplied)
- D** Digital coaxial cord (not supplied)

➔ : Signal flow

Notes


- When your TV does not have an HDMI jack and you want to use the TV and other components with this system, connect the components' video jacks to the TV's video jacks directly and the components' audio jacks to the subwoofer's audio jacks. However, in this case, you cannot use the GUI menu on the TV. Set up the system using the front panel display of the subwoofer (page 95).
- Do not turn off the system when video of the playback component is being output to the TV. If the system is not turned on, audio of the playback component is not output from the speaker.

Tip

- To output TV sound from the speaker connected to the subwoofer, be sure to
 - connect the audio output jacks of the TV to the OPTICAL TV IN jacks or TV ASSIGNABLE AUDIO IN jacks of the subwoofer.
 - turn off the TV's volume.

Connecting a component to the VIDEO 1 jacks


The following illustration shows how to connect a component that has analog jacks.

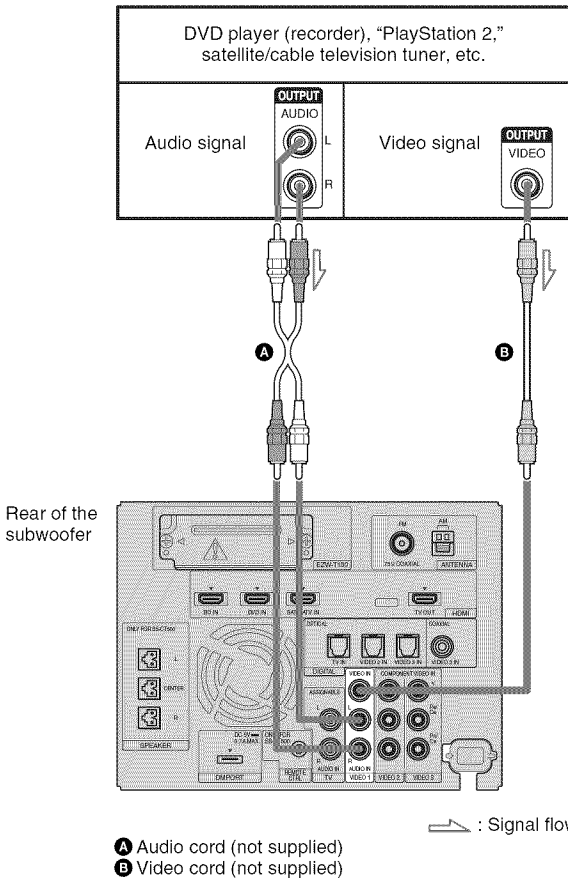

continued

Connecting a component to the VIDEO 2 IN jacks

The following illustration shows how to connect a component to the VIDEO 2 IN jacks. You can reassign the analog audio input using the TV ASSIGNABLE AUDIO IN jacks if they are not used to connect to a TV. For details, see “Reassigning the audio input” (page 81).

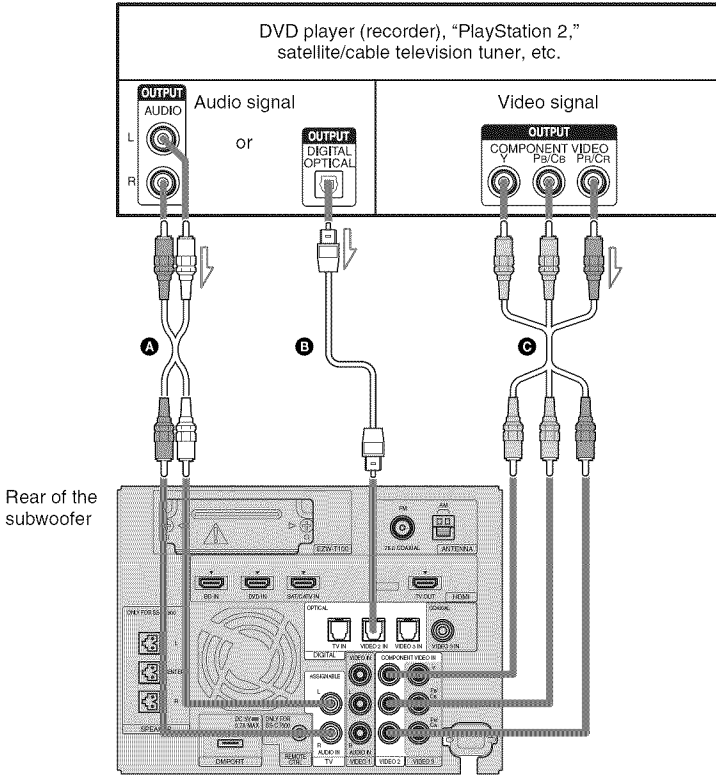


- A** Audio cord (not supplied)
- B** Digital optical cord (not supplied)
- C** Component video cable (not supplied)

Note

- The DIGITAL OPTICAL IN jacks have priority over the TV ASSIGNABLE AUDIO IN jacks when you connect a component to the system using both jacks.

Connecting a component to the VIDEO 3 IN jacks

The following illustration shows how to connect a component to the VIDEO 3 IN jacks. If the satellite tuner or cable television tuner, etc., does not have an OPTICAL OUT jack, connect the system using the COAXIAL VIDEO 3 IN jack.

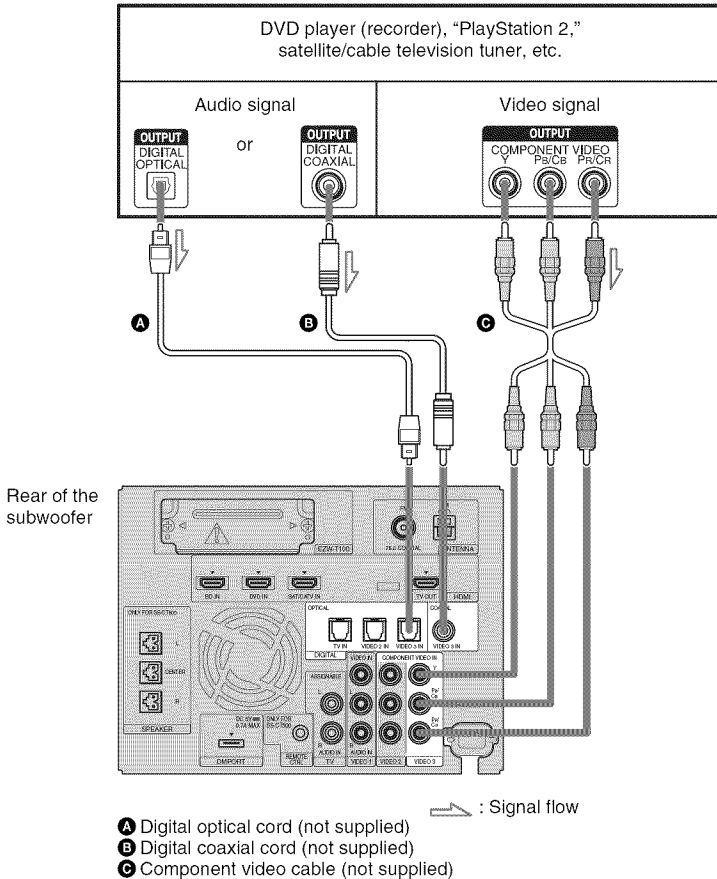

Note

- The DIGITAL COAXIAL IN jack has priority over the DIGITAL OPTICAL IN jacks when you connect a component to the system using both jacks.

Setting up the sound output of the connected component

Depending on the audio output settings of the connected component, the sound may output in 2 channel sound format only. In this case, set the connected component to output the sound in multi channel sound format (PCM, DTS, Dolby Digital). For details on audio output settings, refer to the operating instructions of the connected component.


Function for conversion of video signals

The subwoofer is equipped with a function for converting video signals.

Video signals and component video signals can be output as HDMI video signals (output from the HDMI TV OUT jack only).

For conversion of images, see “Video input/output conversion table” (page 36).

Video input/output conversion table of the subwoofer

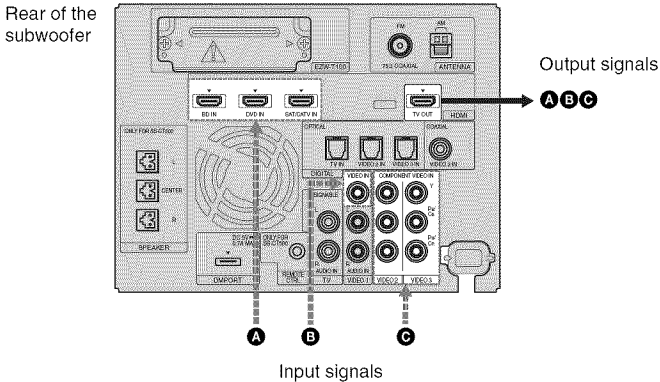

OUTPUT jack / INPUT jack	HDMI TV OUT
HDMI IN A	The same type of signal as that of the input signal is output. Video signals are not up-converted.
VIDEO IN B	Video signals are up-converted and output through this system.
COMPONENT VIDEO IN C	

Notes on converting video signals

- When video signals from a VCR, etc., are converted by the subwoofer and then output to your TV, depending on the status of the video signal output, the image on the TV screen may appear distorted horizontally, or no image may be output.
- If your VCR has an image improvement circuit, such as TBC, the images may be distorted or may not be output. In this case, set the image improvement circuit function to off.

continued

Video input/output conversion table

For details on the [Resolution] menu setting, see “Converting the resolution of analog video input signals” (page 82).

[Resolution] menu setting	Output from Input signals	HDMI TV OUT jack
AUTO (default setting)	Component video Video	The resolution is set automatically, depending on the connected TV.
480/576p	Component video Video	Video signals are up-converted and output through this system.
720p	Component video Video	
1080i	Component video Video	
1080p	Component video Video	

Notes

 
- If you select a resolution that the connected TV does not support in the [Resolution] menu, images from the TV will not be output correctly.
- Converted HDMI image output signals do not support “x.v.Color.”
- Converted HDMI image output signals do not support Deep Color.

Step 4: Connecting the antenna (aerial)

Connecting the AM loop antenna (aerial)

The shape and the length of the antenna (aerial) is designed to receive AM signals. Do not dismantle or roll up the antenna (aerial).


- 1 Remove only the loop part from the plastic stand.
- 2 Set up the AM loop antenna (aerial).



- 3 Connect the cords to the AM antenna (aerial) terminals.

While pushing down the terminal clamp, insert the (*) part of the cords.
The cords can be connected to either terminal.

Rear of the subwoofer

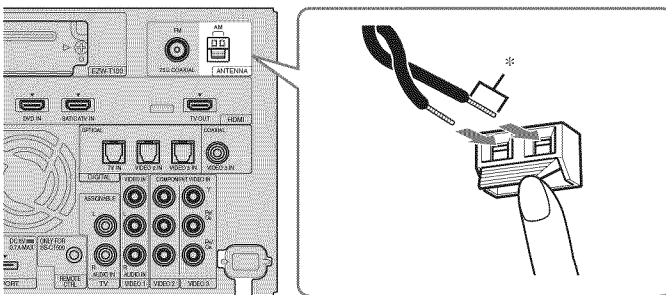

Note

- Do not place the AM loop antenna (aerial) near the system or other AV component, as noise may result.

Tip

- Adjust the direction of the AM loop antenna (aerial) for best AM broadcast sound.


- 4 Make sure the AM loop antenna (aerial) is connected firmly by pulling softly on the cord.

continued

Connecting the FM wire antenna (aerial)


Connect the FM wire antenna (aerial) to the FM 75 Ω COAXIAL jack.

Rear of the subwoofer

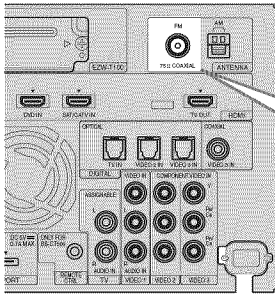

FM wire antenna (aerial)
(supplied)

FM 75 Ω COAXIAL jack

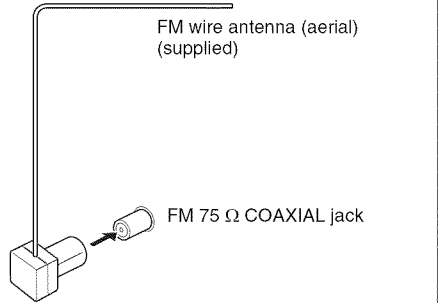


Notes

- Be sure to fully extend the FM wire antenna (aerial).
- After connecting the FM wire antenna (aerial), keep it as horizontal as possible.
- Do not use the FM wire antenna (aerial) while it is bundled up.
- Insert the FM wire antenna (aerial) fully and firmly to the terminal.


Tip

- If you have poor FM reception, use a 75-ohm coaxial cable (not supplied) to connect the subwoofer to an outdoor FM antenna (aerial) as shown below.

Rear of the subwoofer

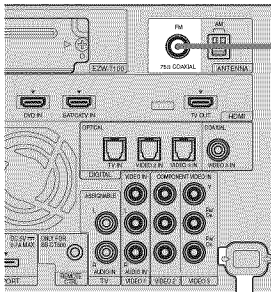


Outdoor FM antenna
(aerial)

 

Step 5: Connecting the AC power cord (mains lead)

Before connecting the AC power cord (mains lead) of the subwoofer to a wall outlet (mains), connect the speaker to the subwoofer (page 25).

Rear of the subwoofer

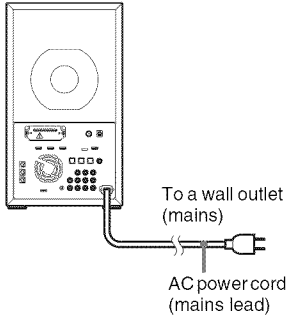

Note

- After connecting the AC power cord (mains lead), wait about 20 seconds before turning on the power by pressing I/⏻.
- Use the system near the wall outlet (mains). Should you notice an abnormality in the system, disconnect the AC power cord from the AC outlet immediately.

Step 6: Operating the system using the GUI


(Graphical User Interface)

When you connect the subwoofer's HDMI TV OUT jack and your TV's HDMI IN jack with the HDMI cable (not supplied), you can use the GUI menu.

By using the GUI menu, you can make various settings and adjustments.

You can make the settings and adjustments by the SYSTEM MENU as well. In that case, see "Using the system menu" (page 95).

Displaying the GUI menu on the TV screen

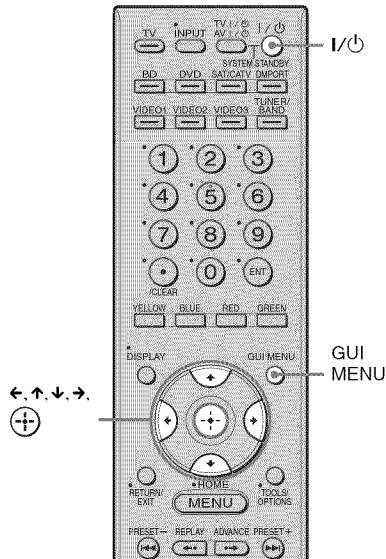

- 1** Connect a TV to the subwoofer.
For details, see "Step 3a: Connecting the components with HDMI jacks" (page 27).
- 2** Turn on the TV.
- 3** Press I/⏻ to turn on the system.

continued

4 Switch the input selector on your TV so that the signal from the system appears on the on the TV screen.

5 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

6 Press **↑/↓** repeatedly to select the menu item you want, then press **⊕** or **→**.



Overview of the menus

The following menu items are available for each category.

Input

Selects the input to the system.

For details on each input, see “Enjoying TV” (page 50) and “Enjoying other components” (page 51).

Music

You can enjoy sound from a component connected to the DIGITAL MEDIA PORT adapter.

For details on music functions, see “DMPORT function” (page 53).

Video

You can enjoy sound and image from a component connected to the DIGITAL MEDIA PORT adapter.

For details on video functions, see “DMPORT function” (page 53).

FM/AM

You can listen to the radio using the system.

For details on tuner operation, see “Listening to FM/AM radio using the GUI menu” (page 66) or “Listening to FM/AM radio using the front panel display of the subwoofer” (page 68).

Settings

You can use the settings menu to make adjustments to the system.

[Level]

You can adjust the speaker and subwoofer levels. For details, see “Setting the speaker level” (page 78).

[Surround]

You can select the sound field you want for your listening pleasure. For details on adjusting the parameters, see “Enjoying the surround effects” (page 57).

[Tone]

You can adjust the bass and treble level easily. For details, see “Adjusting the bass and treble level” (page 58).

[Audio]

You can adjust or operate useful functions related to audio. For details, see “Adjusting the delay between the sound and the image” (page 79), “Enjoying multiplex broadcast sound” (page 80), “Reassigning the audio input” (page 81), or “Enjoying the sound at low volume” (page 59).

[Video]

You can adjust the resolution. For details, see “Converting the resolution of analog video input signals” (page 82).

[HDMI]


You can operate components connected to the HDMI jacks. For details on adjusting the relevant parameters, see “Preparing for the “BRAVIA” Sync” (page 60). For details on outputting HDMI input signals, see “Enjoying higher quality HDMI images” (page 83).

[System]


You can change the brightness of the front panel display or the display setting. For details, see “Changing the brightness of the front panel display” (page 84) or “Changing the display setting” (page 84) respectively.

[S-AIR]


You can operate S-AIR functions such as S-AIR ID Settings or Pairing. For details, see “Using an S-AIR product” (page 85).

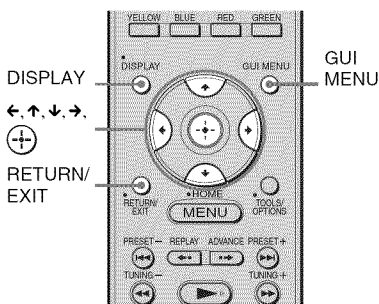Operation via the GUI screen**1 Press GUI MENU.**

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

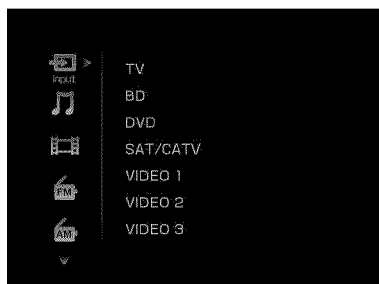2 Press \uparrow/\downarrow repeatedly to select a menu you want.**3 Press \oplus or \rightarrow to enter the menu.**


The menu item list appears on the TV screen.

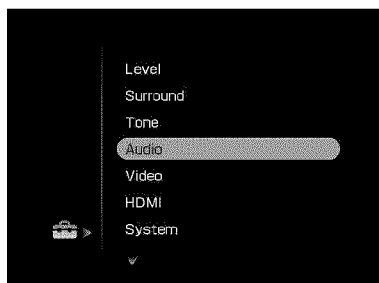

continued


4 Press \uparrow/\downarrow repeatedly to select the menu item you want to adjust.

5 Press \oplus to enter the menu item.

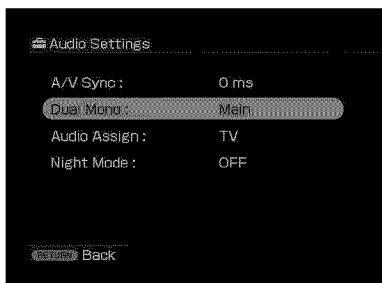

6 Press \uparrow/\downarrow repeatedly to select the parameter you want to adjust.

7 Press \oplus or \rightarrow to enter the parameter.

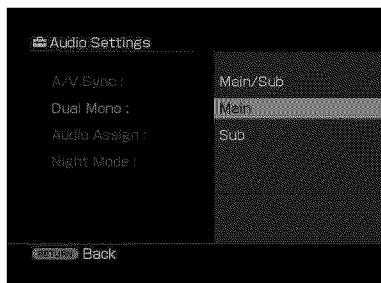

8 Press \uparrow/\downarrow repeatedly to select the setting you want.

9 Press \oplus to enter the setting.

10 Repeat steps 2 to 9 to make other settings.

To return to the previous screen

Press RETURN/EXIT.

To display or erase the guide menu

 
 
 
 
 
 
 


Press DISPLAY.


To exit the GUI menu

Press GUI MENU.

GUI Menu List

You can set the following items with GUI MENU on the remote.

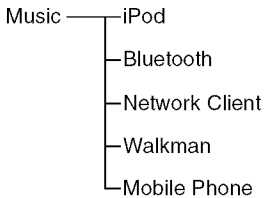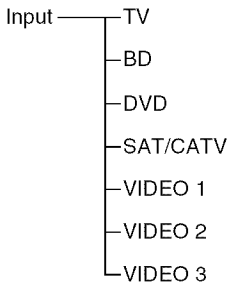

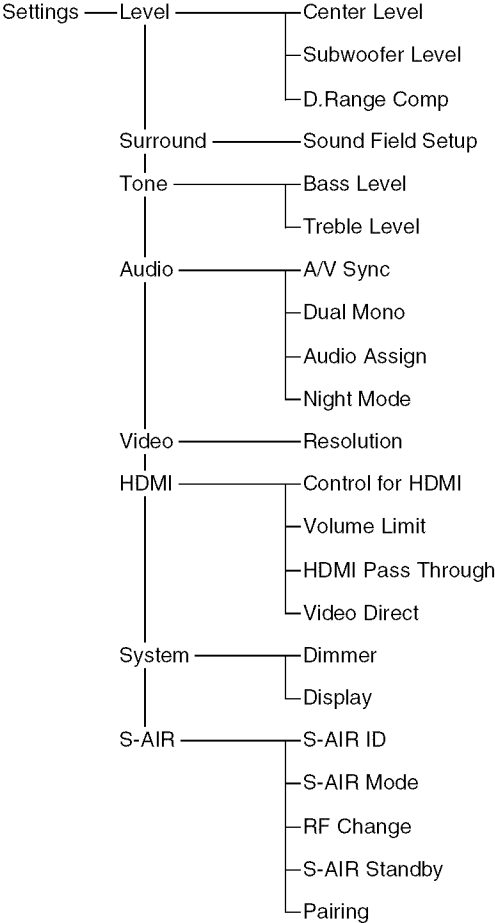


* This item appears when you press TOOLS/OPTIONS in each menu.

Connecting other components

To connect the DIGITAL MEDIA PORT adapter


You can enjoy picture and sound from a component connected to the subwoofer using the DIGITAL MEDIA PORT adapter.

Rear of the subwoofer

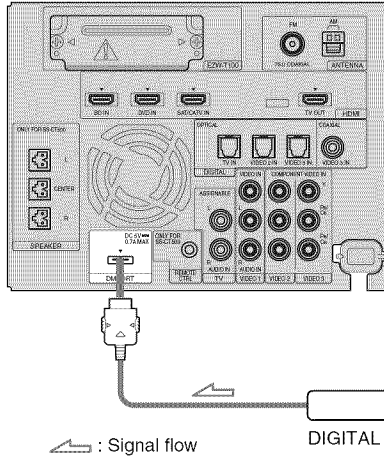

Notes


- Do not connect or disconnect the DIGITAL MEDIA PORT adapter while the system is turned on.
- When you connect the DIGITAL MEDIA PORT adapter, be sure the connector is inserted with the arrow mark facing toward the arrow mark on the DMPORT jack. To detach the DIGITAL MEDIA PORT adapter, press and hold **A** and then pull out the connector.

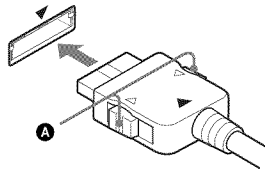

To use the wireless system

The system is compatible with the S-AIR function, which allows sound transmission between the subwoofer and an S-AIR product (not supplied). When you purchase an S-AIR product, you need to establish sound transmission.

For details, see page 85.

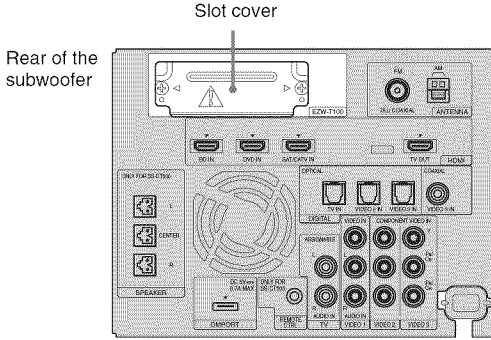


CAUTION

- There is no need to open the slot cover until an S-AIR product is used.

Index to parts and controls


For more information, see the pages indicated in parentheses.


Subwoofer

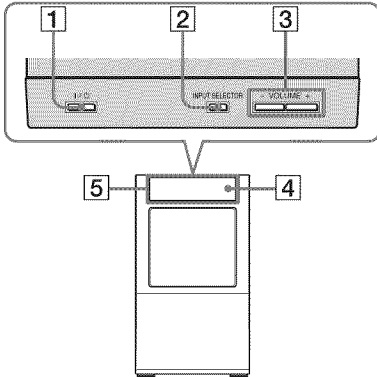


- 1 I/O (on/standby)**
Press to turn the system on or off.
- 2 INPUT SELECTOR**
Press to select the input source to play back.
Every time you press the button, the input source changes cyclically as follows: TV → BD → DVD → SAT/CATV → VIDEO 1 → VIDEO 2 → VIDEO 3 → FM → AM → DMPORT → TV.....
- 3 VOLUME +/-**
Press to adjust the volume level.

 Speaker



- 4 Remote sensor** 
Point the remote here.
- 5 Front panel display**
Check the system status.

Front panel display (subwoofer)

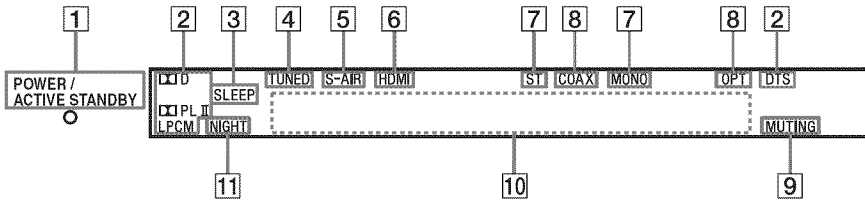

1 POWER / ACTIVE STANDBY indicator

Lights as follows:

Green: the system is turned on.

No light: the system is turned off.

Amber: the system is turned off, and either [HDMI Pass Through] in the [HDMI] menu is set to [ON] or [AUTO], or [S-AIR Standby] in the [S-AIR] menu is set to [ON].

2 Audio decoding indicators

Lights up according to the audio input signals.

3 SLEEP (96)

Flashes when the Sleep Timer function is active.

4 TUNED (68)

Lights up when a radio station is received.

5 S-AIR (85)

Lights up when the S-AIR transmitter (not supplied) is inserted in the subwoofer and the system transmits the sound.

6 HDMI (27, 98)

Lights up when HDMI equipment is in use.

7 ST/MONO (68)

Lights up according to the stereo or monaural status of the radio.

8 COAX/OPT

Lights up according to the cable that you are using.

9 MUTING

Lights up when the sound is turned off.

10 Message display area

Displays volume, selected input source, audio input signal, etc.

11 NIGHT (59)


Lights up in NIGHT mode.

Remote control

This section describes subwoofer and speaker button operation. See page 72 for details on the button operation of connected components.

Note

- Point the remote towards the remote sensor (📡) of the subwoofer or the speaker.

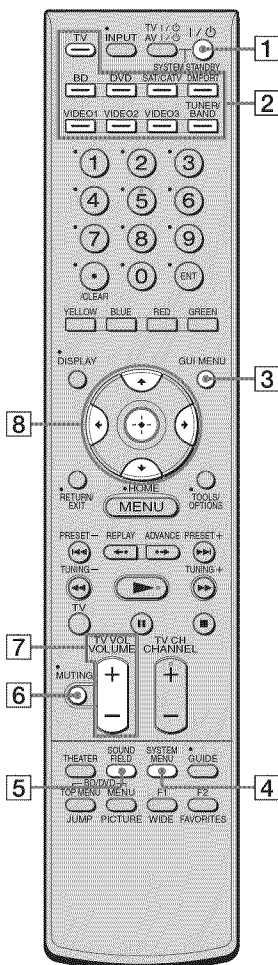

1 I/O (on/standby)

Press to turn the system on or off.

2 Input buttons

Press one of the buttons to select the component you want to use. The buttons are factory assigned to control Sony components. You can change the factory settings of the input buttons to suit the components in your system. For details, see “Changing the input button assignments of the remote” (page 75).

3 GUI MENU

Press to display the GUI menu. For details, see “Step 6: Operating the system using the GUI” (page 39).

4 SYSTEM MENU

Press to display the system menu in the front panel display of the subwoofer (page 95).

5 SOUND FIELD

Press to select the sound field (page 57).

6 MUTING (muting)

Press to turn off the sound.

7 TV VOL VOLUME +/-


Press to adjust the volume.

8 ←, ↑, ↓, → or ⏏

Press ←, ↑, ↓ or → to select the menu items. Then press ⏏ to enter the selection.

- * The 5, ►, and TV CH CHANNEL + buttons have a tactile dot. Use it as a guide during operation.

Enjoying TV

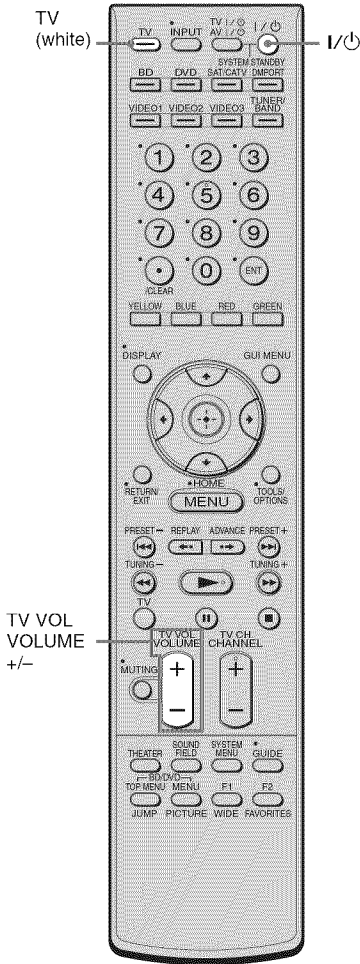


- 1 Turn on the TV and choose a program.**
For details, refer to the operating instructions of the TV.
- 2 Turn the system on.**
- 3 Press TV (white) on the remote.**
- 4 Adjust the volume of the system.**

Tips

- When you connect a Sony TV, the audio input of the TV is switched and the image from the TV tuner is displayed on the TV screen automatically by pressing the TV (white) button. To change this setting, see “Changing the input button assignments of the remote” (page 75).
- The sound may be output from the TV’s speaker. In this case, turn the volume of the TV’s speaker down to the minimum level.

Enjoying other components

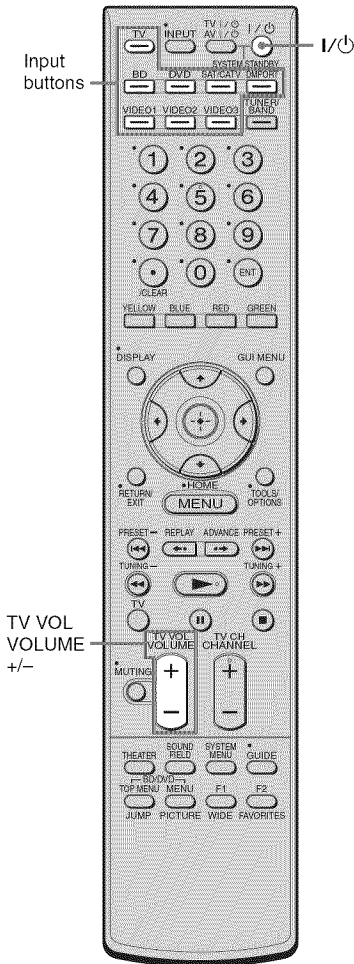

Enjoying a satellite tuner or cable television tuner

- 1 Turn on the TV.
For details, refer to the operating instructions of the TV.
- 2 Turn on the satellite/cable television tuner and the system.
- 3 Press SAT/CATV on the remote.
- 4 Change the TV input.
For details, refer to the operating instructions of the TV.
- 5 Adjust the volume of the system.

Tip

- Sound may be output from the TV's speaker. In this case, turn the volume of the TV's speaker down to the minimum level.

Enjoying Blu-ray Disc, DVD, or "PlayStation 3"

- 1 Turn on the TV.
- 2 Turn on the Blu-ray Disc/DVD player (recorder) or "PlayStation 3" and the system.
- 3 Press DVD or BD on the remote.
- 4 Change the TV input.
For details, refer to the operating instructions of the TV.
- 5 Play back the disc.

Tip

- Even if you play back Dolby True HD, Dolby Digital Plus or DTS-HD with a connected component compatible with these sound formats, the system recognizes it as Dolby Digital or DTS. When you connect the component to the system using an HDMI cable to play back these high-quality sound formats, set the connected component to output the sound in multi channel PCM, if possible.

Enjoying a VCR

- 1** Turn on the TV.
- 2** Turn on the VCR and the system.
- 3** Press VIDEO 1, 2, or 3 on the remote.
- 4** Change the TV input.
For details, refer to the operating instructions of the TV.
- 5** Play back the tape on the VCR.

Enjoying a connected component through DMPORT connection

See “Operating the component connected to the DIGITAL MEDIA PORT adapter” (page 54).

DMPORT function

Features of DIGITAL MEDIA PORT (DMPORT)

The DIGITAL MEDIA PORT (DMPORT) allows you to enjoy picture and sound from a network system such as a portable audio/video source or computer.

For details on connecting the DIGITAL MEDIA PORT adapter, see “To connect the DIGITAL MEDIA PORT adapter” (page 45).

Sony offers the following DIGITAL MEDIA PORT adapters as of May 2009:

- TDM-BT1/BT10 Bluetooth™ Wireless Audio Adapter
- TDM-NW1/NW10 DIGITAL MEDIA PORT Adapter
- TDM-NC1 Wireless Network Audio Client
- TDM-iP1/iP10/iP50 DIGITAL MEDIA PORT Adapter
- TDM-MP10 DIGITAL MEDIA PORT Adapter


The DIGITAL MEDIA PORT adapter is an optional product.

Notes

- Do not connect an adapter other than the DIGITAL MEDIA PORT adapter to the DMPORT jack.
- Before disconnecting the DIGITAL MEDIA PORT adapter, make sure to turn the system off using the remote.
- Do not connect or disconnect the DIGITAL MEDIA PORT adapter while the system is turned on.
- Depending on the type of DIGITAL MEDIA PORT adapter, video output may not be possible.
- The DIGITAL MEDIA PORT adapters are available for purchase depending on the area.

Selecting the operation screen

You can select an operation screen using the GUI menu, depending on the DIGITAL MEDIA PORT adapter you want to use.

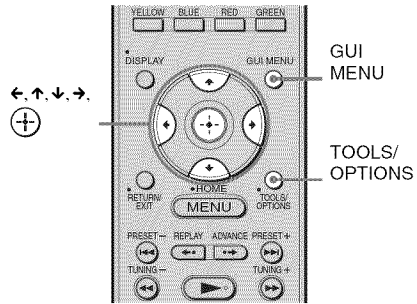

1 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press \uparrow/\downarrow repeatedly to select [Music] or [Video], then press \oplus or \rightarrow .

3 Press \oplus .

The component connected to the DIGITAL MEDIA PORT adapter is recognized and [DMPORT] on the screen will change to the connected component’s name.

The category of the component connected to DIGITAL MEDIA PORT adapter appears on the TV screen.

4 Press TOOLS/OPTIONS to display [Function List].

Highlighted [DMPORT Control] appears.

5 Press \oplus or \rightarrow .

The available modes, [System GUI], [Adapter GUI], and [iPod], appear.

6 Press \uparrow/\downarrow repeatedly to select the mode you want, then press \oplus .

The details of each mode are as follows:

- [System GUI]

This mode is for the TDM-iP1/iP50 and TDM-NC1. The list of tracks will be

displayed on the TV screen. You can select a track you want and play it back on each GUI screen.


- [Adapter GUI]
This mode is for the TDM-iP1/iP50 and TDM-NC1. The menu of the adapter will be displayed on the TV screen.
- [iPod]
This mode is for the TDM-iP1/iP50.

If [DMPORT Control] does not appear on the screen, refer to the operating instructions of the connected component.

When an adapter other than for iPod is connected, a hierarchical menu does not appear.

When the connected iPod is compatible with the video function, a hierarchical menu appears, and when the connected iPod is incompatible, the message [No Video] appears.

Operating the component connected to the DIGITAL MEDIA PORT adapter

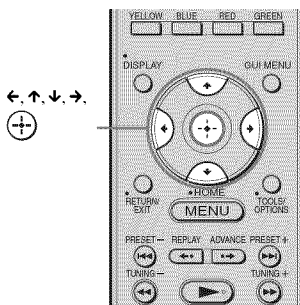

To operate the TDM-iP1, TDM-iP50, or TDM-NC1 using the GUI menu of the system

- 1** Make sure that [System GUI] is selected in step 5 in “Selecting the operation screen” (page 53).
- 2** Press $\leftarrow/\uparrow/\downarrow/\rightarrow$ repeatedly to select the content you want from the contents list displayed on the GUI screen, then press \oplus to play it back.

Contents list for audio

- iPod — Playlists > Playlist > Track
- Artists > Artist > Album > Track
- Albums > Album > Track
- Songs > Track
- Genres > Genre > Artist > Album > Track
- Composers > Composer > Track
- Audiobooks > Audiobook

- Network Client — Music Surfin^{a)} > Album^{c)} > Track
- Playlist^{a)} > Playlist > Track
- Web Radio^{a)} > Station > Program
- Music Library^{b)} > Album > Track

- a) Displayed only when M-crew Server is connected.
- b) Displayed only when a DLNA server other than M-crew Server is connected.
- c) Displayed as [Genre], [Artist] or [Album], depending on setting of [List Mode].

Contents list for video

- iPod — Movies > Content
- TV Shows > Episode > Content
- Music Videos > Artist > Content
- Video Playlists > Video Playlist > Content
- Video Podcasts > Episode > Content

To operate the TDM-iP1, TDM-iP50, or TDM-NC1 using the adapter menu

Make sure that [Adapter GUI] is selected in step 6 in “Selecting the operation screen” (page 53). For details on operating the adapter using the adapter GUI menu, refer to the operating instructions of the adapter.

To operate the TDM-iP1 or TDM-iP50 using the iPod menu

Make sure that [iPod] is selected in step 6 in “Selecting the operation screen” (page 53). For details on operating the iPod, refer to the operating instructions of the iPod.

Playing the selected track

During playback of the selected track, the displayed screen changes depending on the connected DIGITAL MEDIA PORT adapter.


Example of a [System GUI] screen



Example of an [Adapter GUI] screen



You can operate the components connected to the DIGITAL MEDIA PORT adapter using the following buttons on the system's remote.

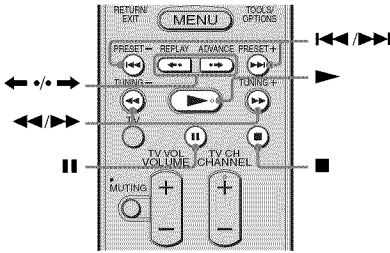

To	Do the following
Play	Press ►.
Pause	Press ■. To resume play, press the button again.
Stop	Press ■.*
Find the beginning of a track during playback, or find the beginning of the previous track	Press ◀◀.
Find the beginning of the next track	Press ▶▶.
Skip to the previous album	Press ◀•.
Skip to the next album	Press •▶.
Go reverse/forward	Press ◀◀/▶▶.**

- * When a TDM-iP1 is connected, the system enters pause mode when ■ is pressed.
- ** Fast reverse/forward while pressing and holding the ◀◀/▶▶ button.

Option parameters in the play modes

Shuffle (TDM-iP1/TDM-iP50 only)

- [OFF]
- [Songs]
- [Albums]

Repeat Mode (TDM-iP1/TDM-iP50 only)

- [OFF]
- [One]
- [All]

List Mode (TDM-NC1 only)

- [All Tracks]
- [Disc List]
- [Artist List]
- [Genre List]

Audiobook Speed (TDM-iP50 only)

- [Low]
- [Normal]
- [High]

Tip

- The [List Mode] can be used with the [Function List] menu even when the list is displayed.

DIGITAL MEDIA PORT message list

Message	Explanation
[No Adapter]	The adapter is not connected.
[No Device]	There is no device connected to the adapter.
[No Audio]	No audio file was found.
[No Video]	No video file was found.
[Loading]	The data is being read.
[No Server]*	There is no server connected.
[No Track]*	No track was found.
[No Item]*	No item was found.
[Connecting]*	Connecting to the server.
[Configuring]*	The network is setting up.
[Warning]*	Check the display of the DIGITAL MEDIA PORT adapter.
[Searching]*	Searching the server.

- * TDM-NC1 only.

Surround Sound Functions

Enjoying the surround effects

Enjoying Surround Sound Using Sound Field

This system can create multi channel surround sound. You can select one of the optimized sound fields from the system's preprogrammed sound fields.

Available sound fields


Sound field	Effect
[Standard]	Suits various sources.
[Movie] *	Recreates powerful and realistic sound, along with clear dialog.
[Drama] *	Suited for TV dramas.
[News] *	Produces the announcer's voice clearly.
[Sports] *	Produces the play-by-play commentary clearly and realistic sound with surround effects, such as cheering, etc.
[Game] *	Produces powerful and realistic sound, suited for playing video games.
[Music]	Suited for music programs or music videos on Blu-ray Discs/ DVDs.
[Jazz]	Recreates the atmosphere of a jazz club.
[Classic]	Recreates the atmosphere of a classical concert.
[Rock]	Produces powerful sound, suited for listening to rock music.
[Pop]	Produces uplifting sound, suited for listening to pop music.
[Live]	Recreates the atmosphere of a live performance.
[Portable Audio] **	Suited to replay portable audio source.

* These sound fields are not available when "DMPORT" is selected by pressing INPUT SELECTOR.

** [Portable Audio] appears only when "DMPORT" is selected.

Selecting a sound field

You can select the sound field you want as follows.

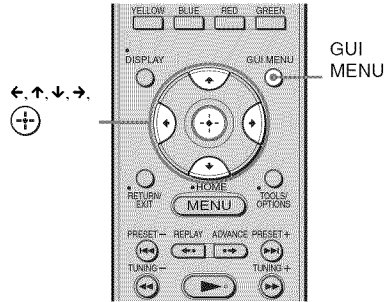

1 Start playing a sound source you want to listen to (CD, DVD, etc.).

2 Press GUI MENU.

"GUI MENU" appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

3 Press \uparrow/\downarrow repeatedly to select [Settings], then press \oplus or \rightarrow .

The settings menu appears.

4 Press \uparrow/\downarrow repeatedly to select [Surround], then press \oplus .

[Sound Field Setup] appears.

5 Press \uparrow/\downarrow repeatedly to select the desired sound field, then press \oplus .



continued

6 Press GUI MENU.

The GUI menu turns off.

Note

- If you select the [Music] sound field for a 2 channel source, the center speaker of the SS-CT500 does not output sound.


Tips

- The sound fields memorized for each input are retained even if you disconnect the AC power cord (mains lead).
- Whenever you select a function such as BD or DVD, the sound field that was last applied to the function is automatically applied again. For example, if you listen to DVD with the [Movie] sound field, then change to another function, and then return to DVD, the [Movie] sound field will be applied again.

To select a sound field on the remote


Press SOUND FIELD on the remote.

Each time you press the SOUND FIELD button, the sound field changes cyclically.

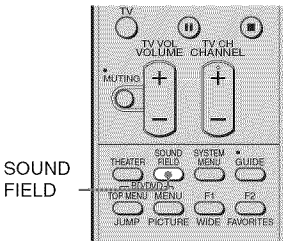

Adjusting the bass and treble level

You can adjust the bass and treble level easily.

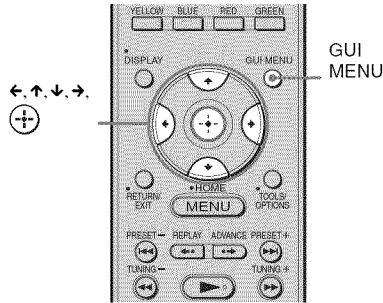

1 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press \uparrow/\downarrow repeatedly to select [Settings], then press \leftarrow or \rightarrow .

The settings menu appears.

3 Press \uparrow/\downarrow repeatedly to select [Tone], then press \leftarrow .

The tone menu appears.

4 Press \uparrow/\downarrow to select [Bass Level] or [Treble Level], then press \leftarrow or \rightarrow .

- [Bass Level]: adjusts the bass level
- [Treble Level]: adjusts the treble level

5 Press \uparrow/\downarrow to select the desired parameter, then press \leftarrow .

The parameter is from [-6dB] to [+6dB] in 1 dB steps. The default setting is [0dB].


6 Press GUI MENU.

The GUI menu turns off.

Enjoying the sound at low volume

(Night Mode)

You can enjoy sound effects and to hear the dialog clearly even at a low volume level using this function. This function is useful for enjoying sound at night.

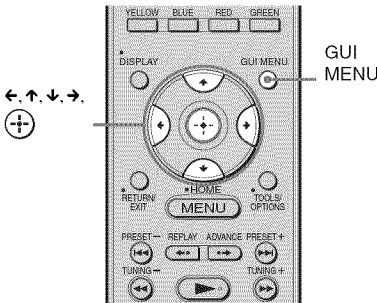

- 1 Press GUI MENU.**
“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.
- 2 Press \uparrow/\downarrow repeatedly to select [Settings], then press \oplus or \rightarrow .**
The settings menu appears.
- 3 Press \uparrow/\downarrow repeatedly to select [Audio], then press \oplus .**
The audio menu appears.
- 4 Press \uparrow/\downarrow repeatedly to select [Night Mode], then press \oplus or \rightarrow .**
- 5 Press \uparrow/\downarrow to select [ON], then press \oplus .**
“NIGHT” lights up in the front panel display of the subwoofer and the sound effect is activated.
- 6 Press GUI MENU.**
The GUI menu turns off.

“BRAVIA” Sync features

What is “BRAVIA” Sync?

By connecting Sony components compatible with “BRAVIA” Sync using an HDMI cable (not supplied), operation is simplified as below:

- **One-Touch Play:** When you play back a component such as a Blu-ray Disc/DVD player (recorder), the system and the TV are turned on automatically and switch to the appropriate HDMI input.
- **System Audio Control:** While watching TV, you can select to output the sound from the TV speaker or the speakers of the system.
- **System Power Off:** When you turn off the TV, the system and the connected components are also turned off simultaneously.

“BRAVIA” Sync is compatible with a Sony TV, Blu-ray Disc/DVD player, AV amplifier, etc., with the Control for HDMI function.

Control for HDMI is a mutual control function standard used by CEC (Consumer Electronics Control) for HDMI (High-Definition Multimedia Interface).

The Control for HDMI function will not operate in the following cases:

- When you connect this system to a component that does not correspond with the Control for HDMI function.
- When you connect the system and components using other than HDMI connection.

Sony recommends that you connect this system to products featuring “BRAVIA” Sync.


Note

- Depending on the connected component, the Control for HDMI function may not work. For details, refer to the operating instructions of the component.

Preparing for the “BRAVIA” Sync

To use the “BRAVIA” Sync, set the Control for HDMI function to on for the system and the connected component.

When you connect a Sony TV with the Control for HDMI function, the Control for HDMI function for the system and the connected component can be set simultaneously by setting the Control for HDMI function of the TV.

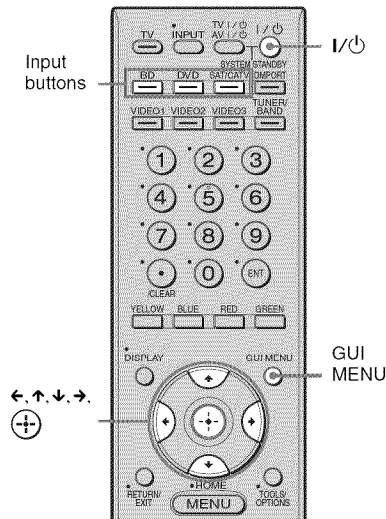

- 1** Make sure that the system is connected to the TV and the connected components (which should be compatible with the Control for HDMI function) using HDMI cables (not supplied).
- 2** Turn on the system, the TV, and the connected components.
- 3** Select the input of the system connected to the component you want to watch (BD, DVD, SAT/CATV), and switch the HDMI input of the TV, so that an image from the connected component is displayed.

4 Set the Control for HDMI function of the TV to on.

The Control for HDMI function for the system and the connected component is simultaneously set to on.

During the setting, “SCANNING” appears in the front panel display. After you finish the setting, “COMPLETE” appears in the front panel display. Wait until the setting is complete.

If “SCANNING” or “COMPLETE” does not appear after performing the steps above

Set the Control for HDMI function to on for the system and the connected component individually.

1 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press ↑/↓ repeatedly to select [Settings], then press ⊕ or →.

The settings menu appears.

3 Press ↑/↓ repeatedly to select [HDMI], then press ⊕.

The HDMI menu appears.

4 Press ↑/↓ repeatedly to select [Control for HDMI], then press ⊕ or →.

5 Press ↑/↓ to select [ON], then press ⊕.

The Control for HDMI is set to on.

6 Press GUI MENU.

The GUI menu turns off.

7 Set the Control for HDMI function of the connected component to on.

For details, refer to the operating instructions of the connected component.

8 Select the input of the system connected to the component you want to use the Control for HDMI function for (BD, DVD, SAT/CATV), and repeat step 7.

If you add or reconnect the component

Perform the steps in “Preparing for the “BRAVIA” Sync” and “If “SCANNING” or “COMPLETE” does not appear after performing the steps above” again.

Notes

- While setting the Control for HDMI function for the system, the System Audio Control function does not work.
- If the Control for HDMI function for the connected component cannot be set simultaneously by setting “Control for HDMI” of the TV, set the Control for HDMI function using the menu of the connected component.
- For details on setting the TV and the connected components, refer to their operating instructions.

Tip

- The default setting of the Control for HDMI function of the system is [ON].

Enjoying a Blu-ray Disc/ DVD

(One-Touch Play)

Play back a connected component.

The system and the TV are turned on automatically and switch to the appropriate HDMI input.


Note

- Depending on the TV, the start of the content may not be output.

Enjoying the TV sound from the speakers

(System Audio Control)

You can enjoy the TV sound from the speaker of the system by means of a simple operation. For details, refer to the operating instructions of the TV.

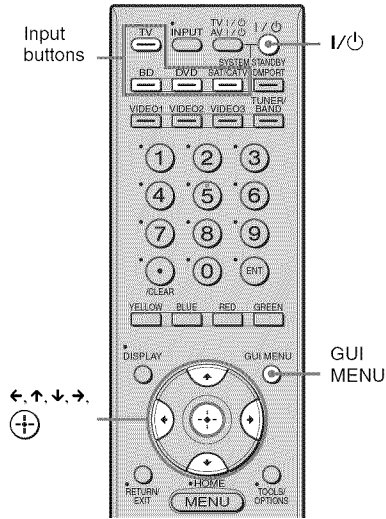

Press I/O to turn on the system.

The sound is output from the speaker of the system. The sound is output from the TV's speaker when you turn the system off.

Note

- If the TV is turned on before this system is turned on, the TV sound will not be output for a moment.

Tip

- You can adjust the volume and turn off the sound of the system using the TV remote.

Using the Volume Limit function

When the System Audio Control function is active, and the output method changes from the TV speaker to the system speaker automatically,

loud sound may be output depending on the volume level of the system. You can prevent this by limiting the maximum volume level.

1 Press GUI MENU.

"GUI MENU" appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press \uparrow/\downarrow repeatedly to select [Settings], then press \oplus or \rightarrow .

The settings menu appears.

3 Press \uparrow/\downarrow repeatedly to select [HDMI], then press \oplus .

The HDMI menu appears.

4 Press \uparrow/\downarrow repeatedly to select [Volume Limit], then press \oplus or \rightarrow .

5 Press \uparrow/\downarrow to select the maximum volume level you want, then press \oplus .

The maximum volume level changes as follows:

MAX \leftrightarrow 49 \leftrightarrow 48 \leftrightarrow
 \leftrightarrow 2 \leftrightarrow 1 \leftrightarrow MIN

6 Press GUI MENU.

The GUI menu turns off.

Notes

- This function is available only when the Control for HDMI function is set to on.
- This function is not available when the output method is changed from the system speaker to the TV speaker.

Tips

- Sony recommends that you set the maximum volume level to a little lower than the volume you usually listen to.
- Regardless of the maximum volume level you set, the VOLUME +/- button of the subwoofer and the TV VOL VOLUME +/- button of the remote are operable.
- If you do not want to limit the maximum volume level, select [MAX].

Using the input buttons of the remote

The input buttons (TV (white), BD, DVD, SAT/CATV, DMPORT, VIDEO) work as follows when the Control for HDMI function is set to on.

- BD, DVD, SAT/CATV, DMPORT, VIDEO:
 Since the input of the TV is also switched automatically, you can watch the image of the selected component on the TV simply by pressing the buttons.
- TV: The input of the TV switches automatically. When you connect a Sony TV, you can watch the TV simply by pressing the button.

Tip

- You can control connected Sony components by pressing the input buttons. For details, see "Controlling connected Sony components with the remote" (page 72).


Turning off the TV, system, and connected components

(System Power Off)

When you turn the TV off by using the power button on the TV's remote, the system and the connected components turn off automatically. Also, when you turn the TV off by using the system's remote, the system and the connected components turn off automatically.

Note

- Depending on the status, the connected components may not be turned off. For details, refer to the operating instructions of the connected components.

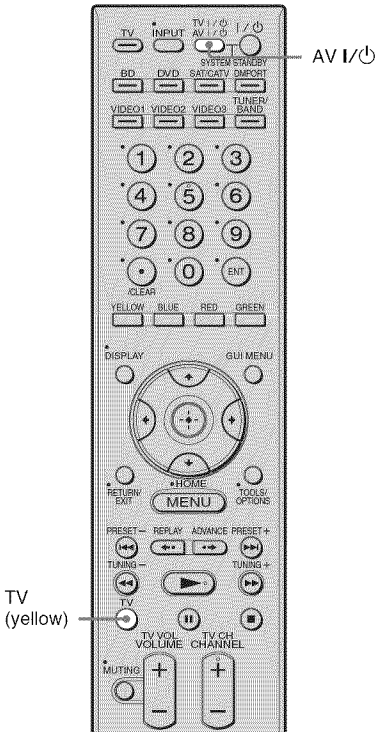

1 Press TV (yellow).

The TV (yellow) button lights up for a moment.

2 Press AV I / ⏻.

The TV, the system, and the connected components are turned off.


Enjoying the components while the system is in standby mode

(HDMI Pass Through)

You can use the components and a TV connected to this system without turning on the system. HDMI signals can be sent from the component to the TV via the subwoofer. The default setting is [OFF].

Note

- This function is available when [Control for HDMI] is set to [ON].

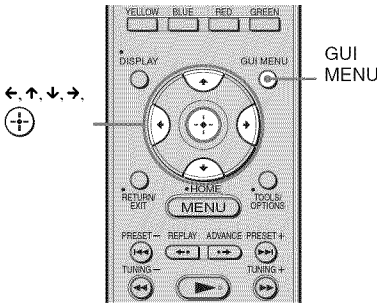

- 1 Press GUI MENU.**
“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.
- 2 Press \uparrow/\downarrow repeatedly to select [Settings], then press \oplus or \rightarrow .**
The settings menu appears.
- 3 Press \uparrow/\downarrow repeatedly to select [HDMI], then press \oplus .**
The HDMI menu appears.
- 4 Press \uparrow/\downarrow repeatedly to select [HDMI Pass Through], then press \oplus or \rightarrow .**
The [HDMI Pass Through] menu appears.
- 5 Press \uparrow/\downarrow repeatedly to select the setting you want, then press \oplus .**

Settings	Details
[AUTO]	When the TV is turned on while the system is in the standby mode, the system outputs HDMI signals from the system’s HDMI output jack. Sony recommends this setting if you use a TV that is compatible with “BRAVIA” Sync. This setting saves power in the standby mode compared with the [ON] setting.
[ON]	When the system is in the standby mode, the system continuously outputs HDMI signals from the system’s HDMI output jack.
[OFF]	The system does not output HDMI signals when in the standby mode. Turn on the system to enjoy the connected component’s source on the TV. This setting saves power in the standby mode, compared with the [ON] setting.

Note

- When [AUTO] is selected, it may take a little more time for the picture and sound to be output to the TV than when [ON] is selected.

Tip

- When One-Touch Play is used on a connected component compatible with “BRAVIA” Sync, how the system is turned on depends on the HDMI Pass Through setting.
 - [AUTO] or [ON]: the system is turned on depending on the TV speaker setting.
 - [OFF]: By One-Touch Play, the system is always turned on.


- 6 Press GUI MENU.**
The GUI menu turns off.

Tuner Functions

Listening to FM/AM radio using the GUI menu

You can listen to FM and AM broadcasts through the built-in tuner. Before operation, make sure you have connected the FM and AM antennas (aerials) to the subwoofer (page 37).

Automatic tuning

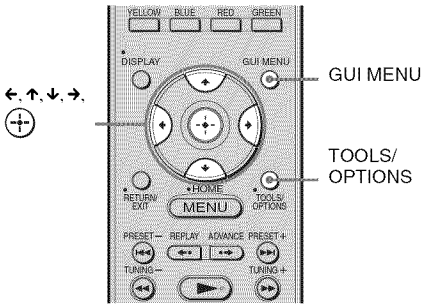

1 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press \uparrow/\downarrow repeatedly to select [FM] or [AM], then press \oplus or \rightarrow .

The FM or AM menu appears on the TV screen.

3 Press \uparrow/\downarrow to select [Auto Tuning], then press \oplus .



4 Press \uparrow/\downarrow .

Press \uparrow to scan from low to high frequency stations, or press \downarrow to scan from high to low. Scanning is halted when a station is received. To tune in to another station, press \uparrow or \downarrow .

5 Press GUI MENU.

The GUI menu turns off.

In case of poor FM stereo reception

If an FM program is noisy, you can select monaural reception. There will be no stereo effect, but reception will improve.


1 Press TOOLS/OPTIONS.

2 Press \uparrow/\downarrow to select [FM Mode], then press \oplus or \rightarrow .

3 Press \uparrow/\downarrow to select [Mono], then press \oplus .

Direct tuning

You can enter the frequency of a station directly using the number buttons.

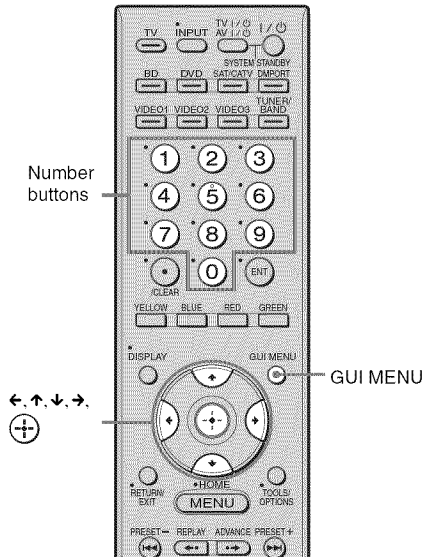

1 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press \uparrow/\downarrow repeatedly to select [FM] or [AM], then press \oplus .

3 Press \uparrow/\downarrow to select [Direct Tuning], then press \oplus .

4 Press number buttons to enter the frequency.

Example 1: FM 89.50 MHz

Select 8 \rightarrow 9 \rightarrow 5

Example 2: AM 1,350 kHz

Select 1 \rightarrow 3 \rightarrow 5 \rightarrow 0



Tip

• If you have tuned in an AM station, adjust the direction of the AM loop antenna (aerial) for optimum reception.

5 Press \oplus .

If a wrong frequency is entered

“---,-- MHz” appears and then the display returns to the current frequency.


If you cannot tune in a station

Make sure you have entered the right frequency. If not, repeat step 4. If you still cannot tune in a station, it is likely that the frequency is not used in your area.

Presetting radio stations

You can preset up to 20 FM and 10 AM stations. In this way, you can easily find stations you often listen to.

Before tuning, make sure to turn the volume down to minimum.

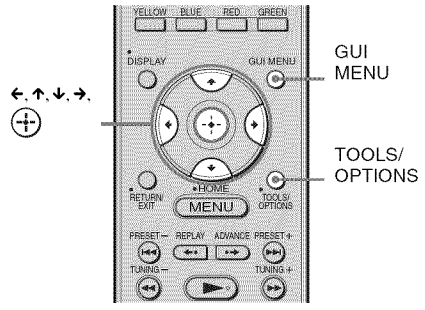

1 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press \uparrow/\downarrow repeatedly to select [FM] or [AM], then press \oplus or \rightarrow .

3 Tune in the station that you want to preset using automatic tuning (page 66) or direct tuning (page 66).

In case of poor FM stereo reception, switch the FM mode (page 66).

4 Press TOOLS/OPTIONS.

5 Press \uparrow/\downarrow to select [Memory], then press \oplus or \rightarrow .

6 Press \uparrow/\downarrow to select a preset number.

7 Press \oplus .

The station is stored as the selected preset number.

8 Repeat steps 3 to 7 to preset other stations.

To tune in to preset stations

- 1 Repeat steps 1 and 2 of “Presetting radio stations” (page 67).
- 2 Press \uparrow/\downarrow to select the preset station you want.

You can select a preset station as follows:


- AM band: AM 1 to AM 10
- FM band: FM 1 to FM 20

Naming preset stations

You can enter a name for preset stations. These names (for example, “XYZ”) appear when a station is selected.

You can enter/display a name of up to 8 characters.

Note that no more than one name can be entered for each preset station.

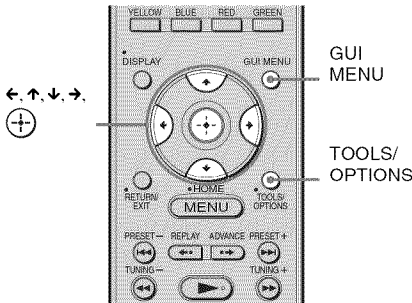


- 1 Select a preset station you want to name.
- 2 Press TOOLS/OPTIONS.
- 3 Press \uparrow/\downarrow repeatedly to select [Name Input], then press \oplus or \rightarrow .
- 4 Press \leftarrow/\rightarrow to select a character, then press \oplus .

Listening to FM/AM radio using the front panel display of the subwoofer

Presetting radio stations

You can preset up to 20 FM and 10 AM stations. In this way, you can easily find stations you often listen to.

Before tuning, make sure to turn the volume down to minimum.

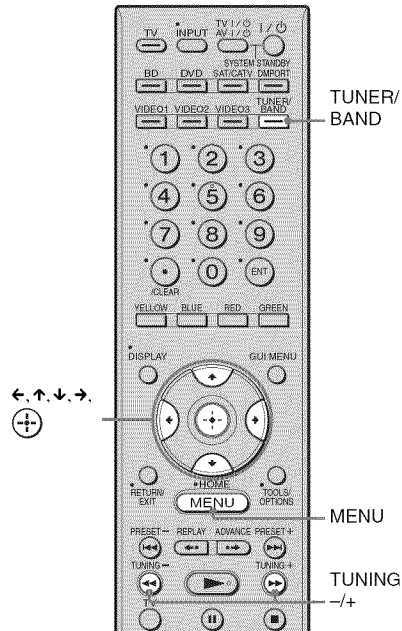


- 1 Press TUNER/BAND.
You can change “FM” or “AM” by pressing TUNER/BAND.
- 2 Press and hold TUNING + or – until the auto scanning starts.
Scanning stops when the system tunes in a station. “TUNED” and “ST” (for stereo program) light up in the front panel display.
- 3 Press MENU.


4 Press \uparrow/\downarrow repeatedly until “Memory?” appears in the front panel display.

5 Press \oplus .

 A preset number appears in the front panel display.



 6 Press \uparrow/\downarrow to select the preset number you want.




Tip

• You can select the preset number directly by pressing the number buttons.

7 Press \oplus .

 The station is stored.



8 Press MENU.

9 Repeat 2 to 8 to store other stations.

To change the preset number

Restart from step 3.

Changing the AM tuning interval

The AM tuning interval can be set to either 10 kHz or 9 kHz.

1 Tune in to an AM broadcast.

2 Press I/\cup .

The system enters standby mode.

3 While holding down INPUT SELECTOR, press I/\cup of the subwoofer.

The interval changes to that shown in the front panel display: “AM 9k Step” or “AM10k Step.”


If you want to return to the previous interval, perform steps 1 to 3 again.

Note

• If you change the interval, all AM preset stations will be erased.

Listening to the radio

Preset radio stations in the system’s memory first (see “Presetting radio stations” (page 67) or “Presetting radio stations” (page 68)).

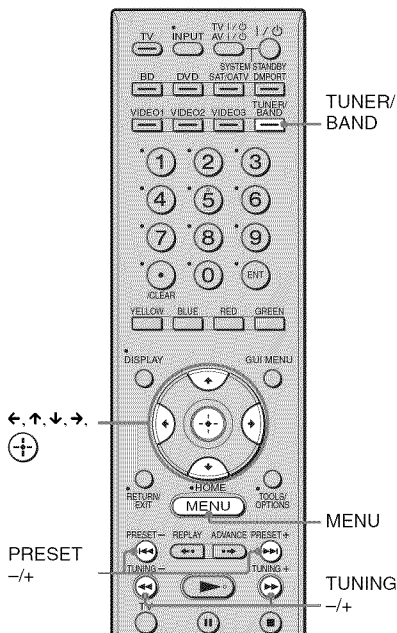

Tuner Functions

1 Press TUNER/BAND.

The last received station is tuned in. You can change “FM” or “AM” by pressing TUNER/BAND.

2 Press PRESET + or – repeatedly to select the preset station.

Each time you press the button, the system tunes in one preset station. You can select the preset number directly by pressing the number buttons.

3 Adjust the volume of the system.

To turn off the radio

Press I/\cup to turn off the system, or change to another function.

continued

To listen to non-preset radio stations

Use manual or automatic tuning in step 2. For manual tuning, press TUNING + or – repeatedly.

For automatic tuning, press and hold TUNING + or –. The automatic tuning stops automatically when the system receives a radio station. To stop the automatic tuning manually, press TUNING + or –.

In case of poor FM stereo reception

If an FM program is noisy, you can select monaural reception. There will be no stereo effect, but reception will improve.


- 1 Press **MENU**.
- 2 Press **↑/↓** repeatedly until “FM Mode?” appears in the front panel display, then press **+** or **→**.
- 3 Press **↑/↓** to select “MONO.” “MONO” lights up in the front panel display. The default setting is underlined.
 - **STEREO**: stereo broadcasts are received in stereo.
 - **MONO**: monaural reception.
- 4 Press **+**.
- 5 Press **MENU**.

Tip


- To improve reception, reorient the supplied antennas (aerials).

Naming preset stations

You can enter a name for preset stations. These names (for example, “XYZ”) appear in the front panel display when a station is selected. You can enter a name of up to 8 characters. Note that no more than one name can be entered for each preset station.

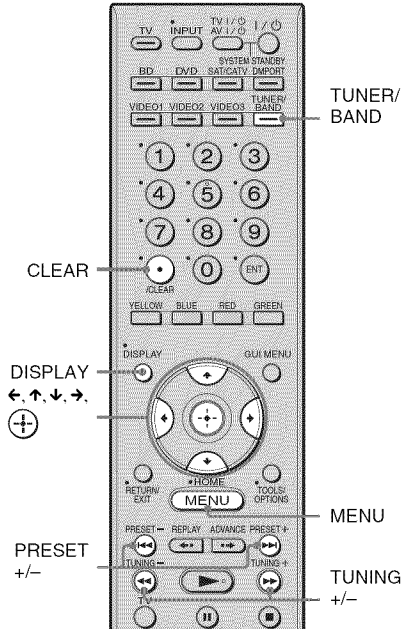

 - 1 Press **TUNER/BAND**.
The last received station is tuned in. You can change “FM” or “AM” by pressing TUNER/BAND.
- 2 Press **PRESET + or –** repeatedly to select the preset station you want to create an index name for.
- 3 Press **MENU**.
- 4 Press **↑/↓** repeatedly until “Name In?” appears in the front panel display.



- 5 Press **+**.

6 Create a name by using ←/↑/↓/→.

Press ↑/↓ to select a character, then press → to move the cursor to the next position.

Letters, numbers, and other symbols can be input for a radio station name.

 
If you enter a wrong character

Press ←/→ repeatedly until the character to be changed flashes, then press ↑/↓ to select the desired character.

To erase the character, press ←/→ repeatedly until the character to be erased flashes, then press CLEAR.

7 Press .

“Complete!” appears in the front panel display, and the station name is stored.




8 Press MENU.

Tip

- You can check the frequency in the front panel display by pressing DISPLAY repeatedly (page 71).

Viewing the station name or frequency in the front panel display

When the system is set to “FM” or “AM,” you can check the frequency using the front panel display.

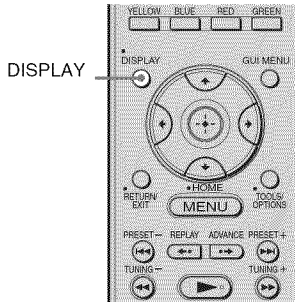

Press DISPLAY.

Each time you press DISPLAY, the front panel display changes as shown.

- ① Station name*
- ② Frequency**


* This is displayed if you have entered a name for a preset station.

** Returns to the original display when several seconds have elapsed.

Advanced Settings

Controlling connected Sony components with the remote

You can control connected Sony components with the remote of this system. Some functions may not be selectable depending on the equipment. In that case, select them using the remote control supplied with the equipment.

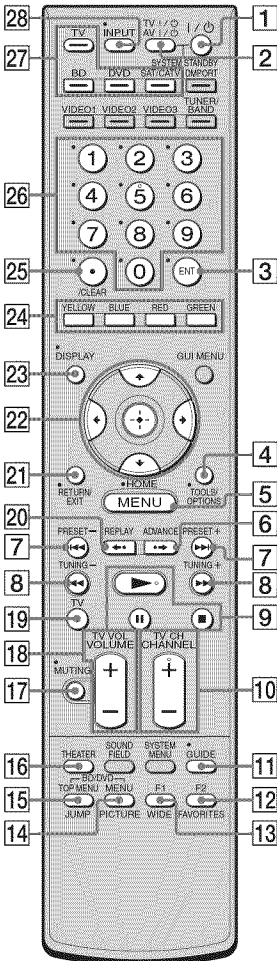

* The 5, **▶**, and TV CH CHANNEL + buttons have a tactile dot. Use it as a guide during operation.

To control the component

1 Press one of the input buttons **27** (TV, BD, DVD, or SAT/CATV) to select the component you want to operate.

The component assigned to the selected input button becomes operable.

2 Referring to the following table, press the corresponding button for the operation.

Common operations

Remote Button	Function
2 TV I/O AV I/O (on/standby)	Turns on or off the Sony TV or audio/video components that the remote is assigned to operate. Press 1 I/O and 2 TV I/O/AV I/O at the same time to turn off the system and all other components that the remote is assigned to operate (SYSTEM STANDBY).
3 ENT (enter)	Enters the selection.
22 ←, ↑, ↓, →, ⊕	Selects a menu item and enters the selection.
24 Color buttons	Displays an operation guide on the TV screen when the color buttons are available. Follow the operation guide to perform a selected operation.
26 Number buttons	Selects channels and tracks directly.

To control a TV

1 Press **19** TV (yellow) to control the TV.

The **19** TV (yellow) button lights up for a moment. The remote is in TV operation mode.

2 Press the buttons with a yellow dot or yellow printing.

To cancel TV operation mode, press **19** TV (yellow) again. After it flashes four times quickly, remote TV operation mode is canceled.

Remote Button	Function
4 TOOLS/ OPTIONS	Enables you to access various viewing options and change/make adjustments according to the source and screen format.
5 MENU/HOME	Allows you to select channels or input sources and change the settings for your TV.
10 TV CH +/-	Selects the next (+) or previous (-) channel. To scan quickly through channels, press and hold down either +/-.
11 GUIDE (Guide)	Displays the guide when you are watching analog or digital channels.
12 FAVORITE	Displays the stored favorite channel list.
13 WIDE	Sets to the wide mode.
14 PICTURE	Displays the available picture mode.
15 JUMP	Jumps back and forth between two channels. The TV alternates between the current channel and the last channel that was selected.
16 THEATER	Automatically sets the optimal picture settings for watching movies, when you connect a Sony TV that is compatible with the THEATER button function. Also, audio is automatically switched to the audio output of this system when you connect the TV and the system with HDMI connection, and the Control for HDMI function is set to on.
17 MUTING (Muting)	Turns off the sound.

Remote Button	Function
18 TV VOL VOLUME +/-	Adjusts the volume.
21 RETURN/EXIT	Returns to the previous screen of any displayed menu.
22 ←, ↑, ↓, →, ⊕	Selects a menu item and enters the selection.
23 DISPLAY	Displays the current channel number, etc.
25 ⊙	Selects digital channels using with the 0-9 and ENT buttons. For example, to enter "2.1", press 1 , 2 , and ENT.
26 Number buttons	Selects channels. Press 3 ENT to change channels immediately.
28 INPUT	Selects input.

To control the DVD recorder/Blu-ray Disc recorder

Remote Button	Function
5 MENU/HOME	Displays the menu.
6 ADVANCE • →	Jumps forward while viewing recorded programs.
7 ⏮	Skips chapters.
▶▶	Skips forward to the next available chapter.
8 ◀▶▶	To fast reverse or to fast forward the disc when pressed during playback.
9 ▶ (playback)/⏸ (pause, press again to resume normal playback)/■ (stop)	Play mode buttons.
12 F2	Selects the Blu-ray Disc/DVD.
13 F1	Selects the HDD.
14 BD/DVD MENU	Displays the top menu/disc menu.
15 BD/DVD TOP MENU	
20 REPLAY ◀ •	Jumps backward while viewing live or recorded programs.
22 ←, ↑, ↓, →, ⊕	Selects a menu item and enters the selection.

To control the DVD player/Blu-ray Disc player

Remote Button	Function
5 MENU/HOME	Displays the menu.
6 ADVANCE • →	Jumps forward.
7 ⏮/▶▶	Skips chapters.
8 ◀▶▶	To fast reverse or to fast forward the disc when pressed during playback.
9 ▶ (playback)/⏸ (pause, press again to resume normal playback)/■ (stop)	Play mode buttons.
14 BD/DVD MENU	Displays the top menu/disc menu.
15 BD/DVD TOP MENU	
20 REPLAY ◀ •	Jumps backward.

Remote Button	Function
22 ←, ↑, ↓, →, ⊕	Selects a menu item and enters the selection.

To control the HDD/DVD COMBO

Remote Button	Function
5 MENU/HOME	Displays the menu.
6 ADVANCE • →	Advance.
7 ⏮/▶▶	Specifies the previous/next chapter/track.
8 ◀▶▶	To fast reverse or to fast forward the disc when pressed during playback.
9 ▶ (playback)/⏸ (pause, press again to resume normal playback)/■ (stop)	Play mode buttons.
12 F2	Selects the DVD.
13 F1	Selects the HDD.
14 BD/DVD MENU	Displays the top menu/disc menu.
15 BD/DVD TOP MENU	
20 REPLAY ◀ •	Changes to replay mode.
22 ←, ↑, ↓, →, ⊕	Moves the highlight (cursor) and selects the item.

To control the SAT


Remote Button	Function
5 MENU/HOME	Displays the menu.
11 GUIDE (Guide)	Displays the guide menu.
22 ←, ↑, ↓, →, ⊕	Selects a menu item and enters the selection.

Note

- The above explanations are intended to serve as an example only. Depending on the component, the above operations may not be possible, or may operate differently than described.

Changing the input button assignments of the remote

You can change the factory settings of the input buttons to suit the components in your system. For example, if you connect a Blu-ray Disc player to the DVD jack on the system, you can set the DVD button on this remote to control the Blu-ray Disc player. You cannot assign any component other than a TV to the TV (white) button of the remote.

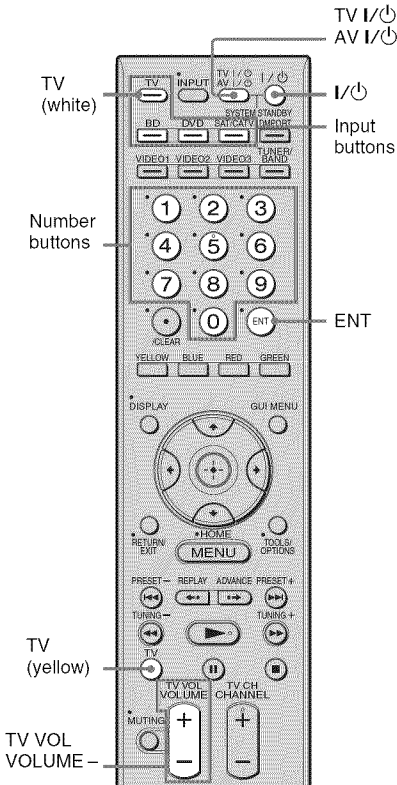

1 Press and hold the input button whose assignment you want to change, and press TV (yellow) at the same time. The TV (yellow) button flashes red every other second, and the remote enters the assignment mode.

Note

- The remote exits the assignment mode if no button is pressed within 60 seconds.

2 Press the number buttons to enter the three digit numeric code (or one of the codes if more than one code are available) corresponding to the component you want to assign, then press ENT.

For details on numeric codes, see “Numeric codes of controllable components” (page 76).

Once the numeric code is verified, the TV (yellow) button flashes twice and then the remote exits the assignment mode.

If the numeric code is not verified, the TV (yellow) button flashes five times and then the remote exits the assignment mode.

3 Repeat steps 1 to 2 to assign other components.

If programming is unsuccessful, check the following:

If the indicator does not light up in step 1, the batteries may be weak. If this is the case, replace both batteries.

To clear all remote button assignments

Press and hold TV VOL VOLUME -, I/O, and AV I/O in this order. The remote is reset to its factory settings.

When the clearance is completed, the TV (yellow) button flashes three times.

Numeric codes corresponding to the component and maker

Use “Numeric codes of controllable components” below to control non-Sony components and Sony components that the remote is normally unable to control. Since the remote signal that a component accepts may differ depending on the component’s model and year, more than one numeric code may be assigned to a component. If you fail to program your remote using one of the codes, try using others.

Notes

- Only the last three numbers entered are valid.
- The numeric codes are based on the latest information available for each brand. However, your component may not respond to some or all of the codes.
- No all the input buttons on this remote may be available, depending on the component.

Numeric codes of controllable components

If more than one code number is listed, try entering them one at a time until you find the code that works with your component.

To control a Blu-ray Disc player (recorder)

Maker	Code(s)
SONY	310, 311, 312
PANASONIC	331, 332, 333
PIONEER	334
SHARP	459, 460, 461

To control a DVD player

Maker	Code(s)
SONY	401, 402, 403
BROKSONIC	424
DENON	405
HITACHI	416
JVC	415, 423
mitsubishi	419
ORITRON	417
PANASONIC	406, 408, 425
PHILIPS	407
PIONEER	409, 410
RCA	414
SAMSUNG	416, 422
TOSHIBA	404, 421
ZENITH	418, 420

To control a HDD/DVD COMBO, DVD recorder

Maker	Code(s)
SONY	401, 402, 403
HITACHI	441, 442, 443
JVC	444, 445, 446, 447, 459, 460, 461
MITSUBISHI	448, 449
PANASONIC	450, 451, 452
PIONEER	453, 454, 455, 456, 457, 458
SHARP	459, 460, 461
TOSHIBA	462, 463, 464

To control a TV

Maker	Code(s)
SONY	501, 502
AIWA	536
DAEWOO	515, 544
FUNAI	548
HITACHI	503, 513, 514, 515, 519, 544, 557
JVC	516, 552
LG/GOLDSTAR	503, 515, 544
MITSUBISHI/MGA	503, 519, 527, 544
NEC	503, 540, 544, 554
PANASONIC	524, 553, 559, 572
PHILIPS	515, 518, 557
PIONEER	525, 540, 551, 555
RCA/PROSCAN	510
SAMSUNG	503, 515, 544, 557, 562, 563, 569, 574
SANYO	546, 560
SHARP	535, 550, 577
TOSHIBA	535, 540, 541, 551

To control a VCR

Maker	Code(s)
SONY	701, 702, 703, 704, 705, 706
AIWA	710, 750, 757, 758
AKAI	707, 708, 709, 759
BLAUPUNKT	740
EMERSON	711, 712, 713, 714, 715, 716, 750
FISHER	717, 718, 719, 720
GENERAL	721, 722, 730
ELECTRIC(GE)	
GOLDSTAR/LG	723, 753

Maker	Code(s)
GRUNDING	724
HITACHI	722, 725, 729, 741
ITT/NOKIA	717
JVC	726, 727, 728, 736
MAGNAVOX	730, 731, 738
MITSUBISHI/MGA	732, 733, 734, 735
NEC	736
PANASONIC	729, 730, 737, 738, 739, 740
PHILIPS	729, 730, 731
PIONEER	729
RCA/PROSCAN	722, 729, 730, 731, 741, 747
SAMSUNG	742, 743, 744, 745
SANYO	717, 720, 746
SHARP	748, 749
TELEFUNKEN	751, 752
TOSHIBA	747, 756

To control a satellite tuner


Maker	Code(s)
SONY	801, 802, 803, 804, 824, 825, 865
AMSTRAD	845, 846
BskyB	862
GENERAL ELECTRIC(GE)	866
GRUNDING	859, 860
HITACHI/BITA	868
HUGHES	867
HUMAX	846, 847
JVC/Echostar/Dish Network	873
MITSUBISHI	872
NOKIA	851, 853, 854, 864
PACE	848, 849, 850, 852, 862, 863, 864
PANASONIC	818, 855
PHILIPS	856, 857, 858, 859, 860, 864, 874
RCA/PROSCAN	866, 871
SAMSUNG	875
THOMSON	857, 861, 864, 876
TOSHIBA	869, 870

To control a cable box

Maker	Code(s)
SONY	821, 822, 823
HAMLIN/REGAL	836, 837, 838, 839, 840
JERROLD	830, 831
JERROLD/G.I./	806, 807, 808, 809, 810, 811,
MOTOROLA	812, 813, 814
OAK	841, 842, 843
PANASONIC	816, 826, 832, 833, 834, 835
PHILIPS	830, 831
PIONEER	828, 829
RCA	805
SCIENTIFIC	815, 816, 817, 844
ATLANTA	
TOCOM/PHILIPS	830, 831
ZENITH	826, 827

Setting the speaker level

You can adjust the level and the balance of the speaker and subwoofer.

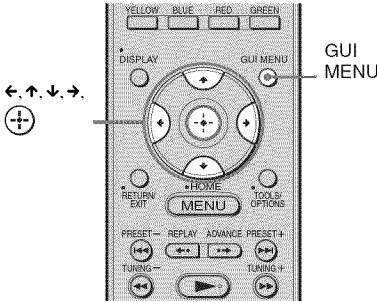

1 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press \uparrow/\downarrow repeatedly to select [Settings], then press \leftarrow or \rightarrow .

The settings menu appears.


3 Press \uparrow/\downarrow repeatedly to select [Level], then press \leftarrow .

The level menu appears.

4 Press \uparrow/\downarrow repeatedly to select the item you want, then press \leftarrow or \rightarrow .

- [Center Level]:
adjusts the speaker level.
- [Subwoofer Level]:
adjusts the subwoofer level.
- [D. Range Comp]:
compresses the dynamic range of the sound track.

5 Press \uparrow/\downarrow repeatedly to select the parameter you want, then press \leftarrow .

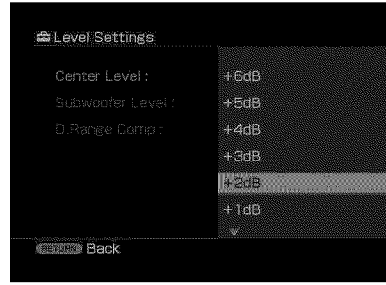

The parameter of [Center Level] and [Subwoofer Level] is from [-6dB] to [+6dB] in 1 dB steps. The default setting is [0dB].

The parameter of [D. Range Comp] is as follows.

- [MAX]:
compresses dynamic range fully.
- [STD]:
reproduces the sound track with the kind of dynamic range that the recording engineer intended.
- [OFF]:
no compression of dynamic range.

The default setting is underlined.


6 Press GUI MENU.

The GUI menu turns off.

Adjusting the delay between the sound and the image

(A/V Sync)

You can delay the sound using this function when the image is slower than the sound.

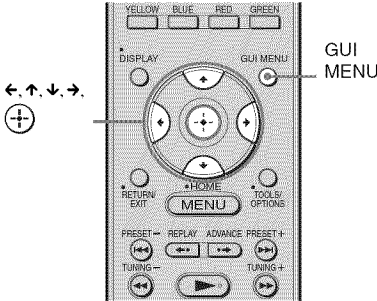

- 1 Press GUI MENU.**
“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.
- 2 Press ↑/↓ repeatedly to select [Settings], then press ⊕ or →.**
The settings menu appears.
- 3 Press ↑/↓ repeatedly to select [Audio], then press ⊕.**
The audio menu appears.
- 4 Press ↑/↓ repeatedly to select [A/V Sync], then press ⊕ or →.**
- 5 Press ↑/↓ repeatedly to select the parameter you want, then press ⊕.**
 - [0 ms]: no adjustment is made.
 - [10 ms] - [200 ms]: adjusts from [10 ms] to [200 ms] in 10 ms steps.
- 6 Press GUI MENU.**
The GUI menu turns off.

Notes

- You may not be able to adjust the delay between sound and image perfectly using this function.
- This function is useful only for optical/coaxial/HDMI input Dolby Digital, DTS and Linear PCM (2ch).


Enjoying multiplex broadcast sound

(Dual Mono)

You can enjoy multiplex broadcast sound when the system receives an AC-3 multiplex broadcast signal.

Note

- To receive AC-3 signal, you need to connect a digital satellite tuner to the system with a digital optical cord, digital coaxial cord, or an HDMI cable, and set the digital output mode of the digital satellite tuner to AC-3.

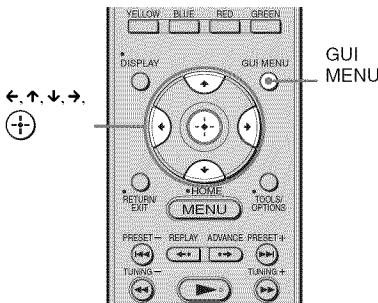

- [Main]: plays back only the main channel.
- [Sub]: plays back only the sub channel.

6 Press GUI MENU.

The GUI menu turns off.

1 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press \uparrow/\downarrow repeatedly to select [Settings], then press \oplus or \rightarrow .

The settings menu appears.

3 Press \uparrow/\downarrow repeatedly to select [Audio], then press \oplus .

The audio menu appears.

4 Press \uparrow/\downarrow repeatedly to select [Dual Mono], then press \oplus or \rightarrow .

5 Press \uparrow/\downarrow repeatedly to select the setting you want, then press \oplus .

- [Main/Sub]: main sound is output from the left side of the speaker and the sub sound is output from the right side of the speaker.


Reassigning the audio input

(Audio Assign)

You can reassign an audio input that has an audio (analog) signal to the “VIDEO 2” function, if TV ASSIGNABLE AUDIO IN jacks are not being used.

To output the audio source of a component that has analog audio jacks:

- Connect the audio jacks of the component to the TV ASSIGNABLE AUDIO IN jacks.
- Assign “VIDEO 2” function.

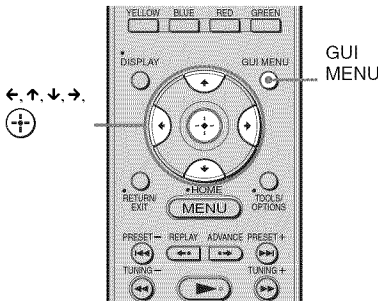

1 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press ↑/↓ repeatedly to select [Settings], then press (+) or →.

The settings menu appears.

3 Press ↑/↓ repeatedly to select [Audio], then press (+).

The audio menu appears.

4 Press ↑/↓ repeatedly to select [Audio Assign], then press (+) or →.

5 Press ↑/↓ to select [VIDEO 2], then press (+).

The TV ASSIGNABLE AUDIO IN jacks are assigned to the “VIDEO 2” function. The default setting is “TV,” meaning the TV ASSIGNABLE AUDIO IN jacks are assigned to the “TV” function.

6 Press GUI MENU.

The GUI menu turns off.

Notes

- When images of an audio component are output, the sound may not be output. In this case, check the following:
 - Confirm the audio analog input jacks correspond with the function.
 - Reassign the function.
- You cannot use the analog audio input for the original input if it has been reassigned to another input.
- You cannot reassign the analog audio input to other than the “TV” or “VIDEO 2” function.

Converting the resolution of analog video input signals

(Resolution)

You can change the resolution of analog video input signals using the [Video] settings menu. You cannot set this function for HDMI video input signal.

For details on resolution, see “Video input/output conversion table” (page 36).


undesirable, try another setting that suits your TV.

- [480/576p]: Outputs 480p/576p video signals.
- [720p]: Outputs 720p video signals.
- [1080i]: Outputs 1080i video signals.
- [1080p]: Outputs 1080p video signals.

For details on operating, see “Video input/output conversion table” (page 36).

6 Press GUI MENU.

The GUI menu turns off.

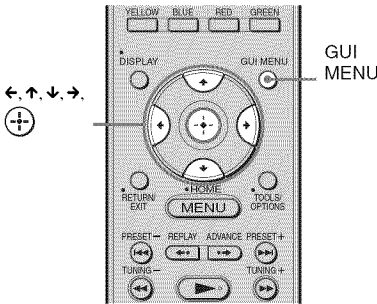

1 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press ↑/↓ repeatedly to select [Settings], then press ⊕ or →.

The settings menu appears.

3 Press ↑/↓ repeatedly to select [Video], then press ⊕.

[Resolution] appears.

4 Press ⊕ or →.

The parameter menu appears.


5 Press ↑/↓ repeatedly to select the desired parameter, then press ⊕.

- [AUTO]: Normally select this. The unit outputs signals starting from the highest resolution acceptable to the TV. If the resulting image format is

Enjoying higher quality HDMI images

(Video Direct)

This function lets you output video signals from the HDMI input (BD IN, DVD IN, SAT/CATV IN) jacks directly to the HDMI TV OUT jack.

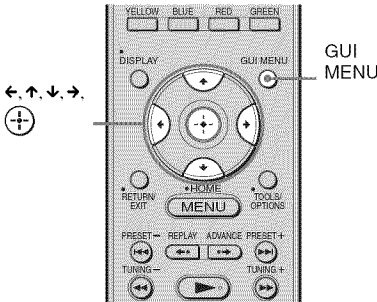

1 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press \uparrow/\downarrow repeatedly to select [Settings], then press \oplus or \rightarrow .

The settings menu appears.

3 Press \uparrow/\downarrow repeatedly to select [HDMI], then press \oplus .

The HDMI menu appears.

4 Press \uparrow/\downarrow repeatedly to select [Video Direct], then press \oplus or \rightarrow .

5 Press \uparrow/\downarrow to select [OFF] or [ON], then press \oplus .

- [OFF]: The input signals from the HDMI input (BD IN, DVD IN, SAT/CATV IN) jacks are output through a video processor.

- [ON]: The signals from the HDMI input (BD IN, DVD IN, SAT/CATV IN) jacks are output directly. This setting enables higher quality image reproduction.

6 Press GUI MENU.

The GUI menu turns off.


Note

- When the video direct function is set to on, the volume bar and the information about functions do not appear on the TV screen.

Changing the brightness of the front panel display

(Dimmer)

The brightness of the front panel display can be set to one of 2 levels.

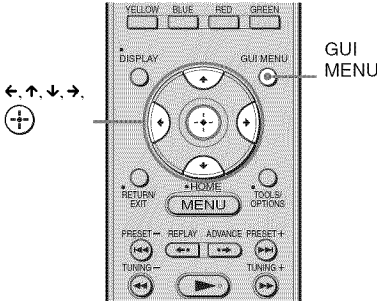


- 1 Press GUI MENU.**
“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.
- 2 Press \uparrow/\downarrow repeatedly to select [Settings], then press \oplus or \rightarrow .**
The settings menu appears.
- 3 Press \uparrow/\downarrow repeatedly to select [System], then press \oplus .**
The system menu appears.
- 4 Press \uparrow/\downarrow repeatedly to select [Dimmer], then press \oplus or \rightarrow .**
- 5 Press \uparrow/\downarrow to select the setting you want, then press \oplus .**
 - [ON]: dim.
 - [OFF]: bright.
- 6 Press GUI MENU.**
The GUI menu turns off.

Changing the display setting

(Display)

You can change the display setting of the front panel display.

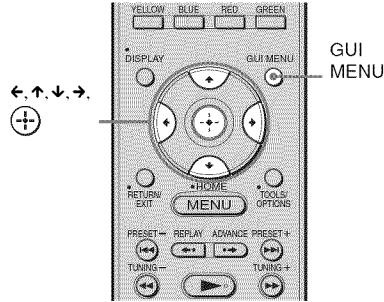

- 1 Press GUI MENU.**
“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.
- 2 Press \uparrow/\downarrow repeatedly to select [Settings], then press \oplus or \rightarrow .**
The settings menu appears.
- 3 Press \uparrow/\downarrow repeatedly to select [System], then press \oplus .**
The system menu appears.
- 4 Press \uparrow/\downarrow repeatedly to select [Display], then press \oplus or \rightarrow .**
- 5 Press \uparrow/\downarrow to select the setting you want, then press \oplus .**
 - [ON]: the display remains on all the time.
 - [OFF]: the display appears for a moment when you operate the system.

Note

- The display remains on all the time when the protection function is working, even if you set the [Display] to [OFF].

- 6 Press GUI MENU.**
The GUI menu turns off.


Using an S-AIR product

The system is compatible with the S-AIR function (page 102), which allows sound transmission between the system and an S-AIR receiver (not supplied).

About S-AIR products

There are two types of S-AIR products.

- S-AIR main unit (this subwoofer): This is for transmitting sound. You can use up to three S-AIR main units. (The number of usable S-AIR main units depends on the use environment.)
- S-AIR sub unit (S-AIR receiver) (not supplied): This is for receiving sound. You can enjoy system sound in another room.

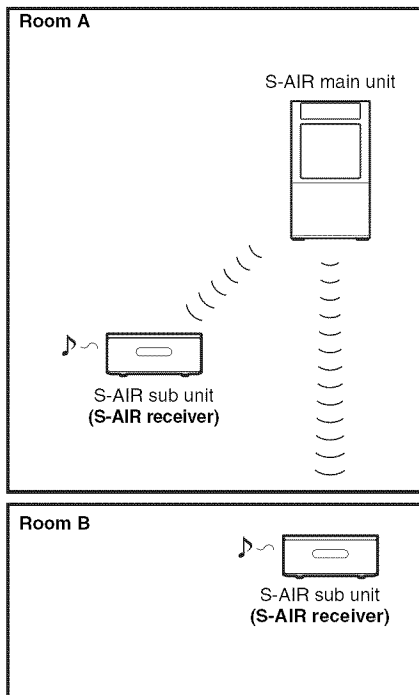

Inserting the wireless transmitter/transceiver



To make use of the S-AIR function, you need to insert the wireless transmitter into the subwoofer and the wireless transceiver into the S-AIR sub unit.

Notes

- When you insert the wireless transmitter/transceiver, make sure that the AC power cord (mains lead) is not connected to a wall outlet (mains).
- Do not touch the terminals of the wireless transmitter/transceiver.

To insert the wireless transmitter into the subwoofer

- 1 Remove the screws and detach the slot cover.

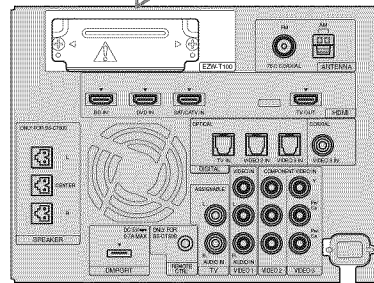
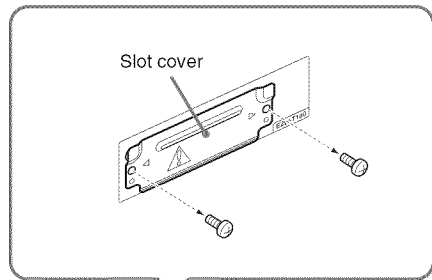


Rear of the subwoofer

Notes

- Remove the screws from the slot cover bearing the caution mark. Do not remove other screws.
- The slot cover is no longer necessary; however, keep it after detaching.



2 Insert the wireless transmitter.

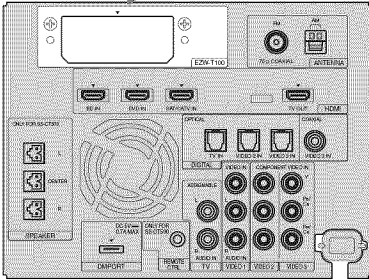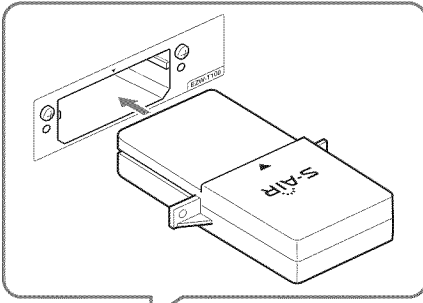

Notes

- Insert the wireless transmitter with the S-AIR logo facing up.
- Insert the wireless transmitter so that the ▼ marks are aligned.
- Do not insert anything other than the wireless transmitter into the EZW-T100 slot.

3 Make sure to use the same screws to secure the wireless transmitter.

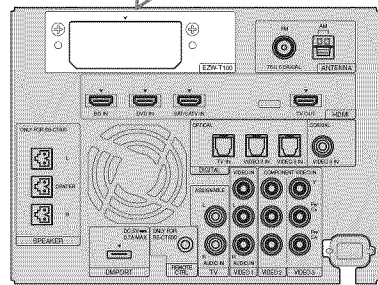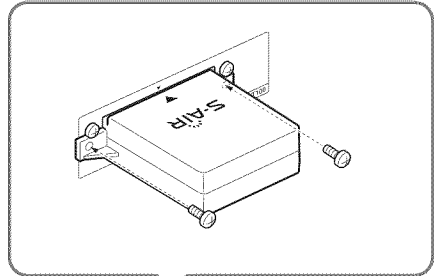

Note


- Do not use other screws to fasten the wireless transmitter.

To insert the wireless transceiver into the S-AIR sub unit

For details on installing the wireless transceiver into the S-AIR sub unit, refer to the operating instructions of the S-AIR sub unit.

Establishing sound transmission between the subwoofer and S-AIR sub unit (ID setting)


Simply by matching the ID of the subwoofer and the S-AIR sub unit, you can establish sound transmission.

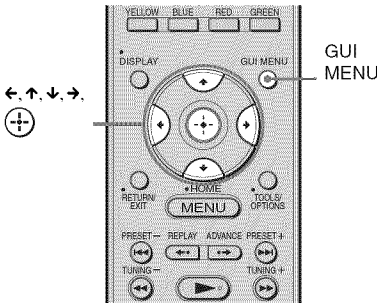

To set the ID of the subwoofer

- 1** Turn on the subwoofer.
The subwoofer turns on.
 - 2** Press GUI MENU.
“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.
 - 3** Press \uparrow/\downarrow repeatedly to select [Settings], then press \oplus or \rightarrow .
The settings menu appears.
 - 4** Press \uparrow/\downarrow repeatedly to select [S-AIR], then press \oplus .
- Note**
- When the S-AIR transmitter (not supplied) is not inserted into the subwoofer, [S-AIR] cannot be selected.
- 5** Press \uparrow/\downarrow repeatedly to select [S-AIR ID], then press \oplus or \rightarrow .
The S-AIR ID menu appears.
 - 6** Press \uparrow/\downarrow to select the desired ID (A, B, or C), then press \oplus .
The ID of the subwoofer is set, and the message, [Set S-AIR ID of the sub unit to the same as that of the main unit.], appears.

- 7** Press \oplus to set the ID of the S-AIR sub unit.
- 8** Press GUI MENU.
The GUI menu turns off.
- 9** Set the S-AIR sub unit to the same ID.
Sound transmission is established as follows (example):

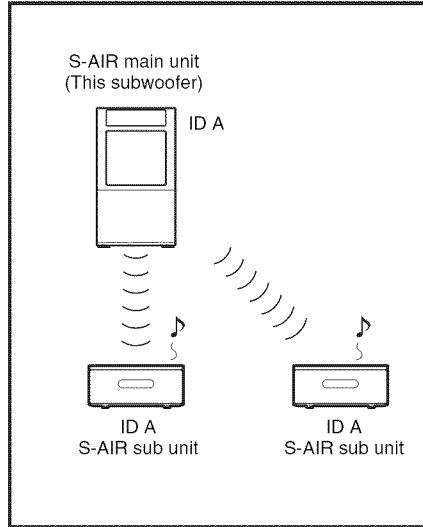

Tip


- To confirm the current ID, perform steps 1 to 3 above. When you pair the subwoofer with the S-AIR sub unit (page 90), [(Pairing)] appears beside the ID on the TV screen in the GUI menu.

To set the ID of the S-AIR receiver

Refer to the operating instructions of the S-AIR receiver.

To use multiple S-AIR main units

You can use multiple S-AIR main units by setting a different ID for each component.

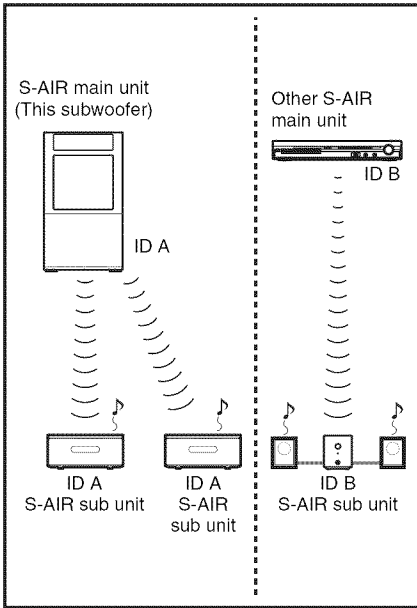


Enjoying the system's sound in another room

You can enjoy the system's sound by using the S-AIR receiver. The S-AIR receiver can be placed in another room for enjoying the system's sound there.

For details of the S-AIR receiver, refer to the operating instructions of the S-AIR receiver.

Note

- Sources with copyright protection may not be playable on S-AIR receivers.

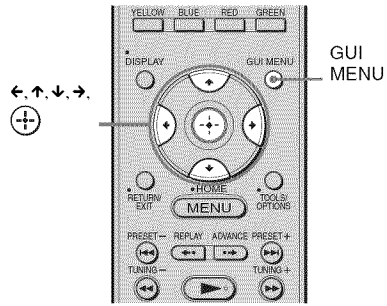

1 Press GUI MENU.

"GUI MENU" appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press \uparrow/\downarrow repeatedly to select [Settings], then press \oplus or \rightarrow .

The settings menu appears.

3 Press \uparrow/\downarrow repeatedly to select [S-AIR], then press \oplus .

The S-AIR menu appears.

Note

- When the S-AIR transmitter (not supplied) is not inserted into the subwoofer, [S-AIR] cannot be selected.

4 Press \uparrow/\downarrow repeatedly to select [S-AIR Mode], then press \oplus .

5 Press \uparrow/\downarrow to select the desired setting, then press \oplus .

- [Party]: The S-AIR receiver outputs sound according to functions set on the subwoofer.
- [Separate]: You can set the desired function for the S-AIR receiver while functions of the subwoofer do not change.

6 Press GUI MENU.

The GUI menu turns off.

7 Select the desired function on the S-AIR receiver.

- When [Party] is set

The **S-AIR receiver's** function changes sequentially as you press INPUT SELECTOR of the main unit (page 47) or S-AIR CH of the S-AIR receiver.

■ When [Separate] is set

The **S-AIR receiver's** function changes by pressing S-AIR CH of the S-AIR receiver as follows.

“MAIN UNIT” → “TUNER FM” →
 “TUNER AM” → “DMPORT” → ...

To enjoy the same function as the subwoofer, select “MAIN UNIT.”

When “TUNER FM” or “TUNER AM” is selected on the subwoofer, you can only select the same band for the tuner on the S-AIR receiver. When you select other than “TUNER FM” or “TUNER AM” on the subwoofer, you can select any band for the tuner on the S-AIR receiver.

8 Adjust the volume on the S-AIR receiver.

Note

- When the sound is other than 2 channel stereo, multi-channel sound is downmixed to 2 channel.

To control the system from the S-AIR receiver


You can control the system from the S-AIR receiver by using the following buttons.

Press	Operation
▶, II, ■, ◀▶▶▶	Share the same operations on the remote.
S-AIR CH	Change the function of the system.

For details, refer to the operating instructions of the S-AIR receiver.

Enjoying the S-AIR receiver while the subwoofer is in standby mode

You can enjoy the S-AIR receiver while the subwoofer is in standby mode by setting [S-AIR Standby] to [ON].

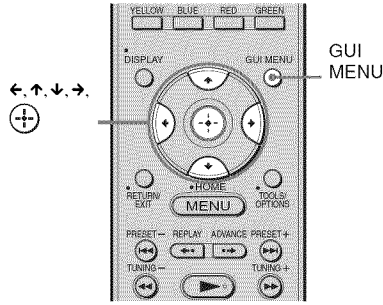

1 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press ↑/↓ repeatedly to select [Settings], then press (+/-) or →.

The settings menu appears.

3 Press ↑/↓ repeatedly to select [S-AIR], then press (+/-).

The S-AIR menu appears.

Note

- When the S-AIR transmitter (not supplied) is not inserted into the subwoofer, [S-AIR] cannot be selected.

4 Press ↑/↓ repeatedly to select [S-AIR Standby], then press (+/-).

5 Press ↑/↓ to select the desired setting, then press (+/-).

- [ON]: You can enjoy the S-AIR receiver while the subwoofer is in standby mode or turned on. The power consumption during the standby mode increases.
- [OFF]: You cannot enjoy the S-AIR receiver while the subwoofer is in standby mode.

6 Press GUI MENU.

The GUI menu turns off.

Note


- When you turn the system off while [S-AIR Standby] is set to [ON], the POWER / ACTIVE STANDBY indicator in the front panel display lights up in amber.

Identifying the subwoofer with a specific S-AIR sub unit (Pairing operation)

It is easy to set the same ID for the subwoofer and an S-AIR sub unit to establish sound transmission. However, neighbors may also receive your system's sound if IDs are the same, or you may receive sound from neighbors. To prevent this, you can identify the subwoofer with a specific S-AIR sub unit by performing the pairing operation.


■ Before pairing

Sound transmission is established by ID (example).

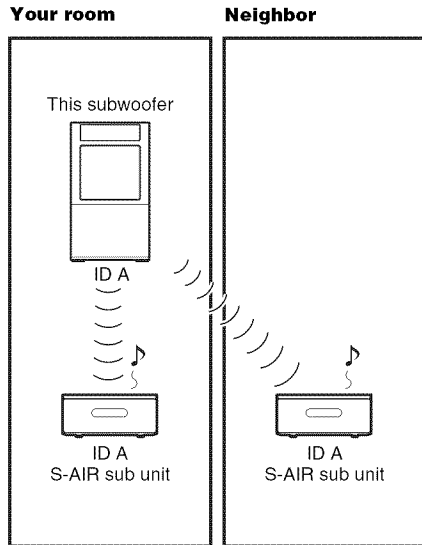


■ After pairing

Sound transmission is established between the paired subwoofer and S-AIR sub unit(s) only.

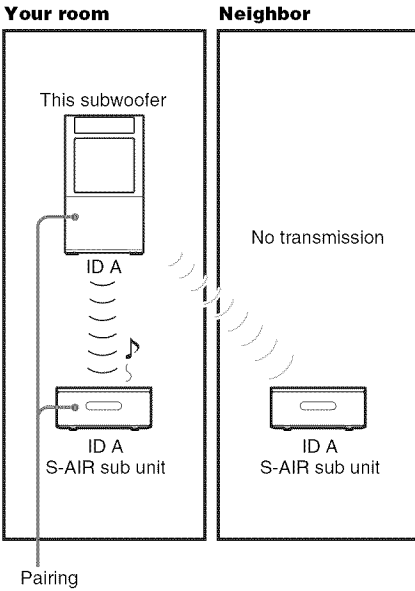

To perform pairing

- 1 Place the S-AIR sub unit that you want to pair near the subwoofer.
- 2 Match the IDs of the subwoofer and the S-AIR sub unit.
 - To set the ID of the subwoofer, see “To set the ID of the subwoofer” (page 87).
 - To set the ID of the S-AIR sub unit, refer to the operating instructions of the S-AIR sub unit.

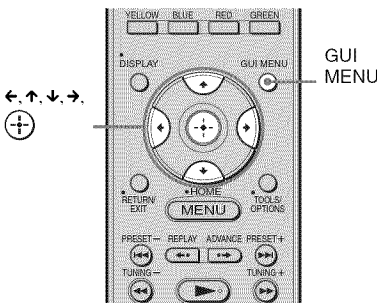

3 Press GUI MENU.

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

4 Press ↑/↓ repeatedly to select [Settings], then press ⊕ or →.

The settings menu appears.

5 Press ↑/↓ repeatedly to select [S-AIR], then press ⊕.

The S-AIR menu appears.

Note

- When the S-AIR transmitter (not supplied) is not inserted into the subwoofer, [S-AIR] cannot be selected.

6 Press ↑/↓ repeatedly to select [Pairing Start], then press ⊕.

The message, [Put the S-AIR sub unit near the S-AIR main unit, and turn on power. Start pairing], appears on the TV screen. The subwoofer is ready to start pairing.

7 Press ←/→ to select [Yes], then press ⊕.

The subwoofer starts pairing and the message, [Pairing. Do the pairing operation with the S-AIR sub unit.] appears.

8 Start pairing of the S-AIR sub unit.

Refer to the operating instructions of the S-AIR sub unit.

Notes

- Perform pairing within five minutes in step 6. If you do not, pairing is recognized as failed, and the screen changes accordingly. In this case, see “If pairing fails” (page 92).
- When sound transmission is established, the message, [Pairing complete. To perform pairing to another S-AIR sub unit, select “Continue”.] appears.

9 Press ←/→ to select [Finish] or [Continue], then press ⊕.

- [Finish]: finishes pairing.
- [Continue]: Continues to perform pairing to another S-AIR sub unit.

continued

Tip

- You can confirm the pairing completion or the current ID by checking the [S-AIR Settings] screen. [(Pairing)] appears beside the current S-AIR ID.

10 Press GUI MENU.

The GUI menu turns off.

Note

- After you have performed pairing, if you select the [S-AIR ID] menu (page 90), the ID setting ([A], [B], or [C]) that you last used is displayed.

If pairing fails

The message, [Pairing failed. Retry?], appears. To perform pairing again, select [Yes]. To finish pairing, select [No].

To quit pairing during setting


Press RETURN/EXIT.

To cancel pairing

Perform the ID setting of the subwoofer according to the procedure of “To set the ID of the subwoofer” (page 87). If you reset the ID (even the same ID again), pairing is canceled.

If sound transmission is unstable

If you use multiple wireless systems that share the 2.4 GHz band, such as wireless LAN or Bluetooth, the transmission of S-AIR products or other wireless systems may be unstable. In this case, the transmission may be improved by changing the following [RF Change] setting.

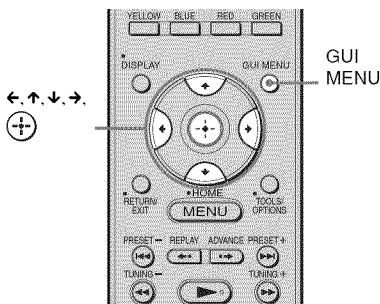**1 Press GUI MENU.**

“GUI MENU” appears in the front panel display of the subwoofer and the GUI menu appears on the TV screen.

2 Press \uparrow/\downarrow repeatedly to select [Settings], then press \oplus or \rightarrow .

The settings menu appears.

3 Press \uparrow/\downarrow repeatedly to select [S-AIR], then press \oplus .

The S-AIR menu appears.

Note

- When the S-AIR transmitter (not supplied) is not inserted into the subwoofer, [S-AIR] cannot be selected.

4 Press \uparrow/\downarrow repeatedly to select [RF Change], then press \oplus or \rightarrow .

5 Press \uparrow/\downarrow repeatedly to select the desired setting, then press \oplus .

- [AUTO]: Normally select this. The system changes [RF Change] to [ON] or [OFF] automatically.
- [ON]: The system transmits sound by searching for a better channel for transmitting.
- [OFF]: The system transmits sound by fixing the channel for transmitting.

6 Press GUI MENU.

The GUI menu turns off.

7 When you set [RF Change] to [OFF], select the ID so that sound transmission is most stable (page 87).

Notes

- In most cases, you will not need to change this setting.
 - If [RF Change] is set to [OFF], transmission between the subwoofer and S-AIR sub unit can be performed using one of the following channels.
 - S-AIR ID A: equivalent channel for IEEE 802.11b/g channel 1
 - S-AIR ID B: equivalent channel for IEEE 802.11b/g channel 6
 - S-AIR ID C: equivalent channel for IEEE 802.11b/g channel 11
- The transmission may be improved by changing the transmission channel (frequency) of the other wireless system(s). For details, refer to the operating instructions of the other wireless system(s).

Stabilizing S-AIR reception

Read the following when S-AIR reception is poor or unstable.

Confirm the wireless adapters are inserted correctly (page 85).

Confirm that the S-AIR IDs of the S-AIR main unit and sub unit are the same (page 87).


About environments where S-AIR products (S-AIR main unit and sub unit) are used

S-AIR products use a radio frequency of 2.4 GHz. Certain electronic equipment or other factors may cause lost connection or instability in S-AIR reception.

Electronic equipment influence

The following may cause interference or cross talk.

- Cellular phones, cordless phones
- Wireless LAN, personal computers
- Game machines using radio signals
- Microwave ovens

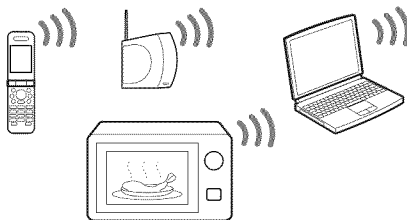

Other factors

The following may cause poor reception.

- Materials or structures, such as walls and floors
- The location where an S-AIR product is placed


When using S-AIR products, place them as far as possible from the above electronic equipment, or place where S-AIR reception is stable.

continued

When S-AIR reception is poor


Check the following.

Keep cords that are connected to the S-AIR product (AC power cord (mains lead), speaker cords, or other cords) away from the wireless adapter and slot.

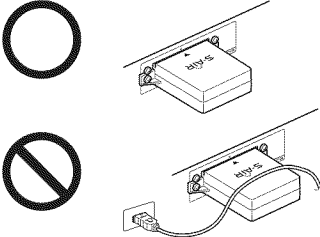


Keep as much space as possible around S-AIR products.

Avoid placing S-AIR products on top of, or directly below, other electronic equipment. Avoid placing S-AIR products in a closed rack, metal rack, or under a table.

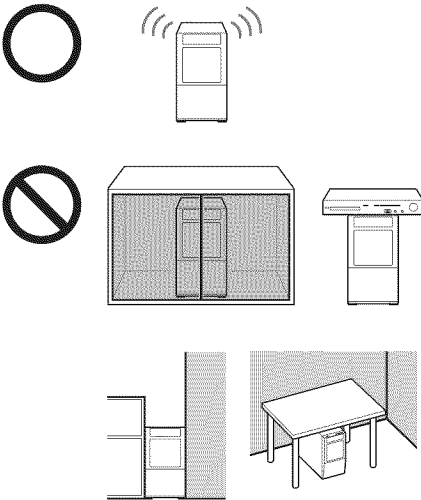

 
Adjust the location (height, orientation, and place in the room) of S-AIR products until reception is the most stable.



Place so that the wireless adapters of the S-AIR main unit and sub unit are closer.



 Place so that S-AIR products are separated from other wireless devices.




Place so that S-AIR products are separated from metal doors or tables.

If you cannot improve S-AIR reception, change the “RF Change” setting (page 92).

Settings and adjustments using the system menu

Using the system menu

You can set the following items with SYSTEM MENU on the remote. Check the front panel display to confirm the setting.

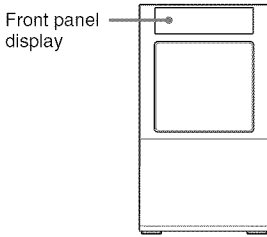

The default settings are underlined.

LEVEL	CNT LEVEL	— <u>6</u> ... <u>0</u> ...+6
	SW LEVEL	— <u>6</u> ... <u>0</u> ...+6
	AUDIO DRC	— <u>MAX</u> — <u>STD</u> — <u>OFF</u>

TONE	BASS	— <u>6</u> ... <u>0</u> ...+6
	TREBLE	— <u>6</u> ... <u>0</u> ...+6

AUDIO	A/V SYNC ¹⁾	— <u>0ms</u> , 10ms, ... 200ms
	DUAL MONO	— <u>MAIN</u> /SUB — <u>MAIN</u> — SUB
	A. ASSIGN	— <u>TV</u> — VIDEO 2
	NIGHT MODE	— <u>ON</u> — <u>OFF</u>

VIDEO	RESOLUTION ²⁾	— <u>AUTO</u> — 480/576p — 720p — 1080i — 1080p
-------	--------------------------	---

SET HDMI ³⁾	CTRL: HDMI	— <u>ON</u> — OFF
	VOL LIMIT ⁴⁾	— <u>MAX</u> , 49, 48, ..., 2, 1, MIN
	PASS THRU ⁴⁾	— <u>AUTO</u> — <u>ON</u> — <u>OFF</u>
	V. DIRECT	— <u>ON</u> — <u>OFF</u>

SYSTEM	DIMMER	— <u>ON</u> — <u>OFF</u>
	DISPLAY	— <u>ON</u> — <u>OFF</u>
	SLEEP	— <u>OFF</u> , 10M, 20M, ..., 90M

SET S-AIR ⁵⁾	S-AIR ID	— <u>A</u> — B — C
	S-AIR MODE	— <u>PARTY</u> — SEPARATE
	RF CHANGE	— <u>AUTO</u> — <u>ON</u> — <u>OFF</u>
	S-AIR STBY	— <u>ON</u> — <u>OFF</u>
	PAIRING	— START

1) This setting is only for the optical and coaxial input signals.

2) When you select the “BD,” “DVD,” or “SAT/CATV” function, “RESOLUTION” does not appear. “RESOLUTION” will also not appear when the picture via the HDMI input is shown on the TV screen.

3) See “Preparing for the “BRAVIA” Sync” (page 60).

4) This setting appears only when “CTRL: HDMI” is set to “ON.”

5) This setting appears only when you insert the S-AIR transmitter (not supplied).

1 Press **SYSTEM MENU** to turn on the system menu.

2 Press **←/↑/↓/→** repeatedly to select the item and the setting.

3 Press SYSTEM MENU to turn off the system menu.


You can make these settings except “SLEEP” by GUI menu, too. For details, see “Step 6: Operating the system using the GUI” (page 39).

For corresponding menu items in the system menu and GUI menu, see “Overview of the menus” (page 104).

Using the sleep timer

(SLEEP)

You can set the system to turn off at a preset time when you go to sleep listening to music. You can preset the time from 10 minutes to 90 minutes in 10 minute steps.

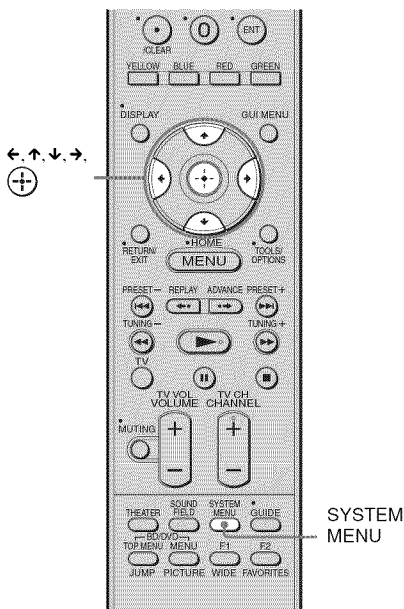

- 1 Press SYSTEM MENU.
- 2 Press \uparrow/\downarrow repeatedly until “SYSTEM” appears, then press \leftarrow or \rightarrow .
- 3 Press \uparrow/\downarrow repeatedly until “SLEEP” appears, then press \leftarrow or \rightarrow .
- 4 Press \uparrow/\downarrow to select the preset time.
The minutes display (the remaining time) changes as follows:
OFF \leftrightarrow 10M \leftrightarrow 90M \leftrightarrow OFF
- 5 Press SYSTEM MENU.
The system menu turns off.

Note

- This function is only for this system, not for the connected TV or other components.

Additional Information

Troubleshooting

If you experience any of the following difficulties while using the system, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer. When bringing the system in for repairs, be sure to bring in the entire system.

When you install the S-AIR sub unit (optional), in the event of a problem with the S-AIR function, have a Sony dealer check the entire system together (main unit and S-AIR sub unit).

General

The power is not turned on.

- Check that the AC power cord (mains lead) is connected securely.

If “PROTECTOR” and “PUSH POWER” appear alternately in the front panel display.

Press I/⏻ to turn off the system, and check the following item after “STANDBY” disappears.

- Check if something is blocking the ventilation holes of the system.

After checking the above item and fixing any problems, turn on the system. If the cause of the problem still cannot be found, consult your nearest Sony dealer.

Dolby Digital or DTS multi channel sound is not reproduced.

- Check that the playing Blu-ray Disc, DVD, etc., is recorded in Dolby Digital or DTS format.
- Check that audio setting (settings for the audio output) of the connected component.

The surround effect cannot be obtained.

- Change to another input by pressing the input button (TV, BD, DVD, SAT/CATV, DMPort, VIDEO1, VIDEO2, VIDEO3, or TUNER/BAND) on the remote, and then go back to the input you want to check. If “2.0ch” or “1.0ch” is displayed in the front panel display, the signal is stereo or

monaural and does not include multi channel sound. If “5.1ch,” etc., is displayed, the signal is multi channel, but the surround effect may be low depending on the program or disc.

- Depending on the digital signal, the surround processing may not work (page 57).

No sound or only a very low-level sound is heard from the speakers.

- Press TV VOL VOLUME + and check the volume level.
- Press MUTING or TV VOL VOLUME + to cancel the muting function.
- Press SOUND FIELD and check the selected sound field.
- Depending on the source, the sound effect of the speakers may be less noticeable.
- Check the speaker connection (page 25).

The sound comes out only from the speaker, not the subwoofer.

- Depending on the disc, the sound may come from the speaker only.

The sound is delayed compared to the image of the TV.

- Set [A/V Sync] to [0 ms] when [A/V Sync] is set to between [10 ms] and [200 ms].

Connected components

There is no sound or only a very low-level sound no matter which component is selected.

- Check that this system and components are connected correctly and securely.
- Check that both this system and the selected component are turned on.

There is no sound from the selected component.

- Check that the component is connected correctly to the audio input jacks for that component.
- Check that the cords are fully inserted into the jacks on both the component and this system.
- Check that the component is selected correctly.

- If you resume playing a disc when volume is maximum, there may be no sound. In this case, turn down the volume, turn off the system and then turn it on again.

Sound is interrupted or there is noise.

- Check the output audio formats supported by this system (page 100).

There is no picture or an unclear picture appears on the TV screen.

- Check that the TV is selected correctly.
- Set the TV to the appropriate input mode.
- Move your audio components away from the TV.
- If a video signal other than those supported by the system is input, the image may be distorted.
- The resolution setting may not be appropriate. Use the “RESOLUTION” menu in the system menu to change the resolution setting until the picture on the TV screen is satisfactory (page 95).
- The GUI menu does not appear properly when the resolution of the HDMI-connected component’s video output is set to 480i or 576i. In this case, adjust the resolution of the component’s video output to 480p or 576p, or higher.

The source image (input via the HDMI jack) on the subwoofer is distorted, interrupted or not output from the TV.

- Check the HDMI connection.
- Depending on the playback component, you may need to set up the component. Refer to the operating instructions of each component.
- Use a High Speed HDMI cable. If you use a Standard HDMI cable, 1080p or Deep Color images may not be displayed properly.
- Depending on the HDMI-connected component, the image on the TV screen may be distorted. In this case, set the [Video Direct] setting in the [HDMI] menu to [ON] (page 83).

There is a picture on the TV screen but no sound.

- Check that the audio assignable setting is correct (page 81).

Control for HDMI

The Control for HDMI function does not work.

- Check the HDMI connection (page 27).
- Make sure [Control for HDMI] is set to [ON] in the GUI menu.
- Make sure the connected component is compatible with the Control for HDMI function.
- Check the Control for HDMI settings on the connected component. For details, refer to the operating instructions of the component.
- If you change the HDMI connection, or connect/disconnect the AC power cord (mains lead), or if there is a power failure, repeat the procedures of “Preparing for the “BRAVIA” Sync” (page 60).
- The system may not work correctly if you select a component that is not compatible with the Control for HDMI function on the TV side.

No sound is output from the system and the TV’s speaker.

- Check the volume of the system and the TV.
- Select the input of the system correctly.

The sound is output from both the system and the TV.

- If the Control for HDMI function is set to off, or the selected component is not compatible with the Control for HDMI function, turn off the sound of the system or the TV.

The System Power Off function does not work.

- Change the setting of the TV to turn connected components off automatically when you turn off the TV. For details, refer to the operating instructions of the TV.

An image does not appear on the TV.

- Check whether HDMI IN and HDMI OUT are connected correctly.

When the system is in standby mode, there is no image or sound on the TV.

- When the system is in standby mode, image and sound are output from the HDMI component selected the last time you turned off the system. To enjoy another component, play the component and perform the One-Touch Play operation, or turn on the system to select the HDMI component you want to enjoy.
 - Make sure [HDMI Pass Through] is set to [ON] in the GUI menu if you connect components not compatible with the “BRAVIA” Sync to the system (page 65).
-

S-AIR function

Sound transmission is not established.

- If you use another S-AIR main unit, place it more than 8 m (about 25 feet) away from the system.
 - Confirm that the S-AIR IDs of the subwoofer and the S-AIR sub unit are the same (page 87).
 - Another S-AIR sub unit is paired to the S-AIR main unit. Pair the desired S-AIR sub unit with the S-AIR main unit (page 90).
 - Place so that the S-AIR main unit and S-AIR sub unit are separated from other wireless devices.
 - Avoid using any other wireless devices.
 - The S-AIR sub unit is turned off. Make sure the AC power cord (mains lead) is connected and turn on the S-AIR sub unit.
-

No sound is heard from the S-AIR product.

- If you use another S-AIR main unit, place it more than 8 m (about 25 feet) away from the S-AIR main unit you are using.
- Confirm that the S-AIR IDs of the subwoofer and the S-AIR sub unit are the same (page 87).
- Check the pairing setting (page 90).
- Place the S-AIR main unit and S-AIR sub unit closer together.
- If you are using any equipment that generates electromagnetic energy such as a microwave oven near an S-AIR product,

turn off the equipment and try using the S-AIR product again after waiting for a short time.


- Avoid using any other wireless devices.
 - Change the [RF Change] setting (page 92).
 - Change the ID settings of the S-AIR main unit and S-AIR sub unit.
 - Turn off the system and S-AIR sub unit, then turn them on again.
 - The system does not support S-AIR devices other than S-AIR receivers.
 - Wireless surround amplifiers cannot be used with this system.
-

There is noise or the sound skips.

- If you use another S-AIR main unit, place it more than 8 m (about 25 feet) away from the S-AIR main unit you are using.
 - Sources with copyright protection may not be playable on S-AIR receivers.
 - Place the S-AIR main unit and S-AIR sub unit closer together.
 - If you are using any equipment that generates electromagnetic energy such as a microwave oven near an S-AIR product, turn off the equipment and try using the S-AIR product again after waiting for a short time.
 - Place so that the S-AIR main unit and S-AIR sub unit are separated from other wireless devices.
 - Avoid using any other wireless devices.
 - Change the [RF Change] setting (page 92).
 - Change the ID settings of the S-AIR main unit and S-AIR sub unit.
-

Other

The remote does not function.

- Make sure that the connectors for the remote control are connected to each REMOTE CTRL jack of the subwoofer and the speaker.
- Point the remote at the remote sensor  in the front panel display of the subwoofer or the speaker.

- Remove any obstacles in the path between the remote and the front panel display.
- Replace both batteries in the remote with new ones, if they are weak.
- Make sure you select the correct input on the remote.

The volume turns down when the output method changes from the TV speaker to the system speaker.

- The Volume Limit function is working. For details, see “Using the Volume Limit function” (page 62).

If the system still does not operate properly after performing the above measures, reset the system as follows:

Use the buttons on the subwoofer for this operation.

- 1** Press **I/⏻** to turn on the power.
- 2** Press **INPUT SELECTOR, VOLUME -**, **I/⏻** at the same time.
“COLD RESET” appears and the system is reset. The system menu, sound field, etc., return to the default settings.

Specifications

Formats supported by this system

Digital input formats supported by this system are as follows.

Format	Supported/Not supported
Dolby Digital	○
DTS	○
Linear PCM (2ch)*	○
Linear PCM (5.1ch, 7.1ch)* (Only on HDMI)	○
Dolby Digital Plus	×
Dolby True HD	×
DTS-HD	×

* Linear PCM accepts sampling frequencies of no more than 48 kHz.

AUDIO POWER SPECIFICATIONS for the U.S. model

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 4 ohm loads, both channels driven, from 180 - 20,000 Hz; rated 60 watts per channel minimum RMS power, with no more than 1 % total harmonic distortion from 250 milli watts to rated output.

Amplifier Section

U.S. models:

Power output (reference): RMS output power
FL/FR/C*: 100 watts (per channel at 4 ohms, 1 kHz, 10 % THD)
Subwoofer: 100 watts (4 ohms, 100 Hz, 10 % THD)

Canadian models:

Power output (rated): FL/FR: 80 W + 80 W (at 4 ohms, 1 kHz, 1 % THD)

Power output (reference): RMS output power
FL/FR/C*: 100 watts (per channel at 4 ohms, 1 kHz, 10 % THD)
Subwoofer: 100 watts (4 ohms, 100 Hz, 10 % THD)

* Depending on the sound field settings and the source, there may be no sound output.

Inputs (Analog)

TV, VIDEO 1 Sensitivity: 550 mV
 Impedance: 33 kohms

Inputs (Digital)

TV, VIDEO 2 Optical
 VIDEO 3 Coaxial, optical

HDMI section

Connector HDMI™ connector
 Video inputs/outputs BD, DVD, SAT/CATV:
 640 × 480p@60 Hz
 720 × 480p@59.94/60 Hz
 1280 × 720p@59.94/60 Hz
 1920 × 1080i@59.94/
 60 Hz
 1920 × 1080p@59.94/
 60 Hz
 720 × 576p@50 Hz
 1280 × 720p@50 Hz
 1920 × 1080i@50 Hz
 1920 × 1080p@50 Hz
 1920 × 1080p@24 Hz
 Audio inputs BD, DVD, SAT/CATV:
 Linear PCM 7.1ch/
 Dolby Digital/DTS

Tuner section

System PLL quartz-locked digital
 synthesizer
 FM tuner section
 Tuning range 87.5 MHz - 108.0 MHz
 (100 kHz step)
 Antenna (aerial) FM wire antenna (aerial)
 Antenna (aerial) terminals 75 ohms, unbalanced
 Intermediate frequency 10.7 MHz
 AM tuner section
 Tuning range 530 kHz - 1,710 kHz (with
 the interval set at 10 kHz)
 531 kHz - 1,710 kHz (with
 the interval set at 9 kHz)
 Antenna (aerial) AM loop antenna (aerial)
 Intermediate frequency 450 kHz

Video section

Inputs VIDEO: 1 Vp-p 75 ohms
 COMPONENT:
 Y: 1 Vp-p 75 ohms
 Pb/Cb, Pr/Cr: 0.7 Vp-p
 75 ohms

Speaker (SS-CT500)

Speaker system Full range, Bass reflex
 (front speaker part), Full
 range, Acoustic suspension
 (center speaker part)
 Speaker unit 50 mm (2 in) cone type
 Rated impedance 4 ohms
 Dimensions (approx.) 957 mm × 90 mm × 51 mm
 (37 3/4 in × 3 5/8 in × 2 1/8
 in) (w/h/d)
 Mass (approx.) 1.9 kg (4 lb 4 oz)
 Speaker cords 3 m (118 1/8 in)

Subwoofer (SA-WCT500)

Speaker system Subwoofer, Bass reflex
 Speaker unit 130 mm (5 1/8 in) cone type
 Rated impedance 4 ohms
 Dimensions (approx.) 212 mm × 374 mm × 364
 mm (8 3/8 in × 14 3/4 in ×
 14 3/8 in) (w/h/d)
 Mass (approx.) 9.1 kg (20 lb 1oz)

WS-CT500EB

Extension bracket

Dimensions (approx.) 286 mm × 179 mm × 60
 mm (11 3/8 in × 7 1/8 in ×
 2 3/8 in) (w/h/d)
 Mass (approx.) 1.3 kg (2 lb 14 oz)

Rear cover

Dimensions (approx.) 294 mm × 185 mm × 67
 mm (11 5/8 in × 7 3/8 in ×
 2 3/4 in) (w/h/d)
 Mass (approx.) 0.56 kg (11b 4oz)

General

Power requirements 120 V AC, 60 Hz
 Power consumption
 On: 110 W
 Standby mode: 0.3 W (when “CTRL: HDMI”
 and “S-AIR STBY” are set to “OFF.”)
 Power output
 (DIGITAL MEDIA PORT) DC OUT: 5 V, 700 mA

Design and specifications are subject to change without notice.

- Standby power consumption 0.3 W.
- Halogenated flame retardants are not used in the certain printed wiring boards.
- Over 85 % power efficiency of amplifier block is achieved with the full digital amplifier, S-master.

Glossary

Deep Color

Video signals for which the color depth of signals passing through an HDMI jack have been raised. The number of colors that could be expressed by 1 pixel was 24 bits (16,777,216 colors) with the current HDMI jack. However, the number of colors which can be expressed by 1 pixel will be 36, etc., bits when the receiver corresponds to Deep Color. Since the gradation of the depth of a color can be expressed more finely with more bits, continuous color changes can be more smoothly expressed.

Dolby Digital

This movie theater sound format is more advanced than Dolby Surround Pro Logic. In this format, the surround speakers output stereo sound with an expanded frequency range, and a subwoofer channel for deep bass is independently provided. This format is also called "5.1" with the subwoofer channel designed as the 0.1 channel (since it functions only when a deep bass effect is needed). All six channels in this format are recorded separately for superior channel separation. Furthermore, since all the signals are processed digitally, less signal degradation occurs.

Dolby Pro Logic II

Dolby Pro Logic II creates five full-bandwidth output channels from 2 channel sources. This is done using an advanced, high-purity matrix surround decoder that extracts the spatial properties of the original recording without adding any new sounds or tonal colorations.

DTS

Digital audio compression technology developed by Digital Theater Systems, Inc. This technology conforms to 5.1-channel surround. This format comprises of stereo rear channel and there is discrete subwoofer channel in this format. DTS provides the same 5.1 discrete channels of high quality digital audio. The good channel separation is realized due to the all channel data being recorded discretely and processed in digitally.

HDMI

HDMI (High-Definition Multimedia Interface) is an interface that supports both video and audio on a single digital connection, allowing you to enjoy high quality digital picture and sound. The HDMI specification supports HDCP (High-bandwidth Digital Contents Protection), a copy protection technology that incorporates coding technology for digital video signals.

PCM (Pulse Code Modulation)

A method of converting analog audio to digital audio for easy enjoyment of digital sound.

S-AIR (Sony Audio Interactive Radio frequency)

Recent times have seen the rapid spread of DVD media, Digital Broadcasting, and other high-quality media.

To ensure that the subtle nuances of these high-quality media are transmitted with no deterioration, Sony has developed a technology called "S-AIR" for the radio transmission of digital audio signals with no compression, and has incorporated this technology into the EZW-RT10/EZW-RT10A/EZW-T100.

This technology transfers digital audio signals with no compression using the 2.4 GHz band range of ISM band (Industrial, Scientific, and Medical band), such as wireless LANs and Bluetooth applications.

S-Force PRO Front Surround

Sony's long-term involvement in surround technology (and the vast amounts of acoustic data accumulated as a result) has led to the development of all-new processing method and advanced DSP to handle this task effectively, which we call S-Force PRO Front Surround. Compared with previous front surround technologies, S-Force PRO Front Surround reproduces a more convincing sense of distance and space, resulting in a true surround sound experience without the need for rear speakers.

S-Master

S-Master is an all-digital amplifier technology developed by Sony, which effectively minimizes the occurrence of sound fragmentation and jitter, delivering superb dialog clarity and faithful reproduction of the original sound. The compact amplifier section supports a higher power efficiency and improved thermal performance.

x.v.Color

“x.v.Color” enables the more faithful reproduction of various colors such as the brilliant colors of flowers and the turquoise blue of the southern ocean.

“x.v.Color” is a promotion name given to the products that have the capability to realize a wide color space based on the xvYCC specifications and is a trademark of Sony Corporation.

xvYCC is an international standard of the technical specifications of the extended-gamut color space for video signals. The color gamut of xvYCC is wider than the one of sRGB that is used with the current television system.

Overview of the menus

Table of items for the front panel display corresponding with the GUI display.

Item	Front panel display	GUI display	See page
LEVEL	CNT LEVEL	Center Level	78
	SW LEVEL	Subwoofer Level	78
	AUDIO DRC	D. Range Comp	78
SURROUND	–	Surround	57
TONE	BASS	Bass Level	58
	TREBLE	Treble Level	58
AUDIO	A/V SYNC	A/V Sync	79
	DUAL MONO	Dual Mono	80
	A. ASSIGN	Audio Assign	81
	NIGHT MODE	Night Mode	59
VIDEO	RESOLUTION	Resolution	82
SET HDMI	CTRL: HDMI	Control for HDMI	60
	VOL LIMIT	Volume Limit	62
	PASS THRU	HDMI Pass Through	65
	V. DIRECT	Video Direct	83
SYSTEM	DIMMER	Dimmer	84
	DISPLAY	Display	84
	SLEEP	–	96
SET S-AIR	S-AIR ID	S-AIR ID	87
	S-AIR MODE	S-AIR Mode	88
	RF CHANGE	RF Change	92
	S-AIR STBY	S-AIR Standby	89
	PAIRING	Pairing Start	90

B

- Blu-ray Disc player (recorder)
 - connecting 28
- “BRAVIA” Sync 60

C

- Control for HDMI 60

D

- DIGITAL MEDIA PORT 53
- DIGITAL MEDIA PORT adapter
 - connecting 45
- Display setting 84
- DVD player (recorder)
 - connecting 28, 30

F

- Front panel display 48, 104

G

- GUI (Graphical User Interface) 39

H

- HDMI
 - connecting 27

I

- Installing 10
- iPod 54, 55

M

- Message list 56
- Muting 49

N

- Naming preset stations 68, 70
- Network Client 55

P

- “PlayStation 3”
 - connecting 28
- Presetting radio stations 67, 68

R

- Remote
 - assignments 75
 - operating 49, 72

S

- S-AIR
 - receiver 85
- Satellite tuner
 - connecting 28, 30
- Sleep timer 96
- Sound field 57
- System menu 95

T

- Tuning 66

Menu index

A

A. ASSIGN 104
A/V Sync 79
Adapter GUI 53
AM 66
Audio 43
Audio Assign 81
AUDIO DRC 104
Auto Tuning 66

B

Bass Level 58

C

Center Level 78
CNT LEVEL 104
Control for HDMI 60
CTRL: HDMI 104

D

D. Range Comp 78
Dimmer 84
Direct Tuning 66
Display 84
Dual Mono 80

F

FM 66
FM Mode 66

H

HDMI 43, 60
HDMI Pass Through 65

I

Input 43
iPod 53

L

Level 78

M

Memory 67
Music 53

N

Name Input 68
Night Mode 59

P

Pairing 90
PASS THRU 104

R

Resolution 36, 82
RF Change 92

S

S-AIR 85
 ID 87
 Mode 88
 Standby 89
S-AIR STBY 104
SET HDMI 104
SET S-AIR 104
Settings 43
SLEEP 96
Sound Field Setup 57
Subwoofer Level 78
Surround 57
SW LEVEL 104
System 43
System GUI 53

T

Tone 58
Treble Level 58

V

V. DIRECT 104

Video 53, 82

Video Direct 83

VOL LIMIT 104

Volume Limit 62



* 4 1 4 3 8 3 3 1 1 * (1)