

WR31X10047 - COVER FRONT CHILL ASSEMBLY

Installation Instructions

Note: The new Cover Front Chill Assembly no longer has a window on the top.

Remove the Chill Assembly from the refrigerator. This is the Cover and the top in which the Cover slides in to.

If the top of your Chill Assembly is glass:

Remove the two screws attaching the Cover to the Chill Assembly far enough to be able to disconnect the Cover from the Chill Assembly. Remove front gasket and install it on the new Cover. Re-attach the cover to the Chill Assembly in the reverse process as removal. Re-install Chill Assembly into refrigerator.

If the top of your Chill Assembly is not glass:

Remove Cover from the Chill Assembly by removing the four screws that attach the Cover to the flat lower piece of the assembly. Discard the flat lower piece of the assembly, it will not be needed. Disconnect the front tabs of the Cover from the Chill Assembly and remove the Cover from the Chill Assembly. Remove front gasket from old Cover and install it onto the new Cover.

Re-attach the front tabs of the new Cover to the Chill Assembly, snapping them into place.

If the side of your Chill Assembly has a notch in the side as pictured in Figure "A" below, then insert the tabs on the bottom of the Cover into the notch on the Chill Assembly and slide the Cover fully into the Chill Assembly. Re-install the new complete Chill Assembly with new Cover back into the refrigerator.

If the side of your Chill Assembly **does not** have a notch in the side as pictured in Figure "B" below, then slide one of the tabs on the bottom of the Cover Front over the side into the slide area. Then carefully bend the middle of the Chill Assembly slightly away from the Cover to allow the other tab of the Cover to snap over the side into the slide. Then slide the Cover fully into the Chill Assembly. Re-install the new complete Chill Assembly with new Cover back into the refrigerator.

