


# Baja Motorsports,LLC

Set-up Instructions Mini Bike


## Removal from crate

1. Remove cardboard carton from metal frame.

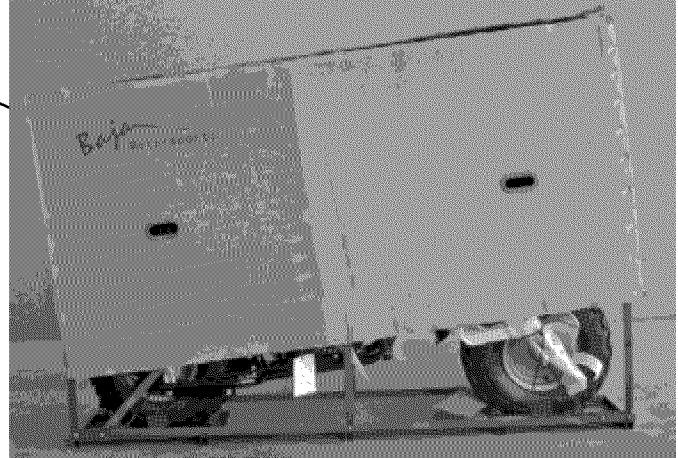


Tool kit packet

Mso and Owners manual

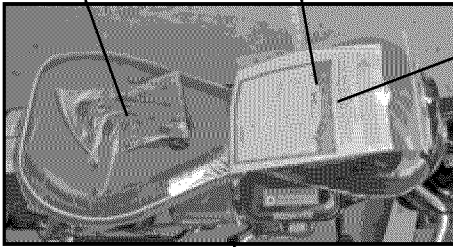

2. Remove operating instructions, manufacture statement of origin,and owners manual located on top of Mini Bike.

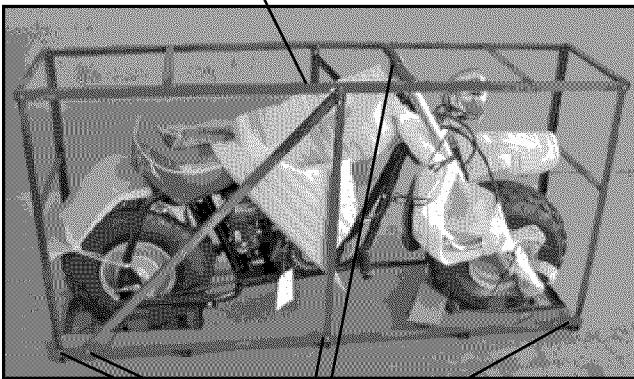


3. Remove bolts as indicated in photo from both sides of metal frame

4. Carefully remove metal packaging frame

# Handlebar installation



1. Remove cinch nuts and washers with rubber grommets from steering bracket.

2. Attach handle bar assembly to steering bracket by placing one washer and rubber grommet on top of steering bracket and one washer and rubber grommet under steering bracket (see photos)

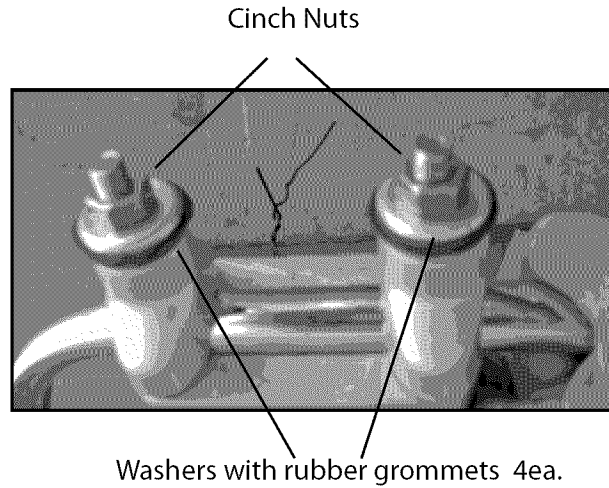

Washer and rubber grommet on top.


Steering bracket

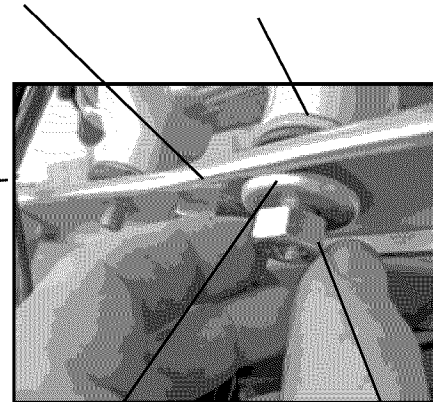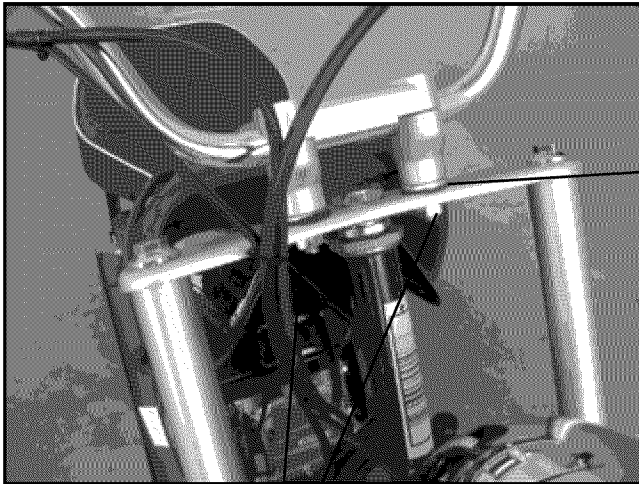

3. Torque cinch nuts to 45Nm (33ft.lbs.)

Top handle bar clamp


4. Make sure allen head bolts on top handle bar clamp are tight. Torque allen head bolts to 27Nm (20ft.lbs)

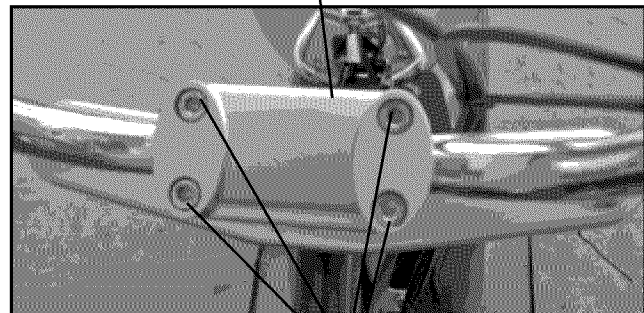


# Install rear fender and tighten front shock bolts

1. Lift rear fender into position by aligning holes with fender bracket on right and left side of mini bike. Attach rear fender with fender nut and bolt located in Tool kit packet.

Fender nut and bolt.

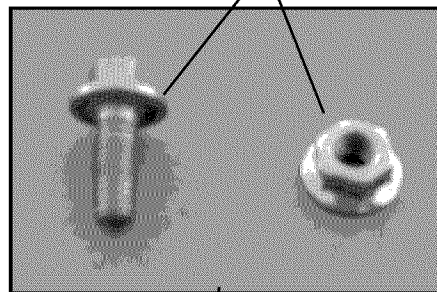


2. Tighten nut and bolt securely.

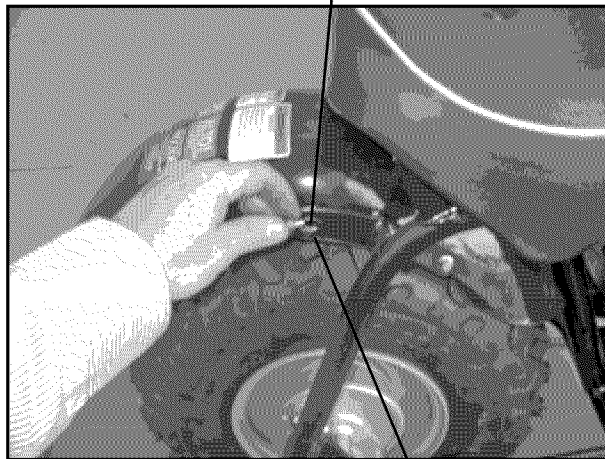

Fender Bracket

3. Make sure front shock bolts are tight before each ride, Torque bolts to 47.5Nm (35ft. lbs.).


Shock bolt

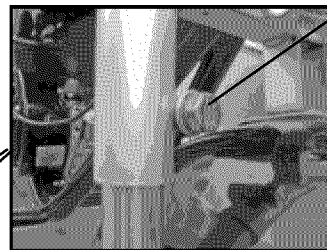


# Gas and Oil

1. Fill engine with correct amount of oil. Refer to owners manual for oil types and quantity.


Gas Cap

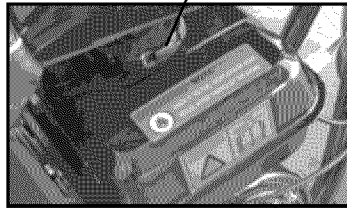

2. Fill gas tank as specified in owners manual.

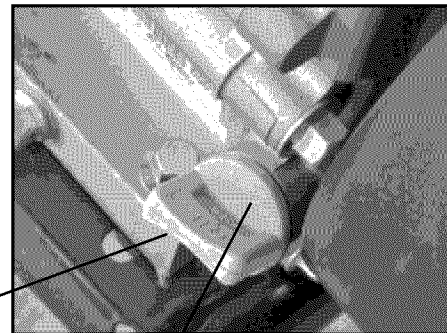

Oil Cap

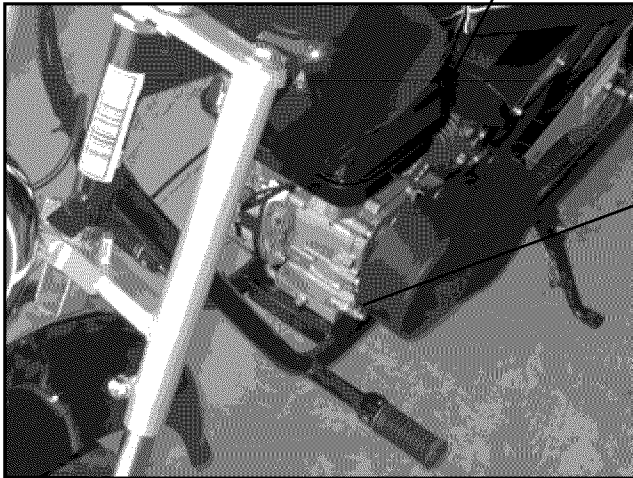

3. Refer to owners manual for proper starting instructions

## WARNING!

This Mini Bike may be shipped with packing oil in engine. This oil should be drained and replaced with new engine oil as described in the owners manual. Never attempt to start engine without first replacing engine oil with proper amount and grade as described in owners manual.