



HOME THEATER SOUND SYSTEM

TH-BA3

—Consists of SP-THBA3F, RX-THBA3,
SP-THBA3S and SP-THBA3W

TH-BA1

—Consists of CA-THBA1 and SP-THBA1

Thank you for purchasing a JVC product.
Before operation, please read the instructions carefully.

For customer use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No.

Serial No.

INSTRUCTIONS

GVT0289-018C[J/C]
0709WMKMDWJMM© 2009 Victor Company of Japan, Limited
EN

CAUTION (SP-THBA3F/CA-THBA1)

The \odot/I button in any position does not disconnect the mains line. Disconnect the mains plug to shut the power off completely (the STANDBY lamp goes off). The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

- When the System is on standby, the STANDBY lamp lights red.
- When the System is turned on, the STANDBY lamp goes off. The power can be remote controlled.

CAUTION (SP-THBA3W/SP-THBA1/RX-THBA3)

The power supply to the subwoofer is linked to the center unit. Disconnect the mains plug to shut the power off completely (the POWER ON lamp goes off). The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

- When the System is on standby, the STANDBY/ON lamp lights red.
- When the System is turned on, the STANDBY/ON lamp lights blue.

ATTENTION (SP-THBA3F/CA-THBA1)

La touche \odot/I , dans n'importe quelle position, ne déconnecte pas le système du secteur. Déconnectez la fiche de secteur pour mettre l'appareil complètement hors tension (le témoin STANDBY s'éteint). La fiche secteur ou un coupleur est utilisé comme dispositif de déconnexion de l'appareil, et l'appareil déconnecté doit être prêt à être utilisé.

- Quand le système est en attente, le témoin STANDBY est allumé en rouge.
- Quand le système est sous tension, le témoin STANDBY s'éteint.

L'alimentation peut être télécommandée.

ATTENTION (SP-THBA3W/SP-THBA1/RX-THBA3)

L'alimentation du caisson de grave est reliée à l'unité centrale. Déconnectez la fiche secteur pour mettre l'appareil complètement hors tension (le témoin POWER ON s'éteint).

La fiche secteur ou un coupleur est utilisé comme dispositif de déconnexion de l'appareil, et l'appareil déconnecté doit être prêt à être utilisé.

- Quand le système est en attente, le témoin STANDBY/ON est allumé en rouge.
- Quand l'appareil est sous tension, le témoin STANDBY/ON est allumé en bleu.

Do not use another AC adaptor to connect this model.

N'utilisez aucun autre ADAPTATEUR SECTEUR pour connecter ce modèle.

Introduction

Notes on handling

Important cautions

Installation of the System

- Select a place which is level, dry, and neither too hot nor too cold; between 5°C and 35°C (41°F and 95°F).
- Leave sufficient distance between the System and the TV.
- Do not use the System in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or vibration.
- Install the System in a location with adequate ventilation to prevent internal heat buildup.

Power cord

- Do not handle the power cord with wet hands.
- A small amount of power is always consumed while the power cord is connected to the wall outlet.
- Do not pull on the cord to unplug the power cord. When unplugging the power cord, always grasp and pull the plug so as not to damage the cord.

To prevent malfunctions of the System

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic objects or liquids into the System.

Safety precautions

Avoid moisture, water, and dust

Do not place the System in moist or dusty places.

Avoid high temperatures

Do not expose the System to direct sunlight and do not place it near any heating devices.

When you are away

When away on holiday or for other reasons for an extended period of time, disconnect the power cord from the wall outlet.

Do not block the vents

Blocking the vents may damage the System.

Warnings, Cautions and Others / Mises en garde, précautions et indications diverses

For U.S.A.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Pour les Etats-Unis



Le symbole de l'éclair à l'intérieur d'un triangle équilatéral est destiné à alerter l'utilisateur sur la présence d'une "tension dangereuse" non isolée dans le boîtier du produit. Cette tension est suffisante pour provoquer l'électrocution de personnes.

Le point d'exclamation à l'intérieur d'un triangle équilatéral est destiné à alerter l'utilisateur sur la présence d'opérations d'entretien importantes au sujet desquelles des renseignements se trouvent dans le manuel d'instructions.

CAUTION

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

ATTENTION

Les piles ne doivent en aucun cas être exposées à une chaleur excessive (lumière du soleil, feu, etc.).

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

ATTENTION

Afin d'éviter tout risque d'électrocution, d'incendie, etc.:

1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

CAUTION

• Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)

- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

ATTENTION

• Ne bloquez pas les orifices ou les trous de ventilation. (Si les orifices ou les trous de ventilation sont bloqués par un journal un tissu, etc., la chaleur peut ne pas être évacuée correctement de l'appareil.)

- Ne placez aucune source de flamme nue, telle qu'une bougie, sur l'appareil.
- Lors de la mise au rebut des piles, veuillez prendre en considération les problèmes de l'environnement et suivre strictement les règles et les lois locales sur la mise au rebut des piles.

• N'exposez pas cet appareil à la pluie, à l'humidité, à un égouttement ou à des éclaboussures et ne placez pas des objets remplis de liquide, tels qu'un vase, sur l'appareil.

For U.S.A.

WARNING

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

Pour les Etats-Unis

AVERTISSEMENT

POUR PRÉVENIR LES RISQUES D'INCENDIE OU DE CHOCS ÉLECTRIQUES, NE PAS EXPOSER CE APPAREIL À LA PLUIE OU À L'HUMIDITÉ.

CAUTION: Proper Ventilation


To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

1. Front: No obstructions and open spacing.
2. Sides/Top/Back: No obstructions should be placed in the areas shown by the dimensions below.
3. Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm (3-15/16") or more.


ATTENTION: Aération correcte

Pour prévenir tout risque de décharge électrique ou d'incendie et éviter toute détérioration, installez l'appareil de la manière suivante:

1. Avant: Bien dégagé de tout objet.
2. Côtés/dessus/dessous: Assurez-vous que rien ne bloque les espaces indiqués sur le schéma ci-dessous.
3. Dessous: Posez l'appareil sur une surface plane et horizontale. Veillez à ce que sa ventilation correcte puisse se faire en le plaçant sur un support d'au moins dix centimètres de hauteur.

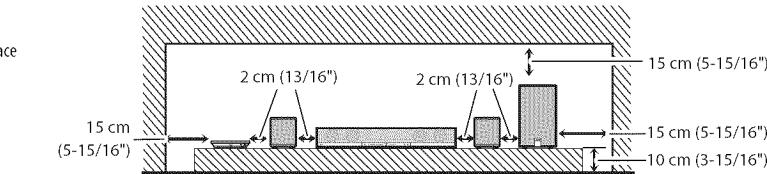

TH-BA1

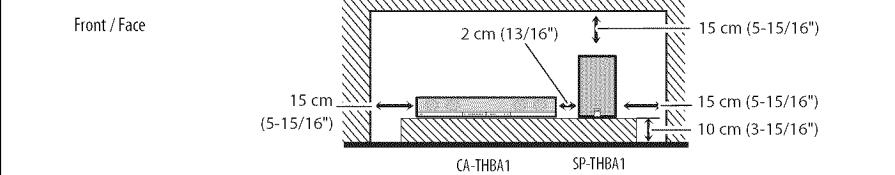

For U.S.A.

Caution: Changes or modifications not expressly approved by party responsible for compliance could void the user's authority to operate the equipment.**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Pour les Etats-Unis

Attention : Les changements ou les modifications qui ne sont pas explicitement approuvés par la partie responsable de l'observance pourraient mettre fin au droit de l'utilisateur d'utiliser le matériel.**Remarque :** Cet appareil a été testé et il s'est avéré conforme aux limites applicables à un appareil numérique de classe B, en vertu de la Partie 15 des Règles de la FCC. Ces limites sont conçues de manière à assurer une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet appareil produit, utilise et peut émettre une énergie de haute fréquence et, si il n'est pas installé et utilisé en conformité avec les instructions, il peut causer des interférences nuisibles aux communications radio. Il n'y a, toutefois, aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet appareil cause effectivement des interférences nuisibles à la réception de la radio ou de la télévision, ce qu'on peut établir en mettant l'appareil en marche et à l'arrêt, nous encourageons l'utilisateur à tenir de corriger l'interférence par une ou plusieurs des mesures suivantes :

- réorienter ou déplacer l'antenne de réception;
- accroître la séparation entre l'appareil et le récepteur;
- brancher l'appareil dans une prise ou un circuit autre que celui auquel le récepteur est branché;
- consulter un vendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide.

- Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under license under U.S. Patent numbers: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 and other U.S. and worldwide patents issued and pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.

For SP-THBA3, RX-THBA3, SP-THBA3W, CA-THBA1 and SP-THBA1

This device complies with RSS-210 of Industry Canada Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

Pour SP-THBA3, RX-THBA3, SP-THBA3W, CA-THBA1 and SP-THBA1

Cet appareil est conforme au règlement CNR-210 de l'industrie du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

For Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS", ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

Pour le Canada

CET APPAREIL NUMÉRIQUE RESPECTE LES LIMITES DE BRUITS RADIOÉLECTRIQUES APPLICABLES AUX APPAREILS NUMÉRIQUES DE CLASSE B PRÉSCRITES DANS LA NORME SUR LE MATERIEL BROUILLER; "APPAREILS NUMÉRIQUES", NMB-003 EDICTÉE PAR LE MINISTRE DES COMMUNICATIONS.

For SP-THBA3, RX-THBA3, SP-THBA3W, CA-THBA1 and SP-THBA1

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the manufacturer for compliance could void the user's authority to operate the equipment.

Pour SP-THBA3, RX-THBA3, SP-THBA3W, CA-THBA1 and SP-THBA1

Cet appareil est conforme à la partie 15 des règles de la FCC (Federal Communications Commission). Le fonctionnement est sujet aux deux conditions suivantes : (1) Cet appareil ne peut pas causer d'interférences nuisibles, et (2) cet appareil doit accepter toute interférence reçue, y compris des interférences qui peuvent causer un mauvais fonctionnement.

Tout changement ou modification non expressément approuvés par le fabricant pour conformité peut annuler l'autorité de l'utilisateur d'utiliser l'appareil.

[European Union only]
[Union européenne seulement]

Specifications

Center unit (SP-THBA3F / CA-THBA1)

Output power

Center/ Front Surround: 120 W (30 W per channel-measure at 1 kHz Optical Digital In at full scale sinewave), RMS at 4 Ω at 1 kHz, with 10% total harmonic distortion

Audio section

Analog Input: 1 Vrms/50 kΩ
Digital Input*: 1, DIGITAL 2:


Getting started

TH-BA3 : Only for TH-BA3 / TH-BA1 : Only for TH-BA1

DO NOT connect the power cord until all other connections have been made.

Prepare the Remote Control

When you use the remote control for the first time, pull out the insulation sheet.

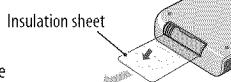


If the range or effectiveness of the remote control decreases, replace the battery.

To Replace the Battery in the Remote Control

Insert the battery into the remote control by matching the polarities (+ and -) correctly.

Lithium coin battery
(product number: CR2025)

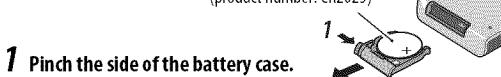

1 Pinch the side of the battery case.

2 Pull out the battery case and insert the battery by matching the polarities.

NOTE

- Store the battery in a place where children cannot reach. If a child accidentally swallows the battery, consult a doctor immediately.
- To prevent the battery from overheating, cracking, or starting a fire:
 - Do not recharge, short, disassemble or heat the battery, or dispose of it in a fire.
 - Do not leave the battery with other metallic materials.
 - Wrap the battery with tape and insulate when throwing away or saving it.
- Do not poke the battery with tweezers or similar tools.
- Dispose of the battery in the proper manner, according to federal, state, and local regulations.

CAUTION:


Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

For USA-California Only

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate material—special handling may apply.
See www.dtsc.ca.gov/hazardouswaste/perchlorate

TH-BA3

Typical installation

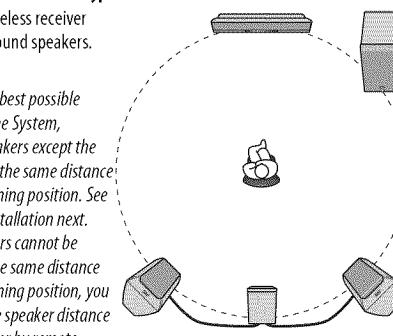


NOTE

- To obtain the best possible sound from the System, install all speakers except the subwoofer at the same distance from the listening position. See the typical installation next.
- If your speakers cannot be installed at the same distance from the listening position, you can adjust the speaker distance of each speaker by remote control. See "Adjusting the speaker distance" below.

Installing on the wall

You can install the center unit and surround speakers* on the wall.

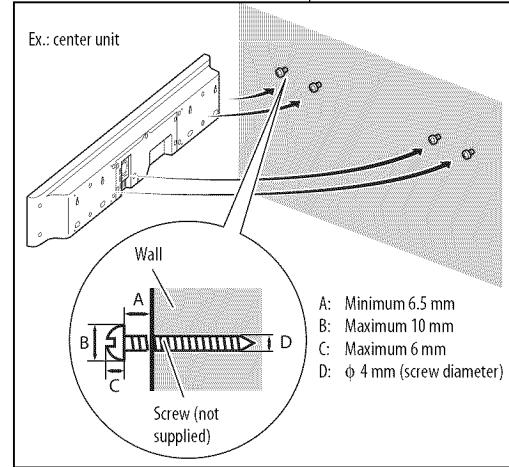

CAUTION


- The center unit weighs approximately 3.5 kg (7.8 lbs) and the surround speakers* weigh approximately 0.6 kg (1.3 lbs) each. Sufficient care must be taken when installing them on the wall to prevent any accidents caused by their falling off.
- Use screws which are compatible with the strength and material of the pillar or wall to prevent the center unit and surround speakers* from falling off.
- Do not install the center unit and surround speakers* onto a plywood or plasterboard wall; otherwise, they will fall and sustain damage.
- When installing the center unit and surround speakers* on the wall:
 - Be sure to have them installed on the wall by qualified personnel.
 - Care must be taken when selecting a location for installation on the wall. Injury to personnel or damage to equipment may result if the installed units interfere with daily activities.
 - AC adaptor should not be hanging/put above of any other items. It is acceptable to place the AC adaptor on the flat floor only.
 - Recommended mounting surface: Wooden studs. If the mount is to be installed on any surface other than wooden studs, use suitable hardware (which is commercially available).

* TH-BA3 only

TH-BA3

Attaching speaker stands

You can use the speaker stands (not supplied) for installation.

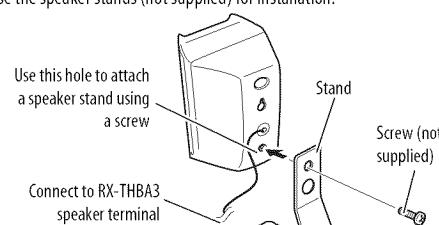

NOTE


- When attaching a speaker stand, refer to the instructions of the speaker stands you purchased.
- Refer to the supplied information sheet for wire arrangement and containing the speaker cords.

CAUTION

- Do not install the surround speakers in a place where they may interfere with daily activities. Injury to personnel or damage to equipment may result if the surround speakers are installed in such a place.

Connecting external components

You can connect analog components to the ANALOG terminal and digital components to the DIGITAL 1 and DIGITAL 2 terminals.

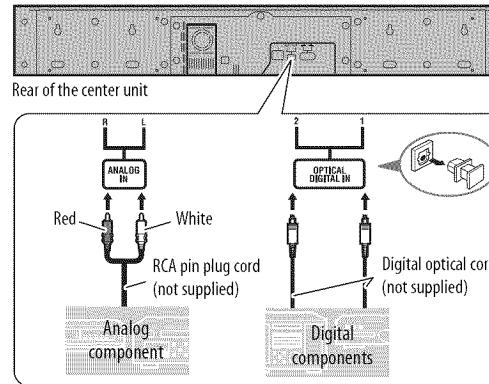

Connecting the power cord

TH-BA3

Connect the supplied AC adaptor to the DC IN jacks on the center unit and wireless receiver unit. Then connect the supplied AC power cord to the AC adaptor, and plug it in a wall outlet.

- Plug in the power cord of the subwoofer to a wall outlet.

TH-BA1

Connect the supplied AC adaptor to the DC IN jack on the center unit. Then connect the supplied AC power cord to the AC adaptor, and plug it in a wall outlet.

- Plug in the power cord of the subwoofer to a wall outlet.


CAUTION

- Disconnect the power cords before cleaning or moving the speakers.


Using the core filter

Attach the provided core filter to the power cord and the external components cord to reduce interference.

- 1 Release the stopper of the core filter.

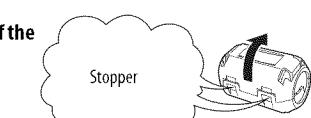


- 2 Run the cable through the core filter, and wind the cable firmly once inside the cutout of the core filter as shown in the illustration.

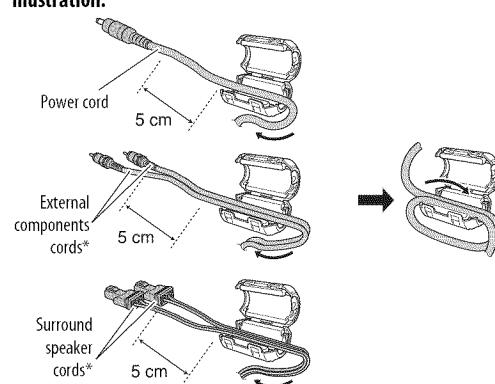

* You can wind two external components cords or surround speaker cords together.

- 3 Close the core filter until it clicks shut.

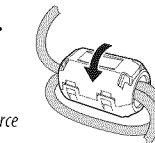

Setting up the subwoofer and wireless receiver unit*


This System is equipped with a wireless subwoofer and receiver unit*. When you use them for the first time, activate the wireless pairing.

Refer to the supplied information sheet—"Activate wireless pairing."

* TH-BA3 only




NOTE

- The wireless pairing is not canceled even after the AC plug has been pulled out.

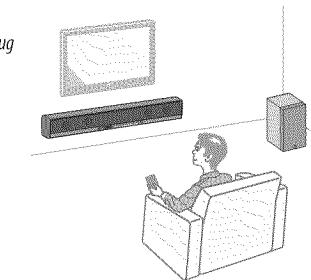

TH-BA3 : Only for TH-BA3 / TH-BA1 : Only for TH-BA1

Operations

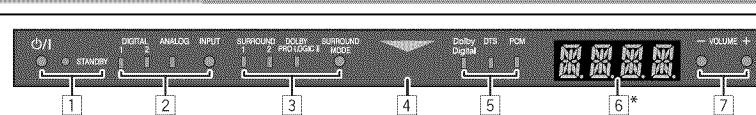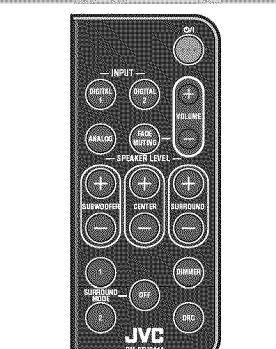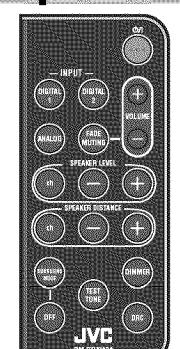

Buttons and lamps on the front panel

1 Ⓛ/I(power) button and STANDBY lamp

Turns on/off the System.
• STANDBY lamp lights up while the System is turned off.

2 Input button and input source indicator lamps

Selects an input source: "DIGITAL 1," "DIGITAL 2" or "ANALOG."

- The indicator lamp for the selected input source lights up.

3 Surround button and surround indicator lamps

Selects a surround mode: "SURROUND 1," "SURROUND 2" or SURROUND OFF.

- The indicator lamp for the selected surround mode lights.
- The DOLBY PROLOGIC II lamp lights up when:
 - surround is activated with an ANALOG input source selected.
 - surround is activated and a DIGITAL input source with 2 channel audio format.

4 Remote sensor

Receives the signal from the remote control.

5 Digital signal format lamps

Shows the digital signal format of the incoming signal when "DIGITAL 1" or "DIGITAL 2" is selected as the input source. Each lamp lights when:

- Dolby Digital: a Dolby Digital signal comes in.
- DTS: a DTS signal comes in.
- PCM: a Linear PCM signal comes in.

6 Display

TH-BA3

Shows the volume level, speaker name and output level of each speaker.

TH-BA1

Shows the volume level.

7 Volume buttons

Adjusts the volume within the range of 0 to 40.

Basic operation

Turning on/off the power

Press Ⓛ/I.

• You can also use the power button on the front panel.

NOTE

- A small amount of power is consumed even when the power is turned off (standby mode). During standby mode, the STANDBY lamp on the front panel lights up. Unplug the power cord from the AC outlet to turn the power off completely.
- You can also turn on the System by pressing one of the input buttons (DIGITAL 1, DIGITAL 2 or ANALOG).

Selecting the input source

Press one of the input buttons: DIGITAL 1, DIGITAL 2 or ANALOG.

D1 (DIGITAL 1), D2 (DIGITAL 2) or AN (ANALOG) appears on the display for 2 seconds.

• You can also use the input button on the front panel.

NOTE

- The indicator lamp of the selected input source lights.

Adjusting the volume

Press VOLUME +/- (0 to 40).

• You can also use the volume buttons on the front panel.

CAUTION

- Set the volume to the minimum level before starting any input source. If the volume is set to a high level, the sudden blast of sound may damage your hearing and blow out the speakers.

Turning off the sound temporarily

Press FADE MUTING.

- To restore the sound, press the button again or adjust the volume.

Changing the display brightness

Press DIMMER.

Each time you press the button, the LED brightness changes as follows: normal → dim → off

Making sound clearer (Only for Dolby Digital and DTS)

You can enjoy low level recorded sound clearly even at a low volume level—Dynamic Range Compression.

Press DRC.

Each time you press the button, the sound is enhanced the effect as follows: OF(off) → MD(middle) → MX(maximum)

Adjusting the output level of the speakers

You can adjust the output level within the range of -6 dB to +6 dB.

TH-BA3

1 Press SPK LEVEL ch repeatedly to select the target speaker.

Each time you press the button, the speaker changes as follows:

- FL (Front left surround speaker) → CT (Center speaker) → FR (Front right surround speaker) → SR (Surround right speaker) → SL (Surround left speaker) → SW (Subwoofer) → Back to the beginning

2 Press SPK LEVEL +/- to adjust the output level while the indication is displayed.

TH-BA1

Press SPK LEVEL +/- for the corresponding speaker.

- SUBWOOFER: Adjusts the output level of the subwoofer.
- CENTER: Adjusts the output level of the center speakers.
- SURROUND: Adjusts the output level of the front surround speakers.

Using the surround mode

You can listen to a more realistic sound than stereo sound using surround.

Available surround modes are as follows:

- SURROUND 1: Suitable for the reproduction of multi-channel sources. S1 appears on the display when selected.
- SURROUND 2: Suitable for the reproduction of any stereo music sources. S2 appears on the display when selected.
- The indicator lamp of the selected mode lights.

TH-BA3

Press SURROUND MODE repeatedly to select the desired mode.

The surround mode changes alternately.

- To deactivate, press OFF. OF appears on the display.

TH-BA1

Press SURROUND MODE 1 or SURROUND MODE 2.

- To deactivate, press OFF. OF appears on the display.

TH-BA3

Adjusting the speaker distance

By adjusting the speaker distance, you can enjoy the optimum surround sound even if it is hard to install the speakers as shown in the typical installation above.


1 Press DISTANCE ch repeatedly to select the desired speaker.

The speaker channel has been changed in the following sequence:

- FT (Front speaker) → SL (Surround left speaker) → SR (Surround right speaker) → SW (Subwoofer) → Back to the beginning

2 Press DISTANCE +/- to adjust the distance from the listening position to the selected speaker.

- For the example below, set the speaker distance as follows:

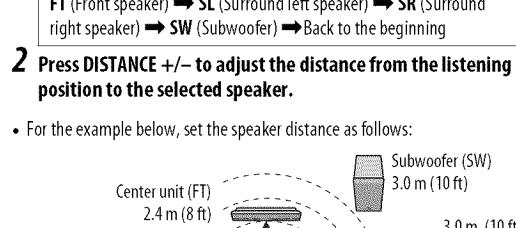

- You can adjust the speaker distance from 0.3 m to 9.0 m. Each time you press the